

SonicWALL Node Upgrade

Activation Guide



Activating Your Upgrade

Before you can install the SonicWALL **Node Upgrade** on your SOHO3, you must activate the upgrade and register your SonicWALL Internet Security Appliance at <<http://www.mysonicwall.com>.> At this web site, you can create a user account to activate and manage services for all of your SonicWALL Internet Security Appliances.

***Note:** For the latest version of this manual and other SonicWALL documentation, go to*

<<http://www.sonicwall.com/products/documentation.html>>

What is mySonicWALL.com?

mySonicWALL.com delivers a convenient, centralized way to register all your SonicWALL Internet Security Appliances and Security Services. It eliminates the hassle of registering individual SonicWALL appliances and upgrades and streamlines the management of all your SonicWALL security services. Instead of registering each SonicWALL product individually, mySonicWALL.com allows you to have a single user profile where you can manage all of your product registrations and security services.

What Can I Do with mySonicWALL.com?

You can use MySonicWALL.com to do the following:

- **Register** all your SonicWALL appliances and services in one place.
- **Access** firmware and security service updates.
- **Get** SonicWALL alerts on services, firmware, and products.
- **Check** status of your SonicWALL services and upgrades linked to each registered SonicWALL Internet security appliance.
- **Manage** (activate, change or delete) your SonicWALL security services online.


How do I Get Started with mySonicWALL.com?

The first step to using mySonicWALL.com is creating a user account. Go to <<http://www.mysonicwall.com>> and follow the instructions for setting up a new user account.


Activating the Node Upgrade

To activate the Node Upgrade, you must first register your activation key on the SonicWALL website at the SonicWALL registration site <<http://www.mysonicwall.com>.> Follow the instructions below to activate the Node Upgrade.


1. Log into your user account, and select the SonicWALL appliance to activate the **Node Upgrade**. Click **Activate** next to **Node Upgrade** in the list of **Applicable Services**.

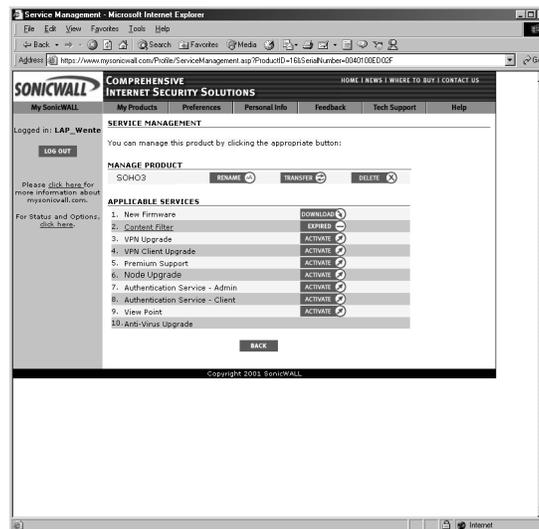

2. Type the **Activation Key** from the back of this manual in the **Activation Key** field, and click **Submit**.

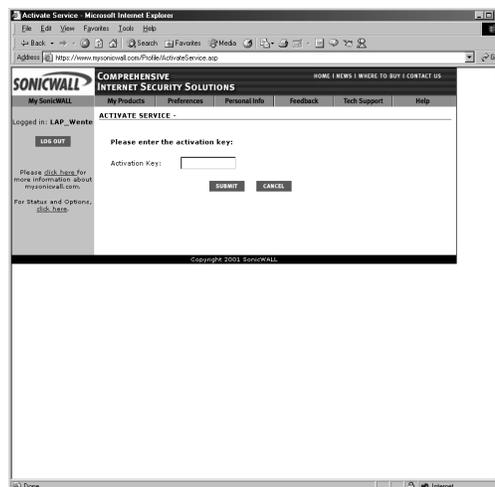

A **Status** page now appears with your **License Key** and the status of the upgrade is now **Enabled**. Write the **License Key** down as you need it to activate the Node Upgrade on your SonicWALL. The **License Key** is similar to the one in the following picture, but has a longer length than depicted.

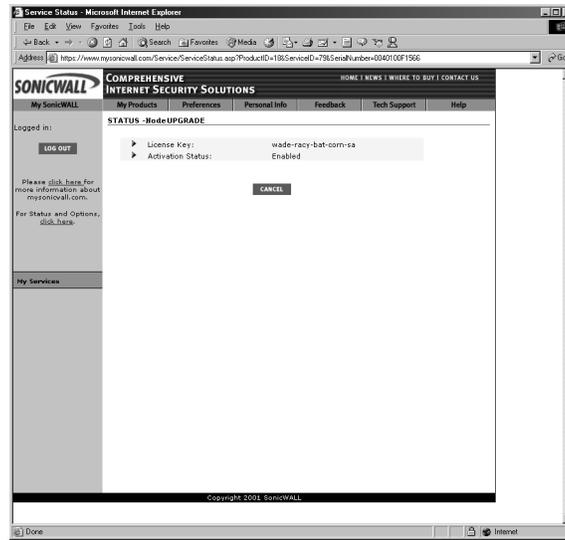

Activating the Node Upgrade on the SonicWALL

Log into your SonicWALL using the Management interface and click **Tools**. Then use the following steps to complete the upgrade:

1. Click **Firmware**.
2. Enter the License Key generated on mysonicwall.com **Status** page in the **Enter Upgrade Key** field.
3. Click **Upgrade**.

After you successfully upgrade your SonicWALL, the new node count is reflected on the **Status** page of the **General** section.



SonicWALL, Inc.

1160 Bordeaux Dr.

Sunnyvale, CA 94089-1209

Phone: 408-745-9600

Fax: 408-745-9300

Email: sales@sonicwall.com

Web: <http://www.sonicwall.com>

Part # 232-000023-01

Rev A 06/02