

HP Color LaserJet CM3530 MFP Series Service Manual



For the complete PDF manual
please visit www.LaserPros.com.

Theory of operation
Removal and replacement
Solve problems
Parts list



Additional product information:

www.hp.com/support/cljcm3530mfp
www.hp.com/go/usemyMFP



HP Color LaserJet CM3530 MFP Series

Service Manual



Copyright and License

© 2008 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: CC519-91013

Edition 2, 10/2008

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Corel® is a trademark or registered trademark of Corel Corporation or Corel Corporation Limited.

Intel® Core™ is a trademark of Intel Corporation in the U.S. and other countries.

Java™ is a US trademark of Sun Microsystems, Inc.

Microsoft®, Windows®, and Windows®XP are U.S. registered trademarks of Microsoft Corporation.

Windows Vista® is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

PANTONE® is Pantone, Inc's check-standard trademark for color.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Table of contents

1 Product basics

Conventions used in this guide	2
Product comparison	3
Product features	4
Product view	7
Product front view	7
Product back view	8
Interface ports	9
Serial number and model number location	10

2 Control panel

Use the control panel	12
Control-panel layout	12
Home screen	14
Buttons on the touchscreen	15
Control-panel help system	15
Navigate the Administration menu	16
Information menu	17
Default Job Options menu	19
Default Options for Originals	19
Image adjustment	20
Default Copy Options	21
Default Fax Options	22
Default E-mail Options	23
Default Send to Folder Options	24
Default Print Options	25
Time/Scheduling menu	26
Management menu	28
Initial Setup menu	31
Networking and I/O	31
Fax Setup	38
E-mail Setup	41
Send Setup menu	41
Device Behavior menu	42

Print Quality menu	46
Troubleshooting menu	50
Resets menu	53
Service menu	54

3 Paper and print media

Supported paper and print media	56
Supported paper and print media types	58
Tray and bin capacity	60
Custom paper sizes	61
Load paper and print media	62
Paper orientation for loading trays	62
Tray 1	63
Tray 2 or optional Tray 3	65
Load Tray 1	66
Print envelopes	68
Load Tray 2	68
Load the optional 500-sheet paper and heavy media tray (Tray 3)	70
Load standard-sized paper into Tray 3	70
Load custom-size paper into Tray 3	72
Configure trays	75
Configure a tray when loading paper	75
Configure a tray to match print job settings	75
Automatic overhead transparency sensing (auto sense mode)	75
Auto-sense settings	76
Select the paper by source, type, or size	76
Source	76
Type and Size	76
Choose an output bin	77

4 Manage and maintain

Print information pages	80
HP Easy Printer Care	82
Open the HP Easy Printer Care software	82
HP Easy Printer Care software sections	82
Embedded Web server	85
Open the embedded Web server by using a network connection	85
Embedded Web server sections	86
Use HP Web Jetadmin software	89
Product security features	90
Secure the embedded Web server	90
HP Encrypted High Performance Hard Disks	90
Secure Disk Erase	90

Data affected	90
Additional Information	91
Job storage	91
DSS authentication	91
Lock the control-panel menus	91
Lock the formatter cage	92
Manage supplies	93
Print-cartridge storage	93
HP policy on non-HP print cartridges	93
HP fraud hotline and Web site	93
Replace supplies	93
Supplies life	93
Locate supplies	94
Supply replacement guidelines	94
Change print cartridges	94
Change the toner collection unit	98
Install memory	100
Install DDR memory DIMMs	100
Enable memory for Windows	104
Install an HP Jetdirect or EIO print server card or EIO hard disk ...	105
Clean the product	108
Clean the outside of the product	108
Clean the touchscreen	108
Clean the scanner glass	108
Clean the document feeder	108
Clean the document-feeder backing	109
Clean the document-feeder rollers	110
Clean the fuser	111
Product updates	112
Determine the current firmware version	112
Download new firmware from the HP Web site	112
Transfer the new firmware to the product	112
Use the flash executable file to update the firmware	112
Use FTP to upload the firmware through a browser	113
Use FTP to upgrade the firmware on a network connection	113
Use HP Web Jetadmin to upgrade the firmware	114
Use Microsoft Windows commands to upgrade the firmware	114

5 Theory of operation

Basic operation	116
Sequence of operation	116
Engine-control system	118
DC controller	119

Solenoids	119
Clutches	120
Switches	120
Sensors	121
Motors and fans	122
High-voltage power supply	123
Low-voltage power supply	125
Overcurrent/overvoltage protection	126
Safety	126
Voltage detection	126
Sleep (powersave) mode	126
Low-voltage power supply failure	126
Fuser (fixing) control	127
Fuser (fixing) temperature-control circuit	128
Fuser (fixing) over-temperature protection	128
Fuser (fixing)-failure detection	129
Laser/scanner system	131
Image-formation system	133
Image-formation process	134
Step 1: Pre-exposure	135
Step 2: Primary charging	135
Step 3: Laser-beam exposure	136
Step 4: Development	136
Step 5: Primary transfer	136
Step 6: Secondary transfer	137
Step 7: Separation	138
Step 8: Fusing	138
Step 9: ITB cleaning	139
Step 10: Drum cleaning	139
Print cartridge	139
Developing-roller engagement and disengagement	141
Intermediate transfer belt (ITB) unit	142
Primary-transfer-roller engagement and disengagement	143
ITB cleaning	144
Calibration	145
Color-misregistration control	146
Image-stabilization control	147
Pickup, feed, and delivery system	148
Pickup-and-feed unit	151
Cassette pickup	151
Cassette-presence detection	153
Cassette lift operation	153
Cassette paper-presence detection	154
Multifeed prevention	155

Multipurpose tray pickup	156
Paper feed	157
Skew-feed prevention	158
OHT detection	158
Fusing and delivery unit	159
Loop control	159
Pressure-roller pressurization control	160
Duplexing unit	162
Duplexing reverse and feed control	163
Duplex pickup operation	163
Jam detection	164
Optional paper feeder	166
Paper-feeder pickup and feed operation	168
Paper-size detection and cassette-presence detection	168
Paper-feeder cassette lift operation	170
Paper-feeder presence detection	171
Paper-feeder multiple feed prevention	172
Paper feeder jam detection	173
Scanning/image capture system system	174
Optical assembly	174
Automatic document feed system	174
Control panel	174
Sensors in the ADF	174
ADF paper path	175
Stapler	176

6 Removal and replacement

Introduction	178
Removal and replacement strategy	178
Electrostatic discharge	178
Required tools	179
Before performing service	180
After performing service	181
Post-service test	182
Print-quality test	182
Copy-quality test	182
DC controller PCA	183
Parts removal order	184
Customer self repair (CSR) components	186
Print cartridges	186
Stapler cartridge	188
Duplex-reverse guide	189
Toner-collection unit	190

Formatter PCA	192
Memory DIMM	193
Remove the memory DIMM	193
Enable memory for Windows	194
Hard drive and Serial Advanced Technology Attachment (SATA) cable	195
Remove the hard drive and SATA cable	195
Fax PCA and cable	197
Remove the fax PCA and cable	197
Tray cassette	199
Fuser	200
Pickup roller (Tray 2)	201
Pickup and feed rollers (Tray 3)	203
Separation roller (Tray 2)	204
Secondary transfer roller	205
Reinstall the transfer roller	206
Secondary transfer assembly	207
Reinstall the secondary transfer assembly	208
Intermediate transfer belt (ITB)	209
Front-door assembly	211
Automatic document feeder (ADF)	212
Calibrate a replacement ADF assembly	214
ADF roller assembly and separation pad	215
Reinstall the ADF roller assembly	217
Control-panel overlay	218
Control-panel assembly	219
Remove the control-panel assembly	219
Right door (optional paper feeder)	221
External panels, covers, doors, and scanner assembly	223
Identification and location	223
Front-upper cover	225
Right-door assembly	227
Right-rear cover	231
Left cover	233
Rear-upper cover	236
Rear cover	238
Remove the rear cover	238
Right-front cover	239
Remove the right-front cover	239
Reinstall the power button	241
Scanner assembly	242
Remove the scanner assembly	242
Delivery cover	245
Remove the delivery cover	245
Left-upper cover	247

Remove the left-upper cover	247
Front stapler cover and right-side stapler cover	249
Remove the front stapler cover and right-side stapler cover	249
Reinstall the right-side stapler cover	256
Right-top cover	258
Remove the right-top cover	258
Front-top cover	261
Remove the front-top cover	261
Rear-top cover	262
Remove the rear-top cover	262
Internal assemblies	264
Stapler assembly	264
Remove the stapler assembly	264
Reinstall the stapler assembly	265
Stapler power supply	266
Remove the stapler power supply	266
Interconnect board (ICB)	267
Remove the ICB	267
Reinstall the ICB	269
DC controller PCA and tray	270
Remove the DC controller PCA and tray	270
Low-voltage power supply (LVPS)	273
Remove the LVPS	273
Scanner-control board (SCB)	279
Remove the SCB	279
Reinstall the SCB	283
Pickup roller (Tray 1)	284
Delivery fan, cartridge fan, and environmental sensor	285
Remove the delivery fan, cartridge fan, and environmental sensor	285
Toner-collection sensor	290
Remove the toner-collection sensor	290
Residual-toner-feed motor	292
Remove the residual-toner-feed motor	292
Reinstall the residual-toner collection door	296
Registration density (RD) sensor assembly	297
Remove the RD sensor assembly	297
Power-supply fan and fan duct	300
Remove the power-supply fan and fan duct	300
Registration assembly	303
Remove the registration assembly	303
High-voltage power supply lower	308
Remove the high-voltage power supply lower	308
Reinstall the high-voltage power supply lower	310
Developing-disengagement motor	311

Remove the developing-disengagement motor	311
Pickup motor	313
Remove the pickup motor	313
Lifter-drive assembly	314
Remove the lifter-drive assembly	314
Cassette-pickup drive assembly	316
Remove the cassette-pickup drive assembly	316
Reinstall the cassette-pickup drive assembly	321
Cassette-pickup assembly	323
Remove the cassette-pickup assembly	323
Laser/scanner assembly (Y/M)	325
Remove the laser/scanner assembly (Y/M)	325
Laser/scanner assembly (C/Bk)	332
Remove the laser/scanner assembly (C/Bk)	332
Reinstall the protective glass cleaner (PGC) actuators	336
High-voltage power supply upper	339
Remove the high-voltage power supply upper	339
Reinstall the high-voltage power supply upper	342
Drum motor 1	343
Remove the drum motor 1	343
Drum motor 2 or drum motor 3	344
Remove the drum motor 2 or drum motor 3	344
Fuser motor	345
Remove the fuser motor	345
Main-drive assembly	346
Remove the main-drive assembly	346
Reinstall the main-drive assembly	350
Fuser-drive assembly	356
Remove the fuser-drive assembly	357
Reinstall the fuser-drive assembly	360
Delivery assembly	361
Remove the delivery assembly	362
Reinstall the delivery assembly	365
Duplex-drive assembly	366
Remove the duplex-drive assembly	367
Optional paper feeder assembly (Tray 3)	368
Drawer connector	368

7 Solve problems

Solve problems checklist	370
Menu map	372
Troubleshooting process	373
Determine the problem source	373

Pre-troubleshooting checklist	373
Troubleshooting flowchart	375
Power subsystem	376
Power-on checks	376
Power-on troubleshooting overview	376
Tools for troubleshooting	378
Individual component diagnostics	378
LED diagnostics	378
Understand lights on the formatter	378
Engine diagnostics	381
Troubleshooting menu	381
Defeating interlocks	384
Disable cartridge check	385
Engine-test button	386
Paper-path test	386
Manual sensor test (special-mode test)	387
A TOP (top of page) sensor	389
B and C loop sensors	390
D fuser (fixing) delivery sensor	391
E duplex re-pickup sensor	392
F output bin full sensor	393
G developing home-position sensor	394
H fuser (fixing) pressure-release sensor	395
I primary transfer-roller disengagement sensor	396
K right and front door interlock switches	398
L Tray 1 media present sensor	400
M Tray 2 paper out sensor	401
N Tray 2 closed sensor	402
O Tray 2 stack-surface sensor	403
P optional Tray 3-empty sensor	404
Q optional Tray 3 media-feed sensor (Q)	405
R optional Tray 3 stack-surface sensor (R)	406
S, T, and U optional Tray 3 media-size sensors	407
Paper-path sensors test	408
Print/Stop test	409
Component tests	409
Component test (special mode test)	409
Diagrams	411
Formatter PCA	411
Location of connectors	412
DC controller PCA	412
Paper feeder driver PCA	413
PCAs, motors, fans, switches, solenoids, and clutches	414
Base product	414

1 x 500 paper feeder	420
Sensors	421
General timing chart	423
Circuit diagrams	423
Print-quality troubleshooting tools	427
Repetitive defects ruler	428
Calibrate the product	430
Internal print-quality test pages	431
Print-quality-troubleshooting pages	431
Diagnostics page	434
Cleaning page	435
Configuration pages	436
Configuration page	436
HP embedded Jetdirect page	438
Embedded protocol page	439
Finding important information on the configuration pages	440
Color-band test	440
Control-panel messages	441
Event log messages	468
Print an event log	468
Show an event log	468
Clear the event log	468
Event log message table	468
Clear paper jams	472
Common causes of jams	472
Jam locations	473
Clear jams	473
Clear jams in the right door	475
Clear jams in the output bin area	479
Clear jams in Tray 1	480
Clear jams in Tray 2	482
Clear jams in the optional 500-sheet paper and heavy media tray (Tray 3)	483
Clear jams in the lower right door (Tray 3)	484
Clear jams in the document feeder	485
Jam recovery	486
Solve paper-handling problems	487
Product feeds multiple sheets	487
Product feeds incorrect page size	487
Product pulls from incorrect tray	487
Paper does not feed automatically	488
Paper does not feed from Tray 2 or 3	488
Transparencies or glossy paper will not feed	489
Envelopes jam or will not feed in the product	489

Output is curled or wrinkled	490
Product will not duplex or duplexes incorrectly	490
Use manual print modes	492
Solve image-quality problems	494
Image defects table	494
Solve performance problems	500
Solve connectivity problems	501
Solve direct-connect problems	501
Solve network problems	501
Service mode functions	503
Service menu	503
Product resets	505
Restore factory settings	505
Hard disk initialization (optional)	505
NVRAM initialization	506
Restore factory settings (cold reset)	506
Solve fax problems	507
Solve e-mail problems	507
Validate the SMTP gateway address	507
Validate the LDAP gateway address	507

8 Parts and diagrams

Order parts, accessories, and supplies	510
Part numbers	511
Customer self-repair (CSR) components	511
Accessories and products	512
Print cartridges and toner collection unit	513
Memory	513
Cables and interfaces	514
Service kits	515
Service manuals and user documentation	518
Screws	519
How to use the parts lists and diagrams	519
ADF and scanner assemblies	520
External covers, panels, and doors	522
Right door assembly	524
Internal components	526
Internal components (1 of 5)	526
Internal components (2 of 5)	528
Internal components (3 of 5)	530
Internal components (4 of 5)	532
Internal components (5 of 5)	534
Fuser	536

250-sheet cassette	538
250-sheet cassette paper pickup assembly	540
Registration assembly	542
Paper-delivery assembly	544
PCAs	546
Formatter components	548
Accessories	550
500-sheet paper feeder	550
Paper feeder main body	552
Alphabetical parts list	554
Numerical parts list	561

Appendix A Service and support

Hewlett-Packard limited warranty statement	570
Print cartridge limited warranty statement	571
HP Color LaserJet Fuser Kit Limited Warranty Statement	572
End User License Agreement	573
Customer self-repair warranty service	575
Customer support	576

Appendix B Product specifications

Physical specifications	578
Electrical specifications	578
Acoustic specifications	578
Environmental specifications	579

Appendix C Regulatory information

FCC regulations	582
Declaration of Conformity	583
Safety statements	584
Laser safety	584
Canadian DOC regulations	584
VCCI statement (Japan)	584
Power cord statement (Japan)	584
EMC statement (Korea)	584
Laser statement for Finland	584
Substances Table (China)	585

Index	587
--------------------	------------

List of tables

Table 1-1	Product models	3
Table 1-2	Features	4
Table 2-1	Information menu	17
Table 2-2	Default Options For Originals menu	19
Table 2-3	Image Adjustment menu	20
Table 2-4	Default Copy Options menu	21
Table 2-5	Fax Send menu	22
Table 2-6	Fax Receive menu	22
Table 2-7	Default Print Options menu	25
Table 2-8	Time/Scheduling menu	26
Table 2-9	Management menu	28
Table 2-10	Networking and I/O	31
Table 2-11	Jetdirect menus	31
Table 2-12	Fax Setup menu	38
Table 2-13	E-mail Setup menu	41
Table 2-14	Send Setup menu	41
Table 2-15	Device Behavior menu	42
Table 2-16	Print Quality menu	46
Table 2-17	Troubleshooting menu	50
Table 2-18	Resets menu	53
Table 3-1	Supported paper and print media sizes	56
Table 5-1	Sequence of operation	117
Table 5-2	Solenoids	119
Table 5-3	Switches	120
Table 5-4	Sensors	121
Table 5-5	Motors	122
Table 5-6	Fans	123
Table 5-7	High-voltage power supply circuits	124
Table 5-8	Converted DC voltages	125
Table 5-9	Fuser (fixing) components	127
Table 5-10	Primary-transfer-roller engagement states	143
Table 5-11	Image-stabilization controls	147
Table 5-12	Switches and sensors for the pickup, feed, and delivery system	148
Table 5-13	Motors and solenoids for the pickup, feed, and delivery system	149

Table 5-14	Jams that the product detects	164
Table 5-15	Electrical components for the paper feeder	167
Table 6-1	DC controller connectors	183
Table 6-2	External panels, covers, doors, and scanner assembly; identification and location	223
Table 7-1	Pre-troubleshooting checklist	373
Table 7-2	Troubleshooting flowchart	375
Table 7-3	Manual sensor diagnostic tests	387
Table 7-4	Paper-path sensors diagnostic tests	408
Table 7-5	Component test details	409
Table 7-6	Formatter PCA	411
Table 7-7	DC controller connectors	412
Table 7-8	Paper feeder driver PCA connectors	413
Table 7-9	PCAs, motors, fans, switches, solenoids, and clutches	418
Table 7-10	Sensors	421
Table 7-11	Important information on the configuration pages	440
Table 7-12	Control-panel messages	441
Table 7-13	MP modes under the Adjust paper types> sub menu	492
Table 7-14	MP modes under the Optimize submenu	492
Table 8-1	Customer self-repair (CSR) components	511
Table 8-2	Accessories	512
Table 8-3	Print cartridges and toner collection unit	513
Table 8-4	Memory	513
Table 8-5	Cables and interfaces	514
Table 8-6	Service kit contents	515
Table 8-7	Service manuals and user documentation	518
Table 8-8	Common fasteners	519
Table 8-9	ADF/scanner assembly	521
Table 8-10	External covers, panels, and doors;	523
Table 8-11	Right door assembly	525
Table 8-12	Internal components (1 of 5)	527
Table 8-13	Internal components (2 of 5)	529
Table 8-14	Internal components (3 of 5)	531
Table 8-15	Internal components (4 of 5)	533
Table 8-16	Internal components (5 of 5)	535
Table 8-17	Fuser	537
Table 8-18	250-sheet cassette	539
Table 8-19	250-sheet cassette paper pickup assembly	541
Table 8-20	Registration assembly	543
Table 8-21	Paper-delivery assembly	545
Table 8-22	PCAs	547
Table 8-23	Formatter components	549
Table 8-24	500-sheet paper feeder	551
Table 8-25	Paper feeder main body	553
Table 8-26	Alphabetical parts list	554

Table 8-27	Numerical parts list	561
Table B-1	Product dimensions	578
Table B-2	Product dimensions, with all doors and trays fully opened	578
Table B-3	Power requirements	578
Table B-4	Power consumption (average, in watts)	578
Table B-5	HP Color LaserJet CM3530 MFP Series	578

List of figures

Figure 4-1	Slot for the security cable	92
Figure 4-2	Supply item locations	94
Figure 5-1	Relationship between the main product systems	116
Figure 5-2	Engine-control system	118
Figure 5-3	DC controller block diagram	119
Figure 5-4	High-voltage power supply circuits	123
Figure 5-5	Low-voltage power-supply circuit	125
Figure 5-6	Fuser (fixing) components	127
Figure 5-7	Fuser temperature-control circuit	128
Figure 5-8	Laser/scanner system	131
Figure 5-9	Image-formation system	133
Figure 5-10	Image-formation process	134
Figure 5-11	Pre-exposure	135
Figure 5-12	Primary charging	135
Figure 5-13	Laser-beam exposure	136
Figure 5-14	Development	136
Figure 5-15	Primary transfer	137
Figure 5-16	Secondary transfer	137
Figure 5-17	Separation	138
Figure 5-18	Fusing	138
Figure 5-19	ITB cleaning	139
Figure 5-20	Drum cleaning	139
Figure 5-21	Print-cartridge system	140
Figure 5-22	Developing-roller engagement and disengagement control	141
Figure 5-23	ITB unit	142
Figure 5-24	Three states of primary-transfer-roller engagement and disengagement	144
Figure 5-25	ITB cleaning process	145
Figure 5-26	Toner patterns for calibration	146
Figure 5-27	Switches and sensors for the pickup, feed, and delivery system	148
Figure 5-28	Motors and solenoids for the pickup, feed, and delivery system	149
Figure 5-29	Three main units of the pickup, feed, and delivery system	150
Figure 5-30	Pickup and feed unit	151
Figure 5-31	Cassette-pickup mechanism	152
Figure 5-32	Cassette presence sensor	153

Figure 5-33	Cassette lift mechanism	154
Figure 5-34	Paper-level-detection mechanism	155
Figure 5-35	Multifeed prevention	155
Figure 5-36	Multipurpose tray pickup mechanism	156
Figure 5-37	Paper-feed mechanism	157
Figure 5-38	Skew-feed prevention	158
Figure 5-39	Fuser and delivery unit	159
Figure 5-40	Loop-control mechanism	160
Figure 5-41	Pressure-roller pressurization control	161
Figure 5-42	Duplexing unit	162
Figure 5-43	Jam detection sensors	164
Figure 5-44	Optional paper feeder	166
Figure 5-45	Signals for the paper feeder	167
Figure 5-46	Paper-feeder pickup and feed operation	168
Figure 5-47	Paper size detection	169
Figure 5-48	Paper-feeder cassette lift	171
Figure 5-49	Paper-feeder multiple feed prevention	172
Figure 5-50	Jam detection	173
Figure 5-51	ADF path for single-sided documents	175
Figure 5-52	ADF path for two-sided documents	176
Figure 6-1	Phillips and pozidrive screwdriver comparison	179
Figure 6-2	DC controller PCA	183
Figure 6-3	Parts removal order (1 of 2)	184
Figure 6-4	Parts removal order (2 of 2)	185
Figure 6-5	Remove the print cartridge (1 of 2)	186
Figure 6-6	Remove the print cartridge (2 of 2)	187
Figure 6-7	Remove the stapler cartridge	188
Figure 6-8	Remove the duplex-reverse guide (1 of 2)	189
Figure 6-9	Remove the duplex-reverse guide (2 of 2)	189
Figure 6-10	Remove the toner-collection unit (1 of 4)	190
Figure 6-11	Remove the toner-collection unit (2 of 4)	190
Figure 6-12	Remove the toner-collection unit (3 of 4)	191
Figure 6-13	Remove the toner-collection unit (4 of 4)	191
Figure 6-14	Remove the formatter	192
Figure 6-15	Remove the memory DIMM (1 of 2)	193
Figure 6-16	Remove the memory DIMM (2 of 2)	194
Figure 6-17	Remove the hard drive and SATA cable (1 of 3)	195
Figure 6-18	Remove the hard drive and SATA cable (2 of 3)	196
Figure 6-19	Remove the hard drive and SATA cable (3 of 3)	196
Figure 6-20	Remove the fax PCA and cable (1 of 2)	197
Figure 6-21	Remove the fax PCA and cable (2 of 2)	198
Figure 6-22	Remove the tray cassette (1 of 2)	199
Figure 6-23	Remove the tray cassette (2 of 2)	199
Figure 6-24	Remove the fuser (1 of 2)	200

Figure 6-25	Remove the fuser (2 of 2)	200
Figure 6-26	Remove the pickup roller (Tray 2) (1 of 4)	201
Figure 6-27	Remove the pickup roller (Tray 2) (2 of 4)	201
Figure 6-28	Remove the pickup roller (Tray 2) (3 of 4)	202
Figure 6-29	Remove the pickup roller (Tray 2) (4 of 4)	202
Figure 6-30	Remove the Pickup and feed rollers (Tray 3) (1 of 2)	203
Figure 6-31	Remove the Pickup and feed rollers (Tray 3) (2 of 2)	203
Figure 6-32	Remove the separation roller (Tray 2)	204
Figure 6-33	Remove the transfer roller (1 of 3)	205
Figure 6-34	Remove the transfer roller (2 of 3)	205
Figure 6-35	Remove the transfer roller (3 of 3)	206
Figure 6-36	Reinstall the transfer roller	206
Figure 6-37	Remove the transfer roller (2 of 3)	207
Figure 6-38	Remove the secondary transfer assembly (1 of 2)	207
Figure 6-39	Remove the secondary transfer assembly (2 of 2)	208
Figure 6-40	Reinstall the secondary transfer assembly	208
Figure 6-41	Remove the intermediate transfer belt (1 of 3)	209
Figure 6-42	Remove the intermediate transfer belt (2 of 3)	209
Figure 6-43	Remove the intermediate transfer belt (3 of 3)	210
Figure 6-44	Remove the front-door assembly (1 of 2)	211
Figure 6-45	Remove the front-door assembly (2 of 2)	211
Figure 6-46	Remove the ADF assembly (1 of 4)	212
Figure 6-47	Remove the ADF assembly (2 of 4)	212
Figure 6-48	Remove the ADF assembly (3 of 4)	213
Figure 6-49	Remove the ADF assembly (4 of 4)	213
Figure 6-50	Remove the ADF roller assembly and separation pad (1 of 5)	215
Figure 6-51	Remove the ADF roller assembly and separation pad (2 of 5)	215
Figure 6-52	Remove the ADF roller assembly and separation pad (3 of 5)	216
Figure 6-53	Remove the ADF roller assembly and separation pad (4 of 5)	216
Figure 6-54	Remove the ADF roller assembly and separation pad (5 of 5)	217
Figure 6-55	Reinstall the ADF roller assembly	217
Figure 6-56	Remove the control-panel overlay (1 of 2)	218
Figure 6-57	Remove the control-panel overlay (2 of 2)	218
Figure 6-58	Remove the control-panel assembly (1 of 3)	219
Figure 6-59	Remove the control-panel assembly (2 of 3)	219
Figure 6-60	Remove the control-panel assembly (3 of 3)	220
Figure 6-61	Remove the right door; optional paper feeder (1 of 3)	221
Figure 6-62	Remove the right door; optional paper feeder (2 of 3)	221
Figure 6-63	Remove the right door; optional paper feeder (3 of 3)	222
Figure 6-64	External panels, covers, doors, and scanner assembly; identification and location	223
Figure 6-65	Remove the front-upper cover (1 of 4)	225
Figure 6-66	Remove the front-upper cover (2 of 4)	225
Figure 6-67	Remove the front-upper cover (3 of 4)	226
Figure 6-68	Remove the front-upper cover (4 of 4)	226

Figure 6-69	Remove the right-door assembly (1 of 8)	227
Figure 6-70	Remove the right-door assembly (2 of 8)	227
Figure 6-71	Remove the right-door assembly (3 of 8)	228
Figure 6-72	Remove the right-door assembly (4 of 8)	228
Figure 6-73	Remove the right-door assembly (5 of 8)	229
Figure 6-74	Remove the right-door assembly (6 of 8)	229
Figure 6-75	Remove the right-door assembly (7 of 8)	230
Figure 6-76	Remove the right-door assembly (8 of 8)	230
Figure 6-77	Remove the right-rear cover (1 of 3)	231
Figure 6-78	Remove the right-rear cover (2 of 3)	231
Figure 6-79	Remove the right-rear cover (3 of 3)	232
Figure 6-80	Remove the left cover (1 of 5)	233
Figure 6-81	Remove the left cover (2 of 5)	233
Figure 6-82	Remove the left cover (3 of 5)	234
Figure 6-83	Remove the left cover (4 of 5)	234
Figure 6-84	Remove the left cover (5 of 5)	235
Figure 6-85	Remove the rear-upper cover (1 of 4)	236
Figure 6-86	Remove the rear-upper cover (2 of 4)	236
Figure 6-87	Remove the rear-upper cover (3 of 4)	237
Figure 6-88	Remove the rear-upper cover (4 of 4)	237
Figure 6-89	Remove the rear cover (1 of 2)	238
Figure 6-90	Remove the rear cover (2 of 2)	238
Figure 6-91	Remove the right-front cover (1 of 5)	239
Figure 6-92	Remove the right-front cover (2 of 5)	239
Figure 6-93	Remove the right-front cover (3 of 5)	240
Figure 6-94	Remove the right-front cover (4 of 5)	240
Figure 6-95	Remove the right-front cover (5 of 5)	241
Figure 6-96	Reinstall the power button	241
Figure 6-97	Remove the scanner assembly (1 of 6)	242
Figure 6-98	Remove the scanner assembly (2 of 6)	242
Figure 6-99	Remove the scanner assembly (3 of 6)	243
Figure 6-100	Remove the scanner assembly (4 of 6)	243
Figure 6-101	Remove the scanner assembly (5 of 6)	244
Figure 6-102	Remove the scanner assembly (6 of 6)	244
Figure 6-103	Remove the delivery cover (1 of 3)	245
Figure 6-104	Remove the delivery cover (2 of 3)	246
Figure 6-105	Remove the delivery cover (3 of 3)	246
Figure 6-106	Remove the left-upper cover (1 of 2)	247
Figure 6-107	Remove the left-upper cover (2 of 2)	248
Figure 6-108	Remove the front stapler cover and right-side stapler cover (1 of 13)	249
Figure 6-109	Remove the front stapler cover and right-side stapler cover (2 of 13)	250
Figure 6-110	Remove the front stapler cover and right-side stapler cover (3 of 13)	250
Figure 6-111	Remove the front stapler cover and right-side stapler cover (4 of 13)	251
Figure 6-112	Remove the front stapler cover and right-side stapler cover (5 of 13)	251

Figure 6-113	Remove the front stapler cover and right-side stapler cover (6 of 13)	252
Figure 6-114	Remove the front stapler cover and right-side stapler cover (7 of 13)	252
Figure 6-115	Remove the front stapler cover and right-side stapler cover (8 of 13)	253
Figure 6-116	Remove the front stapler cover and right-side stapler cover (9 of 13)	253
Figure 6-117	Remove the front stapler cover and right-side stapler cover (10 of 13)	254
Figure 6-118	Remove the front stapler cover and right-side stapler cover (11 of 13)	254
Figure 6-119	Remove the front stapler cover and right-side stapler cover (12 of 13)	255
Figure 6-120	Remove the front stapler cover and right-side stapler cover (13 of 13)	255
Figure 6-121	Reinstall the right-side stapler cover (1 of 3)	256
Figure 6-122	Reinstall the right-side stapler cover (2 of 3)	256
Figure 6-123	Reinstall the right-side stapler cover (3 of 3)	257
Figure 6-124	Remove the right-top cover (1 of 5)	258
Figure 6-125	Remove the right-top cover (2 of 5)	259
Figure 6-126	Remove the right-top cover (3 of 5)	259
Figure 6-127	Remove the right-top cover (4 of 5)	260
Figure 6-128	Remove the right-top cover (5 of 5)	260
Figure 6-129	Remove the front-top cover (1 of 2)	261
Figure 6-130	Remove the front-top cover (2 of 2)	261
Figure 6-131	Remove the rear-top cover (1 of 2)	262
Figure 6-132	Remove the rear-top cover (2 of 2)	263
Figure 6-133	Remove the stapler assembly (1 of 2)	264
Figure 6-134	Remove the stapler assembly (2 of 2)	265
Figure 6-135	Reinstall the stapler assembly	265
Figure 6-136	Remove the stapler power supply	266
Figure 6-137	Remove the ICB (1 of 3)	267
Figure 6-138	Remove the ICB (2 of 3)	268
Figure 6-139	Remove the ICB (3 of 3)	268
Figure 6-140	Reinstall the ICB	269
Figure 6-141	Remove the DC controller PCA and tray (1 of 4)	270
Figure 6-142	Remove the DC controller PCA and tray (2 of 4)	271
Figure 6-143	Remove the DC controller PCA and tray (3 of 4)	271
Figure 6-144	Remove the DC controller PCA and tray (4 of 4)	272
Figure 6-145	Remove the LVPS (1 of 10)	273
Figure 6-146	Remove the LVPS (2 of 10)	274
Figure 6-147	Remove the LVPS (3 of 10)	274
Figure 6-148	Remove the LVPS (4 of 10)	275
Figure 6-149	Remove the (5 of 10)	275
Figure 6-150	Remove the (6 of 10)	276
Figure 6-151	Remove the LVPS (7 of 10)	276
Figure 6-152	Remove the LVPS (8 of 10)	277
Figure 6-153	Remove the LVPS (9 of 10)	277
Figure 6-154	Remove the LVPS (10 of 10)	278
Figure 6-155	Remove the SCB (1 of 8)	279
Figure 6-156	Remove the SCB (2 of 8)	280

Figure 6-157	Remove the SCB (3 of 8)	280
Figure 6-158	Remove the SCB (4 of 8)	281
Figure 6-159	Remove the (5 of 8)	281
Figure 6-160	Remove the SCB (6 of 8)	282
Figure 6-161	Remove the SCB (7 of 8)	282
Figure 6-162	Remove the SCB (8 of 8)	283
Figure 6-163	Reinstalling the SCB	283
Figure 6-164	Remove the pickup roller (Tray 1) (1 of 2)	284
Figure 6-165	Remove the pickup roller (Tray 1) (2 of 2)	284
Figure 6-166	Remove the delivery fan, cartridge fan, and environmental sensor (1 of 9)	285
Figure 6-167	Remove the delivery fan, cartridge fan, and environmental sensor (2 of 9)	285
Figure 6-168	Remove the delivery fan, cartridge fan, and environmental sensor (3 of 9)	286
Figure 6-169	Remove the delivery fan, cartridge fan, and environmental sensor (4 of 9)	286
Figure 6-170	Remove the delivery fan, cartridge fan, and environmental sensor (5 of 9)	287
Figure 6-171	Remove the delivery fan, cartridge fan, and environmental sensor (6 of 9)	287
Figure 6-172	Remove the delivery fan, cartridge fan, and environmental sensor (7 of 9)	288
Figure 6-173	Remove the delivery fan, cartridge fan, and environmental sensor (8 of 9)	288
Figure 6-174	Remove the delivery fan, cartridge fan, and environmental sensor (9 of 9)	289
Figure 6-175	Remove the toner-collection sensor (1 of 4)	290
Figure 6-176	Remove the toner-collection sensor (2 of 4)	290
Figure 6-177	Remove the toner-collection sensor (3 of 4)	291
Figure 6-178	Remove the toner-collection sensor (4 of 4)	291
Figure 6-179	Remove the residual-toner-feed motor (1 of 7)	292
Figure 6-180	Remove the residual-toner-feed motor (2 of 7)	293
Figure 6-181	Remove the residual-toner-feed motor (3 of 7)	293
Figure 6-182	Remove the residual-toner-feed motor (4 of 7)	294
Figure 6-183	Remove the residual-toner-feed motor (5 of 7)	294
Figure 6-184	Remove the residual-toner-feed motor (6 of 7)	295
Figure 6-185	Remove the residual-toner-feed motor (7 of 7)	295
Figure 6-186	Reinstall the residual-toner collection door	296
Figure 6-187	Remove the RD sensor assembly (1 of 6)	297
Figure 6-188	Remove the RD sensor assembly (2 of 6)	297
Figure 6-189	Remove the RD sensor assembly (3 of 6)	298
Figure 6-190	Remove the RD sensor assembly (4 of 6)	298
Figure 6-191	Remove the RD sensor assembly (5 of 6)	299
Figure 6-192	Remove the RD sensor assembly (6 of 6)	299
Figure 6-193	Remove the power-supply fan (1 of 4)	300
Figure 6-194	Remove the power-supply fan (2 of 4)	301
Figure 6-195	Remove the power-supply fan (3 of 4)	301
Figure 6-196	Remove the power-supply fan (4 of 4)	302
Figure 6-197	Remove the registration assembly (1 of 8)	303
Figure 6-198	Remove the registration assembly (2 of 8)	304
Figure 6-199	Remove the registration assembly (3 of 8)	304
Figure 6-200	Remove the registration assembly (4 of 8)	305

Figure 6-201	Remove the registration assembly (5 of 8)	305
Figure 6-202	Remove the registration assembly (6 of 8)	306
Figure 6-203	Remove the registration assembly (7 of 8)	306
Figure 6-204	Remove the registration assembly (8 of 8)	307
Figure 6-205	Remove the high-voltage power supply lower (1 of 4)	308
Figure 6-206	Remove the high-voltage power supply lower (2 of 4)	309
Figure 6-207	Remove the high-voltage power supply lower (3 of 4)	309
Figure 6-208	Remove the high-voltage power supply lower (4 of 4)	310
Figure 6-209	Reinstall the high-voltage power supply lower	310
Figure 6-210	Remove the developing-disengagement motor (1 of 2)	311
Figure 6-211	Remove the developing-disengagement motor (2 of 2)	312
Figure 6-212	Remove the pickup motor	313
Figure 6-213	Remove the lifter-drive assembly (1 of 2)	314
Figure 6-214	Remove the lifter-drive assembly (2 of 2)	315
Figure 6-215	Remove the cassette-pickup drive assembly (1 of 10)	316
Figure 6-216	Remove the cassette-pickup drive assembly (2 of 10)	317
Figure 6-217	Remove the cassette-pickup drive assembly (3 of 10)	317
Figure 6-218	Remove the cassette-pickup drive assembly (4 of 10)	318
Figure 6-219	Remove the cassette-pickup drive assembly (5 of 10)	318
Figure 6-220	Remove the cassette-pickup drive assembly (6 of 10)	319
Figure 6-221	Remove the cassette-pickup drive assembly (7 of 10)	319
Figure 6-222	Remove the cassette-pickup drive assembly (8 of 10)	320
Figure 6-223	Remove the cassette-pickup drive assembly (9 of 10)	320
Figure 6-224	Remove the cassette-pickup drive assembly (10 of 10)	321
Figure 6-225	Reinstall the cassette-pickup drive assembly (1 of 3)	321
Figure 6-226	Reinstall the cassette-pickup drive assembly (2 of 3)	322
Figure 6-227	Reinstall the cassette-pickup drive assembly (3 of 3)	322
Figure 6-228	Remove the cassette-pickup assembly (1 of 3)	323
Figure 6-229	Remove the cassette-pickup assembly (2 of 3)	324
Figure 6-230	Remove the cassette-pickup assembly (3 of 3)	324
Figure 6-231	Remove the laser/scanner assembly (Y/M) (1 of 12)	325
Figure 6-232	Remove the laser/scanner assembly (Y/M) (2 of 12)	326
Figure 6-233	Remove the laser/scanner assembly (Y/M) (3 of 12)	326
Figure 6-234	Remove the laser/scanner assembly (Y/M) (4 of 12)	327
Figure 6-235	Remove the laser/scanner assembly (Y/M) (5 of 12)	327
Figure 6-236	Remove the laser/scanner assembly (Y/M) (6 of 12)	328
Figure 6-237	Remove the laser/scanner assembly (Y/M) (7 of 12)	328
Figure 6-238	Remove the laser/scanner assembly (Y/M) (8 of 12)	329
Figure 6-239	Remove the laser/scanner assembly (Y/M) (9 of 12)	329
Figure 6-240	Remove the laser/scanner assembly (Y/M) (10 of 12)	330
Figure 6-241	Remove the laser/scanner assembly (Y/M) (11 of 12)	330
Figure 6-242	Remove the laser/scanner assembly (Y/M) (12 of 12)	331
Figure 6-243	Remove the laser/scanner assembly (C/Bk) (1 of 7)	332
Figure 6-244	Remove the laser/scanner assembly (C/Bk) (2 of 7)	333

Figure 6-245	Remove the laser/scanner assembly (C/Bk) (3 of 7)	333
Figure 6-246	Remove the laser/scanner assembly (C/Bk) (4 of 7)	334
Figure 6-247	Remove the laser/scanner assembly (C/Bk) (5 of 7)	334
Figure 6-248	Remove the laser/scanner assembly (C/Bk) (6 of 7)	335
Figure 6-249	Remove the laser/scanner assembly (C/Bk) (7 of 7)	335
Figure 6-250	Reinstall the PGC actuators (1 of 5)	336
Figure 6-251	Reinstall the PGC actuators (2 of 5)	336
Figure 6-252	Reinstall the PGC actuators (3 of 5)	337
Figure 6-253	Reinstall the PGC actuators (4 of 5)	337
Figure 6-254	Reinstall the PGC actuators (5 of 5)	338
Figure 6-255	Remove the high-voltage power supply upper (1 of 5)	339
Figure 6-256	Remove the high-voltage power supply upper (2 of 5)	340
Figure 6-257	Remove the high-voltage power supply upper (3 of 5)	340
Figure 6-258	Remove the high-voltage power supply upper (4 of 5)	341
Figure 6-259	Remove the high-voltage power supply upper (5 of 5)	341
Figure 6-260	Reinstall the high-voltage power supply upper	342
Figure 6-261	Remove the drum motor 1	343
Figure 6-262	Remove the drum motor 2 or drum motor 3	344
Figure 6-263	Remove the fuser motor	345
Figure 6-264	Remove the main-drive assembly (1 of 7)	346
Figure 6-265	Remove the main-drive assembly (2 of 7)	347
Figure 6-266	Remove the main-drive assembly (3 of 7)	347
Figure 6-267	Remove the main-drive assembly (4 of 7)	348
Figure 6-268	Remove the main-drive assembly (5 of 7)	348
Figure 6-269	Remove the main-drive assembly (6 of 7)	349
Figure 6-270	Remove the main-drive assembly (7 of 7)	349
Figure 6-271	Reinstall the main-drive assembly (1 of 11)	350
Figure 6-272	Reinstall the main-drive assembly (2 of 11)	350
Figure 6-273	Reinstall the main-drive assembly (3 of 11)	351
Figure 6-274	Reinstall the main-drive assembly (4 of 11)	351
Figure 6-275	Reinstall the main-drive assembly (5 of 11)	352
Figure 6-276	Reinstall the main-drive assembly (6 of 11)	352
Figure 6-277	Reinstall the main-drive assembly (7 of 11)	353
Figure 6-278	Reinstall the main-drive assembly (8 of 11)	353
Figure 6-279	Reinstall the main-drive assembly (9 of 11)	354
Figure 6-280	Reinstall the main-drive assembly (10 of 11)	354
Figure 6-281	Reinstall the main-drive assembly (11 of 11)	355
Figure 6-282	Remove the fuser-drive assembly (1 of 6)	357
Figure 6-283	Remove the fuser-drive assembly (2 of 6)	357
Figure 6-284	Remove the fuser-drive assembly (3 of 6)	358
Figure 6-285	Remove the fuser-drive assembly (4 of 6)	358
Figure 6-286	Remove the fuser-drive assembly (5 of 6)	359
Figure 6-287	Remove the fuser-drive assembly (6 of 6)	359
Figure 6-288	Reinstall the fuser-drive assembly	360

Figure 6-289	Remove the delivery assembly (1 of 5)	362
Figure 6-290	Remove the delivery assembly (2 of 5)	362
Figure 6-291	Remove the delivery assembly (3 of 5)	363
Figure 6-292	Remove the delivery assembly (4 of 5)	363
Figure 6-293	Remove the delivery assembly (5 of 5)	364
Figure 6-294	Reinstall the delivery assembly (1 of 2)	365
Figure 6-295	Reinstall the delivery assembly (2 of 2)	365
Figure 6-296	Remove the duplex-drive assembly (1 of 2)	367
Figure 6-297	Remove the duplex-drive assembly (2 of 2)	367
Figure 6-298	Remove the drawer connector; optional paper feeder	368
Figure 7-1	Front-door interlock	384
Figure 7-2	Right-door interlock	384
Figure 7-3	Engine-test button	386
Figure 7-4	Test the TOP sensor	389
Figure 7-5	Test the loop sensors	390
Figure 7-6	Test the fuser delivery sensor (1 of 2)	391
Figure 7-7	Test the fuser (fixing) delivery sensor (2 of 2)	391
Figure 7-8	Test the duplex re-pickup sensor	392
Figure 7-9	Test the output-bin-full sensor	393
Figure 7-10	Test the fuser (fixing) pressure-release sensor (1 of 2)	395
Figure 7-11	Test the fuser (fixing) pressure-release sensor (2 of 2)	395
Figure 7-12	Test the primary transfer-roller disengagement sensor (1 of 2)	396
Figure 7-13	Test the primary transfer-roller disengagement sensor (2 of 2)	397
Figure 7-14	Test the right- and front-door interlock switches (1 of 4)	398
Figure 7-15	Test the right- and front-door interlock switches (2 of 4)	398
Figure 7-16	Test the right- and front-door interlock switches (3 of 4)	399
Figure 7-17	Test the right- and front-door interlock switches (4 of 4)	399
Figure 7-18	Test the Tray 1 media-present sensor	400
Figure 7-19	Test the tray 2 paper-out sensor	401
Figure 7-20	Test the Tray 2 closed sensor (1 of 2)	402
Figure 7-21	Test the Tray 2 closed sensor (2 of 2)	402
Figure 7-22	Test the Tray 2 stack-surface sensor	403
Figure 7-23	Test the optional Tray 3-empty sensor	404
Figure 7-24	Test the optional Tray 3 media-feed sensor	405
Figure 7-25	Test the optional Tray 3 stack-surface sensor	406
Figure 7-26	Test the optional Tray 3 media-size sensors	407
Figure 7-27	Formatter PCA	411
Figure 7-28	DC controller PCA	412
Figure 7-29	Paper feeder driver PCA	413
Figure 7-30	Component locations (1 of 5)	414
Figure 7-31	Component locations (2 of 5)	415
Figure 7-32	Component locations (3 of 5)	415
Figure 7-33	Component locations (4 of 5)	416
Figure 7-34	Component locations (5 of 5)	417

Figure 7-35	1 x 500 paper feeder	420
Figure 7-36	Sensors	421
Figure 7-37	General timing chart	423
Figure 7-38	General circuit diagram (1 of 2)	424
Figure 7-39	General circuit diagram (2 of 2)	425
Figure 7-40	Product circuit block diagram	425
Figure 7-41	Paper feeder circuit diagram	426
Figure 7-42	Repetitive defects ruler	428
Figure 7-43	Print-quality troubleshooting procedure	431
Figure 7-44	Yellow print-quality troubleshooting page	432
Figure 7-45	Yellow comparison page	432
Figure 7-46	Black print-quality troubleshooting page	433
Figure 7-47	Configuration page	436
Figure 7-48	HP embedded Jetdirect page	438
Figure 7-49	Embedded protocol page	439
Figure 7-50	Jam locations	473
Figure 8-1	ADF/scanner assembly	520
Figure 8-2	External covers, panels, and doors	522
Figure 8-3	Right door assembly	524
Figure 8-4	Internal components (1 of 5)	526
Figure 8-5	Internal components (2 of 5)	528
Figure 8-6	Internal components (3 of 5)	530
Figure 8-7	Internal components (4 of 5)	532
Figure 8-8	Internal components (5 of 5)	534
Figure 8-9	Fuser	536
Figure 8-10	250-sheet cassette	538
Figure 8-11	250-sheet cassette paper pickup assembly	540
Figure 8-12	Registration assembly	542
Figure 8-13	Paper-delivery assembly	544
Figure 8-14	PCAs	546
Figure 8-15	Formatter components	548
Figure 8-16	500-sheet paper feeder	550
Figure 8-17	Paper feeder main body	552

For the complete PDF manual
please visit www.LaserPros.com.