



C-10-7M Cable  
Male with coupling ring



 
C-10-8F Cable  
Female with coupling thread



C-10-9F Panel  
Female with coupling thread



C-10-4M Cable  
Male with coupling ring



C-10-5F Cable  
Female with coupling thread




C-10-6F Panel  
Female with coupling thread

### 3 CONTACT CONNECTORS



C-11-0M  
3 Pin Cable Connector with  
Coupling Ring - Male.

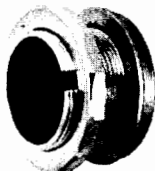

C-11-2F  
3 Contact Panel  
Connector with  
Coupling Thread -  
Female.



C-11-1F  
3 Contact Cable Connector  
with coupling thread - Female



C-11-01F  
3 Contact Cable Connector  
with coupling ring - Female.

C-11-21M  
3 Pin Panel  
Connector  
with Coupling  
Thread - Male



C-11-11M  
3 Pin Cable Connector with  
Coupling Thread - Male.

### 4 CONTACT CONNECTORS



C-11-3M  
4 Pin Cable Connector with  
Coupling Ring - Male



C-11-5F  
4 Contact Panel  
Connector with  
Coupling Thread -  
Female.



C-11-4F  
4 Contact Cable Connector  
with Coupling Thread - Female



C-11-31F  
4 Contact Cable Connector  
with Coupling Ring - Female.

C-11-06C  
Dust Cap & Chain



C-11-51M  
4 Pin Panel Connector  
with Coupling Thread - Male.

#### TERMINATING INSTRUCTIONS

To wire, remove element from connector, by releasing small countersunk screw. Remove about 1 inch of outer insulation from cable and insert in spring cable protector. Fold shield back over spring and solder. Strip insulation from centre conductors and insert cable and protector into cover from rear, sliding through as far as possible; solder conductors to contacts and draw back into shell. Replace small countersunk screw and tighten grub screw to make electrical connection to shield.