



C-10-7M Cable Male with coupling ring



C-10-8F Cable Female with coupling thread



C-10-9F Panel Female with coupling thread



C-10-4M Cable Male with coupling ring



C-10-5F Cable Female with coupling thread




C-10-6F Panel Female with coupling thread

### 3 CONTACT CONNECTORS



C-11-0M  
3 Pin Cable Connector with Coupling Ring - Male.

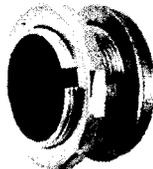

C-11-2F  
3 Contact Panel Connector with Coupling Thread - Female.



C-11-1F  
3 Contact Cable Connector with coupling thread - Female



C-11-01F  
3 Contact Cable Connector with coupling ring - Female.

C-11-21M  
3 Pin Panel Connector with Coupling Thread - Male



C-11-11M  
3 Pin Cable Connector with Coupling Thread - Male.

### 4 CONTACT CONNECTORS



C-11-3M  
4 Pin Cable Connector with Coupling Ring - Male



C-11-5F  
4 Contact Panel Connector with Coupling Thread - Female.



C-11-4F  
4 Contact Cable Connector with Coupling Thread - Female



C-11-31F  
4 Contact Cable Connector with Coupling Ring - Female.

C-11-06C  
Dust Cap & Chain



C-11-51M  
4 Pin Panel Connector with Coupling Thread - Male.

#### TERMINATING INSTRUCTIONS

To wire, remove element from connector, by releasing small countersunk screw. Remove about 1 inch of outer insulation from cable and insert in spring cable protector. Fold shield back over spring and solder. Strip insulation from centre conductors and insert cable and protector into cover from rear, sliding through as far as possible; solder conductors to contacts and draw back into shell. Replace small countersunk screw and tighten grub screw to make electrical connection to shield.