





Shell size	Recommended jacket strip length (mm)	Adapter tightening torque (Nm)	Nut tightening torque (Nm)	Cable range diameter Standard seal	Cable range diameter Reducing seal	Wire diameter
	Male					
8	17	1	0.75	2.5/6.5	1.5/5.0	From 1.7 mm to 3.0 mm
10	21	1.5	1	2.5/8.0	1.5/5.0	
12	25	2	2.5	5.0/12.0	3.0/9.0	
14	29	3	2.5	7.0/14.0	5.0/12.0	

6. UTS6JC Screw Termination Assembly


1. Mate the plug with a corresponding receptacle equipped with its contacts
2. Choose and place right seal depending on cable diameter (see table below)

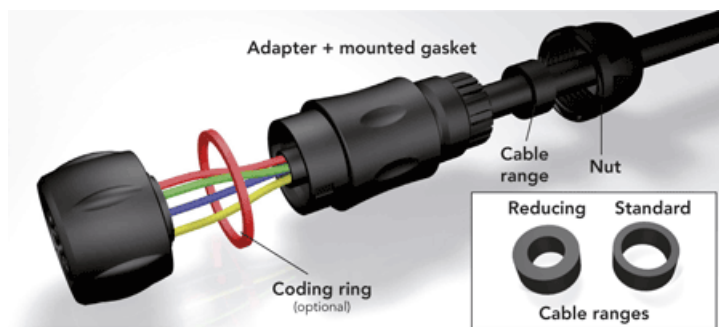

3. Slide accessories on the cable
4. Strip external jacket (see table below)

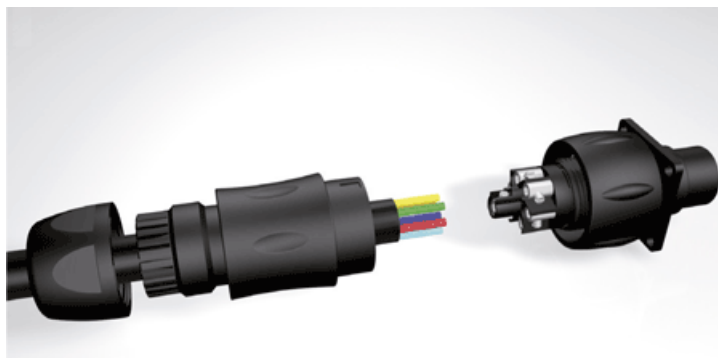

5. Strip the wires (strip length 5.8 mm)

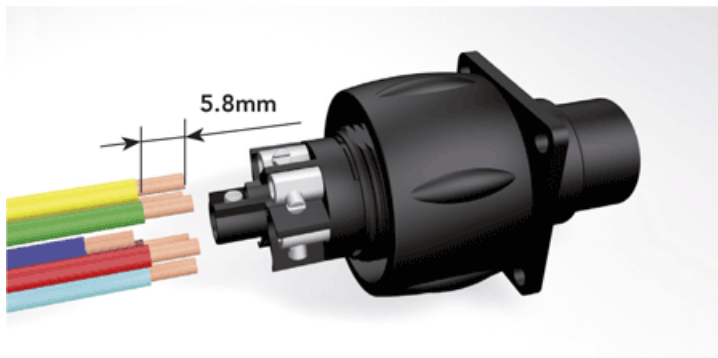

6. Place the conductors in the contact barrel. Make sure all conductor strands are inside the barrel
7. Tight the contact screws, advised torque 20 Ncm