

3. Service data

3.1.	DISMANTLING THE INSTRUMENT	65
3.1.1.	Precautions	65
3.1.2.	Removal of the screen bezel and the contrast plate	65
3.1.3.	Removal of the graticule plate	65
3.1.4.	Removal of the instrument covers	66
3.1.5.	Removal of the carrying handle	66
3.1.6.	Removal of the final amplifier unit	66
3.1.7.	Removal of the cathode-ray tube	66
3.1.8.	Removal of the power supply unit	66
3.1.9.	Removal of the mains transformer	66
3.1.10.	Removal of the main unit	67
3.1.11.	Removal of the knobs and textplate	67
3.1.12.	Replacing a switch of a push-button unit	67
3.2.	CHECKING AND ADJUSTING	68
3.2.1.	Introduction	68
3.2.1.1.	Measuring equipment and settings of oscilloscope under test	68
3.2.1.2.	Trimming tool kit (Type 800/NTX)	68
3.2.2.	CRT display section	69
3.2.2.1.	Intensity adjustment	69
3.2.2.2.	Focus and astigmatism adjustment	69
3.2.2.3.	Trace rotation adjustment	69
3.2.3.	Vertical deflection	69
3.2.3.1.	DC balance X1 adjustment	69
3.2.3.2.	DC balance X10 adjustment	69
3.2.3.3.	Normal/invert balance adjustment	69
3.2.3.4.	Gain X1 adjustment Ch. B.	70
3.2.3.5.	Gain X10 adjustment Ch. B.	70
3.2.3.6.	Gain X1 adjustment Ch. A.	70
3.2.3.7.	Gain X10 adjustment Ch. A.	70
3.2.3.8.	Square wave adjustment input attenuators	70
3.2.3.9.	Square wave response final Y amplifier	70
3.2.3.10.	Checking the vertical bandwidth	70
3.2.3.11.	Checking the HF dynamic range and shift range	71
3.2.3.12.	Common-mode rejection adjustment	71
3.2.3.13.	Chopped and alternate mode check	71
3.2.3.14.	Cross-talk check	71
3.2.4.	Time base and horizontal deflection	71
3.2.4.1.	Trigger slope check	71
3.2.4.2.	Internal level range check	72
3.2.4.3.	External level range check	72
3.2.4.4.	Mains triggering check	72
3.2.4.5.	Trigger sensitivity check	72
3.2.4.6.	Time coefficient adjustment	73
3.2.4.7.	Horizontal sensitivity check	73
3.2.4.8.	Horizontal bandwidth check	73
3.2.4.9.	Phase difference between X and Y channels check	73
3.2.5.	Mains voltage variation check	73

3.3.	CIRCUIT DESCRIPTION	74
3.3.1.	Vertical deflection	74
3.3.2.	Time base and horizontal deflection	78
3.3.3.	CRT display section	83
3.3.4.	Power supply	83
3.4.	OPTION FOR EXTERNAL 24 VDC POWER SUPPLY	84
3.5.	INFORMATION FOR ASSISTENCE IN FAULT-FINDING	85
3.5.1.	Voltages and waveforms in the instrument	85
3.5.2.	Repair in a Philips Service workshop	85
3.6.	PARTS LISTS AND DIAGRAMS	86

Figures

Fig.	Title	
3.1.	Unit location and adjustment points, top view.	65
3.2.	Unit location and adjustment points, rear view.	65
3.3.	Adjustment points, front view.	65
3.4.	Electrical item numbers, front panel.	65
3.5.	Removing the screen bezel and contrast plate.	65
3.6.	Replacing a push-button switch	67
3.7.	Trimming tool kit 800 NTX	68
3.8.	Checking the phase difference between X and Y channels	73
3.9.	Simplified circuit diagram of D201/D301	76
3.10.	Detail of sweep gating logic, time base and hold-off circuit	81
3.11.	Some voltage waveforms in the circuit shown in Fig. 3.10.	81
3.12.	Location of optional unit for external 24 VDC power supply.	84
3.13.	Mechanical parts, front view.	87
3.14.	Mechanical parts, rear view.	87
3.15.	Power supply unit, components lay-out	95
3.16.	Final amplifier unit, components lay-out	96
3.17.	TV trigger unit, components lay-out	97
3.18.	Main unit, components lay-out	98
3.19.	PM 3211/PM3211Q circuit diagram	99
3.20.	Power supply compartment with connection points for ext. 24 VDC power supply unit.	101
3.21.	Power supply compartment with ext. 24 VDC power supply unit installed	101
3.22.	Ext. 24 VDC power supply unit, components lay-out	102
3.23.	Ext. 24 VDC power supply unit, circuit diagram	103

Fig. 1.3. Block diagram of the oscilloscope
Abb. 1.3. Blockschaltbild des Oszillografen
Fig. 1.3. Schéma synoptique de l'oscilloscope

