

## PANEL CONTROL FRONT PANEL AND INDICATOR

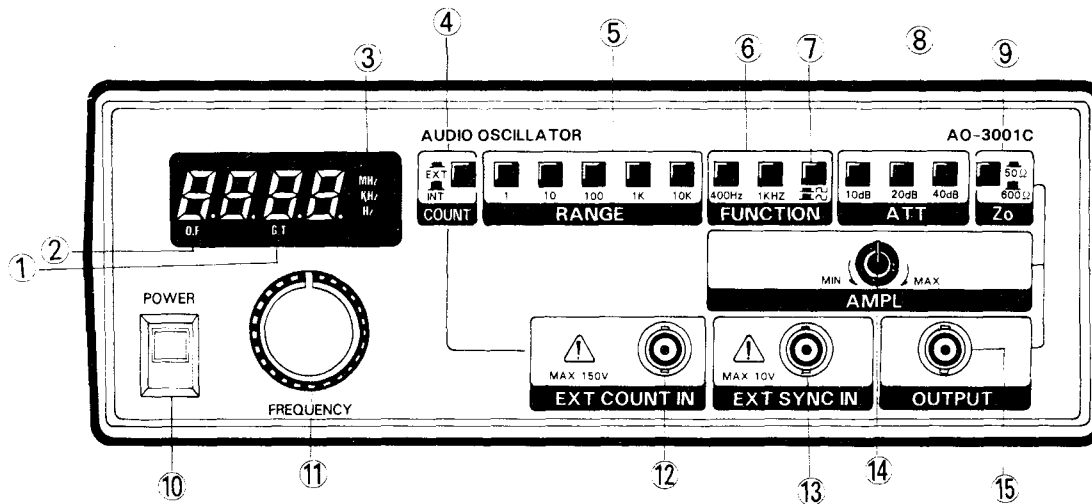


FIG.(2). FRONT PANEL OPERATOR'S CONTROLS

① GATE TIME INDICATOR.

The indicator show gate time of INT/EXT frequency counter.

② OVERFLOW INDICATOR.

The overflow indicator will be lighting when desired measuring frequency range is overflowed.

③ Hz, KHz INDICATOR : Frequency counting unit.

④ INT/EXT FREQUENCY COUNTER SELECT S.W.

Push in : External frequency counter

Push out : Internal frequency counter.

⑤ FREQ. RANGE S.W. : Frequency range select switch.

⑥ PROGRAMED S.W.(400Hz, 1KHz)

When pressed to the switch, to be continuously output for programed frequency without frequency range and variable.

⑦ WAVEFORM SELECTOR S.W.

Output waveform selector switch, when Push out "■", output signal is sinewave, when Push in "■", the signal is square wave.