


# **Nikon**

DIGITAL CAMERA

# COOLPIX P7800

## User's Manual

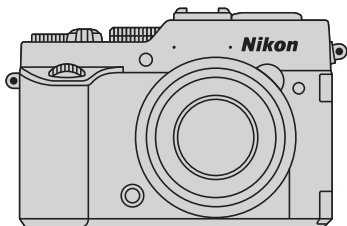

En



<b>Introduction</b>	
<b>Parts of the Camera and Main Functions</b>	
<b>The Basics of Shooting and Playback</b>	
<b>Shooting Features</b>	
<b>Playback Features</b>	
<b>Recording and Playing Back Movies</b>	
<b>General Camera Setup</b>	
<b>Connecting the Camera to a TV, Computer, or Printer</b>	
<b>Technical Notes and Index</b>	

# Introduction

## Read This First

Thank you for purchasing the Nikon COOLPIX P7800 digital camera. Before using the camera, please read the information in "For Your Safety" (📖vii-ix) and familiarize yourself with the information provided in this manual. After reading, please keep this manual handy and refer to it to enhance your enjoyment of your new camera.

## Confirming the Package Contents

In the event that any items are missing, please contact the store where you purchased the camera.




COOLPIX P7800  
Digital Camera  
(with Accessory Shoe  
Cover BS-1)




Camera Strap




Lens Cap LC-CP26  
(attached to the camera  
body)

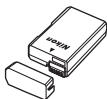

Rechargeable Li-ion  
Battery EN-EL14  
(with terminal cover)

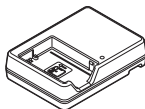

Battery Charger  
MH-24\*

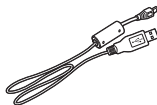

USB Cable UC-E16



ViewNX 2 CD



Reference Manual CD

- *User's Manual* (this manual)
- *Warranty*

\* A plug adapter is included if the camera was purchased in a country or region that requires a plug adapter. The shape of the plug adapter varies with the country or region of purchase (📖20).

**NOTE:** A memory card is not included with the camera.



## About This Manual

If you want to start using the camera right away, see “The Basics of Shooting and Playback” (📖20).

To learn about the parts of the camera and information that is displayed in the monitor, see “Parts of the Camera and Main Functions” (📖1).

### About the Included “Reference Manual CD”

A PDF version of the COOLPIX P7800 *Reference Manual* can be found on the included CD.

Refer to it for more detailed information.





 
Viewing the “Reference Manual CD”

The *Reference Manual* can be viewed using Adobe Reader, available for free download from the Adobe website.

- 1 Start the computer and insert the “Reference Manual CD.”
- 2 Double-click the CD (**COOLPIX P7800**) icon in **Computer** or **My Computer** (Windows) or on the desktop (Mac OS).
- 3 Double-click the **INDEX.pdf** icon to display the language selection screen. Click a language and follow the links to view the *Reference Manual*.

### Other Information

- Symbols and Conventions  
To make it easier to find the information you need, the following symbols and conventions are used in this manual:

Symbol	Description
	This icon indicates cautions and information that should be read before using the camera.
	This icon indicates notes and information that should be read before using the camera.
	These icons indicate other pages containing relevant information;  : “Reference Section”,  : “Technical Notes and Index.”

\* Refer to the *Reference Manual* for pages indicated with .

- SD and SDHC/SDXC memory cards are referred to as “memory cards” in this manual.
- The setting at the time of purchase is referred to as the “default setting.”
- The names of menu items displayed in the camera monitor, and the names of buttons or messages displayed on a computer monitor appear in bold.
- In this manual, images are sometimes omitted from monitor display samples so that monitor indicators can be more clearly shown.
- Illustrations and monitor content shown in this manual may differ from the actual product.

# Information and Precautions

## Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually updated information is available online at the following sites:

- For users in the U.S.A.: <http://www.nikonusa.com/>
- For users in Europe and Africa: <http://www.europe-nikon.com/support/>
- For users in Asia, Oceania, and the Middle East: <http://www.nikon-asia.com/>

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. Visit the site below for contact information:

<http://imaging.nikon.com/>

## Use Only Nikon Brand Electronic Accessories

Nikon COOLPIX cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including battery chargers, batteries and AC adapters) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

THE USE OF NON-NIKON ELECTRONIC ACCESSORIES COULD DAMAGE THE CAMERA AND MAY VOID YOUR NIKON WARRANTY.

The use of third-party rechargeable Li-ion batteries not bearing the Nikon holographic seal could interfere with normal operation of the camera or result in the batteries overheating, igniting, rupturing, or leaking.

For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

**Holographic seal:** Identifies this device as an authentic Nikon product.



## Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

## About the Manuals

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort was made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

## Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that was digitally copied or reproduced by means of a scanner, digital camera or other device may be punishable by law.

### • Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds or local government bonds, even if such copies or reproductions are stamped "Sample." The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited. Unless the prior permission of the government was obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

### • Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards and tickets, such as passes and meal coupons.

### • Comply with copyright notices

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcut prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.

## Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky) without attaching the GPS unit (available separately). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting (📖99). Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

## For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.

The consequences that could result from failure to observe the precautions listed in this section are indicated by the following symbol:



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

### WARNINGS



#### **Turn off in the event of malfunction**

Should you notice smoke or an unusual smell coming from the camera or battery charger, unplug the battery charger and remove the battery immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.



#### **Do not disassemble**

Touching the internal parts of the camera or battery charger could result in injury. Repairs should be performed only by qualified technicians. Should the camera or battery charger break open as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the battery.



#### **Do not use the camera or battery charger in the presence of flammable gas**

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.



#### **Handle the camera strap with care**

Never place the strap around the neck of an infant or child.



#### **Keep out of reach of children**

Particular care should be taken to prevent infants from putting the battery or other small parts into their mouths.



#### **Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use**

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.



**Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight**

Failure to observe this precaution could cause damage or fire.



**Observe caution when handling the battery**

The battery may leak, overheat, or explode if improperly handled. Observe the following precautions when handling the battery for use in this product:

- Before replacing the battery, turn the product off. If you are using the battery charger/AC adapter, be sure it is unplugged.
- Use only a Rechargeable Li-ion Battery EN-EL14 (included). Charge the battery by using a Battery Charger MH-24 (included). For Remote Control ML-L3 (available separately), use only 3 V CR2025 lithium battery.
- When inserting the battery, do not attempt to insert it upside down or backwards.
- Do not short or disassemble the battery or attempt to remove or break the battery insulation or casing.
- Do not expose the battery to flame or to excessive heat.
- Do not immerse in or expose to water.
- Replace the terminal cover when transporting the battery. Do not transport or store with metal objects such as necklaces or hairpins.
- The battery is prone to leakage when fully discharged. To avoid

damage to the product, be sure to remove the battery when no charge remains.

- Discontinue use immediately should you notice any change in the battery, such as discoloration or deformation.
- If liquid from the damaged battery comes in contact with clothing or skin, rinse immediately with plenty of water.



**Observe the following precautions when handling the battery charger**

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.
- Do not handle the plug or go near the battery charger during lightning storms. Failure to observe this precaution could result in electric shock.
- Do not damage, modify, forcibly tug or bend the USB cable, place it under heavy objects, or expose it to heat or flames. Should the insulation be damaged and the wires become exposed, take it to a Nikon-authorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug or battery charger with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or

with DC-to-AC inverters. Failure to observe this precaution could damage the product or cause overheating or fire.

### **Use appropriate cables**

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

### **Handle moving parts with care**

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

### **CD-ROMs**

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

### **Using the flash close to your subject's eyes could cause temporary visual impairment.**

The flash should be no less than 1 m (3 ft 4 in.) from the subject.

Particular care should be observed when photographing infants.

### **Do not operate the flash with the flash window touching a person or object**

Failure to observe this precaution could result in burns or fire.

### **Avoid contact with liquid crystal**

Should the monitor break, care should be taken to avoid injury caused by broken glass and to

prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

### **Turn the power off when using inside an airplane or the hospital**

Turn the power off while inside the aircraft during take off or landing. Do not use wireless network functions while in the air.

Follow the instructions of the hospital when using while in a hospital.

The electromagnetic waves emitted by this camera may disrupt the electronic systems of the aircraft or the instruments of the hospital.

If you are using wireless network devices, remove them from the camera before boarding an aircraft or entering a hospital.

# Notices

## **Notices for Customers in the U.S.A.**

### **IMPORTANT SAFETY INSTRUCTIONS -**

### **SAVE THESE INSTRUCTIONS.**

#### **DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS**

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet if needed.

The power supply unit is intended to be correctly orientated in a vertical or floor mount position.

#### **Federal Communications Commission (FCC) Radio Frequency Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



**Nikon**

COOLPIX P7800

### **CAUTIONS**

#### **Modifications**

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

#### **Interface Cables**

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.



## Notice for Customers in the State of California

### WARNING

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm.

***Wash hands after handling.***

Nikon Inc.,  
1300 Walt Whitman Road,  
Melville, New York 11747-3064  
USA  
Tel: 631-547-4200

## Notice for Customers in Canada

CAN ICES-3 B / NMB-3 B

## Notices for Customers in Europe

### CAUTIONS

### RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

### DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

This symbol indicates that electrical and electronic equipment is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.







The following apply only to users in European countries:


















 










- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.


# Table of Contents

<b>Introduction .....</b>	<b>ii</b>
<b>Read This First .....</b>	<b>ii</b>
Confirming the Package Contents .....	ii
About This Manual .....	iii
Information and Precautions .....	iv
<b>For Your Safety .....</b>	<b>vii</b>
WARNINGS .....	vii
<b>Notices .....</b>	<b>x</b>
<b>Parts of the Camera and Main Functions.....</b>	<b>1</b>
<b>The Camera Body .....</b>	<b>1</b>
Principle Functions of the Controls .....	3
Attaching the Camera Strap.....	8
Attaching and Detaching the Lens Cap .....	8
Opening and Adjusting the Angle of the Monitor .....	9
Switching Between the Monitor and Viewfinder ( □  Button) .....	10
Switching the Monitor Display (Fn2 Button) .....	11
<b>Using Menus (the MENU Button) .....</b>	<b>12</b>
<b>The Monitor .....</b>	<b>14</b>
<b>The Basics of Shooting and Playback.....</b>	<b>20</b>
<b>Preparation 1 Charge the Battery .....</b>	<b>20</b>
<b>Preparation 2 Insert the Battery .....</b>	<b>22</b>
<b>Preparation 3 Insert a Memory Card .....</b>	<b>24</b>
Internal Memory and Memory Cards.....	25
Approved Memory Cards.....	25
<b>Step 1 Turn the Camera On .....</b>	<b>26</b>
Setting the Display Language, Date, and Time .....	28
<b>Step 2 Select a Shooting Mode.....</b>	<b>30</b>
Available Shooting Modes .....	31
<b>Step 3 Frame a Picture .....</b>	<b>32</b>
Using the Zoom.....	33
<b>Step 4 Focus and Shoot.....</b>	<b>34</b>
<b>Step 5 Play Back Images .....</b>	<b>36</b>
<b>Step 6 Delete an Image .....</b>	<b>37</b>












































Refer to the *Reference Manual* for pages indicated with .


<b>Shooting Features</b> .....	<b>38</b>
 (Auto) Mode .....	38
Scene Mode (Shooting Suited to Scenes).....	39
Tips and Notes.....	40
Special Effects Mode (Applying Effects When Shooting).....	46
<b>P, S, A, M</b> Modes (Setting the Exposure for Shooting).....	49
The Control Range of the Shutter Speed.....	53
<b>U1, U2</b> and <b>U3</b> (User Settings Modes).....	55
Saving Settings in <b>U1, U2</b> or <b>U3</b> Mode (Save User Settings).....	55
<b>Functions That Can Be Set Using the Multi Selector</b> .....	<b>58</b>
Using the Flash .....	59
Using the Self-timer.....	62
Shooting Smiling Faces Automatically (Smile Timer).....	63
Using Focus Mode.....	64
Taking Images with Manual Focus.....	66
Default Settings.....	67
<b>Functions That Can Be Set Using the Exposure Compensation Dial</b> .....	<b>69</b>
Adjusting Brightness (Exposure Compensation) .....	69
<b>Functions That Can Be Set Using the  Button</b> (Quick Menu: When Shooting Still Images).....	<b>70</b>
Basic Quick Menu Operations .....	70
Available Quick Menu .....	72
<b>Functions That Can Be Set with the MENU Button</b> (Shooting Menu, Specialized Menu for <b>U1, U2</b> or <b>U3</b> ) .....	<b>73</b>
Shooting Menu.....	73
Specialized Menu for <b>U1, U2</b> or <b>U3</b> .....	75
<b>Functions That Cannot Be Used Simultaneously</b> .....	<b>77</b>
<b>Focusing</b> .....	<b>82</b>
Focusing in  (Auto) Mode or <b>EFFECTS</b> Mode.....	82
Using the Target Finding AF .....	82
Using Face Detection.....	83
Using Skin Softening.....	84
Subjects Not Suitable for Autofocus.....	84
Focus Lock.....	85
<b>Playback Features</b> .....	<b>86</b>
Playback Zoom .....	86
Thumbnail Display, Calendar Display.....	87
<b>Functions That Can Be Set with the MENU Button (Playback Menu)</b> .....	<b>88</b>

















Using the Screen for Selecting Images .....	90
<b>Recording and Playing Back Movies.....</b>	<b>91</b>
Recording Movies .....	91
Functions That Can Be Set Using the  Button (Quick Menu: When Recording Movies) .....	95
Functions That Can Be Set with the <b>MENU</b> Button (Movie and Movie Custom Setting Menus) .....	96
Playing Back Movies .....	97
<b>General Camera Setup.....</b>	<b>99</b>
Functions That Can Be Set with the <b>MENU</b> Button (Setup Menu) .....	99
<b>Connecting the Camera to a TV, Computer, or Printer .....</b>	<b>102</b>
Connection Methods.....	102
Using ViewNX 2 .....	104
Installing ViewNX 2 .....	104
Transferring Images to the Computer .....	106
<b>Reference Section .....</b>	<b> 1</b>
Using Easy Panorama (Shooting and Playback) .....	 2
Shooting with Easy Panorama.....	 2
Viewing Images Captured with Easy Panorama.....	 4
Using Panorama Assist.....	 5
Viewing and Deleting Images Captured Continuously (Sequence).....	 7
Viewing Images in a Sequence .....	 7
Deleting Images in a Sequence .....	 8
Editing Still Images.....	 9
Before Editing Images .....	 9
 Quick Retouch: Enhancing Contrast and Saturation .....	 10
 D-Lighting: Enhancing Brightness and Contrast .....	 10
 Skin Softening: Softening Skin Tones.....	 11
 Filter Effects: Applying Digital Filter Effects .....	 12
 Small Picture: Reducing the Size of an Image .....	 13
 Black Border: Adding a Black Border to Images .....	 14
 Straighten: Compensating for Image Slanting .....	 15
<b>NRW</b> RAW (NRW) Processing: Creating JPEG Images from NRW Images ...	 15
 Crop: Creating a Cropped Copy .....	 17

Refer to the *Reference Manual* for pages indicated with .

Connecting the Camera to a TV (Viewing Images on a TV) .....	18
Connecting the Camera to a Printer (Direct Print) .....	20
Connecting the Camera to a Printer .....	20
Printing Individual Images .....	21
Printing Multiple Images .....	22
Editing Movies .....	25
Extracting Only the Desired Portion of a Movie .....	25
Saving a Frame from a Movie as a Still Image .....	26
The Quick Menu .....	27
QUAL Image Quality and Image Size .....	27
QUAL Movie Options .....	30
ISO ISO Sensitivity .....	33
WB White Balance (Adjusting Hue) .....	35
BKT Auto Bracketing (Continuous Shooting	
While Changing the Exposure and White Balance) .....	38
Picture Control (COOLPIX Picture Control)	
(Changing the Settings for Image Recording) .....	40
The Shooting Menu (P, S, A or M Mode) .....	44
Custom Picture Control (COOLPIX Custom Picture Control) .....	44
Metering .....	45
Continuous Shooting .....	46
AF Area Mode .....	49
Autofocus Mode .....	53
Flash Exp. Comp. ....	54
Noise Reduction Filter .....	54
Built-in ND Filter .....	55
Distortion Control .....	55
Active D-Lighting .....	56
Zoom Memory .....	57
Startup Zoom Position .....	57
M Exposure Preview .....	58
Focus-coupled Metering .....	58
Commander Mode .....	59
The Playback Menu .....	62
Print Order (Creating a DPOF Print Order) .....	62
Slide Show .....	64
Delete .....	65
Protect .....	66
Rotate Image .....	66
Voice Memo .....	67

 Copy (Copy Between Internal Memory and Memory Card).....	 68
 Sequence Display Options .....	 69
 Choose Key Picture .....	 69
<b>The Movie and Movie Custom Setting Menus .....</b>	 70
Shooting Mode (Movie Custom Setting Only) .....	 70
Custom Picture Control (Movie Custom Setting Only) .....	 70
Autofocus Mode.....	 71
Built-in ND Filter (Movie Custom Setting Only) .....	 71
Wind Noise Reduction .....	 72
<b>The Setup Menu .....</b>	 72
Welcome Screen.....	 72
Time Zone and Date .....	 73
Monitor Settings.....	 75
Print Date (Imprinting Date and Time on Images).....	 77
Self-timer: After Release .....	 78
Vibration Reduction.....	 79
AF Assist .....	 80
ISO Sensitivity Step Value .....	 80
Digital Zoom .....	 81
Zoom Speed .....	 82
Fixed Aperture .....	 82
Sound Settings .....	 83
Record Orientation .....	 83
Rotate Tall .....	 84
Auto Off .....	 84
Format Memory/Format Card.....	 85
Language .....	 85
TV Settings.....	 86
External Mic Sensitivity .....	 86
Customize Command Dials.....	 87
Command Dial Rotation .....	 87
Multi Selector Right Press .....	 88
Delete Button Options .....	 88
AE/AF Lock Button .....	 89
Fn1 + Shutter Button.....	 90
Fn1 + Command Dial/Fn1 + Selector Dial .....	 91
Fn1 Guide Display.....	 92
Fn2 Button .....	 92
Customize My Menu .....	 93
Reset File Numbering.....	 94

Refer to the *Reference Manual* for pages indicated with .

Accessory Terminal .....	 95
Eye-Fi Upload .....	 96
MF Distance Indicator Units .....	 97
Reverse Indicators .....	 97
Flash Control .....	 97
Reset All .....	 98
Firmware Version .....	 98
<b>Error Messages</b> .....	 99
<b>File Names</b> .....	 103
<b>Optional Accessories</b> .....	 104
<b>Shooting with Remote Control ML-L3</b> .....	 106
<b>Speedlights (External Flash Unit)</b> .....	 108
How to Attach the Speedlight/Wireless Speedlight Commander .....	 108
<b>Using the GPS Unit</b> .....	 113
How to Attach the GPS Unit .....	 113
Recording GPS Data on Images .....	 113

---














---

## Technical Notes and Index..... 1

---



---

<b>Caring for the Products</b> .....	 2
The Camera .....	 2
The Battery .....	 3
The Battery Charger .....	 4
Memory Cards .....	 5
<b>Caring for the Camera</b> .....	 6
Cleaning .....	 6
Storage .....	 7
<b>Troubleshooting</b> .....	 8
<b>Specifications</b> .....	 16
<b>Index</b> .....	 22




A series of horizontal dashed lines for handwriting practice, spanning the width of the page.




# Parts of the Camera and Main Functions

## The Camera Body

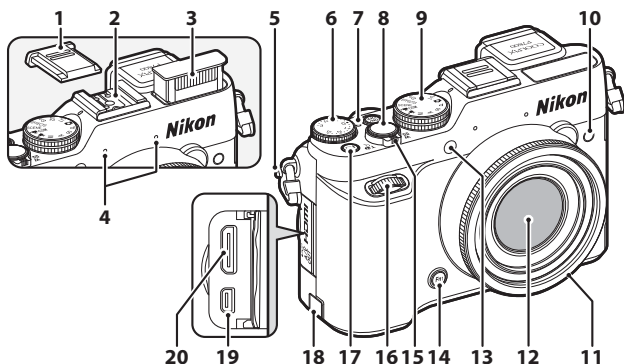

- |           |   |           |   |
|-----------|---|-----------|---|
| <b>1</b>  | Accessory Shoe Cover BS-1 ..... 108                                 | <b>14</b> | <b>Fn1</b> (function 1) button ..... 4, 100               |
| <b>2</b>  | Accessory shoe ..... 108  |           | Zoom control ..... 33                                     |
| <b>3</b>  | Flash ..... 59  |           | <b>W</b> : wide-angle ..... 33                            |
| <b>4</b>  | Microphone (stereo) ..... 88, 91                                    | <b>15</b> | <b>T</b> : telephoto ..... 33                             |
| <b>5</b>  | Eyelet for camera strap ..... 8                                     |           | : thumbnail playback ..... 87                             |
| <b>6</b>  | Exposure compensation dial ..... 69                                 |           | : playback zoom ..... 86                                  |
| <b>7</b>  | Exposure compensation dial mark ..... 69                            |           | : help ..... 39   |
| <b>8</b>  | Shutter-release button ..... 4, 34                                  | <b>16</b> | Sub-command dial ..... 3, 6, 49, 51                       |
| <b>9</b>  | Mode dial ..... 30  | <b>17</b> | <b>Fn2</b> (function 2) button ..... 11, 101              |
| <b>10</b> | Infrared receiver (for optional Remote Control ML-L3) ..... 58, 106 | <b>18</b> | Power connector cover (for optional AC adapter) ..... 104 |
| <b>11</b> | Lens ring ..... 105   | <b>19</b> | USB/audio/video output connector ..... 102                |
| <b>12</b> | Lens  | <b>20</b> | HDMI mini connector (Type C) ..... 102                    |
| <b>13</b> | Self-timer lamp ..... 62  |           |   |
|           | AF-assist illuminator ..... 99                                      |           |   |

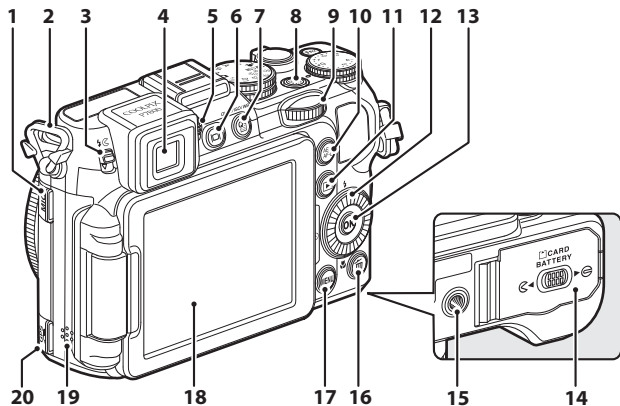

**1** External microphone connector ..... 104

**2** Eyelet for camera strap ..... 8

**3** (flash pop-up) control ..... 59

**4** Electronic viewfinder ..... 10

**5** Diopter adjustment control ..... 10

**6** (monitor) button ..... 10

**7** (quick menu) button ..... 70, 95

**8** Power switch/power-on lamp ..... 26

**9** Main command dial ..... 3, 6, 49, 51

**10** (AE-L/AF-L) button ..... 4, 100

**11** (playback) button ..... 36

**12** Rotary multi selector (multi selector)\* ..... 3, 6, 58

**13** (apply selection) button ..... 3, 6, 12

**14** Battery-chamber/memory card slot cover ..... 22, 24

**15** Tripod socket

**16** (delete) button ..... 37, 98, 100

**17** **MENU** (menu) button ..... 12, 73, 88, 96, 99

**18** Monitor ..... 9, 11, 14






**19** Speaker ..... 88, 97, 100




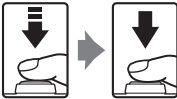



**20** Accessory terminal ..... 101, 95, 104









\* Also referred to as the "multi selector" in this manual.

# Principle Functions of the Controls











 

 






## For Shooting









Control	Main Function	
 Mode dial	Change the shooting mode.	30
 Zoom control	Move toward <b>T</b> (Q) (telephoto) to zoom in closer to the subject, and move toward <b>W</b> (wide-angle) to zoom out and view a larger area.	33
 Multi selector	<ul style="list-style-type: none"> <li>While the shooting screen is displayed: Display the following setting screens by pressing:               <ul style="list-style-type: none"> <li>Up (▲): ⚡ (flash mode)</li> <li>Left (◀): ⌚ (self-timer/smile timer/remote control)</li> <li>Down (▼): 🎯 (focus mode)</li> <li>Right (▶): 📐 (AF area mode)</li> </ul> </li> <li>While the setting screen/quick menu is displayed: Select an item using ▲▼◀▶ or by rotating the multi selector; apply the selection by pressing the OK button.</li> </ul>	58  12, 70, 95
 Main command dial	<ul style="list-style-type: none"> <li>When the shooting mode is <b>P</b>: Set the flexible program.</li> <li>When the shooting mode is <b>S</b> or <b>M</b>: Set the shutter speed.</li> <li>While the setting screen is displayed: Select an item.</li> <li>While the quick menu is displayed: Select an item on the left or right.</li> </ul>	49, 51 49, 51 12 70, 95
 Sub-command dial	<ul style="list-style-type: none"> <li>When the shooting mode is <b>A</b> or <b>M</b>: Set the aperture value.</li> <li>While the setting screen is displayed: Move between menu levels.</li> <li>While the quick menu is displayed: Select an item above or below.</li> </ul>	49, 51 12 70, 95

Control	Main Function	
 <b>Q</b> (quick menu) button	Display or exit the quick menu.	70, 95
 <b>MENU</b> (menu) button	Display and hide the menu.	12, 73, 96, 99
 Shutter-release button	When pressed halfway (i.e., if you stop pressing when you feel resistance slightly): Set focus and exposure. When pressed all the way (i.e., if you press the button all the way down): Release the shutter.	34, 35
 Exposure compensation dial	Adjust the brightness (exposure compensation).	69
 AE-L/AF-L button	Lock the exposure or focus.	85, 100
 <b>Fn1</b> (function 1) button	<ul style="list-style-type: none"> <li>When the zoom control is moved while pressing this button: Change the zoom lens focal length.</li> <li>When the shutter-release button is pressed while pressing this button: Shoot with the setting assigned in <b>Fn1 + shutter button</b>.</li> <li>When the command dial is rotated while pressing this button: Set the function assigned in <b>Fn1 + command dial</b>.</li> <li>When the multi selector is rotated while pressing this button: Set the function assigned in <b>Fn1 + selector dial</b>.</li> </ul>	74  100  100  101


Control	Main Function	
 <b>Fn2</b> (function 2) button	<ul style="list-style-type: none"> <li>Switch the information displayed in the monitor.</li> <li>Set the function assigned in <b>Fn2 button</b>.</li> </ul>	11 101
  (monitor) button	Switch between the monitor and viewfinder.	10
  (playback) button	Play back images.	36
  (delete) button	Delete the last image that was saved.	37

## For Playback

Control	Main Function	
  (playback) button	<ul style="list-style-type: none"> <li>When the camera is turned off, press and hold this button to turn the camera on in playback mode.</li> <li>Return to shooting mode.</li> </ul>	36 36
 Zoom control	<ul style="list-style-type: none"> <li>Move toward <b>T</b> () to zoom in on the image, and move toward <b>W</b> () to display images as thumbnails or the calendar.</li> <li>Adjust the volume for voice memo and movie playback.</li> </ul>	86, 87 88, 97
 Multi selector	<ul style="list-style-type: none"> <li>While the playback screen is displayed: Change the displayed image using up () , left () , down () , right () , or by rotating the multi selector.</li> <li>While the setting screen is displayed: Select an item using    or by rotating the multi selector.</li> <li>While an enlarged image is displayed: Move the display area.</li> </ul>	36 12 86
 <b>OK</b> (apply selection) button	<ul style="list-style-type: none"> <li>Display individual images of a sequence in full-frame playback mode.</li> <li>Scroll an image shot with Easy panorama.</li> <li>Play back movies.</li> <li>Switch from thumbnail playback or zoomed image display to full-frame playback.</li> <li>While the setting screen is displayed, apply the selection.</li> </ul>	89,  7 44,  4 97 86, 87 12
 Main command dial	<ul style="list-style-type: none"> <li>Select images and date.</li> </ul>	36, 87
 Sub-command dial	<ul style="list-style-type: none"> <li>Switch the magnification of an enlarged image.</li> </ul>	86


Control	Main Function	
 <b>MENU</b> (menu) button	Display and hide the menu.	12, 88
  (delete) button	Delete an image.	37
 <b>Fn2</b> (function 2) button	Switch the information displayed in the monitor.	11
  (monitor) button	Switch between the monitor and viewfinder.	10
 Shutter-release button	Return to shooting mode.	–

## Attaching the Camera Strap

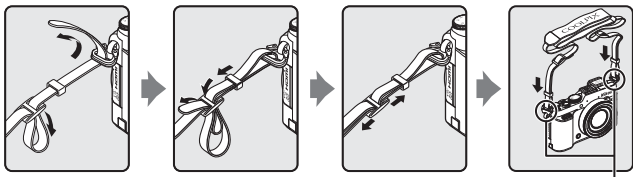

Attach the strap at two places.

## Attaching and Detaching the Lens Cap

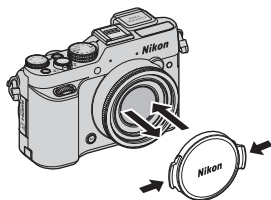

### **Lens Cap**


At times when you are not shooting images, attach the lens cap to the lens to protect it.



## Opening and Adjusting the Angle of the Monitor

The orientation and tilt of the monitor can be changed. This is useful when shooting with the camera in a high or a low position, or when taking self-portraits.

For normal shooting, fold the monitor against the camera body with the screen facing out (③).

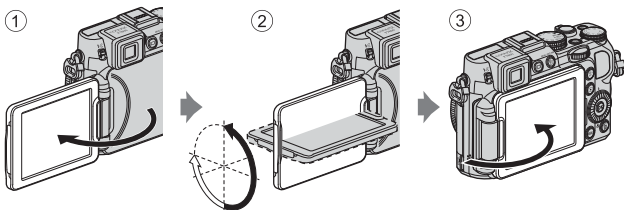

When you are not using or carrying the camera, fold the monitor against the camera body with the screen facing inward to prevent scratches or contamination.



### Notes About the Monitor


- When moving the monitor, do not apply excessive force and turn slowly within the monitor's adjustable range so that the connection will not be damaged.
- When the monitor is turned with a cable connected to the external microphone connector or accessory terminal, the monitor may catch on the cable or cover. Do not apply excessive force to the cable or to the connector of the camera.

## Switching Between the Monitor and Viewfinder (|◻| Button)

You can use the viewfinder when bright light under the open sky makes it difficult to see the monitor.

Each press of the |◻| button switches the display between the monitor and viewfinder.


- When you fold the monitor against the camera body with the screen facing inward, the display in the monitor is switched to the viewfinder.

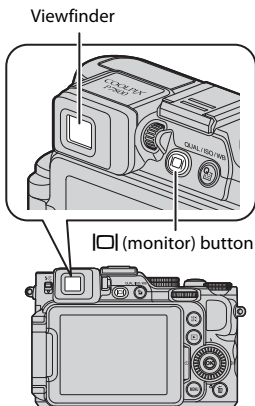

## Diopter Adjustment of the Viewfinder

When the image in the viewfinder is difficult to see, adjust by rotating the diopter adjustment control while looking through the viewfinder.

- Take care not to scratch your eye with your fingertips or nails.

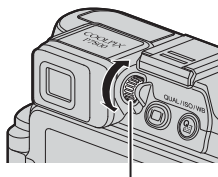

Diopter adjustment control


## ✓ Notes About Checking and Adjusting Image Colors

Use the monitor on the back of the camera because the monitor has higher color reproducibility than the viewfinder.

## Switching the Monitor Display (Fn2 Button)

To switch the information displayed in the monitor during shooting and playback, press the **Fn2** (function 2) button.

- This operation is available when **Fn2 button** (📖101) in the setup menu is set to **Show/hide info** (default setting).

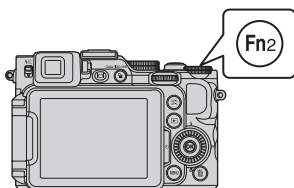

### For Shooting



#### Show information


Display the image and the shooting information.



#### Hide information


Display the image only.

### For Playback

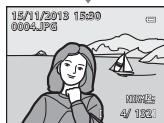

#### Show information

Display the image and photo information.

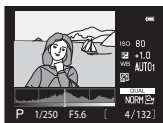

#### Tone level information (except movies)

Display a histogram, tone level and shooting information (📖19).



#### Hide information

Display the image only.



### Virtual Horizon, Histogram and Framing Grid Displays for Shooting


You can set the virtual horizon, histogram or framing grid (📖16) to be displayed by selecting **Monitor settings** in the setup menu (📖99) followed by **Photo info**.

# Using Menus (the MENU Button)

Use the multi selector and **OK** button to navigate the menus.

## 1 Press the **MENU** button.

- The menu that matches the status of the camera, such as shooting or playback menu, is displayed.
- Unavailable menu items are displayed in gray and cannot be selected.

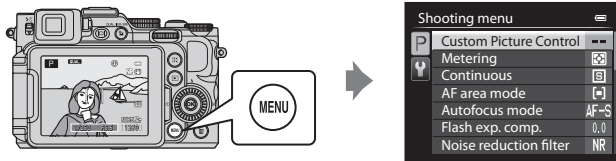

## 2 Use the multi selector to select a menu item.

- ▲▼ or rotation: Select an item above or below.
- ◀▶: Select an item on the left or right, or move between menu levels.
- OK**: Apply a selection. Pressing ▶ also applies a selection.
- See [13](#) for more information on how to switch tabs.



## 3 After completing the settings, press the **MENU** button or shutter-release button.

- Press the shutter-release button to display the shooting screen.




### Notes About the Command Dial Operation When a Menu is Displayed

Rotating the main command dial when a menu is displayed allows you to select an item. Rotating the sub-command dial allows you to move between menu levels.


## Switching Among Menu Tabs

To display a different menu, such as the setup menu (📖99), use the multi selector to switch to another tab.


### Tabs

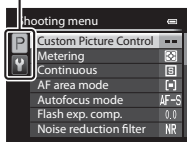

Use ◀ to move to the tabs.

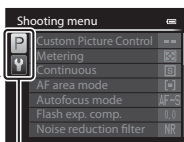

Use ▲▼ to select a tab, and press the OK button or ▶ to apply the selection.

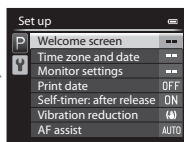


### Tab Types





For Shooting	For Playback
<div data-bbox="140 681 237 891"> </div> <div data-bbox="268 681 364 891"> </div> <div data-bbox="395 681 492 891"> </div>	<div data-bbox="676 681 772 891"> </div>
<p><b>P</b> tab: Displays the settings available for the current shooting mode (📖31). Depending on the current shooting mode, the tab icon that is displayed will be different. In 📷 (auto) mode, only 📷 tab is displayed.</p> <p><b>U1/U2/U3</b> tab: Displays the settings for the specialized menu in <b>U1</b>, <b>U2</b> or <b>U3</b> mode (📖55).</p> <p><b>Y</b> tab: Displays the setup menu, where you can change general settings.</p>	<p><b>▶</b> tab: Displays the settings available for the playback mode.</p>


# The Monitor

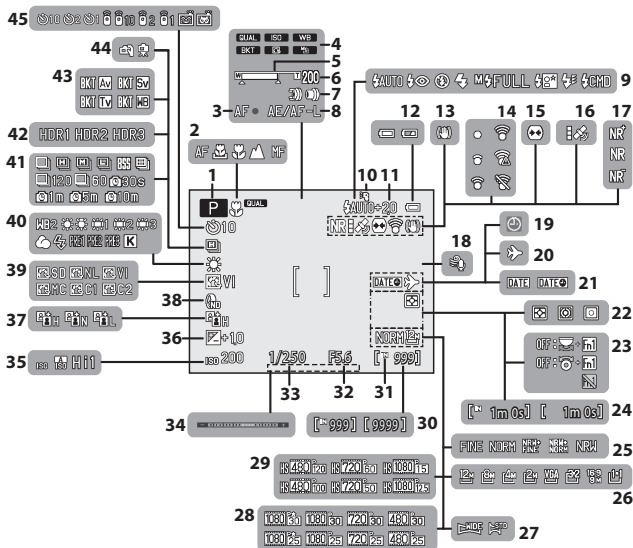The information that is displayed in the monitor during shooting and playback changes depending on the camera's settings and state of use. Press the **Fn2** button to show or hide the information in the monitor (11).






## For Shooting

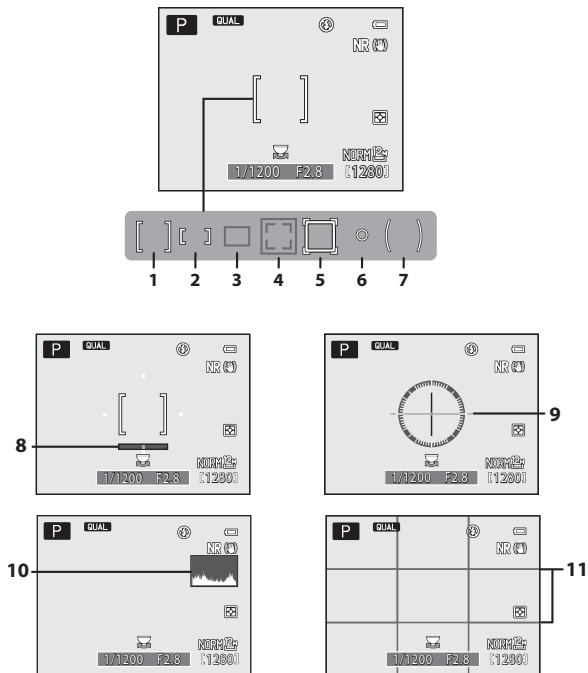

<b>1</b>	Shooting mode .....	30, 31	<b>26</b>	Image size .....	72
<b>2</b>	Focus mode .....	65	<b>27</b>	Easy panorama .....	44
<b>3</b>	Focus indicator .....	34	<b>28</b>	Movie options (normal speed movies) .....	95
<b>4</b>	Quick menu icon .....	70, 95	<b>29</b>	Movie options (HS movies) .....	95
<b>5</b>	Zoom indicator .....	33, 65	<b>30</b>	Number of exposures remaining (still images) .....	26,  28
<b>6</b>	Zoom memory .....	74	<b>31</b>	Internal memory indicator .....	26
<b>7</b>	Zoom speed setting .....	99	<b>32</b>	Aperture value .....	49
<b>8</b>	AE/AF-L indicator .....	100,  66	<b>33</b>	Shutter speed .....	49
<b>9</b>	Flash mode .....	59	<b>34</b>	Exposure indicator .....	51
<b>10</b>	Speedlight .....	61	<b>35</b>	ISO sensitivity .....	72, 95
<b>11</b>	Flash exp. comp. ....	74	<b>36</b>	Exposure compensation value ..	69
<b>12</b>	Battery level indicator .....	26	<b>37</b>	Active D-Lighting .....	74
<b>13</b>	Vibration reduction icon .....	99	<b>38</b>	Built-in ND filter .....	74
<b>14</b>	Eye-Fi communication indicator .....	101,  96	<b>39</b>	COOLPIX Picture Control .....	72, 95
<b>15</b>	Distortion control .....	74	<b>40</b>	White balance .....	72, 95
<b>16</b>	GPS reception .....	101,  114	<b>41</b>	Continuous shooting mode .....	45, 73
<b>17</b>	Noise reduction filter .....	74	<b>42</b>	Backlighting (HDR) .....	43
<b>18</b>	Wind noise reduction .....	97	<b>43</b>	Auto bracketing .....	72
<b>19</b>	"Date not set" indicator .....	28, 99	<b>44</b>	Hand-held/tripod .....	41
<b>20</b>	Travel destination icon .....	99		Self-timer indicator .....	62
<b>21</b>	Print date .....	99	<b>45</b>	Remote control .....	58
<b>22</b>	Metering .....	73		Smile timer .....	63
<b>23</b>	Fn1 guide display .....	4, 101		Pet portrait auto release .....	45
<b>24</b>	Movie recording time remaining .....	91, 92			
<b>25</b>	Image quality .....	72			










<b>1</b>	Focus area (for center) .....58, 67, 73, 85
<b>2</b>	Focus area (for manual) .....41, 42, 58, 67, 73
<b>3</b>	Focus area (auto, target finding AF).....58, 67, 73, 82
<b>4</b>	Focus area (face detection, pet detection) .....45, 58, 63, 67, 73, 83
<b>5</b>	Focus area (subject tracking) .....58, 67, 73,  51
<b>6</b>	Spot metering area.....73
<b>7</b>	Center-weighted area .....73
<b>8</b>	Virtual horizon (bars) .....11, 99,  75
<b>9</b>	Virtual horizon (circle) .....11, 99,  75
<b>10</b>	View/hide histograms .....11, 99,  75
<b>11</b>	View/hide framing grid .....11, 99,  75

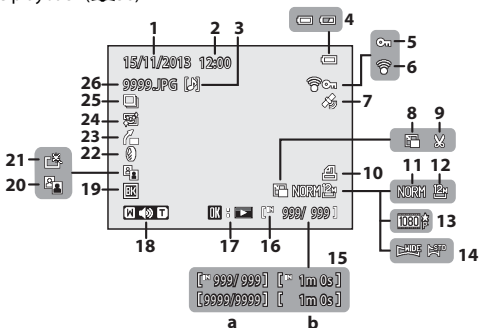
## For Playback

Full-frame playback (📖36)



1	Date of recording .....	28
2	Time of recording.....	28
3	Voice memo indicator .....	88
4	Battery level indicator.....	26
5	Protect icon.....	88
6	Eye-Fi communication indicator .....	101, 📖96
7	Recorded GPS information indicator .....	101, 📖113
8	Small picture icon .....	88
9	Crop icon.....	86
10	Print order icon .....	88
11	Image quality .....	72
12	Image size .....	72
13	Movie options .....	95, 97
14	Easy panorama indicator.....	44

15	(a) Current image number/total number of images (b) Movie length	
16	Internal memory indicator .....	25
17	Easy panorama playback guide .....	6, 44,  4
	Sequence playback guide .....	6, 37,  7
	Movie playback guide .....	97
18	Volume indicator .....	88, 97
19	Black border icon .....	89
20	D-Lighting icon .....	88
21	Quick retouch icon.....	88
22	Filter effects icon .....	88
23	Straighten icon .....	89
24	Skin softening icon .....	88
25	Sequence display (when <b>Individual pictures</b> is selected) .....	89,  69
26	File number and type.....	 103

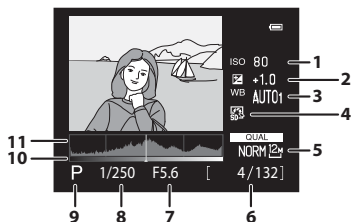Tone level information display<sup>1</sup> (📖11)

<b>1</b>	ISO sensitivity.....	72	<b>6</b>	Current image number/ total number of images	
<b>2</b>	Exposure compensation value...	69	<b>7</b>	Aperture value .....	49
<b>3</b>	White balance .....	72	<b>8</b>	Shutter speed.....	49
<b>4</b>	COOLPIX Picture Control.....	72	<b>9</b>	Shooting mode <sup>2</sup> .....	31
<b>5</b>	Image quality/Image size.....	72	<b>10</b>	Tone level <sup>3</sup>	
			<b>11</b>	Histogram <sup>4</sup>	

<sup>1</sup> You can check for loss of contrast detail in highlights and shadows from the histogram that is displayed, or the flashing display for each tone level. These provide guidelines when adjusting the image brightness with functions such as exposure compensation.

<sup>2</sup> **P** is displayed when the shooting mode **SCENE**, **EFFECTS** or **P** is selected.

<sup>3</sup> The tone level indicates the brightness level. When the tone level to check is selected using the multi selector **◀▶**, the area of the image that corresponds to the selected tone level flashes.

<sup>4</sup> A histogram is a graph showing the distribution of tones in the image. The horizontal axis corresponds to pixel brightness, with dark tones to the left and bright tones to the right. The vertical axis shows the number of pixels.

# The Basics of Shooting and Playback


## Preparation 1 Charge the Battery

### 1 Prepare the included battery charger.



If a plug adapter\* is included with your camera, attach the plug adapter to the plug on the battery charger. Push the plug adapter firmly until it is securely held in place. Once the two are connected, attempting to forcibly remove the plug adapter could damage the product.

\* The shape of the plug adapter varies according to the country or region in which the camera was purchased.

This step can be omitted if the plug adapter comes permanently bonded to the battery charger.

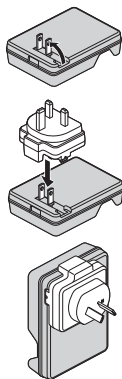


### 2 While pushing in the battery (①), set it into the battery charger (②).

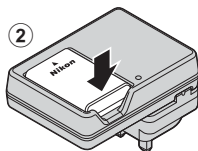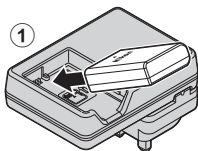

### 3 Plug the battery charger into an electrical outlet.

- CHARGE lamp starts flashing when charging starts.

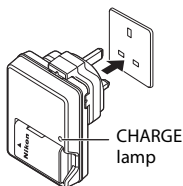


CHARGE lamp	Description
Flashes	The battery is charging.
On	The battery is fully charged. About 1 hour and 30 minutes are required to charge a fully exhausted battery.
Flashes quickly	<ul style="list-style-type: none"> <li>• The battery is set incorrectly. Disconnect the battery charger from the electrical outlet, remove the battery, and then reset the battery to lie flat in the battery charger.</li> <li>• The ambient temperature is not suited to charging. Charge the battery indoors with an ambient temperature of 5°C to 35°C (41°F to 95°F).</li> <li>• There is a problem with the battery. Immediately disconnect the battery charger from the electrical outlet, and stop charging. Take the battery and battery charger to your retailer or Nikon-authorized service representative.</li> </ul>

### 4 When charging is complete, remove the battery and then disconnect the battery charger from the electrical outlet.


## Preparation 2 Insert the Battery

- 1 Open the battery-chamber/memory card slot cover.

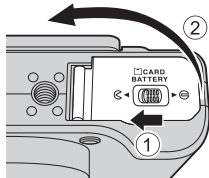

- 2 Insert the battery.

- Push the orange battery latch in the direction indicated by the arrow (1), and fully insert the battery (2).
- The battery locks into place when inserted correctly.

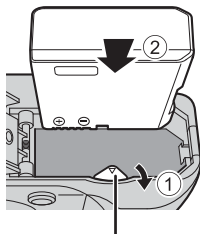

Battery latch


- ✓ Be Careful to Insert the Battery in Correct Direction**

*Inserting the battery upside down or backwards could damage the camera.*



- 3 Close the battery-chamber/memory card slot cover.


- While the battery-chamber/memory card slot cover is open, the camera cannot be turned on.

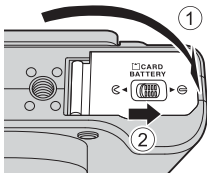

## Removing the Battery

Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.

Move the battery latch in the direction indicated by the arrow (①) to eject the battery (②).

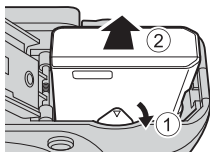


### High Temperature Caution

The camera, battery, and memory card may be hot immediately after using the camera.


## Preparation 3 Insert a Memory Card

- 1 Turn off the camera and open the battery-chamber/memory card slot cover.

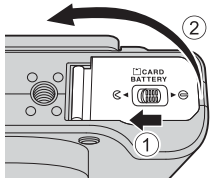

- 2 Insert the memory card.

- Slide the memory card in until it clicks into place.

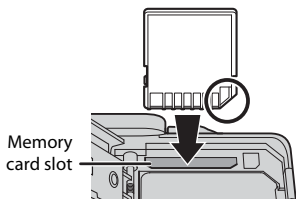


**✓ Be Careful to Insert the Memory Card in Correct Direction**

*Inserting the memory card upside down or backwards could damage the camera and the memory card.*



- 3 Close the battery-chamber/memory card slot cover.

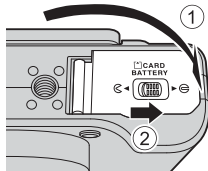

**✓ Formatting Memory Cards**


The first time you insert a memory card that has been used in another device into this camera, make sure to format it with this camera. Insert the card into the camera, press the **MENU** button, and select **Format card** in the setup menu.



## Removing Memory Cards

Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.

Gently push the memory card into the camera (①) to partially eject the card (②).

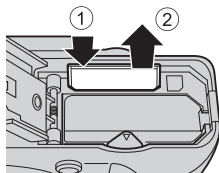

### High Temperature Caution

The camera, battery, and memory card may be hot immediately after using the camera.

## Internal Memory and Memory Cards

Camera data, including images and movies, can be saved either in the camera's internal memory or on a memory card. To use the camera's internal memory, first remove the memory card.

## Approved Memory Cards

The following Secure Digital (SD) memory cards have been tested and approved for use in this camera.

- Memory cards with an SD Speed Class rating of 6 or faster are recommended for recording movies. When using a memory card with a lower Speed Class rating, movie recording may stop unexpectedly.

	SD memory cards	SDHC memory cards <sup>2</sup>	SDXC memory cards <sup>3</sup>
SanDisk	2 GB <sup>1</sup>	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB
TOSHIBA	-	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Panasonic	2 GB <sup>1</sup>	4 GB, 8 GB, 16 GB, 32 GB	64 GB
Lexar	-	4 GB, 8 GB, 16 GB, 32 GB	64 GB, 128 GB

<sup>1</sup> If the memory card will be used with a card reader or similar device, make sure that the device supports 2 GB cards.

<sup>2</sup> SDHC-compliant. If the memory card will be used with a card reader or similar device, make sure that the device supports SDHC.

<sup>3</sup> SDXC-compliant. If the memory card will be used with a card reader or similar device, make sure that the device supports SDXC.



- Contact the manufacturer for details on the above cards. We cannot guarantee camera performance when using memory cards made by other manufacturers.


# Step 1 Turn the Camera On

## 1 Open the monitor and remove the lens cap.


- See “Opening and Adjusting the Angle of the Monitor” (p.9) for more information.
- See “Attaching and Detaching the Lens Cap” (p.8) for more information.

## 2 Press the power switch.

- **If you are turning the camera on for the first time, see “Setting the Display Language, Date, and Time” (p.28).**
- The monitor turns on.
- To turn the camera off, press the power switch again.

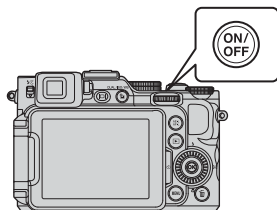

## 3 Check the battery level indicator and the number of exposures remaining.

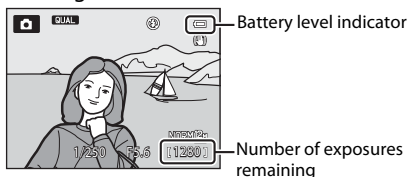

### Battery level indicator


Display	Description
	The battery level is high.
	The battery level is low.
Battery exhausted.	The camera cannot capture images. Recharge the battery.


### Number of Exposures Remaining

The number of images that can be taken is displayed.

- is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.

## The Auto Off Function

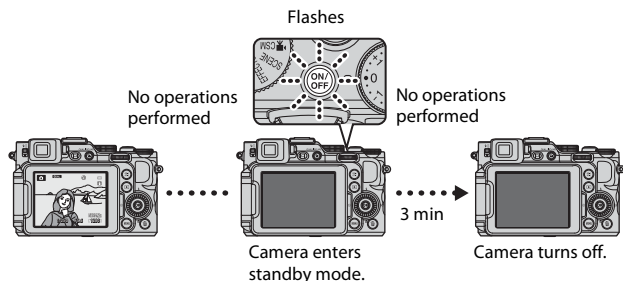


- The time that elapses before the camera enters standby mode is about 1 minute. The time can be changed using the **Auto off** setting in the setup menu (📖99).
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations:
  - Press the power switch, shutter-release button, or  button.
  - Rotate the mode dial.
  - Open or close the monitor.




## Monitor Display


Press the **Fn2** button to switch between showing and hiding the photo information or shooting information that is displayed in the monitor (📖11).

## Setting the Display Language, Date, and Time


When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.


- If you exit without setting the date and time,  will flash when the shooting screen is displayed.


- 1** Use the multi selector   to select the desired language and press the  button.

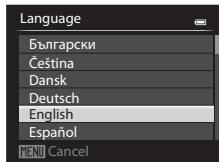



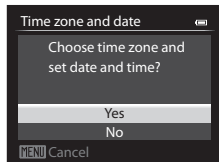

- 2** Select **Yes** and press the  button.

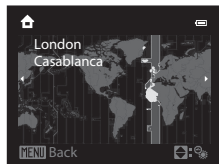


- 3** Select your home time zone and press the  button.




- To enable daylight saving time, press . When the daylight saving time function is enabled,  is displayed above the map. To turn off the daylight saving time function, press .

- 4** Select the date format and press the  button.

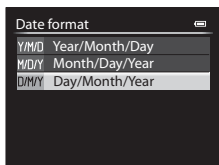


## 5 Set the date and time, and press the **OK** button.

- Select a field: Press **◀▶** (changes between **D**, **M**, **Y**, hour, and minute).
- Edit the date and time: Press **▲▼**.  
Date and time can also be changed by rotating the multi selector or main command dial.
- Confirm the setting: Select the minute field and press the **OK** button.

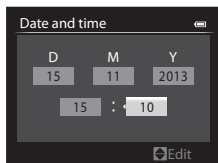

## 6 Select **Yes** and press the **OK** button.

- When settings are finished, the lens extends and the camera switches to shooting mode.

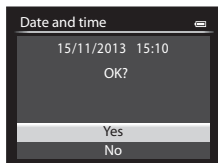

### Changing the Language Setting and the Date and Time Setting

- You can change these settings using the **Language** and **Time zone and date** settings in the **Y** setup menu (📖99).
- You can enable or disable daylight saving time in the **Y** setup menu by selecting **Time zone and date** followed by **Time zone**. Enabling day light saving time moves the clock forward one hour, and disabling it moves the clock back one hour.

### The Clock Battery

- The camera's clock is powered by a built-in backup battery.  
The backup battery charges when the main battery is inserted into the camera or when the camera is connected to an optional AC adapter, and it can run the clock for several days after about 10 hours of charging.
- If the camera's backup battery becomes exhausted, the date and time setting screen is displayed when the camera is turned on. Set the date and time again. See step 2 of "Setting the Display Language, Date, and Time" (📖28) for more information.


### Imprinting the Shooting Date on Printed Images

- You can permanently imprint the shooting date on images as they are captured by setting **Print date** in the setup menu.
- If you want the shooting date to be printed without using the **Print date** setting, print using the ViewNX 2 software (📖104).


## Step 2 Select a Shooting Mode

Rotate the mode dial to select a shooting mode.

-  (auto) mode is used in this example. Rotate the mode dial to .

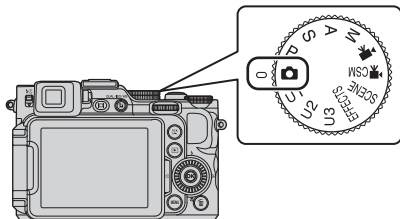

### Notes About the Flash

In situations where a flash is needed, such as in dark locations or when the subject is backlit, make sure to raise the flash ( 59).

## Available Shooting Modes



### Auto mode

( 38)

Used for general shooting.

### SCENE

### Scene mode

( 39)

Camera settings are optimized according to the scene that you select. When using scene auto selector, the camera automatically selects the optimum scene mode when you frame an image, making it even easier to take images using settings that suit the scene.

### EFFECTS

### Special effects

( 46)

Effects can be applied to images during shooting.

### P, S, A, M mode

( 49)

Select these modes for greater control over shutter speed and aperture value.

### U1, U2, U3 User settings mode

( 55)

Setting combinations that are frequently used for shooting can be saved. The saved settings can be immediately retrieved for shooting simply by rotating the mode dial to **U1**, **U2** or **U3**.



### Movie mode

( 91)

You can record slow motion and fast motion movies, in addition to basic movies.



### Movie custom setting mode


( 91)

You can use aperture-priority auto or manual mode, or change the settings for image recording.


## Step 3 Frame a Picture

### 1 Hold the camera steady.


- Keep fingers and other objects away from the lens, flash, AF-assist illuminator, microphone, and speaker.
- When taking pictures in portrait ("tall") orientation, turn the camera so that the flash is above the lens.

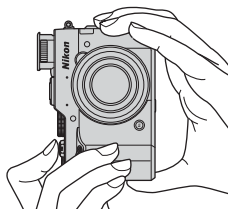

### 2 Frame the picture.

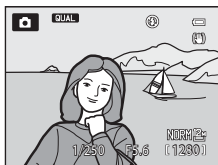

#### Viewfinder

By pressing the  button, you can shoot while looking through the viewfinder (10).



#### When Using a Tripod


- We recommend using a tripod to stabilize the camera in the following situations.
  - When shooting in dim lighting with the flash lowered, or in a shooting mode in which the flash is disabled
  - When using the telephoto setting
- When using a tripod to stabilize the camera during shooting, set **Vibration reduction** to **Off** in the setup menu (99) to prevent potential errors caused by this function.




## Using the Zoom

When you move the zoom control, the zoom lens position changes.


- To zoom in closer to the subject: Move toward **T** (telephoto)
- To zoom out and view a larger area: Move toward **W** (wide-angle)

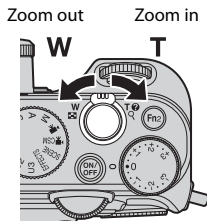


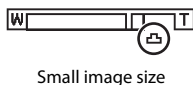
- A zoom indicator is displayed at the top of the monitor when the zoom control is moved.
- Digital zoom, which allows you to further magnify the subject up to approximately 4x the maximum optical zoom ratio, can be activated by moving and holding the zoom control toward **T** when the camera is zoomed in to the maximum optical zoom position.

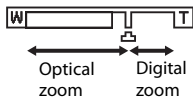

### Digital Zoom and Interpolation

While using digital zoom, the image quality decreases due to interpolation when the zoom is increased beyond the  position.


The position of  moves to the right as the size of an image decreases.



## Step 4 Focus and Shoot

### 1 Press the shutter-release button halfway.

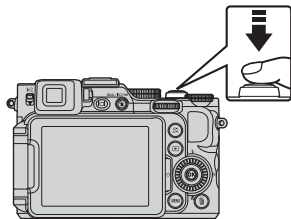

- When the subject is in focus, the focus area that includes the subject or focus indicator (📖 14) glows green (multiple focus areas can glow green).
- When you are using digital zoom, the camera focuses on the subject in the center of the frame and the focus area is not displayed. When the camera has focused, the focus indicator glows green.
- If the focus area or focus indicator flashes red, the camera is unable to focus. Modify the composition and try pressing the shutter-release button halfway again.



### 2 Without lifting your finger, press the shutter-release button the rest of the way down.



## The Shutter-release Button


Press halfway		To set focus and exposure (shutter speed and aperture value), press the shutter-release button lightly until you feel a slight resistance. Focus and exposure remain locked while the shutter-release button is pressed halfway.
Press all the way		Press the shutter-release button all the way to release the shutter and take an image. Do not use force when pressing the shutter-release button, as this may result in camera shake and blurred images. Press the button gently.


### Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the battery or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.


 


## Step 5 Play Back Images

### 1 Press the (playback) button.

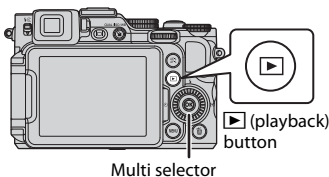
- If you press and hold down the  (playback) button while the camera is turned off, the camera turns on in playback mode.




### 2 Use the multi selector to select an image to display.

- Press and hold down    to scroll through the images quickly.
- Images can also be selected by rotating the multi selector or command dial.
- To return to shooting mode, press the  button or shutter-release button.


Display the previous image

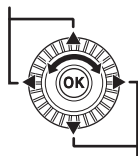

Display the next image

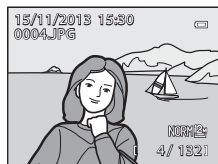



 

 
### Switching the Information in the Monitor


Press the **Fn2** button to switch between showing and hiding the photo information or shooting information that is displayed in the monitor ( 11).

## Step 6 Delete an Image

- 1 Press the  button to delete the image currently displayed in the monitor.

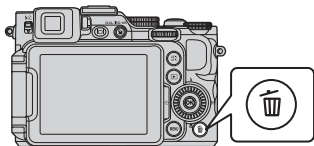

- 2 Use the multi selector   to select **Yes** and press the  button.
  - The deleted image cannot be recovered.
  - To cancel, select **No** and press the  button.

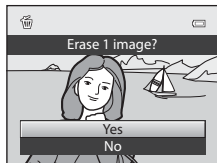





### **Notes About RAW and JPEG Images Recorded at the Same Time**

When images taken with an **Image quality** ( 72) setting of **RAW (NRW) + Fine** or **RAW (NRW) + Normal** are deleted with the  button, both the RAW (NRW) and JPEG images that were recorded at the same time are deleted.

To delete only RAW (NRW) images or JPEG images, select **Erase selected NRW images** or **Erase selected JPEG images** in **Delete** of the playback menu ( 88).

### **Deleting Images in a Sequence**

- If you press the  button and delete a key picture while only key pictures are displayed for sequences of images ( 89), all images in the sequence, including the key picture, are deleted.
- To delete individual images in a sequence, press the  button to display them one at a time and press the  button.

### **Deleting the Last Image Captured While in Shooting Mode**

When using shooting mode, press the  button to delete the last image that was saved.

### **Deleting Multiple Images**

To delete multiple images, select **Delete** from the playback menu ( 88).


# Shooting Features

## (Auto) Mode

Used for general shooting.

The camera selects the focus area for autofocus in accordance with the composition or subject.

- The camera automatically selects one or more of the 9 focus areas containing the subject closest to the camera. When the subject is in focus, the focus areas that are in focus glow green.
- See "Focusing" (📖 82) for more information.

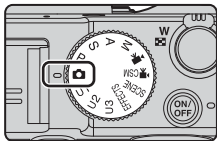


### Functions Available in (Auto) Mode

- Flash mode (📖 59)
- Self-timer (📖 62)
- Focus mode (📖 64)
- Exposure compensation (📖 69)
- Quick menu (📖 70)

## Scene Mode (Shooting Suited to Scenes)

When a scene is selected, camera settings are automatically optimized for the selected scene.

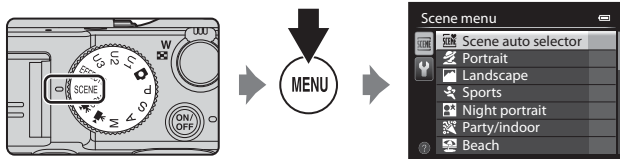

Press the **MENU** button to display the scene menu and select a scene using the multi selector.

Scene auto selector (default setting) (book 40)	Night landscape (book 41) <sup>2</sup>
Portrait	Close-up (book 41)
Landscape <sup>2</sup>	Food (book 42)
Sports (book 40) <sup>1</sup>	Museum (book 42) <sup>1</sup>
Night portrait (book 40) <sup>3</sup>	Fireworks show (book 42) <sup>2, 3</sup>
Party/indoor (book 41) <sup>1</sup>	Black and white copy (book 42) <sup>1</sup>
Beach <sup>1</sup>	Backlighting (book 43) <sup>1</sup>
Snow <sup>1</sup>	Panorama (book 44)
Sunset <sup>2, 3</sup>	Pet portrait (book 45)
Dusk/dawn <sup>2, 3</sup>	

<sup>1</sup> The camera focuses on the area in the center of the frame.

<sup>2</sup> The camera focuses at infinity.

<sup>3</sup> Use of a tripod is recommended, because the shutter speed is slow. Set **Vibration reduction** to **Off** in the setup menu (book 99) when using a tripod to stabilize the camera during shooting.












### To View a Description (Help Display) of Each Scene


Select a scene and move the zoom control (book 1) toward **T** (🔍) to view a description of that scene. To return to the original screen, move the zoom control toward **T** (🔍) again.

# Tips and Notes


## Scene auto selector

- When you point the camera at the subject, the camera automatically selects the optimum scene mode from the list below and adjusts the shooting settings accordingly.

	Portrait (close-up image of one to two persons)
	Portrait (shooting an image of three or more persons or shooting a composition with a large background area)
	Landscape
	Night portrait (close-up image of one to two persons)
	Night portrait (shooting an image of three or more persons or shooting a composition with a large background area)
	Night landscape <ul style="list-style-type: none"> <li>The camera shoots images continuously and combines and saves them as one image in the same way as when <b>Hand-held</b> in  (night landscape) (📖41) is selected.</li> </ul>
	Close-up
	Backlighting (shooting non-human subjects)
	Backlighting (shooting human subjects)
	Other shooting scenes

- Depending upon shooting conditions, the camera may not select the desired scene mode. Should this occur, switch to  (auto) mode (📖30) or select the optimum scene mode for the subject manually.

## Sports

- While the shutter-release button is held all the way down, the camera shoots up to about 6 images continuously at a rate of about 8 fps (when image quality is set to **Normal** and image size is set to  **4000x3000**).
- The frame rate for continuous shooting may become slow depending upon the current image quality setting, image size setting, the memory card used, or shooting condition.
- Focus, exposure, and hue are fixed at the values determined with the first image in each series.

## Night portrait






- The flash always fires. Raise the flash before shooting.







## Party/indoor

- To avoid the effects of camera shake, hold the camera steady. Set **Vibration reduction** to **Off** in the setup menu (📖99) when using a tripod to stabilize the camera during shooting.

## Night landscape


- From the screen displayed after  **Night landscape** is selected, select  **Hand-held** or  **Tripod**.
-  **Hand-held** (default setting):
  - Press the shutter-release button all the way to capture a series of images which are combined into a single image and saved.
  - Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking an image, do not turn the camera off before the monitor switches to the shooting screen.
  - The angle of view (i.e., the area visible in the frame) seen in the saved image is narrower than that seen in the monitor at the time of shooting.
-  **Tripod**:
  - One image is captured at a slow shutter speed when the shutter-release button is pressed all the way.
  - Vibration reduction is disabled even when **Vibration reduction** (📖99) in the setup menu is set to **On**.

## Close-up

- The focus mode (📖64) setting is changed to  (close range only) and the camera automatically zooms to the closest position at which it can focus.
- You can move the focus area. Press the  button, use the multi selector  or rotate it to move the focus area, and press the  button to apply the setting.

## Food

- The focus mode (📖64) setting is changed to 🍷 (macro close-up) and the camera automatically zooms to the closest position at which it can focus.
- You can adjust hue by using the multi selector ▲▼. The hue setting is saved in the camera's memory even after the camera is turned off.
- You can move the focus area. Press the OK button, use the multi selector ▲▼◀▶ or rotate it to move the focus area, and press the OK button to apply the setting.

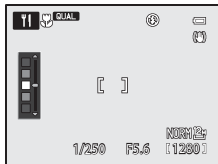

## Museum

- The camera captures a series of up to 10 images while the shutter-release button is held all the way down, and the sharpest image in the series is automatically selected and saved (BSS (Best Shot Selector)).
- The flash does not fire.


## Fireworks show

- The shutter speed is fixed at about 4 seconds.
- The zoom position moved one step toward the wide-angle position from the maximum optical zoom position cannot be used.

## Black and white copy





 





- Use together with 🍷 (macro close-up) focus mode (📖64) when shooting subjects that are close to the camera.

## Backlighting

- From the screen displayed after  **Backlighting** is selected, HDR (high dynamic range) composition can be set.
- **Off** (default setting): The flash fires to prevent the subject from being hidden in shadow. Shoot images with the flash raised.
- **Level 1-Level 3**: Use when taking images with very bright and dark areas in the same frame. Select **Level 1** when there is less difference between bright and dark areas, and **Level 3** when there is more difference between bright and dark areas.

## Notes About HDR

 
- Use of a tripod is recommended. Set **Vibration reduction** in the setup menu (📖99) to **Off** when using a tripod to stabilize the camera.
- The angle of view (i.e., the area visible in the frame) seen in the saved image is narrower than that seen in the monitor at the time of shooting.
- When the shutter-release button is pressed all the way, the camera shoots images continuously and saves the following two images.
  - A non-HDR composite image
  - An HDR composite image in which the loss of details in highlights or shadows is minimized
- If there is only enough memory to save one image, an image processed by D-Lighting (📖88) at the time of shooting, in which dark areas of the image are corrected, is the only image saved.
- Once the shutter-release button is pressed all the way, hold the camera still until a still image is displayed. After taking an image, do not turn the camera off before the monitor switches to the shooting screen.
- Depending on the shooting conditions, dark shadows may appear around bright subjects and bright areas may appear around dark subjects. You can compensate by lowering the level setting.

- From the screen displayed after  **Panorama** is selected, select  **Easy panorama** or  **Panorama assist**.
- **Easy panorama** (default setting): You can take a panorama image simply by moving the camera in the desired direction.
  - Shooting range can be selected from **Normal (180°)** (default setting) or **Wide (360°)**.
  - The zoom position is fixed at wide-angle.
  - Press the shutter-release button all the way down, remove your finger from the button, and then slowly pan the camera horizontally. Shooting ends when the camera captures the specified shooting range.
  - Focus and exposure are locked when shooting starts.
  - If you press the  button when a captured image is displayed in full-frame playback mode, the image scrolls automatically. The images cannot be edited on this camera.See "Using Easy Panorama (Shooting and Playback)" (2) for more information.
- **Panorama assist**: Use this mode when shooting a series of images that can later be joined on a computer to form a single panorama.
  - Use the multi selector  to select the direction in which images are to be joined and press the  button.
  - After shooting the first image, shoot the necessary number of images while confirming the seams. To finish shooting, press the  button.
  - Transfer taken images to a computer and use the **Panorama Maker** software (105) to join them in a single panorama.See "Using Panorama Assist" (5) for more information.



## **Notes About Printing Panorama Images**

The entire image may not be able to be printed depending on the printer's settings. Additionally, printing may not be possible depending on the printer.

## Pet portrait


- When you point the camera at a dog or cat, the camera detects the pet's face and focuses on it. By default, the shutter is automatically released when focus is acquired (pet portrait auto release).
- From the screen displayed after  **Pet portrait** is selected, select **Single** or **Continuous**.
  - **Single**: Whenever the detected face is in focus, the camera captures 1 image.
  - **Continuous**: Whenever the detected face is in focus, the camera captures 3 images continuously.

### **Pet Portrait Auto Release**

- Press the multi selector  to change the **Pet portrait auto release** settings.
  - : The camera detects a dog or cat face and automatically releases the shutter when the detected face is in focus.
  - **OFF**: The camera does not release the shutter automatically, even if a dog or cat face is detected. Press the shutter-release button. The camera also detects human faces when **OFF** is selected.
- **Pet portrait auto release** is set to **OFF** after 5 bursts have been taken.
- Shooting is also possible by pressing the shutter-release button, regardless of the **Pet portrait auto release** setting. When **Continuous** is selected, you can take images continuously while holding down the shutter-release button all the way.


### **Focus Area**

- When the camera detects a face, the face is displayed inside a yellow border. When the camera acquires focus on a face displayed inside a double border (focus area), the double border turns green. If no faces are detected, the camera focuses on the subject in the center of the frame.
- In some shooting conditions, the pet face may not be detected and other subjects may be displayed inside a border.

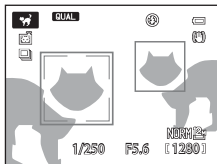

# Special Effects Mode (Applying Effects When Shooting)

Effects can be applied to images during shooting.

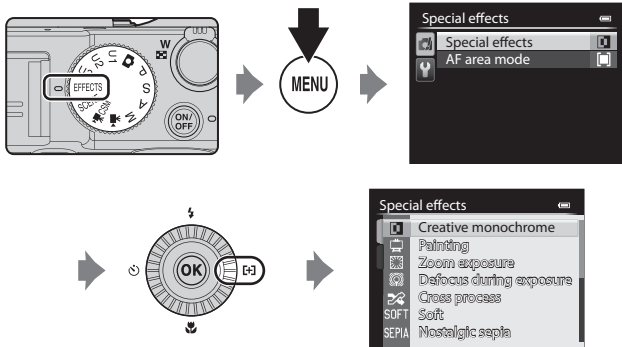

Press the **MENU** button to display the special effects menu and select an effect using the multi selector.

Creative monochrome (default setting)	<p>Creates monochrome photographs by adjusting the grainy feel and contrast. Monochrome photographs with the dark and light tones reversed can also be created (solarization).</p> <ul style="list-style-type: none"> <li>• Rotate the main command dial to adjust grainy feel.</li> <li>• Rotate the sub-command dial to adjust contrast.</li> </ul>
Painting	<p>Gives the image a painting-like appearance.</p>
Zoom exposure*	<p>Creates dynamic images converging toward the center of the frame by moving the zoom position from the wide-angle to telephoto zoom position until the shutter closes.</p> <ul style="list-style-type: none"> <li>• The zooming magnification can be set to 2x or 3x (default setting) by rotating the main command dial.</li> <li>• The zoom is fixed at the wide-angle end before shooting.</li> <li>• <b>AF area mode</b> (📖 58, 73) is fixed at <b>Center (normal)</b>.</li> <li>• The shutter speed is fixed at 2 seconds, and the effect can be produced only when the shooting mode icon on the shooting screen is green.</li> <li>• When a shutter speed that is slow enough for zoom exposure cannot be obtained due to too bright a subject, etc., the shooting mode icon does not turn green, and the effect will not be produced.</li> </ul>

Defocus during exposure*	<p>Creates images with a soft blur by varying focus slightly until the shutter closes.</p> <ul style="list-style-type: none"> <li>• The effect can be produced only when the shooting mode icon on the shooting screen is green.</li> <li>• When a shutter speed that is slow enough for defocus during exposure cannot be obtained due to too bright a subject, etc., the shooting mode icon does not turn green, and the effect will not be produced.</li> <li>• The desired effect may not be produced depending on shooting conditions such as the distance to the subject.</li> </ul>
Cross process	<p>Creates images with an unusual hue by converting a positive color image into negative or negative color image into positive.</p> <ul style="list-style-type: none"> <li>• Rotate the main command dial to select hue.</li> </ul>
Soft	<p>Softens the image by adding a slight blur to the entire image.</p>
Nostalgic sepia	<p>Adds a sepia tone and reduces the contrast to simulate the qualities of an old photograph.</p>
High key	<p>Gives the entire image a bright tone.</p>
Low key	<p>Gives the entire image a dark tone.</p>
Selective color	<p>Creates a black and white image in which only the specified color remains.</p> <ul style="list-style-type: none"> <li>• Rotate the main command dial to select the color to be retained from the slider.</li> <li>• Press the <b>OK</b> button to hide the slider and cancel color selection. To display the slider again, press the <b>OK</b> button again.</li> </ul> <div data-bbox="626 754 911 965"> </div>

\* Use of a tripod is recommended during **Zoom exposure** or **Defocus during exposure**. **Vibration reduction** will not function even if **Vibration reduction** in the setup menu is set to **On**.

- The focus area for autofocus differs depending on the setting of **AF area mode** (58, 73).
- When **AF area mode** is set to **Auto** (default setting), the camera automatically selects one or more of the 9 focus areas containing the subject closest to the camera. When the subject is in focus, the focus areas that are in focus glow green.

## Functions Available in Special Effects Mode


- AF area mode (📖58, 73)
- Flash mode (📖59)
- Self-timer (📖62)
- Focus mode (📖64)
- Exposure compensation (📖69)
- Special effects menu (📖46)
- Quick menu (📖70)




# P, S, A, M Modes (Setting the Exposure for Shooting)

Images can be shot with greater control by setting the quick menu (📖70) or shooting menu (📖73) items in addition to setting the shutter speed or aperture value manually according to shooting conditions and requirements.

- The focus area for autofocus differs depending on the setting of **AF area mode** (📖58, 73).
- When **AF area mode** is set to **Center (normal)** (default setting), the camera focuses on the area in the center of the frame.

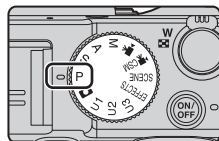


Rotate the command dial to set the shutter speed and aperture value.

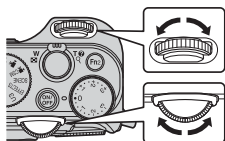

Sub-command dial

Main command dial

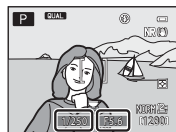

Shutter speed

Aperture value

Exposure mode	Shutter speed (📖53)	Aperture value (📖50)
<b>P</b> Programmed auto (📖51)	Automatically adjusted (flexible program is enabled by the main command dial).	
<b>S</b> Shutter-priority auto (📖51)	Adjusted by the main command dial.	Automatically adjusted.
<b>A</b> Aperture-priority auto (📖51)	Automatically adjusted.	Adjusted by the sub-command dial.
<b>M</b> Manual (📖51)	Adjusted by the main command dial.	Adjusted by the sub-command dial.



## More Information

See "Customize command dials" (📖100) for more information.

## Exposure

The procedure for shooting images at the desired brightness (exposure) by adjusting the shutter speed or aperture value is called "determine exposure". The sense of dynamism and amount of background defocus in images to be shot vary depending on the combinations of shutter speed and aperture value even if the exposure is the same.

### Adjusting the Shutter Speed

In **S** mode, the range is from a maximum of 1/4000 to 15 seconds.

In **M** mode, the range is from a maximum of 1/4000 to 60 seconds.

See "The Control Range of the Shutter Speed" (📖 53) for more information.



Faster 1/1000 s



Slower 1/30 s

### Adjusting the Aperture Value

In **A** and **M** modes, the range is from f/2 to 8 (wide-angle position) and from f/4 to 8 (telephoto zoom position).



Larger aperture (Small f-number)  
f/2



Smaller aperture (Large f-number)  
f/8



### Aperture Value (F-number) and Zoom

Large apertures (expressed by small f-numbers) let more light into the camera, and small apertures (large f-numbers) let less light.


The aperture value of the zoom lens of this camera changes depending on the zoom position. When zooming to the wide-angle position and telephoto zoom position, the aperture values are f/2 and f/4, respectively.

- When **Fixed aperture** (📖 99) is set to **On**, zooming can be performed with minimum changes in the aperture value.

## P (Programmed auto)

Use for automatic control of the exposure by the camera.


- Different combinations of shutter speed and aperture value can be selected without changing the exposure by rotating the main command dial ("flexible program"). While flexible program is in effect, a flexible program mark (**⌘**) is displayed next to the mode indicator (**P**) in the upper left of the monitor.
- To cancel flexible program, rotate the main command dial until the flexible program mark (**⌘**) is no longer displayed, or press the AE-L/AF-L button while pressing the **Fn1** button. Selecting another shooting mode, or turning off the camera, also cancels flexible program.

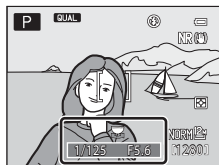

## S (Shutter-priority auto)

Use to shoot fast moving subjects at a fast shutter speed, or use to emphasize the movements of a moving subject at a slow shutter speed.


- The shutter speed can be adjusted by rotating the main command dial.

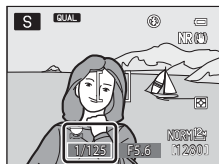

## A (Aperture-priority auto)

Use to bring subjects including both the foreground and background into focus or blur the subject's background intentionally.


- The aperture value can be adjusted by rotating the sub-command dial.

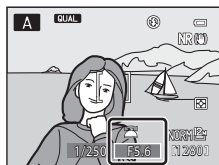

## M (Manual)

Use to control the exposure according to shooting requirements.

- When adjusting the aperture value or shutter speed, the degree of deviation from the exposure value measured by the camera is displayed in the exposure indicator of the monitor. The degree of deviation in the exposure indicator is displayed in EVs (-3 to +3 EV in increments of 1/3 EV).
- The shutter speed can be adjusted by rotating the main command dial and the aperture value can be adjusted by rotating the sub-command dial.

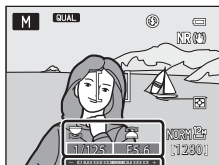

Exposure indicator



## Notes About Shooting

- When zooming is performed after the exposure is set, exposure combinations or aperture value may be changed.
- When the subject is too dark or too bright, it may not be possible to obtain the appropriate exposure. In such cases, the shutter speed indicator or aperture value indicator flashes when the shutter-release button is pressed halfway (except when the **M** mode is used). Change the shutter speed setting or aperture value.



## Notes About ISO Sensitivity

When **ISO sensitivity** (📖72) is set to **Auto** (default setting), **ISO 80-200**, **ISO 80-400** or **ISO 80-800**, the ISO sensitivity in **M** mode is fixed at ISO 80.



## Built-in ND Filter

When the subject is too bright, set **Built-in ND filter** in the shooting menu (📖73) to reduce the light and shoot.

## Functions Available in P, S, A, M Modes


- AF area mode (📖58, 73)
- Flash mode (📖59)
- Self-timer (📖62)
- Focus mode (📖64)
- Exposure compensation (📖69)
- Quick menu (📖70)
- Shooting menu (📖73)
- Setup menu (📖99)

## The Control Range of the Shutter Speed

The control range of the shutter speed differs depending on the aperture value or the ISO sensitivity setting. Additionally, the control range changes in the following continuous shooting settings.

### P, S, A, M Modes

Setting		Control range	
		P, S, A mode	M mode
ISO sensitivity (72) <sup>1</sup>	Auto <sup>2</sup> , ISO 80-200 <sup>2</sup> , ISO 80-400 <sup>2'</sup> , ISO 80-800 <sup>2</sup>	1/4000 <sup>3</sup> - 1 s	1/4000 <sup>3</sup> - 60 s
	ISO 80, 100	1/4000 <sup>3</sup> - 15 s	
	ISO 125	1/4000 <sup>3</sup> - 13 s	
	ISO 160	1/4000 <sup>3</sup> - 10 s	
	ISO 200	1/4000 <sup>3</sup> - 8 s	
	ISO 250	1/4000 <sup>3</sup> - 6 s	
	ISO 320	1/4000 <sup>3</sup> - 5 s	
	ISO 400	1/4000 <sup>3</sup> - 4 s	1/4000 <sup>3</sup> - 30 s
	ISO 500	1/4000 <sup>3</sup> - 3 s	
	ISO 640	1/4000 <sup>3</sup> - 2.5 s	
	ISO 800	1/4000 <sup>3</sup> - 2 s	1/4000 <sup>3</sup> - 15 s
	ISO 1000	1/4000 <sup>3</sup> - 1.6 s	
	ISO 1250	1/4000 <sup>3</sup> - 1.3 s	
	ISO 1600	1/4000 <sup>3</sup> - 1 s	1/4000 <sup>3</sup> - 8 s
	ISO 2000	1/4000 <sup>3</sup> - 1/1.3 s	
	ISO 2500	1/4000 <sup>3</sup> - 1/1.6 s	
	ISO 3200	1/4000 <sup>3</sup> - 1/2 s	1/4000 <sup>3</sup> - 2 s
	Hi 1	1/4000 <sup>3</sup> - 1/4 s	


Setting		Control range	
		P, S, A mode	M mode
Continuous (  73)	Continuous H, Continuous M, Continuous L, BSS	1/4000 <sup>3</sup> - 1/8 s	1/4000 <sup>3</sup> - 1/8 s
	Multi-shot 16	1/4000 - 1/30 s	1/4000 - 1/30 s
	Continuous H: 120 fps	1/4000 - 1/125 s	1/4000 - 1/125 s
	Continuous H: 60 fps	1/4000 - 1/60 s	1/4000 - 1/60 s
	Intvl timer shooting	1/4000 <sup>3</sup> - 1 s	1/4000 <sup>3</sup> - 1 s

<sup>1</sup> The ISO sensitivity setting is restricted depending on the continuous shooting setting (78).

<sup>2</sup> In **M** mode, the ISO sensitivity is fixed at ISO 80.

<sup>3</sup> The maximum shutter speed value varies depending on the aperture value. The shutter speed becomes slower when the aperture value is smaller. When the aperture value is set to f/2 (wide-angle position) or f/4 (telephoto zoom position), the shutter speed can be set to maximum 1/2000 second. When the aperture value is set to f/4.5 to f/8 (wide-angle position) or f/7.1 to f/8 (telephoto zoom position), the shutter speed can be set to maximum 1/4000 second.

## During Movie Custom Setting Mode


Setting		Control range
Shooting mode (  96)	<b>A</b> Mode	1/8000 - 1/30 s
	<b>M</b> Mode	1/4000 - 1/30 s

## U1, U2 and U3 (User Settings Modes)

Setting combinations that are frequently used for shooting (User settings) can be saved in **U1**, **U2** and **U3**. Shooting is possible in **P** (Programmed auto), **S** (Shutter-priority auto), **A** (Aperture-priority auto) or **M** (Manual).

Rotate the mode dial to **U1**, **U2** or **U3** to retrieve the settings saved in **Save user settings**.


- Frame the subject and shoot with these settings, or change the settings as required.
- The setting combinations that are retrieved when the mode dial is rotated to **U1**, **U2** or **U3** can be changed as many times as you want in **Save user settings**.

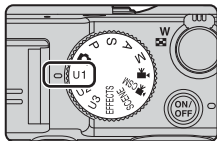

### Saving Settings in U1, U2 or U3 Mode (Save User Settings)


The frequently used settings for shooting can be changed and saved in **U1**, **U2** and **U3**.

- 1 Rotate the mode dial to **U1**, **U2** or **U3**.
- 2 Change to a frequently used combination of shooting settings.
  - Set the flash mode (📖59) or focus mode (📖64).
  - Display the quick menu by pressing the button (📖70).
  - Press the **MENU** button to display the menu and switch between tabs with the multi selector (📖13).
    - **U1, U2, U3** tabs: Display the specialized menus for **U1**, **U2** and **U3** (📖75).
    - **P, S, A, M** tabs: Display the shooting menus (📖73).
- 3 After changing the settings, use the multi selector to select **Save user settings** in the specialized menu for **U1**, **U2** or **U3**, and press the button.

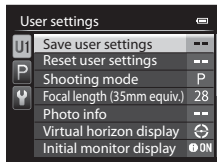

## 4 Select **Yes** and press the **OK** button.

- The current settings are saved.
- Move the zoom control toward **T** (Q) to display the settings. Move toward **T** (Q) again to return to the Save user settings screen.

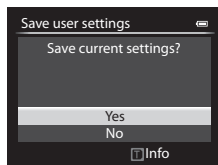


## ✓ The Clock Battery

If the internal clock battery (🔋29) is exhausted, the settings saved in **U1**, **U2** or **U3** will be reset. Writing down any important setting is recommended.

## 📌 Confirmation Screen of User Settings

Move the zoom control toward **T** (Q) in step 4 of **Save user settings** to display the settings on the screen.

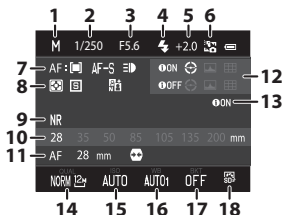

- |   |   |
|---|---|
| 1 Shooting mode   | 10 Zoom memory  |
| 2 Shutter speed ( <b>S</b> or <b>M</b> mode)            | 11 Focus mode, Focal length (35mm equiv.), Distortion control |
| 3 Aperture value ( <b>A</b> or <b>M</b> mode)           | 12 Photo info, Virtual horizon display                        |
| 4 Flash mode  | 13 Initial monitor display                                    |
| 5 Flash exp. comp.                                      | 14 Image quality, Image size                                  |
| 6 Flash control   | 15 ISO sensitivity  |
| 7 AF area mode, Autofocus mode, AF assist               | 16 White balance  |
| 8 Metering, continuous shooting mode, Active D-Lighting | 17 Auto bracketing  |
| 9 Noise reduction filter                                | 18 Picture Control  |



## Functions Available in U1, U2 and U3 Modes

- Flash mode (📖59)
- Self-timer (📖62)
- Focus mode (📖64)
- Exposure compensation (📖69)
- Quick menu (📖70)
- Shooting menu (📖73)
- Specialized menu for U1, U2 or U3 (📖75)
- Setup menu (📖99)




### Resetting for U1, U2 and U3

If **Reset user settings** is selected in specialized menu for U1, U2 or U3, the settings that are saved in the user settings are reset as follows:

- Specialized menus for U1, U2 and U3 (📖75): **Shooting mode: P**  
**Programmed auto, Focal length (35mm equiv.): 28 mm, Photo info:**  
 information hidden, **Virtual horizon display: Circle, Initial monitor display:**  
**Show info, Flash mode: ~~Flash~~ AUTO Auto, Focus: AF Autofocus, Self-timer: Off, AF**  
**assist: Auto**
- Shooting menu, quick menu: Same as the default setting for each item.

# Functions That Can Be Set Using the Multi Selector

The functions that are available vary with the shooting mode, as shown below.

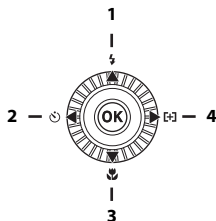

Function		SCENE	EFFECTS	P, S, A, M, U1, U2, U3	CSM
<b>1</b> Flash mode (📖59)	✓	3	3	✓	—
Self-timer (📖62)	✓		✓	✓	✓
<b>2</b> Smile timer (📖63)	✓		—	✓	—
Remote control <sup>1</sup>	✓		✓	✓	✓
<b>3</b> Focus mode (📖64)	✓		✓	✓	✓
<b>4</b> AF area mode <sup>2</sup>	—	—	3	✓	—

<sup>1</sup> Set this function to release the shutter with the Remote Control ML-L3 (available separately) (🔗106).

<sup>2</sup> Set the method of how the camera selects the focus area for autofocus (📖73). Set **Multi selector right press** to **Off** in the setup menu (📖99) if you do not want to display the AF area mode setting when the multi sector is pressed.


<sup>3</sup> Availability depends on the setting. See “Default Settings” (📖67) for more information.

# Using the Flash


You can shoot images with a flash by raising the built-in flash. You can set the flash mode to match the shooting conditions.

## 1 Lower the ⚡ (flash pop-up) control to raise the flash.

- When the flash is lowered, flash operation is disabled and ⚡ is displayed.

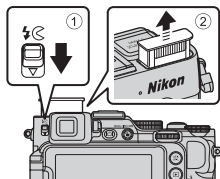

## 2 Press the multi selector ▲ (⚡).

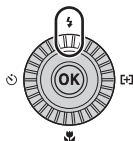

## 3 Select the desired flash mode (ⓘ 60) and press the OK button.


- When the manual flash is selected, select the flash output and press the OK button.
- If a setting is not applied by pressing the OK button within a few seconds, the selection will be canceled.



## ✓ Flash Status Display

The status of the flash can be confirmed with the flash mode icon at the top of the monitor by pressing the shutter-release button halfway.

- On: The flash fires in accordance with the flash mode when you press the shutter-release button all the way down. When ⚡ AUTO (auto) is set, the flash fires when ⚡ is displayed.
- Flashing: The flash is charging. The camera cannot shoot images.
- Off: The flash does not fire when an image is taken.

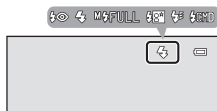

## Available Flash Modes



### Auto

The flash fires when necessary, such as in dim lighting.

- The flash mode icon on the shooting screen is displayed only immediately after the setting is made.



### Auto with red-eye reduction

Reduce red-eye in portraits caused by the flash (61).



### Off

The flash does not fire.

- Available when an external flash unit (optional) is attached.
- We recommend using a tripod to stabilize the camera when shooting in dark surroundings.



### Fill flash

The flash fires whenever an image is taken. Use to “fill-in” (illuminate) shadows and backlit subjects.



### Manual

Fill flash fires at the flash output set for the built-in flash or an optional flash unit whose flash output can be set on the camera.

- Select the flash output from **M<sup>1</sup>FULL** (full flash), **M<sup>1</sup>1/2**, **M<sup>1</sup>1/4**, **M<sup>1</sup>1/8**, **M<sup>1</sup>1/16**, **M<sup>1</sup>1/32**, **M<sup>1</sup>1/64** and **M<sup>1</sup>1/128** (only when an optional flash unit is used). For example, when **M<sup>1</sup>1/16** is selected, the flash output is 1/16 of the full flash.



### Slow sync

Suited to evening and night portraits that include background scenery. Fill flash fires to illuminate the main subject; slow shutter speeds are used to capture background at night or under dim lighting.



### Rear-curtain sync

Fill flash fires just before the shutter closes, creating the effect of a stream of light behind moving subjects.



### Commander mode

The camera's built-in flash emits low-level flashes and an off-camera optional flash unit is controlled wirelessly as a remote flash (60). The Speedlight fires according to the **Commander mode** options set in the shooting menu (73).


- Not available when an optional flash unit is attached.
- Can be used when **P**, **S**, **A**, **M**, **U1**, **U2** or **U3** mode is selected.

## ✓ High Temperature Caution



If you are taking images repeatedly with the flash within a short period of time, the flash unit and its surrounding area can become hot. Before lowering the flash, make sure to allow the flash unit and its surrounding area to cool down.

## 📎 Lowering the Flash

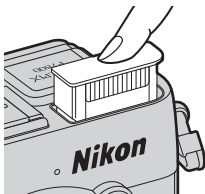When not using the flash, gently push to lower the flash until it clicks shut.



## 📎 The Flash Mode Setting

- The setting may not be available with some shooting modes.
- The setting applied in the following situations is saved in the camera's memory even after the camera is turned off.
  - When shooting mode **P**, **S**, **A** or **M** is used
  - When  (auto with red-eye reduction) is selected in  (auto) mode



## 📎 Red-eye Reduction

If the camera detects red-eye while saving an image, the affected area is processed to reduce red-eye before the image is saved.

Note the following when shooting:

- More time than usual is required to save images.
- Red-eye reduction may not produce the desired results in all situations.
- In some cases, red-eye reduction may be applied to areas of an image unnecessarily. In these cases, select another flash mode and take the image again.

## 📎 External Flash Unit


When an optional Speedlight or wireless Speedlight commander is attached to the accessory shoe () 1), the built-in flash is set to off. While the  icon (Speedlight indicator) is lit on the shooting screen, the Speedlight flash mode is displayed in the monitor.

See "Speedlights (External Flash Unit)" ( 108) for more information.

## Using the Self-timer


The camera is equipped with a self-timer that releases the shutter about 10 seconds, 2 seconds or 1 second after you press the shutter-release button. Set **Vibration reduction to Off** in the setup menu (📖99) when using a tripod to stabilize the camera during shooting.

### 1 Press the multi selector ◀ (☺).

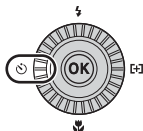

### 2 Select ☺10s (or ☺2s, ☺1s), and press the OK button.

- To change the time for self-timer, press ▶ before pressing the OK button.
- **☺10s** (10 seconds): Use on important occasions, such as weddings.
- **☺2s** (2 seconds), **☺1s** (1 second): Use to prevent camera shake.
- If a setting is not applied by pressing the OK button within a few seconds, the selection will be canceled.
- When the shooting mode is **Pet portrait** scene mode, 📷 (pet portrait auto release) is displayed (📖45). The self-timer cannot be used.

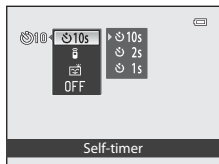


### 3 Frame the picture and press the shutter-release button halfway.

- Focus and exposure are set.

### 4 Press the shutter-release button the rest of the way down.

- Countdown starts. The self-timer lamp flashes and then glows steadily about one second before the shutter is released (except when ☺1s is set).
- When the shutter is released, the self-timer is set to **OFF**.
- To stop the countdown, press the shutter-release button again.

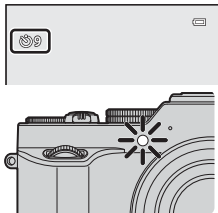


## Shooting Smiling Faces Automatically (Smile Timer)

When the camera detects a smiling face, you can take an image automatically without pressing the shutter-release button.

- This function can be used when the shooting mode is (auto), P, S, A, M, U1, U2, U3, scene mode **Portrait** or **Night portrait**.


### 1 Press the multi selector (☺).

- Change any flash mode, exposure, or shooting menu settings before pressing .

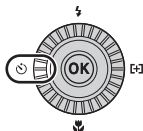


### 2 Select (Smile timer), and press the **OK** button.

- If a setting is not applied by pressing the **OK** button within a few seconds, the selection will be canceled.

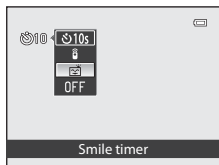

### 3 Frame the picture and wait for the subject to smile without pressing the shutter-release button.

- Point the camera at a human face.
- If the camera detects that the face framed by the double border is smiling, the shutter is automatically released.
- Whenever the camera detects a smiling face, it automatically releases the shutter.

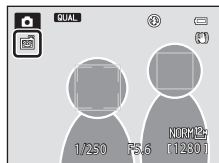

### 4 End automatic shooting.

- To end automatic shooting with smile timer, return to step 1 and select **OFF**.

### **Notes About Smile Timer**

Under some shooting conditions, the camera may be unable to detect faces or detect smiles ( 83). The shutter-release button can also be used for shooting.


### **When the Self-timer Lamp Flashes**

When using smile timer, the self-timer lamp flashes when the camera detects a face and flashes quickly immediately after the shutter is released.

## Using Focus Mode


Set the focus mode according to the distance to the subject.

- 1 Press the multi selector ▼ (🔍).

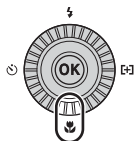

- 2 Select the desired focus mode and press the **OK** button.

- If a setting is not applied by pressing the **OK** button within a few seconds, the selection will be canceled.

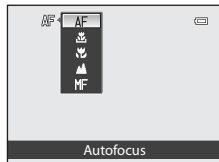



## Available Focus Modes



### Autofocus

The camera automatically adjusts the focus according to the distance to the subject. Use when the distance from the subject to the lens is 50 cm (1 ft 8 in.) or more, or 80 cm (2 ft 8 in.) or more at the maximum telephoto zoom position.

- The focus mode icon on the shooting screen is displayed only immediately after the setting is made.



### Close range only/Macro close-up

Set when taking close-up images.

When the zoom ratio is set to a position where and the zoom indicator glow green, the camera can focus on subjects as close as approximately 10 cm (4 in.) from the lens. When the zoom is at the position where is displayed, the camera can focus on subjects as close as approximately 2 cm (0.8 in.) from the lens.

- When using the maximum telephoto zoom position, the camera can focus on subjects as close as approximately 45 cm (1 ft 6 in.) from the lens.
- When using (close range only), the camera focuses on subjects in close range. The camera may not be able to focus on subjects at far distances.



### Infinity

Use when shooting distant scenes through window glass or when shooting landscapes.

The camera automatically adjusts the focus near infinity.

- The camera may not be able to focus on nearby objects.
- The flash mode is set to (off).



### Manual focus

The focus can be adjusted on any subject at a distance from approximately 2 cm (0.8 in.) to infinity from the lens ( 66). The closest distance at which the camera can focus varies depending on the zoom position.



## Notes About Shooting with the Flash

The flash may be unable to light the entire subject at distances of less than 50 cm (1 ft 8 in.).




## Focus Mode Setting



- The setting may not be available with some shooting modes.
- For shooting modes **P**, **S**, **A** and **M**, the setting is saved in the camera's memory even after the camera is turned off.

# Taking Images with Manual Focus






Available when the shooting mode is **P**, **S**, **A**, **M**, **U1**, **U2**, **U3**, special effects mode, **Sports** scene mode, movie mode or movie custom setting mode.


- 1 Press the multi selector , select **MF** (manual focus), and then press the **OK** button.

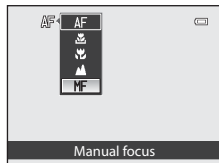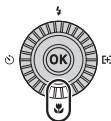- An enlarged view of the center area of the frame is displayed.



  
- 2 Use the multi selector to adjust the focus while checking the enlarged view.

- Press  to move the focus farther away and press  to move it closer.
- The focus can be adjusted in higher detail by rotating the multi selector than pressing  .
- When  is pressed, first the camera focuses with autofocus, and then the manual focus can be operated. When a confirmation dialog is displayed, select **Yes** and press the **OK** button so that the camera focuses on the subject in the center of the frame with autofocus.
- Press the shutter-release button halfway to check the composition. Press the shutter-release button all the way to take the image.

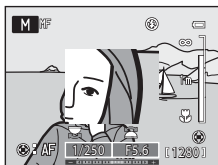

- 3 Press the **OK** button.

- The set focus is locked.
- Press the shutter-release button all the way to take the image.
- To readjust the focus, press the **OK** button to display the screen in step 2.

 
 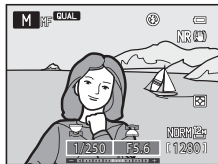

 























































 















## MF (Manual Focus)

- The digits displayed for the gauge on the right of the monitor in step 2 serve as a guideline for the distance to a subject that is in focus when the gauge indicates the center. To change the unit of this gauge, use **MF distance indicator units** in the setup menu (📖99).
- The actual range at which the subject can be in focus varies depending on the aperture value and zoom position. To see whether the subject is in focus, check the image after shooting.

## Default Settings

The default settings for each shooting mode are described below.

Shooting mode	Flash mode (  59)	Self-timer (  62)	Focus mode (  64)	AF area mode (  73)
 (auto)	 AUTO	OFF <sup>1</sup>	AF <sup>2</sup>	—
<b>EFFECTS</b> (special effects)	 <sup>3</sup>	OFF	AF	 <sup>4</sup>
P, S, A, M	 AUTO	OFF <sup>1</sup>	AF	
U1, U2, U3 (User settings)	 AUTO	OFF <sup>1</sup>	AF	
 (movie),  CSM (movie custom setting)	 <sup>5</sup>	OFF	AF	—
Scene				
 (scene auto selector)	 AUTO <sup>6</sup>	OFF	AF <sup>5</sup>	—
 (portrait)	 	OFF <sup>1</sup>	AF <sup>5</sup>	—
 (landscape)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (sports)	 <sup>5</sup>	OFF	AF <sup>7</sup>	—
 (night portrait)	  <sup>8</sup>	OFF <sup>1</sup>	AF <sup>5</sup>	—
 (party/indoor)	  <sup>9</sup>	OFF	AF <sup>5</sup>	—
 (beach)	 AUTO	OFF	AF <sup>10</sup>	—
 (snow)	 AUTO	OFF	AF <sup>10</sup>	—
 (sunset)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (dusk/dawn)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (night landscape)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (close-up)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (food)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (museum)	 <sup>5</sup>	OFF	AF <sup>10</sup>	—
 (fireworks show)	 <sup>5</sup>	OFF	 <sup>5</sup>	—
 (black and white copy)	 <sup>5</sup>	OFF	AF <sup>10</sup>	—
 (backlighting)	  <sup>11</sup>	OFF	AF <sup>5</sup>	—
 (panorama)	 <sup>12</sup>	OFF	AF <sup>10</sup>	—
 (pet portrait)	 <sup>5</sup>	 <sup>13</sup>	AF <sup>10</sup>	—

- <sup>1</sup> Smile timer can also be selected.
- <sup>2</sup> **MF** (manual focus) cannot be selected.
- <sup>3</sup> The default setting is  **AUTO** (auto) when **Creative monochrome** or **Cross process** is selected.  
The flash is fixed at  (off) when **Zoom exposure** or **Defocus during exposure** is selected.
- <sup>4</sup>  (subject tracking) and  (target finding AF) are not available.  
The AF area mode is fixed at **Center (normal)** when **Zoom exposure** is selected.
- <sup>5</sup> The setting cannot be changed.
- <sup>6</sup> The camera automatically selects the flash mode appropriate for the scene it has selected. The setting cannot be changed when using the built-in flash.
- <sup>7</sup> **AF** (autofocus) or **MF** (manual focus) can be selected.
- <sup>8</sup> The setting cannot be changed. The flash mode setting is fixed at fill flash with slow sync and red-eye reduction.
- <sup>9</sup> May switch to slow sync with red-eye reduction flash mode.
- <sup>10</sup> **AF** (autofocus) or  (macro close-up) can be selected.
- <sup>11</sup> When **HDR** is set to **Off**, the flash mode is fixed at  (fill flash). When **HDR** is set to other than **Off**, the flash mode is fixed at  (off).
- <sup>12</sup> The setting cannot be changed when using **Easy panorama**.
- <sup>13</sup> Pet portrait auto release ( 45) can be set to on or off. Self-timer and remote control cannot be used.


# Functions That Can Be Set Using the Exposure Compensation Dial

## Adjusting Brightness (Exposure Compensation)

You can adjust overall image brightness.

Select the compensation value by rotating the exposure compensation dial.


- To brighten the image, set a positive (+) value.
- To darken the image, set a negative (–) value.
- When set to a value other than “0”, the exposure compensation dial mark turns on when shooting.

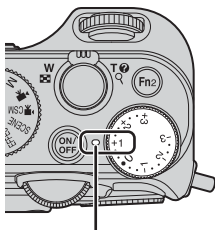

Exposure compensation dial mark

### Exposure Compensation Value

- If the exposure compensation value is set to a value other than 0.0 when the shooting mode is **M** (manual) mode, the exposure is not compensated and the standard value of exposure indicator will change.
- When the shooting mode is **Fireworks show** scene mode (42), exposure compensation cannot be used.
- When the exposure compensation is set while using a flash, the compensation is applied to both the background exposure and to the flash output.

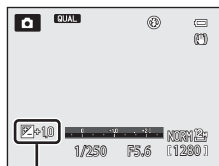




Exposure compensation value

### Exposure Compensation During Movie Recording

- The range of exposure compensation values that can be set is between –2 and +2.
- Once recording starts, the compensation value cannot be changed.
- If the exposure compensation value is set to a value other than 0.0 when **Shooting mode** (96) of the movie custom setting is **Manual**, the exposure is not compensated and the standard value of the exposure indicator will not change either.



# Functions That Can Be Set Using the Button (Quick Menu: When Shooting Still Images)



The functions that can be set vary depending on the shooting mode, as shown below.

Function			P, S, A, M, U1, U2, U3	SCENE	EFFECTS
QUAL	Image quality/Image size	✓	✓	✓	✓
ISO	ISO sensitivity	—	✓	—	—
WB	White balance	—	✓	—	—
BKT	Auto bracketing	—	✓	—	—
	My Menu	—	✓	—	—
	Picture Control	—	✓	—	—


## Basic Quick Menu Operations

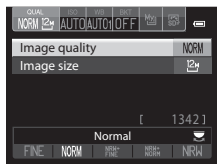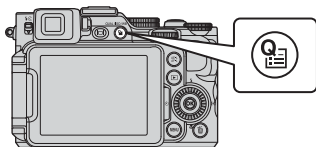- 1 Press the  button.



- 2 Use the multi selector   to move to the tabs at the top of the screen.

- You can also move to the tabs by rotating the sub-command dial.

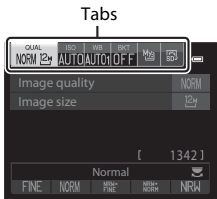

### 3 Use ◀▶ to select the tab for the function to be set.

- You can also select a tab by rotating the main command dial.
- QUAL** Image quality/Image size
    - \* **Movie options** will be shown when the mode dial is rotated to or CSM.
  - ISO** ISO sensitivity
  - WB** White balance
  - BKT** Auto bracketing
  - My** My Menu
  - PC** Picture Control



### 4 Use ▲▼ to select an item and change the setting using ◀▶.


 









- You can also change the setting by rotating the main command dial.



### 5 Press the OK button or Q button when setting is complete.

- You can also press the shutter-release button to finish setting.

## Available Quick Menu

Option	Description	
<b>QUAL</b> Image quality/Image size	Allows you to set the image quality (compression ratio) and image size used when saving images. <ul style="list-style-type: none"> <li>Default setting: <b>Normal</b> (image quality),  <b>4000x3000</b> (image size)</li> </ul>	 27
<b>ISO</b> ISO sensitivity	Allows you to control the camera's sensitivity to light. <ul style="list-style-type: none"> <li>Default setting: <b>Auto</b></li> </ul> When <b>Auto</b> is selected, <b>ISO</b> is displayed in the monitor while shooting if ISO sensitivity increases. <ul style="list-style-type: none"> <li>In <b>M</b> (manual) mode, when set to <b>Auto</b>, <b>ISO 80-200</b>, <b>ISO 80-400</b> or <b>ISO 80-800</b>, the ISO sensitivity is fixed at ISO 80.</li> </ul>	 33
<b>WB</b> White balance	Allows you to adjust white balance to suit the weather conditions or light source in order to make the colors in images match what you see with your eyes. <ul style="list-style-type: none"> <li>Default setting: <b>Auto (normal)</b></li> </ul>	 35
<b>BKT</b> Auto bracketing	Continuous shooting can be performed while changing the exposure (brightness) automatically with the shutter speed (Tv), aperture value (Av) or ISO sensitivity (Sv), or multiple images can be recorded while varying the white balance (WB). <ul style="list-style-type: none"> <li>Default setting: <b>OFF</b></li> </ul>	 38
 <b>My Menu</b>	Only the menu items that are frequently used for shooting can be displayed. <ul style="list-style-type: none"> <li>Options that are displayed in My Menu can be changed from <b>Customize My Menu</b> in the setup menu ( 99).</li> </ul>	 93
 <b>Picture Control (COOLPIX Picture Control)</b>	Allows you to change the settings for image recording according to the shooting scene or your preferences. <ul style="list-style-type: none"> <li>Default setting: <b>Standard</b></li> </ul>	 40




# Functions That Can Be Set with the MENU Button (Shooting Menu, Specialized Menu for U1, U2 or U3)







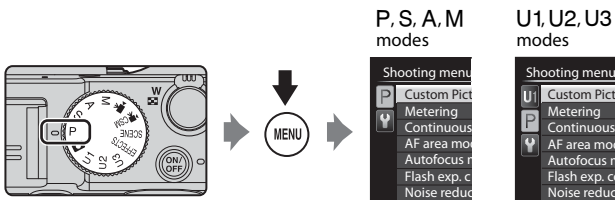




## Shooting Menu

In the following shooting modes, the settings of the shooting menu can be changed by pressing the **MENU** button (📖12).

- **P, S, A** and **M** modes
- Special effects mode (Only **AF area mode** can be set.)
- **U1, U2** and **U3** modes (The settings can be changed in the second tab.)





Option	Description	📖
Custom Picture Control (COOLPIX Custom Picture Control)	Allows you to customize the settings of COOLPIX Picture Control (📖72) and register them in <b>Custom 1</b> or <b>Custom 2</b> of <b>Picture Control</b> in the quick menu.	🔍44
Metering	Allows you to set the method that the camera uses to measure the brightness of the subject. • Default setting: <b>Matrix</b>	🔍45
Continuous	Allows you to select single or continuous shooting. • Default setting: <b>Single</b>	🔍46
AF area mode	Allows you to change the method of how the camera selects the focus area for autofocus. • Default setting: - <b>P, S, A</b> or <b>M</b> mode: <b>Center (normal)</b> - <b>EFFECTS</b> mode: <b>Auto</b>	🔍49

Option	Description	
Autofocus mode	Allows you to select either <b>Single AF</b> , which focuses only when the shutter-release button is pressed halfway, or <b>Full-time AF</b> , which continues focusing even when the shutter-release button is not pressed halfway. • Default setting: <b>Single AF</b>	 53
Flash exp. comp.	Allows you to adjust the flash output. • Default setting: <b>0.0</b>	 54
Noise reduction filter	Allows you to set the strength of the noise reduction function that is normally performed when saving images. • Default setting: <b>Normal</b>	 54
Built-in ND filter	Allows you to select <b>On</b> or <b>Off</b> for the built-in ND filter. • Default setting: <b>Off</b>	 55
Distortion control	Allows you to select whether to correct the peripheral distortion that occurs due to the intrinsic characteristics of lenses. Enabling distortion control reduces the size of the frame, as compared to when distortion control is not enabled. • Default setting: <b>Off</b>	 55
Active D-Lighting	Allows you to prevent loss of contrast details in highlights and shadows when shooting images. • Default setting: <b>Off</b>	 56
Zoom memory	When the zoom control is moved while pressing the <b>Fn1</b> button, the zoom position (equivalent to focal length/angle of view in 35mm [135] format) is switched to the positions that have been selected by setting the check box to on in this menu option. • Default setting: On  for all the check boxes	 57
Startup zoom position	Allows you to set the zoom position (equivalent to focal length/angle of view in 35mm [135] format) for when the camera is turned on. • Default setting: <b>28 mm</b>	 57
M exposure preview	When <b>On</b> is selected, the exposure setting resulting from the shutter speed and aperture value set in <b>M</b> (manual) mode is reflected in the brightness on the shooting screen. • Default setting: <b>Off</b>	 58


Option	Description	
Focus-coupled metering	If <b>Metering</b> (📖73) is set to <b>Matrix</b> or <b>Spot</b> and <b>AF area mode</b> (📖73) is set to <b>Manual</b> , the brightness of the subject is measured by giving higher priority to the focus area. • Default setting: <b>On</b>	📖58
Commander mode	Allows you to set how the wirelessly-controlled optional flash unit fires when the flash mode (📖59) is set to <b>⚡CMD</b> (commander mode). • Default setting: - <b>Flash mode: Standard flash</b> - <b>Flash control mode: TTL</b>	📖59

## Specialized Menu for U1, U2 or U3

In **U1**, **U2** and **U3** shooting modes, the settings of the following menu options can be changed in the top tab (📖12).

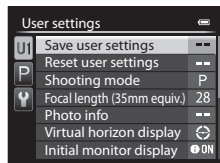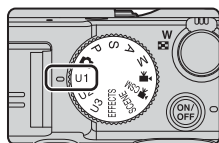

Option	Description	
Save user settings	Allows you to save the current settings.	55
Reset user settings	Allows you to reset the settings saved in <b>U1</b> , <b>U2</b> or <b>U3</b> .	57
Shooting mode	Allows you to select the standard shooting mode. • Default setting: <b>P Programmed auto</b> The current flexible program (when set to <b>P</b> ), shutter speed (when set to <b>S</b> or <b>M</b> ) or aperture value (when set to <b>A</b> or <b>M</b> ) settings are also saved.	49
Focal length (35mm equiv.)	Allows you to set the zoom position for when the mode dial is set. • Default setting: <b>28 mm</b>	—
Photo info	Allows you to set whether or not the virtual horizon, histogram and framing grid are displayed in the monitor. This setting is not applied to the setup menu settings. • Default setting: No check marks	99

Option	Description	
Virtual horizon display	Allows you to set the virtual horizon display. This setting is not applied to the setup menu settings. • Default setting: <b>Circle</b>	99
Initial monitor display	Allows you to set the information displayed in the monitor. • Default setting: <b>Show info</b>	11
Flash mode	Allows you to set the flash mode. • Default setting: <b>Auto</b>	59
Focus	Allows you to set the focus mode. • Default setting: <b>Autofocus</b>	64
Self-timer	Allows you to set the self-timer. Default setting: <b>Off</b>	62
AF assist	Allows you to enable or disable the AF-assist illuminator. This setting is not applied to the setup menu settings. Default setting: <b>Auto</b>	99

# Functions That Cannot Be Used Simultaneously

Some functions cannot be used with other menu settings.



 

 
 
Restricted function	Setting	Description
Flash mode	Focus mode (p64)	When  (infinity) is selected, the flash is not available.
	Image quality (p72)	When RAW (NRW) images are recorded, red-eye reduction processing is not performed even if  (auto with red-eye reduction) is set (including JPEG images when both RAW (NRW) and JPEG images were recorded at the same time).
	Continuous (p73)	The flash is not available.
	Auto bracketing (p72)	The flash is not available.
Self-timer/ Smile timer/ Remote control	AF area mode (p73)	When <b>Subject tracking</b> is selected, the self-timer/smile timer/remote control are not available.
Focus mode	AF area mode (p73)	When <b>Subject tracking</b> is selected, <b>MF</b> (manual focus) is not available.
Image quality	Continuous (p73)	When <b>BSS</b> , <b>Multi-shot 16</b> , <b>Continuous H: 120 fps</b> or <b>Continuous H: 60 fps</b> is selected, <b>RAW (NRW)</b> , <b>RAW (NRW) + Fine</b> and <b>RAW (NRW) + Normal</b> are not available.
	Auto bracketing (p72)	When <b>White balance bracketing</b> is selected, <b>RAW (NRW)</b> , <b>RAW (NRW) + Fine</b> and <b>RAW (NRW) + Normal</b> are not available.
Image size	Image quality (p72)	<ul style="list-style-type: none"> <li>When <b>Image quality</b> is set to <b>RAW (NRW)</b>, <b>Image size</b> is fixed at  <b>4000×3000</b>.</li> <li>When <b>RAW (NRW) + Fine</b> or <b>RAW (NRW) + Normal</b> is selected, <b>Image size</b> of the JPEG image can be set. Note, however, that  <b>3984×2656</b>,  <b>3968×2232</b> and  <b>3000×3000</b> cannot be selected.</li> </ul>
	Continuous (p73)	<ul style="list-style-type: none"> <li>When <b>Continuous H: 120 fps</b> or <b>Continuous H: 60 fps</b> is selected, <b>Image size</b> is fixed at  (1280 × 960 pixels).</li> <li>When <b>Multi-shot 16</b> is selected, <b>Image size</b> is fixed at  (2560 × 1920 pixels).</li> </ul>

Restricted function	Setting	Description
ISO sensitivity	Continuous (p73)	When <b>Multi-shot 16, Continuous H: 120 fps</b> or <b>Continuous H: 60 fps</b> is selected, <b>ISO sensitivity</b> is fixed at <b>Auto</b> .
	Active D-Lighting (p74)	<ul style="list-style-type: none"> <li>When <b>ISO sensitivity</b> is set to <b>Auto</b> and <b>Active D-Lighting</b> is set to any mode other than <b>Off</b>, the maximum value for ISO sensitivity is set to ISO 800.</li> <li>When <b>Active D-Lighting</b> is set to any mode other than <b>Off, 1600, 2000, 2500, 3200</b> and <b>Hi 1</b> in <b>ISO sensitivity</b> are not available.</li> </ul>
	Shooting mode of Movie custom setting (p96)	<ul style="list-style-type: none"> <li>If <b>ISO sensitivity</b> is set to <b>Auto</b> when <b>Shooting mode</b> is <b>Manual</b>, ISO sensitivity is fixed at ISO 80.</li> <li>When <b>Shooting mode</b> is <b>Special effects</b>, <b>ISO sensitivity</b> is switched to <b>Auto</b>.</li> </ul>
White balance	Picture Control (p72)	When <b>Monochrome</b> is selected, <b>White balance</b> is fixed at <b>Auto (normal)</b> .
Picture Control	Active D-Lighting (p74)	When using <b>Active D-Lighting</b> , <b>Contrast</b> in manual adjustment cannot be adjusted.
	Shooting mode of Movie custom setting (p96)	When <b>Shooting mode</b> is <b>Special effects</b> , <b>Picture Control</b> is not available.
Metering	Active D-Lighting (p74)	When <b>Active D-Lighting</b> is set to any mode other than <b>Off</b> , <b>Metering</b> is reset to <b>Matrix</b> .

Restricted function	Setting	Description
Continuous/ Auto bracketing	Continuous (73)/Auto bracketing (72)	<b>Continuous</b> and <b>Auto bracketing</b> are not available simultaneously.
	Self-timer (62)/Remote control (58)	When self-timer or the Remote Control ML-L3 is used, a single image is shot even if <b>Continuous H</b> , <b>Continuous M</b> , <b>Continuous L</b> , or <b>BSS</b> has been set.
	Smile timer (63)	When the camera detects smiling faces and the shutter is released, only one image is shot. If <b>Intvl timer shooting</b> is set, shooting finishes automatically after one image is shot.
	Image quality (72)	When <b>Image quality</b> is set to <b>RAW (NRW)</b> , <b>RAW (NRW) + Fine</b> or <b>RAW (NRW) + Normal</b> , <b>BSS</b> , <b>Multi-shot 16</b> , <b>Continuous H: 120 fps</b> , <b>Continuous H: 60 fps</b> and <b>White balance bracketing</b> are not available.
	Picture Control (72)	When <b>Monochrome</b> is selected, <b>White balance bracketing</b> is not available.
AF area mode	Smile timer (63)	The camera captures images using face detection regardless of the applied <b>AF area mode</b> option.
	Focus mode (64)	When set to <b>MF</b> (manual focus), the AF area mode cannot be set.
	Picture Control (72)	When <b>Target finding AF</b> is selected and <b>Picture Control</b> is set to <b>Monochrome</b> , <b>AF area mode</b> operates using the <b>Auto</b> setting.
	White balance (72)	When <b>Target finding AF</b> is selected, and if the white balance is set to <b>Preset manual</b> , <b>Incandescent</b> , <b>Fluorescent FL3</b> or <b>Choose color temp.</b> , or fine adjustment of white balance is performed, the camera focuses on a face or selects one or more of the 9 focus areas containing the subject closest to the camera.


Restricted function	Setting	Description
Autofocus mode	Smile timer (📖63)	Autofocus mode option cannot be changed when the smile timer is selected.
	Focus mode (📖64)	When the focus mode is set to <b>▲</b> (infinity), the autofocus mode operates using the <b>Single AF</b> setting.
	AF area mode (📖73)	When <b>AF area mode</b> is set to <b>Face priority</b> , <b>Subject tracking</b> or <b>Target finding AF</b> , <b>Single AF</b> is automatically selected.
Built-in ND filter	Shooting mode of Movie custom setting (📖96)	When <b>Shooting mode</b> is set to <b>Special effects</b> , the built-in ND filter is automatically controlled.
Active D-Lighting	ISO sensitivity (📖72)	When <b>ISO sensitivity</b> is set to <b>1600, 2000, 2500, 3200</b> or <b>Hi 1</b> , <b>Active D-Lighting</b> is not available.
Photo info	Smile timer (📖63)	The virtual horizon is not displayed when the smile timer is selected.
	AF area mode (📖73)	<ul style="list-style-type: none"> <li>The virtual horizon is not displayed when <b>Face priority</b> is selected.</li> <li>The virtual horizon is not displayed when <b>Subject tracking</b> is selected. After the subject has been registered (during subject tracking), the histogram is not displayed.</li> <li>The virtual horizon and histogram are not displayed when <b>Target finding AF</b> is selected.</li> </ul>
Print date	Image quality (📖72)	When <b>Image quality</b> is set to <b>RAW (NRW)</b> , <b>RAW (NRW) + Fine</b> or <b>RAW (NRW) + Normal</b> , date cannot be imprinted on images.
	Continuous (📖73)	When <b>Continuous H: 120 fps</b> or <b>Continuous H: 60 fps</b> is selected, date cannot be imprinted on images.
Sound settings	Continuous (📖73)	When <b>Continuous H</b> , <b>Continuous M</b> , <b>Continuous L</b> , <b>Continuous H: 120 fps</b> , <b>Continuous H: 60 fps</b> , <b>BSS</b> , or <b>Multi-shot 16</b> is selected, shutter sound is disabled.
	Auto bracketing (📖72)	When <b>AE Bracketing (Tv)</b> , <b>AE Bracketing (Av)</b> or <b>AE Bracketing (Sv)</b> is selected, shutter sound is disabled.



Restricted function	Setting	Description
Digital zoom	Smile timer (  63)	When the smile timer is selected, digital zoom is not available.
	Focus mode (  64)	When <b>MF</b> (manual focus) is selected, digital zoom is not available.
	Image quality (  72)	When <b>Image quality</b> is set to <b>RAW (NRW)</b> , <b>RAW (NRW) + Fine</b> or <b>RAW (NRW) + Normal</b> , digital zoom is not available.
	Continuous (  73)	When <b>Multi-shot 16</b> is selected, digital zoom is not available.
	AF area mode (  73)	When <b>Subject tracking</b> is selected, digital zoom is not available.
	Zoom memory (  74, 74)	When the <b>Fn1</b> button is held down, digital zoom is not available.



### Notes About Digital Zoom


- Depending on the shooting mode or the current settings, digital zoom may not be available (81).
- When digital zoom is in effect, selectable options for AF area mode or metering mode are restricted.

## Focusing

The focus area varies depending on the shooting mode.

### Focusing in (Auto) Mode or EFFECTS Mode


- The camera automatically selects one or more of the 9 focus areas containing the subject closest to the camera when the shutter-release button is pressed halfway. When the subject is in focus, the focus areas that are in focus glow green.
- In special effects mode, the method of how the camera selects the focus area for autofocus can be changed by selecting **AF area mode** (📖73) in the shooting menu.

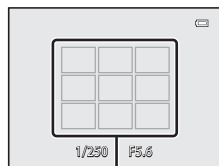


Focus areas

### Using the Target Finding AF

 When **AF area mode** (default setting: **Center (normal)**) in P, S, A, M, U1, U2 or U3 mode is set to **Target finding AF**, the camera operates in the manner described below when you press the shutter-release button halfway.

- The camera detects the main subject and focuses on it. When the subject is in focus, the focus area glows green. If a human face is detected, the camera automatically sets focus priority on it.
- If no main subject is detected, the camera operates in the same manner as in  (auto) mode.

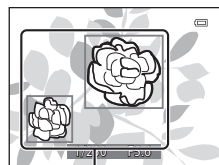

Focus areas

### ✓ Notes About Target Finding AF


- Depending on shooting conditions, the subject that the camera determines to be the main subject may vary.
- The main subject may not be detected when using certain **White balance** or **Picture Control** settings.
- The camera may not detect the main subject appropriately in the following situations:
  - When the subject is very dark or bright
  - When the main subject lacks clearly defined colors
  - When the shot is framed so that the main subject is on the edge of the monitor
  - When the main subject is composed of a repeating pattern

## Using Face Detection

In the following settings, the camera uses face detection to automatically focus on human faces.

- **Scene auto selector**, **Portrait**, or **Night portrait** scene mode (📖39)
- ☺ (Smile timer) (📖63)
- When **AF area mode** (📖73) is set to **Face priority**

If the camera detects more than one face, a double border is displayed around the face that the camera focuses on, and single borders are displayed around the other faces.

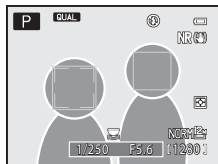

If the shutter-release button is pressed halfway when no faces are detected:

- When **Scene auto selector** is selected, the focus area changes depending on the scene.
- In **Portrait** and **Night portrait** scene modes, the camera focuses on the area in the center of the frame.
- When ☺ (smile timer) is selected, the camera focuses on the subject in the center of the frame.
- When **AF area mode** is set to **Face priority**, the camera selects the focus area containing the subject closest to the camera.

### ✓ Notes About Face Detection

- The camera's ability to detect faces depends on a variety of factors, including the direction in which the faces are looking.
- The camera may be unable to detect faces in the following situations:
  - When faces are partially hidden by sunglasses or otherwise obstructed
  - When faces take up too much or too little of the frame

## Using Skin Softening

When the shutter is released while using one of the shooting modes listed below, the camera detects human faces and processes the image to soften facial skin tones (up to 3 faces).

- **Scene auto selector, Portrait** or **Night portrait** in scene mode (📖39)
- Skin softening can also be applied to saved images (📖88).



### Notes About Skin Softening

- It may take more time than usual to save images after shooting.
- Under some shooting conditions, the desired skin softening results may not be achieved, and skin softening may be applied to areas of the image where there are no faces.

## Subjects Not Suitable for Autofocus

The camera may not focus as expected in the following situations. In some rare cases, the subject may not be in focus despite the fact that the focus area or focus indicator glows green:

- Subject is very dark
- Objects of sharply differing brightness are included in the scene (e.g. the sun behind the subject makes that subject appear very dark)
- No contrast between the subject and surroundings (e.g. a portrait subject wearing a white shirt is standing in front of a white wall)
- Several objects are at different distances from the camera (e.g. the subject is inside a cage)
- Subjects with repeating patterns (window blinds, buildings with multiple rows of similarly shaped windows, etc.)
- Subject is moving rapidly

In the situations noted above, try pressing the shutter-release button halfway to refocus several times, or focus on another subject positioned at the same distance from the camera as the actual desired subject, and use focus lock (📖85).

The camera can also focus using manual focus (📖64, 66).

## Focus Lock


Focus lock shooting is recommended when the camera does not activate the focus area that contains the desired subject.

### 1 Set AF area mode to **Center (normal)** (📖73).

- **AF area mode** can be set when the shooting mode is P, S, A, M, U1, U2, U3, or special effects.


### 2 Position the subject in the center of the frame and press the shutter-release button halfway.

- Confirm that the focus area glows green.
- Focus and exposure are locked.

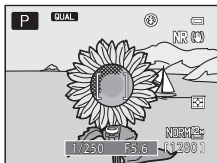

### 3 Without lifting your finger, recompose the picture.

- Make sure to maintain the same distance between the camera and the subject.

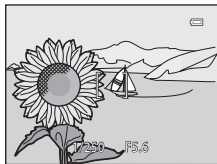

### 4 Press the shutter-release button the rest of the way down to take the picture.



### Using the AE-L/AF-L Button for Focus Lock

You can lock the exposure and focus while holding down the AE-L/AF-L button (📖100) instead of pressing the shutter-release button halfway.

# Playback Features

## Playback Zoom

Moving the zoom control toward **T** (Q) in full-frame playback mode (36) zooms in on the image.

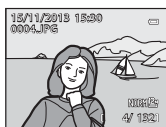
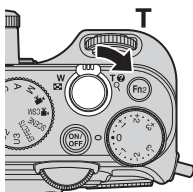


Image is displayed full-frame.



Image is zoomed in.

Displayed area guide



- You can change the zoom ratio by moving the zoom control toward **W** (checkered flag) or **T** (Q). The zoom can also be adjusted by rotating the command dial.
- To view a different area of the image, press the multi selector **▲▼◀▶**.
- If you are viewing an image that was captured using face detection or pet detection, the camera zooms in on the face detected at the time of shooting (except images captured using **Continuous**, **AE Bracketing (Tv)**, **AE Bracketing (Av)** or **AE Bracketing (Sv)**). To zoom in on an area of the image where there are no faces, adjust the zoom ratio and then press **▲▼◀▶**.
- When a zoomed image is displayed, press the **OK** button to return to full-frame playback mode.

### Cropping Images

When a zoomed image is displayed, you can press the **MENU** button to crop the image to include only the visible portion and save it as a separate file (17).

# Thumbnail Display, Calendar Display

Moving the zoom control toward **W** ( ) in full-frame playback mode ( 36) displays images as thumbnails.

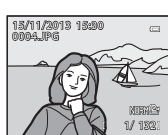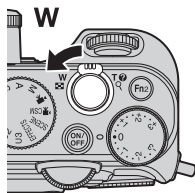

Full-frame Display



Thumbnail Display



Calendar Display

- You can change the number of thumbnails displayed by moving the zoom control toward **W** ( ) or **T** ( ).
- While using thumbnail playback mode, use the multi selector **▲▼◀▶** or rotate it to select an image, and then press the **OK** button to display that image full-frame.
- While using calendar display mode, use the multi selector **▲▼◀▶** or rotate it to select a date, and then press the **OK** button to display the images captured on that day.
- An image or date can also be selected by rotating the command dial.




## Calendar Display

Images captured when the camera's date is not set are treated as images captured on January 1, 2013.





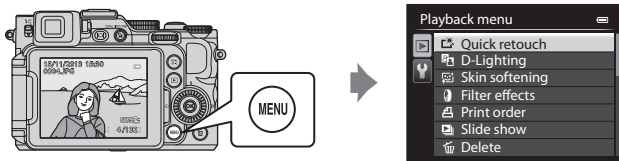








## Functions That Can Be Set with the MENU Button (Playback Menu)

When viewing images in full-frame playback mode or thumbnail playback mode, you can configure the playback menu settings listed below by pressing the **MENU** button (📖12).




Option	Description	📖
🔍 Quick retouch <sup>1</sup>	Allows you to create retouched copies in which contrast and saturation have been enhanced.	🔑10
🔲 D-Lighting <sup>1</sup>	Allows you to create copies with enhanced brightness and contrast, brightening dark portions of an image.	🔑10
👤 Skin softening <sup>1</sup>	Detects faces in images and creates a copy with softer facial skin tones.	🔑11
🎨 Filter effects <sup>1</sup>	Allows you to apply a variety of effects using digital filter. The available effects are <b>Soft</b> , <b>Selective color</b> , <b>Cross screen</b> , <b>Fisheye</b> , <b>Miniature effect</b> , <b>Painting</b> and <b>Vignette</b> .	🔑12
🖨️ Print order <sup>2</sup>	Allows you to select which images are printed, and how many copies of each image are printed, prior to printing.	🔑62
📺 Slide show	Allows you to view images in an automatic slide show.	🔑64
🗑️ Delete <sup>2</sup>	Deletes an image. Multiple images can be deleted.	🔑65
🔒 Protect <sup>2</sup>	Protects selected images and movies from accidental deletion.	🔑66
🔄 Rotate image <sup>2</sup>	Allows you to rotate the displayed image to portrait or landscape orientation.	🔑66
🖼️ Small picture <sup>1</sup>	Creates a small copy of images.	🔑13
🎤 Voice memo	Allows you to use the camera's microphone to record voice memos and attach them to images.	🔑67



Option	Description	
 Copy <sup>2</sup>	Allows you to copy images between the internal memory and a memory card. This function can also be used to copy movies.	 68
 Black border <sup>1</sup>	Creates a new image surrounded by a black border.	 14
 Straighten <sup>1</sup>	Compensates for the slanting of images taken.	 15
<b>NRW</b> RAW (NRW) processing <sup>1, 2</sup>	Creates JPEG-format copies by performing RAW processing within the camera for RAW (NRW) images without having to use a computer.	 15
 Sequence display options	Allows you to select whether to display only the key picture for a sequence of images captured continuously or to display the sequence as individual images. <ul style="list-style-type: none"> <li>When only the key picture is displayed for a sequence, press the  button to display each image in the sequence. Press the multi selector  to return to the key picture display.</li> </ul>	 69
 Choose key picture <sup>2</sup>	Allows you to change the key picture for images captured in sequence.	 69

<sup>1</sup> Edited images are saved as separate files. Some images may not be edited.

<sup>2</sup> Select an image on the image selection screen. See "Using the Screen for Selecting Images" ( 90) for more information.

## Using the Screen for Selecting Images

When an image selection screen such as the one shown on the right is displayed while operating the camera, follow the procedures described below to select the images.



### 1 Use the multi selector ◀▶ or rotate it to select the desired image.

- Move the zoom control (📖1) toward **T** (🔍) to switch to full-frame playback, or **W** (🖼️) to switch to thumbnail playback.
- Only one image can be selected for **Rotate image**, **Choose key picture**, and **Welcome screen**. Proceed to step 3.



### 2 Use ▲▼ to select **ON** or **OFF** (or the number of copies).

- When **ON** is selected, a check mark (✓) is displayed with the image. Repeat steps 1 and 2 to select additional images.






### 3 Press the (OK) button to apply the image selection.

- With selections such as **Selected images**, a confirmation dialog is displayed. Follow the instructions displayed in the monitor.

# Recording and Playing Back Movies

## Recording Movies



Movies can be recorded using the following two modes.

 (movie) mode	You can perform basic movie recording. When <b>Movie options</b> is set to HS movies, you can record slow motion movies and fast motion movies (  , 31).
 CSM (movie custom setting) mode	You can set the <b>Shooting mode</b> and <b>ISO sensitivity</b> and enjoy recording more authentic movies.

### 1 Rotate the mode dial to (or CSM).

- Check the remaining amount of movie recording time.
- When **Shooting mode** (96) of the movie custom setting mode is set to **Aperture-priority auto** or **Manual**, set the aperture value or shutter speed before recording a movie (49). The aperture value and shutter speed cannot be set during movie recording.

Movie recording time remaining

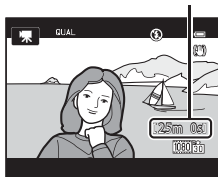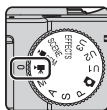

### 2 Press the shutter-release button all the way to start recording.

- The camera focuses on the area in the center of the frame.
- See "Focusing During Movie Recording" (93) for more information.



### 3 Press the shutter-release button all the way to end recording.

## ✓ Maximum Movie Length

Individual movie files cannot exceed 4 GB in size or 29 minutes in length, even when there is sufficient free space on the memory card for longer recording.

- The maximum movie length for a single movie is displayed on the shooting screen.
- Recording may end before either limit is reached if camera temperature becomes elevated.
- The actual movie length may vary depending on the movie content, subject movement, or type of memory card.

## ✓ Notes About Saving Images and Recording Movies

The indicator showing the number of exposures remaining or the indicator showing the maximum movie length flashes while images are being saved or while a movie is being recorded. **Do not open the battery-chamber/memory card slot cover or remove the battery or memory card** while an indicator is flashing. Doing this could result in loss of data, or in damage to the camera or the memory card.

## ✓ Notes About Movie Recording

- Memory cards with an SD Speed Class rating of 6 or faster are recommended when recording movies (125). Movie recording may stop unexpectedly when a memory card with a lower Speed Class rating is used.
- The sounds of zoom control operation, zoom, autofocus lens drive movement, vibration reduction, and aperture operation when brightness changes may be recorded.
- The following phenomena may be seen in the monitor while recording movies. These phenomena are saved in the recorded movies.
  - Banding may occur in images under fluorescent, mercury-vapor, or sodium-vapor lighting.
  - Subjects that move quickly from one side of the frame to the other, such as a moving train or car, may appear skewed.
  - The entire movie image may be skewed when the camera is panned.
  - Lighting or other bright areas may leave residual images when the camera is moved.
- Depending on the distance to the subject or the amount of zoom applied, subjects with repeating patterns (fabrics, lattice windows, etc.) may have colored stripes (interference patterns, moire, etc.) in them during movie recording and playback. This occurs when the pattern in the subject and the layout of the image sensor interfere with each other; it is not a malfunction.

## ✓ Notes About Using Zoom During Movie Recording

- The zoom indicator is not displayed during movie recording.
- There may be some degradation in image quality when digital zoom is used. When recording movies, digital zoom operates up to approximately 2x the maximum optical zoom ratio. If you zoom in on the subject while recording a movie, the zoom motion temporarily stops at the position where optical zoom is changed to digital zoom.
- When **Shooting mode** (📖96) of the movie custom setting mode is set to **Aperture-priority auto** or **Manual**, optical zoom cannot be used during movie recording.

## ✓ Camera Temperature

- The camera may become warm when recording movies for an extended period of time or when the camera is used in a hot area.
- If the inside of the camera becomes extremely hot when recording movies, the camera will automatically stop recording. The amount of time remaining until the camera stops recording (🕒10s) is displayed. After the camera stops recording, it turns itself off.  
Leave the camera off until the inside of the camera has cooled.

## Focusing During Movie Recording


- The focus can be adjusted during movie recording in the following manner in accordance with the **Autofocus mode** (📖96) setting of the movie menu.
  - **AF-S Single AF** (default setting): The focus is locked when movie recording starts. To perform the autofocus function during movie recording, press the AE-L/AF-L button (📖2).
  - **AF-F Full-time AF**: The focus is adjusted repeatedly even during movie recording. To lock the exposure or focus during movie recording, press the AE-L/AF-L button. To cancel the lock, press the AE-L/AF-L button again.
- When the focus mode (📖64) is **MF** (manual focus), adjust the focus manually. The focus can be adjusted by using the multi selector ▲ (far) ▼ (near) while recording movies.
- Autofocus may not perform as expected (📖84). Should this occur, try **MF** (manual focus) (📖64, 66) or set **Autofocus mode** in the movie menu to **AF-S Single AF** (default setting) and then use focus lock (📖85) to record.





## Functions Available in Movie Mode and Movie Custom Setting Mode










 

- Self-timer (📖62)
- Focus mode (📖64)
- Exposure compensation (📖69)
- Quick menu (📖70)
- Movie menu (📖96)
- Setup menu (📖99)

## Functions That Can Be Set Using the Button (Quick Menu: When Recording Movies)

Available functions differ according to the movie mode.


- See “Basic Quick Menu Operations” ( 70) for how to set the quick menu options.

Function		 CSM
<b>QUAL</b> Movie options	✓	✓
<b>ISO</b> ISO sensitivity	–	✓
<b>WB</b> White balance	✓	✓
<b>BKT</b> Auto bracketing	–	–
 My Menu	–	–
 Picture Control	–	✓

Option	Description	
<b>QUAL</b> Movie options	<p>Allows you to select the movie type. Select normal speed to record movies at normal speed, or HS (high speed) to record movies that play in slow or fast motion. Only normal speed movies can be selected in  CSM (movie custom setting) mode.</p> <ul style="list-style-type: none"> <li>Default setting:  <b>1080★/30p</b> or  <b>1080★/25p</b></li> </ul>	 30
<b>ISO</b> ISO sensitivity	<p>Allows you to control the camera's sensitivity to light.</p> <ul style="list-style-type: none"> <li>Default setting: <b>Auto</b></li> <li>If ISO sensitivity is set to <b>Auto</b> when <b>Shooting mode</b> of the movie custom setting menu ( 96) is <b>Manual</b>, ISO sensitivity is fixed at ISO 80.</li> </ul>	 33
<b>WB</b> White balance	<p>Allows you to adjust white balance to suit the weather conditions or light source in order to make the colors in images match what you see with your eyes.</p> <ul style="list-style-type: none"> <li>Default setting: <b>Auto (normal)</b></li> </ul>	 35
 <b>Picture Control</b> (COOLPIX Picture Control)	<p>Allows you to change the settings for image recording according to the shooting scene or your preferences.</p> <ul style="list-style-type: none"> <li>Can be set when <b>Shooting mode</b> ( 96) of the movie custom setting menu is set to <b>Aperture-priority auto</b> or <b>Manual</b>.</li> <li>Default setting: <b>Standard</b></li> </ul>	 40

## Functions That Can Be Set with the MENU Button (Movie and Movie Custom Setting Menus)

In movie mode or movie custom setting mode, press the **MENU** button to set the following menu options (📖12).

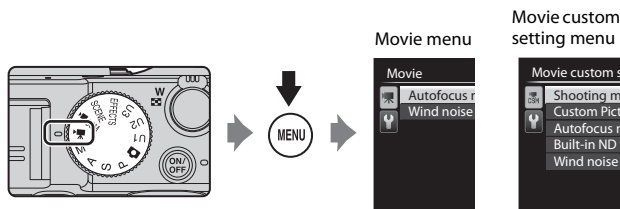




Available functions differ according to the movie mode.





Function	📹 (movie)	📹CSM (movie custom setting)
Shooting mode	–	✓
Custom Picture Control	–	✓
Autofocus mode	✓	✓
Built-in ND filter	–	✓
Wind noise reduction	✓	✓


Option	Description	📖
Shooting mode	Allows you to set the standard shooting mode. <ul style="list-style-type: none"> <li>Default setting: <b>Aperture-priority auto</b></li> <li>When <b>Special effects</b> is selected, also allows you to select a shooting effect (📖46) (default setting: <b>Painting</b>).</li> </ul>	📖70
Custom Picture Control (COOLPIX Picture Control (📖95) and register them in <b>Custom 1</b> or <b>Custom 2</b> of <b>Picture Control</b> in the quick menu).	Allows you to customize the settings of COOLPIX Picture Control (📖95) and register them in <b>Custom 1</b> or <b>Custom 2</b> of <b>Picture Control</b> in the quick menu.	📖44
Autofocus mode	Allows you to select either <b>Single AF</b> , which locks focus when movie recording begins, or <b>Full-time AF</b> , which continues focusing during movie recording. <ul style="list-style-type: none"> <li>Default setting: <b>Single AF</b></li> </ul>	📖71




Option	Description	
Built-in ND filter	<p>Allows you to select <b>On</b> or <b>Off</b> for the built-in ND filter.</p> <ul style="list-style-type: none"> <li>Default setting: <b>Off</b></li> <li>When <b>Shooting mode</b> of the movie custom setting menu is set to <b>Special effects</b>, the built-in ND filter is automatically controlled.</li> </ul>	  55
Wind noise reduction	<p>Allows you to set whether or not to reduce wind noise during movie recording.</p> <ul style="list-style-type: none"> <li>Default setting: <b>Off</b></li> </ul>	 72

## Playing Back Movies

Press the  button to enter playback mode.  
 Movies are indicated by the movie options icon ( 95,  30).  
 Press the  button to play back movies.

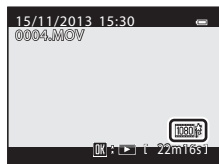

- To adjust the volume, move the zoom control ( 1).




Volume indicator

## Functions Available During Playback

Rotate the multi selector or the main command dial to fast forward or rewind. Playback controls are displayed at the top of the monitor.

The operations listed below can be performed by using the multi selector ◀▶ or sub-command dial to select a control and then pressing the OK button.

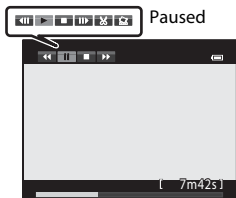

Function	Icon	Description
Rewind	◀◀	Hold down the OK button to rewind the movie.
Advance	▶▶	Hold down the OK button to advance the movie.
Pause		Pause playback. The operations listed below can be performed while paused.
		◀◀◀ Rewind the movie one frame. Hold down the OK button for continuous rewinding.*
		▶▶▶ Advance the movie one frame. Hold down the OK button for continuous advancing.*
		▶ Resume playback.
		✂ Extract the desired portion of a movie and save it as a separate file.
		🖼 Extract a single frame of a movie and save it as a still image.
End	■	Return to full-frame playback mode.

\* The movie can also be advanced or rewound by one frame by rotating the multi selector or main command dial.

## Deleting Movies


To delete a movie, select the desired movie in full-frame playback mode (📖36) or thumbnail playback mode (📖87) and press the 🗑 button (📖37).

# General Camera Setup







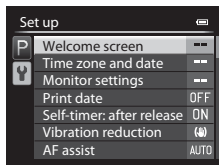






 






## Functions That Can Be Set with the MENU Button (Setup Menu)















Press the MENU button → Y (setup) tab (📖13)

The settings of the menu options listed below can be configured.



Option	Description	📖
Welcome screen	Allows you to select whether or not the welcome screen is displayed when the camera is turned on.	👁72
Time zone and date	Allows you to set the camera clock.	👁73
Monitor settings	Allows you to adjust post-shooting image review, monitor brightness, and photo information display settings.	👁75
Print date	Allows you to imprint the shooting date and time on images.	👁77
Self-timer: after release	Allows you to select whether or not to cancel the setting after shooting images with the self-timer.	👁78
Vibration reduction	Allows you to select the vibration reduction setting used when shooting.	👁79
AF assist	Allows you to enable or disable the AF-assist illuminator.	👁80
ISO sensitivity step value	Allows you to set the step value of the sensitivity to be set for <b>ISO sensitivity</b> of the quick menu.	👁80
Digital zoom	Allows you to set the operation of digital zoom.	👁81
Zoom speed	Allows you to set the zoom operation speed.	👁82
Fixed aperture	When set to <b>On</b> , zoom operates while keeping changes in the aperture value to a minimum in <b>A</b> or <b>M</b> shooting mode.	👁82

Option	Description	
Sound settings	Allows you to adjust sound settings.	 83
Record orientation	Allows you to set whether or not to record the “tall” orientation data on the images that are shot with the camera held in “tall” orientation.	 83
Rotate tall	Allows you to set whether or not to rotate the images in accordance with the “tall” or landscape orientation of the camera during playback.	 84
Auto off	Allows you to set the amount of time that passes before the monitor turns off to save power.	 84
Format memory/ Format card	Allows you to format the internal memory or the memory card.	 85
Language	Allows you to change the camera’s display language.	 85
TV settings	Allows you to adjust TV-connection settings.	 86
External mic sensitivity	Allows you to set the external microphone sensitivity.	 86
Customize command dials	Allows you to swap the function of the main command dial for that of the sub-command dial when the exposure is set (  49).	 87
Command dial rotation	Allows you to set the direction of operation when the command dial is rotated during shooting.	 87
Multi selector right press	When set to <b>AF area mode</b> , the AF area mode setting is displayed if the multi selector  (  ) is pressed during shooting.	 88
Delete button options	When set to <b>Press twice to delete</b> , the image can be deleted by pressing the  button again while the delete confirmation message is displayed.	 88
AE/AF lock button	Allows you to select the function to be performed when the AE-L/AF-L button is pressed during shooting.	 89
Fn1 + shutter button	Allows you to set the function to be performed when the shutter-release button is pressed while pressing the <b>Fn1</b> (function 1) button during shooting.	 90
Fn1 + command dial	Allows you to set the function to be performed when the command dial is rotated while pressing the <b>Fn1</b> (function 1) button during shooting.	 91

Option	Description	
<b>Fn1 + selector dial</b>	Allows you to set the function to be performed when the multi selector is rotated while pressing the <b>Fn1</b> (function 1) button during shooting.	 91
<b>Fn1 guide display</b>	Allows you to set whether or not to display guides for the functions assigned to <b>Fn1 + shutter button</b> , <b>Fn1 + command dial</b> and <b>Fn1 + selector dial</b> in the monitor, when the <b>Fn1</b> (function 1) button is pressed during shooting.	 92
<b>Fn2 button</b>	Allows you to set the operation to be performed when the <b>Fn2</b> (function 2) button is pressed.	 92
<b>Customize My Menu</b>	Allows you to register frequently used menu items in My Menu (  72) (up to 5 items).	 93
<b>Reset file numbering</b>	Allows you to reset the sequential numbering of file numbers when <b>Yes</b> is selected.	 94
<b>Accessory terminal</b>	Allows you to configure settings for the optional Wireless Remote Controller WR-R10 or GPS unit when either one is attached to the accessory terminal.	 95
<b>Eye-Fi upload</b>	Allows you to set whether or not to enable the function for sending images to a computer using a commercially available Eye-Fi card.	 96
<b>MF distance indicator units</b>	Allows you to set the unit of distance for displaying at screen gauge, to either m (meter) or ft (feet) when using manual focus.	 97
<b>Reverse indicators</b>	Allows you to set the +/- display direction of indicators that are displayed for setting the exposure and bracketing when shooting mode is <b>M</b> .	 97
<b>Flash control</b>	When set to <b>Auto</b> , the external flash unit (optional) fires when it is attached to the camera.	 97
<b>Reset all</b>	Allows you to reset the camera's settings to their default values.	 98
<b>Firmware version</b>	View the current camera firmware version.	 98

# Connecting the Camera to a TV, Computer, or Printer

## Connection Methods

You can enhance your enjoyment of images and movies by connecting the camera to a TV, computer, or printer.



Open the connector cover.



HDMI mini connector  
(Type C)


USB/audio/video output  
connector

Insert the plug straight.

- Before connecting the camera to an external device, make sure the remaining battery level is sufficient and turn the camera off. Before disconnecting, make sure to turn the camera off.
- If the AC Adapter EH-5b and the Power Connector EP-5A (available separately) (P-104) are used, this camera can be powered from an electrical outlet. Do not use any other make or model of AC adapter or power connector as it may cause the camera to heat up or malfunction.
- For information about the connection methods and subsequent operations, refer to the documentation included with the device in addition to this document.

**Viewing images on a TV** 18


Images and movies captured with the camera can be viewed on a TV.

Connection method: Connect the video and audio plugs of the optional Audio Video Cable EG-CP16 ( 104) to the TV's input jacks. Alternatively, connect a commercially available HDMI cable to the TV's HDMI input jack.

**Viewing and organizing images on a computer** 104

You can transfer images to a computer to perform simple retouching and manage image data.

Connection method: Connect the camera to the computer's USB port with the included USB cable.

- Before connecting to a computer, install ViewNX 2 on the computer ( 104).

**Printing images without using a computer** 20

If you connect the camera to a PictBridge-compatible printer, you can print images without using a computer.

Connection method: Connect the camera directly to the printer's USB port with the included USB cable.

## Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images. Install ViewNX 2 using the included ViewNX 2 CD-ROM.

### Your Imaging Toolbox

ViewNX 2™



## Installing ViewNX 2

### Compatible Operating Systems

#### Windows

Windows 8, Windows 7, Windows Vista, Windows XP

#### Macintosh

Mac OS X 10.6, 10.7, 10.8

Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

### 1 Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Windows: If instructions for operating the CD-ROM are displayed in the window, follow the instructions to proceed to the installation window.
- Mac OS: When the **ViewNX 2** window is displayed, double-click the **Welcome** icon.



## 2 Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
- Click **Next** to display the installation window.



## 3 Start the installer.

- We recommend clicking **Installation Guide** in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click **Typical Installation (Recommended)** in the installation window.
- Follow the on-screen instructions to install the software.

## 4 Exit the installer when the installation completion screen is displayed.

- Windows: Click **Yes**.
- Mac OS: Click **OK**.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
  - Nikon Transfer 2: For transferring images to the computer
  - ViewNX 2: For viewing, editing, and printing transferred images
  - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama photo using a series of images shot in panorama assist scene mode)


## 5 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.

# Transferring Images to the Computer

## 1 Choose how images will be copied to the computer.

Choose one of the following methods:

- **Direct USB connection:** Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the included USB cable. The camera automatically turns on. To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

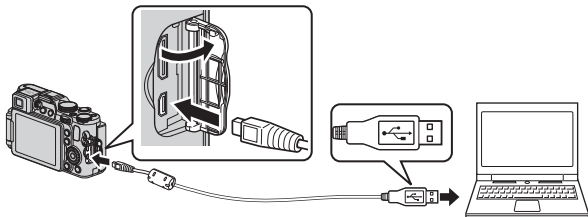

- **SD card slot:** If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader:** Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

### • When using Windows 7

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

- 1 Under **Import pictures and videos**, click **Change program**. A program selection dialog will be displayed; select **Import File using Nikon Transfer 2** and click **OK**.
- 2 Double-click **Import File**.




If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

## ✓ Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

## 2 Transfer images to the computer.

- Confirm that the name of the connected camera or removable disk is displayed as the "Source" on the "Options" title bar of Nikon Transfer 2 (①).
- Click **Start Transfer** (②).

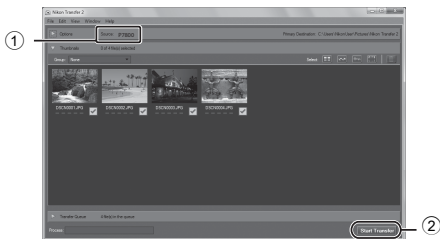

- At default settings, all the images on the memory card will be copied to the computer.
- Images are displayed in ViewNX 2 when transfer is complete.

## 3 Terminate the connection.

- If the camera is connected to the computer, turn the camera off and disconnect the USB cable.
- If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card and then remove the card from the card reader or card slot.



### Starting ViewNX 2 Manually

- **Windows:** Double-click the **ViewNX 2** shortcut on the desktop.
- **Mac OS:** Click the **ViewNX 2** icon in the Dock.
- Consult online help for more information on using ViewNX 2.



A series of horizontal dashed lines for handwriting practice, spanning the width of the page.



# Technical Notes and Index

<b>Caring for the Products .....</b>	<b>2</b>
The Camera.....	2
The Battery.....	3
The Battery Charger.....	4
Memory Cards.....	5
<b>Caring for the Camera .....</b>	<b>6</b>
Cleaning.....	6
Storage .....	7
<b>Troubleshooting.....</b>	<b>8</b>
<b>Specifications.....</b>	<b>16</b>
<b>Index.....</b>	<b>22</b>

# Caring for the Products

## The Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in "For Your Safety" (📖vii-ix) when using or storing the device.



### Do Not Drop

The product may malfunction if subjected to strong shock or vibration.



### Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.



### Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.



### Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.



### Keep away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.



### Do Not Point the Lens at Strong Light Sources for Extended Periods

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.



## **Turn the Product off Before Removing or Disconnecting the Power Source or the Memory Card**

Do not remove the battery while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.



## **Notes About the Monitor**

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

## **The Battery**

- Be sure to read and follow the warnings in “For Your Safety” (📖vii-ix) before use.
- Check the battery level before using the camera and replace or charge the battery if necessary. Do not continue charging once the battery is fully charged as this will result in reduced battery performance. Whenever possible, carry a fully charged spare battery when taking images on important occasions.
- Do not use the battery at ambient temperatures below 0°C (32°F) or above 40°C (104°F).
- Charge the battery indoors with an ambient temperature of 5°C to 35°C (41°F to 95°F) before use.
- When the battery temperature is between 0°C and 10°C (32°F to 50°F) or 45°C to 60°C (113°F to 140°F), the chargeable capacity may decrease.
- The battery is not charged at ambient temperatures below 0°C (32°F) or above 60°C (140°F).
- Note that the battery may become hot during use; wait for the battery to cool before charging. Failure to observe these precautions could damage the battery, impair its performance, or prevent it from charging normally.
- On cold days, the capacity of batteries tends to decrease. If an exhausted battery is used at a low temperature, the camera will not turn on. Be sure that the battery is fully charged before heading outside to take images in cold weather. Keep spare batteries in a warm place and exchange as necessary. Once warmed, a cold battery may recover some of its charge.
- Dirt on the battery terminals can prevent the camera from functioning. Should the battery terminals become dirty, wipe them off with a clean, dry cloth before use.


- If the battery will not be used for some time, insert it in the camera and completely exhaust it before removing it for storage. The battery should be stored in a cool location with an ambient temperature of 15°C to 25°C (59°F to 77°F). Do not store the battery in hot or extremely cold locations.
- Always remove the battery from the camera or battery charger when it is not being used. When inserted, minute amounts of current are drawn from the battery even when not in use. This may result in excessive draining of the battery and complete loss of function. Turning the camera on or off while the battery is exhausted can result in reduced battery life.
- Recharge the battery at least once every six months and completely exhaust it before returning it to storage.
- After removing the battery from the camera or battery charger, attach the included terminal cover to the battery and store it in a cool place.
- A marked drop in the time a fully-charged battery retains its charge, when used at room temperature, indicates that the battery needs to be replaced. Purchase a new EN-EL14 battery.
- Replace the battery when it no longer holds a charge. Used batteries are a valuable resource. Please recycle used batteries in accordance with local regulations.

## The Battery Charger

- Be sure to read and follow the warnings of "For Your Safety" (📖vii-ix) thoroughly before using the battery charger.
- The included battery charger is for use only with a Rechargeable Li-ion Battery EN-EL14.
- The MH-24 is compatible with AC 100-240 V, 50/60 Hz electrical outlets. When using in other countries, use a commercially available plug adapter as necessary. For more information about plug adapters, consult your travel agency.



## Memory Cards

- Use only Secure Digital memory cards. See "Approved Memory Cards" (p.25).
- Observe the precautions noted in the documentation included with your memory card.
- Do not affix labels or stickers to the memory card.
- Do not format the memory card using a computer.
- The first time you insert a memory card that has been used in another device into this camera, be sure to format it with this camera. We recommend formatting new memory cards with this camera before using them with this camera.
- Note that **formatting a memory card permanently deletes all images and other data on the memory card.** If there is data saved on the memory card that you wish to keep, copy that data to a computer before formatting.
- If the message **Card is not formatted. Format card?** is displayed when the camera is turned on, the memory card must be formatted. If there is data on the memory card that you do not want to delete, select **No** and press the  button. Copy that data to a computer before formatting. To format the memory card, select **Yes**.
- Observe the following precautions while formatting the memory card, saving and deleting images, and copying images to a computer, otherwise data or the memory card itself may be damaged.
  - Do not open the battery-chamber/memory card slot cover or remove the memory card or battery.
  - Do not turn off the camera.
  - Do not disconnect the AC adapter.

# Caring for the Camera

## Cleaning

Lens/ viewfinder	Avoid touching glass parts with your fingers. Remove dust or lint with a blower (typically a small device with a rubber bulb attached to one end that is pumped to produce a stream of air out the other end). To remove fingerprints or other stains that cannot be removed with a blower, wipe the lens with a soft cloth, using a spiral motion that starts at the center of them and working toward the edges. If this fails, clean the lens using a cloth lightly dampened with commercial lens cleaner.
Monitor	Remove dust or lint with a blower. To remove fingerprints and other stains, clean the monitor with a soft, dry cloth, being careful not to apply pressure.
Body	Use a blower to remove dust, dirt, or sand, then wipe gently with a soft, dry cloth. After using the camera at the beach or other sandy or dusty environment, wipe off any sand, dust, or salt with a dry cloth lightly dampened with fresh water and dry thoroughly. <b><i>Note that foreign matter inside the camera could cause damage not covered by the warranty.</i></b>

Do not use volatile organic solvents such as alcohol or thinner, chemical detergents, anticorrosive agents, or anti-fogging agents.

## Storage

Turn the camera off when not in use. Be sure that the power-on lamp is off before putting the camera away. Remove the battery if the camera will not be used for an extended period. Do not store the camera with naphtha or camphor moth balls, or in any of the following locations:

- Next to equipment that produces strong electromagnetic fields, such as televisions or radios
- Exposed to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $50^{\circ}\text{C}$  ( $122^{\circ}\text{F}$ )
- Places that are poorly ventilated or subject to humidity of over 60%








To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting the camera away again.









For storing the battery, follow the precautions in "The Battery" (🔋:3) in "Caring for the Products" (🔧:2).



# Troubleshooting

If the camera fails to function as expected, check the list of common problems below before consulting your retailer or Nikon-authorized service representative.






## Power, Display, Settings Issues







Problem	Cause/Solution	
The camera is on but does not respond.	<ul style="list-style-type: none"> <li>Wait for recording to end.</li> <li>If the problem persists, turn the camera off. If the camera does not turn off, remove and reinsert the battery or batteries or, if you are using an AC adapter, disconnect and reconnect the AC adapter. Note that although any data currently being recorded will be lost, data that have already been recorded will not be affected by removing or disconnecting the power source.</li> </ul>	 26,  104
Camera cannot be turned on.	<ul style="list-style-type: none"> <li>The battery is exhausted.</li> <li>The camera cannot be turned on if the battery-chamber/memory card slot cover is open.</li> </ul>	26 22
Camera turns off without warning.	<ul style="list-style-type: none"> <li>The camera automatically turns off to save power (auto off function).</li> <li>The camera or battery have become too cold and cannot operate properly.</li> <li>The inside of the camera has become hot. Leave the camera off until the inside of the camera has cooled, and then try turning it on again.</li> </ul>	27  3 –
The monitor or viewfinder is blank.	<ul style="list-style-type: none"> <li>The camera is off.</li> <li>The battery is exhausted.</li> <li>The camera has entered standby mode to save power. Press the power switch, shutter-release button or  button, or rotate the mode dial.</li> <li>You cannot turn on both the monitor and viewfinder at the same time. It may take a while to switch between the monitor and viewfinder.</li> <li>The camera and computer are connected via a USB cable.</li> <li>The camera and TV are connected via an audio video cable or HDMI cable.</li> <li>Interval timer shooting in progress.</li> </ul>	26 26 27 – 102, 106 102,  18  47






 







 



 


 



 
 
Problem	Cause/Solution	
Monitor is hard to see.	<ul style="list-style-type: none"> <li>The ambient light is too bright. Move to a darker place or use the viewfinder.</li> <li>Adjust the monitor brightness.</li> <li>The monitor is dirty. Clean the monitor.</li> </ul>	10 99,  75  6
Image in the viewfinder is difficult to see.	Adjust the viewfinder using the diopter adjustment control.	10
Date and time of recording are not correct.	<ul style="list-style-type: none"> <li>If the camera clock has not been set, the “Date not set” indicator flashes during shooting and movie recording. Images and movies saved before the clock is set are dated “00/00/0000 00:00” or “01/01/2013 00:00” respectively. Set the correct time and date from the <b>Time zone and date</b> option in the setup menu.</li> <li>The camera clock is not as accurate as ordinary watches or clocks. Periodically compare the time of the camera clock with that of a more accurate timepiece and reset as required.</li> </ul>	28, 99,  73 99,  73
No information displayed in monitor.	Shooting and photo information may be hidden. After confirming that the <b>Fn2 button</b> setting is set to <b>Show/hide info</b> , press the <b>Fn2</b> button until information is displayed.	11, 101,  92
<b>Print date</b> not available.	<b>Time zone and date</b> has not been set in the setup menu.	28, 99,  73
Date not imprinted on images even when <b>Print date</b> is enabled.	<ul style="list-style-type: none"> <li>The current shooting mode does not support <b>Print date</b>.</li> <li>A function that restricts the print date is enabled.</li> <li>The date cannot be imprinted on movies.</li> </ul>	99,  77 77 –
Screen for setting time zone and date is displayed when camera is turned on.	The clock battery is exhausted; all settings were restored to their default values.	28, 29
Camera settings reset.		

Problem	Cause/Solution	
<b>Reset file numbering</b> cannot be done.	Although a new folder is created in the internal memory or on the memory card by resetting file numbering, etc., if the sequential number of a folder name (which is not displayed on the camera) reaches the upper limit ("999"), reset is not possible. Change the memory card, or format the internal memory/memory card.	101,  94
Camera becomes hot.	The camera may become hot when used for an extended period of time to shoot movies or send images using an Eye-Fi card, or when used in a hot environment; this is not a malfunction.	—
Camera makes sound.	When <b>Autofocus mode</b> is set to <b>Full-time AF</b> or while in some shooting modes, the camera may produce an audible focusing sound.	74, 96














## Shooting Issues


Problem	Cause/Solution	
Cannot switch to shooting mode.	Disconnect the HDMI cable or USB cable.	102, 106,  18,  20
No image captured when the shutter-release button is pressed.	<ul style="list-style-type: none"> <li>When the camera is in playback mode, press the  button or shutter-release button.</li> <li>When menus are displayed, press the <b>MENU</b> button.</li> <li>The battery is exhausted.</li> <li>When the scene mode is <b>Night portrait</b> or <b>Backlighting</b> with <b>HDR</b> set to <b>Off</b>, raise the flash.</li> <li>If the flash mode icon flashes when the shutter-release button is pressed halfway, the flash is charging.</li> <li>When using the Speedlight, refer to the documentation provided with the Speedlight to check the settings.               <ul style="list-style-type: none"> <li>When shooting using Advanced Wireless Lighting photography, set the group setting to Group A. When using the built-in flash as the commander, set the channel of the flash unit to 3 CH.</li> <li>When the flash setting is enabled for a group other than Group A, disable the flash setting.</li> </ul> </li> </ul>	36  12 26 40, 43, 59 59   108

Problem	Cause/Solution	
Camera cannot focus.	<ul style="list-style-type: none"> <li>The subject is too close. Try shooting using the <b>Scene auto selector</b> or <b>Close-up</b> scene mode, or the close range only/macro close-up focus mode.</li> <li>Incorrect focus mode setting. Check or change the setting.</li> <li>The subject is hard to focus on.</li> <li>Set <b>AF assist</b> in the setup menu to <b>Auto</b>.</li> <li>Subject is not in focus area when the shutter-release button is pressed halfway.</li> <li>The focus mode is set to <b>MF</b> (manual focus).</li> <li>Turn the camera off and then on again.</li> </ul>	40, 41, 64, 65  64, 65  84 99,  80 34, 73  64, 66 26
Colored stripes appear in the monitor when shooting.	Colored stripes may appear when shooting subjects with repeating patterns (such as window blinds); this is not a malfunction. The colored stripes will not appear in captured images or recorded movies. However, when using <b>Continuous H: 120 fps</b> or <b>HS 480/4x</b> , the colored stripes may be seen in the captured images and recorded movies.	—
Images are blurred.	<ul style="list-style-type: none"> <li>Use the flash.</li> <li>Enable vibration reduction.</li> <li>Use <b>BSS</b> (Best Shot Selector) of <b>Continuous</b> in the shooting menu.</li> <li>Use a tripod to stabilize the camera when shooting (using the self-timer at the same time is more effective).</li> </ul>	59 99 73  62
Bright specks appear in images captured with flash.	The flash is reflecting off particles in the air. Set the flash mode setting to  (off).	59
Flash does not fire.	<ul style="list-style-type: none"> <li>The flash mode is set to  (off).</li> <li>A shooting mode where the flash cannot fire is selected.</li> <li>A function that restricts the flash is enabled.</li> <li>The built-in flash does not fire when an external flash unit (optional) is used.</li> <li>When shooting using Advanced Wireless Lighting photography, set the group setting to Group A. When using the built-in flash as the commander, set the channel of the remote flash unit to 3 CH. See the documentation provided with your Speedlight (external flash unit).</li> </ul>	59 67  77  108   108






Problem	Cause/Solution	
Digital zoom cannot be used.	<ul style="list-style-type: none"> <li>A function that restricts digital zoom is enabled.</li> <li><b>Digital zoom</b> is set to <b>Off</b> or <b>Crop</b> in the setup menu.</li> <li>Digital zoom cannot be used in the following situations. <ul style="list-style-type: none"> <li>When <b>Scene auto selector</b>, <b>Portrait</b>, <b>Night portrait</b>, <b>Easy panorama</b> in <b>Panorama</b> or <b>Pet portrait</b> is selected in scene mode</li> <li>When <b>Zoom exposure</b> is selected in special effects mode</li> </ul> </li> <li>When <b>Digital zoom</b> is set to <b>Crop</b> in the setup menu, digital zoom cannot be used in the following situations. <ul style="list-style-type: none"> <li>When <b>Image size</b> is  <b>4000×3000</b>,  <b>3264×2448</b>,  <b>3984×2656</b>,  <b>3968×2232</b> or  <b>3000×3000</b></li> <li>When <b>Movie options</b> is  <b>1080★/30p</b>/ <b>1080★/25p</b>,  <b>1080/30p</b>/ <b>1080/25p</b>,  <b>480/20</b>/ <b>480/100</b> <b>HS 480/4x</b>,  <b>720/60</b>/ <b>720/50</b> <b>HS 720/2x</b> or  <b>1080/15</b>/ <b>1080/25</b> <b>HS 1080/0.5x</b></li> <li>When <b>Continuous</b> is set to <b>Continuous H: 120 fps</b> or <b>Continuous H: 60 fps</b></li> </ul> </li> </ul>	77 99,  81  39  46  99,  81   29   30  73,  46
<b>Image size</b> not available.	<ul style="list-style-type: none"> <li>A function that restricts the <b>Image size</b> option is enabled.</li> <li>When the scene mode is set to <b>Easy panorama</b> in <b>Panorama</b>, the image size is fixed.</li> </ul>	77  44
No sound when shutter is released.	<b>Off</b> is selected for <b>Sound settings &gt; Shutter sound</b> in the setup menu. No sound is produced with some shooting modes and settings, even when <b>On</b> is selected.	77, 100,  83
AF-assist illuminator does not light.	<b>Off</b> is selected for the <b>AF assist</b> option in the setup menu. AF-assist illuminator may not light depending on the position of the focus area or the current scene mode, even when <b>Auto</b> is selected.	99,  80
Images appear smeared.	The lens is dirty. Clean the lens.	 6
Colors are unnatural.	White balance is not adjusted properly.	42, 72,  35
Randomly spaced bright pixels ("noise") appear in image.	The subject is dark, and the shutter speed is too slow or ISO sensitivity is too high. Noise can be reduced by: <ul style="list-style-type: none"> <li>Using the flash.</li> <li>Specifying a lower ISO sensitivity setting.</li> </ul>	59 72,  33








Problem	Cause/Solution	
Images are too dark (underexposed).	<ul style="list-style-type: none"> <li>The flash mode is set to  (off).</li> <li>The flash window is blocked.</li> <li>The subject is beyond the range of the flash.</li> <li>Adjust exposure compensation.</li> <li>Increase ISO sensitivity.</li> <li>The subject is backlit. Raise the flash, and set the scene mode <b>Backlighting</b> with <b>HDR</b> set to <b>Off</b> or set the flash mode setting to  (fill flash).</li> <li><b>On</b> is selected for <b>Built-in ND filter</b> in the shooting menu.</li> </ul>	59 32 59 69 72,  33 43, 59  74
Images are too bright (overexposed).	<ul style="list-style-type: none"> <li>Adjust exposure compensation.</li> <li>Use the <b>Built-in ND filter</b> setting in the shooting menu.</li> </ul>	69 74,  55
Unexpected results when flash set to  (auto with red-eye reduction).	When taking images with  (auto with red-eye reduction) or fill flash with red-eye reduction in <b>Night portrait</b> scene mode, In-Camera Red-Eye Fix may be applied to areas not affected by red-eye in rare cases. Use any scene mode other than <b>Night portrait</b> , and change the flash mode to any setting other than  (auto with red-eye reduction) and try taking an image again.	40, 59
Skin tones are not softened.	<ul style="list-style-type: none"> <li>In some shooting conditions, facial skin tones may not be softened.</li> <li>For images containing 4 or more faces, try using <b>Skin softening</b> in the playback menu.</li> </ul>	84  88,  11
Saving images takes time.	<p>It may take more time to save images in the following situations.</p> <ul style="list-style-type: none"> <li>When the noise reduction function is in operation</li> <li>When the flash mode is set to  (auto with red-eye reduction)</li> <li>When taking images in the following scene modes. <ul style="list-style-type: none"> <li><b>Hand-held</b> in <b>Night landscape</b></li> <li><b>HDR</b> set to other than <b>Off</b> in <b>Backlighting</b></li> <li><b>Easy panorama</b> in <b>Panorama</b></li> </ul> </li> <li><b>Continuous</b> in the shooting menu is set to <b>Continuous H: 120 fps</b> or <b>Continuous H: 60 fps</b></li> <li>When using smile timer while shooting</li> <li>When using Active D-Lighting while shooting</li> <li>When <b>Image quality</b> is set to <b>RAW (NRW)</b>, <b>RAW (NRW) + Fine</b> or <b>RAW (NRW) + Normal</b></li> </ul>	– 60  41 43 44 73,  46 63 74,  56  27

Problem	Cause/Solution	
A ring-shaped belt or rainbow-colored stripe appears in the monitor or images.	When shooting with backlighting or when a very strong light source (such as sunlight) is in the frame, a ring-shaped belt or rainbow-colored stripe (ghosting) may occur. Change the position of the light source, or frame the image so that the light source does not enter the frame, and try again.	–
Cannot select a setting/Selected setting is disabled.	<ul style="list-style-type: none"> <li>• Certain menu items are unavailable depending on the shooting mode. Menu items that cannot be selected are displayed in gray.</li> <li>• A function that restricts the selected function is enabled.</li> </ul>	12 –

## Playback Issues

Problem	Cause/Solution	
File cannot be played back.	<ul style="list-style-type: none"> <li>• This camera may not be able to play back images saved with another make or model of digital camera.</li> <li>• This camera cannot play back RAW (NRW) images or movies captured or recorded with another make or model of digital camera.</li> <li>• This camera may not be able to play back data edited on a computer.</li> <li>• File cannot be played back during interval timer shooting.</li> </ul>	– – – 73,  47
Cannot zoom in on image.	<ul style="list-style-type: none"> <li>• Playback zoom cannot be used with movies, small pictures, or images that have been cropped to a size of 320 x 240 or smaller.</li> <li>• This camera may not be able to zoom in on images captured with another make or model of digital camera.</li> </ul>	– –
Cannot record voice memo.	<ul style="list-style-type: none"> <li>• Voice memos cannot be attached to movies.</li> <li>• Voice memos cannot be attached to images taken using <b>Easy panorama</b>.</li> <li>• Voice memos cannot be attached to images captured with other cameras. Voice memos attached to images using another camera cannot be played back on this camera.</li> </ul>	– – 88,  67
Cannot edit image.	<ul style="list-style-type: none"> <li>• Some images cannot be edited. Images that have already been edited may not be edited again.</li> <li>• There is not enough free space in the internal memory or on the memory card.</li> <li>• This camera is unable to edit images captured with other cameras.</li> <li>• Editing functions used for images are not available for movies.</li> </ul>	44,  9 – 90,  9 –

Problem	Cause/Solution	
Images are not displayed on TV.	<ul style="list-style-type: none"> <li>• <b>Video mode</b> or <b>HDMI</b> is not correctly set in the <b>TV settings</b> setup menu.</li> <li>• The cables are connected to the HDMI mini connector and to the USB/audio/video output connector simultaneously.</li> <li>• The memory card contains no images. Replace the memory card. Remove the memory card to play back images from the internal memory.</li> </ul>	100,  86 102, 106,  18 24
Nikon Transfer 2 does not start when camera is connected to a computer.	<ul style="list-style-type: none"> <li>• The camera is off.</li> <li>• The battery is exhausted.</li> <li>• The USB cable is not correctly connected.</li> <li>• The camera is not recognized by the computer.</li> <li>• Confirm system requirements.</li> <li>• The computer is not set to start Nikon Transfer 2 automatically. For more information about Nikon Transfer 2, refer to help information contained in ViewNX 2.</li> </ul>	26 26 102, 106 — 104 106
Images to be printed are not displayed.	<ul style="list-style-type: none"> <li>• The memory card contains no images. Replace the memory card.</li> <li>• Remove the memory card to print images from the internal memory.</li> </ul>	24 25
Cannot select paper size with camera.	<p>The camera cannot be used to select the paper size in the following situations, even when printing from a PictBridge-compatible printer. Use the printer to select the paper size.</p> <ul style="list-style-type: none"> <li>• The printer does not support the paper sizes specified by the camera.</li> <li>• The printer automatically selects the paper size.</li> </ul>	 21,  22 —

# Specifications

## Nikon COOLPIX P7800 Digital Camera

Type	Compact digital camera
Number of effective pixels	12.2 million
Image sensor	1/1.7-in. type CMOS; approx. 12.76 million total pixels
Lens	NIKKOR lens with 7.1x optical zoom
Focal length	6.0-42.8 mm (angle of view equivalent to that of 28-200 mm lens in 35mm [135] format)
f/-number	f/2-4
Construction	13 elements in 10 groups (2 ED lens elements)
Digital zoom magnification	Still pictures: Up to 4x (angle of view equivalent to that of approx. 800 mm lens in 35mm [135] format) Movies: Up to 2x (angle of view equivalent to that of approx. 400 mm lens in 35mm [135] format)
Vibration reduction	Lens shift
Autofocus (AF)	Contrast-detect AF
Focus range	<ul style="list-style-type: none"> <li>• [W]: Approx. 50 cm (1 ft 8 in.) - <math>\infty</math>, [T]: Approx. 80 cm (2 ft 8 in.) - <math>\infty</math></li> <li>• Macro close-up mode: Approx. 2 cm (0.8 in.) (at a wide-angle zoom position) - <math>\infty</math></li> </ul> (All distances measured from center of front surface of lens)
Focus-area selection	Face priority, auto (9-area automatic selection), center (wide, normal), manual with 99 focus areas, subject tracking, target finding AF
Viewfinder	Electronic viewfinder, 0.5 cm (0.2-in.) approx. 921k-dot LCD with the diopter adjustment function ( $-3 - +1 \text{ m}^{-1}$ )
Frame coverage (shooting mode)	Approx. 100% horizontal and 100% vertical (compared to actual picture)
Frame coverage (playback mode)	Approx. 100% horizontal and 100% vertical (compared to actual picture)
Monitor	7.5 cm (3-in.), approx. 921k-dot (RGBW), wide viewing angle TFT LCD with anti-reflection coating and 6-level brightness adjustment, vari-angle TFT LCD
Frame coverage (shooting mode)	Approx. 100% horizontal and 100% vertical (compared to actual picture)
Frame coverage (playback mode)	Approx. 100% horizontal and 100% vertical (compared to actual picture)

<b>Storage</b>		
Media		Internal memory (approx. 86 MB) SD/SDHC/SDXC memory card
File system		DCF, Exif 2.3 and DPOF compliant
File formats		Still pictures: JPEG, RAW (NRW) (Nikon's own format) Sound files (voice memo): WAV Movies: MOV (Video: H.264/MPEG-4 AVC, Audio: AAC stereo)
Image size (pixels)		<ul style="list-style-type: none"> <li>12 M <b>4000×3000</b> • 8 M <b>3264×2448</b></li> <li>4 M <b>2272×1704</b> • 2 M <b>1600×1200</b></li> <li>VGA <b>640×480</b> • 3:2 <b>3984×2656</b></li> <li>16:9 9M <b>3968×2232</b> • 1:1 <b>3000×3000</b></li> </ul>
ISO sensitivity (Standard output sensitivity)		<ul style="list-style-type: none"> <li>ISO 80 - 1600</li> <li>ISO 3200, Hi 1 (equivalent to ISO 6400) (available when using <b>P</b>, <b>S</b>, <b>A</b> or <b>M</b> mode)</li> </ul>
<b>Exposure</b>		
Metering mode		Matrix, center-weighted, or spot. Also when <b>AF area mode</b> is set to <b>Manual</b> , the AF area can be coupled to the metering range using <b>Focus-coupled metering</b> .
Exposure control		Programmed auto exposure with flexible program, shutter-priority auto, aperture-priority auto, manual, exposure bracketing (Tv, Av, Sv) enabled, exposure compensation (in steps of 1/3 EV in the range of +/-3.0 EV for still pictures and +/-2.0 EV for movies) enabled
<b>Shutter</b>		
Speed		<ul style="list-style-type: none"> <li>1/4000 * - 1 s</li> <li>1/4000 * - 60 s (when ISO sensitivity is set to 80 - 400 in <b>M</b> mode)</li> </ul> <p>* When the aperture value is set to f/4.5 - f/8 (wide-angle position) or the value is set to f/7.1 - f/8 (telephoto zoom position)</p>
Aperture		Electronically-controlled 7-blade iris diaphragm
Range		13 steps of 1/3 EV (W) ( <b>A</b> , <b>M</b> mode)
Self-timer		Can be selected from 10 s, 2 s and 1 s
<b>Built-in flash</b>		
Range (approx.) (ISO sensitivity: Auto)		[W]: 0.5 - 10 m (1 ft 8 in. - 32 ft) [T]: 0.5 - 5.5 m (1 ft 8 in. - 18 ft)
Flash control		TTL auto flash with monitor preflashes; manual flash control available
Flash exposure compensation		In steps of 1/3 EV in the range between -2 and +2 EV
Accessory shoe		ISO 518 hot-shoe with sync and data contacts and safety lock

Nikon Creative Lighting System	<ul style="list-style-type: none"> <li>• i-TTL flash control support in combination with Nikon Creative Lighting System-compatible Speedlights (only Standard i-TTL flash control is supported during spot metering mode).</li> <li>• Flash Color Information Communication is supported.</li> <li>• Advanced Wireless Lighting is supported by setting SB-910, SB-900, SB-800 or SB-700 to master flash or by setting SU-800 to the Commander mode (the remote flash setting is only applicable to Group A).</li> <li>• Advanced Wireless Lighting is supported by setting the built-in flash to the Commander mode (only applicable to Group A and fixed at 3 CH).</li> </ul>
Interface	Hi-Speed USB
Data transfer protocol	MTP, PTP
Video output	Can be selected from NTSC and PAL
HDMI output	Can be selected from Auto, 480p, 720p, and 1080i
I/O terminal	<ul style="list-style-type: none"> <li>• Audio/video output; digital I/O (USB)</li> <li>• HDMI mini connector (Type C) (HDMI output)</li> <li>• External microphone connector (stereo mini-pin jack (3.5 mm diameter), plug-in power type)</li> <li>• Accessory terminal</li> </ul>
Supported languages	Arabic, Bengali, Bulgarian, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Marathi, Norwegian, Persian, Polish, Portuguese (European and Brazilian), Romanian, Russian, Serbian, Spanish, Swedish, Tamil, Telugu, Thai, Turkish, Ukrainian, Vietnamese
Power sources	<ul style="list-style-type: none"> <li>• One Rechargeable Li-ion Battery EN-EL14 (included)</li> <li>• AC Adapter EH-5b (used in combination with the Power Connector EP-5A) (available separately)</li> </ul>
Battery life <sup>1</sup>	
Still pictures	Approx. 350 shots when using EN-EL14
Movie recording (actual battery life for recording) <sup>2</sup>	<p>Approx. 1 h 15 min when recording in NTSC mode using EN-EL14</p> <p>Approx. 1 h 20 min when recording in PAL mode using EN-EL14</p>
Tripod socket	1/4 (ISO 1222)
Dimensions (W × H × D)	Approx. 118.5 × 77.5 × 50.4 mm (4.7 × 3.1 × 2.0 in.) (excluding projections)
Weight	Approx. 399 g (14.1 oz) (including battery and SD memory card)

**Operating environment**

<b>Temperature</b>	0°C - 40°C (32°F - 104°F)
<b>Humidity</b>	85% or less (no condensation)

- Unless otherwise stated, all figures assume a fully-charged battery and an ambient temperature of 23 ±3°C (73.4 ±5.4°F) as specified by the Camera and Imaging Products Association (CIPA).
- <sup>1</sup> Battery life may vary depending on conditions of use, such as the interval between shots or the length of time that menus and images are displayed.
  - <sup>2</sup> Individual movie files cannot exceed 4 GB in size or 29 minutes in length. Recording may end before this limit is reached if camera temperature becomes elevated.

**Rechargeable Li-ion Battery EN-EL14**

<b>Type</b>	Rechargeable lithium-ion battery
<b>Rated capacity</b>	DC 7.4 V, 1030 mAh
<b>Operating temperature</b>	0°C - 40°C (32°F - 104°F)
<b>Dimensions (W × H × D)</b>	Approx. 38 × 53 × 14 mm (1.5 × 2.1 × 0.6 in.)
<b>Weight</b>	Approx. 48 g (1.7 oz) (excluding terminal cover)

**Battery Charger MH-24**

<b>Rated input</b>	AC 100 - 240 V, 50/60 Hz, 0.2 A max.
<b>Rated output</b>	DC 8.4 V, 0.9 A
<b>Supported rechargeable battery</b>	Rechargeable Li-ion Battery EN-EL14
<b>Charging time</b>	Approx. 1 hour and 30 minutes when no charge remains
<b>Operating temperature</b>	0°C - 40°C (32°F - 104°F)
<b>Dimensions (W × H × D)</b>	Approx. 70 × 26 × 97 mm (2.8 × 1.0 × 3.8 in.) (excluding plug adapter) For Argentina: Approx. 70 × 68 × 104 mm (2.8 × 2.7 × 4.1 in.)
<b>Weight</b>	Approx. 89 g (3.1 oz) (excluding plug adapter) For Argentina: Approx. 125 g (4.5 oz)

**Specifications**

- Nikon will not be held liable for any errors this manual may contain.
- The appearance of this product and its specifications are subject to change without notice.

## AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.

See <http://www.mpegla.com>.

## FreeType License (FreeType2)

Portions of this software are copyright © 2013 The FreeType Project (<http://www.freetype.org>). All rights reserved.

## MIT License (HarfBuzz)

Portions of this software are copyright © 2013 The HarfBuzz Project (<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.



## Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.
- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.
- PictBridge is a trademark.
- HDMI, HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

## HDMI

- Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

# Index

## Symbols

**AE/AF-L** ..... 6

**AE-L** AE-L/AF-L button..... 4, 85

**[AF]** AF area mode.... 58, 73, 49

**A** Aperture-priority auto mode

..... 49, 51

**[OK]** Apply selection button..... 6

**[Auto]** Auto mode ..... 30, 38

**[Delete]** Delete button..... 37, 98, 100,

8, 67, 88

**[Flash]** Flash mode ..... 58, 59

**[Flash Pop-Up]** Flash pop-up control..... 59

**[Focus]** Focus mode ..... 58, 64

**Fn1** Function 1 button ..... 4, 74,

100, 57, 90, 91,

92

**Fn2** Function 2 button

..... 5, 7, 11, 101, 92

**M** Manual mode ..... 49, 51

**MENU** Menu button

..... 12, 73, 88, 96, 99

**[Monitor]** Monitor button ..... 10

**[Movie Custom Setting]** CSM Movie custom setting mode... 91

**[Movie]** Movie mode..... 91

**[Playback]** Playback button .... 5, 6, 36, 97

**[Playback Zoom]** Playback zoom ..... 86

**P** Programmed auto mode.... 49, 51

**[Quick Menu]** Quick menu button ..... 70, 95

**SCENE** Scene mode..... 39

**[Self-Timer/Smile timer/Remote control]**

..... 58, 62, 63, 99,

78, 106

**S** Shutter-priority auto mode

..... 49, 51

**EFFECTS** Special effects mode ..... 46

**T** (Telephoto) ..... 33

**[Thumbnail]** Thumbnail display..... 87

**U1, U2 and U3** User settings

modes..... 55

**W** (Wide-angle) ..... 33

**.JPG**..... 103

**.MOV** ..... 103

**.NRW** ..... 103

**.WAV** ..... 103

**A**

AC adapter..... 102, 104

Accessory shoe ..... 1, 108

Accessory Shoe Cover .... 1, 108

Accessory terminal

..... 2, 101, 95, 113

Active D-Lighting ..... 74, 56

AE/AF lock button.... 85, 100, 89

AF area mode..... 58, 73, 49

AF assist ..... 99, 80

Aperture value..... 49

Aperture-priority auto mode.... 49, 51

Audio video cable

..... 103, 18, 104

Audio/video-in jack..... 18

Auto bracketing..... 70, 72, 38

Auto flash ..... 60

Auto off..... 27, 100, 84

Auto with red-eye reduction .... 60, 61











Autofocus ..... 65, 74, 84, 96,

53, 71














Autofocus mode



..... 65, 74, 96, 53, 71

## B





 







Backlighting 	43
Battery.....	20, 22,  18
Battery charger.....	20,  19
Battery level indicator.....	26
Battery-chamber/memory card slot cover.....	22, 24
Best Shot Selector.....	42,  46
Black and white copy 	42
Black border.....	89,  14
Brightness.....	99,  75
BSS.....	42,  46
Built-in ND filter.....	74, 97,  55
Button sound.....	 83

## C











Calendar display.....	87
Choose key picture.....	89,  69
Close range only.....	65
Close-up 	41
CLS.....	 108
Color temperature.....	 36
Command dial.....	3, 6, 49
Command dial rotation... ..	100,  87
Commander mode ... ..	60, 75,  59
Computer.....	103, 106
Continuous.....	73,  46
Contrast.....	 42
COOLPIX Custom Picture Control .....	73, 96,  44
COOLPIX Picture Control .....	70, 72, 95,  40
Copy.....	89,  68
Crop.....	86,  17
Custom Picture Control .....	73, 96,  44

Customize command dials .....	100,  87
Customize My Menu ....	101,  93

## D




















































Date and time.....	28, 99,  73
Daylight saving time ....	28,  74
Delete .....	37, 88, 98,  8,  65,  67
Delete button options.....	100,  88
Digital zoom.....	33, 99,  81
Diopter adjustment control.....	10
Direct Print.....	103,  20
Distortion control .....	74,  55
D-Lighting.....	88,  10
DPOF printing.....	 24
DSCN.....	 103

## E






 







Easy panorama.....	44,  2
Editing movies.....	 25
Editing still images.....	 9
Exposure compensation.....	69
Exposure compensation dial.....	69
Exposure mode .....	49
Extension .....	 103
External flash unit ....	 59,  108
External mic sensitivity....	100,  86
External microphone.....	 104
Extracting still images.....	 26
Eye-Fi upload .....	101,  96
Eyelet for camera strap .....	8

## F

Face detection .....	83
Face priority .....	 49
Fast motion movies ....	 31,  32
File name .....	 103

Fill flash.....	60	
Filter effects .....	88,  12,  42	
Fireworks show 	42	
Firmware version.....	101,  98	
Fixed aperture.....	99,  82	
Flash .....	58, 59	
Flash control.....	101,  97	
Flash control mode.....	 59	
Flash exp. comp.....	74,  54	
Flash mode .....	58, 59	
Flash off.....	60	
Fn1 + command dial... 4, 100,  91		
Fn1 + selector dial .....	4, 101,  91	
Fn1 + shutter button... 4, 100,  90		
Fn1 guide display..... 4, 101,  92		
Fn2 button .....	101,  92	
Focal length		
.....	74, 75,  57,  16	
Focus.....	34, 76, 82, 93,  49,  53,  71	
Focus area		
.....	16, 34, 45, 82,  49	
Focus indicator .....	15, 34	
Focus lock.....	85	
Focus mode.....	58, 64	
Focus-coupled metering... 75,  58		
Food 	42	
Format.....	24, 100,  85	
Format memory cards		
.....	24, 100,  85	
Format the internal memory		
.....	100,  85	
Framing grid.....	16,  75	
FSCN.....	 103	
Full-frame playback		
.....	18, 36, 86, 87	
Full-time AF		
.....	74, 96,  53,  71	
Functions that cannot be used simultaneously .....	77	
<b>G</b>		
GPS unit.....	 105,  113	
<b>H</b>		
HDMI .....	 86	
HDMI device control .....	 86	
HDMI mini connector.....	 18	
HDR .....	43	
High-speed continuous .....	 47	
Histogram.....	19, 99,  75	
HS movie.....	 31,  32	
<b>I</b>		
Identifier .....	 103	
Image copy .....	89,  68	
Image quality .....	70, 72,  27	
Image selection screen.....	90	
Image sharpening.....	 42	
Image size .....	70, 72,  29	
Infinity.....	65	
Initial monitor display.....	76	
Internal memory indicator.....	26	
Interval timer shooting .....	 47	
ISO sensitivity....	70, 72, 95,  33	
ISO sensitivity step value ... 99,  80		
<b>L</b>		
Language.....	100,  85	
Lens.....	 6,  16	
Lens cap .....	8	
Lens hood .....	 104	
Lens ring.....	1,  105	
Li-ion rechargeable battery		
.....	20, 22,  19	

## M

M exposure preview.....	74, 	58
Macro close-up.....		65
Main command dial.....	3, 6,	49
Manual flash.....		60
Manual focus.....	65,	66
Manual mode.....	49,	51
Memory capacity.....	26,	91, 92
Memory card.....	24,	25
Memory card slot.....		24
Metering.....	73, 	45
MF distance indicator units.....		101, 
Microphone.....	91, 	67
Minimum shutter speed.....		33
Mode dial.....		30
Monitor.....	9, 11, 14,	 6
Monitor settings.....	99, 	75
Movie and movie custom setting menus.....		96, 
Movie custom setting mode.....		91
Movie length.....		92
Movie mode.....		91
Movie options.....	95, 	30
Movie playback.....		97
Movie recording.....		91
Movie recording time remaining.....		91
Multi selector.....	3, 6,	58
Multi selector right press....	100, 	88
Multi-shot 16.....		46
Museum 		42
My Menu.....	72, 101, 	93

## N

Night landscape 		41
Night portrait 		40














 





## Nikon Creative Lighting System

.....		108, 	18
Noise reduction filter....	74, 	54	
Number of exposures remaining.....		26, 	28

## O

Optical zoom.....		33
Optional accessories.....		104

## P

Panorama assist.....	44, 	5
Panorama 		44
Party/indoor 		41
Pet portrait 		45
Photo info.....	75, 99, 	75
PictBridge.....		103, 
Picture Control ...	70, 72, 95, 	40
Playback.....	36, 97, 	67
Playback menu.....		88
Playback mode.....		36
Playback zoom.....		86
Playback/menus.....		75
Power.....	26,	28
Power connector.....		104
Power supply.....		95
Power switch/power-on lamp.....		2
Preset manual.....		37
Pressing halfway.....	4, 34,	35
Print.....		20, 
Print date.....	99, 	77
Print order.....	88, 	62
Print order date option.....		63
Printer.....	102, 	20
Programmed auto mode ....	49,	51
Protect.....	88, 	66

## Q

- Quick adjust..... 42
- Quick menu ..... 70, 95, 27
- Quick retouch..... 88, 10

## R

- RAW (NRW) images..... 27
- RAW (NRW) processing.... 89, 15
- Rear-curtain sync..... 60
- Rechargeable battery ..... 20
- Record orientation ..... 100, 83
- Remote control  
..... 58, 105, 106, 107
- Reset all ..... 101, 98
- Reset file numbering.... 101, 94
- Reset user settings ..... 57
- Reverse indicators..... 101, 97
- Rotary multi selector... 2, 3, 6, 58
- Rotate image ..... 88, 66
- Rotate tall..... 100, 84
- RSCN..... 103

## S


- Saturation..... 42
- Save user settings ..... 55
- Scene auto selector 40
- Scene mode ..... 39
- Selecting images..... 90
- Self-timer ..... 58, 62, 76
- Self-timer lamp ..... 62, 63
- Self-timer: after release.... 99, 78
- Sequence ..... 37, 77, 68
- Sequence display options  
..... 89, 69
- Setup menu..... 99, 72
- Shooting ..... 30
- Shooting information..... 11, 14
- Shooting menu..... 73, 44

## Shooting mode




- ..... 31, 75, 96, 70
- Shutter sound..... 83
- Shutter speed..... 49, 53
- Shutter-priority auto mode..... 49, 51
- Shutter-release button.... 4, 7, 34, 35
- Single ..... 73, 46
- Single AF .... 74, 96, 53, 71
- Skin softening..... 84, 88, 11
- Slide show ..... 88, 64
- Slow motion movies... 31, 32
- Slow sync..... 60
- Small picture..... 88, 13
- Smile timer ..... 58, 63
- Sound settings ..... 100, 83
- Special effects mode ..... 46
- Specialized menu for U1, U2 or U3  
..... 55, 75
- Speedlight..... 108
- Sports ..... 40
- SSCN..... 103
- Startup zoom position.... 74, 57
- Straighten..... 89, 15
- Sub-command dial..... 3, 6, 49
- Subject tracking ..... 50, 51
- Switching among tabs..... 13

## T









- Target finding AF..... 82, 51
- Telephoto..... 33
- Thumbnail display ..... 87
- Time difference..... 74
- Time zone..... 28, 74
- Time zone and date.... 28, 99, 73
- Tone level ..... 19
- Tone level information  
..... 11, 19, 75

Toning.....	 43
TV .....	102,  18
TV settings .....	100,  86





## U

USB cable .....	103, 106,  20
USB/audio/video output connector .....	102, 106,  18,  20
Use GPS to set clock.....	 95
User settings modes .....	55

## V

Vibration reduction.....	99,  79
Video mode .....	 86
View grid.....	 41
Viewfinder.....	10, 32,  6
ViewNX 2 .....	104
Virtual horizon.....	16, 99,  75
Virtual horizon display .....	76,  75
Voice memo .....	88,  67
Volume .....	97,  67

## W

Welcome screen.....	99,  72
White balance ....	70, 72, 95,  35
Wide-angle.....	33
Wind noise reduction....	97,  72
Wireless mobile adapter.....	 105

## Z

Zoom .....	33
Zoom control .....	6, 33
Zoom memory .....	74,  57
Zoom speed.....	99,  82

No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.