

monster

household appliances

- Instruction Manual
- Manual de Instrucciones



**MONSTER 1200
SANITIZING STEAM CLEANER
SUPERCLEAN SC20**



Index	Page
Important safeguards	4
Handy steam generator.....	5
Description	6
Instructions for use	6
Assembly and Use	7
Starting the Steam Cleaner	8
Refilling the Water Tank	9
Sanitizing system.....	9
Maintenance.....	10
Technical specifications	11
Troubleshooting guide	11
Electrical requirements	11
Guarantee and service information	11
After sales service returns form - guarantee slip	11

SUPERCLEAN CONCEPT

The by-product of many years of research, the Superclean family of products are designed to combine maximum cleaning and true sanitizing capability in one easy step. By combining the purity and performance of eco friendly steam with the unique properties of our eco friendly Clean Blast formula results in appliances that give you extreme clean faster and easier than ever before.

IMPORTANT SAFEGUARDS

 
When using your Steam Cleaner, basic safety precautions should always be observed, including the following:

1. Read all instructions before using your Steam Cleaner.
 2. Use the system only for its intended use.
 3. To protect against a risk of electric shock, do not immerse any part of the system in water or other liquids.
 4. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
 5. **Do not** allow cord to touch hot surfaces. Let the system cool completely before putting away or opening water tank (removing the safety cap). Wrap cord loosely around integral fold-out cord winders when storing.
 6. Always disconnect system from electrical outlet when filling with water or emptying and when not in use. Always turn the safety cap slowly when opening the water tank . This will allow any remaining steam to escape gradually.
 7. **Do not** operate the system with a damaged cord or plug, or if the appliance or any other part of the system has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the Steam Cleaner. Return the system to the seller or contact one of our licensed servicing centers for examination and repair. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the Steam Cleaner is used.
 8. **Do not** leave the system in use without surveillance and presence of children.
 9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when draining unit after use as there may be hot water in the unit. Never direct steam at any person. The steam is very hot and can cause burns.
 10. **Do not** operate in the presence of explosive and/or flammable fumes.
 11. This appliance is intended only for household use. Follow all user instructions in this manual.
 12. Never use any chemicals or substance other than tap water in the machine. Use of chemicals may damage the machine. Use of chemicals will automatically void your warranty.
 13. Appliance has to work on flat surfaces.
 14. Never direct steam at any electrical appliance or appliance including electrical parts (TV, radio, electrical oven, ...).
- To reduce the risk of fire, electric shock, or injury:**
- **Do not** leave the Steam Cleaner plugged in when unattended. Unplug the electrical cord when not in use and before servicing or refilling water tank.
 - Use only as described in this manual. Use only manufacturer's recommended accessories.
 - **Do not** pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
 - **Do not** use extension cords or outlets with inadequate current carrying capacity.
 - Turn off all controls as applicable before unplugging from electrical outlet.
 - **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
 - **Do not** handle plug or steam cleaner with wet hands or operate without shoes.
 - **Do not** put any objects into openings. Do not use with any opening blocked.
 - Store your appliance indoors in a cool, dry area.
 - Keep your work area well lit.
 - **When in use, never turn the appliance over or on its side. Never direct steam towards people, animals or plants.**
 - **Do not** immerse the steam cleaner into water or other liquids. Always unplug the power cord from the electrical socket when filling the steam cleaner.
 - **Do NOT add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use.** Use tap water or distilled/purified water if the tap water in your area is very hard.

SAVE THESE INSTRUCTIONS

HANDY STEAM CLEANER

Model: Monster Superclean SC20

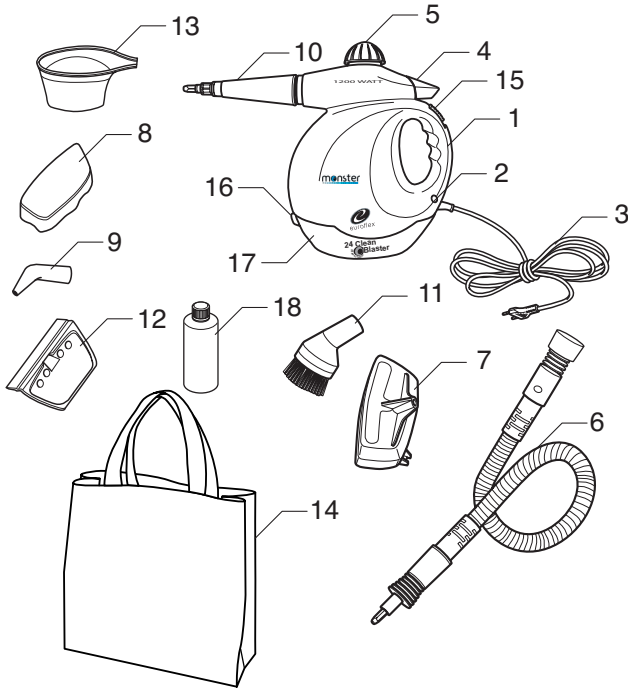

KEY FEATURES

1. Body.
2. Resistance indicator light on.
3. Power Cord.
4. Steam Lever.
5. Boiler cap.
6. Extension Hose - for increasing the flexibility of the appliance.(*)
7. Upholstery Nozzle - the flat surface covers wide areas.(*)
8. Cloth Cover - the fabric cover is best for stain removal from upholstery and carpets.(*)
9. Angled Nozzle - attaches to (10) for hard to reach areas.(*)
10. Bayonet Tip - Standard attachment with fine point spray end.
11. Nylon Round Brush - For Smaller areas and appliances. Ideal for detail work and scrubbing.(*)
12. Window Squeegee - attaches to the Upholstery Nozzle for cleaning glass.(*)
13. Water refill - for filling the appliance with water.
14. Tote Bag. (*)
15. Clean Blast solution release button
16. Clean Blast solution container release button
17. Clean Blast solution container
18. Clean Blast solution bottle.

(*) These accessories are available and OPTIONAL depending on the model purchased.

HANDY STEAM CLEANER

DESCRIPTION

“Congratulations on your purchase of the MONSTER 1200 SANITIZING STEAM CLEANER. This product has many unique and patented features that will change the way you clean. Its versatile design lets you clean with the eco friendly power of EXTREME steam and, at your demand, instantly integrate our special CLEAN BLAST formula into the steam that results in true on contact sanitizing of almost any surface.

INSTRUCTIONS FOR USE

The Steam Cleaner can clean and sanitize all types of surfaces designed to withstand high temperatures such as marble, ceramic, stone sealed wood, sealed grout, cook tops, window, mirrors, etc. It is not recommended for use on unsealed wood surfaces, cold glass and soft plastic areas.

WARNING: On surfaces that have been treated with wax, the wax may be removed by the heat and steam action. Do not use on unsealed wood floors or direct steam on any wood floor for an extended period of time. This could cause the wood grain to rise. It is therefore, recommended that you check the use and care instructions of any surface from the manufacturer to ensure suitability to steam cleaning and that sample cleansing be carried out on an isolated area of the desired surface. In case steam is used to smooth wrinkled fabric or clothing, do not direct steam at the body.

 
ASSEMBLY AND USE

WARNING: The steam lever must be held in operation until all steam pressure has been released prior to removing the Water Tank Cap. Please also note that the unit is not to be plugged into an electrical outlet until step 8.

1. Press the Water tank cap and Unscrew it to the empty water tank. Using the measuring cup fill tank with one measure of water equivalent to 300 ml (10 ounce liquid).


NOTE: Do not overfill, to reduce the risk that water coming out.

2. Re-seal the water tank by screwing the Water Tank Cap back into place.

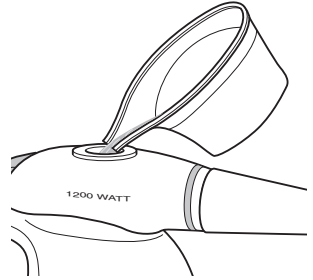



USE OF ACCESSORIES

 Before using the Power Steamer, the attachment of an accessory will be required in conjunction with the type of surface to be cleaned.

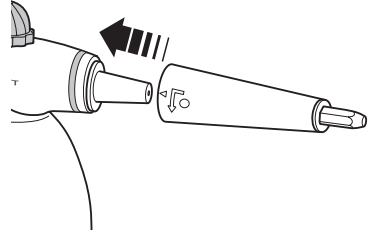

3. Please put the Spray-Nozzle and the slot of the machine in order, along the direction arrow, and insert it, then clockwise turn 90°. To remove the Spray-Nozzle, please operate reversely.

  4. To use the Flexible Hose, the Jet Nozzle or the Fabric Accessory must be attached onto the end using the same process as outlined in step 3.

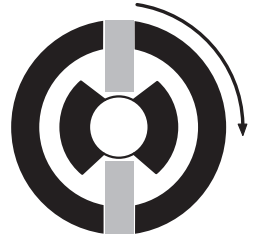


Bayonet Tip

Handy to use on floors and edges



Upholstery Nozzle (*)

 Great for steaming wrinkles and creases out of fabrics

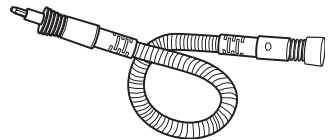


Extension Hose (*)

Recommended to use for hard to reach areas.

(*) "Optional Accessories available with some kits."

ASSEMBLY AND USE

 5. The Round Brush and the Curved Nozzle Accessory can be attached to end of the Jet Nozzle by pushing the accessory on using the hexagonal alignment as a guide.

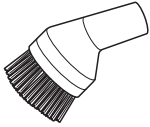


Nylon Round Brush (*)
Round Brush recommended for sealed grout, cook tops and bench tops.



Angled Nozzle (*)
Curved Nozzle recommended for hard to reach area such as window sills and toilet


6. To use the Window Cleaning attachment it must be clipped into the Fabric Accessory by hooking the two hinges onto the tabs and lifting the window cleaner around to the top of the fabric tool and clipping the latch onto the fabric cleaner to secure in place. To remove the window cleaner, simply lift the latch to unclip and separate.

 WARNING: Using window cleaner on cold glass may cause the glass to break. Proceed with caution when carrying out this operation.

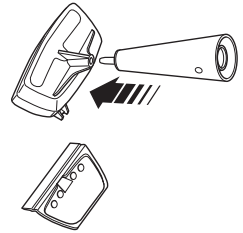

Window Squeegee

 7. To use the Fabric Accessory, stretch the Cloth Covering to fit over the Fabric Accessory. It is recommended that the Fabric Accessory be attached to the flexible hose for maximum accessibility for clothing, upholstery and window furnishings.

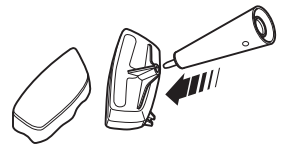

Cloth Cover (*)

(*) "Optional Accessories available with some kits."

STARTING THE STEAM CLEANER

8. Plug the power cord into an electrical outlet. Resistance indicator light goes on.
9. After 3-4 minutes the appliance is ready to generate the steam..
WARNING: Do not leave the steam cleaner unattended while waiting for steam.
10. Press the Steam Lever to emit the steam and begin passing slowly over the surfaces intended for cleaning. For disinfecting areas, hold the steam cleaner no more than 1 inch away from the surface and pass over slowly until entire area is covered.

ASSEMBLY AND USE

FURTHER WATER TANK FILLING

 
11. Unplug the power cord from electrical outlet.
12. Press and hold Steam Lever until all pressure has been released.
13. Before opening Water Tank Cap it is important to wait approximately 3 minutes for the appliance to cool down. Slowly turn the cap, only a half turn, and wait for the hissing sound (if any) to completely stop. The hissing sound may be present due to residual pressure not released while holding the steam lever.
14. Carefully press the cap and unscrew it and follow process outlined in step 1 and 2.

CLEAN BLAST SYSTEM


This appliance is equipped with an important function that ensure perfect clean blast while cleaning all surfaces. Monster Superclean combines the power of steam cleaning with the efficacy of the product "clean blast" sanitizing.

The clean blast solution is placed into the box.


Release the clean blast solution container.

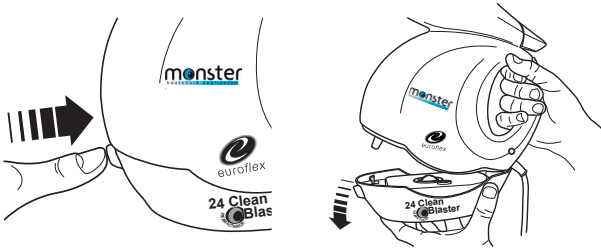

 Unscrew the cap of the clean blast tank and fill with bottle contents.

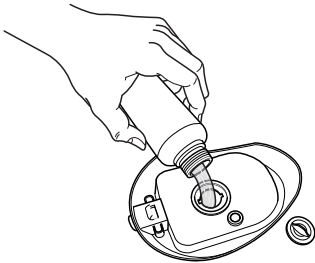

 To release the solution and combine with the steam, press the button on the handle as shown on the picture.

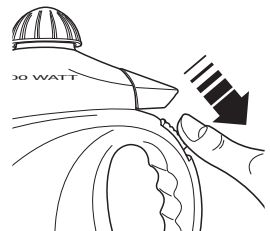

MAINTENANCE

NOTE: Please ensure the steam cleaner has been unplugged from the power source and cooled down before any cleaning and maintenance is carried out.

15. Always empty any excess water from water tank after each use. This operation will prolong the life of your appliance.
16. Always ensure the unit has cooled before putting it away in a dry, cool place.
17. To ensure the highest level of operation over a long period of time, it is recommended that the water tank be rinsed out with water at least once a month to clean any water calcification accumulated. **Do not use vinegar or other substances to remove lime scale deposits.**
18. To clean fill with one measure of water, replace cap and shake unit to loosen any lime scale deposits. Remove cap and empty water from tank.
WARNING: Do not immerse the steam cleaner in water.
19. **DO NOT USE WITH ANY OTHER SANITIZING OR CLEANING AGENTS. THIS PRODUCT IS DESIGNED TO BE USED WITH CLEAN BLAST ONLY.**

TECHNICAL SPECIFICATIONS

Voltage:	120V - 60 Hz
Power:	1200 Watt
Tank capacity:	0,3 L (10 once liquid)
Cable:	5 m

TROUBLE SHOOTING GUIDE	
PROBLEM	POSSIBLE SOLUTION
Unit will not switch on.	Ensure the power cord has been plugged into a power socket and the outlet is switch ON. Check the water tank is filled correctly Try another power outlet.
Unit is not producing steam.	Ensure that the water tank has been filled with the correct level of water. Ensure the unit is plugged into a power outlet. Press Steam Lever. Ensure there is no blockage, try changing accessory.
Unit sprays out water from nozzle.	Level in water tank may be too high. Check water tank and do not overfill max 300ml (10 once liquid). Hold in upright position. Do not turn the steamer on its side. Unit not fully heated. Allow the unit time to heat the water.
Accessories, once attached do not stay on.	Check that enough force has been applied to ensure the accessories are secured. Read over accessory installation steps.

IMPORTANT

Electrical Requirements:

Please ensure that the voltage shown on the rating plate of your appliance corresponds with your household electricity supply which must be A.C. (alternating current).

Appliances supplied with a fitted plug:

If the electrical sockets in your home are not suitable for the plug fitted to this appliance, the plug should not be removed. Use a standard adapter.

Note: Any plug detached from the cable must be destroyed because a plug with a damaged cable can cause serious injury or death if inserted in the power outlet.

GUARANTEE AND SERVICE INFORMATION

This guarantee does not cover normal wear and tear, damage caused by overloading, negligence, accident or improper use. Any change or modification made by the purchaser or user to the appliance will invalidate the guarantee, as would any attempted repair.

The guarantee applies only when the appliance has been operated in accordance with the instructions and connected to an electricity supply which matches that shown on the base of the appliance.

The guarantee will be rendered invalid if the product is resold. The product must be used solely for domestic purposes.

AFTER SALES SERVICE RETURNS FORM - GUARANTEE SLIP

Should your appliance require After Sales Service, please contact your retailer who will advise you of the returns procedure. Alternatively, please contact Euroflex at phone number 001 212 8251189.

In order to enjoy the benefits of the two-years guarantee, please retain your proof of purchase, ensuring that it shows the date of purchase, or ask your retailer to stamp this guarantee slip with the date of purchase. Please retain in your possession in case of future claims. Proof of purchase will be required to qualify for free service within the guarantee period.

Índice	Página
Instrucciones importantes de seguridad.....	13
Generador de vapor portátil	14
Descripción	15
Instrucciones para el uso	15
Ensamblaje y utilización	16
Puesta en marcha del generador de vapor.....	17
Rellenado del depósito.....	18
Sistema higienizante	18
Mantenimiento	19
Especificaciones técnicas	20
Guía para el diagnóstico de problemas	20
Características eléctricas	21
Garantía e informaciones sobre la asistencia	21
Impreso para el servicio de asistencia post-venta - tarjeta de garantía	21

CONCEPTO DE SÚPER LIMPIEZA

Súper limpieza (superclean) es una nueva familia de productos que revoluciona la tradicional limpieza a vapor. Gracias a recientes estudios y a test de laboratorio hemos creado la formula perfecta de productos higienizantes , biodegradables y seguros al 100%, que unido a la fuerza del vapor, permite obtener una **HIGIENE TOTAL** en todas las superficies tratadas.

Toda la familia de productos "Superclean" representa la nueva frontera de la limpieza, cuando es útil, más allá de un normal limpiador a vapor pueden decidir tratar la superficie para restituirla segura e higiénica al 100%

SUPERCLEAN, HIGIENE ABSOLUTA

NORMAS IMPORTANTES DE SEGURIDAD

Al usar el aparato a vapor, siempre se deben tomar precauciones básicas de seguridad, incluyendo las siguientes:

1. Lea atentamente todas las instrucciones antes de usar el generador de vapor.
2. Utilice el aparato exclusivamente para los usos para los que está concebido.
3. Para evitar el peligro de folgoración, no sumerja el aparato o alguna parte en agua u otros líquidos.
4. No tire del cable para desenchufar el aparato de la toma de corriente. Siempre desconectelo removiendo el enchufe
5. Evite que el cable toque superficies calientes. Deje enfriar por completo el aparato antes de reponerlo o de abrir el depósito del agua (remueva el tapón de seguridad). Enrolle el cable alrededor del aparato antes de reponerlo, sin estrecharlo.
6. Siempre desconecte el enchufe del aparato de la toma de corriente antes de rellenarlo con agua o vaciarlo y cuando no está en uso. Siempre desenrosque lentamente el tapón de seguridad cuando abre el depósito del agua. Esto permitirá al vapor residual de salir gradualmente.
7. No opere el aparato si el cable o el enchufe están dañados, tampoco cuando el aparato o cualquiera de sus componentes se hubiese dañado o haya caído. Para evitar el riesgo de choque eléctrico, no desarme ni intente reparar el generador de vapor. Devuelva al revendedor o contacte con unos de los centros de asistencia autorizados para su revisión y reparación. El reensamblaje o reparación inadecuados pueden causar choque eléctrico o lesiones a las personas cuando usen el aparato.
8. No deje el sistema en uso sin vigilancia y la presencia de niños.
9. Los componentes metálicos, el agua y el vapor calientes pueden producir quemaduras. Tenga mucho cuidado cuando vacía el aparato después del uso, dado que podría contener agua caliente. No dirija el chorro de vapor hacia personas. El vapor alcanza temperaturas muy elevadas que pueden producir quemaduras.
10. No ponga en función el aparato cerca de substancias explosivas e/o inflamables.
11. El aparato está concebido sólo para el uso doméstico. Siga atentamente todas las instrucciones para el uso en este manual.
12. No introduzca substancias químicas en el aparato. Siempre utilice agua del grifo. El uso de substancias químicas podría dañar el aparato y anular automáticamente la garantía.
13. Utilice el aparato sobre superficies llanas.
14. Nunca dirija el chorro de vapor hacia aparatos eléctricos u otros aparatos que incluyen componentes eléctricos (TV, radio, horno,...)

 
Para reducir el peligro de incendio, folgoración o lesiones:

- No deje el aparato desatendido cuando esté enchufado. Desenchufelo siempre de la toma de corriente cuando no esté en uso o antes de efectuar operaciones de mantenimiento o de rellenado del depósito del agua.
- Utilice sólo según las instrucciones contenidas en este manual. Utilice sólo accesorios recomendados por el fabricante.
- No tire del cable, no utilicelo como asa para cargar el aparato, no abra puertas por encima del cable, no tire del cable sobre bordes o esquinas filosas. Mantengalo alejado de superficies calientes.
- No utilice cables de extensión o tomas de corriente con una capacidad inadecuada.
- Apague todos los controles antes de desenchufar el aparato de la toma de corriente.
- Para desconectar el aparato de la toma de corriente, no tire del cable. Hagalo tirando del enchufe, no del cable.
- No manipule el enchufe o el aparato con las manos mojadas ni lo opere estando descalzo.
- No introduzca objetos en las aberturas del aparato, ni lo opere si alguna abertura está obstruida.
- Guarde el generador de vapor en un área interior fresca y seca.
- El área de trabajo debe estar bien iluminada.
- Nunca ponga el aparato de lado o al revés cuando está en función. Nunca dirija el chorro de vapor hacia personas, mascotas o llantas.
- No sumerja el aparato en agua u otros líquidos. Siempre desconecte el cable de la toma de corriente durante el rellenado del generador de vapor.
- Nunca añada detergentes, perfumes u otros productos químicos al agua utilizada por este aparato, dado que podría dañarlo y su uso no sería seguro.
- Utilice agua del grifo o agua destilada/desmineralizada si el agua de su zona es muy calcárea.

CONSERVAR ESTAS INSTRUCCIONES

GENERADOR DE VAPOR PORTÁTIL

Modelo: Monster Superclean SC20

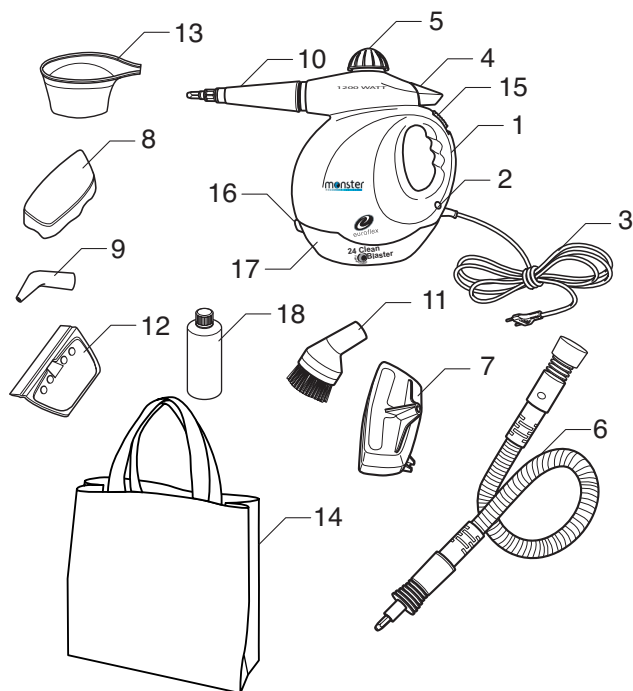

LEYENDA

1. Aparato
2. Señal luminosa de alimentación
3. Cable eléctrico
4. Pulsador del vapor
5. Tapón de la caldera
6. Manguera flexible – para aumentar la flexibilidad del aparato
7. Accesorio para tejidos – su superficie llana alcanza áreas grandes
8. Revestimiento de paño – ideal para remover manchas de tapicería y alfombras
9. Boquilla curva – se conecta al (10) para superficies difícilmente accesibles
10. Pistola a vapor – accesorio estándar con pico para salpicar
11. Escobilla redonda de nylon – para áreas y aparatos pequeños. Ideal para limpiar con cuidado y para frotar
12. Limpiacristales – conectado a la boquilla para embutidos es ideal para limpiar cristales.
13. Medidor para el agua – para el llenado del aparato con agua
14. Bolsa para el transporte
15. Tecla liberadora del desinfectante
16. Botón para desmontar el depósito del desinfectante
17. Tapón depósito higienizante
18. Botella de líquido higienizante