



VRD-MC3

DVDirect™

Quick Start Guide

- ▶ Recording from an HDD Handycam® with the DVD BURN button
- ▶ Recording from an HDD or DVD Handycam®
- ▶ Recording from a DV camcorder
- ▶ Video recording
- ▶ Photo recording

▶ Recording from an HDD Handycam® with the DVD BURN button

Usable discs: DVD-R DVD-RW DVD+R

Simply press the "DVD BURN" button on your HDD Handycam and automatically transfer new video recorded since the last DVD burn.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDDirect.

2

Press to insert a disc.

3

Turn on the HDD camcorder.

4

Connect the HDD camcorder and DVDDirect with a USB cable (not supplied). Press the [DVD BURN] button on the camcorder, or touch [DVD BURN] on the camcorder's LCD screen.

5

The DVDDirect starts recording and controls the HDD camcorder automatically.

6

Recording is completed automatically. Press to eject the disc.

▶ Recording from an HDD or DVD Handycam®

Usable discs: DVD-R DVD-RW DVD+R

Record the entire video contents of your HDD or DVD Handycam (8-cm DVD disc) onto a DVD disc.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDDirect.

2

Press to insert a disc.

3

Turn on the HDD or DVD camcorder, and switch to PLAY/EDIT mode. [DVD camcorder] Be sure to insert the 8-cm DVD disc containing the video into the camcorder.

4

Connect the camcorder and DVDDirect with a USB cable (not supplied). [HDD camcorder] Touch [HDD] on the camcorder's LCD screen. [DVD camcorder] Touch [] on the camcorder's LCD screen. Preparation for USB connection may differ depending on your camcorder. Refer to the operating instructions for your camcorder.

5

Press until [Full] appears in the DVDDirect's display window.

6

Press to start recording. The DVDDirect controls the camcorder for the whole process.

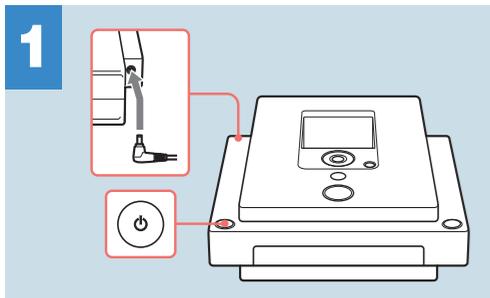
7

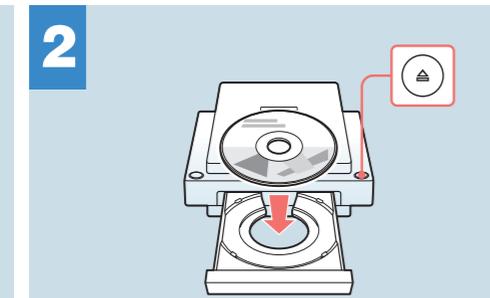
The DVDDirect ejects the disc automatically after recording is completed.

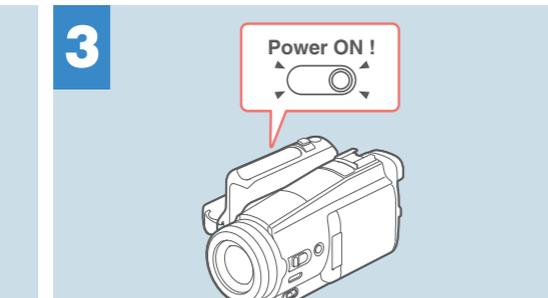
Recording from a DV camcorder

Usable discs: DVD-R DVD-RW DVD+R(DL) DVD+R DVD+RW

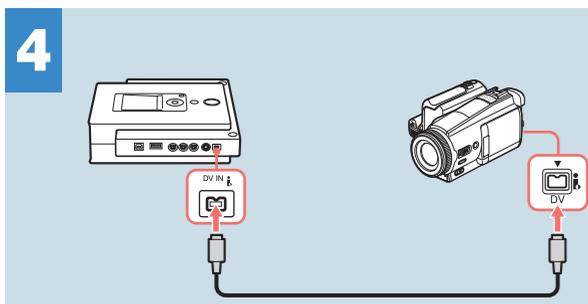
Record the entire video contents of your DV camcorder (DV tape) onto a DVD disc.

- 

1 Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.
- 

2 Press  to insert a disc.
- 

3 Turn on the DV camcorder, and switch to PLAY/EDIT mode. Be sure to insert the DV tape.

- 

4 Connect the DV camcorder and DVDDirect with a DV cable (not supplied).
- 

5 Press  or  until [Full] appears on the DVDDirect's display window.
- 

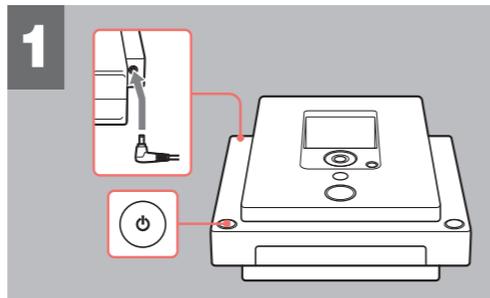
6 Press  to start recording. The DVDDirect controls the DV camcorder for the whole process.
- 

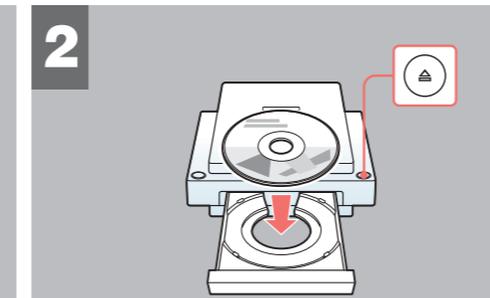
7 The DVDDirect ejects the disc automatically after recording is completed.

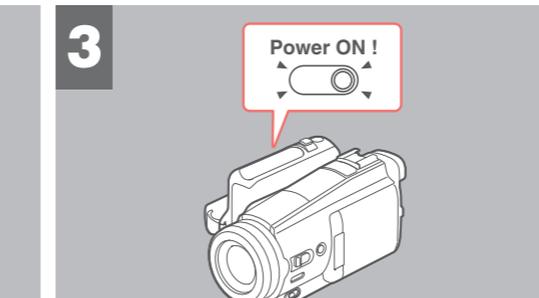
Video recording

Usable discs: DVD-R DVD-RW DVD+R(DL) DVD+R DVD+RW

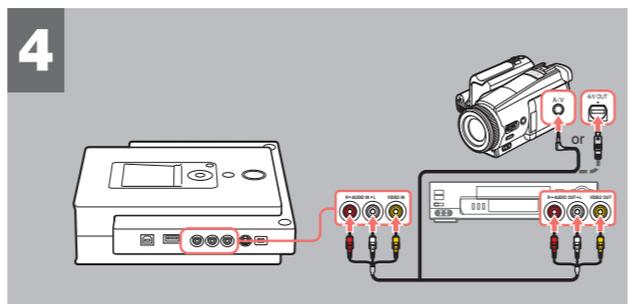
Record selected portions of a video tape onto a DVD disc.

- 

1 Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.
- 

2 Press  to insert a disc.
- 

3 Turn on and setup your camcorder or video device for video playback.

- 

4 Connect the device and DVDDirect with the appropriate cable (not supplied).
- 

5 Operate the video device to start playback.
- 

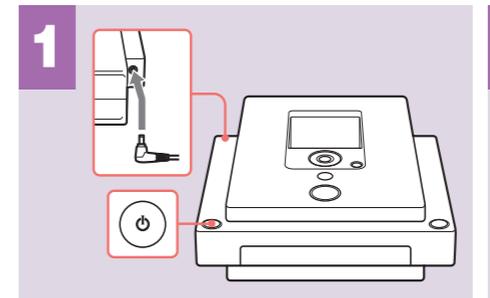
6 Press  to start recording.
- 

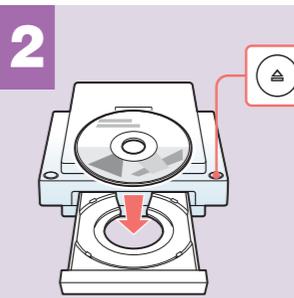
7 Press  to stop recording, and press  to eject the disc.

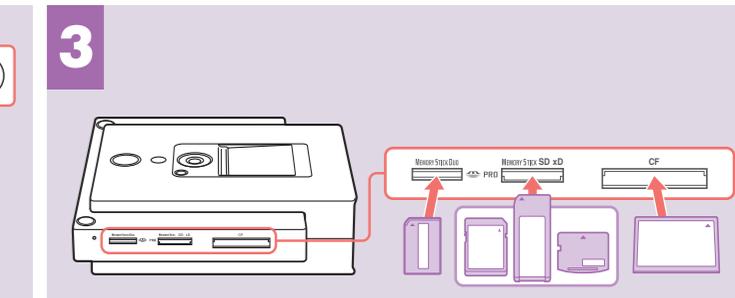
Photo recording

Usable discs: DVD-R DVD-RW DVD+R DVD+RW

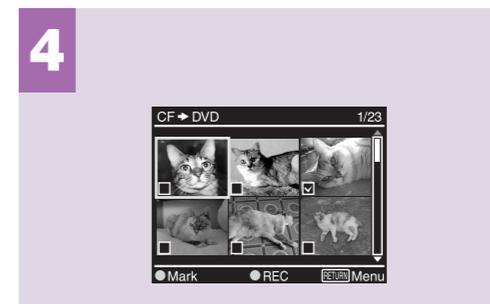
Create a photo DVD by recording directly from a memory card.

- 

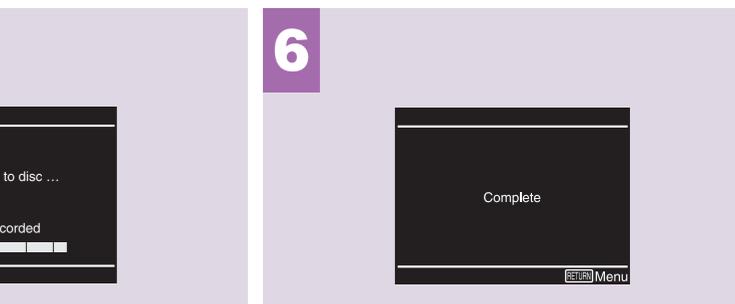
1 Connect the AC adapter and AC power cord, and press  to turn on the DVDDirect.
- 

2 Press  to insert a disc.
- 

3 Insert a memory card into the DVDDirect.
 Insert only one memory card into a memory card slot.

- 

4 Select (to record) or clear (to not record) photos by pressing  or  and .
 All photos in the memory card are automatically selected as default.
- 

5 Press  to start recording.
- 

6 Recording is completed automatically. Press  to eject the disc.