


Ordering Information

Omit steps not required

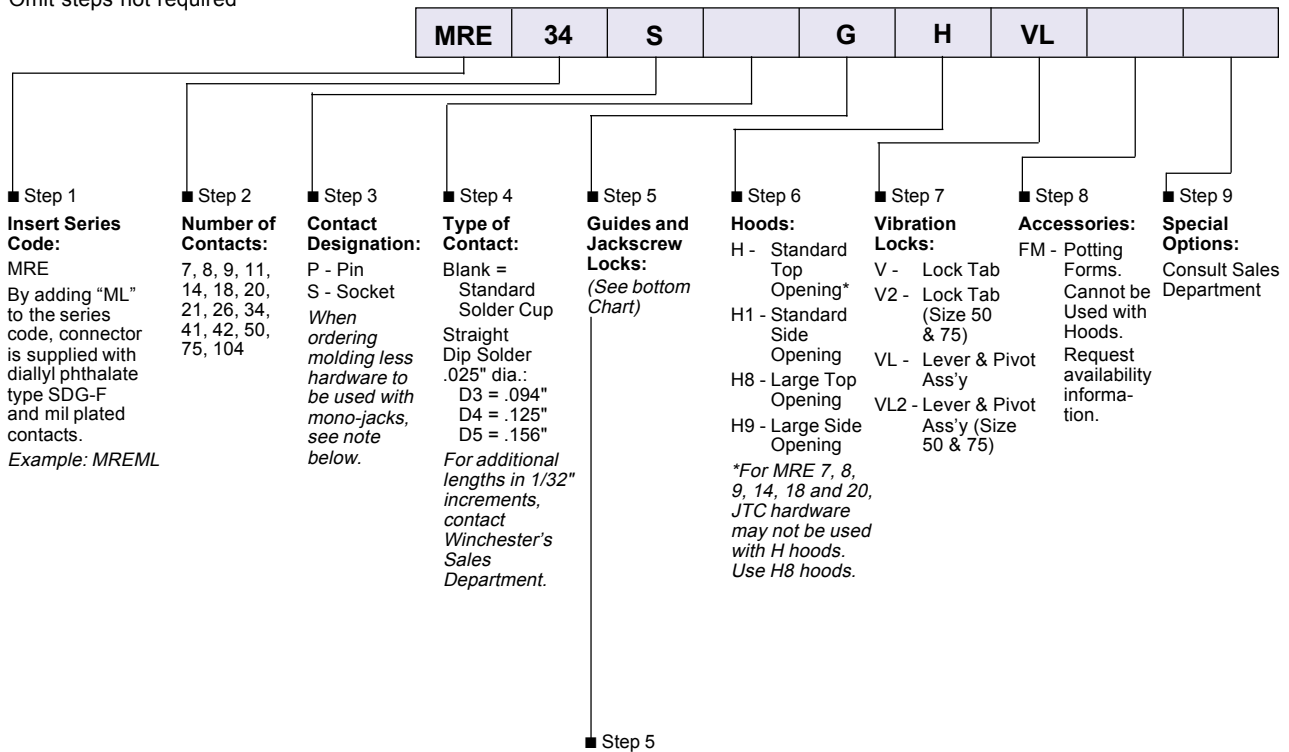

Step 1

Insert Series Code:

MRE
By adding "ML" to the series code, connector is supplied with diallyl phthalate type SDG-F and mil plated contacts.

Example: MREML

Step 2

Number of Contacts:

7, 8, 9, 11, 14, 18, 20, 21, 26, 34, 41, 42, 50, 75, 104

Step 3

Contact Designation:

P - Pin
S - Socket
When ordering molding less hardware to be used with mono-jacks, see note below.

Step 4

Type of Contact:

Blank = Standard Solder Cup
Straight Dip Solder .025" dia.:
D3 = .094"
D4 = .125"
D5 = .156"
For additional lengths in 1/32" increments, contact Winchester's Sales Department.

Step 5

Guides and Jackscrew Locks:

(See bottom Chart)

Step 6

Hoods:

H - Standard Top Opening*
H1 - Standard Side Opening
H8 - Large Top Opening
H9 - Large Side Opening
*For MRE 7, 8, 9, 14, 18 and 20, JTC hardware may not be used with H hoods. Use H8 hoods.

Step 7

Vibration Locks:

V - Lock Tab
V2 - Lock Tab (Size 50 & 75)
VL - Lever & Pivot Ass'y
VL2 - Lever & Pivot Ass'y (Size 50 & 75)

Step 8

Accessories:

FM - Potting Forms. Cannot be Used with Hoods. Request availability information.

Step 9

Special Options:

Consult Sales Department

Guides

G Phosphor Bronze Cylindrical Guides
K Beryllium Copper Cylindrical Guides
N Brass Cylindrical Guides

Guides are not recommended for Size 104

"P" indicates two guide pins or two jackscrews (Ex. JTCP)

"S" indicates two guide sockets or two jackscrews. (Ex. GS)

Jackscrew Locks

***J Polarized Fixed Jackscrew and Jacksocket

JT Polarized Short Turning Jackscrew and Jacksocket

JTC Polarized Long Turning Jackscrew and Jacksocket

*** JTD Polarized Long Turning Mono-Jackscrew and Mono-Jacksocket for Sizes 34, 42, 50, 75, and 104 only.

** JZ Same as J but with 6-32 mtg. thd. (Not available 5-3, 8) (Std. on 104)

** JTW Same as JT but with knurled round knob with internal hex (not avail. 5-3, 8, 104)

** JTV Same as JT but with knurled round knob with screwdriver slot (not avail. 5-3, 8, 104)

** JTX Same as JT but with hex knob (not avail. 5-3, 8, 104)

** JTCW Same as JTC but with knurled round knob with internal hex (not avail. 5-3, 8, 104)

** JTCU Same as JTC but with knurled round knob with screwdriver slot (not avail. 5-3, 8, 104)

** JTCX Same as JTC but with hex knob (not avail. 5-3, 8, 104)

** JTCZ Same as JTC but with prybar knob.

** Request availability information.

*** Material: Nickel-plated brass - standard
Example: MRE34SJTDBH8

* For passivated stainless steel add SS suffix (Example: MRE34SGSS)

Mounting Note: Connectors MRE 41, MRE 26, and smaller use guides for mounting in a hood or on a panel. Connectors MRE 34, MRE 42, MRE 50, MRE 75, use four #4 machine screws, in addition to guides, for mounting in a hood or on a panel.

Note: When ordering hoods, hardware and connectors separately for use with JTD Monojacks, connectors must be ordered as follows:

Pin connector = MRE34P8, MRE42P8, etc.

Socket connector = MRE34S8, MRE42S8, etc.

The number "8" indicates special housing for use with the JTD Monojack hardware (available on sizes 34, 42, 50, 66, 75 and 104).