

Index

Arrangement

The index is arranged in three parts.

1. A listing of Greenpar Engineering (GE) numbers in numerical sequence, giving component descriptions and the relevant page numbers.
2. A cross-reference list giving U.S. MIL Spec. numbers (for example, UG, S0, M) and appropriate GE numbers, in which direct equivalents to MIL Spec items are printed in bold type, and functional equivalents, in italics. Functional equivalents generally differ from the items as defined in MIL Spec. in the design of the cable clamping system, but may also have minor differences in over-all dimensions.
G.E. numbers asterisked do not appear in the catalogue. Page numbers on such items refer only to the generic type.
3. A cross-reference list between NATO stock numbers and GE numbers.

Glossary of terms

The following terms are used to describe the various components listed in this catalogue.

Plug a connector for fitting to the free end of a coaxial cable, and incorporating the coupling nut, ring or sleeve. With the exception of certain miniature connectors, it also has a male centre contact.

Jack a connector for fitting to the free end of a coaxial cable, suitable for mating with the appropriate plug. It generally has a female centre contact.

Socket a connector for panel or bulkhead mounting, suitable for mating with the appropriate plug, and having a solder spill for attachment of equipment wire.

Panel socket a socket with a square or lozenge-shaped flange, drilled or tapped with 2 or 4 holes for fixing to the panel.

Bulkhead socket a socket designed for single hole fixing in the panel or bulkhead, retained by a single fixing nut.

Panel jack a jack which accepts coaxial cable, and which is suitable for panel mounting with 2 or 4 fixing holes.

Bulkhead jack a jack which accepts coaxial cable, and which is suitable for single-hole fixing in the panel or bulkhead.

Elbow a prefix used to indicate a 90° relationship between the mating face axis and the mounting or cable entry axis.

(m) or (f) a suffix indicating the sex of a centre contact

(m) denotes male centre contact;

(f) denotes female centre contact.

G.E. Part No.	Series	Description	Page
15074	N	Elbow plug	59
17001	N	Plug	59
17003	N	Elbow plug	59
17004	N	Jack	60
17005	N	Panel jack	62
17006	N	Panel jack	62
17007	N	Panel socket	63
17008	N	T-adaptor	65
17009	N	Elbow adaptor	65
17010	N	Straight adaptor	65
17011	N	Panel socket	63
17012	N	Jack straight adaptor	65
17015	N	Plug	59
17020	N	Panel plug	64
17021	N	Jack	60
17022	N	Jack	60
17029	N	T-adaptor	65
17030	N	Panel straight adaptor	65
17032	N	Bulkhead jack	61
17033	N	Bulkhead socket	63
17034	N	Bulkhead socket	63
17035	N	Plug	59
17036	N	Jack	60
17037	N	Panel jack	62
17041	N	Bulkhead jack	61
17055	N	Plug	59
17056	N	Bulkhead adaptor (not illustrated)	62
17057	N	Panel jack	59
17064	N	Plug	60
17065	N	Jack	59
17066	N	Jack	60
17067	N	Panel jack	62
17071	N	Panel jack	62
17073	N	Panel jack	59
17074	N	Elbow plug	82
20001	C	Plug cap & chain	82
20002	C	Jack cap & chain	113
20015	—	Flange mounting cable termination	9
20801	SC	Plug cap & chain	9
20802	SC	Jack cap & chain	77
25003	C	Plug	80
25007	C	Panel socket	79
25008	C	Bulkhead socket	81
25009	C	T-adaptor	81
25010	C	Elbow adaptor	81
25012	C	Bulkhead straight adaptor	77
25013	C	Elbow plug	80
25015	C	Panel plug	79
25016	C	Panel jack	78
25017	C	Jack	77
25019	C	Plug	77
25020	C	Elbow plug	77
25022	C	Jack	81
25023	C	Plug straight adaptor	80
25024	C	Jack straight adaptor	78
25025	C	Panel socket	80
25031	C	Bulkhead jack	80
25040	C	Panel socket	81
25058	C	Panel straight adaptor	78
25070	C	Bulkhead jack	78
25071	C	Bulkhead jack	80
25086	C	Bulkhead plug	79
25087	C	Bulkhead socket	79
25098	C	Panel jack	89
25803	SC	Plug	91
25807	SC	Panel socket	91
25808	SC	Bulkhead socket	92
25809	SC	T-adaptor	92
25810	SC	Elbow adaptor	92
25812	SC	Bulkhead straight adaptor	89
25813	SC	Elbow plug	91
25815	SC	Panel plug	90
25816	SC	Panel jack	89
25817	SC	Jack	89
25819	SC	Plug	89
25820	SC	Elbow plug	89
25822	SC	Jack	92
25823	SC	Plug straight adaptor	90
25824	SC	Jack straight adaptor	91
25831	SC	Bulkhead jack	91
25858	SC	Panel straight adaptor	90
25870	SC	Bulkhead jack	91
25871	SC	Bulkhead jack	90
25887	SC	Bulkhead socket	90
25898	SC	Panel jack	77
27503	C	Plug	80
27507	C	Panel socket	79
27508	C	Bulkhead socket	81
27509	C	T-adaptor	

G.E. Part No.	Series	Description	Page
10001	N	Plug cap & chain	66
10003	N	Jack cap & chain	66
10004	N	Plug cap & chain	66
15001	N	Plug	59
15003	N	Elbow plug	59
15004	N	Jack	60
15005	N	Panel jack	62
15006	N	Panel jack	62
15007	N	Panel socket	63
15008	N	T adaptor	65
15009	N	Elbow adaptor	65
15010	N	Straight adaptor	65
15011	N	Panel socket	63
15012	N	Straight adaptor	65
15013	N	Plug	59
15015	N	Plug	59
15020	N	Panel plug	64
15021	N	Jack	60
15022	N	Jack	60
15026	N	Elbow jack	60
15029	N	T-adaptor	65
15030	N	Panel straight adaptor	65
15032	N	Bulkhead jack	61
15033	N	Bulkhead socket	63
15034	N	Bulkhead socket	63
15035	N	Plug	59
15036	N	Jack	60
15037	N	Panel jack	62
15041	N	Bulkhead jack	61
15042	N	Panel socket	63
15045	N	Strip line socket	64
15046	N	Strip line plug	64
15048	N	Elbow Jack	60
15055	N	Plug	59
15056	N	Bulkhead adaptor (not illustrated)	62
15057	N	Panel jack	59
15064	N	Plug	60
15065	N	Jack	60
15066	N	Plug	60
15067	N	Jack	62
15071	N	Panel jack	62
15073	N	Panel jack	62

G.E. Part No.	Series	Description	Page	G.E. Part No.	Series	Description	Page
27510	C	Elbow adaptor	81	35040	BNC	Bulkhead jack	4
27512	C	Bulkhead straight adaptor	81	35041	BNC	Bulkhead socket	6
27513	C	Elbow plug	77	35043	BNC	Bulkhead socket	6
27515	C	Panel plug	80	35047	BNC	Plug	3
27516	C	Panel jack	79	35048	BNC	Plug	3
27517	C	Jack	78	35049	BNC	Bulkhead socket, insulated	6
27519	C	Plug	77	35050	BNC	Bulkhead jack	4
27520	C	Elbow plug	77	35053	BNC	Bulkhead straight adaptor	12
27522	C	Jack	78	35054	BNC	Bulkhead straight adaptor	12
27523	C	Plug straight adaptor	81	35057	BNC	Panel jack	5, 11
27524	C	Jack straight adaptor	81	35060	BNC	Jack	3, 11
27525	C	Panel socket	80	35061	BNC	Jack	3
27531	C	Bulkhead jack	78	35062	BNC	Bulkhead socket, insulated	6
27558	C	Panel straight adaptor	81	35063	BNC	Bulkhead socket	6
27570	C	Bulkhead jack	78	35065	BNC	Stripline socket	7
27571	C	Bulkhead jack	78	35066	BNC	Bulkhead socket	6
27586	C	Bulkhead plug	80	35070	BNC	Plug	3, 11
27587	C	Bulkhead socket	79	35071	BNC	Plug	3
27598	C	Panel jack	79	35079	BNC	Bulkhead jack	13
27803	SC	Plug	89	35081	BNC	Panel straight adaptor	12
27807	SC	Panel socket	91	35083	BNC	Panel socket	7
27808	SC	Bulkhead socket	91	35084	BNC	Bulkhead socket	6
27809	SC	T-adaptor	92	35085	BNC	Panel socket	7
27810	SC	Elbow adaptor	92	35086	BNC	Panel plug	4
27812	SC	Bulkhead straight adaptor	92	35088	BNC	Panel jack	5
27813	SC	Elbow plug	89	35103	BNC	Plug	13
27815	SC	Panel plug	91	35121	BNC	Plug, full crimp	8
27816	SC	Panel jack	90	35123	BNC	Jack, full crimp	8
27817	SC	Jack	89	35124	BNC	Panel jack, full crimp	8
27819	SC	Plug	89	35125	BNC	Bulkhead jack, full crimp	8
27820	SC	Elbow plug	89	35141	BNC	Plug, MIL crimp	9
27822	SC	Jack	89	35142	BNC	Elbow plug, MIL crimp	9
27823	SC	Plug straight adaptor	92	35143	BNC	Jack, MIL crimp	9
27824	SC	Jack straight adaptor	92	35144	BNC	Panel jack	9
27831	SC	Bulkhead jack	90	35145	BNC	Bulkhead jack, MIL crimp	9
27858	SC	Panel straight adaptor	92	35166	BNC	Bulkhead socket	6
27870	SC	Bulkhead jack	90	35183	BNC	Bulkhead socket	6
27871	SC	Bulkhead jack	90	35203	BNC	Bulkhead jack	4
27887	SC	Bulkhead socket	91	35601	BNC	Push on plug	14
27898	SC	Panel jack	90	35627	BNC	Push on socket	14
30001	BNC	Plug cap & chain	15	35657	BNC	Push on panel jack	14
30002	BNC	Plug cap without chain	15	35660	BNC	Push on jack	14
30003	BNC	Jack cap & chain	15	35670	BNC	Push on plug	14
30004	BNC	Jack cap without chain	15	35801	TNC	Plug	27
30015	—	Printed circuit cable termination	113	35802	TNC	Elbow plug	27
30030	—	Crimp die set	8, 10	35803	TNC	Jack	27
30032	—	Crimp die set	9	35804	TNC	Panel jack	28
30039	—	Crimp tool	8, 11	35806	TNC	Panel socket	30
30801	TNC	Plug cap & chain	35	35807	TNC	Panel socket	30
30802	TNC	Plug cap without chain	35	35809	TNC	Bulkhead elbow socket	29
30803	TNC	Jack cap & chain	35	35810	TNC	Resistor plug (termination)	35
30804	TNC	Jack cap without chain	35	35811	TNC	Binding post (terminal) adaptor	34
31001	BNC	High voltage plug	16	35813	TNC	Bulkhead socket	29
31006	BNC	High voltage panel socket	16	35814	TNC	Panel elbow socket	30
31008	BNC	High voltage bulkhead socket	16	35826	TNC	Bulkhead socket	29
35001	BNC	Plug	3	35827	TNC	Bulkhead socket	29
35002	BNC	Elbow plug	3	35828	TNC	Elbow adaptor	34
35003	BNC	Jack	3	35829	TNC	Bulkhead socket	29
35004	BNC	Panel jack	5	35830	TNC	Bulkhead jack	28
35005	BNC	Bulkhead jack	4	35831	TNC	T-adaptor	34
35006	BNC	Panel socket	7	35832	TNC	Straight adaptor	34
35007	BNC	Panel socket	7	35833	TNC	Resistor plug (termination)	35
35008	BNC	Bulkhead socket	6	35834	TNC	Straight adaptor	34
35009	BNC	Bulkhead elbow socket	6	35838	TNC	Bulkhead jack	28
35010	BNC	Resistor plug (termination)	15	35839	TNC	Bulkhead jack	28, 33
35011	BNC	Binding post (terminal) adaptor	12	35849	TNC	Bulkhead socket, insulated	29
35012	—	Cable feed through adaptor	113	35853	TNC	Bulkhead straight adaptor	34
35013	BNC	Bulkhead socket	6	35857	TNC	Panel jack	28, 33
35014	BNC	Panel elbow socket	7	35858	TNC	Bulkhead socket	29
35015	BNC	Panel elbow socket	7	35860	TNC	Jack	27, 33
35018	BNC	Plug	3	35861	TNC	Jack	27
35019	BNC	Plug	3	35863	TNC	Bulkhead socket	29
35020	BNC	Jack	3	35870	TNC	Plug	27, 33
35021	BNC	Jack	3	35871	TNC	Plug	27
35022	BNC	Jack	3	35881	TNC	Panel straight adaptor	34
35023	BNC	Panel jack	5	35886	TNC	Panel plug	30
35024	BNC	Panel jack	5	35903	TNC	Plug	34
35025	BNC	Panel jack	5	35921	TNC	Plug, full crimp	32
35026	BNC	Bulkhead socket	6	35923	TNC	Jack, full crimp	32
35027	BNC	Bulkhead socket	6	35924	TNC	Panel jack, full crimp	32
35028	BNC	Elbow adaptor	12	35925	TNC	Bulkhead jack, full crimp	32
35029	BNC	Bulkhead socket	6	35941	TNC	Plug, MIL crimp	31
35030	BNC	Bulkhead jack	4	35942	TNC	Elbow plug, MIL crimp	31
35031	BNC	T-Adaptor	12	35943	TNC	Jack, MIL crimp	31
35032	BNC	Straight adaptor	12	35945	TNC	Bulkhead jack, MIL crimp	31
35033	BNC	Resistor plug (termination)	15	37121	BNC	Plug, full crimp	8
35034	BNC	Straight adaptor	12	37123	BNC	Jack, full crimp	8
35035	BNC	Panel jack	5	37124	BNC	Panel jack, full crimp	8
35037	BNC	Jack	3	37125	BNC	Bulkhead jack, full crimp	8
35038	BNC	Bulkhead jack	4	37141	BNC	Plug, MIL crimp	9
35039	BNC	Bulkhead jack	4, 11	37142	BNC	Elbow plug, MIL crimp	9

Index

G.E. Part No.	Series	Description	Page	G.E. Part No.	Series	Description	Page
37143	BNC	Jack, MIL crimp	9	40032	UHF	Plug	45
37145	BNC	Bulkhead jack, MIL crimp	9	40040	UHF	Plug	45
37174	BNC	End sealing 4C	13	40042	UHF	T-adaptor	46
37177	BNC	End sealing 3D	13	40046	UHF	Plug	46
37191	BNC	Plug, P.O. crimp	10	40047	UHF	Elbow plug	46
37192	BNC	Elbow plug, P.O. crimp	10	40049	UHF	Panel jack	46
37193	BNC	Jack, P.O. crimp	10	40054	UHF	Plug	45
37194	BNC	Panel jack, P.O. crimp	10	40058	UHF	Panel socket	47
37195	BNC	Bulkhead jack, P.O. crimp	10	40063	UHF	Panel jack	46
37199	BNC	Panel plug, P.O. crimp	10	40064	UHF	Jack	46
37502	BNC	Elbow plug	3	40065	UHF	Jack	46
37506	BNC	Panel socket	7	40067	UHF	Straight adaptor	49
37507	BNC	Panel socket	7	40070	UHF	Panel plug	48
37508	BNC	Bulkhead socket	6	40072	UHF	Panel plug	48
37509	BNC	Bulkhead elbow socket	6	40074	UHF	Terminating plug	50
37512	—	Cable feed through adaptor	113	40075	UHF	Terminating plug	50
37513	BNC	Bulkhead socket	6	40077	UHF	Bulkhead straight adaptor	49
37514	BNC	Panel elbow socket	7	42001	UHF	Twin plug	50
37526	BNC	Bulkhead socket	6	42003	UHF	Twin panel socket	50
37527	BNC	Bulkhead socket	6	42027	UHF	Twin panel plug	50
37528	BNC	Elbow adaptor	12	50004	ISA	BNC (m)-to-N (f) adaptor	124
37529	BNC	Bulkhead socket	6	50007	ISA	BNC (f)-to-UHF (m) adaptor	124
37531	BNC	T-adaptor	12	50008	ISA	BNC (m)-to-UHF (f) adaptor	124
37532	BNC	Straight adaptor	12	50009	ISA	N (f)-to-UHF (m) adaptor	124
37534	BNC	Straight adaptor	12	50028	ISA	N (m)-to-BNC (f) adaptor	124
37538	BNC	Bulkhead jack	4	50031	ISA	UHF (f)-to-BNC (f) adaptor	124
37539	BNC	Bulkhead jack	4, 11	50032	ISA	UHF (f)-to-N (m) adaptor	124
37549	BNC	Bulkhead socket, insulated	6	51001	ISA	UHF (f)-to-twin 4mm plug	123
37553	BNC	Bulkhead straight adaptor	12	51002	ISA	BNC (f)-to-twin 4mm plug	123
37554	BNC	Bulkhead straight adaptor	12	51003	ISA	BNC to twin 4mm lead screened	123
37557	BNC	Panel jack	5, 11	51004	ISA	Plug cable mounting 50 ohm	122
37560	BNC	Jack	3, 11	51005	ISA	Plug cable mounting 75 ohm	122
37561	BNC	Jack	3	51006	ISA	Panel (m) 50 ohm	121
37562	BNC	Bulkhead socket, insulated	6	51010	ISA	Panel (m) 75 ohm	121
37563	BNC	Bulkhead socket	6	51011	ISA	Panel plug cable mounting 50 ohm	122
37566	BNC	Bulkhead socket	6	51012	ISA	Panel plug cable mounting 75 ohm	122
37570	BNC	Plug	3, 11	51016	ISA	50 ohm flange coupler	121
37571	BNC	Plug	3	51017	ISA	75 ohm flange coupler	121
37581	BNC	Panel straight adaptor	12	51018	ISA	50/75 ohm flange coupler	121
37583	BNC	Panel socket	7	55000	ISA	Adaptor kit	125
37584	BNC	Bulkhead socket	6	55007	ISA	Adaptor kit	125
37585	BNC	Panel socket	7	55009	ISA	Adaptor kit	125
37586	BNC	Panel plug	4	55009/6	ISA	Lead kit	144
37588	BNC	Panel jack	5	55009/7	ISA	Lead kit	144
37801	TNC	Plug	27	57000	ISA	Adaptor kit	125
37802	TNC	Elbow plug	27	65001	S	Plug	108
37806	TNC	Panel socket	30	65002	S	Elbow plug	108
37807	TNC	Panel socket	30	65003	S	Jack	108
37809	TNC	Bulkhead elbow socket	29	65004	S	Bulkhead straight adaptor	109
37813	TNC	Bulkhead socket	29	65005	S	T-adaptor	109
37814	TNC	Panel elbow socket	30	65006	S	Bulkhead socket	109
37826	TNC	Bulkhead socket	29	65007	S	Bulkhead jack	108
37827	TNC	Bulkhead socket	29	65201	SMB	Plug (f)	95
37829	TNC	Bulkhead socket	29	65202	SMB	Elbow plug (f)	95
37831	TNC	T-adaptor	34	65204	SMB	Jack receptacle (m)	95
37832	TNC	Straight adaptor	34	65205	SMB	Bulkhead jack (m)	95
37834	TNC	Straight adaptor	34	65206	SMB	Jack (m)	95
37838	TNC	Bulkhead jack	28	65207	SMB	Printed circuit socket (m)	97
37839	TNC	Bulkhead jack	28	65208	SMB	Bulkhead socket (m)	96
37853	TNC	Bulkhead straight adaptor	34	65209	SMB	Bulkhead elbow socket (m)	96
37857	TNC	Panel jack	28	65210	SMB	Printed circuit elbow socket (m)	97
37858	TNC	Bulkhead socket	29	65211	SMB	Printed circuit elbow plug (f)	97
37860	TNC	Jack	27	65212	SMB	Bulkhead feed through	97
37861	TNC	Jack	27	65218	SMB	Bulkhead socket (m)	96
37870	TNC	Plug	27	65241	SMB	Plug (f) crimp	98
37871	TNC	Plug	27	65242	SMB	Elbow plug (f) crimp	98
37881	TNC	Panel straight adaptor	34	65245	SMB	Bulkhead jack (m) crimp	98
37886	TNC	Panel plug	30	65246	SMB	Jack (m) crimp	98
37921	TNC	Plug, full crimp	32	65248	SMB	Bulkhead elbow jack (m)	95
37923	TNC	Jack, full crimp	32	65253	SMB	Bulkhead adaptor (m) to (m)	97
37924	TNC	Panel jack, full crimp	32	65301	SMC	Plug (f)	95
37925	TNC	Bulkhead jack, full crimp	32	65302	SMC	Elbow plug (f)	95
37941	TNC	Plug, MIL crimp	31	65305	SMC	Bulkhead jack (m)	95
37942	TNC	Elbow plug, MIL crimp	31	65306	SMC	Jack (m)	95
37943	TNC	Jack, MIL crimp	31	65307	SMC	Printed circuit socket (m)	97
37945	TNC	Bulkhead jack, MIL crimp	31	65308	SMC	Bulkhead socket (m)	96
40001	UHF	Plug	45	65309	SMC	Bulkhead elbow socket (m)	96
40002	UHF	Plug	45	65310	SMC	Printed circuit elbow socket (m)	97
40003	UHF	Panel socket	47	65311	SMC	Printed circuit elbow plug (f)	97
40004	UHF	Panel straight adaptor	49	65318	SMC	Bulkhead socket (m)	96
40005	UHF	Elbow adaptor	49	65341	SMC	Plug (f) crimp	98
40006	UHF	Straight adaptor	49	65342	SMC	Elbow plug (f) crimp	98
40007	UHF	Plug	45	65345	SMC	Bulkhead jack (m) crimp	98
40008	UHF	Reducing adaptor	48	65346	SMC	Jack (m) crimp	98
40009	UHF	Reducing adaptor	48	65348	SMC	Bulkhead elbow jack (m)	95
40010	UHF	Bulkhead socket	47	65353	SMC	Bulkhead adaptor (m) to (m)	97
40011	UHF	Binding post adaptor	49	65601	SMD	Plug (f)	95
40017	UHF	High voltage plug	45	65602	SMD	Elbow plug (f)	95
40018	UHF	High voltage panel socket	47	65604	SMD	Jack receptacle (m)	97
40023	UHF	Elbow plug	45				

G.E. Part No.	Series	Description	Page
65605	SMD	Bulkhead jack (m)	95
65606	SMD	Jack (m)	95
65607	SMD	Printed circuit socket (m)	97
65608	SMD	Bulkhead socket (m)	96
65609	SMD	Bulkhead elbow socket (m)	96
69610	SMD	Printed circuit elbow socket (m)	97
65611	SMD	Printed circuit elbow plug (f)	97
65618	SMD	Bulkhead socket (m)	96
65641	SMD	Plug (f) crimp	98
65642	SMD	Elbow plug (f) crimp	98
65645	SMD	Bulkhead jack (m) crimp	98
65646	SMD	Jack (m) crimp	98
65648	SMD	Bulkhead elbow jack (m)	95
65653	SMD	Bulkhead adaptor (m) to (m)	97
80060- 80068	BNC	Twin 4 mm adaptors — plug and socket	15
80072- 80075	BNC & UHF	Circuit Boxes	138
80080	UHF	Binding Post and sockets	49
80083	UHF	Circuit Box	138
80520	BNC	Termination 50 ohm	138
80521	BNC	Attenuator 50 ohm	138
80530	BNC	Termination 75 ohm	138
80540	N	Termination 50 ohm	138
83500	N	Attenuator kit 50 ohm	138
83700	N	Attenuator kit 75 ohm	138
34013	BNC	Through termination 50 ohm	134
84033	BNC	Through termination 75 ohm	134
88000- 88700		R.F. Probe Kits	141 141
90015	—	Flange mounting cable termination	114
90017	—	Flange mounting cable termination	114
95004	GP	Jack straight adaptor	104
95005	GP	Bulkhead straight adaptor	104
95008	GP	Elbow plug	102
95011	GP	Plug	102
95012	GP	Bulkhead socket	103
95013	GP	Jack	102
95014	GP	Panel jack	103
95016	GP	Bulkhead jack	102
95017	GP	Cable feed through adaptor	113
95020	GP	Plug	102
95021	GP	Jack	102
95022	GP	Panel jack	103
95023	GP	Elbow plug	102
95024	GP	Jack T-adaptor	104
95025	GP	Bulkhead jack	102
95031	GP	Printed circuit socket	104
95033	GP	Panel socket	103
95034	GP	Plug/jack T-adaptor	104
95035	GP	Bulkhead socket	103
95812	SGP	Bulkhead socket	105
95820	SGP	Plug	105
95823	SGP	Elbow plug	105
95900	ISA	GR 874	117
95901	ISA	N (m)	118
95902	ISA	N (f)	118
95903	ISA	C (m)	118
95904	ISA	C (f)	118
95905	ISA	SC (m)	117
95906	ISA	SC (f)	117
95907	ISA	BNC (m)	118
95908	ISA	BNC (f)	118
95909	ISA	BNC push-on (m)	118
95910	ISA	BNC push-on (f)	118
95911	ISA	TNC (m)	117
95912	ISA	TNC (f)	117
95913	ISA	UHF (m)	118
95914	ISA	UHF (f)	118
95915	ISA	GP (m)	118
95916	ISA	GP (f)	118
95919	ISA	Pattern 4 (m)	119
95920	ISA	Pattern 4 (f)	119
95921	ISA	Pattern 8 (m)	119
95922	ISA	Pattern 8 (f)	119
95923	ISA	Pattern 12 (m)	119
95925	ISA	SMC jack (m)	119
95926	ISA	SMC plug (f)	119
95927	ISA	SMB jack (m)	118
95928	ISA	SMB plug (f)	118
95929	ISA	SM (m)	119
95930	ISA	SM (f)	119
95931	ISA	HN (m)	118
95932	ISA	HN (f)	118
95933	ISA	Jones RF (m)	119
95934	ISA	Jones RF (f)	119
95935	ISA	SMA (m)	119

G.E. Part No.	Series	Description	Page
536	ISA	SMA (f)	119
537	ISA	Pattern 22 (m)	120
538	ISA	Pattern 22 (f)	120
539	ISA	Pattern 12 (m)/(t)	119
540	ISA	Pattern 12 (f)/(m)	119
541	ISA	PET 100 (m)	119
542	ISA	PET 100 (f)	119
543	ISA	GR890/900	117
545	ISA	Screwed GP (m)	118
546	ISA	Screwed GP (f)	118
547	ISA	Series S (m)	120
548	ISA	Series S (f)	120
701	ISA	N (m)	120
702	ISA	N (f)	120
703	ISA	C (m)	120
704	ISA	C (f)	120
705	ISA	SC (m)	120
706	ISA	SC (f)	120
707	ISA	BNC (m)	121
708	ISA	BNC (f)	121
711	ISA	TNC (m)	120
712	ISA	TNC (f)	120
713	ISA	UHF (m)	120
714	ISA	UHF (f)	120
715	ISA	B.S. 3041 (m)	121
716	ISA	B.S. 3041 (f)	121
717	ISA	SHF minor (m)	120
718	ISA	SHF minor (f)	120
719	ISA	SHF major (m)	120
720	ISA	SHF major (f)	120
721	ISA	BNC triax (m)	121
722	ISA	BNC triax (f)	121
851	ISA	Circuit box 50 ohm	135
852	ISA	Circuit box 50 ohm	135
853	ISA	Circuit box 50 ohm	135
871	ISA	Circuit box 75 ohm	135
872	ISA	Circuit box 75 ohm	135
873	ISA	Circuit box 75 ohm	135
ST100539	ISA	Insulating bush	6
ST100856	—	Stowage hook	143
ST100859	—	Earth clip	143
ST102405	ISA	50 ohm coupler	121
ST102432	ISA	75 ohm coupler	121
ST102829	—	Crocodile clip	143
ST103282	ISA	50/75 ohm coupler	121
ST103740	ISA	(m)/(f) 50/75 ohm coupler	121
ST103760	ISA	T-adaptor	123
ST103761	ISA	4mm twin 50 ohm adaptor	123
ST104224	ISA	Attenuator network	133
ST104226	ISA	Female 50 ohm coupler	121
ST104706	ISA	Attenuator network	133
ST104707	ISA	Female 75 ohm coupler	121
ST104711	ISA	½W termination 50 ohm	134
ST104713	ISA	½W termination 75 ohm	134
ST104715	ISA	12W termination 50 ohm	134
ST104718	ISA	Transition, 75 ohm to 50 ohm	133
ST104840	ISA	Transition, 50 ohm to 75 ohm	133
ST104971	ISA	Through termination 50 ohm	134
ST104973	ISA	Through termination 75 ohm	134
ST104975	ISA	50 ohm power divider	135
ST104976	ISA	75 ohm power divider	135
ST104977	ISA	12W termination 75 ohm	134
ST104991	—	Marker sleeves	143
ST105063	—	4mm plug	143
ST105522	ISA	Mismatch 50 ohm	135
ST105523	ISA	Mismatch 75 ohm	135

Cable Assemblies					
G.E.X. Part No.	Series	Page	G.E.X. Part No.	Series	Page
60	ISA	137	372	BNC	136
61	ISA	137	373	BNC	136
62	ISA	137	374	BNC	136
75	ISA	137	375	BNC	136
76	ISA	137	601	BNC	136
175	N	136	602	BNC	136
176	N	136	603	BNC	136
177	N	136	604	BNC	136
178	N	136	605	BNC	136
179	N	136	606	BNC	136
206	N	136	607	BNC	136
207	N	136	608	BNC	136
208	N	136	638	BNC	137
209	N	136	644	BNC	137
210	N	136			
257	BNC	137			
258	BNC	137			

Index

U.S. MIL. Spec cross reference

Mil. Ref. UG- /U	GE	Description	Page	Mil. Ref. UG- /U	GE	Description	Page
18	15015 C79	N Plug	59	492, 492B	35053	BNC Bulkhead straight adaptor	12
18A to E	15015 C79	N Plug	59		35015E	BNC Panel elbow socket	7
19	15006 C79H	N Panel jack	62	535	15013-10	N Plug	59
19A to E	15006 C79H	N Panel jack	62	536	15055-10	N Plug	60
20	15022 C79	N Jack	60	536A, 536B	15041 C10	N Bulkhead jack	61
20A to F	15022 C79	N Jack	60	556, 556A, 556B	507-532	BNC (m)-to-HN (f) adaptor	128
21B	15001-4	N Plug	59	559	501-504	N (m)-to-C (f) adaptor	128
21D, 21E	15015-4	N Plug	59	564	502-503	N (f)-to-C (m) adaptor	128
21G	15015-4	N Plug	59		25009	C T-Adaptor	81
21H	15015 C4	N Plug	59		25010	C Elbow adaptor	81
22B	15005-4H	N Panel jack	62		25007J	C Panel socket	80
22D, 22E	15006-4H	N Panel jack	62		25008	C Bulkhead socket	79
22F	15006-4H	N Panel jack	62		25031-4	C Bulkhead jack	78
23B	15004-4	N Jack	60		25031-4	C Bulkhead jack	78
23D, 23E	15022-4	N Jack	60		25016-4J	C Panel jack	79
22F	15022-4	N Jack	60		25016-4J	C Panel jack	79
27, 27A, 27B, 27D	15009	N Elbow adaptor	65		25017-4	C Jack	78
27C	15009	N Elbow adaptor	65		25017-4	C Jack	78
28	15029	N T-adaptor	65		25019-4	C Plug	77
28A	15029	N T-adaptor	65		25019-4	C Plug	77
29	15012	N Straight adaptor	65		15057 C25H	N Panel jack	62
29A	15012	N Straight adaptor	65		15003-4	N Elbow plug	59
29B	15012	N Straight adaptor	65		15021 C25	N Jack	60
30D	15107	N Bulkhead adaptor	*		15055-25	N Plug	59
57, 57A	15010	N Straight adaptor	65		15055-25	N Plug	59
57B	15010	N Straight adaptor	65		15055 C25	N Plug	59
58	15042H	N Panel socket	63		502-508	N (f)-to-BNC (f) adaptor	128
58A	15007H	N Panel socket	63		35029	BNC Bulkhead socket	6
83, 83A, 83B	50009	N(f)-to-UHF(m) adaptor	124		25019 C79	C Plug	3
88	35001-10	BNC Plug	3		25003-25	C Plug	77
88C	35018-10	BNC Plug	3		25016 C79J	C Panel jack	79
88D	35070-10	BNC Plug	3		25031 C79	C Bulkhead jack	78
88E	35201-10	BNC Plug	*		25070-25	C Bulkhead jack	78
88F	35070-10	BNC Plug	3		25017 C79	C Jack	78
89	35003-10	BNC Jack	3		504-507	C (f)-to-BNC (m) adaptor	118
89B	35020-10	BNC Jack	3		503-508	C (m)-to-BNC (f) adaptor	118
89C	35060-10	BNC Jack	3		504-513	C (f)-to-UHF (m) adaptor	118
91, 91A	17015 C79	N Plug	59		25023	C Plug straight adaptor	81
92, 92A	17022 C79	N Jack	60		25024	C Jack straight adaptor	81
93, 93A	17006 C79H	N Panel jack	62		25024	C Jack straight adaptor	81
94A	17001-1	N Plug	59		35041	BNC Bulkhead socket	6
95A	17004-1	N Jack	60		15033P	N Bulkhead socket	63
96A	17005-1H	N Panel jack	62		15033P	N Bulkhead socket	63
103	42003H	UHF Panel socket	48		25012	C Bulkhead socket adaptor	81
107B	15008	N T-adaptor	65		504-531	C (f)-to-HN (m) adaptor	128
111	40046	UHF Plug	45		503-532	C (m)-to-HN (f) adaptor	128
146, 146A	50032	N (m)-to-UHF (f) adaptor	124		504-531	ISA C (m)	118
159	15032 C79	N Bulkhead jack	61		503-532	ISA C (f)	118
159A to C	15032 C79	N Bulkhead jack	61		25070-10	C Bulkhead jack	78
160D	15032-4	N Bulkhead jack	61		25070-10	C Bulkhead jack	78
167	15035 C18	N Plug	59		25038 C18	C Plug	77
167A to G	15035 C18	N Plug	59		25003-10	C Plug	77
175	40008	UHF Reducing adaptor	49		25003-10	C Plug	77
176	40009	UHF Reducing adaptor	49		25013-4	C Elbow plug	77
185	Replaced by UG 290 A/U				35005-10	BNC Bulkhead jack	4
188	Replaced by UG 536 A/U				35039-10	BNC Bulkhead jack	4
201, 201A	50028	N (m)-to-BNC (f) adaptor	124		35039 C10	BNC Bulkhead jack	4
203	40032 C25	UHF Plug	45		35050-25	BNC Bulkhead jack	4
224	40077	UHF Bulkhead, straight adaptor	49		35040-25	BNC Bulkhead jack	4
254, 254A	Replaced by UG911/U				35002 A10	BNC Elbow plug	3
255	50008	BNC (M)-to-UHF (f) adaptor	124		35034	BNC Straight adaptor	12
260	35048-25	BNC Plug	3		31006H	BNC High voltage panel socket	16
260B	35019-25	BNC Plug	3		31001 C25	BNC High voltage plug	16
260C	35047-25	BNC Plug	3		35103 C4	BNC Plug	13
261	35021-25	BNC Jack	3		15015 C1	N Plug	59
261B	35022-25	BNC Jack	3		532-532	HN (f)-to-HN (f) adaptor	128
262	35023-25E	BNC Panel jack	5		35001 C152	BNC Plug	*
262B	35025-25E	BNC Panel jack	5		501-507	N (m)-to-BNC (m) adaptor	128
262C	35035-25E	BNC Panel jack	5		15057 C10H	N Panel jack	62
273	50007	BNC (f)-to-UHF (m) adaptor	124		35004 C152E	BNC Panel jack	5
274A, 274B	35031	BNC T-adaptor	12		35003 C152	BNC Jack	*
282B	35011	BNC Binding post (terminal) adaptor	12		35001 C152	BNC Plug	*
290	35006E	BNC Panel socket	7		35166	BNC Bulkhead socket	6
290A	35007E	BNC Panel socket	7		35027	BNC Bulkhead socket	6
291	35004-10E	BNC Panel jack	5		35043	BNC Bulkhead socket	3
291B	35024-10E	BNC Panel jack	5		15057 C10H	N Panel jack	62
291C	35057-10E	BNC Panel jack	5		35009	BNC Bulkhead elbow socket	6
296	40003H	UHF Panel socket	47		35086E	BNC Panel plug	4
297	40005	UHF Elbow adaptor	49		502-532	N (f)-to-HN (f) adaptor	128
298	40042	UHF T-adaptor	49		502-531	N (f)-to-HN (m) adaptor	128
299	40006	UHF Straight adaptor	49		15015 A4	N Plug	59
306A, 306B	35028	BNC Elbow adaptor	12		15022 A4	N Jack	60
307	40004	UHF Panel straight adaptor	49		15006 A4H	N Panel jack	62
309	508-531	BNC (f)-to-HN (m) adaptor	128		65301 C24	SMC Plug (f)	95
318	501-513	N (m)-to-UHF (m) adaptor	128		65302 C24	SMC Elbow plug (f)	95
332	40011	UHF binding post adaptor	49		65306 C24	SMC Jack (m)	95
335	502-507H	N (f)-to-BNC (m) panel adaptor	124		65305 C24	SMC Bulkhead jack (m)	95
349, 349A, 349B	50004	BNC (m)-to-N (f) adaptor	124		65318	SMC Bulkhead socket (m)	96
414A	35081E	BNC Panel straight adaptor	12				
447	35006K	BNC Panel socket	7				
491A	35032	BNC Straight adaptor	12				

Mil. Ref. UG -/U	GE	Description	Page	NSN	GE	Description	Page
1465	65301 C22	SMC Plug (f)	98	5935-99			
1466	65302 C22	SMC Elbow Plug (f)	95	119 8077	37507 G	BNC Panel socket	7
1467	65306 C22	SMC Jack (m)	95	119 8435	37506 F	BNC Panel socket	7
1468	65305 C22	SMC Bulkhead jack (m)	95	119 8858	37509	BNC Bulkhead elbow socket	6
1619	65308	SMC Bulkhead socket (m)	96	119 9149	25819 C79	SC Plug	89
1785	35141 D10	BNC Plug MIL crimp	9	119 9276	15003 C79	N Elbow plug	59
1789	35141 D25	BNC Plug MIL crimp	9	119 9277	35814 H	TNC Panel elbow socket	30
				119 9278	37506G	BNC Panel socket	7

Mil. Ref.	GE	Description	Page
CW 123A/U	30001	BNC Plug cap and chain	15
CW 155A/U	30002	BNC Plug cap without chain	15
CW 282/U	30003	BNC Jack cap and chain	15
M-358 (UG298/U)	40042	UHF T-adaptor	49
M-359A (UG297/U)	40005	UHF Elbow adaptor	49
MX-554A/U	35010/100R	BNC Resistor plug (termination)	15
MX-913/U	10001	N Plug cap and chain	66
MX-1142/U	20001	C Plug cap and chain	82
MX-1143/U	20002	C Jack cap and chain	82
PL258 (UG299/U)	40006	UHF Straight adaptor	49
PL259	40001-4	UHF Plug	45
PL259A	40002-4	UHF Plug	45
SO 239	40003H	UHF Panel socket	47
SO 264	42003H	UHF Twin panel socket	48

Nato Stock No. Cross Reference

NSN	GE	Description	Page
5915-99			
117 6517	ST104973	ISA Through termination 75 ohm	121
117 9049	ST104971	ISA Through termination 50 ohm	121
5935-99			
001 3500	15015 C1	N Plug	59
102 7110	95008 C22	GP Elbow plug	102
104 5850	37529	BNC Bulkhead socket	6
105 1851	35006G	BNC Panel socket	7
105 3650	95012P	GP Bulkhead socket	103
105 3667	37508	BNC Bulkhead socket	6
105 4703	35070 C12	BNC Plug	3
105 4704	35039 C12	BNC Bulkhead jack	4
106 8586	35070 C10	BNC Plug	3
107 2314	25019 C4	C Plug	77
107 2315	25017 C4	C Jack	78
107 3391	40011	UHF Binding post adaptor	49
107 4880	37586 H	BNC Panel plug	4
107 4909	37570 C25	BNC Plug	3
107 5460	15041 C29	N Bulkhead jack	61
107 5461	35039 C29	BNC Bulkhead jack	4
107 8325	37570 D12	BNC Plug	11
107 8326	37560 D12	BNC Jack	11
107 8693	15013-10	N Plug	59
108 3203	95012 P	GP Bulkhead socket	103
108 4537	40063 C12H	UHF Panel jack	46
108 4538	40063 C25H	UHF Panel jack	46
109 7102	17007 H	N Panel socket	63
109 8899	15005-4H	N Panel jack	62
110 6521	35802 C10	TNC Plug cap without chain	35
110 9310	35011	BNC Binding Post (terminal) Adaptor	12
111 6440	95020 C10	BNC Jack	3
111 7470	35007G	BNC Panel socket	7
111 8484	35039 C73	BNC Bulkhead jack	4
112 0969	35849	TNC Bulkhead socket, insulated	29
112 2276	40023 C12	UHF Elbow plug	45
112 7636	17057 C12F	N Panel jack	62
112 9197	35084	BNC Bulkhead socket	6
113 8162	35086 K	BNC Panel plug	4
114 0890	35870 D10	TNC Plug	33
114 1211	15041 C10	N Bulkhead jack	61
115 2476	35010/75R	BNC Resistor plug (termination)	15
115 4745	17022 C1	N Jack	60
115 4847	30801	TNC Plug cap & chain	35
115 9621	15006 A4H	N Panel jack	62
117 3987	40052 U	UHF Panel socket	47
117 5325	27524	C Jack straight adaptor	81
117 5338	20002	C Jack cap & chain	82
117 9314	65001 C22	S Plug	108
119 1549	40023 C10	UHF Elbow plug	45
119 2203	37562	BNC Bulkhead socket insulated	6
119 4778	15003 C79	N Elbow plug	59
119 4782	37557 C12F	BNC Panel jack	5
119 4792	37570 C12	BNC Plug	3
119 4795	15006 C79F	N Panel jack	62
119 4797	15003 C4	N Elbow plug	59
119 4803	15015 C79	N Plug	59
119 4804	15006 C79H	N Panel jack	62
119 4805	35802 C10	TNC Elbow plug	27
119 4812	35801 C22	TNC Plug	27
119 4816	35804 C22G	TNC Panel jack	28
119 4818	35802 C22	TNC Elbow plug	27
119 4851	35860 C10	TNC Jack	27
119 4852	35857 C10H	TNC Panel jack	33
119 6205	35008	BNC Bulkhead socket	6
119 7719	37570 D12	BNC Plug	11
119 7721	37557 D12E	BNC Panel jack	11
119 7722	37557 D12G	BNC Panel jack	11
119 8076	35806 H	TNC Panel socket	30

5935-99			
119 8077	37507 G	BNC Panel socket	7
119 8435	37506 F	BNC Panel socket	7
119 8858	37509	BNC Bulkhead elbow socket	6
119 9149	25819 C79	SC Plug	89
119 9276	15003 C79	N Elbow plug	59
119 9277	35814 H	TNC Panel elbow socket	30
119 9278	37506G	BNC Panel socket	7
119 9344	40001-4	UHF Plug	45
119 9418	35081 G	BNC Panel straight adaptor	12
119 9419	35081 E	BNC Panel straight adaptor	12
142 0315	35839 C10	TNC Bulkhead jack	28
142 0322	35858	TNC Bulkhead socket	29
142 4700	17020 H	N Panel plug	60
142 4701	35085 H	BNC Panel socket	7
142 7659	35033/75R	BNC Resistor plug (termination)	15
142 9275	35053	BNC Bulkhead straight adaptor	12
145 2280	37531	BNC T-adaptor	12
192 7094	35857 C10H	TNC Panel jack	28
192 7268	35870 C10	TNC Plug	27
193 2045	30001	BNC Plug cap & chain	15
193 4573	15012	N Straight adaptor	65
194 3741	35057-10H	BNC Panel jack	5
194 3887	37570 C30	BNC Plug	3
194 6937	37539 C30	BNC Bulkhead jack	4
194 7025	35039 D10	BNC Bulkhead jack	11
194 8127	37509	BNC Bulkhead elbow socket	6
195 1924	35002 C12	BNC Elbow plug	3
195 6482	35081 H	BNC Panel straight adaptor	12
198 3619	95005 P	GP Bulkhead socket adaptor	104
199 1984	15001-4	N Plug cap & chain	66
199 5237	714	ISA UHF (f)	120
222 0014	37527	BNC Bulkhead socket	6
222 0652	15055 C10	N Plug	59
222 1134	35060 C10	BNC Jack	3
222 1917	35030 C22	BNC Bulkhead jack	4
222 1918	35002 C22	BNC Elbow plug	3
222 7902	25017-4	C Jack	78
222 8292	35001 C24	BNC Plug	3
223 0720	15074 C10	N Elbow plug	59
223 6565	37554	BNC Bulkhead straight adaptor	12
223 7665	37584	BNC Bulkhead socket	6
223 7666	35001 C22	BNC Plug	3
223 8020	35004 C29G	BNC Panel jack	5
427 6854	95005	GP Bulkhead socket adaptor	104
433 4179	35081 K	BNC Panel straight adaptor	12
433 4184	35007 H	BNC Panel socket	7
433 4185	37506 K	BNC Panel socket	7
433 4186	37560 C12	BNC Jack	3
433 4188	35002 C10	BNC Elbow plug	3
433 4194	25003 A10	C Plug	77
433 4196	25013 A4	C Elbow plug	77
433 4198	27519 C1	C Plug	77
433 4200	27507 J	C Panel socket	80
433 4216	15020 H	N Panel plug	64
519 0892	25003 C10	C Plug	77
519 9804	55005	ISA Adaptor kit	-
519 9805	513	ISA UHF (m)	118
519 9806	507	ISA BNC (m)	118
519 9807	501	ISA N (m)	118
519 9808	503	ISA C (m)	121
519 9809	707	ISA BNC (m)	121
519 9810	701	ISA N (m)	120
519 9811	703	ISA C (m)	120
519 9812	719	ISA SHF major (m)	120
519 9813	717	ISA SHF minor (m)	120
519 9814	715	ISA B.S. 3041 (m)	121
519 9815	519	ISA Pattern 4 (m)	119
519 9816	514	ISA UHF (m)	118
519 9817	508	ISA BNC (f)	118
519 9818	502	ISA N (f)	118
519 9819	504	ISA C (f)	118
519 9820	708	ISA BNC (f)	121
519 9821	702	ISA N (f)	120
519 9822	704	ISA C (f)	120
519 9823	720	ISA SHF major (f)	120
519 9824	718	ISA SHF minor (f)	120
519 9825	716	ISA B.S. 3041 (f)	121
519 9826	520	ISA Pattern 4(f)	119
519 9828	ST102405	ISA 50 ohm coupler	121
519 9829	ST103282	ISA 50/75 ohm coupler	121
520 0910	37502 C12	BNC Elbow plug	3
520 8431	55009	ISA Adaptor kit	126
520 8432	511	ISA TNC (m)	117
520 8433	512	ISA TNC (f)	117
520 8434	711	ISA TNC (m)	120
520 8435	712	ISA TNC (f)	120
520 8436	505	ISA SC (m)	117
520 8437	506	ISA SC (f)	117
520 8438	705	ISA SC (m)	120
520 8439	706	ISA SC (f)	120
520 8440	515	ISA GP (m)	118
520 8441	516	ISA GP (f)	118
520 8442	500	ISA GR 874	117
520 8443	ST103740	ISA (m)/(f) 50/75 ohm coupler	121
520 8444	ST103760	ISA T-adaptor	123
520 8445	ST103761	ISA 4 mm twin 50 ohm adaptor	123
520 8446	535	ISA SMA (m)	119
520 8447	536	ISA SMA (f)	119
520 8448	531	ISA HN (m)	118
520 8449	532	ISA HN (f)	118
520 8450	529	ISA SM (m)	119
520 8451	530	ISA SM (f)	119
520 8452	533	ISA Jones RF (m)	119
520 8453	534	ISA Jones RF (f)	119
520 8454	525	ISA SMC Jack (m)	119

Index

NSN	GE	Description	Page	NSN	GE	Description	Page
5935-99				5935-99			
520 8455	526	ISA SMC Plug (f)	119	631 9439	35070 C10	BNC Plug	3
520 8456	523	ISA Pattern 12 (m)	119	633 0486	35007 E	BNC Panel socket	7
520 8457	524	ISA Pattern 12 (f)	119	633 1262	37526	BNC Bulkhead socket	6
520 8458	539	ISA Pattern 12 (m)/(f)	119	633 1510	35015 H	BNC Panel elbow socket	7
520 8459	540	ISA Pattern 12 (f)/(m)	119	633 3748	35004 C24H	BNC Panel jack	5
520 8460	521	ISA Pattern 8 (m)	119	633 7120	15074 C10	N Elbow plug	59
520 8461	522	ISA Pattern 8 (f)	119	633 9062	27508	C Bulkhead socket	79
520 8462	537	ISA Pattern 22 (m)	120	633 9340	15041 A10	N Bulkhead jack	61
520 8463	538	ISA Pattern 22 (f)	120	634 4898	25071 C10	C Bulkhead jack	78
520 8464	721	ISA BNC triax (m)	121	635 0471	30001	BNC Plug cap & chain	15
520 8465	722	ISA BNC triax (f)	121	635 1986	35814 H	TNC Panel elbow socket	30
521 1360	15006C1H	N Panel jack	62	635 4971	25803 C10	TNC Jack	27
521 1711	15022-4	N Jack	60	635 4925	37539 C52	BNC Bulkhead jack	4
521 1763	25808	SC Bulkhead socket	91	635 6352	35027	BNC Bulkhead socket	6
521 1764	20801	SC Plug cap & chain	92	635 7934	35001-10	BNC Plug	3
522 1496	15074 C10	N Elbow plug	59	635 8561	35003 C30	BNC Jack	3
523 5544	37557 C30H	BNC Panel jack	5	636 2311	37502 C30	BNC Elbow plug	3
525 0572	37502 C25	BNC Elbow plug	3	638 0815	17011 H	N Panel socket	63
526 7469	35012 C10	Cablefeed through adaptor	113	638 2182	35057 C10K	BNC Panel jack	5
526 7474	35814K	TNC Panel elbow socket	30	638 2183	35007 K	BNC Panel socket	7
527 7013	40032 C10	UHF Plug	45	638 2227	15055-10	N Plug	59
527 8346	65004 S	Bulkhead straight adaptor	109	638 3145	42001 C42	UHF Plug	48
528 6029	35832	TNC Straight adaptor	34	638 3198	37570 C119	BNC Plug	3
528 6030	35828	TNC Elbow adaptor	34	638 4302	37528	BNC Elbow adaptor	12
528 6031	35857 C10K	TNC Panel jack	28	638 6250	15032 C1	N Bulkhead jack	61
528 6032	15011 K	N Panel socket	63	638 6894	37549	BNC Bulkhead socket insulated	6
529 1972	37507 F	BNC Panel socket	7	638 7205	37870 C12	TNC Plug	27
529 4166	37839 C12	TNC Bulkhead jack	28	638 9088	95024	GP Jack T-adaptor	104
531 4341	35070 A10	BNC Plug	3	639 0324	27513 C1	C Elbow plug	77
533 6790	35830 C22	TNC Bulkhead jack	28	639 1069	35857 C10F	TNC Panel jack	28
618 0559	15015 C6	N Plug	59	639 3389	35886 K	TNC Panel plug	30
618 0580	17015 C1	N Plug	59	639 4140	30001	BNC Plug cap & chain	15
618 0618	35871 C27	TNC Plug	27	639 8830	35881 E	TNC Panel straight adaptor	34
618 0999	15003 C6	N Elbow plug	59	639 8831	35881 H	TNC Panel straight adaptor	34
618 1336	15032 C4	N Bulkhead jack	61	639 9022	35027 S	BNC Bulkhead socket	6
618 1659	15010	N Straight adaptor	65	643 6507	37570 A25	BNC Plug	3
618 1769	37539 C12	BNC Bulkhead jack	4	711 8952	15055 C25	N Plug	59
618 2067	10003	N Jack cap & chain	66	713 6330	35032	BNC Straight adaptor	12
618 2506	25019 A4	C Plug	77	713 6331	35054	BNC Bulkhead straight adaptor	12
618 2823	35870 D10	TNC Plug	33	911 6612	15042 H	N Panel socket	63
618 2961	30003	BNC Jack cap & chain	15	911 6872	35006 K	BNC Panel socket	7
618 2977	15015 C4	N Plug	59	911 6955	35004-10 E	BNC Panel jack	5
618 2978	15055 C29	N Plug	59	913 2101	35007 E	BNC Panel socket	7
618 3012	37502 C22	BNC Elbow plug	3	913 5332	30001	BNC Plug cap & chain	15
618 3504	37570 C22	BNC Plug	3	914 2228	35014 H	BNC Panel elbow socket	7
618 3695	40018 H	UHF High voltage series	47	914 7548	35028	BNC Elbow adaptor	12
618 3696	37583 H	BNC Panel socket	7	915 0354	35047-25	BNC Plug	3
618 4132	35903 C1	TNC Plug	34	920 9079	35004-10K	BNC Panel jack	5
618 7382	17033	N Bulkhead socket	63	924 5873	ST102432	ISA 75 ohm coupler	121
618 7530	27507 H	C Panel socket	80	924 9828	ST102432	ISA 75 ohm coupler	121
618 7736	15015 C4	N Plug	59	932 2405	15009	N Elbow adaptor	65
618 7738	35827	TNC Bulkhead socket	29	933 1858	35039 C10	BNC Bulkhead jack	4
618 8642	27570 C12	C Bulkhead jack	78	933 2014	35019-25	BNC Plug	3
618 8643	27586	C Bulkhead plug	80	940 1089	35001-10	BNC Plug	3
619 2868	35023-25H	BNC Panel jack	5	940 1095	15001-4	N Plug	59
620 2741	40010	UHF Bulkhead socket	47	940 1839	40002-4	UHF Plug	45
621 4234	95812	SGP Bulkhead socket	105	943 7278	15008	N T-adaptor	65
621 6204	40047 C1	UHF Elbow plug	45	943 7316	15007 H	N Panel socket	63
622 0835	15030 F	N Panel straight adaptor	65	944 5765	37506 H	BNC Panel socket	7
622 4524	37581 G	BNC Panel straight adaptor	12	945 2283	35004-10 H	BNC Panel jack	5
622 4869	35004 10G	BNC Panel jack	5	945 3788	95011 C22	GP Plug	102
622 5923	37539 C25	BNC Bulkhead jack	4	945 3789	95013 C22	GP Jack	102
622 7486	37502 C30	BNC Elbow plug	3	947 0690	40029H	UHF Panel socket	47
622 8731	35013	BNC Bulkhead socket	6	948 7729	37570 C12	BNC Plug	3
622 8926	17030 H	N Panel straight adaptor	65	948 7956	15030 H	N Panel straight adaptor	65
622 9981	17057 C12H	N Panel jack	62	948 9895	35001 C29	BNC Plug	3
624 0712	17055 C12	N Plug	59	950 4268	35004 C29 H	BNC Panel jack	5
624 0714	35030 C24	BNC Bulkhead jack	4	950 5235	37507 H	BNC Panel socket	7
624 1310	15056	N Bulkhead adaptor (not illustrated)	59	952 1621	35070 A10	BNC Plug	3
624 4386	17055 C25	N Plug	59	952 1622	35039 A10	BNC Bulkhead jack	4
624 6078	37527	BNC Bulkhead socket	6	952 2502	35057 C10 H	BNC Panel jack	5
624 8610	35065 H	BNC Stripline socket	7	952 9777	30004	BNC Jack cap without chain	15
624 9337	15021 C10	N Jack	60	952 9778	35057 A10 F	BNC Panel jack	5
625 1569	40052 U	UHF Panel socket	47	952 9779	35060 A10	BNC Jack	3
625 1987	35831	TNC T-adaptor	34	953 3179	40032 C12	UHF Plug	45
625 2739	30001	BNC Plug cap & chain	15	954 4001	35006 H	BNC Panel socket	7
625 7368	35806 K	TNC Panel socket	30	954 4765	37570 C12	BNC Plug	3
625 7835	37585 H	BNC Panel socket	7	954 4766	37557 C12 H	BNC Panel jack	5
626 2197	15041 C22	N Bulkhead jack	61	954 6680	15057 C10 H	N Panel jack	62
626 2855	15057 A10F	N Panel jack	62	955 2282	15055 A10	N Plug	59
626 2856	15074 A10	N Elbow plug	59	955 3132	40003 H	UHF Panel socket	47
626 3802	35801 C30	TNC Plug	27	956 1230	35039 C60	BNC Bulkhead jack	4
626 8815	15057 C10F	N Panel jack	62	956 1231	35002 C60	BNC Elbow plug	3
626 8833	40032 C52	UHF Plug	45	956 1274	95023 C10	GP Plug	102
626 8837	37502 C52	BNC Elbow plug	3	956 3678	15022 C1	N Jack	60
626 8839	37553	BNC Bulkhead straight adaptor	12	956 3721	15003 C1	N Elbow plug	59
626 8840	15048 C10	N Elbow jack	60	972 0199	35070-10	BNC Plug	3
626 9030	37570 C52	BNC Plug	3	972 4198	501-504	N (m)-to-C (f) adaptor	117
626 9032	40065 C52	UHF Jack	46	972 8285	35048-25	BNC Plug	3
628 1949	35853	TNC Bulkhead straight adaptor	34	972 9391	15004-4	N Jack	60
628 1953	25020 C10	C Elbow plug	77	999 5224	10001	N Plug cap & chain	66
628 1954	15032 C6	N Bulkhead jack	61	5970 99			
628 1955	25019 C6	C Plug	77	654 4292	ST100539	Insulator Bushing	6
628 1956	25031 C79	C Bulkhead jack	78	5985 99			
628 1957	25070 C10	C Bulkhead jack	78	620 8523	ST104840	ISA Transition 50 ohms to 75 ohms	133
628 3525	15037 C18H	N Panel jack	62	6625 99			
628 3526	15035 C18	N Plug	59	527 1496	ST104715	ISA 12W termination 50 ohms	134
628 5241	37507 K	BNC Panel socket	7	527 1719	84013	BNC through termination 50 ohms	134
630 3312	35001-10	BNC Plug	3	529 7585	81600	Probe kit	143
630 6063	37570 C12	BNC Plug	3	622 8733	84013	BNC through termination 50 ohms	134
630 7134	37539 C12	BNC Bulkhead jack	4	626 4893	ST104975	ISA 50 ohm power divider	135
630 9759	37529	BNC Bulkhead socket	6				
631 3558	25013 C79	C Elbow plug	77				
631 3976	35008	BNC Bulkhead socket	6				
631 4117	17015 C7	N Plug	59				

Printed in England.