





Dimensions and weights Brass Mark 4 Plugs and sockets

Free plugs and sockets

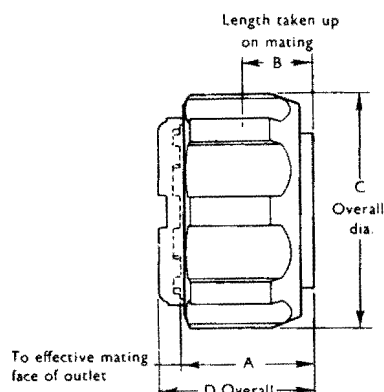

Fixed plugs and sockets (Round flange)

MOUNTED FROM FRONT OR REAR OF PANEL

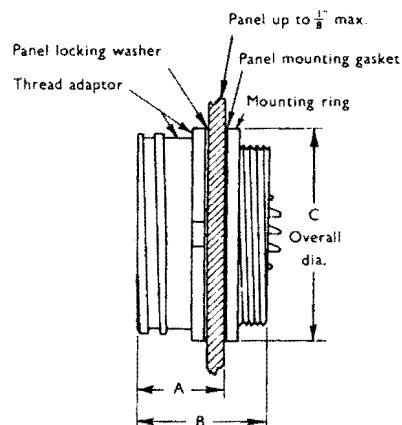

To mount from front of panel, remove mounting ring and gasket.

To mount from rear of panel, remove thread adaptor and locking washer.

Use a panel mounting washer on panels up to $\frac{1}{16}$ " thick

Contact Arrangement	Weight (oz.)		Shell Size	A	B	C dia.	D
	Plug	Skt.					
2-19 amp. 250 V	2.5	2.5	1	.87	.34	1.25	1.02
3-5 amp. 250 V	2.5	2.5					
4-5 amp. 250 V	2.5	2.5					
6-5 amp. 250 V	2.6	2.6					
2-35 amp. 250 V	3.5	3.4	2	.86	.34	1.51	1.02
3-19 amp. 2 kV	3.4	3.4					
4-19 amp. 250 V	3.4	3.4					
6-5 amp. 500 V	3.4	3.4					
6-5 amp. 2 kV	3.4	3.4					
12-5 amp. 250 V	3.4	3.4					
3-60 amp. } 250 V	5.8	5.5	3	1.02	.42	1.92	1.19
1-19 amp. }							
2-60 amp. }	5.6	5.7					
3-19 amp. }							
6-19 amp. 2.5 kV	5.4	5.4					
9-19 amp. 250 V	5.6	5.7					
13-12 amp. 250 V	5.6	5.6					
18-5 amp. spec.	5.5	5.5					
25-5 amp. 250 V	5.6	5.6					

Contact Arrangement	Weights (oz.)		Shell Size	A	B	C dia.
	Plug	Skt.				
2-19 amp. 250 V	1.8	1.9	1	.60	.90	1.125
3-5 amp. 250 V	1.9	1.8				
4-5 amp. 250 V	1.9	1.9				
6-5 amp. 250 V	1.9	1.9				
2-35 amp. 250 V	2.5	2.5	2	.60	.90	1.343
3-19 amp. 2 kV	2.4	2.4				
4-19 amp. 250 V	2.5	2.5				
6-5 amp. 500 V	2.4	2.4				
6-5 amp. 2 kV	2.4	2.4				
12-5 amp. 250 V	2.5	2.5				
3-60 amp. } 250 V	4.1	3.9	3	.67	1.02	1.718
1-19 amp. }						
2-60 amp. }	4.0	4.1				
3-19 amp. }						
6-19 amp. 2.5 kV	3.8	3.8				
9-19 amp. 250 V	4.0	4.1				
13-12 amp. 250 V	3.6	3.6				
18-5 amp. spec.	3.9	3.9				
25-5 amp. 250 V	4.0	4.0				