

SHARP


PORTABLE MINI-DISC RECORDER
RECEPTEUR-ENREGISTREUR MINIDISC PORTABLE
REPRODUCIDOR/REPRODUCTOR MINIDISC PORTÁTIL
BÄRBAR MINISKIVINSPELARE
REGISTRATORE DI MINIDISCHI PORTATILE
RAAGBARE MINIDISC RECORDER
PORTABLE MINIDISC RECORDER

MODELL MODELLO
MODÈLE MODEL
MODELO MODEL
MODELL

MD-MT831H

BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUAL DE MANEJO
BRUKSANVISNING

MANUALE DI ISTRUZIONI
GEBRUIKSAANWIJZING
OPERATION MANUAL

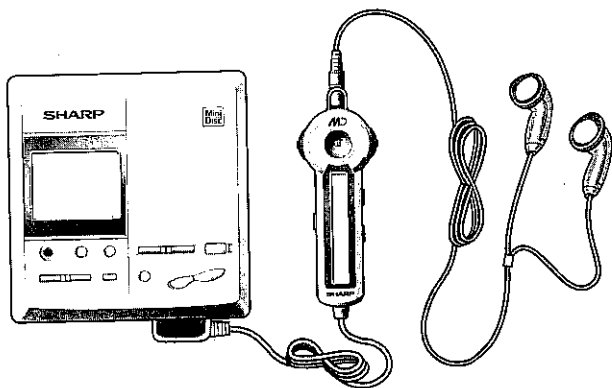

DEUTSCH

FRANÇAIS

ESPAÑOL

SVENSKA

ITALIANO

NEDERLANDS

ENGLISH



**BESONDERE ANMERKUNGEN
REMARQUES SPÉCIALES
NOTAS ESPECIALES
SÄRSKILDA ANMÄRKNINGAR
NOTE PARTICOLARI
BIJZONDERE OPMERKINGEN
SPECIAL NOTES**

- Audio-visuelles Material kann Urheberrechte umfassen, die ohne Genehmigung des Eigentümers dieser Urheberrechte nicht aufgenommen werden dürfen. Siehe die entsprechenden nationalen Gesetze.
- Le matériel audio-visuel peut comporter des oeuvres faisant l'objet de droits d'auteur qui ne peuvent être enregistrées sans l'autorisation du possesseur du droit d'auteur, veuillez vous référer aux réglementations nationales en vigueur.
- El material audiovisual puede consistir en trabajos que tengan derechos de autor y que no deben grabarse sin la autorización del poseedor de dichos derechos de autor. Sírvase consultar las leyes aplicables en su país.
- Audiovisuellt material kan innehålla upphovsrättsarbete som inte skall mångfaldigas utan tillstånd av copyrightinnehavaren. Se den tillämpliga lagen i ditt land.
- Il materiale audio-visivo che fosse soggetto a copyright non può essere registrato senza l'autorizzazione del possessore del copyright. Si prega di attenersi alle leggi in vigore sul territorio nazionale.
- Audio-visueel materiaal kan worden beschermd door auteursrechten, in welk geval het niet mag worden opgenomen zonder de toestemming van de auteursrechthouder. Zie voor nadere informatie de betreffende wetten in het land van gebruik.
- Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Please refer to relevant law in your country.

ønsker man at tilslutte en DC-adaptor så skal def vaere en godkendt type med indbygget sikring.

Vid anslutning till yttre likspänningskälla skall det alltid finnas en säkring i kretsen.

Käytettäessä akkua tai mutta ulkopuolista tasajännitelähdettä on laitteen ja jännitelähteen välillä boltava sulakkeella varustettu adaptor.

When connecting the appliance to an external DC-source, ensure that there is a fuse protection in the circuit.

DENNA APPARAT ÄR ANSLUTEN TILL 230 V VÄXELSTRÖM NÄR STICKPROPPEN ÄR INSKJUTEN I VÄGGUTTAGET. FÖR ATT FULLSTÄNDIGT KOPPLA IFRÅN APPARATEN, V.G. DRAG UT STICKPROPPEN.

- Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.
- Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.
- Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.
- Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.
- Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.
- Este equipamento obedece às exigências das diretivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela diretiva 93/68/CEE.
- Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.
- Denna utrustning uppfyller kraven enligt riklinjerna 89/336/EEC och 73/23/EEC så som kompletteras av 93/68/EEC.
- Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.
- Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.
- Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/EOK και 73/23/EOK, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/EOK.
- This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

PŘED SEJMUTÍM KRYTU NUTNO VYJMOUT VIDLICI ZE SÍŤOVÉ ZÁSUVKY.

PRED ZLOŽENÍM KRYTU JE NUTNÉ ODPOJÍŤ PRÍSTROJ ZO SIETE.

PRÍSTROJ NEVYSTAVUJTE KAPAJÍCÍ NEBO STRÍKAJÍCÍ VODĚ.

PRÍSTROJ NEVYSTAVUJTE KVAPKAJÚCEJ ALEBO STRIEKAJÚCEJ VODE.

Urządzenie należy chronić przed zalaniem i wilgocią.

POZOR NEBEZPEČENSTVO VÝBUCHU BATÉRIE PRI JEJ NESPRÁVNOM VLOŽENÍ

NAHRADIŤ IBA ROVNAKÝM ALEBO EKVIVALENTNÝM TYPOM DOPORUČENÝM VÝROBCOM. POUŽITÚ BATÉRIU ZLIKVIDOVAŤ PODĽA POKYNOV VÝROBCU.

VORSICHT:

Das Gerät weder Tropf- noch Spritzwasser aussetzen. Ansonsten besteht die Gefahr eines Brandes oder elektrischen Schlages. Es sollten keine mit Flüssigkeiten gefüllten Gegenstände wie Vasen auf dem Gerät abgestellt werden.

Attention:

Ne pas exposer ce matériel aux éclaboussures et aux projections d'eau, qui pourraient provoquer le feu ou l'électrocution.

Ne pas poser sur l'appareil un récipient contenant de liquide.

Advertencia:

Para prevenir incendio o sacudidas eléctricas, no exponga este aparato a gotas o salpicaduras. No deberán ponerse encima del aparato objetos que estén llenos de líquido, como por ejemplo un florero.

Varning:

För att förhindra brand eller elektrisk stöt, skydda apparaten mot fukt och väta. Inga vätskefyllda föremål såsom vasor bör placeras på enheten.

Advarsel:

Til at forbygge ild og stød risiko, lad være med at undsaette denne indretning for drypning eller overstaenkning. Der må ikke anbringes nogen genstande fyldt med vand, som for eksempel vaser, på dette apparat.

Advarsel:

For å unngå brann eller kortslutning, utsett ikke produktet for vann eller fuktighet. Gjenstander som inneholder væske, f.eks. en blomstervase, må ikke plasseres oppå apparatet.

Varoitus:

Älä vie laitetta sateeseen tai kosteisiin tiloihin. Jos laite on kostunut, anna sen kuivua ennen kuin käytät sitä verkkovirralla. Nestettä sisältäviä astioita kuten esim. kukkamaljakoita ei saa asettaa laitteen päälle.

Attenzione:

Onde prevenire incendi o scosse elettriche, non esponete questo apparecchio a fonti di umidità o acqua.

Non collocarvi sopra nessun oggetto riempito d'acqua, come per esempio vasi.

Waarschuwing:

Om brand of een gevaarlijk elektrische schok te voorkomen, stel dit toestel niet bloot aan spatten en vochtdruppels.

Met vloeistoffen gevulde voorwerpen, zoals vazen, mogen niet op het toestel geplaatst worden.

Warning:

To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.

VORSICHT:

Längeres Abspielen einer tragbaren Stereoanlage mit voller Leistung kann das Gehör des Benutzers beschädigen.

Im Falle der Verwendung mit dem SHARP Ohrhörer (Modellnummer: RPHOH0176AFZZ) entspricht das Modell dem Gesetz. Bestellen Sie richtigen Ohrhörer, wenn es zur Beschädigung kommt.

ATTENTION:

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

Le produit est en conformité avec la loi quand il est utilisé avec les écouteurs SHARP (modèle n° RPHOH0176AFZZ). Si ceux-ci venaient à être endommagés, remplacez-les par des écouteurs appropriés.

PRECAUCIÓN:

La audición prolongada a alta potencia de un equipo estéreo personal puede causar daños en los oídos del usuario.

El modelo satisface la ley relacionada con el empleo de los auriculares SHARP (número de modelo RPHOH0176AFZZ). En caso de avería, pida unos auriculares adecuados.

WARNING:

Lyssna till personlig stereo med full volym under långreid kan skada hörseln.

Modellen överensstämmer med lagstadgade bestämmelser för användning med SHARP hörlurar (RPHOH0176AFZZ) Vid skador beställ riktiga hörlurar.

AVVERTENZA:

L'ascolto prolungato ad alto volume di uno stereo personal può danneggiare l'udito. Il modello è in conformità di legge se usato con gli auricolari SHARP (numero di modello RPHOH0176AFZZ). Ordinare nuovi auricolari se quelli forniti si guastano.

LET OP:

Langdurig luisteren naar een stereogeluidsinstallatie met een hoog volume kan het gehoor beschadigen.

Dit model voldoet aan de legale vereisten bij gebruik met de SHARP hoofdtelefoon (modelnummer RPHOH0176AFZZ). Vervang de bijgeleverde hoofdtelefoon indien beschadigd door een voor dit toestel geschikte hoofdtelefoon.

CAUTION:

At full power prolonged listening to a personal stereo may damage the user's hearing.

The model is in compliance with the law in case of using it with the SHARP earphones (model number RPHOH0176AFZZ). Order proper earphones if it comes in to damage.

● VORSICHT

Verwenden Sie den portablen Mini-Disc Recorder nur entsprechend den in dieser Anleitung angegebenen Anweisungen, und versuchen Sie nicht, den Verriegelungsschalter zu beeinträchtigen, oder machen Sie keine andere Einstellung, da dies dazu führen kann, gefährlicher Ausstrahlung ausgesetzt zu werden.

● ATTENTION

Utiliser le lecteur-enregistreur minidisc portable en respectant les indications données dans ce manuel et éviter l'intervention sur le commutateur de verrouillage ou tout autre réglage. En cas de non-respect, on s'exposera à une radiation dangereuse.

● PRECAUCIÓN

Utilice el grabador/reproductor portátil minidisc sólo de acuerdo con las instrucciones dadas en este manual y no intente interferir el interruptor de bloqueo ni realizar ningún otro ajuste porque podría ocasionar la exposición a radiación peligrosa.

● OBSERVERA

Använd den bärbara miniskivinspelaren endast i enlighet med anvisningarna i denna bruksanvisning och försök inte påverka låsningsströmbrytaren eller göra andra inställningar som kan leda till risk för farlig strålning.

● ATTENZIONE


Quando si usa il registratore di minidischi portatile, seguire le istruzioni di questo. Non cercare di interferire con l'interruttore interbloccato e non effettuare altre regolazioni, poiché ciò potrebbe provocare un'esposizione a pericolose radiazioni.

● LET OP

Gebruik deze draagbare MiniDisc-recorder alleen zoals in de aanwijzingen in deze gebruiksaanwijzing staat vermeld. Maak geen veranderingen in de interlockschakelaar of andere onderdelen, daar dit mogelijk blootstelling aan gevaarlijke stralingen veroorzaakt.

● CAUTION

Use the portable minidisc recorder only in accordance with the instructions given in this manual and do not attempt to interfere with the interlock switch or make any other adjustment as this may result in exposure to hazardous radiation.

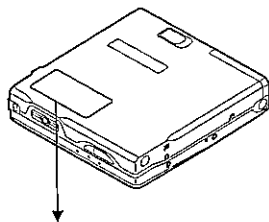

CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1

LASER KLASSE 1
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT
LASER TRÍDY 1
LASER TRIEDY 1

VÝSTRAHA: VÝROBEK JE VYBAVEN LASEREM. PŘI NESPRÁVNÉ MANIPULACI S PŘÍSTROJEM V ROZPORU S TÍMTO NÁVODEM MŮŽE DOJÍT K NEBEZPEČNÉMU OZÁŘENÍ. NEOTVÍREJTE A NESNÍMEJTE PROTO ŽÁDNÉ KRYTY A PŘÍSTROJ NEOPRAVUJTE. OPRAVU A SERVIS SVĚŘTE ODBORNÉMU SERVISU.

VÝSTRAHA: VÝROBOK JE VYBAVENÝ LASEROM. PRI NESPRÁVNOM MANIPULOVANÍ S PŘÍSTROJOM V ROZPORE S TÝMTO NÁVODOM MŮŽE DŮJSŤ K NEBEZPEČNÉMU OŽIARENÍU. NEODKRÝVAJTE PRETO ŽIADNE KRYTY A PŘÍSTROJ NEOPRAVUJTE. OPRAVU A SERVIS PRENECHAJTE ODBORNÉMU SERVISU.

INTRODUCTION

Thank you for purchasing this SHARP product.
For the best performance, read this manual carefully.
It will guide you in operating your SHARP product.


CONTENTS

	Page		Page
SPECIAL NOTES	1	ABOUT TRACK NUMBERS	20
ACCESSORIES	2	ABOUT THE TOC	21
PRECAUTIONS	3	PLAYING A MINIDISC	22-23
ABOUT THE RECHARGEABLE		CONVENIENT PLAYBACK	
BATTERY	4	FUNCTIONS	24-26
NAMES OF CONTROLS AND		EDITING	27-32
INDICATORS	4-5	USING WITH OTHER EQUIPMENT ...	33
POWER SOURCE	6-7	CONVENIENT OPERATION	
BEFORE RECORDING	8-9	OF THE UNIT	34-37
RECORDING USING THE		WHAT IS A MINIDISC?	38
ANALOGUE CABLE	10-11	TROUBLESHOOTING	38-39
RECORDING USING THE		MINIDISC SYSTEM LIMITATIONS	40
OPTICAL DIGITAL CABLE	12	ERROR MESSAGES	41-42
RECORDING FROM THE		MAINTENANCE	42
MICROPHONE	13-14	SPECIFICATIONS	43
CONVENIENT RECORDING			
FUNCTION	15-19		


SPECIAL NOTES

- US and foreign patents licensed from Dolby Laboratories Licensing Corporation.
- The AC adaptor supplied with the MD-MT831H must not be used with other equipment.
- The letters in brackets contained in the model number indicate the colour of the product only. Operation and specifications are unaffected.
- The supplied AC adaptor contains no user serviceable parts.
Never remove covers unless qualified to do so.
It contains dangerous voltages, always remove mains plug from the main outlet socket before any service operation or when not in use for a long period.


ACCESSORIES

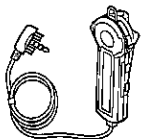


Remote Control Unit x 1

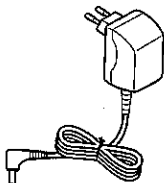


AC Adaptor
(RADPA7486AFZZ) x 1

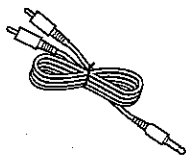


Analogue Cable
(RCA Lead) x 1

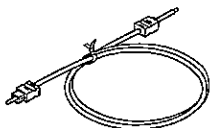


Optical Digital Cable x 1

 


Rechargeable Lithium-Ion
Battery (AD-T51BT) x 1

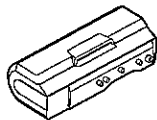

Battery Case x 1

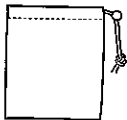


Carrying Bag x 1

 

Handstrap x 1



Earphones x 1

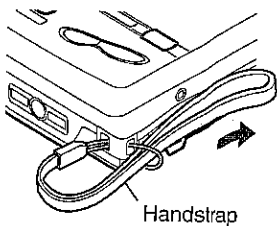

Note:

Parts and equipment mentioned in this operation manual other than those in the drawing are not included.

PRECAUTIONS

■ Important

- Do not wear your earphones when you are crossing streets or near traffic.
- Do not use your earphones whilst driving a motor vehicle, it may create a dangerous traffic hazard and may be illegal. Remember to obey all of the safety rules in your area.
- Do not play the unit at a high volume. Hearing experts advise against extended listening at high volume levels.
- If you experience ringing in your ears, reduce the volume or discontinue use.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus is designed for use in moderate climate.

■ Volume setting

Reduce the volume before starting to play. MiniDiscs, compared to ordinary cassette tapes, have very little noise. If the volume is adjusted according to your usual expectations of noise, you may damage your hearing due to the high volume.

■ Concern for others when listening to MiniDiscs

If you are enjoying listening to music, the sound escaping from your earphones may annoy people around you. If you are using the unit in particularly crowded places (such as on trains or buses), reduce the volume to avoid annoying people around you.

■ Storing the unit

Avoid using or leaving the unit in the following places.

- Places exposed to direct sunlight for many hours (especially in cars with the doors and windows closed) or near heaters.
(The cabinet may deform, change colour or the unit may malfunction.)
- Places exposed to water.
- Places exposed to excessive dust.
- Places where temperatures are excessively high or low.
- Places (bathrooms) where the humidity is extremely high.
- Places with strong magnetic fields such as TVs or loudspeakers.
- Places exposed to vibration.
- Places where sand can easily enter the inside of the unit (beaches etc.).
- If the unit is used near radio tuners or TVs, noise and/or picture interference may result. If you experience these problems, move the unit away from such devices.

■ Precautions

To avoid accidental electric shock or other possible problems, observe the precautions listed below.

- Do not disassemble or modify the unit.
- Do not drop or subject the unit to shock.
- Do not use the unit near open flames.
- Do not spill liquid on the unit.
- Do not use an external power supply, other than the 5V DC supplied with this unit, as it may damage it.
- SHARP is not responsible for damage due to improper use. Refer all servicing to a SHARP authorised service centre.

ABOUT THE RECHARGEABLE BATTERY

- A rechargeable lithium-ion battery is the only kind that can be used. Even if the battery supplied with the unit is not used, you should charge it at least once every three months because of the special quality of this battery.
- The rechargeable battery can be charged approximately 300 times.
- Do not use any battery other than that specified. Use of other batteries may cause malfunctions.
- When the operating time is reduced to about half the normal amount of time, even after a full charge is performed, replace the battery with a new one.
- When charging or when using the rechargeable battery, use it within an ambient temperature range of 5°C - 35°C (41°F - 95°F).
- If the rechargeable battery is used in a cold environment, the operating time will be reduced.
- Do not disassemble the battery.


Since the rechargeable battery is vulnerable to damage, please note the following.

- Do not carry the battery in your pocket or a bag together with metal objects (keys, coins, jewelry, etc.). The battery may short out and generate significant amounts of heat.
- Do not short-circuit the terminals as they will become very hot and will damage the battery.
- Do not dip the battery in water, do not dispose of it in a fire, and do not take it apart.

To avoid damaging the battery and shortening its service life, please note the following.

- Do not drop or subject the battery to shock.
- Do not insert objects (metal etc.) into the battery compartment of this product or into the rechargeable battery. Do not get the terminals dirty. If the rechargeable terminals are dirty, the operating time may be shortened or it may not be possible to charge the battery.
- After the rechargeable battery is charged or used, it will get slightly warm. This is normal.


NAMES OF CONTROLS AND INDICATORS

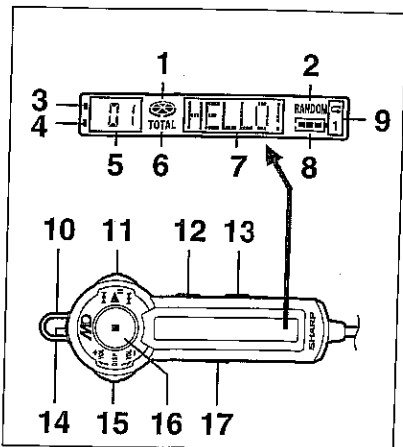


Remote control unit

1. Disc Mode Indicator
2. Random Indicator
3. Record Indicator
4. Synchro Recording Indicator
5. Track Number Indicator
6. Total Track Number Indicator
7. Character/Time Information Indicator
8. Battery Indicator
9. Repeat Indicator
10. Attachment Eye
11. Play/Pause/Fast Reverse/
Fast Forward Shuttle Switch
12. Play Mode Button
13. Sound/Track Mark Button
14. Earphones Socket
15. Display/Volume Shuttle Switch
16. Stop/Power Off Button
17. Hold Switch


■ Main unit

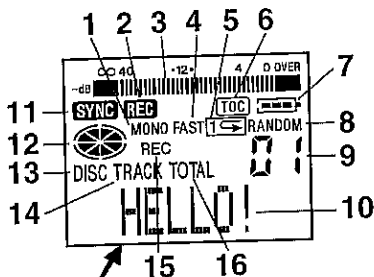


1. Monaural Long-Play Mode Indicator
2. Record Indicator
3. Level Meter
4. Fast Play Indicator
5. Repeat Indicator
6. TOC Indicator
7. Battery Indicator
8. Random Indicator
9. Track Number Indicator
10. Character/Time Information Indicator
11. Synchro Recording Indicator
12. Disc Mode Indicator
13. Disc Name Indicator
14. Track Name Indicator
15. Remaining Recording Time Indicator
16. Total Track Number Indicator

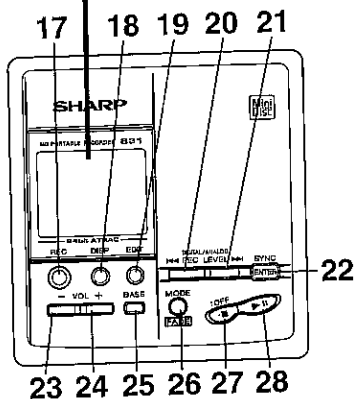

17. Record/Track Mark Button
18. Display/Character Select Button
19. Edit/Auto Mark/Time Mark Button
20. Fast Reverse/Recording Level Down/Name Select Button
21. Fast Forward/Recording Level Up/Name Select Button
22. Enter/Fast Play/Synchro Button
23. Volume Down/Cursor Button
24. Volume Up/Cursor Button
25. Bass/Fade Time/Delete Button
26. Mode/Fade Button
27. Stop/Power Off Button
28. Play/Pause Button

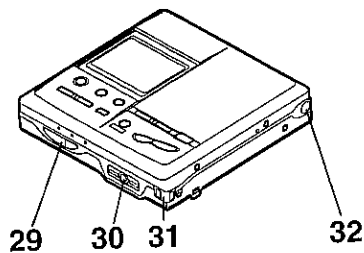


29. Open Lever
30. Remote Control/Earphones Socket
31. Handstrap Holder
32. Optical/Line Input Socket

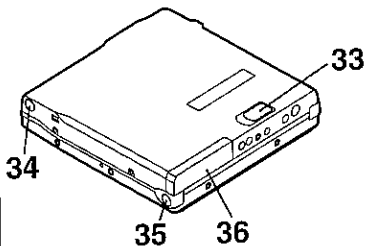

33. Hold Switch
34. 5V DC Input Socket
35. Microphone Input Socket
36. Battery Cover

This unit can be used with the following power sources: a rechargeable battery, an AC adaptor, a battery case, and a separately available car adaptor (AD-CA20X).

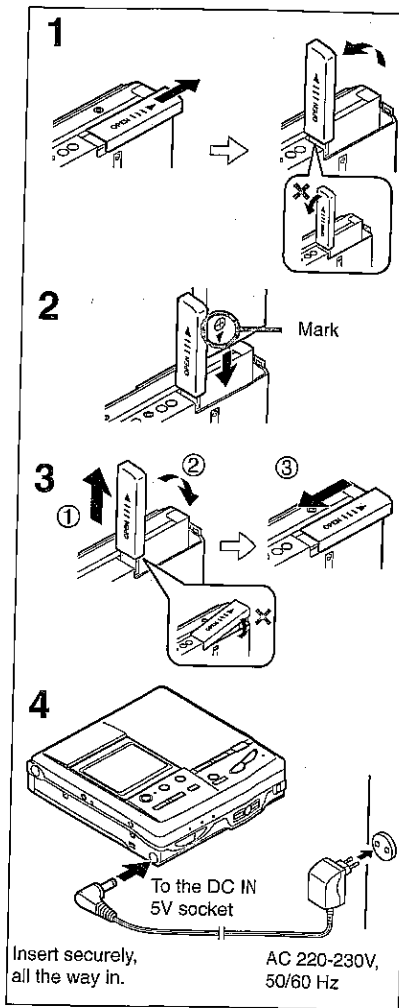



Caution:

 
- Do not remove the plastic around the rechargeable battery. Heat generation, fire and explosion can result.

■ Rechargeable battery power

When the rechargeable battery is used for the first time or when you want to use it after a long period of disuse, be sure to charge it fully.



- 1** Open the battery cover.
- 2** Insert the rechargeable battery.
 - Insert the side with the arrow first.
- 3** Close the battery cover.
 - Do not fold down the cover before pulling it up as ① shows. The cover may break.
- 4** Plug the AC adaptor into the AC socket, and then insert the plug on the AC adaptor lead into the DC IN 5V socket.
 - About 4 seconds later, "  " will flash, and the battery will begin charging.
 - Battery charging will be complete in 3.0 hours. When the charging is complete, "  " will go out.

Notes:

- After charging has been completed, the AC adaptor may be left connected. (For example, when charging at night)
- If the rechargeable battery is in the unit, it will be charged, even whilst operating the unit. (Float charge)
- Do not force the battery cover open too far.
- When the AC adaptor plug is inserted and a MiniDisc has already been inserted, playback may start automatically. In this case, press the  /OFF button twice to turn the power off.

2

 ② Open.

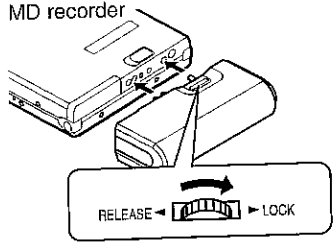**3** Back of the MD recorder

■ Alkaline battery power with a rechargeable battery

If you use the battery case and the rechargeable battery at the same time, the MD can play much longer than with only one source of battery power.

- Use one commercially available alkaline battery (LR6, "AA" size).

1 Make sure that a rechargeable battery is inserted.

- The external battery case should not be used unless the rechargeable battery is installed in the main unit.

2 Insert the battery into the battery case.

- (1) Open the case cover.
- (2) Insert the battery according to the polarity marked on the inside of the battery case. Then, close the case cover.

3 Attach the battery case to the main unit.

- (1) Match the bumps on the battery case to the holes in the main unit.
- (2) Turn the screw in the direction marked "LOCK" to secure the battery case.

Caution:

- Whilst you are using the rechargeable battery and the alkaline battery at the same time, do not remove either of them. If you do, when the unit is in the play mode, playback will stop. When in the recording mode, the recorded contents will be erased, and the power may be disconnected.
- Do not use rechargeable batteries (nickel-cadmium battery etc.) in the battery case.
- If the unit is not used for a long period of time, remove the battery. (Even if the power is turned off, the battery will drain slowly but continuously.)
- Remove the battery if it is weak or if the unit is not in use for long periods to prevent potential damage due to battery leakage.
- Be sure to hold the plug when removing it. If you pull on the lead, it may break, or the unit may malfunction.
- Do not use any car adaptor except for the separately available AD-CA20X.
- For information about the battery life, see the battery item in the SPECIFICATIONS on page 43.
- This unit should only be used within the range of 0°C (32°F) and 40°C (104°F).

■ AC power

1 Connect the lead from the AC adaptor to the DC IN 5V socket on the main unit.

2 Plug the AC adaptor into an AC socket.

Notes:

- When there is thunder or lightning in your vicinity, unplug the AC adaptor from the AC socket.
- When power failure occurs whilst playing back using the AC adaptor, disconnect the adaptor from the outlet. Otherwise, playback may start automatically when the power returns.
- When the unit is not in use for extended periods, remove the AC adaptor from the AC socket.
- Never use an AC adaptor other than the one specified. Otherwise, problems or serious hazards may be created.
- Do not bend, twist or tie the power lead or put heavy objects on top of it.


■ Type of recording

Two types of recording are possible: "Digital recording" and "Analogue recording". There are different cables and connections for each type of recording, depending on the sockets on the equipment being connected to the unit.

(1) Analogue recording

Connect the unit to equipment that has a line output socket, using the analogue cable included with this unit.


- **Main equipment:** CD player, MD player, radio cassette player, etc.
- **Cable required:** Analogue cable included with this unit.

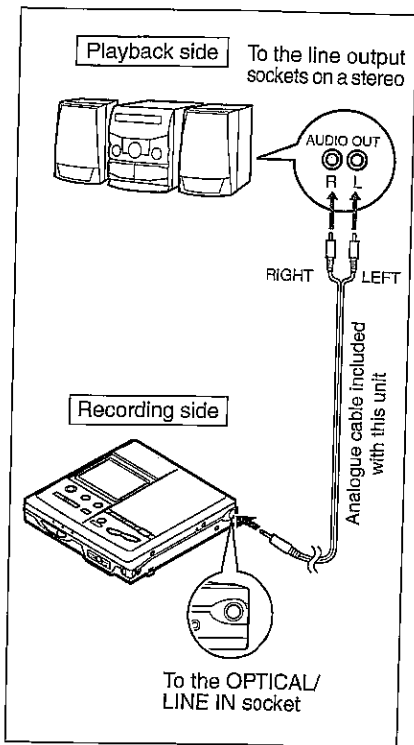

(2) Digital recording

Connect the unit to equipment that has an optical output socket using the optical digital cable included with this unit. Using an optical signal to transfer the music to a MiniDisc allows very high quality recording.

- **Main equipment:** CD player, MD player, CS/BS tuner, etc.
- **Cable required:** Optical digital cable included with the unit or optional optical digital cable AD-M2DC.

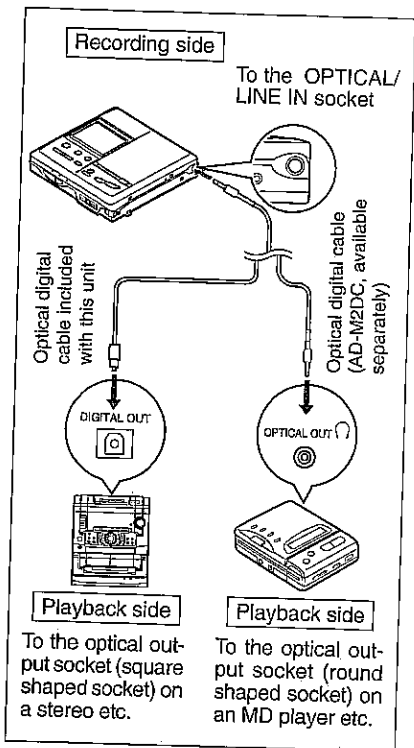

Notes:


- When making important recordings, it is recommended that you use the AC adaptor. A fully charged rechargeable battery should be loaded into the unit. Then, even if a power failure occurs, the power source will switch over to the rechargeable battery automatically.
- When recording using the rechargeable battery or alkaline battery, set the headphone volume level to "0", this will conserve battery power. Listening whilst recording will reduce the battery life.
- Insert each plug firmly. If the connections are poor, the recording may not be made properly. Always keep the plugs clean. If the plugs are dirty, electrical noise may be recorded.

■ Types of discs

There are two types of discs: playback-only and recordable discs.

● Playback-only MiniDisc:

This type of MiniDisc usually contains commercially available pre-recorded music. This is the same kind of optical disc as CDs. Playback is performed using an optical pickup.
(Recording and editing are not possible.)

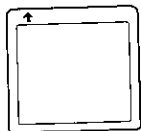


There will only be a shutter on one side (the back).

● Recordable MiniDisc:

This is a "raw disc" on which recording can be performed.

This is a magneto-optical disc.

Recordings are made using a laser and a modulated magnetic field. Repeated recording is possible.

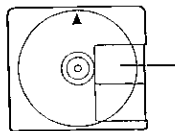


Shutters can be seen on both sides of this type of disc.

■ To prevent recorded discs from being erased accidentally

Slide the accidental erase prevention tab, located on the side of the disc, in the direction indicated by the arrow.

- The disc will then be protected against accidental erasure.

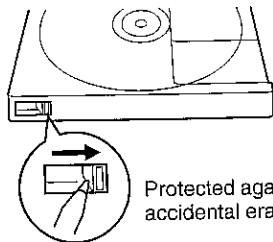


Protected against accidental erasure

- To add a recording to such a disc, slide the accidental erase prevention tab back to its original position.


Recording from CDs or MDs (Synchro recording)

Synchro recording is a method that detects the playback sound from the source equipment. When sound is present, it automatically starts the recording. When the source is silent, the recording will be paused.

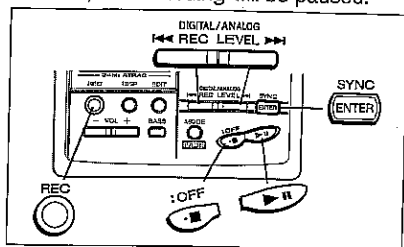

1 Connect the external equipment.
(See page 8.)


2 Insert a recordable MiniDisc.

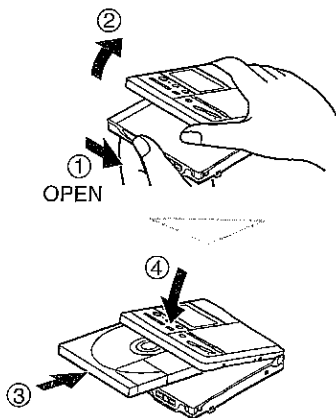

3 Press the REC button.

- To record from a CD or an MD, first start playing the track you want to record.

 4 Whilst playing sound from the external equipment connected to this unit, press the ◀◀ or ▶▶ button to adjust the recording level.



- Adjust the recording level so that the maximum sound volume from the source makes the reading swing somewhere between -4 dB and 0 dB.
- To record from a CD or an MD, first adjust the recording level. Then put the equipment connected to this unit into the playback stand-by mode.

5 Press the ENTER/SYNC button.



6 Begin playback on the source equipment.

- Recording will begin automatically.

To interrupt recording:

- When the source equipment is stopped, the unit will enter the synchro recording stand-by mode. When playback is resumed, a recording will be resumed.
- If a silence lasts for 3 seconds or more, the recording will be paused.
- Pressing the ▶|| button on this unit (when in this mode) will cause the unit to enter the recording stand-by mode and cancel the synchro recording mode.
- The track number will be increased by one each time the recording is interrupted.

To stop recording:

Press the ⏻/OFF button.

- If the unit is left unattended after the recording is complete, the power will automatically shut off in approximately 2 minutes.


To turn off the power:

Press the **■/OFF** button whilst in the stop mode.

- After the track number has been written on the disc, the power will shut off automatically. (For details about the TOC, see page 21.)

To remove the MiniDisc:

Turn off the power and move the OPEN lever in the direction indicated by the arrow.

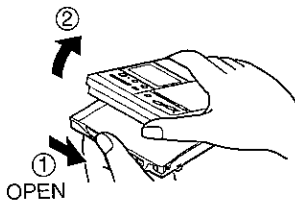

■ Recording from a tuner or a CD (Manual recording)

Manual recordings can be started and stopped as you like.

- 1 Place the unit in the recording stand-by mode. (Perform steps 1 - 4 in the "Synchro recording" section.)
- 2 Press the **▶||** button.
 - Recording will start.
 - To record from a CD, press the **▶||** button, and then start playback on the equipment connected to this unit.
 - Track numbers can be created whilst recording. (Page 18)

To interrupt recording:

Press the **▶||** button whilst recording.

- The unit will enter the recording stand-by mode.
- To resume recording, press the **▶||** button again.

The track number will be increased by one each time you interrupt a recording.

Recordings can not be made in the following situations:

- Recording on a playback-only MiniDisc (commercially available music).
- If a MiniDisc is protected against accidental erasure. (page 9)

About the recording level:

- If the recording level is too low, the playback sound volume may be too low to hear well. If it is too high, the playback sound may be greatly distorted. Since digitally recorded CDs have a large dynamic range (the volume can vary tremendously from very soft to extremely loud), do not set the recording level any higher than is necessary.

Precautions when recording:

- Do not jar or bump the main unit whilst recording. Otherwise, the recording may be unusable.
- Depending on the strength and type of playback signal in the original recording, the new recording may not begin or pause at the correct point when in the synchro mode. If this happens, try making a manual recording.

Precautions when inserting a MiniDisc:

- To insert a MiniDisc, push on the middle of the edge of the disc whilst holding it parallel to the main unit.
- If any resistance is felt, do not try to force the MiniDisc into the unit, as it may cause damage to the unit. If resistance is felt, remove the MiniDisc and try reloading it.

RECORDING USING THE OPTICAL DIGITAL CABLE

This is the method used for recording digital signals from CDs or MDs exactly as they are stored on the original. Compared to recordings made from analogue inputs, digital recordings have extremely high-quality sound.

■ Synchro recording

- 1 Connect the external equipment. (See page 8.)
- 2 Insert a recordable MiniDisc, and then press the REC button.
- 3 Whilst playing sound from the external equipment connected to this unit, press the ◀◀ or ▶▶ button to adjust the recording level.
 - First adjust the recording level. Then put the equipment connected to this unit into the playback stand-by mode.
- 4 Press the ENTER/SYNC button.
- 5 Start the playback on the equipment connected to this unit.

■ Manual recording

- 1 Place the unit in the recording stand-by mode. (Perform steps 1 - 3 in the "Synchro recording" section.)
- 2 Press the ▶|| button, and then start playback on the equipment connected to this unit.

Controlling the digital recording level

This unit can adjust the digital recording level just the same as the analogue recording.


- You can adjust the level in 1 dB increments within the range of +12 - -12dB.
- Once you adjust the digital recording level, the setting remains even after the recording stops. (For cancellation instructions, see page 37.)

There are cases where digital recording may be impossible.

In the following cases digital recording is impossible, even if you are using digital cables.

When you attempt to make a new digital recording from a track that was digitally recorded on a MiniDisc.

- MiniDiscs are designed so that only first generation digital copies can be made. Further digital copies are prevented by the SCMS (Serial Copy Management System).

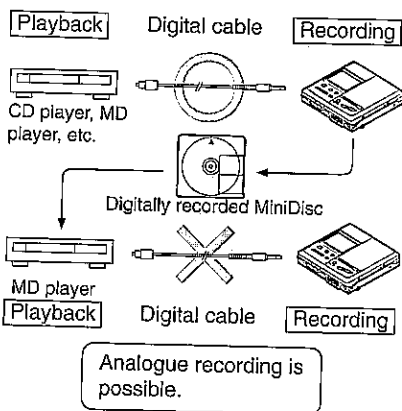


Notes:

- This unit incorporates a sampling rate converter. When this unit is connected to digital equipment such as CS/BS tuners or DAT tape recorders that use a different sampling frequency (32 kHz or 48 kHz), recordings can still be made. (The sampling frequency of this unit is 44.1 kHz.)
- When making a digital recording from a portable CD player (if the player has a sound skip prevention function and this function is turned on) the optical output will drop out and digital recording will not be possible. Be sure to turn the sound skip prevention function off.


Recording from the microphone (Mic synchro recording)

The recording will begin automatically in response to a noise or a person speaking. When the sound stops, the recording will pause. This function is convenient when recording lectures, conferences, etc.

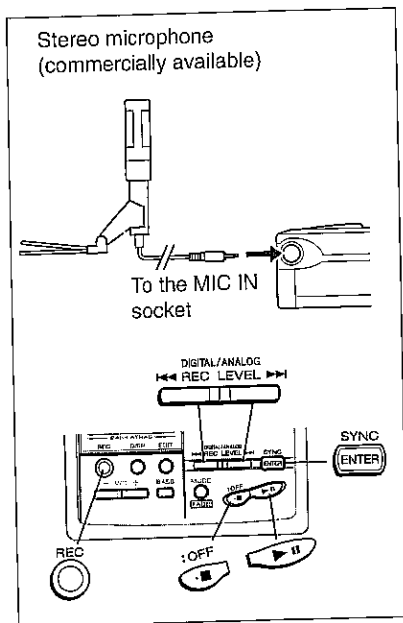

- 1 Connect the stereo microphone to the MIC IN socket.
 - When a microphone is connected to this unit, the unit will automatically switch to input from the microphone.
- 2 Insert a recordable MiniDisc.
(See page 10.)

 - 3 Press the REC button.
 - A monaural, long-play recording mode is available. (Page 18)
 - Timed identification marks can be created whilst recording. (Page 16)
- 4 Press the ◀◀ or ▶▶ button to adjust the recording level.



- Adjust the recording level so that the maximum sound volume from the source makes the reading swing between -4 dB and 0 dB.
- When the recording level display is changed from "MIC H 21" to "MIC L 20", the sound will be interrupted momentarily. This is normal.

- 5 Press the ENTER/SYNC button to select the synchro recording level. (This level can be changed, even whilst recording.)
 - Refer to the following table.

	Synchro recording level display	Sound level at which to start recording
Mic input	MIC SYNC H	-24dB
	MIC SYNC L	-12dB

- When the microphone input is set to "MIC SYNC H", recording will start when the lowest noise is detected. If the unit starts recording too often from small unwanted noises, set the microphone input to "MIC SYNC L".

Continued to the next page.

6 When a sound, such as a person speaking, is picked up by the microphone, recording will begin automatically.

- If a silence lasts for 3 seconds or more, the recording will be paused automatically. However, the unit will not pause for about the first 10 seconds after recording has started.

To interrupt a synchro recording:

Press the ►|| button whilst recording.

- The Mic synchro recording mode will be cancelled, and the unit will enter the recording stand-by mode.
- To resume synchro recording, press the ENTER/SYNC button again.

To stop recording:

Press the ■/OFF button.

■ Recording from the microphone (Mic manual recording)

You can start recording manually (anytime you like).

- 1** Put the unit in the recording stand-by mode. (Perform steps 1 - 4 in the "Mic synchro recording" section.)
- 2** Press the ►|| button.
 - Recording will start.

To interrupt a recording:

Press the ►|| button whilst recording.

- The unit will enter the recording stand-by mode.
- To resume recording, press the ►|| button again.

The track number will be increased by one each time you interrupt a recording.


To stop recording:

Press the ■/OFF button.

Notes:

- If you want to use a microphone, be sure it is a plug-in-power type microphone.
- When a plug-in-power type microphone is plugged in, the main unit will provide power for the microphone's operation.
- If a different type of microphone is plugged in, it may not operate properly or it may cause the unit to malfunction.
- Insert the plug firmly. If you don't, the recording will not be made properly.
- Use a microphone with a 3.5 mm (1/8") diameter stereo mini plug.
- Whilst making a mic recording, do not connect anything to the OPTICAL/LINE IN socket on the main unit.


CONVENIENT RECORDING FUNCTION

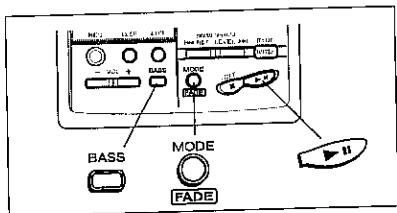


■ To start fade-in recording

The recording level can be increased gradually when you start recording.

- 1 Whilst in the recording stand-by mode, press the MODE/FADE button repeatedly to select Stereo (Fade-in) or Monaural (Fade-in).

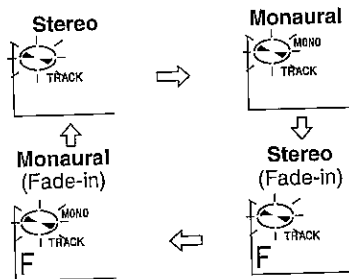

- 2 Press the ►|| button.
 - Fade-in recording will start.

 


- If you start recording after pressing the ENTER/SYNC button, the fade-in recording will not be made.
- When the recording stops, the fade-in function is cancelled and the unit returns to the stereo mode.

To change the fading time:

- 1 Press the BASS button whilst in the recording stand-by mode.



- 2 Each time the BASS button is pressed, the time can be switched.

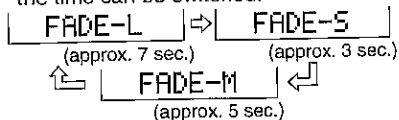


- The setting time is identical to the fade-in, fade-out and auto fade-out times.

■ To stop recording by fading out

The recording level can be decreased gradually when you stop recording.

 - 1 Whilst recording, press the MODE/FADE button.
 - The recording will be paused by fading out.




Notes:

- The sound from the earphones does not change whilst performing fade-in or fade-out recording.
- Depending on the tracks, the fade-in or fade-out sound may be heard longer or shorter than the setting time.
- If the recordable time is shorter than the fading time, the fading function does not work and the following messages are displayed:
 Fade-in/Fade-out: Can't FADE
 Auto fade-out: Can't A.F


The sound will automatically fade out at the end of the MiniDisc so that it will not stop suddenly.

To cancel this function, perform the following steps:

 - 1 Whilst recording or in the recording stand-by mode, press the MODE/FADE button for 2 seconds or more.



 - 2 Each time the MODE/FADE button is pressed, the setting will be switched.




■ Creating marks whilst making a mic recording (Timed auto mark function)

Marks can be created at a fixed interval (every 5 minutes is the default setting) so that the beginning of any track can be found. The interval at which marks are created can be changed by the user.

Whilst in the recording stand-by mode or whilst recording, press the EDIT button.

- Each time the button is pressed, the setting will change as follows:

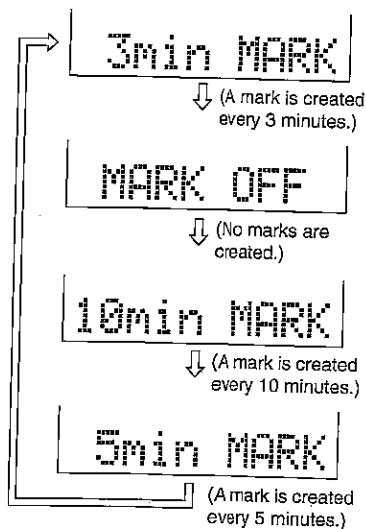

- The time between marks may vary slightly when compared with the actual recording time.

 
About the timed auto mark:

Whenever a recording begins, a track number will be created automatically.

- ——— : Track number which is created when a silence lasts for 3 seconds or more during synchro recording.
- - - - : Track number which is created by the timed auto mark function.


Example when the setting is for "5 minutes":

When making a mic synchro recording




If a silence lasts for 3 seconds or more, a timed auto mark will be created 5 minutes after the previously created track number.

 When making a mic manual recording




- A timed auto mark will be created every 5 minutes.

 When the timed auto mark setting has been changed




When the setting is changed to 10 minutes whilst recording, a timed auto mark will be created 10 minutes after the change is made.

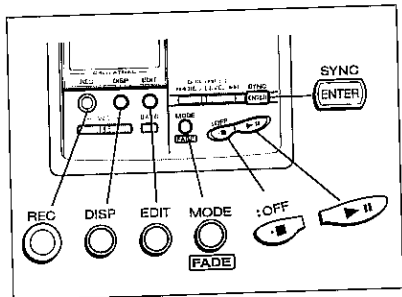

■ Recording tracks as a single track

You can record several pieces of music as a single track, disable the auto marker function.

- 1 Press the EDIT button whilst recording or in its pause mode.

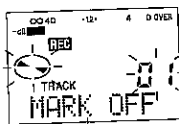

(The display will be blanked out immediately.)

- 2 Press the ►|| button.
 - Recording will start.

Note:

- When making digital recordings using a CD player or an MD player, track numbers will be created automatically regardless of the setting of the auto marker function.

Making a track number automatically:

Press the EDIT button whilst the recording is paused.

- "AUTO MARK" will be displayed.



■ To start recording from the middle of an existing track

You can erase a portion of a track that has been already recorded and make a new recording.

Caution:

- All of the tracks that follow the newly recorded track will be erased.

- 1 During playback, press the ►|| button at the point where you want to begin re-recording.
- 2 Press the REC button.
 - To cancel the operation, press the ■/:OFF button.
- 3 Press the ENTER/SYNC button.
 - All of the tracks and track names will be erased, following the point where the playback is paused.

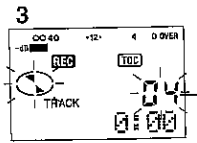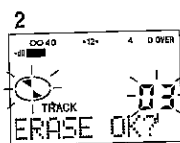

Number of the track to be recorded next

- 4 Press the ►|| button.
 - Recording will start.


Note:

- When there is a track that you don't want to erase after the point on the disc where you want to make a new recording, use the move function to move the track and then make your recording after that point.
(See "EDITING", page 27.)

■ To check the remaining disc time

Whilst recording, you can check the remaining time available on the disc.

Press the DISP button whilst recording or whilst in the recording pause mode.

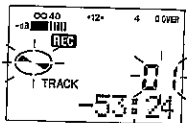

Remaining recordable time

- When the DISP button is pressed again, the unit will return to the initial display.

Note:

- The display of the remaining disc time may vary slightly from the actual remaining time. (Page 40)

■ To create your own track numbers whilst recording

You can create your own track numbers at special points in a recording, so that these points can easily be found later.

At any point where you want to create a track number whilst recording, press the REC button (Remote control: press the SOUND button).

- The track number will be written on the disc and the recording will continue uninterrupted.

Note:

- If you create 8 numbers or more within 40 sec., the button does not work. Try again after a while.


■ Double time recording in monaural mode

When recording in the monaural long-play mode, you can record twice as long as the recording time available for a stereo recording. The monaural long-play mode is very useful for recording conferences or lectures.

Press the MODE/FADE button whilst the recording is paused.

- Each time this button is pressed, the display will switch between the stereo mode and the monaural long-play mode.


Lights up whilst in the monaural long-play mode.

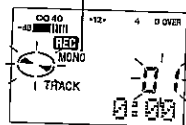

Notes:

- If input is from a stereo source, the sounds from the left and right channels will be combined.
- Although the monitor sound you hear in the earphones whilst recording is in stereo, recording will be monaural.
- MiniDiscs recorded in the monaural long-play mode may not play on other MD players.
- When a recording is made in the monaural long-play mode, you will be able to play back the MiniDisc twice as fast as the normal playback speed. (Page 25)
- When the unit is stopped after a recording has been made in the monaural long-play mode, the recording mode will return to the stereo mode automatically.


■ To erase tracks

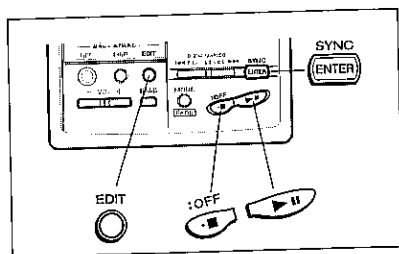

To erase tracks one at a time:

- 1 Start playing the track you want to erase, and press the **PAUSE** button.
 - The unit will enter the pause mode.


- 2 Press the **EDIT** button to select "ERASE".

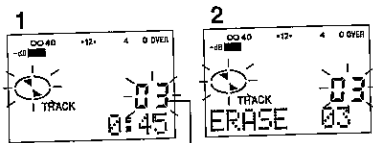

Number of the paused track

- 3 Press the **ENTER/SYNC** button.
 - To cancel the operation, press the **:OFF** button.

- 4 Press the **ENTER/SYNC** button again.
 - The track will be erased.

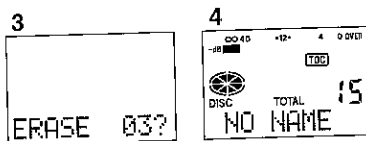


- 5 To erase other tracks, repeat steps 1 -4.


To erase all of the tracks at once:

- 1 Whilst in the stop mode, press the **EDIT** button to select "ALL ERASE".
 - "ALL ERASE" can also be selected by holding down the **EDIT** button for at least 2 seconds.

- 2 Press the **ENTER/SYNC** button.
 - To cancel the operation, press the **:OFF** button.

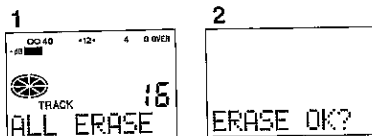

 - 3 Press the **ENTER/SYNC** button again.
 - All of the track numbers, track names, and disc names will be erased.



Notes:

- Once a track has been erased, it cannot be recovered. Double-check the track number before erasing it.
- When a track is erased, the numbers assigned to the tracks following the erased track will be automatically decreased by one.
- When a track is erased, the track name will be erased at the same time.

ABOUT TRACK NUMBERS


When recording, track numbers will be created automatically.

(Auto marker function/Synchro marker function)

**When recording from analogue inputs:
(Including digital inputs other than CDs
or MiniDiscs)**

A new track number will automatically be created whenever 1 second or more of silence occurs in the source.

(Auto marker function)

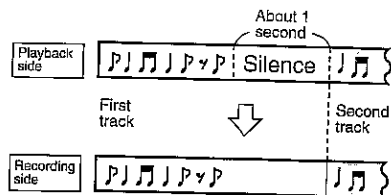


- If there is some noise in the "silent" spaces from the source, the track numbers may not be created at the correct position, depending on the contents of the source being recorded.
- You can also record a series of tracks without using the auto marker function.

**When recording from digital inputs:
(CDs/MiniDiscs only)**

Track numbers will be created automatically for each track at the same point where track numbers already exist on the CD or MiniDisc.

(Synchro marker function)

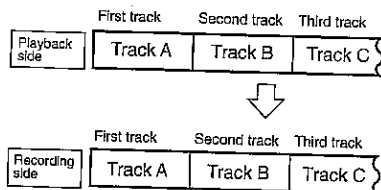

- The track numbers on the playback side may not match the track numbers recorded on the MiniDisc.
- When recording, if a programmed playback is performed by the source or playback is performed by selecting tracks manually, the MiniDisc track numbers may not be the same as on the source.
- The track numbers can also be changed after recording.
- Track numbers may not be created, even when recording from digital inputs, depending on the CD player used for the source.


ABOUT THE TOC

The TOC (an abbreviation for Table of Contents) is information about the track numbers and recorded areas that allow the unit to find musical selections or sounds. The entire MD is controlled by the information in this TOC, which enables the unit to find the beginning of a track quickly or to record automatically in a vacant area.

- The TOC is recorded in a specific area on a MiniDisc, which is not used for sound recording.

■ About TOC recording

When you start recording or editing, "TOC" will appear in the display.

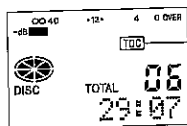

TOC display

This indicates that information in the TOC is now being changed according to recording or editing being performed.


- **The changed TOC information will not be recorded on the MiniDisc right away.**

Notes:

- Whilst "TOC" is displayed, the MiniDisc should not be removed. Press the **•■/**:OFF button to turn the power off, the new TOC will be written and then the disc can be removed.
- The edited contents can be stored on the disc after several editing steps have been performed.

■ When is the TOC recorded?

The revised TOC will be recorded on the disc automatically when you press the **•■/**:OFF button whilst in the stop mode. This will also turn the power to this unit off.

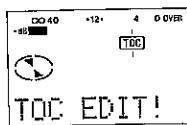


GOOD BYE!

The power will be turned off after the TOC has been recorded on the disc.


Caution:

- Whilst "TOC" or "TOC EDIT!" is displayed, do not do any of the following.
 - Do not jar or bump the main unit.
 - Do not unplug the AC adaptor.
 - Do not remove the rechargeable battery or battery case.If you do, the changes in the recorded or edited contents will be lost if the TOC information is not recorded properly.

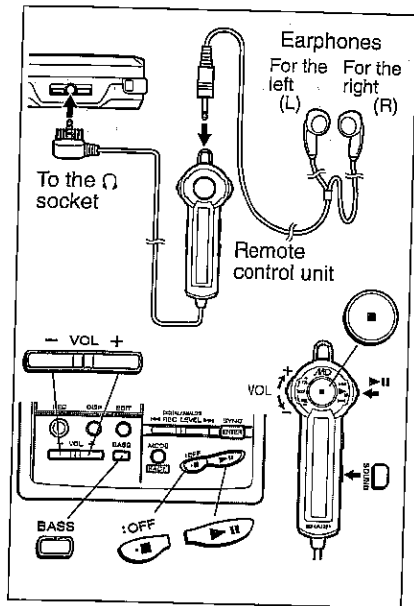


- 1 Insert the earphones plug firmly into the earphones socket on the remote control unit.
- 2 Plug the remote control unit into the Ω socket on the main unit. Push the plug all the way in.
 - Since the remote control unit plug has only one correct orientation, plug it in as shown in the drawing.
- 3 Insert a MiniDisc. (See page 10.)
- 4 Press the $\blacktriangleright \parallel$ button (Remote control: press the $\blacktriangleright \parallel$ shuttle switch).
 - Playback starts automatically with a play-back only MiniDisc or a MiniDisc which is protected against accidental erasure. (Auto-play function)
 - After playback of the last track has finished, the unit will stop automatically.

- 5 Press the VOL + button to increase the volume and the VOL - button to decrease the volume (Remote control: move the shuttle switch to VOL + or VOL -).

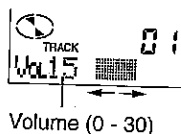

- 6 Adjust the bass level. When the BASS button is pressed once (Remote control: the SOUND button is pressed), the current setting will be displayed. When the current setting is displayed each subsequent press of the BASS button will switch the tone settings as follows:

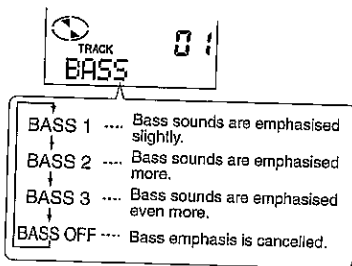

- When recording, it is impossible to adjust the bass level (Bass emphasis is cancelled).
- The most recent volume or bass settings are saved when the power is turned off.

To interrupt playback:

Press the ►|| button (Remote control: press the ►|| shuttle switch) during playback.

- To resume playback, press the ►|| button again.

To stop playback:

Press the ■/OFF button.

To turn off the power:

Press the ■/OFF button whilst in the stop mode.

- If the unit is not operated for at least 2 minutes whilst in the stop mode, the power will shut off automatically.

Precautions when making connections:

- Do not use any remote control unit, except for the one included with this unit.
- Do not remove the rubber pads from the earphones.
- Insert each plug securely, all the way in.
- Be sure to hold the plug when removing it. If you pull on the lead, it may break, or the unit may malfunction.

Interrupted sound:

- This product is designed to eliminate interruptions in the sound which can be caused by vibrations. However, if the unit is continuously exposed to vibrations or mechanical shock, the sound may be interrupted momentarily.

When the sound is distorted:

- If the volume is too high whilst the bass is being emphasised, the sound may be distorted, depending on the music on the track. If this happens, decrease the bass level or lower the volume level.
- If the volume is increased to "VOL 24" or higher, the bass level will be adjusted automatically.
(This is done to reduce the distortion in the sound.)

To remove the MiniDisc:

Turn off the power and move the OPEN lever in the direction indicated by the arrow.

Resume auto play function:

- When you press the ■/OFF button to stop playback, or when you turn the power off and then you resume playback, it will resume at the point on the MiniDisc where the playback was halted.
- If the MiniDisc is removed and inserted, and playback is resumed, playback will start from the first track.

Caution:

- When the unit is not to be used immediately after a MiniDisc has been inserted, or when you plan to carry the unit, turn off the power or cancel the auto-play function. Otherwise, the auto-play function will be activated and the battery will run down.
- Since the main unit and the AC adaptor can heat up during use, you should avoid allowing the unit to be in direct contact with your skin for any length of time.

When using the unit with a car adaptor:

- When you switch off the ignition key during playback, the power to this unit will also be turned off. Then, when the ignition key is switched on, playback will start from the beginning of the track where playback was halted (Resume auto-play function). However, the power to the unit may not be turned off when the ignition is turned off, depending on the type of car.

About the rotating noise:

- When playing back with a rechargeable battery or an alkaline battery, the disc rotates faster to shorten the reading time to save power. Sometimes you may hear its noise, but this is not an error.

■ Cue and review

- 1 Load a MiniDisc and begin playback.
- 2 Press and hold down the ►►► button (Remote control: move and hold the shuttle switch at ►►►) for audible fast forward, or press and hold down the ◀◀◀ button (Remote control: move and hold the shuttle switch at ◀◀◀) for audible fast reverse.
- 3 Normal playback will resume when the ◀◀◀ or ►►► button (Remote control: the ◀◀◀ or ►►► shuttle switch) is released.


Notes:

- When the end of the last track is reached during fast forward, the unit will enter the pause mode. When the beginning of the first track is reached during fast reverse, the unit will enter the playback mode.
- When the unit is in the all track repeat mode, the search will wrap around from the last track to the first, or vice versa.
- Depending on the contents recorded on a MiniDisc, some sounds may be skipped whilst cueing and reviewing.

To search very quickly:

When fast forward or fast reverse is used whilst in the pause mode, the search will be performed more quickly than during audible fast forward or fast reverse playback.

- In this mode, no sound is heard. Therefore, you should refer to the time display.
- When you lift your finger, the unit will re-enter the pause mode.

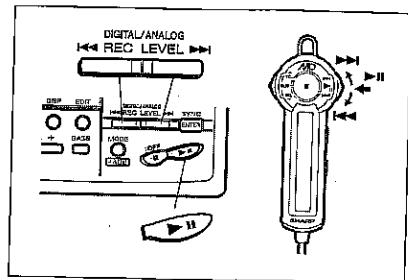

■ APSS

(Auto Program Search System)

APSS automatically locates the beginning of any track.

To move to the beginning of the next track:

Press the ►►► button during playback (Remote control: move the shuttle switch to ►►►).

To re-start the track being played:


Press the ◀◀◀ button during playback (Remote control: move the shuttle switch to ◀◀◀).

To skip a number of tracks at one time, press the ◀◀◀ or ►►► button (Remote control: move the shuttle switch to ◀◀◀ or ►►►) repeatedly until the desired track number is shown.

To begin playback at a desired track, press the ◀◀◀ or ►►► button (Remote control: move the shuttle switch to ◀◀◀ or ►►►) whilst in the stop mode to select the track number. Then press the ►►► button (Remote control: press the ►►► shuttle switch).

Note:


- When the first track is selected and the ◀◀◀ button is pressed (Remote control: the shuttle switch is moved to ◀◀◀), the last track on the disc will be located. When the last track is selected and the ►►► button is pressed (Remote control: the shuttle switch is moved to ►►►), the first track will be located.

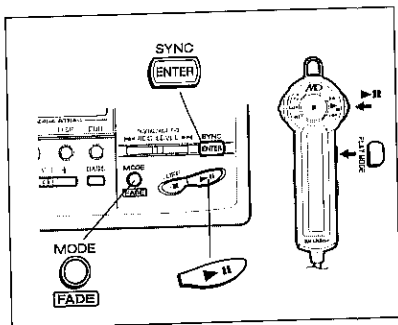

■ To play at double speed (Mono recording only)

Press the ENTER/SYNC button whilst a MiniDisc recorded in the monaural long-play mode is being played.

- The unit will display "FAST PLAY" and start fast playback.

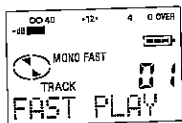

- When the ENTER/SYNC button is pressed again, the unit will return to normal play.

Notes:

- Depending on the contents recorded on a MiniDisc, it may be difficult to hear them.
- If a track recorded in the stereo mode is reached during fast playback, the fast playback mode will be cancelled.
- To re-enter the fast playback mode, press the ENTER/SYNC button.


To interrupt fast playback:

Press the ►|| button (Remote control: press the ►|| shuttle switch) during playback.

- When the ►|| button is pressed again, the unit will resume fast playback.

■ Random play or repeat play


During playback or whilst in the stop mode, press the MODE/FADE button (Remote control: press the PLAY MODE button) repeatedly to select the playback mode.

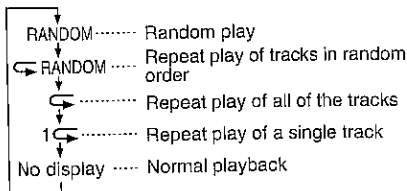

- If the playback mode is selected whilst stopped, press the ►|| button (Remote control: press the ►|| shuttle switch) to start playback.

Notes:

- When "TOC" is displayed, random play or repeat play is impossible.
- In random play the unit will select and play tracks automatically. (You cannot select the order of the tracks.) After all of the tracks have been played once each in random order, the unit will stop automatically.
- During random play or repeat play of a single track, cue and review of the previous or next tracks is not possible.
- During random play, the unit cannot find the beginning of any track which has been played.

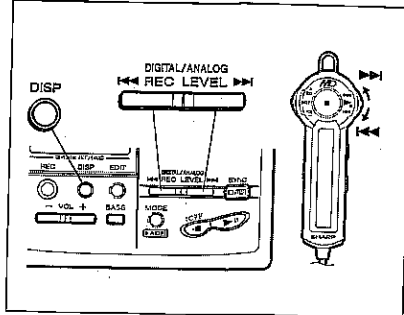


Note:

If character information was not originally recorded on the MiniDisc, "NO NAME" will be displayed.

■ To check the remaining recording time and the total playing time

Whilst in the stop mode, press the DISP button.


- Each time the button is pressed, the display will change as follows:

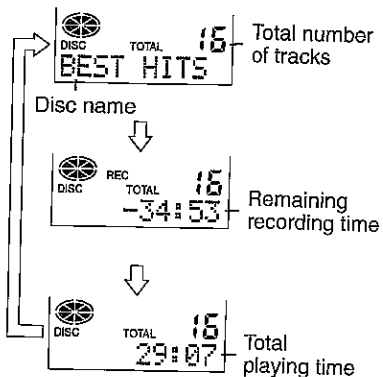

■ To check the elapsed time and remaining time of the track

During playback, press the DISP button.

- Each time the button is pressed, the display will change as follows:

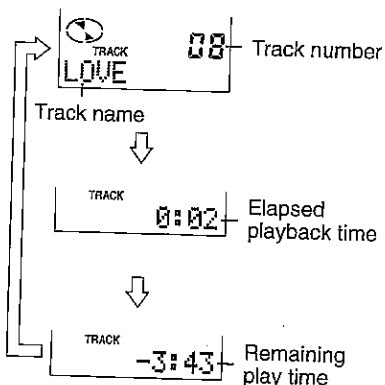

To display the playing time of an individual track:

Whilst in the stop mode, press the ◀◀ or ▶▶ button (Remote control: move the shuttle switch to ◀◀ or ▶▶) to display the track number and track name, and then press the DISP button to display the playing time for that track.

- Each time the ◀◀ or ▶▶ button is pressed (Remote control: the ◀◀ or ▶▶ shuttle switch is moved), the playing time of the previous or next track will be displayed.

■ What the editing function can do


You can create original discs using the MD editing function, on which you can change the order of the tracks and you can create disc or track names.

- Playback-only MiniDiscs cannot be edited.

Move (Page 28)

A designated track can be moved to any desired position.


- The numbers assigned to the tracks following the track which is moved will be adjusted automatically.

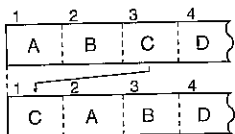

Divide (Page 28)

A single track can be divided into two at any desired position.


- The numbers of the tracks which come after the newly divided track will be automatically increased by one.

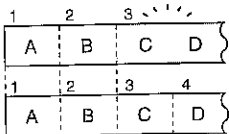

Combine (Page 29)

Two consecutive tracks can be combined into one track.

- The numbers assigned to the tracks following the combined tracks will be decreased by one automatically.

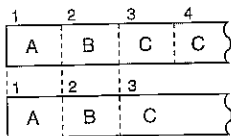

Disc/Track name (Page 29)

Discs and tracks (up to 255 tracks per disc) can be named. Since track names are displayed when the beginning of each track is located or during playback, you can quickly check the name of each track.

- Letters (capital letters/lowercase letters), numbers and symbols can be used.


Name/stamp (Page 31)

- All of the characters and data on a recorded MD (master MD with tracks and character information) can be transferred onto a recordable MD.

■ Move

- 1 Play the track to be moved, and press the ►|| button.
 - The unit will enter the pause mode.

 
- 2 Press the EDIT button to select "MOVE".




To move the fifth track

- 3 Press the ENTER/SYNC button.
 - To cancel the operation, press the ■/OFF button.

 - 4 Press the ◀◀ or ▶▶ button to select the direction to move.
 - To increase the track number▶▶
 - To decrease the track number◀◀



(Checking the movement)

 

(To move it to the third track)

- 5 Press the ENTER/SYNC button again.
 - The track will be moved, and the unit will be paused at the beginning of the track.

Note:

- When a track has been moved, the other tracks which are affected by the move will be assigned new track numbers automatically.


Example:

When moving the fifth track to the third track, the old third track will become the new fourth track and the old fourth track will become the new fifth track.

■ Divide


- 1 Start playing the track you want to divide into two. Press the ►|| button at the point where you want to divide the track.
 - The unit will enter the pause mode.

 - 2 Press the EDIT button to select "DIVIDE".



To divide the fourth track

 - 3 Press the ENTER/SYNC button.
 - To cancel the operation, press the ■/OFF button.



(Confirming the split)


- 4 Press the ENTER/SYNC button again.
 - The track will be divided into two tracks, and the unit will be paused at the beginning of the second of the two tracks.
 - The numbers of the tracks which come after the divided track will be increased by one automatically.

Notes:

- When a track that has a name is divided, the two new tracks will have the same name. However, in the TOC FULL condition, the second track may not be named.
- Each disc can hold up to 255 tracks. However, even if the number of assigned tracks has not reached 254, it might not be possible to make any further divisions of tracks.


■ Combine

- 1 Start playing the last of the two tracks you want to combine, and press the ►|| button.
 - The unit will enter the pause mode.
- 2 Press the EDIT button to select "COMBINE".

 

To combine the fifth and sixth tracks

 - 3 Press the ENTER/SYNC button.
 - To cancel the operation, press the ■/OFF button.



(Confirming the combination)

- 4 Press the ENTER/SYNC button again.
 - The two tracks will be combined, and the unit will be paused at the beginning of the combined track.
 - The numbers assigned to the tracks following the combined track will be decreased by one automatically.

To combine two non-adjacent tracks:
First, put the two tracks next to each other in the order you want using the MOVE function (page 28). Then combine them using the COMBINE function.

When one or both tracks to be combined have a name:

The first track name will be used. However, when the first track does not have a name, the second track name will be used.

In the following cases, tracks may not be combined.


- Tracks recorded in the monaural long-play mode and tracks recorded in the stereo mode.
- Tracks recorded from digital inputs and tracks recorded from analogue inputs.
- Tracks whose recording time is less than 12 seconds.

■ Disc name


- Discs can be named using a maximum of 100 characters.
- Up to 1,700 characters (approximately) can be used in the disc and track names on a single MiniDisc.

- 1 Whilst in the stop mode, press the EDIT button to select "DISC NAME".


- 2 Press the ENTER/SYNC button.
 - The unit will enter the character input mode.
 - To cancel the operation, press the ■/OFF button.

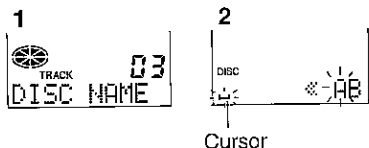

 - 3 Press the DISP button repeatedly to select the type of characters.
 - The first 3 characters in the group of the selected characters will be displayed for about 1 second.



 - 4 Press the ◀◀ or ▶▶ button repeatedly to select the first letter in the name.
 - When the button is pressed continuously, the displayed character will change rapidly.




Continued to the next page. →

5 When the letter you want is displayed, press the ENTER/SYNC button.

- To enter more letters in the name, repeat steps 3 - 5.

6 When the disc name has been completely entered, press the EDIT button.

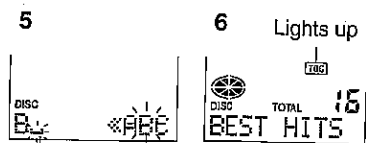

Position where the next letter will be entered

To erase a character:

Press the VOL + or VOL - button to move the cursor to the character you want to erase, and then press the BASS button.

To enter a space:


Press the VOL + button to move the cursor to the right.

■ Track name

Up to 100 characters can be entered for each name.

1 Play the track which you want to name, and press the ►|| button.
● The unit will enter the pause mode.

2 Press the EDIT button to select "TRACK NAME".

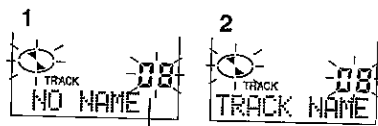

Track number that you want to give a track name

3 Press the ENTER/SYNC button.
● The unit will enter the character input mode.
● To cancel the operation, press the ■/OFF button.

4 Perform steps 3 - 5 in the "Disc name" section.

5 When the track name is completely entered, press the EDIT button.

Type of characters	Characters (symbols) They are selected using the ◀◀ or ▶▶ button.
Capital letters	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> A B C D E F G H I J K L M N O P Q R S T U V W X Y Z . , / </div> → Returns to [] .
Lower-case letters	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> a b c d e f g h i j k l m n o p q r s t u v w x y z . , / </div> → Returns to [] .
Numbers and symbols	<div style="border: 1px solid black; padding: 2px; display: inline-block;"> 1 2 3 4 5 6 7 8 9 0 ! " # \$ % & ' () * + , - . / : ; < = > ? @ _ ` </div> → Returns to [] .

[] indicates a space.

■ To change disc names or track names

Some MiniDiscs created on other equipment may have more than 100 characters in a track name or disc name. The characters from the 101st character and on cannot be corrected or changed.

To delete characters:

- 1 Put the unit in the character input mode.
 - To delete characters in a disc name, perform steps 1 - 2 in the "Disc name" section. (page 29)
 - To delete characters in a track name, perform steps 1 - 3 on page 30.

- 2 Press the VOL + or VOL - button to move the cursor to the character you want to delete.

- 3 Press the BASS button.
 - The character will be erased.

- 4 Press the EDIT button.

To add characters:


- 1 Put the unit in the character input mode.
 - To add characters to a disc name, perform steps 1 - 2 in the "Disc name" section. (page 29)
 - To add characters to a track name, perform steps 1 - 3 on page 30.

- 2 Press the VOL + or VOL - button to move the cursor to the right of the character, where you want to add a new character.


- 3 Perform steps 3 - 5 in the "Disc name" section. (pages 29 - 30)

- 4 Press the EDIT button.

■ Name/stamp

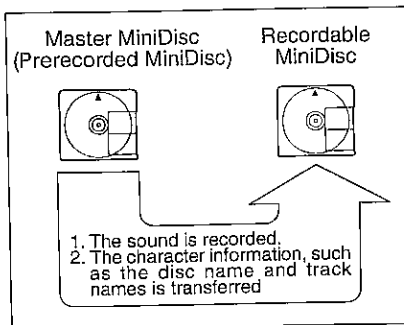

- 1 Record the sound from the master MiniDisc onto a recordable MiniDisc.

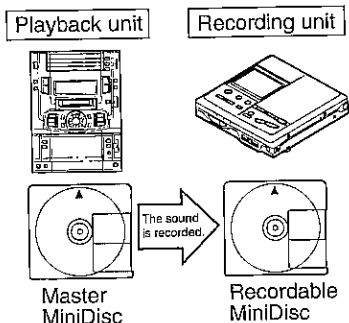

- Refer to the standard recording method. (Pages 8 - 14)
- At this point, only the sound is recorded. No character information is transferred.
- Check whether the total number of tracks on the newly recorded MiniDisc matches the total number of tracks on the master MiniDisc. If they do not match each other, combine or divide tracks using the edit operation. (Pages 28 - 29)
- This function can not be performed from playback only MiniDiscs.

Continued to the next page.

2 When the recording is complete, remove the newly recorded MiniDisc and load the master MiniDisc into the MD-MT831H.

- Do not mistake the master MiniDisc for the newly recorded MiniDisc.

3 Whilst in the stop mode, press the EDIT button to select "NAME STAMP".

4 Press the ENTER/SYNC button.

- To cancel the operation, press the **■**/OFF button.

3 **4**

TRACK
NAME STAMP

READ OK?

5 Press the ENTER/SYNC button.

- The character information of the master MiniDisc is being read.

6 When the unit displays "CHANGE MD", remove the master MiniDisc.

- Remove the master MiniDisc without turning off the power. If you do, the operation will be cancelled.

5 **6**

Reading!

CHANGE MD

7 Load the newly recorded MiniDisc into the MD-MT831H.

- To cancel the operation, press the **■**/OFF button.

| INSERT MD |
↓
| TOC READ |
↓
| WRITE OK? |

8 Press the ENTER/SYNC button.

- The unit will finish recording the character information and enter the stop mode.

| Writing! |
↓
| COMPLETE |


Note:

- If the total number of tracks on the master MiniDisc does not match the total number of tracks on the newly recorded MiniDisc, the unit will display "Can't WRITE" and the power will be turned off. If this happens, adjust the total number of tracks on the newly recorded MiniDisc using the edit operation, and then try again from step 2.

USING WITH OTHER EQUIPMENT


- Before connecting any other equipment, turn off the power to all units.
- Connect the plugs securely. Improper connections may cause noise or malfunctions.

■ Listening through a car stereo

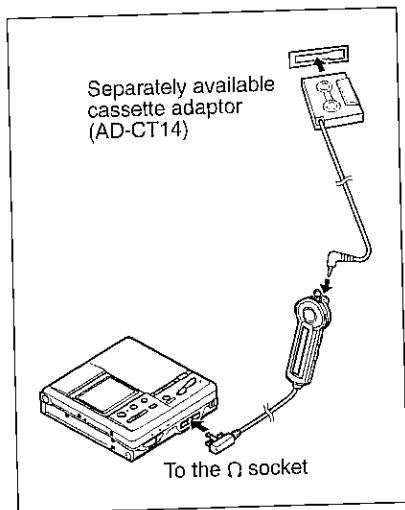


- The separately available cassette adaptor may not work, depending on your car's stereo.
- Do not operate the unit whilst driving. You may be involved in a car accident.

■ Listening through a stereo or a radio cassette player or recording on a cassette tape

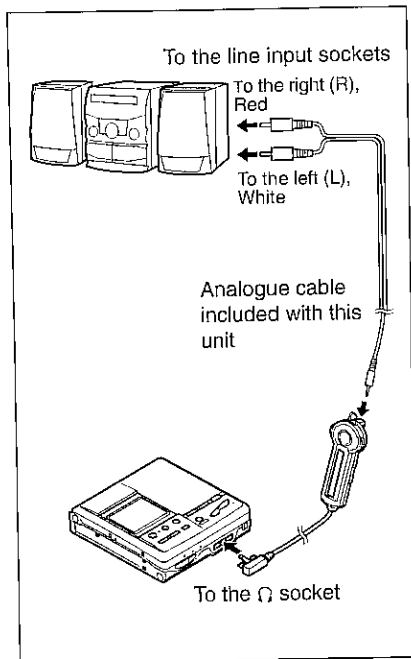


- The recording will be made in the analogue mode.
- When you want to listen to a disc using a separate stereo system or radio cassette player, it is recommended that you adjust the volume on the MiniDisc unit to maximum.
- When recording with any other equipment, turn off the confirmation sound of this unit. It will also be recorded.

■ Checking the remaining amount of battery charge

The remaining amount of battery charge is shown by the battery indicator () during operation.

 
Battery indicator



< How to read the battery indicator >

When the battery is completely charged

 Charging is needed.



When the battery needs charging, it is impossible to start recording or editing.

- When the battery is completely discharged, the whole battery indicator will flash. Re-charge the battery or replace the alkaline battery with a new one.
- When the battery has run completely out, "BATT EMPTY" (main unit) and "Lo BATT" (remote control unit) will appear. Then, the power will be disconnected automatically.

Notes:


- When using the unit with an alkaline battery or a rechargeable battery, the battery indicator will not correctly display the remaining capacity for approximately 20 seconds after the power has been turned on.
- When the AC adaptor included with this unit or a separately available car adaptor is used, the battery indicator will not be shown.
- The number of bars shown in the battery indicator may increase or decrease, depending on the operation being performed. This is normal.
- When the rechargeable battery and the alkaline battery are used at the same time, the rechargeable battery is used first, then the alkaline battery. Since the battery indicator shows the remaining amount of the particular battery being used, the number of bars will increase when the unit switches to the alkaline battery.

■ To prevent the unit from being operated by mistake

To avoid accidental operation of the unit, use the hold function.

Move the HOLD switch to the safety position (direction indicated by the arrow).


- When the unit is in the hold mode, pressing the buttons will have no effect.

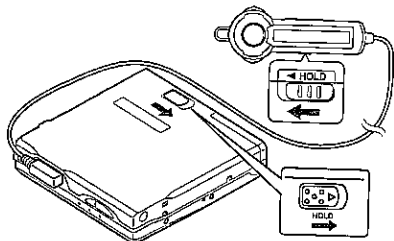

- To cancel the hold mode, move the HOLD switch away from the safety position (the opposite direction of the arrow).

	Main unit	Remote control unit
Cannot be operated from either the remote control unit or the main unit.	Hold	Hold
Can only be operated from the remote control unit.	Hold	Cancel
Can only be operated from the main unit.	Cancel	Hold
Can be operated from either the remote control unit or the main unit.	Cancel	Cancel

If the hold function is active whilst the power is turned off, the power cannot be turned on by mistake and the battery will not be accidentally drained.

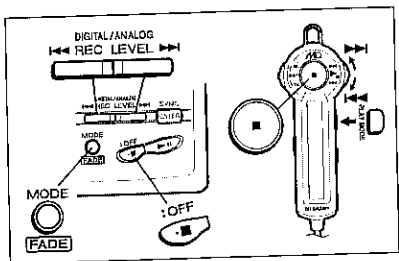

■ To eliminate the confirmation sound

Every time a button is pressed, a "beep" will be heard in the earphones. To silence the "beep" sound, do the following:

- 1 In the stop mode with a MiniDisc inside ...**
Hold down the MODE/FADE button (Remote control: hold down the PLAY MODE button) until "SET UP" appears.
 - When you release the button, "BEEP ON (BEEP 1)" will appear.

SET UP → BEEP ON

- 2 Press the MODE/FADE button (Remote control: press the PLAY MODE button).**

BEEP OFF

- "BEEP OFF (BEEP 0)" will appear, and the confirmation sound will disappear.
 - To restore the confirmation sound, select "BEEP ON (BEEP 1)".
- 3 Press the ■/OFF button (Remote control: press the ■ button).**
 - The normal display will reappear.

■ To turn off the display backlight on the remote control unit

Whenever you press a button, the display will light for about 10 seconds, so that you can read it in the dark. You can turn off the backlight.

- 1 In the stop mode with a MiniDisc inside ...**
Hold down the MODE/FADE button (Remote control: hold down the PLAY MODE button) until "SET UP" appears.
 - When you release the button, "BEEP ON (BEEP 1)" or "BEEP OFF (BEEP 0)" will appear.

SET UP → BEEP ON
BEEP OFF

- 2 Press the ◀◀ or ▶▶ button (Remote control: move the shuttle switch to ◀◀ or ▶▶) until "EL ON 1 (EL on1)" appears.**

EL ON 1

- 3 Press the MODE/FADE button (Remote control: press the PLAY MODE button).**
 - Whenever the button is pressed


EL ON 1 → EL ON 2
EL OFF

When "EL OFF (EL off)" is selected, the backlight will go out.

To turn the backlight on:

"EL ON 1 (EL on1)"
When any button is pressed, the backlight will remain lit for about 10 seconds.
"EL ON 2 (EL on2)"
When the rechargeable battery or alkaline battery is used, the backlight will remain lit for about 10 seconds.
When the AC adaptor or a car adaptor is used and the power is turned on, the backlight will always be lit.
(However, the brightness may be a little less than when using the battery.)


- 4 Press the ■/OFF button (Remote control: press the ■ button).**
 - The normal display will reappear.

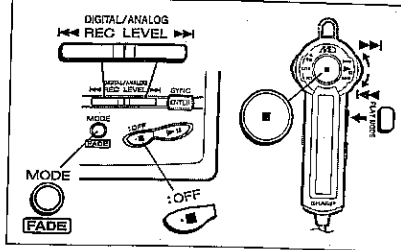

■ To cancel the auto-play function

When a play-back only MiniDisc or a MiniDisc which is protected against accidental erasure is inserted, the power will be turned on automatically, and playback will begin. You can cancel automatic playback.

 - 1 In the stop mode with a MiniDisc inside ...**
Hold down the MODE/FADE button (Remote control: hold down the PLAY MODE button) until "SET UP" appears.
● When you release the button, "BEEP ON (BEEP 1)" or "BEEP OFF (BEEP 0)" will appear.



- 2** Press the ◀◀ or ▶▶ button (Remote control: move the shuttle switch to ◀◀ or ▶▶) until "A-PLAY ON (autoPL)" appears.

A-PLAY ON

- 3** Press the MODE/FADE button (Remote control: press the PLAY MODE button).

A-PLAY OFF

 
- "A-PLAY OFF (PL off)" will appear, and the auto-play function will be cancelled.
- To restore the auto-play function, select "A-PLAY ON (autoPL)".

- 4** Press the ■/OFF button (Remote control: press the ■ button).
● The normal display will reappear.

■ To cancel the auto power save function

Power consumption can be reduced by controlling the memory storage time. You can cancel the auto power save function.

- 1 In the stop mode with a MiniDisc inside ...**
Hold down the MODE/FADE button (Remote control: hold down the PLAY MODE button) until "SET UP" appears.
● When you release the button, "BEEP ON (BEEP 1)" or "BEEP OFF (BEEP 0)" will appear.



- 2** Press the ◀◀ or ▶▶ button (Remote control: move the shuttle switch to ◀◀ or ▶▶) until "AUTO Psave (autoPS)" appears.

AUTO Psave

- 3** Press the MODE/FADE button (Remote control: press the PLAY MODE button).

Psave OFF


- "Psave OFF (PS off)" will appear, and the auto power save function will be cancelled.
 - To restore the auto power save function, select "AUTO Psave (autoPS)".
- 4** Press the ■/OFF button (Remote control: press the ■ button).
● The normal display will reappear.

About the sound skip guard memory:

During playback, approximately 40 seconds of information is stored in the semiconductor memory. Therefore, even when the pickup cannot read information for a second or two due to an external shock, the sound will continue without interruption because the information stored in memory is used.

About the auto power save function:

This is a function used to save power when using the unit with the rechargeable battery or the alkaline battery. Whilst in the auto power save mode, 10 - 40 seconds of sound information is stored in memory. When the auto power save function is disabled, 40 seconds of sound information is always stored in memory. (When the AC adaptor or a car adaptor is used, the information storage time is always 40 seconds, regardless of the auto power save mode.) When the unit is used in places exposed to excessive vibration, cancel the auto power save function.

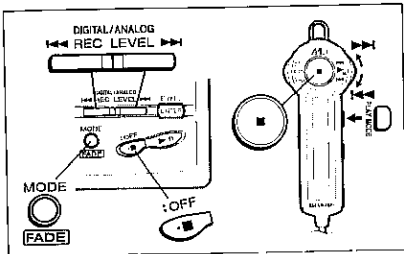


■ To cancel the digital recording level

Once you adjust the digital recording level, the setting remains even after the recording stops. The setting can be cancelled.

1 In the stop mode with a MiniDisc inside ...

Hold down the MODE/FADE button (Remote control: hold down the PLAY MODE button) until "SET UP" appears.

 - When you release the button, "BEEP ON (BEEP 1)" or "BEEP OFF (BEEP 0)" will appear.



- 2 Press the ◀◀ or ▶▶ button to display "D.L MODE 1 (D.L M1)" (Remote control: move the shuttle switch to ◀◀ or ▶▶).

D.L MODE 1

- 3 Press the MODE/FADE button (Remote control: press the PLAY MODE button).

D.L MODE 2

- When "D.L MODE 2 (D.L M2)" is displayed, the digital recording level returns to "D.L 0dB" each time the recording stops.
- You can hold the digital recording level by selecting "D.L MODE 1 (D.L M1)".

- 4 Press the ■/OFF button (Remote control: press the ■ button).

- The normal display will reappear.

WHAT IS A MINIDISC?


A MiniDisc is a disc inside a protective cartridge. You can handle it freely without worrying about dust, fingerprints, etc. However, if dust enters the opening of the cartridge, or there is excessive dirt on the cartridge, or the cartridge becomes warped, you may experience malfunctions. Please note the following.

■ Handling the MiniDisc

Do not touch the disc directly!

Do not open the shutter or touch the disc directly.

If the shutter is opened forcibly, it may break.

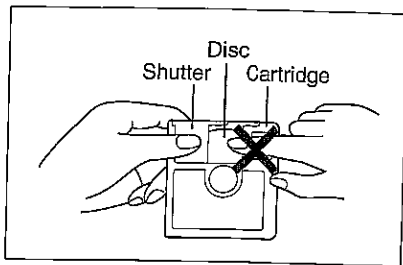

- Never disassemble a MiniDisc.

■ Where not to store discs


Do not store discs in places with high temperatures or humidity. Specifically, do not leave discs in places exposed to direct sunlight or in cars with the doors and windows closed.

Do not leave discs in places where sand can get into the cartridge easily (e.g., beaches).

■ Helpful tip when attaching a label

When attaching a label to an MD cartridge, be sure to note the following. If the label is not attached properly, the MiniDisc may jam inside the unit and it may not be possible to remove it.

- If the label peels off or partially lifts away, replace it with a new one.
- Do not put a new label on top of an existing one.
- Attach the label only in the specified location. (If it is not within the specified area, it may cause the disc to jam in the unit.)

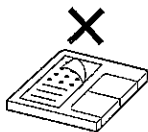

■ Regular cleaning

If the surface of the cartridge becomes dusty or dirty, clean it with a dry cloth.

TROUBLESHOOTING

■ Moisture condensation

In the following cases, condensation may form inside the unit.

- Shortly after turning on a heater.
- When the unit is placed in a room where there is excessive steam or moisture.
- When the unit is moved from a cool place to a warm place.

When the unit has condensation inside, the disc signals cannot be read, and the unit may not function properly.

- If this happens, remove the disc. The condensation should evaporate in approximately 1 hour. The unit will then function properly.

Many potential "problems" can be resolved by the owner without calling a service technician. If something seems to be wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

PROBLEM	CAUSE
The unit does not turn on.	<ul style="list-style-type: none"> ● Is the AC adaptor disconnected? ● Is the battery exhausted? ● Is the unit in the hold mode? ● Has condensation formed inside the unit? ● Is the unit being influenced by mechanical shock or by static electricity?
No sound is heard from the earphones.	<ul style="list-style-type: none"> ● Is the volume set too low? ● Is the remote control unit or the earphones plugged in? ● Are you trying to play a MiniDisc with data on it instead of a MiniDisc containing music?
When the operation buttons are pressed, the unit does not respond.	<ul style="list-style-type: none"> ● Is the unit in the hold mode? ● Is the battery exhausted? ● Is the remote control unit plug or the earphone plug inserted firmly?
Some sounds are skipped.	<ul style="list-style-type: none"> ● Is the battery exhausted? ● Is the unit being subjected to excessive vibration?
The MiniDisc cannot be ejected.	<ul style="list-style-type: none"> ● Has the track number or character information been written on the disc yet? ● Is the unit in the recording or editing mode?
Recording and editing are impossible.	<ul style="list-style-type: none"> ● Is the MiniDisc protected against accidental erasure? ● Is the unit connected properly to the other equipment? ● Is the AC adaptor unplugged or did a power failure occur whilst recording or editing? ● Is the unit in the hold mode? ● Is an optical signal being output from the external equipment? <p>Read the operation manual for the external equipment.</p>

If trouble occurs with a particular MiniDisc

- Depending on the MiniDisc, sound may skip or stop during playback if there is something wrong with the stored information. In such a case, try another MiniDisc before calling for service.

■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

If such a problem occurs, do the following:

1. Unplug the AC adaptor from the AC socket.
2. Remove the battery.

3. Leave the unit completely unpowered for approximately 30 seconds.
4. Plug the AC adaptor back into the AC socket and retry the operation.

If strange sounds, smell or smoke come out of the unit or an object is dropped into the unit, remove the AC adaptor from the AC socket immediately and contact an authorised SHARP service centre.

MINIDISC SYSTEM LIMITATIONS

MiniDiscs are recorded using a different system than is used for cassette tapes or DAT recordings. Therefore, the following conditions may be encountered, depending on how the disc has been recorded or edited. These are due to system limitations, and should be considered normal.

<p>Even if the maximum recording time of a MiniDisc has not been reached, "DISC FULL" or "TOC FULL" may be displayed.</p>	<p>When the number of tracks used reaches the limit, regardless of the remaining recording time, further recording will be impossible. (Maximum number of tracks: 255) If a MiniDisc has been recorded or edited repeatedly or if a MiniDisc has scratches on it, it may not be possible to record the maximum number of tracks on it.</p>
<p>Even if the number of tracks and the recording time have not reached the limit, "DISC FULL" may be displayed.</p>	<p>If there are scratches on a disc, the unit will automatically avoid recording in those areas. The recording time will be reduced.</p>
<p>Even if several short tracks are erased, the remaining recording time may not show an increase.</p>	<p>When the remaining recording time of a disc is displayed, short tracks less than 12 seconds long may not be included in the total.</p>
<p>Two tracks may not be combined in editing.</p>	<p>For MiniDiscs on which repeated recording and editing operations were performed, the COMBINE function may not work.</p>
<p>The total of the recorded time and time remaining on a disc may not add up to the maximum possible recording time.</p>	<p>A cluster (about 2 seconds) is normally the minimum unit of recording. So, even if a track is less than 2 seconds long, it will use about 2 seconds of space on the disc. Therefore, the time actually available for recording may be less than the remaining time displayed. If there are scratches on discs, those sections will be automatically avoided (no recording will be placed in those sections). Therefore, the recording time will be reduced.</p>
<p>When recorded tracks are played back using the cue and review operations, some sounds may be skipped.</p>	<p>For MiniDiscs on which repeated recording and editing were performed, some sounds may be skipped whilst cueing and reviewing.</p>
<p>A track number can be created in the middle of a track.</p>	<p>If there are scratches or dust on a MiniDisc, the track numbers following that track will be increased by one.</p>

ERROR MESSAGES

Error messages	Meaning	Remedy
BATT EMPTY (Lo BATT)	● The battery is run down.	● Charge the rechargeable battery or replace the alkaline battery (or use the AC adaptor for power).
BLANK MD (BLANK)	● Nothing is recorded.	● Replace the disc with a recorded disc.
Can't COPY (Can't C)	● No copy can be made because of the SCMS copyright system.	● Record using the analogue cable.
Can't EDIT (Can't E)	● A track cannot be edited.	● Change the stop position of the track and then try editing it.
Can't FADE Can't A.F	● The recordable time is shorter than the fading time	● Record after you check the remaining recording time.
Can't READ* (Can'tS) (Can'T) (Can'tU)	● The disc is damaged.	● Reload the disc or replace it. ● Replace it with another recorded disc.
Can't REC (Can't R)	● Recording cannot be performed correctly due to vibration or shock in the unit.	● Re-record or replace it with another recordable disc.
Can't STAMP	● Editing is impossible.	● Check the number of tracks.
Can't WRITE (can'tW)	● Cannot save the TOC information correctly to a MiniDisc.(A large portion of the disc has been damaged.)	● Replace the disc with another recordable disc.
DEFECT (DEFECT)	● The disc is scratched.	● If the sound you hear is not right, try recording again. ● Replace the disc with another recordable disc.
DISC FULL	● The disc is out of recording space.	● Replace it with another recordable disc.
Er-MD** (ErMD*)	● You have come to the conclusion that the unit is out of order.	● To have it repaired, go to the distributor where you purchased the unit.
HOLD (HOLD)	● The unit is in the hold mode.	● Return the HOLD switch to its original position.
LOCKED (Can't LOCK)	● The OPEN lever was moved during recording or editing.	● Turn off the power and remove the MiniDisc.
NO DISC	● A disc has not been loaded.	● Load a disc.
NO SIGNAL (noSIG.)	● Poor connection of the digital cable. ● No output signal comes out from the external unit to playback.	● Connect the digital cable securely. ● If the portable CD player has a function to prevent sound skips, deactivate it. ● Playback with the connected unit.
PLAY MD (PLAY md)	● You tried to record on a playback-only disc.	● Replace it with a recordable disc.

() : Error messages seen on the remote control.

* : Number or Symbol.

Continued to the next page.

Error messages	Meaning	Remedy
POWER ?	<ul style="list-style-type: none"> Improper power is being supplied. 	<ul style="list-style-type: none"> Use one of the specified power sources.
PROTECTED	<ul style="list-style-type: none"> The MD is write protected. You tried to record without loading an MD A playback-only MD was loaded and the REC button was pressed when the power was off. 	<ul style="list-style-type: none"> Move the write protection knob back to its original position. Load a recordable MD. Replace it with a recordable MD.
SORRY (SORRY)	<ul style="list-style-type: none"> Since a track number is currently being located or written to, the unit cannot accept your command. 	<ul style="list-style-type: none"> Wait for a while and try the operation again.
TEMP OVER (TEMP!)	<ul style="list-style-type: none"> The temperature is too high. 	<ul style="list-style-type: none"> Turn off the power, and wait for a while.
TOC FORM** (T form**)	<ul style="list-style-type: none"> There is an error in the recording signal 	<ul style="list-style-type: none"> Erase all of the signal errors, and then try recording again.
TOC FULL	<ul style="list-style-type: none"> There is no space left for recording character information (track names, disc names, etc.). 	<ul style="list-style-type: none"> Replace it with another recordable disc.
Tr. Protect	<ul style="list-style-type: none"> The track has been protected from being erased. 	<ul style="list-style-type: none"> Edit the track with the device on which it was recorded.
? DISC (? DISC)	<ul style="list-style-type: none"> A disc which contains data other than music was played. There is an error in the signal from the disc. 	<ul style="list-style-type: none"> A disc which contains non-music data cannot be played. Replace it with another recorded disc.

(): Error messages seen on the remote control.

* : Number or Symbol.

MAINTENANCE

■ Cleaning

When the unit becomes dirty

Clean it with a soft cloth.

When the unit is excessively dirty, use a soft cloth dampened in water.

(External surfaces only)

Clean the earphone plug and the connecting cable plug.

This will prevent noise.

Notes:

- Do not use chemicals for cleaning (petrol, paint thinner, etc.) It may affect the quality or colour.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

SPECIFICATIONS

As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice.
The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

■ General

Power source:

- DC 3.6V: Rechargeable Lithium-Ion battery x 1
- DC 5.0V: AC adaptor (AC 220 - 230V, 50/60 Hz)
- DC 3.3V: Battery case (with voltage booster) (commercially available, "AA" size, alkaline battery x 1)
- DC 4.5V: Separately available car adaptor, AD-CA20X (for cars with a 12-24V DC negative earth electrical system)

Power consumption:

7 W (AC adaptor)

Output power:

RMS; 20 mW (10 mW + 10 mW) (0.2% T.H.D.)

Charging time:

Approx. 3 hours

(When using the AC adaptor included with the unit)

Battery life:

When using the rechargeable battery (fully charged) included with the unit

Continuous recording: Approx. 9.5 hours

Continuous play: Approx. 14.5 hours

When using one, commercially available, high capacity, "AA" size, alkaline battery (The rechargeable battery is in the unit, discharged.)

Continuous recording: Approx. 4.5 hours

Continuous play: Approx. 11.5 hours

When using one, commercially available, high capacity, "AA" size, alkaline battery with the rechargeable battery (fully charged)

Continuous recording: Approx. 14 hours

Continuous play: Approx. 26 hours

- The continuous recording time is for analogue inputs when the volume level is set to "VOL 0".
- The continuous play time shows the value when the volume level is set to "VOL 15".
- The above values are the standard values when the unit is charged and used at an ambient temperature of 20°C (68°F).
- The operating time when using an alkaline battery may be different, depending on the type and manufacturer of the battery, and on the operating temperature.

Input sensitivity:

Recording level	Reference input level	Input impedance
MIC H	0.25 mV	10 k ohms
MIC L	2.5 mV	10 k ohms
LINE	100 mV	20 k ohms

Output level:

	Specified output	Maximum output level	Load impedance
Earphones	—	10 mW + 10 mW	32 ohms
LINE	250 mV (-12dB)	—	10 k ohms

Dimensions:

Width: 79.4 mm (3-1/8")

Height: 17.9 mm (11/16")

Depth: 81.8 mm (3-3/16")

Weight:

163 g (0.36 lbs.) with rechargeable battery

Input socket:

Line/optical digital, microphone (powered by the main unit)

Output socket:

Earphones (impedance: 32 ohms)/remote control unit

■ MiniDisc Recorder

Type:

Portable MiniDisc recorder

Signal readout:

Non-contact, 3-beam semi-conductor laser pick-up

Audio channels:

Stereo 2 channels/monaural (long-play mode) 1 channel

Frequency response:

20 - 20,000 Hz (± 3 dB)

Rotation speed:

Approx. 400 - 1,350 rpm

Error correction:

ACIRC (Advanced Cross Interleave Reed-Solomon Code)

Coding:

ATRAC (Adaptive Transform Acoustic Coding), 24-bit computed type

Recording method:

Magnetic modulation overwrite method

Sampling frequency:

44.1 kHz (32 kHz and 48 kHz signals are converted to 44.1 kHz, and then recorded.)

Wow and flutter:

Unmeasurable (less than ±0.001% W. peak)

SHARP

SHARP CORPORATION

TINSZ1407AFZZ

Gedruckt in Japan
Imprimé au Japon
Impreso en Japón
Printed in Japan

A9910.3.25MNS.TO