

LIFE CHAIR

OPERATING MANUAL



1 FLEX BACK: No need to adjust tension. Automatic recline tension counter-balances your body weight, resulting in perfect balance as you recline.

2 TENSION SELECTOR: To perfect the tension adjust the preference lever located at the back left of the chair while in the upright position.

3 SEAT HEIGHT ADJUSTMENT: To raise or lower the height, lift the lever on the right side of the chair and adjust to the proper height.

4 SLIDING SEAT DEPTH ADJUSTMENT: Using the same lever as the seat height, push down to slide the seat within the 4 inch seat depth range. release the lever to lock the seat into position.

5 UPRIGHT TILT LOCK: To lock the seat in an upright position, push down the lever located on the left side of seat. Lift lever to unlock.

6 FORWARD SEAT FLEX: No knobs or levers needed. Lean forward or perch toward the edge of the seat and Life's seat pan automatically adjusts to support your position.

7 HEIGHT ADJUSTABLE ARMS: Lift the lever on the outside of the armpad to adjust the arm height.

8 HEIGHT ADJUSTABLE LUMBAR: Slide Lumbar support up and down using the tabs.

