

3.4. PARTS LIST

3.4.1. Mechanical parts

<i>Item</i>	<i>Fig.</i>	<i>Qty</i>	<i>Ordering number</i>	<i>Description</i>
1	7	1	5322 447 94333	Cabinet upper half
2	7	1	5322 447 94334	Cabinet, lower half
3	7	4	4822 462 40282	Foot
4	7	1	5322 498 54062	Handle
5	6	1	5322 414 74014	Cap
6	6	1	5322 414 74042	Cap
7	8	1	5322 447 94332	Front frame
8	6	1	5322 455 74054	Textplate
9	6	1	5322 466 85335	Front rim
10	6	1	5322 414 34189	Dial with knob
11	6	1	5322 532 64194	Ring (for potm)
12	6	1	5322 414 34082	Control knob
13	6	1	5322 276 14128	Push button switch
14	6	2	5322 267 10004	BNC connector
15	6	2	5322 532 54056	Insulating disk
16	6	2	5322 532 54334	Insulating bush
17	7	1	5322 265 30066	Mains input socket
18	8	1	5322 255 44064	Heat sink
19	8	1	5322 255 44069	Transistor spacer
20	8	1	4822 492 60063	Clamping spring
21	8	1	5322 255 44108	Transistor spacer
22	6	7	5322 414 25507	Push button
23	8	6	5322 276 14271	Push button switch
24	8	1	5322 276 14221	Push button switch