

103149	BAKELITE HANDNUT 3/8" BSW ASSY.	203205	HANDWHEEL	203415	UPPER SLEEVE	203507	BELT GUARD HANDNUT
103303	BEARING CAP UPPER SLEEVE	203206	HEAD	203416	UPPER SLEEVE NUT	203508	LAMP SOCKET & PVC INSULATION
103308	CORD CLIP 1.0	203207	MOTOR PLATE (COMBINING SWITCH)	203417	MOTOR PULLEY COLLAR	203509	GLOBE
103309	SWITCH COVER PLATE	203208	LAMP PLATE	203418	MOTOR RODS	203510	SPEED CHART
103310	CORD CLIP 3.Ø	203209	QUILL PULLEY 4-STEP	203419	LAMP SHIELD (TUBING)	203511	MOTOR 1.2.HP 3.g
103402	STOP	203210	REAR BELT GUARD	203420	QUILL PULLEY 2-STEP	203512	27" APPROX GUARD RUBBER
103405	STOP SCREW	203211	MOTOR PULLEY 4-STEP	203421	HANDWHEEL KNOB	203513	KEY CLIP
103501	HANDLE BOSS SPRING	203212	MOTOR PULLEY 2-STEP	203422	QUILL CAP	203514	MOTOR 3/4.HP 1.g
103503	STOP SCREW SPRING	203213	BELT GUARD	203423	UPPER SLEEVE KEYS	203515	PLASTIC SLEEVE
103513	No3 WOODRUFF KEY	203401	COLUMN	203424	BEARING SPACER QUILL	203516	1/8" ALLEN KEY
103520	TABLE SUPPORT LOCKING HANDLE KNOB	203402	LEADSCREW	203425	EJECTOR LOCKNUT	203518	13 MM EXTERNAL CIRCLIP
103533	SWITCH CLIPSAL 1.Ø	203403	LEADSCREW HANDWHEEL NUT	203427	SPINDLE Nol JT	203520	"O" RING 6227/25
103535	5/8" ELMACO CONDUIT BUSH	203404	COLUMN LOCATING PAD BRASS	203428	SPANNER PRONT PULLEY	203521	BEARING M13
103542	SWITCH CLIPSAL TF-10	203405	QUILL SPINDLE "O" RING WASHER	203429	SPIGOT SCREW	203522	BEARING 6004 VVCM
123503	3/4" EXTERNAL CIRCLIP	203406	PINION	203430	EJECTOR LOCKNUT Nol JT	203523	MOTOR 1.0 1/2.HP 2800 RPM
203109	ECCENTRIC & BUSH ASSY	203408	HANDLE BOSS	203501	TRANSFORMER	203526	"O" RING 6227/10
203110	BAKELITE HANDNUT 1/2" NF ASSY	203410	HANDLE SPOKE	203502	THRUST BEARING E.W. 1"	501511	CHUCK 1/4" Nol J.T.
203201	BASE	203411	RETURN SPRING CAP	203503	RETURN SPRING	501512	CHUCK KEY (SPARE) 1/4-
203202	COLUMN SUPPORT	203412	STOP PIN	203504	CHUCK 5/32" No.0 JT		
203203	LEADSCREW NUT	203413	QUILL SLEEVE	203505	CHUCK KEY 5/32"		
203204	LEADSCREW BEARING	203414	QUILL SPINDLE	203506	BELT 39" x 5" DACLON		