

lock 0: standby mode, long press "0" 50 seconds, (show "save" when 45 seconds, 5 seconds after the return to standby; set success, cancel the lock 0, 50 seconds long press "0", showed up, the default is off)

FLASH instruction: standby mode press "P" * 10 P 90 ms; "P" * 11 P 95 ms; "P" * 12 P 100 ms; 13 "P" * 14 180 ms; 15 "P" * 15 P 300 ms; "P" * 16 P 600 ms; "P" * 17 P 1000 ms, the default 600 ms

3.3 pick machine operation function

3.3.1 automatic IP: using the eighth item set up automatic IP in the set, and select the number, when hang machine, machine or callback, such as the first number is "0", wherein will automatically dial the number, set the IP number, such as using the add to dial "0", also can add set IP number.

3.3.2 IP function: in IP automatically open state, after picking machine press the delete key before dialing, headed by 0 number will not go IP; and direct dial set; open out yards, offhook dial before press the delete key will also be cleared.


3.3.3 volume function:

The volume + / - press this button to enter the time bell volume + mode, each time you press the 1, up to 3 files, hands-free pick machine press the volume + key, each time you press the add "1" Until the third end, the handle is picked up the machine is, which is added one at a time

Volume - : the engine will press the button to enter the ringtone - mode, each time minus 1, until the first off. The speakerphone press the lock-key, one shift at a time;

Until 1 file, Handle pick-up the speakerphone - for each one, the lowest to the first.

LR machine for RL, flash for a while (95 ms), switch to do some special functions.

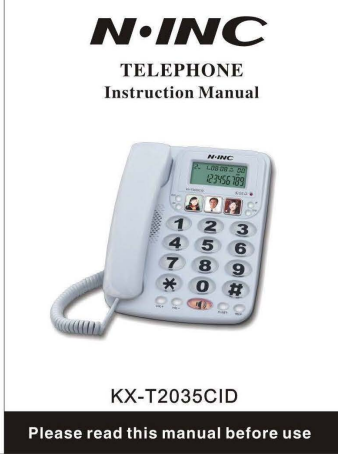

1. Product introduction:

Dear customer, thank you for your choose our products! The machine appearance generous, novel, stable performance, unique function, easy to use. Phone choose double system (DTMF/FSK) compatible with cable display according to the keyboard, advanced microcomputer control. In order to better develop the function of this machine is superior, please read the instructions before use.

2. Functional Features

- **Handle volume can be adjusted**
 - DTMF/FSK double standard caller et (to be automatic recognition)
 - Telephone number and call time record (50 group (8) or 32 (16))
 - 3 groups of single bond memory
 - To number 14 (8) or 8 group (16) and the talk time record
 - Real-time date and week display, LCD brightness level is adjustable
 - Don't disturb 1 ~ 99 hours
 - 15 the first ringtone choice
 - Software to set the ring volume, machine to set the ringing volume and speaker volume, no need to switch
 - Set wake up set electronic anti-theft, optional soft set PIT, do not need to switch
 - The keys 4 lock function, hardware
- 90565 90565 90565 100 / 120 / 180300 / FLASH time optional ms software
- Three groups of alarm function setting, alarm sound is different in each group
- In bad fought lines or hang machine, automatic line (line no disturb interference)
- Intelligent not line extend code Rdt Settings
- Local set Rdt Settings, telephone automatic filtering

3. Local set menu functions:

Hot press SET button to enter settings state, under the LCD display SET 12345678, the press numeric keys or press wave choose Settings, LCD displays the corresponding item SET at the same time, in a setting is completed, press the delete key to exit a directory, then press the number keys or going through up and down keys to choose the next SET. Use the up and down keys to select the setting item, will enter the sub-menu item, need to press the set key again to turn up and down keys to select, here is introduced with the digital key choice set items only. Specific set project is as follows:

3.1.1 set DATE/time: press the set key option 1, LCD will be prompted to 1, the DATE, 2, CL. Option 1 to enter the date Settings, see flickering font, directly enter the Numbers at this time, press the set key again to confirm. When the date is set automatically identify the week after the completion of the program, select 2 enter the time setting, setting method is the same as the date is set. According to the hands-free set ring.

3.1.2 ring and ring volume: press the set key option 2, LCD will be prompted to 1 1 2 VP 3 vol. 1 into the ordinary phone ring selection, LCD display ring type 01 press up and down turn key at this time choose ringing the bell, and then press the set key to confirm; click the delete button to return to a directory; 2 enter the VP ringtone selection, LCD display ring VP 01, set method is the same as the ordinary ring; Choose 3 into the ringtone volume, LCD display ring vol 03 at this time in turning up and down keys to adjust the bell volume, according to the hands-free set out

3.1.3 alarm Settings: press the set key choice 3, LCD will be prompted to 1, 1-2-3, choose 1 to enter the first set of alarm Settings, LCD display ALARM OFF, see OFF flashing alarm sound time directly, finally press the "set" key to confirm. If you want to close the alarm to press set key to shut down after a group of selected choice OFF again with the flip up and down key, The other two groups are the same as group 1 set; The first set the alarm for a one-time, 2, 3 groups for the alarm clock every day, in the process of the alarm, press any key to stop.

3.1.4 don't disturb time setting: choose 4 press set key, the LCD will display off_r 00:00, font flashing input time (maximum 99; when the maximum 59) after press the set key, press the delete key to set. Don't disturb function starts, the LCD will display time don't disturb, converted automatically after the countdown to 00 (don't disturb, machine in a hands-free out of don't disturb. Don't disturb during calls don't disturb (except VP number).

3.1.5 special features: to choose set: press the set key to select 5, LCD will be prompted to 1-2 - (1-2 4 - f, option 1 into the flash time setting, LCD display flash# 600, according to the flip up and down keys to select flash time at the time. Failure time is 90.95,100,120,180,300,600,1000 ms. Option 2 into the P-T conversion, LCD display P/T one according to turn up and down keys selection method at this time, the initial value for audio dial-up state; Choose 3 into the security set, LCD display defend off according to turn up and down button off (security code to *#).

3.1.6 local code and text code set: choose 6 press set key, the LCD will be prompted to 2-1 - LOC, LOC 01 to enter the local code set, LCD display LOC. The direct input 1 ~ 8 digits press set key to confirm again, if you want to cancel the local code, press the delete key to delete the input when the input number, press the set key again to confirm. Option 2 enter ext code set, screen out off, setting method and the local code setting in the same way. If you want to cancel out code, can choose off by turning up and down keys.

3.1.7 LCD brightness control: press the set key to select 7, LCD LCD con 4, will be prompted at this point according to the up and down keys to adjust the LCD brightness, the default value is level 4, level 5 is low.

3.1.8 P feature set: press the set key choice 8, the LCD will be prompted to 2-3 - 1, so, choose 1 into the automatic IP setting, LCD display au IP off by turning up and down keys to choose IP number at this time, IP number for IP1, IP2, 17509, 17508, 193, 17911, 17921, 17931, 17951, 17961, 068, 96300, 96333, 196, 190179, 69197, off. The default value is off. P2 (IP1, 1 set in manual IP code) (the machine did not manual IP function)

3.2 hang up function

3.2.1 callback: the appropriations or number when going through direct press callback key can set aside the selected number. If you want to add before the number "0", long press callback key for 3 seconds.

3.2.2 telephone inquiries: hang up or off-hook state, turned on or under the up button to view the electricity information; In hot press the key for 3 seconds, can quickly into the telephone inquiries.

3.2.3 In the hot long press the "key for 3 seconds, each operation can quickly access to electricity.

3.2.4 hang appropriations number: under the hook state, directly enter the phone number, if there are any mistakes can use the delete button to modify, number input is completed, can lift machine or press callback key directly to the number allocated to a hands-free set aside when busy (charging dial), long press callback for 3 seconds to add "0" callback.

3.2.5 delete function: In the condition of the input number, use the delete button to delete the input wrong number. In the queue number state, use the delete button to delete the current number and information or long press the key for 3 seconds to delete all of the number.

3.2.6 single bond storage: appropriations number input number or find out number, press Mx (x for M1 ~ M3) can be stored, screen display SAVE, said storage success; Hang up the press Mx dial out the number directly.

3.2.7 hang up standby features quick setup

P/T conversion: standby mode, long press "1" for 20 seconds, (in 15 seconds, dialing to "save", 5 seconds after the return to standby, again dial switch mode, long press "1" for 20 seconds, the default audio dial-up)

lock 0: standby mode, long press "0" 50 seconds, (show "save" when 45 seconds, 5 seconds after the return to standby; set success, cancel all locks, 50 seconds long press "0", show up, the default is off)

lock 0: standby mode, long press "0" 50 seconds, (show "save" when 45 seconds, 5 seconds after the return to standby; set success, cancel the lock 9, long press "0" 50 seconds, showed up, the default is off)