

N·INC

TELEPHONE Instruction Manual



KX-T2035CID

3.1.7 LCD brightness control: press the set key to select 7, LCD LCD con 4, will be prompted at this point according to the up and down keys to adjust the LCD brightness, the default value is level 4, level 5 in total.

3.2 hang up function

3.2.1 callback: the appropriations or number when going through direct press callback key can set aside the selected number; If you want to add before the number "0", long press callback key for 3 seconds.

3.2.2 telephone inquiries: hang up or off-hook state, turned on or under the up button to view the electricity information; In hot press the # key for 3 seconds, can quickly into the telephone inquiries.

3.2.3 In the hot long press the * key for 3 seconds, query condition can quickly access to electricity.

3.2.4 hang appropriations number: under the hook state, directly enter the phone number, if there are any mistakes can use the delete button to modify, number input is completed, can lift machine or press callback key directly to the number allocated (a hands-free set aside when busy chasing dial), long press callback for 3 seconds to add "0" callback.

3.2.5 delete function: in the condition of the input number, use the delete button to delete the input wrong number; In the query number state, use the delete button to delete the current number and information or long press the key for 3 seconds to delete all call or to number.

3.2.6 single bond storage: appropriations number input number or find out number, long press Mx (x for M1 - M 3) can be stored, screen display: SAVE, said storage success; Hang up the press Mx dial out the number directly.

3.3.3 volume function:

The volume + / : press this button to enter the time bell volume + mode, each time you press the 1, up to 3 files, hands-free pick machine press the volume + key, each time you press the add 1 ", Until the third end, the handle is picked up by volume +, which is added one at a time

Volume - : the engine will press the button to enter the ringtone - mode, each time minus 1, until the first off. The speakerphone press the loud-key, one shift at a time; Until 1 file; Handle pick up the volume - for each one, the lowest to the first.

3.3.4 Software lock function: under the predial number

Cancel software lock 0*3 Redial/Pause #3 seconds (last # long press for 3 seconds)

Lock 9: 1*3 Redial/Pause #3 seconds (last # long press for 3 seconds)

Lock 0: 2*3 Redial/Pause #3 seconds (last # long press for 3 seconds)

Lock 9 and 0: 3*3 Redial/pause #3 seconds (last # long press for 3 seconds)

Full lock (open 110, 119, 120) : 4*3 Redial/pause #3 seconds

(last # long press for 3 seconds)

Please read this manual before use