

Panasonic®

Digital Copier


Operating Instructions (For Facsimile)

DP-2500/3000

Options

DA-AR250/AS200/DS200/DS205/DS210/DS215/FG230/FG231/FK200/FK210/FS200/FS205/MD200

DA-NE200/PC200/PC210/SM08B/SM16B/SM28B/UC200/XN200/XT200; UE-410047/410048/403171

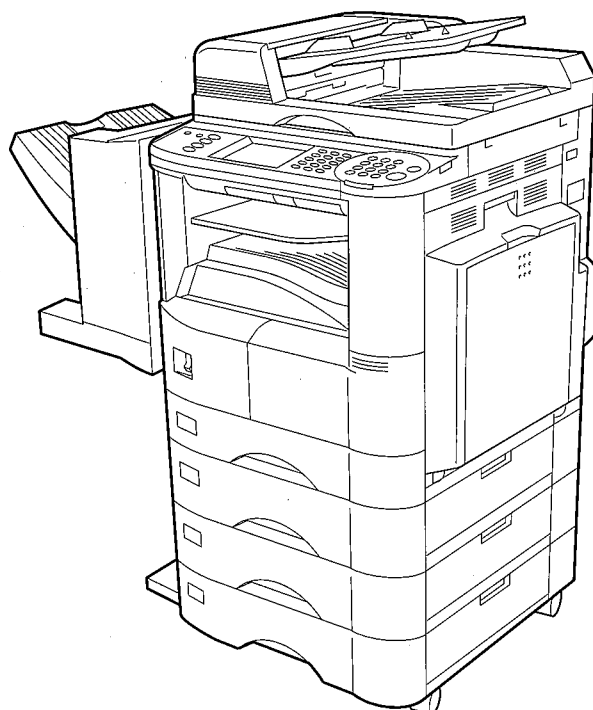

Before operating this equipment, please read these instructions completely and keep these operating instructions for future reference.

English

GETTING TO
KNOW YOUR
MACHINE

INSTALLING
YOUR MACHINE

PROGRAMMING
YOUR MACHINE

BASIC
OPERATIONS

ADVANCED
FEATURES

NETWORK
FEATURES

PRINTOUT
JOURNALS AND
LISTS

PROBLEM
SOLVING

APPENDIX

IMPORTANT INFORMATION

When requesting information, supplies or service always refer to the model and serial number of your machine. The model and serial number plate (Main Name Plate) is located on the machine as shown below. For your convenience, space is provided below to record information you may need in the future.

Model No.

Serial No.

Date of Purchase

Dealer

Address

Telephone Number


() -

Supplies Telephone Number

() -

Service Telephone Number

() -

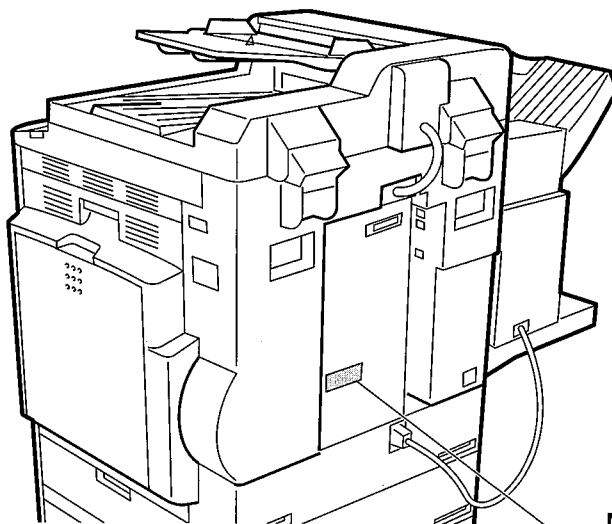

Model and Serial
Number

Copyright © 2001 by Matsushita Graphic Communication Systems, Inc.
All rights reserved. Unauthorized copying and distribution is a violation of law. Printed in Japan.
The contents of these Operating Instructions are subject to change without notice.

Table of Contents

Getting to Know Your Machine

Safety Information	4
Function Key	8
External View	9
Control Panel	10

Installing Your Machine

Setting the Dialling Method (Tone or Pulse)	13
Adjusting the Volume	15
■ Setting The Ringer Volume	15
■ Setting the Monitor Volume	16
User Parameters	17
■ Setting the Date and Time	17
■ Setting Your LOGO	19
■ Setting Your Character ID	21
■ Setting Your ID Number (Fax Telephone Number)	23

Programming Your Machine

Phone Book	25
■ Adding Telephone Numbers	25
■ Editing the Phone Book	27
Customizing Your Machine	31
■ Setting the Fax Parameters	31
■ Fax Parameter Table	33

Basic Operations

Loading Originals	37
■ How To Load Originals	37
■ Sending Non-Standard Size Originals	37
■ Flatbed Scanning	37
Basic Transmission Settings	38
■ Contrast	38
■ Resolution	38
■ Original (Text/Photo)	39
■ Verification Stamp	39
■ Communication Journal (Comm. Journal)	40
Sending Documents	42
■ Memory Transmission	42
■ Manual Number Dialling	44
■ Phone Book Dialling	46
■ Direct Transmission	48
■ Manual Number Dialling (Direct Transmission)	48
■ Rotated Transmission	50
■ Rotation XMT Fax Parameter set to:	50
■ Double-Sided Transmission (Receiving)	50
■ Duplex Scan Select Mode set to:	50
■ Duplex Print Fax Parameter set to:	50
■ Setting the Rotation XMT	51
■ Duplex Scan	53
■ Sending Document(s) Using Duplex Scan	53
■ Setting Duplex Print	55
■ Voice Mode Transmission	57
■ Off-Hook Dialling	57
■ On-Hook Dialling	59
■ Transmission Reservation	61
■ Memory Transmission Reservation (Multi-Tasking)	61
■ Direct Transmission Reservation (Priority Transmission Reservation)	63
■ Redialling	65
■ Automatic Redialling	65
■ Manual Redialling	65
Receiving Documents	66
■ Automatic Reception	66
■ Manual Reception	66
■ Print Reduction	68
■ Selecting the Print Reduction Mode	68
■ Receiving Oversize Documents	69
■ Substitute Memory Reception	70

Table of Contents

Advanced Features	
Batch Transmission	71
■ Real-Time Batch Transmission	71
■ Delayed Batch Transmission	71
Timer Controlled Communications	72
■ Deferred Transmission	72
■ Deferred Polling	74
■ Deferred Advanced Communication	76
Polling	77
■ Preparing to be Polled	77
■ Polling Documents from Another Station	79
Program Keys	81
■ Setting for Group Dialling	81
■ Setting for Program Dial	83
■ Editing for Group Dialling	85
■ Erasing the Program Key Settings	87
Edit File Mode	89
■ Printing or Viewing a File List	89
■ Changing the Start Time or the Station of a File	91
■ Deleting a File	93
■ Printing Out a File	95
■ Adding Documents Into a File	97
■ Retry an Incomplete File	99
Receive To Memory	101
■ Setting the RCV To Memory Password	101
■ Setting RCV To Memory	102
■ Printing Documents	104
Distinctive Ring Detector (DRD)	106
Fax Cover Sheet	107
■ General Description	107
■ To Use the Fax Cover Sheet	107
Department Code	110
■ General Description	110
■ Setting the Department Code	110
■ Setting the Department Code Name	112
■ Changing the Department Code	114
■ Deleting the Department Code	116
■ Sending a Document with Department Code	118
■ Sending a Document with Department Code (Voice Mode Transmission)	119
■ Printing a Department Code List	121
■ Printing a Department Code Journal	123
Network Feature	
Selective Reception	127
■ Setting the Selective Reception	127
Password Communications	129
■ General Description	129
■ Compatibility with Other Machines	129
■ Setting Password Transmission	130
■ Setting Password Reception	132
■ Using Password Transmission	134
■ Using Password Reception	135
Confidential Mailbox	136
■ Confidential Mailbox	136
■ Compatibility with Other Machines	136
■ Sending a Confidential Document to a Remote Station's Mailbox	137
■ Polling a Confidential Document from a Remote Station's Mailbox	139
■ Receiving a Confidential Document into Your Machine's Mailbox	141
■ Storing a Confidential Document in Your Machine's Mailbox	142
■ Printing a Confidential Document from Your Machine's Mailbox	144
■ Deleting a Confidential Document Stored in Your Machine's Mailbox	145
Sub-Addressing	147
■ General Description	147
■ Setting the Sub-Address into a Phone Book Numbers	148
■ Sending a Fax with Sub-Address	150
■ Using Manual Number Dialling	151
■ Use Sub-Address temporarily	152

Table of Contents

Printout Journals and Lists

Journals and Lists	155
■ Transaction Journal	155
■ Individual Transmission Journal (Ind. XMT Journal)	157
■ Communication Journal (Comm. Journal)	160
■ Phone Book List	162
■ Group and Program List	164
■ FAX Parameter List	166

Problem Solving

Troubleshooting	169
■ If You Have Any of These Problems	169
■ Information Codes	171
■ Verification Stamp	173

Appendix

Specifications	175
Options and Supplies	177
Glossary	178
Index	183

Safety Information



Declaration of Conformity (DoC)

"Hereby Matsushita Graphic Communication Systems, Inc./ Panasonic Testing Centre (Europe) GmbH (PTC), declares that this (G3 Facsimile Equipment) is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC"

Hint:

If you want to get a copy of the original DoC of our products which relates to the R&TTE, please contact to our web address: <http://doc.panasonic-tc.de>.

Network Compatibility

This product, Model DP-2500/3000 with DA-FG230/FG231-** (** means country suffixes as table below), is designed as to work with an analogue Public Switched Telephone Network (PSTN) in the each country.

**	Country	**	Country	**	Country	**	Country
AA	Austria	AJ	Spain	EE	Italy	AB	U.K./Ireland
AD	Denmark	AM	Switzerland	AR	Belgium	AG	Germany
AF	Finland	AN	Norway	AS	Sweden	YG	Greece
AH	The Netherlands	AP	Portugal	AV	France		



WARNING

denotes a potential hazard that could result in serious injury or death.

- TO PREVENT FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.
- TO MINIMIZE THE POSSIBILITY OF SHOCK OR DAMAGE TO THE MACHINE, IT MUST BE PROPERLY GROUNDED.
- THIS PRODUCT CONTAINS HAZARDOUS RADIATION. IF YOU DO NOT FOLLOW THESE INSTRUCTIONS OR USE CONTROLS, MAKE ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, YOU MAY EXPOSE YOURSELF TO HAZARDOUS RADIATION.
- WHEN YOU OPERATE THIS EQUIPMENT, THE SOCKET-OUTLET SHOULD BE NEAR THE EQUIPMENT AND BE EASILY ACCESSIBLE.
- MAKE SURE THAT THE MACHINE IS INSTALLED IN A SPACIOUS OR WELL VENTILATED ROOM SO AS NOT TO INCREASE THE AMOUNT OF OZONE IN THE AIR. SINCE OZONE IS HEAVIER THAN AIR, IT IS RECOMMENDED THAT AIR AT FLOOR LEVEL BE VENTILATED.
- PLUG POWER SUPPLY CORD INTO ORDINARY AC OUTLET BEFORE CONNECTING TELEPHONE LINE CORD. DISCONNECT TELEPHONE LINE CORD BEFORE UNPLUGGING POWER SUPPLY CORD FROM AC OUTLET.
- DISCONNECT THE EQUIPMENT IMMEDIATELY SHOULD IT EVER SUFFER PHYSICAL DAMAGE WHICH RESULTS IN THE INTERNAL PARTS BECOMING ACCESSIBLE IN NORMAL USE. IN THIS INSTANCE USERS SHOULD HAVE THE EQUIPMENT REPAIRED OR DISPOSE OF.
- IF THE POWER SUPPLY CORD AND/OR TELEPHONE LINE CORD OF THIS EQUIPMENT ARE DAMAGED, THEY MUST BE REPLACED BY THE SPECIAL CORDS SUPPLIED BY AN AUTHORIZED PANASONIC SERVICE CENTRE.

Safety Information

⚠ CAUTION denotes hazards that could result in minor injury or damage to the machine.

- THIS PRODUCT CONTAINS A LITHIUM BATTERY. DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS OF YOUR LOCAL SOLID WASTE OFFICIALS.
- 1 When you know that a thunderstorm is coming, we recommend that you:
 - (1) Unplug the telephone line cord from the phone jack.
 - (2) Turn off the power and unplug the power supply cord from AC outlet.
 - 2 This equipment may not necessarily provide for the effective hand-over of a call to or from a telephone connected to the same line.
 - 3 The operation of this equipment on the same line as telephones or other equipment with audible warning devices or automatic ring detectors will give rise to bell tinkle or noise and may cause false tripping of the ring detector. Should such problem occur, the user is not to contact telecom (telephone company) faults service.
- TO REDUCE THE RISK OF SHOCK OR FIRE, USE ONLY NO. 26 AWG OR LARGER TELEPHONE LINE CABLE.
 - DISCONNECT ALL POWER TO THE MACHINE BEFORE COVER(S) ARE REMOVED. REPLACE THE COVER(S) BEFORE THE UNIT IS RE-ENERGIZED.

⚠ IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- DO NOT USE THIS PRODUCT NEAR WATER, FOR EXAMPLE, NEAR A BATH TUB, WASH BOWL, KITCHEN SINK OR LAUNDRY TUB, IN A WET BASEMENT OR NEAR A SWIMMING POOL.
- AVOID USING A TELEPHONE (OTHER THAN A CORDLESS TYPE) DURING AN ELECTRICAL STORM. THERE MAY BE A REMOTE RISK OF ELECTRIC SHOCK FROM LIGHTNING.
- DO NOT USE THE TELEPHONE TO REPORT A GAS LEAK IN THE VICINITY OF THE LEAK.
- USE ONLY THE POWER CORD AND BATTERIES INDICATED IN THIS MANUAL. DO NOT DISPOSE OF BATTERIES IN A FIRE, THEY MAY EXPLODE. CHECK WITH LOCAL CODES FOR POSSIBLE SPECIAL DISPOSAL INSTRUCTIONS.

Safety Information

For New Zealand Users

Different characteristics of the equipment at the other end of the call, and/or variations in line conditions, may mean that it will not always be possible to communicate at the higher speeds for which this machine has been designed. Neither Telecom or Panasonic New Zealand can accept responsibility should this situation arise.

IMPORTANT NOTICE

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use in emergencies.


This equipment should not be used under any circumstances which may constitute a nuisance to other Telecom customers.

This equipment shall not be set to make automatic calls to the Telecom '111' Emergency Service.


Not all telephones will respond to incoming ringing when connected to the extension socket.

Safety Information


⚠ CAUTION denotes hazards that could result in minor injury or damage to the machine.

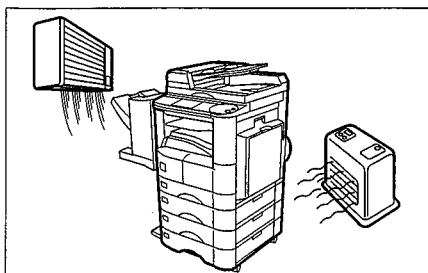


Do not install the machine near heating or an air conditioning unit.

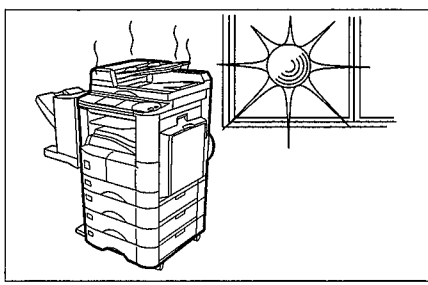


Avoid exposure to direct sunlight.

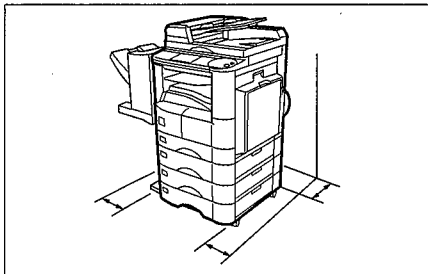

Install the machine on a flat surface, leave at least 10 cm of space between the machine and other objects.

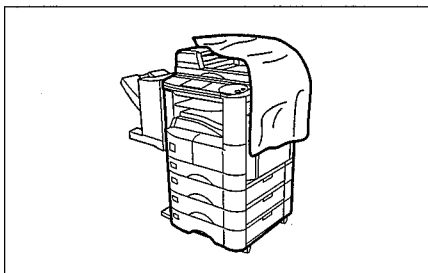



Do not block the ventilation openings.

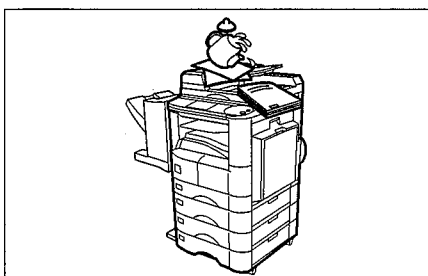


Do not place heavy objects or spill liquids on the machine.

Function Key

Any function can be started by first pressing **FUNCTION** and then select the desired function on the display.

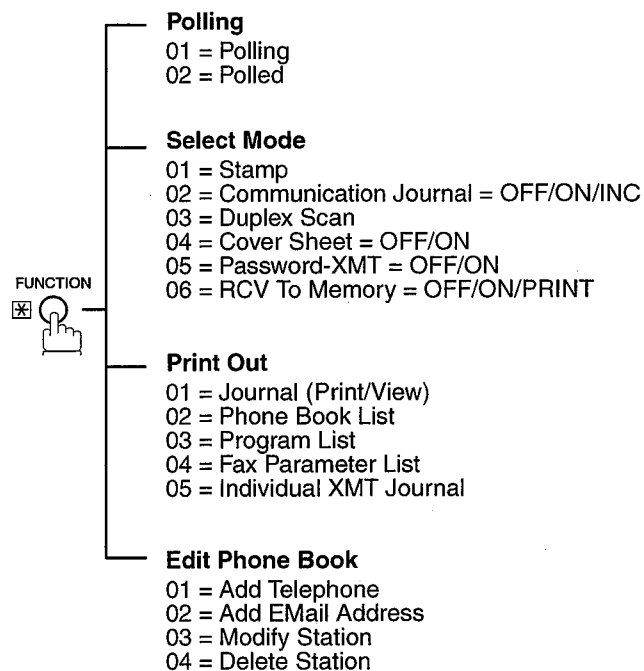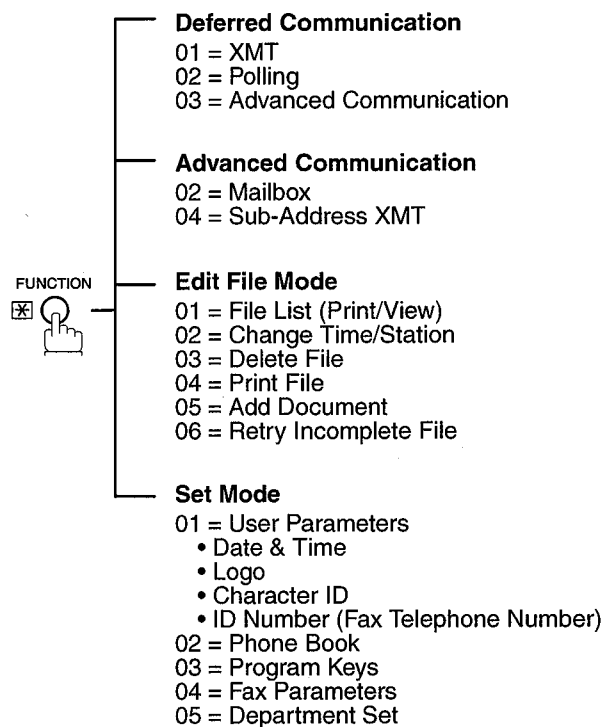

External View

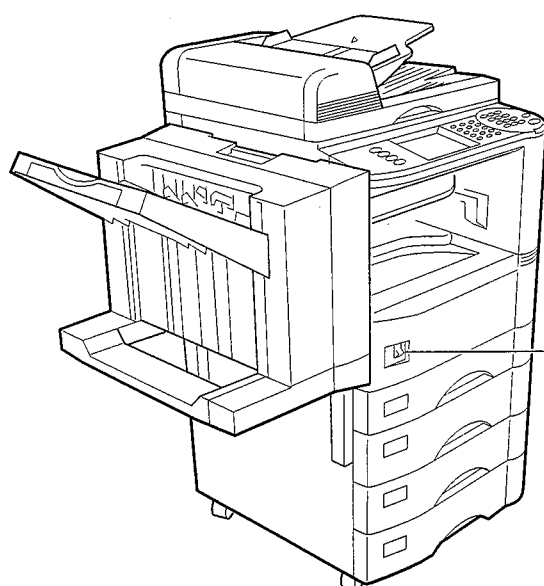

Power switch


- After connecting all cables and Power Cord, turn the power switch ON.

Handset

- (Available as an option, see Operating Instructions (For Copier) page 72)

Telephone Line Jack

- Plug one end of the telephone line cable into the "RJ-11C" telephone jack supplied by the telephone company and the other end into the LINE jack on the back of the machine.

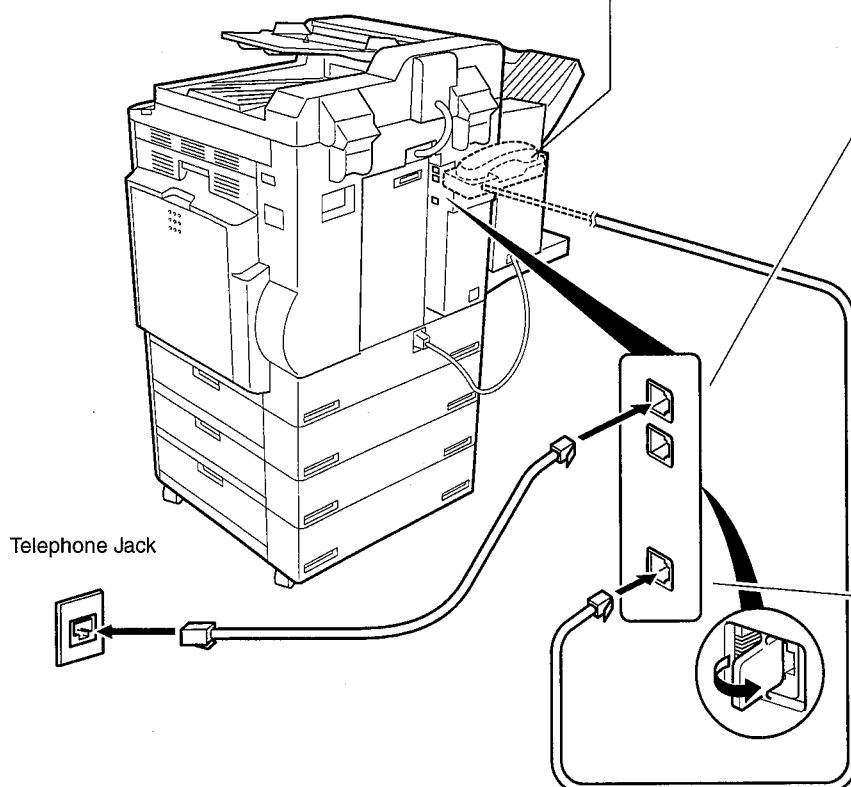


Optional Telephone Handset Jack

- Connect the telephone line cable from the Optional Handset into the HANDSET jack on the back of the machine.

NOTE

1. For some countries, the handset may not be available because of the country's regulation or specification.

Control Panel

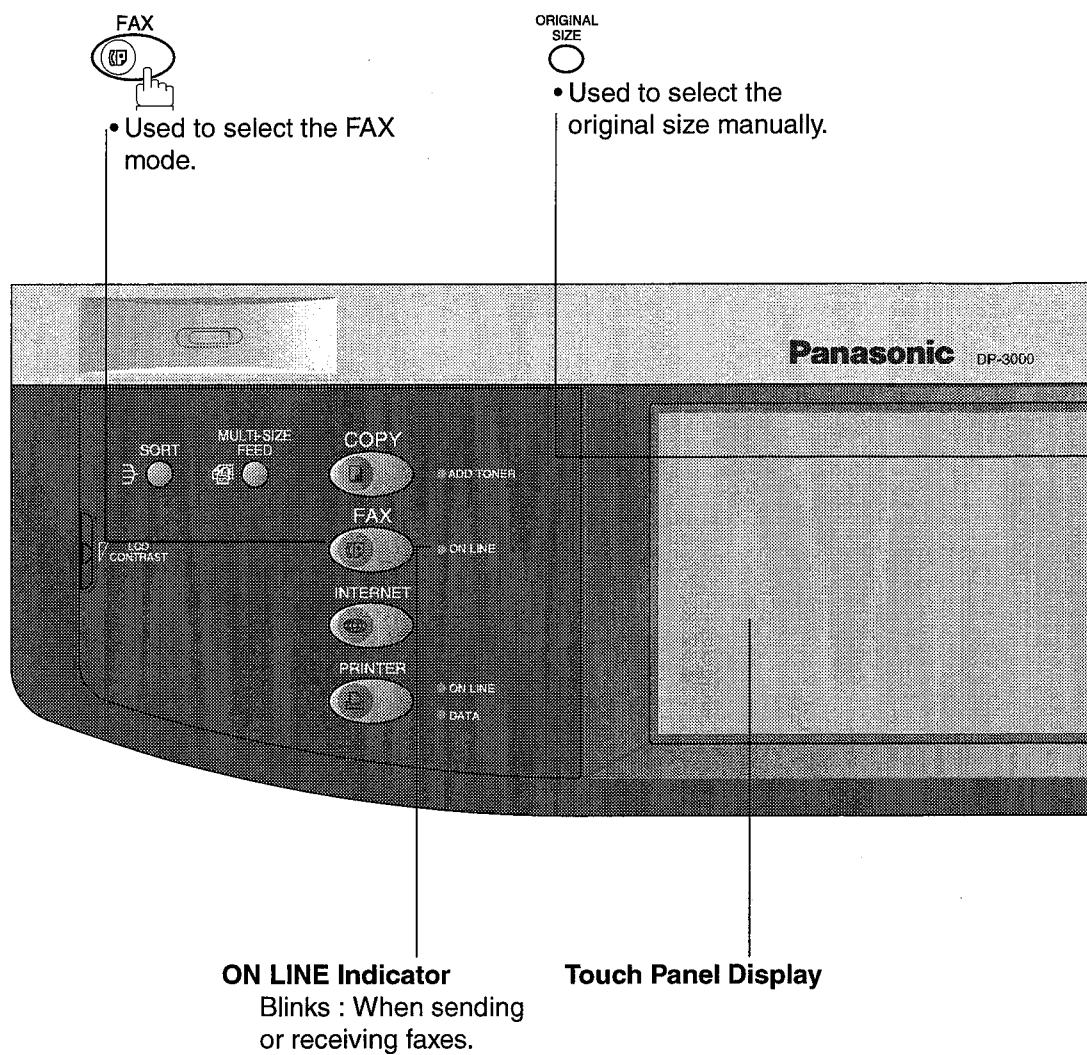

Control Panel

ENERGY SAVER



- Used to switch the machine into energy saving mode. For more details, see page 32 of the Operating Instructions (For Copier.)

FUNCTION



- Used to start or select the function and sub-functions. These functions are explained in detail on page 8.

RESET




- Use this button when resetting all the previously set functions.


CLEAR



- Use this button when correcting entered numbers or characters.

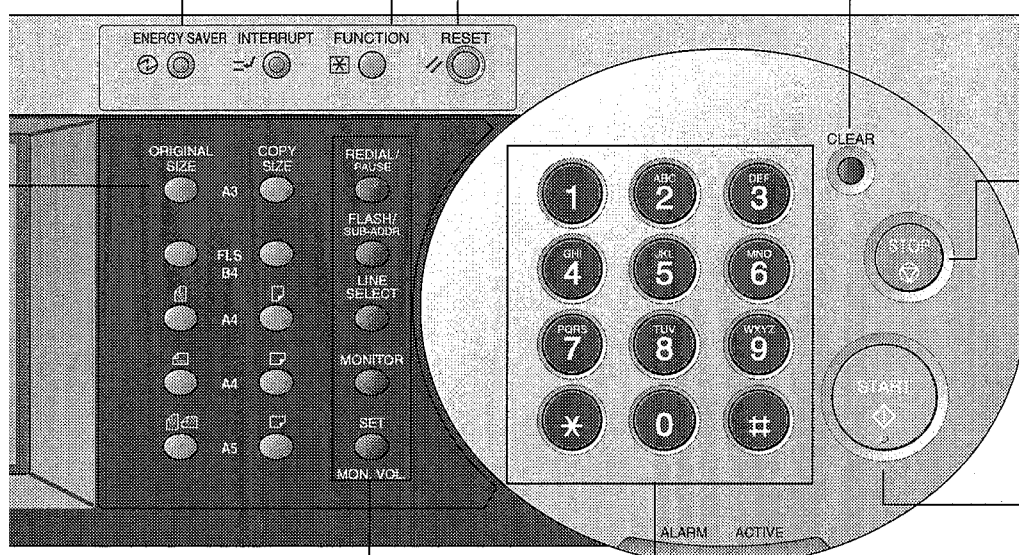

- Press this button when you want to stop telecommunication, registration operation, or audible tone.

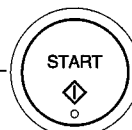

- Press this button to start transmitting or receiving fax.

REDIAL/ PAUSE



- Used to enter a pause when recording or dialling a telephone number, or to redial the last dialled number.

FLASH/ SUB-ADDR



- Used to separate the Sub-Address from the telephone number when dialling, or to access some features of your PBX.

LINE SELECT



- Used to manually select the communications port for each transmission. Available when the Optional 2nd G3 Fax Communication Port Kit has been installed. (See Operating Instructions (For Copier) page 72.)

MONITOR



- Used to start On-Hook dialling.

SET



MON. VOL.

- Used to set operations.
- Used for adjusting the monitor volume.

Ten Keypad

- Used for manual number dialling, recording phone numbers, and numerical entries.




- Used to temporarily change the dialling mode to Tone when Pulse mode is set.


This page is intentionally left blank.

Setting the Dialling Method (Tone or Pulse)



Your machine can operate with either of two dialling methods (Tone or Pulse), depending on the type of telephone line you are connected to. If you need to change the dialling method to Tone or Pulse, follow the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

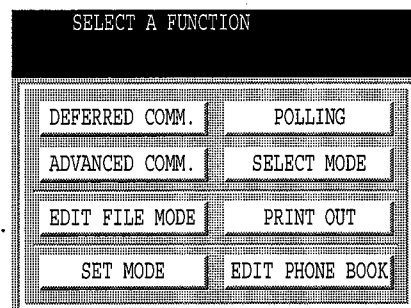

2

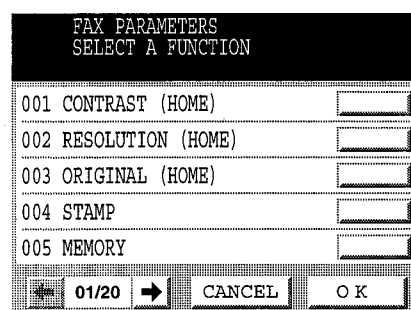 


3





- If your machine does not have the 2nd G3 Fax Communication Port Kit installed, proceed to Step 5.

If your machine does have the 2nd G3 Fax Communication Port Kit installed, you can change the dialling method for each of the telephone lines in Step 4 below.

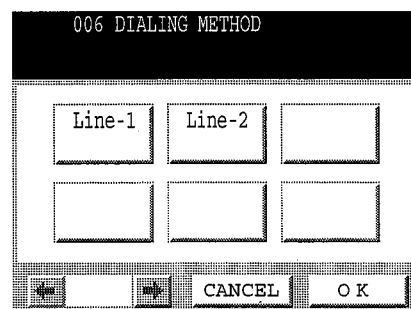

4

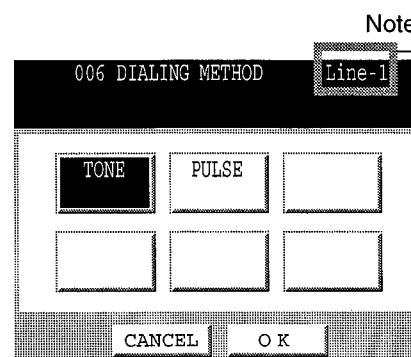 

Note1

Setting the Dialling Method (Tone or Pulse)

5

TONE

or

PULSE

6




NOTE

1. This field (Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Option is installed.
2. For some countries, this feature is not available depending on the country's regulation. The display may not show this feature.


Adjusting the Volume

You can adjust the monitor and ringer volume on your machine. The built-in speaker enables you to hear the dial tone, dialling signals, and busy tone. The ringer sounds when your machine receives a call.



Setting The Ringer Volume

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

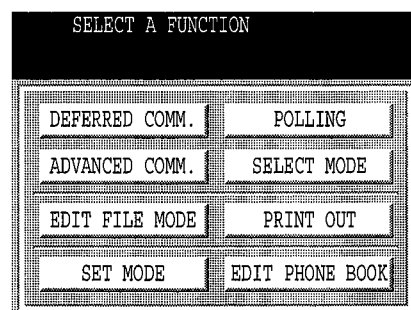

1

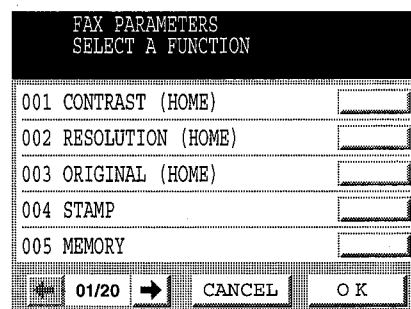 


2



3


Press  or  to scroll the display to the desired Fax Parameter.

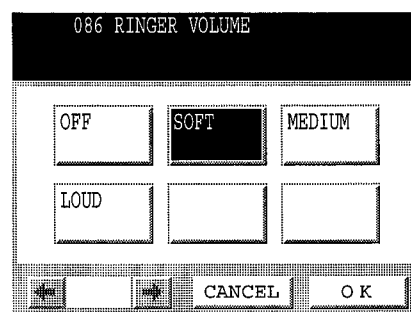

4

Select the desired setting for the Ringer Volume.

 5




NOTE

 
1. You can also adjust the volume of the key touch tone and the volume of the buzzer in the Fax Parameter No. 010 (KEY/BUZZER VOLUME). (See page 33)

Adjusting the Volume

Setting the Monitor Volume

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1




You will hear the dial tone through the speaker.



2

Press ◀ or ▶ repeatedly to raise or lower the Volume.

 3




User Parameters


Your facsimile machine has several basic settings (User Parameters) to help you keep records of the documents you send or receive. For example, the built-in clock keeps the current date and time, and your LOGO and ID Number help to identify you when you send or receive documents.

Setting the Date and Time



At standby the display will show the date and time. Once the standby display is set, it will automatically be updated.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1

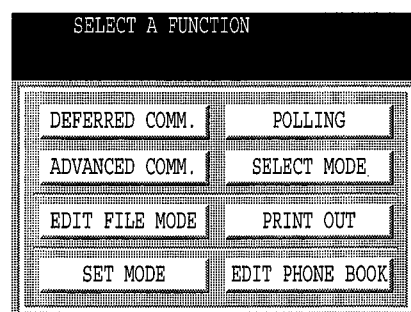

2

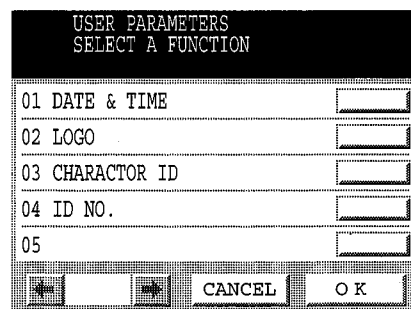 

3

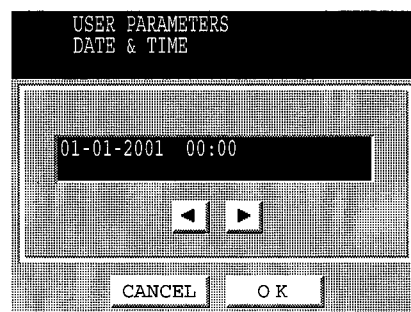

User Parameters

4

 
Enter the new date and time.

Ex: ① ⑤ Date : 15th
 ① ⑧ Month : August
 ② ① ① ① Year : 2001
 ① ⑤ ① ① Time : 3:00 PM

If you make a mistake, use ◀ or ▶ to move the cursor over the incorrect number, then overwrite it with a correct one.



5




User Parameters


Setting Your LOGO

When you send a document, your LOGO appears on the top of the copy printed out at the other station.


The LOGO helps to identify you to someone who receives your transmission.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1

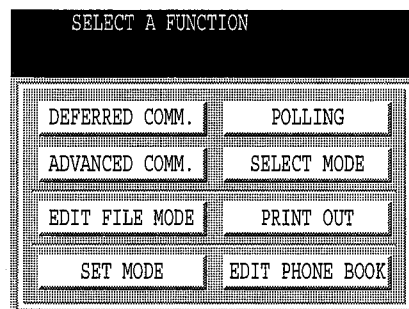

2

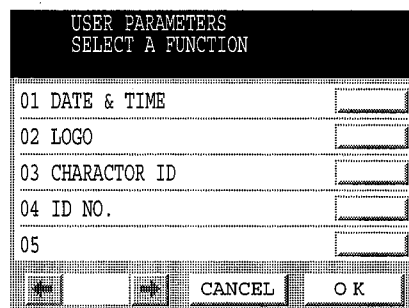

3

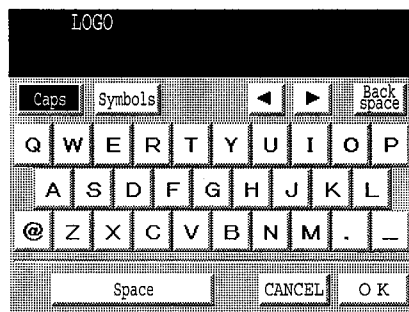


User Parameters

4


Enter your LOGO (max. 25 characters and digits) by using the QWERTY keyboard.

Ex: P A N A S O N I C

If you make a mistake, use ◀ or ▶ to move the cursor one space beyond the incorrect character, press **CLEAR** then re-enter the new character.

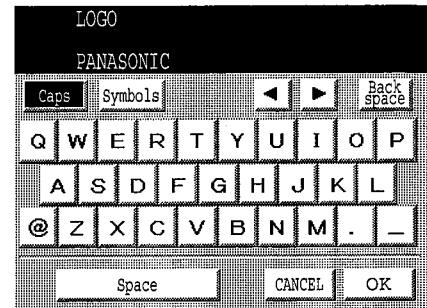


5

 


User Parameters

Setting Your Character ID


 
If the remote machine has Character ID capabilities, when you are sending or receiving, your Character ID will appear on the remote machine's display and the remote machine's Character ID will appear on your display.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1

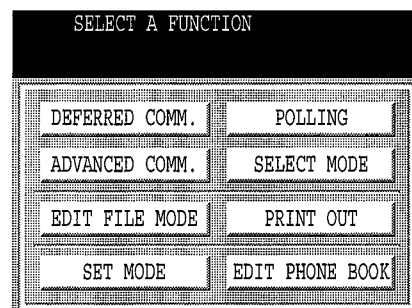

2

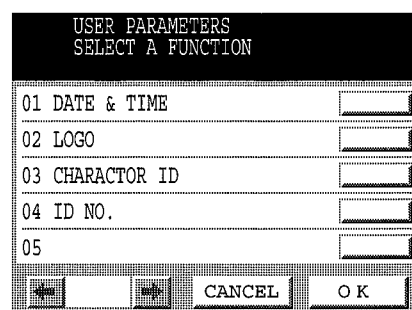 

3

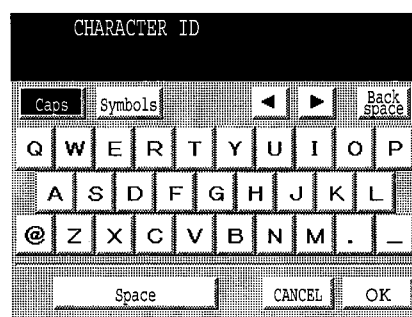


User Parameters

4


Enter your Character ID (max. 16 characters and digits) by using the QWERTY keyboard.

Ex: H E A D SPACE O F F I C E

If you make a mistake, use ◀ or ▶ to move the cursor one space beyond the incorrect character, press CLEAR then re-enter the new character.

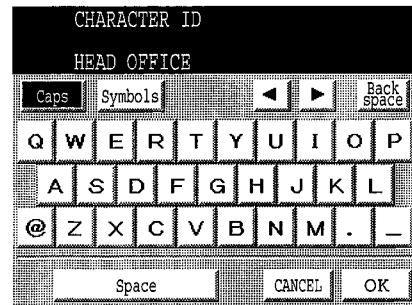

5

 


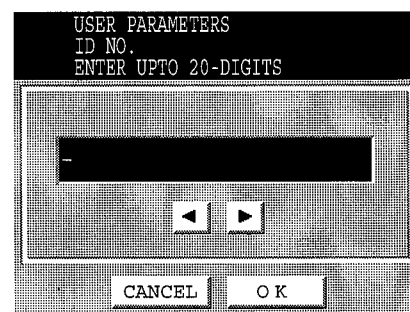
 
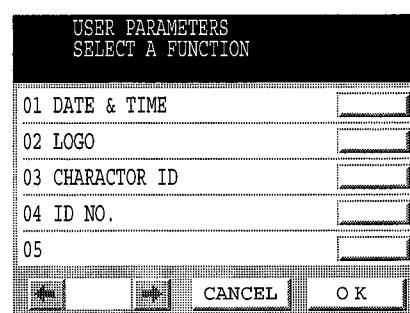
 
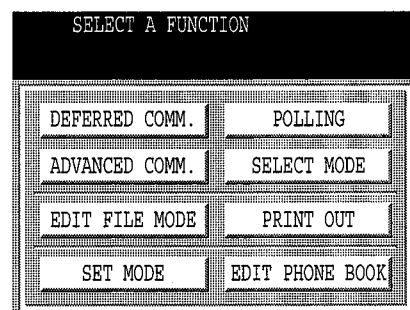
 
User Parameters

Setting Your ID Number (Fax Telephone Number)

If the remote machine does not have a Character ID but it has an ID Number, when sending or receiving, your ID Number will appear on the remote machine's display and their ID Number will appear on your display.

We suggest you use your facsimile telephone number as your ID number. (max. 20 digits)

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".




User Parameters

4


Enter your ID (max. 20 digits) by using the Ten Keypad and the **MONITOR** key to enter a space between numbers..

Ex: ② ① ① **MONITOR** ⑤ ⑤ ⑤
MONITOR ① ② ① ②

If you make a mistake, use ◀ or ▶ to move the cursor one space beyond the incorrect number, press **CLEAR** then re-enter the new number.

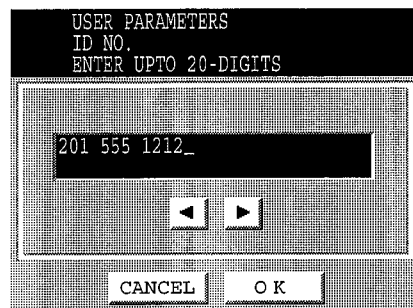

5

 

NOTE


1. You may use * to enter a "+" character at the beginning of the ID number to indicate the following digit(s) for your country code.
Ex : +1 201 555 1212 +1 for U.S.A. country code.
 +81 3 111 2345 +81 for Japan country code.
2. Your Fax Telephone Number must be set as your ID Number because it is required by the Telephone Consumer Act of 1991. (For details, see FCC NOTICE at the end of these Operating Instructions)

Phone Book


Adding Telephone Numbers

The Phone Book contains Speed dialling numbers. To use this dialling method, you must first store the telephone number(s) using the following procedure.


To add a Telephone Number, follow the steps below

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1

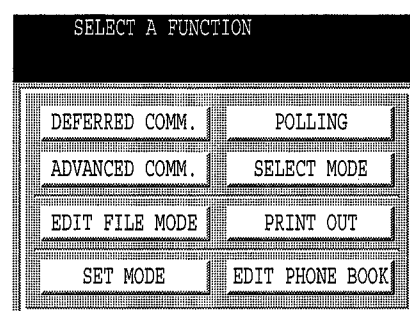

2

 

Note1

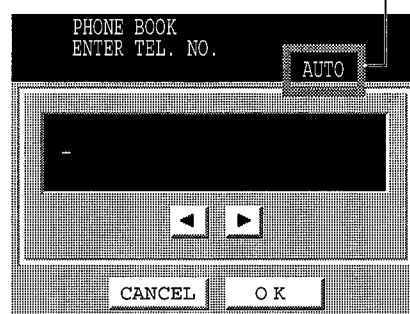

3


Enter the telephone number.

(up to 36 digits including pauses and spaces)

- If your machine has the 2nd G3 Fax Communication Port Kit installed, you can pre-select which telephone line should be used for this station by pressing the **LINE SELECT** key.

If "AUTO" is selected, the machine will automatically select the available telephone line.

Note1

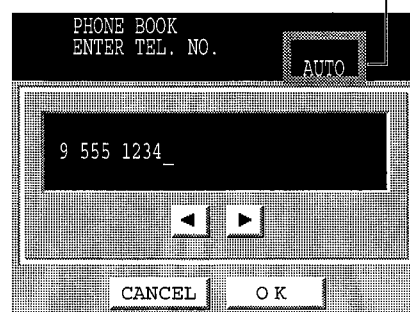

Ex: 9 MONITOR 5 5 5 MONITOR 1 2
3 4


Phone Book

4



then enter the station name by using the QWERTY keyboard.
(up to 15 characters)


Ex: **S A L E S SPACE D E P T**

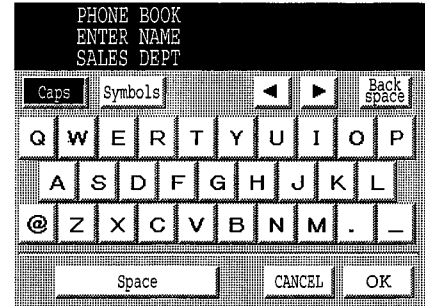

5




then enter the key name (up to 10 characters) .
(By default, the key name is the first 10 characters of the station's name. If you do not want to change it, press **OK** .)

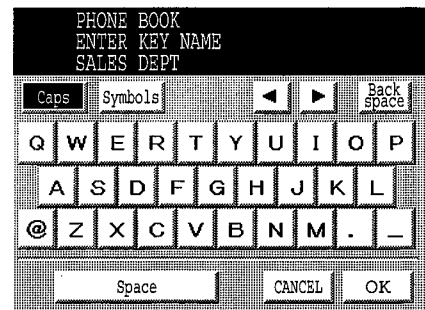

6



To record another number, repeat Steps 3 to 6.
To return to standby, press **STOP** .

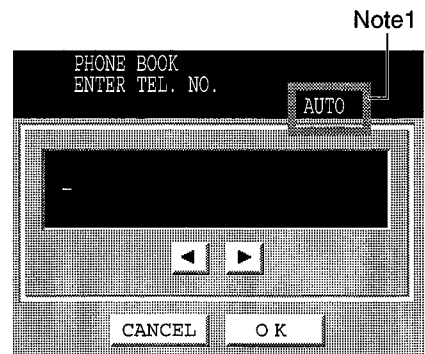

NOTE

1. This field (AUTO, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Kit is installed.


Phone Book

Editing the Phone Book


If you have to change or erase any of the Speed dialling numbers, follow the steps below.

To change the settings of a Speed dialling number

1

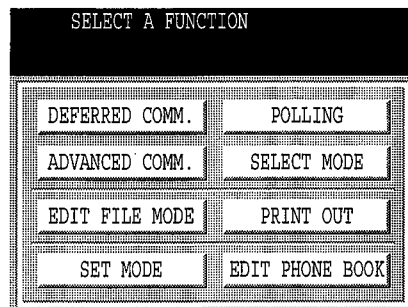


2

 

3

Select the station you wish to change.

Ex: SALES DEPT

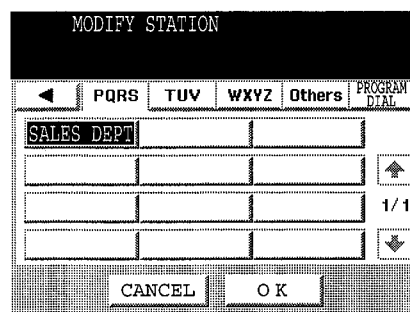


4



then enter a new telephone number. (See Note 1)

Ex: 9 PAUSE 5 5 5 MONITOR 3 4 5
6

Note3

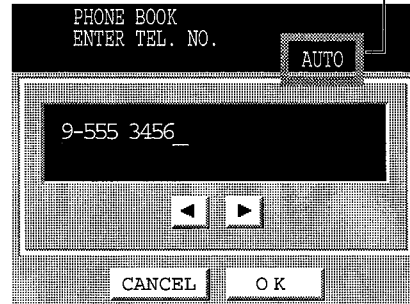


Phone Book

5



then enter a new station name. (See Note 1)

Ex: P A N A F A X

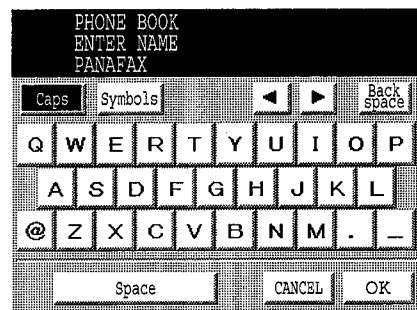


6



then enter a new key name. (See Note 1)

Ex: P A N A F A X

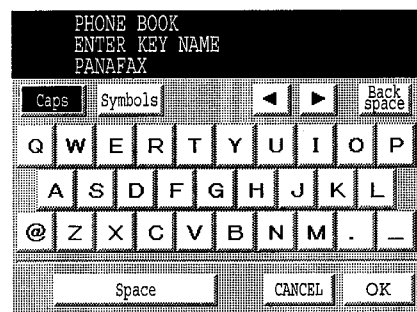

7



To return to standby, press STOP.


NOTE

1. If you make a mistake, use ◀ or ▶ to move the cursor beyond the incorrect number, press CLEAR then re-enter the new number.
2. The Phone Book cannot be changed or erased until the communication has finished.
To change or erase the settings, cancell the communication first by Edit File Mode. (See page 93)
3. This field (AUTO, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Kit is installed.



Phone Book

To erase an entry from the Phone Book

1

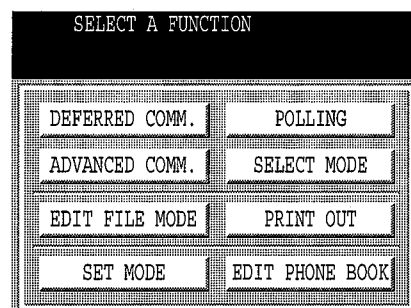


2

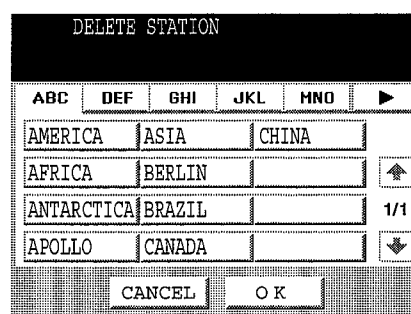 


3

Enter the station you wish to erase.

Ex: SALES DEPT

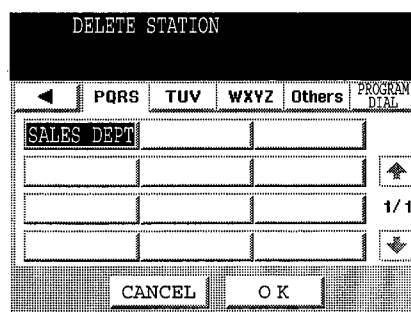

4

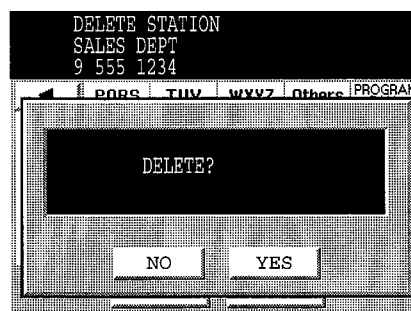

Phone Book

5



To return to standby, press **STOP**.


NOTE

1. If the Phone Book dialling number has been used for a communication reservation, the settings cannot be changed or erased until the communication has finished.
To change or erase the settings, cancel the communication first by Edit File Mode. (See page 93)


Customizing Your Machine

Your facsimile machine has a variety of adjustable Fax Parameters. These parameters, listed in the Parameter Table, are preset for you and do not need to be changed. If you do want to make a change, read the table carefully. Some parameters, such as the Resolution, Contrast, and Verification Stamp parameters, can be temporarily changed by simple key operation just before a transmission is made. When the transmission ends, however, these parameters return to their preset values (Home position). Other parameters can only be changed by the procedure described below.



Setting the Fax Parameters

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

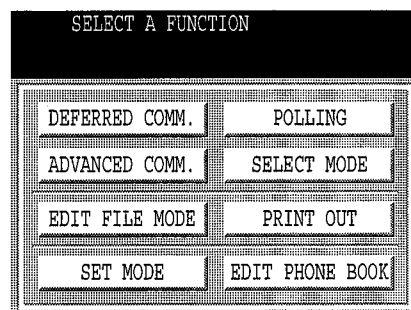

2

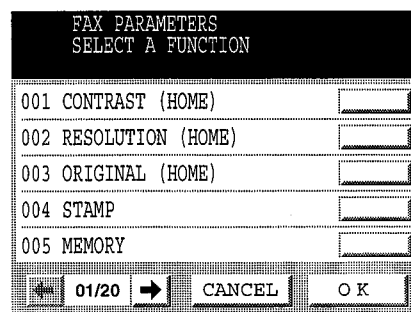 

3

Press ◀ or ▶ to scroll the display to the desired Fax Parameter. (See pages 33 to 36)


Ex: 004 STAMP

Customizing Your Machine

4

Enter the new setting value.

Ex:

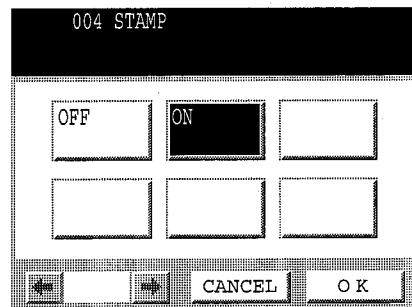

5



To set another parameter, press

NOTE


1. To scroll the display to the desired Fax Parameters in Step 3, press - 2. To print out a Fax Parameter List, see page 166.

Customizing Your Machine

Fax Parameter Table

No.	Parameter	Setting Number	Setting	Comments
001	CONTRAST	1	Lighter	Setting the home position for the CONTRAST.
		4	Normal	
		7	Darker	
002	RESOLUTION	1	Standard	Setting the home position for the RESOLUTION.
		2	Fine	
		3	S-Fine	
003	ORIGINAL	1	TEXT	Setting the home position for the ORIGINAL.
		2	TEXT/PHOTO	
		3	PHOTO	
004	STAMP	1	Off	Setting the home position of the STAMP. To select the stamp function when the document is stored in memory, see Fax Parameter No. 28.
		2	On	
005	MEMORY	1	Off	Setting the home position for the MEMORY.
		2	On	
006	DIALLING METHOD	1	Pulse	Selecting the dialling method. (Select Line-1 or Line-2 first, if you have the 2nd G3 Fax Communication Port Kit installed)
		2	Tone	
007	HEADER PRINT	1	Inside	Selecting the printing position of the header. Inside : Inside TX copy area. Outside : Outside TX copy area. No print : Header is not printed.
		2	Outside	
		3	No print	
008	HEADER FORMAT	1	Logo, ID No.	Selecting the header format.
		2	From To	
009	RCV'D TIME PRINT	1	Invalid	Selecting whether the machine prints the received date & time, remote ID, percentage of reduction and page number on the bottom of each received document.
		2	Valid	
010	KEY/BUZZER VOLUME	1	Off	Selecting the volume of the Key/Buzzer tone.
		2	Soft	
		3	Medium	
		4	Loud	
012	COMM. JOURNAL	1	Off	Selecting the home position for the printing mode of the COMM. Journal Off/Always/INC. Off : Does not print Always : Always prints Inc. Only: When communication has failed.
		2	Always	
		3	Inc. Only	

Customizing Your Machine

No.	Parameter	Setting Number	Setting	Comments
013	AUTO JOURNAL PRINT	1	Invalid	Selecting whether the machine prints the journal automatically after every 100 transactions.
		2	Valid	
014	FILE ACCEPTANCE REPORT	1	Invalid	Selecting whether the machine prints the file acceptance journal. If you set this parameter to valid, a report will print after the document is stored into memory.
		2	Valid	
017	RECEIVE MODE	1	Manual	Setting the reception mode to automatic or manual.
		2	Auto	
022	SUBSTITUTE RCV	1	Invalid	Selecting whether the machine receives to memory when the recording paper runs out, toner runs out or the recording paper is jammed.
		2	Valid	
024	PRINT REDUCTION	1	Fixed	Selecting the print reduction mode. Fixed: Reduce received document according to setting of Parameter No. 25. Auto: Reduce received document according to the length of received originals.
		2	Auto	
025	REDUCTION RATIO	70	70%	Selecting the fixed print reduction ratio from 70% to 100%. This parameter functions only when the fixed print reduction is selected on Fax Parameter No. 24.
		----	----	
		100	100%	
026	POLLING PASSWORD		(----	Setting a 4-digit password for secured polling. (See page 77)
027	POLLED FILE SAVE	1	Invalid	Selecting whether the machine retains the polled document(s) in memory even after the document(s) is polled once.
		2	Valid	
028	STAMP AT MEM. XMT	1	Invalid	Selecting whether the machine stamps the originals when storing into memory. (depending on the Stamp setting on the Control Panel)
		2	Valid	
030	DRD SERVICE	1	Invalid	Selecting whether or not the machine is available "DRD Service". If this parameter is set to "Valid", your machine detects the specified ring pattern only to receive a document automatically.
		2	Valid	
031	INCOMPLETE FILE SAVE	1	Invalid	Selecting whether the machine retains the document in memory if it is not successfully transmitted.
		2	Valid	
033	XMT REDUCTION	1	Invalid	Selecting whether the machine performs reduction when the transmitting original is wider than the recording paper used at the receiving machine.
		2	Valid	
037	RCV TO MEMORY		(----	Enter a 4-digit password for printing the received document(s) in memory by using FUNCTION SELECT MODE  06 RCV TO MEMORY . When 06 RCV TO MEMORY is set to ON, this parameter is not selectable on the LCD display. (See page 104)
042	CONF. POLLED FILE SAVE	1	Invalid	Selecting whether the machine saves the confidential polled file even after the file is polled once.
		2	Valid	
043	PASSWORD-XMT	1	Off	Setting a 4-digit XMT-Password and selecting whether the machine performs and checks the XMT-Password of the receiving station when transmitting. (See page 130)
		2	On	

Customizing Your Machine

No.	Parameter	Setting Number	Setting	Comments
044	PASSWORD-RCV	1	Off	Setting a 4-digit RCV-Password and selecting whether the machine performs and checks the RCV-Password of the transmitting station when receiving. (See page 132)
		2	On	
046	SELECT RCV	1	Invalid	Selecting whether the machine performs selective reception. (See page 127)
		2	Valid	
048	TELEPHONE LINE	1	PSTN	Selecting the type of line connected.
		2	PBX	
049	PSTN ACCESS CODE		(----	Setting PSTN Access Code. (max. 4 digits)
052	DIAGNOSTIC PASSWORD		(----	Setting the password for Remote Diagnostic Mode. Please ask your Panasonic Authorized Dealer for details.
053	SUB-ADDRESS PASSWORD		(----	Setting a 20-digit password for secured sub-address communication.
056	COVER SHEET	1	Off	Setting the home position for the Cover Sheet parameter in the Select Mode. (See page 107)
		2	On	
063	PC-FAX RCV MODE [See Note 2]	1	Print	Selecting how the machine will execute the receiving Fax document(s). Print : Print the received document(s). Upload & Print : Print the received document(s) and upload it's file. Upload : Upload the received document file.
		2	Upload & Print	
		3	Upload	
077	DEPARTMENT CODE	1	Invalid	Selecting whether the machine performs the Multiple Logo or Department Code operation. (See page 110)
		2	Valid	
078	ROTATION XMT	1	Invalid	Selecting whether the machine performs rotation transmission.
		2	Valid	
082	QUICK MEMORY XMT	1	Invalid	Selecting whether the machine performs Quick Memory Transmission. (See page 44 to 47) Invalid: Stores all documents into memory first before dialling the telephone number. Valid: Starts dialling the telephone number immediately after storing the first page.
		2	Valid	
085	RCV OUTPUT TRAY	1	Inner 1	Selecting the Output Tray home position for received document(s). Inner 1 : Received document(s) exit to the Bottom Output Tray. Inner 2 : Received document(s) exit to the Upper Output Tray (Blue). Outer
		2	Inner 2	
		3	Outer	
086	RINGER VOLUME	1	Off	Setting the home position of the ringer volume when your machine receives a call.
		2	Soft	
		3	Medium	
		4	Loud	

Customizing Your Machine

No.	Parameter	Setting Number	Setting	Comments
088	LINE SELECTION [See Note 3]	1	Auto	Setting the home position for the Telephone Line selection.
		2	Line 1	Auto: Selects the available telephone line for transmission automatically. Line 1: Selects this as the default telephone line, unless manually selecting an alternate phone line.
		3	Line 2	Line 2: Selects this as the default telephone line, unless manually selecting an alternate phone line.
089	LIST OUTPUT TRAY	1	Inner 1	Selecting the Output Tray home position for List printout.
		2	Inner 2	Inner 1 : The List printout exits to the Bottom Output Tray.
		3	Outer	Inner 2 : The List printout exits to the Upper Output Tray (Blue).
095	DUPLEX PRINT	1	Invalid	Selecting whether the machine performs duplex print.
		2	Valid	
097	SPECIAL TRAY No.1 - 3	1	None	Select up to 3 Special Trays that will not be used for printing received faxes.
		2	Tray 1	(You can specify one Tray (1 ~ 4) for each selection No. 1, No. 2 and/or No. 3)
		3	Tray 2	
		4	Tray 3	
		5	Tray 4	
099	MEMORY SIZE (Flash Memory)	-	-	Displays the amount of base and optional memory installed. (Base Memory + Optional Memory)


NOTE

1. The standard settings are printed on the Fax Parameter List. To print out Fax Parameter List, (See page 166).
2. This parameter is available only when the Parallel Port Interface Option is installed.
3. This parameter is available only when the G3 Communication Port Option is installed.
4. The contents of Fax Parameter may differ depending on the each country's regulation or specification.

Loading Originals


How To Load Originals

1. On the ADF / Inverting ADF

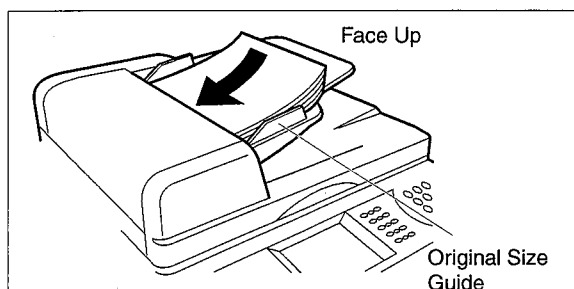

- Place the original(s) Face Up on the ADF until the leading edge placed into the machine stops.


2. On the Platen Glass

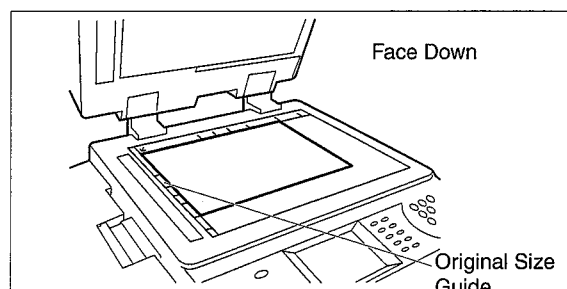

- Place a book or an original Face Down on the Platen Glass, aligning it with the arrow mark on the original size guides.

Sending Non-Standard Size Originals

When transmitting non-standard size document(s), the machine may perform Rotate Transmission automatically and not transmit the portion of the document that exceeds the standard size ("P" portion).

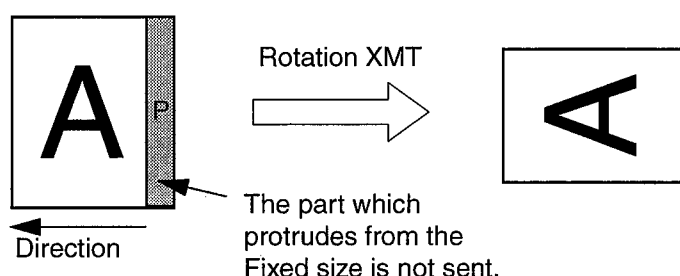

Flatbed Scanning


When a book or an original is placed on the Platen Glass, the message "ANOTHER ORIGINAL?" is shown on the LCD display when **START** is pressed and the scanning is completed.

- If you wish to store another page, press **YES** and place another original, then press **START**.
- If **NO** is pressed, the machine starts to dial the telephone number.

NOTE

1. When an oversized original is sent to another machine, sometimes, it is reduced in accordance with the other party's recording paper size.

EX:

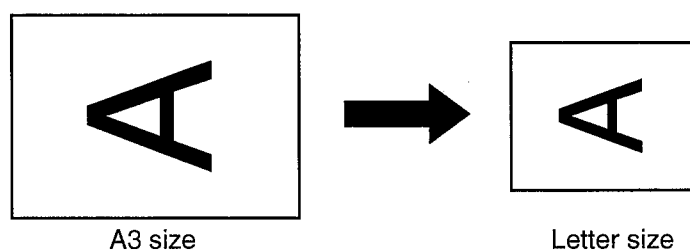

Basic Transmission Settings


You can temporarily change the transmission settings either before or after you place the original on the ADF. These settings are as follows:

- Contrast
- Resolution
- Original (Text/Photo)
- Stamp
- Communication Journal
- Duplex Scan
- Cover Sheet
- Password-XMT

After the document(s) have been sent, your machine will automatically return to the preset settings.


Contrast

Your machine is preset to **Normal** contrast. If you wish to send an original with lighter contrast, change the setting to **Lighter**. If you wish to send an original with darker contrast, change the setting to **Darker**.

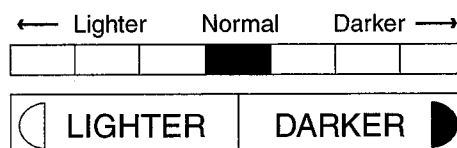

Resolution

Your machine is preset to Standard resolution, which is suitable for most originals. If you want to send it with more detail, change the setting to Fine or Super-Fine.

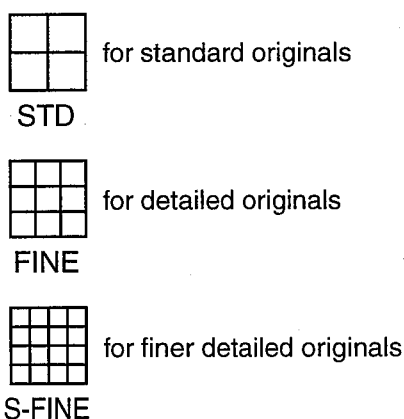

NOTE

1. To change the preset Contrast position, change the setting of Fax Parameter No. 001. (See page 33)
2. To change the preset Resolution position, change the setting of Fax Parameter No. 002. (See page 33)
3. If you send a photographic original with gray tones, set the Resolution to Fine or S-Fine (406 x 391 dpi) and the Original setting to Text/Photo or Photo. The reproduction of the received document will be determined by the capability of the remote station.

Basic Transmission Settings

Original (Text/Photo)

The Original setting is useful when sending photographs or illustrations with gray tones. Your machine is preset to "TEXT". You can select either "TEXT/PHOTO" or "PHOTO" mode.



for text only originals



for text and photo originals



for photo or illustration originals

Verification Stamp

The Verification Stamp helps you to confirm successful transmissions by stamping the bottom of each successfully transmitted page with a small ⊗ mark.

You can temporarily change the stamp setting to either "Off" or "On" by using the Select Mode (**FUNCTION**

SELECT MODE **01 STAMP**).

NOTE


1. When you store document(s) into memory, the Verification Stamp will stamp on the original if it is successfully stored into memory. In this case the Verification Stamp is not a confirmation that the document was successfully transmitted. If you wish to disable the use of the Verification Stamp when storing document(s) into memory, change the setting of Fax Parameter No. 028. (See page 34)
2. To change the preset Verification Stamp setting, change the Fax Parameter No. 004. (See page 33)

Basic Transmission Settings

Communication Journal (Comm. Journal)

A Communication Journal lets you verify if the transmission was successful. You can select the condition to print the Communication Journal as follows.

- When COMM. JOURNAL = **OFF** : a Communication Journal will not print.
- When COMM. JOURNAL = **ON** : a Communication Journal will print automatically after every communication.
- When COMM. JOURNAL = **INC.** : a Communication Journal will print only if the communication has failed.


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1





SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK


 
2




FAX PARAMETERS SELECT A FUNCTION	
001 CONTRAST (HOME)	<input type="text"/>
002 RESOLUTION (HOME)	<input type="text"/>
003 ORIGINAL (HOME)	<input type="text"/>
004 STAMP	<input type="text"/>
005 MEMORY	<input type="text"/>
01/20	CANCEL O K

Basic Transmission Settings

 - 3** Press  or  to scroll the display to the desired Fax Parameter.

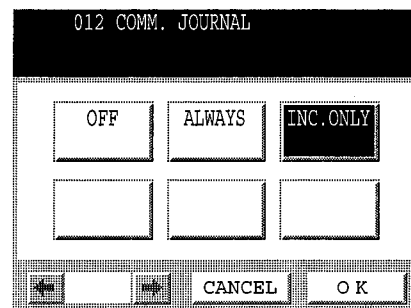

- 4** Select the desired setting.

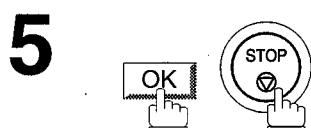

Sending Documents

You can choose either Memory or Direct Transmission.

Use Memory Transmission if:

- You want to send the document(s) to multiple stations.
- You have to retrieve the original immediately.
- You want to take advantage of Multi-Tasking function.
- You want to take advantage of Batch Transmission.

Use Direct Transmission if:

- The memory is full.
- You want to send the document(s) immediately.

Use Voice Mode Transmission if:


- You want to send the document(s) after talking with the other party first.
- You want to send the document(s) after listening to a voice prompting.

Memory Transmission

Your machine quickly stores the document(s) into the machine's memory.

Then, starts to dial the telephone number.

If the transmission fails, your machine will re-transmit the remaining unsuccessful page(s) automatically.

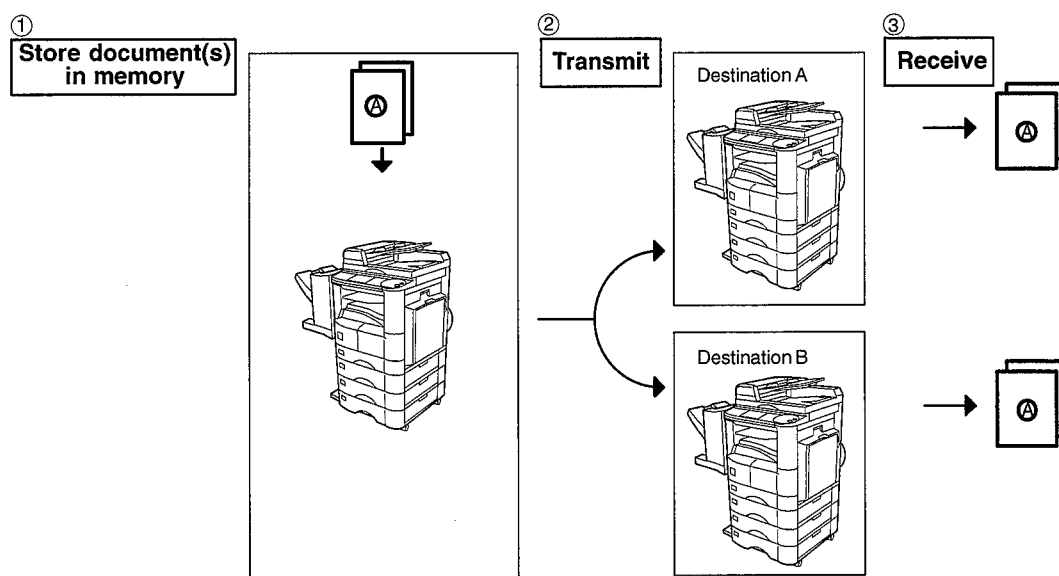

Sending Documents

NOTE

1. While storing the File Number of the document(s) being stored is shown at the upper right corner of the display. It is also printed on the Communication Journal (COMM. JOURNAL), Transaction Journal and File List. The percentage of memory used is shown on the lower right corner of the display after each page is stored.

```
MEMORY XMT      NO.026
PAGE    01      00%
5551234
```

2. If memory overflow occurs while storing the document(s), the page will be ejected. The machine will show "MEMORY FULL" on the display. You will need to reload the last page that was ejected back on the ADF and send the remaining document(s) again when the memory becomes available.

```
MEMORY XMT
* MEMORY FULL *
```

If Fax Parameter No. 082 (Quick Memory XMT) is set to "Invalid", the machine stores all the document(s) into memory first before transmitting.

After storing each document, the machine checks the available memory to prevent memory overflow and stops storing additional documents if the stored data approaches a certain percentage* (around 80%).

Then the machine dials and sends the memory stored document(s) first and continues the transmission of the remaining document(s) from the ADF during the same phone call.

If transmitting to multiple stations or if memory overflows while storing a document, the machine prompts you whether to transmit the successfully stored documents or to cancel the transmission. Press ① to cancel or press ② to transmit.

For image memory capacity, see the Specifications page. (See page 175)

If no action is taken within 10 seconds, the machine will start transmitting the stored documents.

* The percentage varies and is dependent on the type of documents you are storing, machine settings or whether an optional memory card is installed.

3. An Information Code will be displayed if the transmission has failed or no answer at the receiving side after the last automatic redial.

The document(s) stored for this transmission will be erased from the memory automatically and an information code is printed for the transmission on the Communication Journal (COMM. JOURNAL).

If you need to retain the incomplete document(s) even after the last redial, change Fax Parameter No. 031 (INC. FILE SAVE) to "Valid" in advance. (See page 34) To retry the incomplete document(s), refer to page 99.

4. To stop the transmission, press **STOP**.

The display shows:

```
MEMORY XMT      NO.020
COMMUNICATION STOP ?
1:YES 2:NO
```

Press ① to stop the transmission. The document(s) you stored will be erased automatically.

If you do not want to erase the document(s), change the setting of Fax Parameter No. 031 (INC. FILE SAVE) to "Valid" in advance. (See page 34)

Then the following display will appear and you can select whether to save the file as an incomplete file for editing and/or retry later, or delete the file manually.

```
MEMORY XMT      NO.020
SAVE AS INCOMP. FILE?
1:YES 2:NO
```


5. If you would like to print a Communication Journal (COMM. JOURNAL) after stopping a transmission, press ① when the display shows:

```
MEMORY XMT      NO.020
PRINT COMM. JOURNAL?
1:YES 2:NO
```

Sending Documents

Manual Number Dialling

To dial the telephone number manually, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.


2

Enter a telephone number from the keypad.
(up to 36 digits)
You can also designate more than one destination.


Ex: ⑤ ⑤ ⑤ ① ② ③ ④

- If your machine does have the 2nd G3 Fax Communication Port Kit installed, the machine will automatically select the available telephone line for transmission (indicated by "AUTO" on the LCD display). If you wish, you can change which telephone line the machine should use by selecting Line-1 or Line-2 with the **LINE SELECT** key on the Control Panel.



3

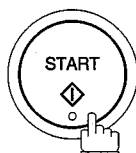

The document(s) begin to store into memory with a file number.
Then starts dialling the telephone number immediately after storing the first page. (See Note 3)
The remaining page(s) continue to store into memory.

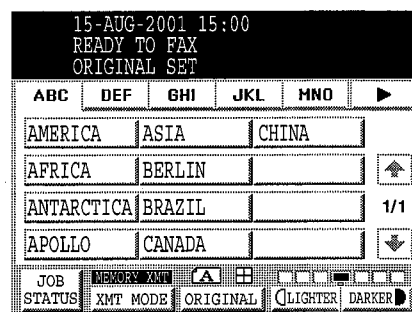

Note 5

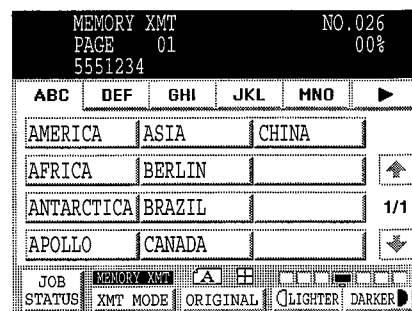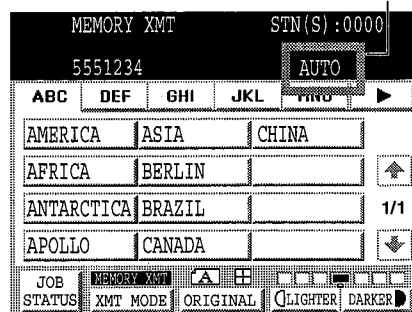


NOTE

1. If you want to specify two or more destinations, press **SET** after completing the full telephone number so you can select another destination.
2. If you need a special access number to get an outside line, dial it first then press **PAUSE** to enter a pause (represented by a "-") before dialling the full number.
Ex: 9 PAUSE 5551234
3. If you are using Pulse dialling and you wish to change to Tone dialling in the middle of dialling, press ***** (represented by a "/").
The dialling mode will be changed from Pulse to Tone after dialling the digit "/".
Ex: 9 PAUSE * 5551234
4. This feature is called "**Quick Memory Transmission**". If you wish to store All the original(s) into memory first before transmitting, change the Fax Parameter No. 082 (QUICK MEMORY XMT) to "Invalid". (See page 35)
5. This field (AUTO, Line-1 or Line-2) appears only when the 2nd G3 Fax Communication Port Kit is installed.

Sending Documents

Phone Book Dialling

Phone Book dialling allows you to dial a full telephone number by pressing a key name that was pre-programmed in the Phone Book. If you want to send the same document(s) to multiple stations, you can save time in feeding the document(s) by using memory transmission. That is, you can store the document(s) into memory and then send it to the desired station(s) automatically.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.

2



Make sure that "MEMORY XMT" is displayed, if "DIRECT XMT" appears, press **XMT MODE** to change to Memory Transmission.

3

Press the appropriate Index key.

Ex:  **PQRS**

4

Press the key name for the desired station.

Ex: **PANASONIC**



15-AUG-2001 15:00 READY TO FAX ORIGINAL SET				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			
JOB STATUS	MEMORY XMT	ORIGINAL	CLIGHTER	DARKER

15-AUG-2001 15:00 00%				
READY TO FAX ORIGINAL SET				
◀	PQRS	TUV	WXYZ	Others PROGRAM DIAL
PANASONIC				
SALES DEPT				
				1/1
JOB STATUS	MEMORY XMT	ORIGINAL	CLIGHTER	DARKER

MEMORY XMT PANASONIC 5551234				
◀	PQRS	TUV	WXYZ	Others PROGRAM DIAL
PANASONIC				
SALES DEPT				
				1/1
JOB STATUS	MEMORY XMT	ORIGINAL	CLIGHTER	DARKER

Sending Documents


5

If the key name for the station that you want to send to is not displayed on the LCD, press  or  to scroll to the desired display page.

You can select multiple destinations (up to 270).

(Manual Number Dialling: 70 stations, Phone Book Dialling: 200 stations)

6

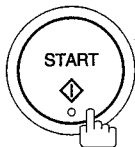

The original(s) begin to store into memory with a file number.

The machine starts dialling the telephone number immediately after storing the first page. (See Note 1)

The remaining page(s) continue to store into memory.

NOTE

1. This feature is called "**Quick Memory Transmission**". If you wish to store All the document(s) into memory first before transmitting, change the Fax Parameter No. 082 (QUICK MEMORY XMT) to "Invalid". (See page 35)


Sending Documents

Direct Transmission

If your machine's memory is full or you wish to send the document(s) immediately, use Direct Transmission.

Manual Number Dialling (Direct Transmission)

To dial the telephone number manually, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.

2



Make sure that "DIRECT XMT" is displayed, if "MEMORY XMT" appears, press **XMT MODE** to change to Direct Transmission.

3

Enter a telephone number from the keypad or select a station from the Phone Book.


Ex: ⑤ ⑤ ⑤ ① ② ③ ④

15-AUG-2001 15:00 READY TO FAX ORIGINAL SET					
ABC	DEF	GHI	JKL	MNO	▶
AMERICA	ASIA	CHINA			
AFRICA	BERLIN				⬆
ANTARCTICA	BRAZIL				1/1
APOLLO	CANADA				⬇
JOB STATUS	MEMORY XMT	▲	⊞	□	□
	XMT MODE	ORIGINAL	LIGHTER	DARKER	●

15-AUG-2001 15:00 00%					
READY TO FAX ORIGINAL SET					
ABC	DEF	GHI	JKL	MNO	▶
AMERICA	ASIA	CHINA			
AFRICA	BERLIN				⬆
ANTARCTICA	BRAZIL				1/1
APOLLO	CANADA				⬇
JOB STATUS	DIRECT XMT	▲	⊞	□	□
	XMT MODE	ORIGINAL	LIGHTER	DARKER	●

Sending Documents

4

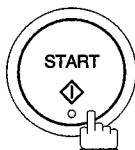

Your machine starts to dial the telephone number.

DIRECT COMM.					NO.027				
* DIALING *									
5551234									
ABC	DEF	GHI	JKL	MNO	▶				
AMERICA	ASIA	CHINA							
AFRICA	BERLIN	↑							
ANTARCTICA	BRAZIL	1/1							
APOLLO	CANADA	↓							
JOB	DIRECT XMT	A	H						
STATUS	XMT MODE	ORIGINAL	DLIGHTER	DARKER					

NOTE



1. If you need a special access number to get an outside line, dial it first then press **PAUSE** to enter a pause (represented by a "-") before dialling the full number.
Ex: 9 PAUSE 5551234
2. If you are using Pulse dialling and you wish to change to Tone dialling in the middle of dialling, press ***** (represented by a "/").
The dialling mode will be changed from Pulse to Tone after dialling the digit "/".
Ex: 9 PAUSE * 5551234
3. To stop the transmission, press **STOP**.
The display shows:

DIRECT COMM.	NO.027
COMMUNICATION STOP?	
1:YES	2:NO

Press **①** to stop the transmission. The Communication Journal will not print regardless of the printout mode setting of the Communication Journal.


Sending Documents

Rotated Transmission


Letter or A4 Original(s) are placed in a Portrait (←) direction, the document(s) will be rotated by 90° and then transmitted in a Landscape (←) direction. The document(s) will be printed the same size as the transmitted originals at the Receiving Station.

Rotation XMT Fax Parameter set to:

- Invalid

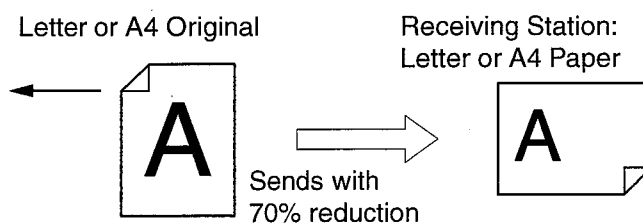

- Valid

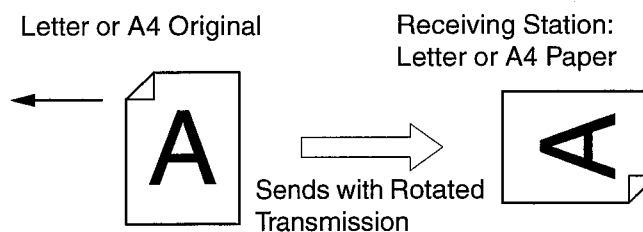


Double-Sided Transmission (Receiving)

This machine has duplex SCAN & PRINT capabilities.


Duplex Scan Select Mode set to:

- Duplex Scan = ON

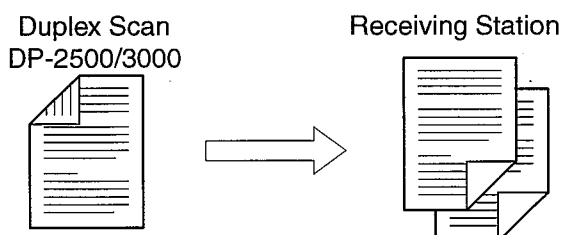

Duplex Print Fax Parameter set to:

- Duplex Print = Valid

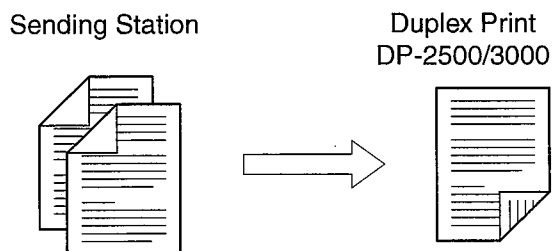


NOTE


1. Rotation XMT requires the use of Memory Transmission.
2. Verification Stamp is disabled during Duplex Scan.

Sending Documents



Setting the Rotation XMT

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

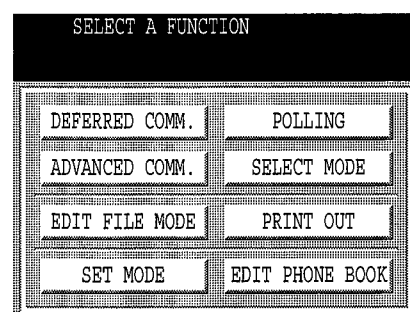

1

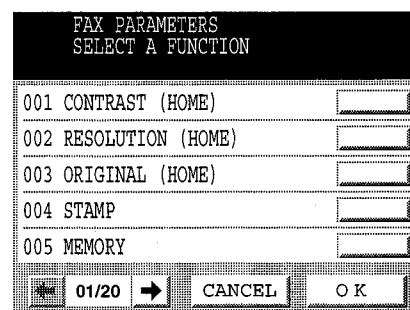 


2




3

Press  or  to scroll the display to the desired Fax Parameter.

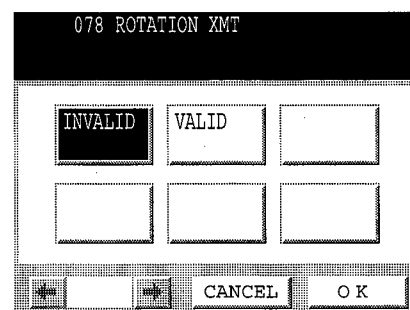


Sending Documents

4

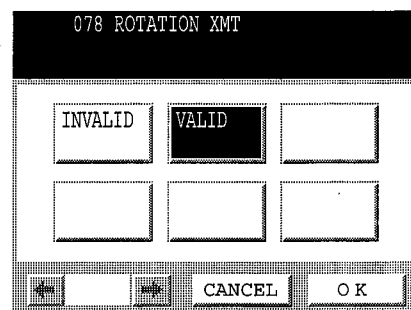


5

 

Sending Documents

Duplex Scan

 Sending Document(s) Using Duplex Scan


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1





Place original(s) on the ADF.

2

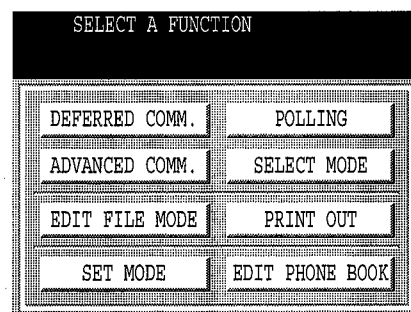

3

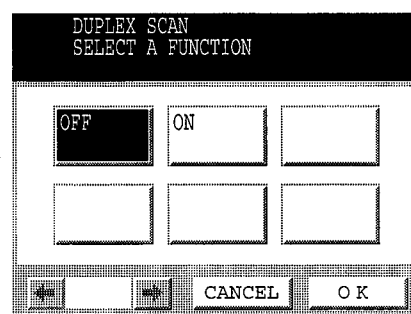 

Sending Documents

4




15-AUG-2001 15:00 00%				
READY TO FAX				
ORIGINAL SET				
ABC	DEF	GHI	JKL	MNO ▶
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			⬆
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			⬇
JOB	DIRECT XMT	⬆	⬆	⬆
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER ▶

5

Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered.
(Up to 70 stations)
- Phone Book Dialling. (Up to 200 stations)

6

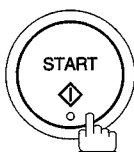


NOTE


1. The Duplex Scan function will reset back to OFF after the communication is completed.
2. Duplex Scan is only available with the inverting ADF option.

Sending Documents



Setting Duplex Print

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

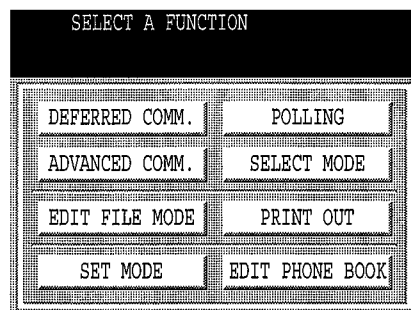

1

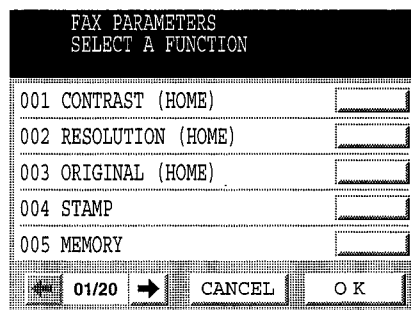
 


2




3

 Press  or  to scroll the display to the desired Fax Parameter.

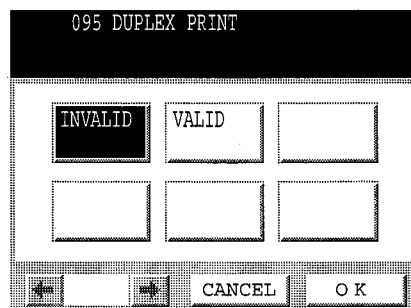

Sending Documents

4

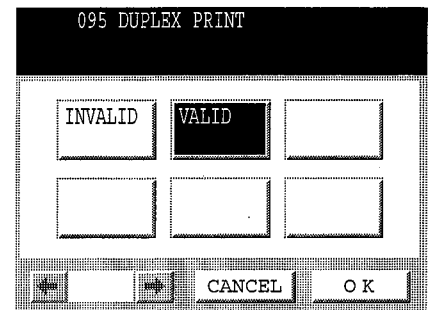

5



 
Sending Documents

Voice Mode Transmission

If you wish to send the document(s) after talking with other party first, use Voice Mode Transmission. Your machine requires an optional fax handset or an external telephone.

Off-Hook Dialling

For Off-Hook Dialling, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.

2

Lift the fax handset or the external telephone and dial the telephone number from the keypad or use Phone Book Dialling.


Ex: ⑤ ⑤ ⑤ ① ② ③ ④

Sending Documents

3

When you hear the voice of the other party, tell the other party to prepare to receive a document(s).

Then, when you hear a beep,

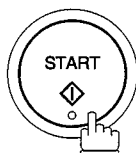

and hang up the handset.

XMT ON LINE				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			↑
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			↓
JOB STATUS	MEMORY XMT	ORIGINAL	FLIGHTER	DARKER

NOTE

1. To stop the transmission, press **STOP**.
The display shows:

MEMORY XMT NO.020
COMMUNICATION STOP ?
1:YES 2:NO

Press **1** to stop the transmission. The Communication Journal will not print regardless of the printout mode setting of the Communication Journal.

2. The Second Telephone Line (Line-2) is not available for Off-Hook Dialling.

Sending Documents

On-Hook Dialling

For On-Hook Dialling, follow the steps below.

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.

2



You will hear dial tone through the monitor speaker.

15-AUG-2001 15:00 00%				
* MONITOR *				
ABC	DEF	GHI	JKL	MNO ▶
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			⬆
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			⬇
JOB	MEMORY MPT	⏏	⏏	⏏
STATUS	XMT MODE	ORIGINAL	CLIGHTER	DARKER

3


Dial the telephone number from the keypad.

Ex: ⑤ ⑤ ⑤ ① ② ③ ④

Sending Documents

4


When you hear a beep,

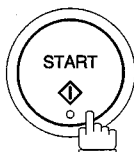

NOTE

1. If you need a special access number to get an outside line, dial it first then press **PAUSE** to enter a pause (represented by a "-") before dialling the full number.

Ex: 9 PAUSE 5551234

2. If you are using Pulse dialling and you wish to change to Tone dialling in the middle of dialling, press  (represented by a "/").

The dialling mode will be changed from Pulse to Tone after dialling the digit "/".

Ex: 9 PAUSE * 5551234

3. The Second Telephone Line (Line-2) is not available for On-Hook Dialling.

Sending Documents

Transmission Reservation

You can do the following while sending document(s) from memory or receiving document(s).

- Reserve the next transmission into memory. (Up to 50 different files)
- Reserve a priority transmission.

Memory Transmission Reservation (Multi-Tasking)

If your machine is on-line busy transmitting from memory, receiving or printing received documents, you can reserve a transmission by the following procedure.

1 Your machine is on-line, the ON LINE lamp is blinking or printing received documents.

 


Place original(s) face up on the ADF.

or





Place a book or an original face down on the Platen Glass.



Make sure that "MEMORY XMT" is displayed, if "DIRECT XMT" appears, press **XMT MODE** to change to Memory Transmission.

4 Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered. (Up to 70 stations)
- Phone Book Dialling. (Up to 200 stations)

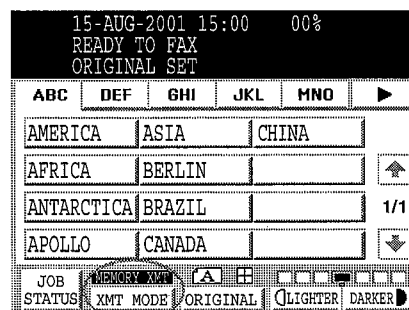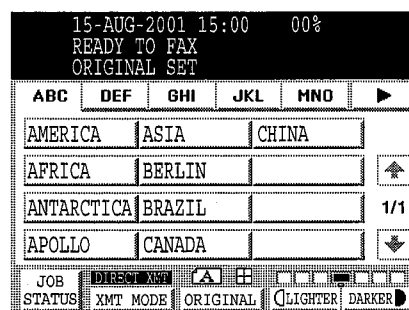

Sending Documents

5



Your machine will store the document(s) into memory.

NOTE

1. To cancel the memory transmission reservation, see page 93.
2. If the same station has been reserved with different files, the files will be combined and executed in a single transmission (Batch Transmission). (See page 71)

Sending Documents

Direct Transmission Reservation (Priority Transmission Reservation)

If you are in a rush to send an urgent document, however there are many files in the memory, use Direct Transmission Reservation to send the urgent document. The urgent document will be sent immediately after the current communication is finished.

Note that you cannot send document(s) to multiple stations.

To reserve your machine for sending the urgent documents

- 1 Your machine is on-line, the ON LINE lamp is blinking or printing received documents.

 
- 2a



Place original(s) face up on the ADF.

or

- 2b



Place a book or an original face down on the Platen Glass.

- 3



Make sure that "DIRECT XMT" is displayed, if "MEMORY XMT" appears, press **XMT MODE** to change to Direct Transmission.

15-AUG-2001 15:00 00%				
READY TO FAX				
ORIGINAL SET				
ABC	DEF	GHI	JKL	MNO ▶
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			⬆
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			⬇
JOB	MEMORY XMT	⬆	⬇	
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER ▶

15-AUG-2001 15:00 00%				
READY TO FAX				
ORIGINAL SET				
ABC	DEF	GHI	JKL	MNO ▶
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			⬆
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			⬇
JOB	DIRECT XMT	⬆	⬇	
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER ▶

Sending Documents

4

Dial by using any one of the following methods:

- Manual Number Dialling and press **START**
- Phone Book Dialling

(For details, see pages 44 to 47.)

Ex: 555 1234

You can make reservation to send an urgent document to a single station only.

A message "DIRECT XMT RESERVED" will be shown on the display.

To cancel the direct transmission reservation

1

Make sure that the document is on the ADF.

DIRECT COMM.		NO.013	
WAIT TO DIAL			
SALES DEPT			
◀	PQRS	TUV	WXYZ Others PROGRAM DIAL
SALES DEPT			
			1/1
JOB STATUS	MEMORY XMT	ORIGINAL	CLIGHTER DARKER

2



DIRECT COMM.		NO.013	
COMMUNICATION STOP ?			
1: YES 2: NO			
◀	PQRS	TUV	WXYZ Others PROGRAM DIAL
SALES DEPT			
			1/1
JOB STATUS	MEMORY XMT	ORIGINAL	CLIGHTER DARKER

3



and then remove the original from ADF.

Sending Documents

Redialling

Automatic Redialling

If a busy line is detected, the machine will redial the number up to 3 times at 3 minute interval. However, if a busy line is not detected, the machine will redial only one time. During that time, a message will appear as shown to the right.

A file number is shown in the upper right hand corner of the display if it is a memory transmission file.

MEMORY XMT					NO.014
WAIT TO DIAL					
SALES DEPT					
ABC	DEF	GHI	JKL	MNO	▶
AMERICA	ASIA	CHINA			
AFRICA	BERLIN				↑
ANTARCTICA	BRAZIL				1/1
APOLLO	CANADA				↓
JOB	MEMORY XMT	▲	□	□	□
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER	▶

Manual Redialling

You can also redial the last dialled number manually by pressing **REDIAL** key.

1



Set original(s) face down.

2




Make sure that "MEMORY XMT" is displayed, if "DIRECT XMT" appears, press **XMT MODE** to change to Memory Transmission.

3



MEMORY XMT					STN(S) : 0000
9 555 1234					
ABC	DEF	GHI	JKL	MNO	▶
AMERICA	ASIA	CHINA			
AFRICA	BERLIN				↑
ANTARCTICA	BRAZIL				1/1
APOLLO	CANADA				↓
JOB	MEMORY XMT	▲	□	□	□
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER	▶

4

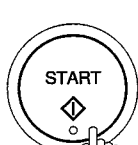

The document(s) are stored into memory with a file number. Then the machine dials the last dialled number.

NOTE

1. While the unit is displaying "WAIT TO DIAL", you can press **REDIAL** to start redialling immediately.

Receiving Documents

Your machine is provided with both automatic and manual reception modes. The selection of either reception mode is made with Fax Parameter No. 017 (RECEIVE MODE).

Automatic Reception

Your machine will receive documents automatically if the Fax Parameter No. 017 (RECEIVE MODE) is set to "Auto". (See page 34)

Manual Reception

You may wish to receive documents manually if you use the telephone line in your office primarily as a personal telephone and occasionally for your facsimile machine.


To receive documents manually, change the Fax Parameter No. 017 (RECEIVE MODE) to "Manual" (See page 34) and the following message will be shown on the display.

15-AUG-2001 15:00 00%				
READY TO FAX				
MANUAL RCV				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			1/1
ANTARCTICA	BRAZIL			
APOLLO	CANADA			
JOB STATUS	MEMORY	ORIGINAL	LIGHTER	DARKER


Receiving Documents

To receive documents manually


- 1 When the telephone rings, lift the handset.
(See Note 1)
If you hear a beep, the sound tells you that someone wants to send a document(s).

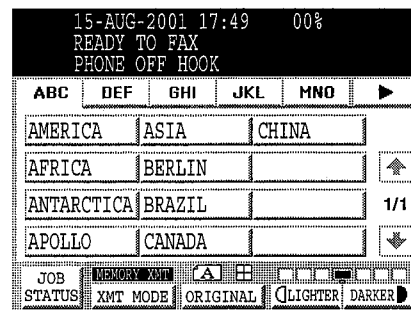

- 2 Remove any documents from the ADF.

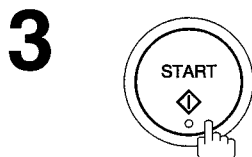

Your machine starts receiving the document(s).

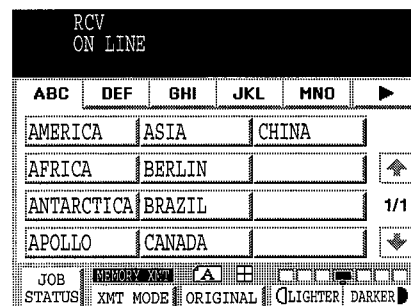

- 4 Hang up the telephone.

NOTE

1. Your machine requires an optional fax handset or an external telephone connected to the TEL jack on the rear of the machine.
2. If you receive a document in Super Fine resolution (406 x 391 dpi), it might be divided into multiple pages with no reduction.

Receiving Documents

Print Reduction

This machine can use each Fixed size plain paper for recording. Sometimes, oversized documents sent to you by the other parties cannot be printed within a single page. When this occurs, the document will be divided into separate pages.

This machine is equipped with a Print Reduction function to solve this problem. You may select the most appropriate setting from the selections described below.

1. Automatic Reduction

Each received document is first stored in memory. Based on the document length, your machine will automatically calculate a suitable reduction ratio (Letter & A4: 70% to 100%, Ledger & A3: 80% to 100%) to print the entire document on a single page. If the received document is extremely long (over 39% longer than the recording paper), the original will be divided into separate pages and will print without reduction.

2. Fixed Reduction

You can pre-determine the reduction ratio from 70% to 100% in 1% steps. The received document(s) will be reduced to the fixed ratio regardless of size.

Selecting the Print Reduction Mode

Set the Fax Parameters as shown below. (See page 34)

1. To set the Automatic Reduction mode.

- (1) No. 024 Print Reduction set to "Auto".

2. To set the Fixed Reduction mode.

- (1) No. 024 Print Reduction set to "Fixed".

- (2) No. 025 Reduction Ratio set to any number between 70% through 100%. (See Note 1)

EX: A4 to A4 - 96%

A4 to Letter - 90%

Letter to Letter - 96%

Legal to Letter - 75%

NOTE


1. If the sending side is set to print the header on the outside of the copy area, more reduction ratio will be required.

Receiving Documents


Receiving Oversize Documents

If the received document is extremely long (over 39% longer than the recording paper), the document will be divided into separate pages. When printing on separate pages, the bottom 13 mm of first page will be overlapped on top of the next page.

Transmitted Document

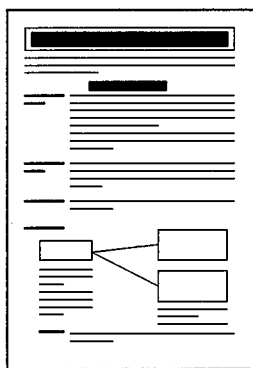

Received Document

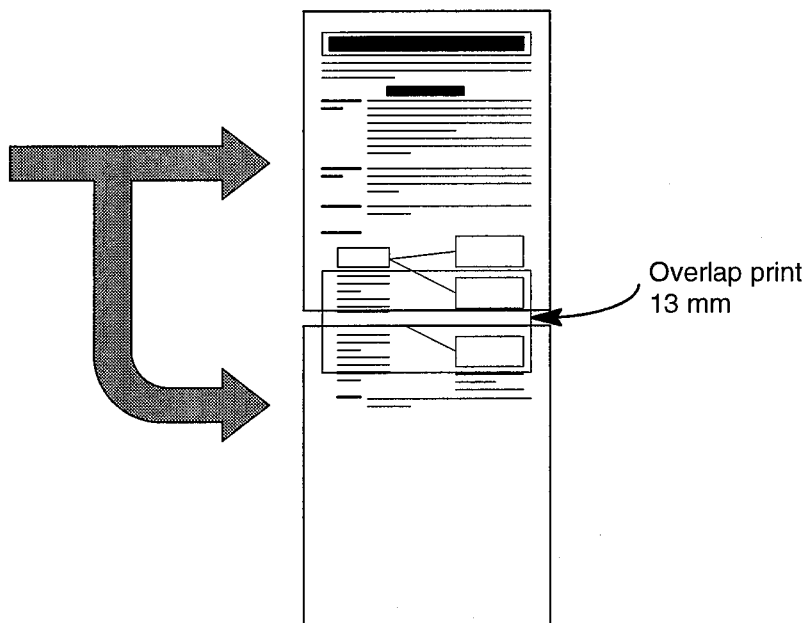

The received document is divided into two sheets with overlap printing.

NOTE


1. If the reduction method is set to Automatic Reduction mode, the document prints with no reduction when printing separate pages. If the reduction method is set to Fixed Reduction mode, the printed document is reduced by the ratio set in Fax Parameter No. 025.

Receiving Documents

Substitute Memory Reception


If the recording paper runs out or jams or if the toner runs out during reception, the machine automatically starts receiving documents into its image data memory. Stored documents are printed automatically after replacing the recording paper or the toner cartridge. (See Note 1 and 2)

- 1 When the machine finishes the memory reception and there is no recording paper or toner, add Paper or Out of Toner Indicator appears on the display.

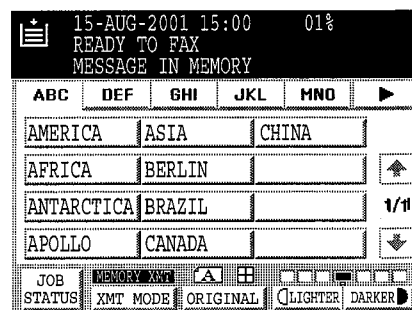

- 2 Install the recording paper or replace the toner cartridge.

The machine will automatically start printing the document(s) stored in the memory.

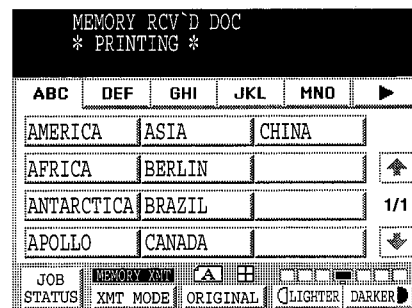

NOTE

1. If the memory overflows, the machine will stop receiving and release the communication line. The document(s) stored in the memory up to that moment will be printed.
2. If you wish to turn off the substitute reception function, change the setting of Fax Parameter No. 022 to "Invalid". (See page 34)


Batch Transmission

To reduce transmission time and cost, this feature allows your machine to accumulate different documents for the same destination(s) to be transmitted in a single phone call.

Real-Time Batch Transmission

During memory transmission, your machine searches its memory for reserved files (up to 5 files) to transmit to the same destination, automatically batching and transmitting them in a single phone call.


The following is an example of Real-time Batch Transmission. (See Note 1)

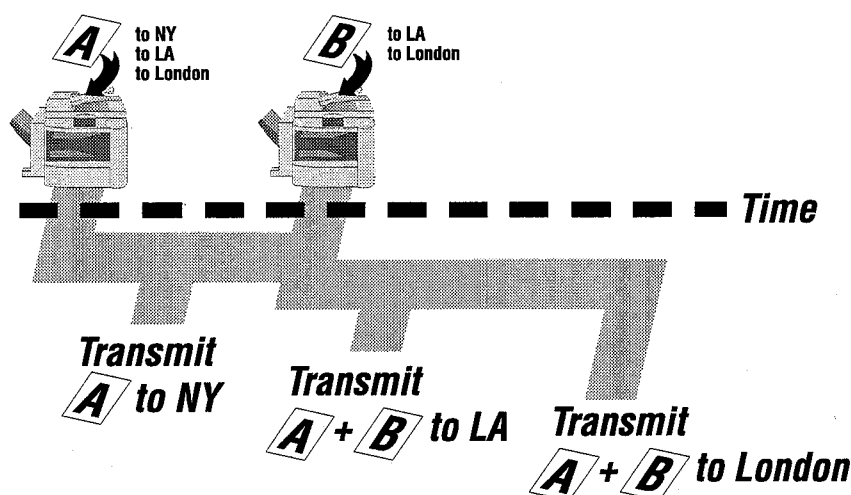

Delayed Batch Transmission

Assign a time for batch transmission to a Program Key in advance. All transmission(s) using the Program Key are batched and transmitted at the reserved time.

The following is an example of Delayed Batch Transmission.

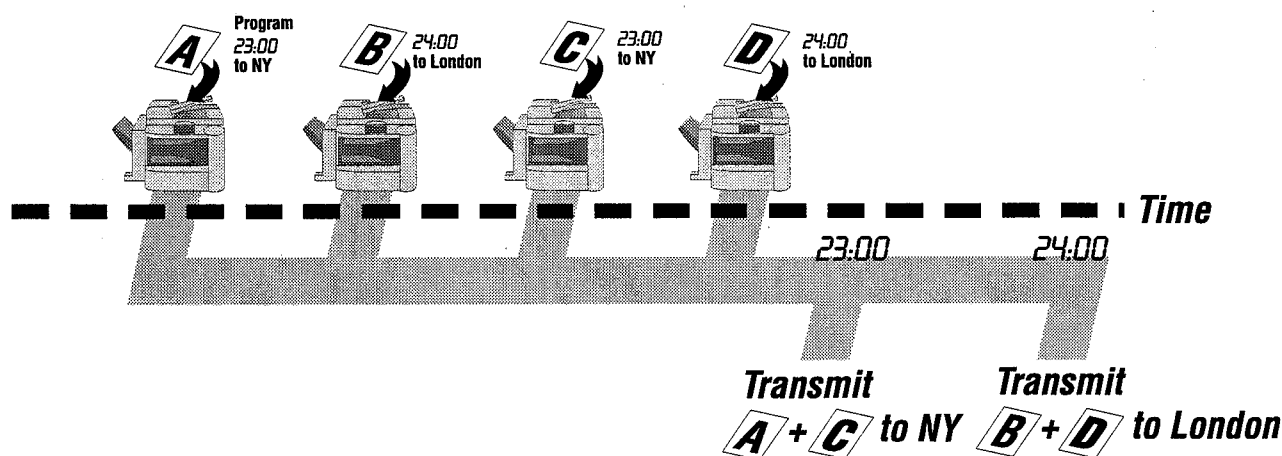


NOTE

1. The machine can not Batch to a file(s) that is/are Waiting to Redial or is currently being sent, but it will Batch to files that are pending to dial.

Timer Controlled Communications

You can send document(s) to one or multiple stations at any preset time within the next 24 hours. Up to 50* built-in timers can be set for deferred transmission, deferred polling and deferred Advanced Communications.

Deferred Transmission

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b




Place a book or an original face down on the Platen Glass.

2

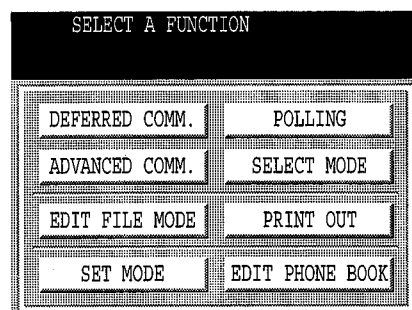

3

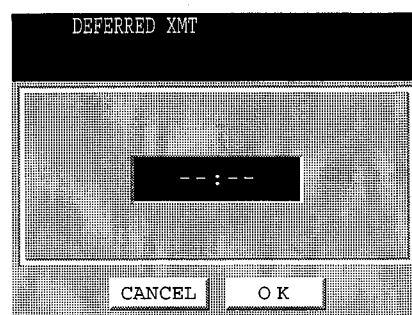

Timer Controlled Communications

4

Enter the start time from the keypad and press **OK**.
(Use a 4-digit, 24-hour clock)

Ex: **2 3 3 0** (11:30 p.m.) and press **OK**.

MEMORY XMT				STN(S) : 0000	
ENTER STATION(S)					
ABC	DEF	GHI	JKL	MNO	▶
AMERICA	ASIA	CHINA			
AFRICA	BERLIN				↑
ANTARCTICA	BRAZIL				1/1
APOLLO	CANADA				↓
JOB	MEMORY XMT	A H			
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER	

5


Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered (up to 70 stations)
- Phone Book Dialling (up to 200 stations)

Ex: **PANASONIC**

MEMORY XMT				STN(S) : 0000	
PANASONIC					
5551234					
◀	PQRS	TUV	WXYZ	Others	PROGRAM DIAL
PANASONIC					
SALES DEPT					↑
					1/1
					↓
JOB	MEMORY XMT	A H			
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER	

6

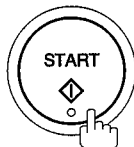


to store document(s) into memory.

NOTE


1. If you enter a wrong time in Step 4, press **CLEAR** then re-enter the correct time.
2. To change or cancell the Deferred Communication settings, see page 91 and 93.

Timer Controlled Communications


Deferred Polling

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

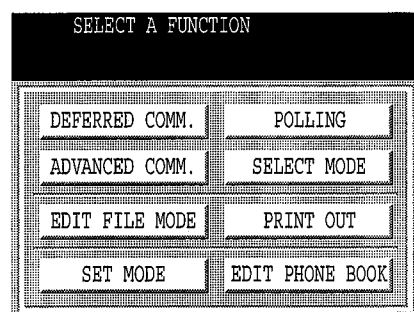


2

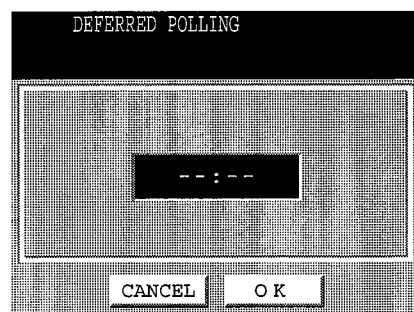

3

Enter the start time from the keypad and press **OK**.
(Use a 4-digit, 24-hour clock)

Ex: 0 3 3 0 (3:30 a.m.) and press **OK**.

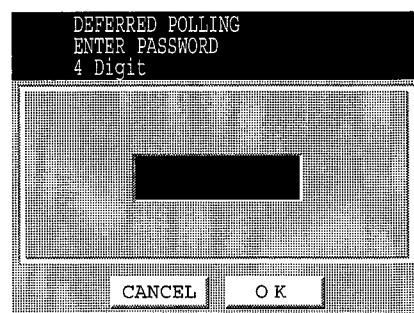

Timer Controlled Communications

4

Enter a 4-digit polling password and press **OK**.

Ex: **9 8 7 6** and press **OK**

POLLING		STN(S) : 0000	
ENTER STATION(S)			
ABC	DEF	GHI	JKL MNO ▶
AMERICA	ASIA	CHINA	
AFRICA	BERLIN		↑
ANTARCTICA	BRAZIL		1/1
APOLLO	CANADA		↓
JOB	MEMORY XMT	▲	■
STATUS	XMT MODE	ORIGINAL	LIGHTER DARKER

5


Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered (up to 70 stations)
- Phone Book Dialling (up to 200 stations)

Ex: **PANASONIC**

POLLING		STN(S) : 0000	
PANASONIC			
0003			
◀	PQRS	TUV	WXYZ Others PROGRAM DIAL
PANASONIC			
SALES DEPT			↑
			1/1
			↓
JOB	MEMORY XMT	▲	■
STATUS	XMT MODE	ORIGINAL	LIGHTER DARKER

6

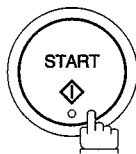


NOTE


1. If you enter a wrong time in Step 3, press **CLEAR**, then re-enter the correct time.
2. To change or cancell the Deferred Communication settings, see page 91 and 93.

Timer Controlled Communications



Deferred Advanced Communication

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

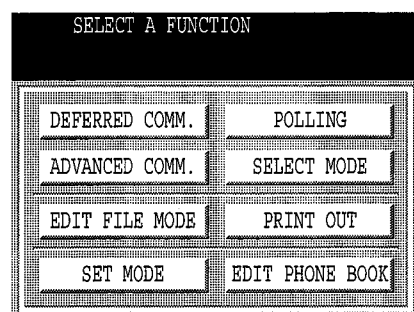


2

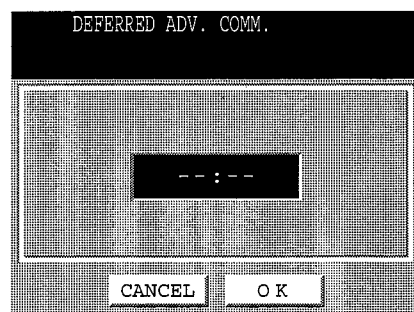 

3

Enter the start time from the keypad and press **OK**.
(Use a 4-digit, 24-hour clock)

Ex: ② ③ ③ ① (11:30 p.m.) and press **OK**

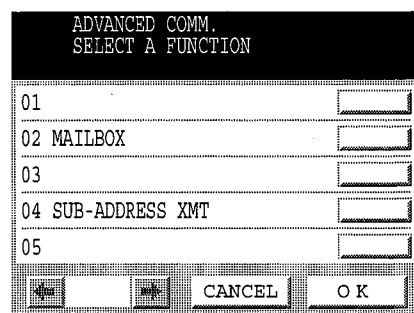

4

Setting each Function:


- Mailbox (see page 136 to 146)
- Sub-Address XMT (see page 147 to 153)

Polling

Polling means calling other station(s) to retrieve document(s). The other station must know in advance that you will call and must have the document(s) set on the ADF or stored in the memory. You may need to set a polling password, shared by the other station, to ensure security.

Preparing to be Polled

In order to let other stations poll your machine, you must prepare your machine with a document(s) stored in memory. Be sure to set the polling password before storing the document(s) into memory. After being polled, the document(s) stored in memory will be erased automatically. To retain the document(s) in memory so that they can be polled repeatedly change Fax Parameter No. 027 (POLLED FILE SAVE) to "Valid".

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.



2



SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

Polling

 
3

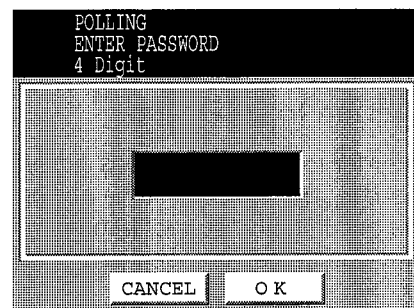

4

Enter a 4-digit polling password and then press **OK**.
(See Note 3)

Ex: ④ ③ ② ① and press **OK**
The document(s) are stored into memory.

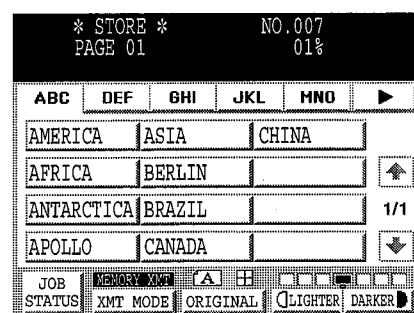

NOTE


1. You can still send or receive documents even when the machine is set to be polled.
2. Only 1 polled file can be stored in memory. If you need to add document(s) into the same polled file, see page97.
3. If you have set the polling password in Fax Parameter No. 026, the password will appear on the display.
You can still change the password temporarily by overwriting it with a new one.

Polling



Polling Documents from Another Station

The following procedure lets you poll documents from one or multiple stations. Be sure to set the polling password before polling. (See page 34)

1

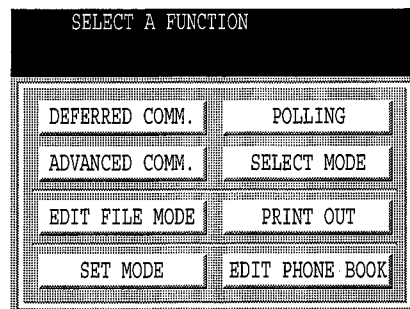

2

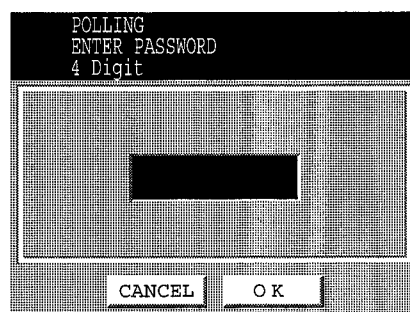 


3

Enter a 4-digit polling password and then press

OK. (See Note 1)

Ex: ① ① ① ① and press **OK**

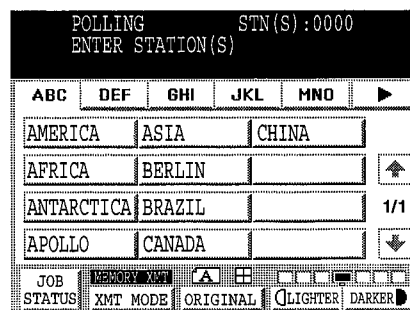

Polling

4


Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered (up to 70 stations)
- Phone Book Dialling (up to 200 stations)

Ex: **PANASONIC**

POLLING		STN(S) : 0001	
PANASONIC			
201 555 1234			
◀	PQRS	TUV	WXYZ Others PROGRAM DIAL
PANASONIC			
SALES DEPT			
		1/1	
JOB STATUS	MEMORY XMT	▲	■
	XMT MODE	ORIGINAL	LIGHTER DARKER

5

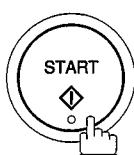

NOTE


1. If a password is not set in the polled station, you may poll the other station even though your machine has a password.

Program Keys


Your fax machine has special Program Keys. These keys are useful if you frequently need to send or poll the same group of stations. You can use these keys to store a One group key, a sequence of stations to be polled, a deferred transmission or polling sequence or an additional Phone Book Dialling station.

Setting for Group Dialling



To set a Program Key for Group Dialling

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

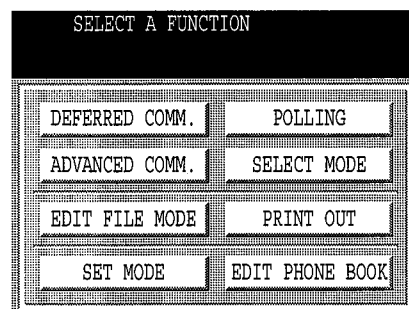

2

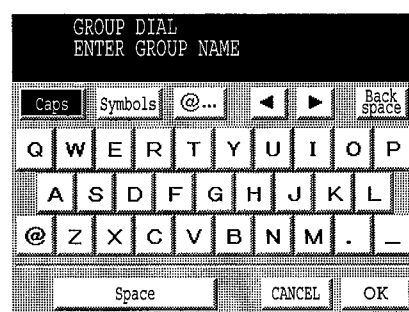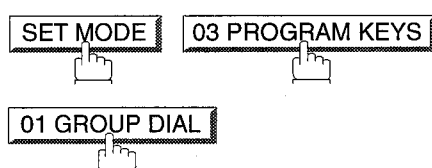

3

Enter the Group Name (up to 15 characters) and press **OK**.

Ex: GROUP.A and press **OK**



Program Keys


- 4 Enter a Key Name (up to 10 characters) and press **OK**.

GROUP DIAL ENTER STATION(S)				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			
JOB STATUS	MEMORY XMT XMT MODE	A		
	ORIGINAL	CLIGHTER	DARKER	

- 5 Enter the Phone Book Dialling.
If you find an error, press **CLEAR** to erase the displayed station.

GROUP DIAL STN(S) : 0000				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			
JOB STATUS	MEMORY XMT XMT MODE	A		
	ORIGINAL	CLIGHTER	DARKER	

6

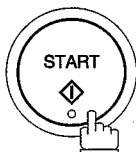


You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing **STOP**.


PROGRAM KEYS SELECT A FUNCTION	
01 GROUP DIAL	
02 PROGRAM DIAL	
03 MODIFY GROUP DIAL	
04 DELETE PROGRAM/GRP	
05	
	CANCEL O K

Program Keys



Setting for Program Dial

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

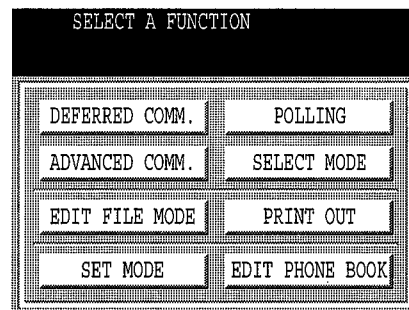


2

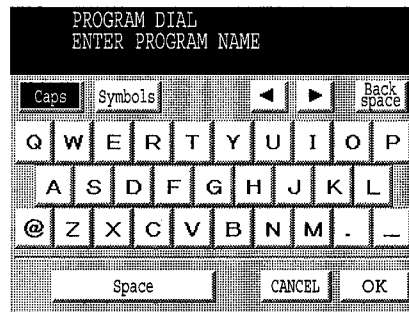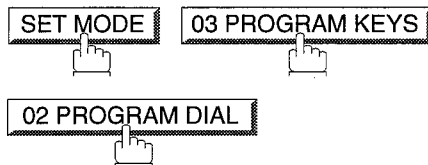

3

Enter the Program Name (up to 15 characters) and press **OK**.

Ex: PRO.POLL and press **OK**

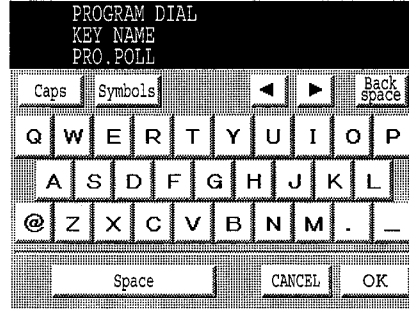

Program Keys

- 4** Enter the Program Key Name (up to 10 characters) and press .

SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

- 5** Program each Function.

- Deferred Communication (See page 72)
- Advanced Communication (See page 76)
- Polling Communication (See page 77)

- 6** You can now set other Program Keys by repeating the procedures from step 3, or return to standby by pressing .


PROGRAM KEYS SELECT A FUNCTION	
01 GROUP DIAL	<input type="text"/>
02 PROGRAM DIAL	<input type="text"/>
03 MODIFY GROUP DIAL	<input type="text"/>
04 DELETE PROGRAM/GRP	<input type="text"/>
05	<input type="text"/>
<input type="button" value="←"/> <input type="button" value="→"/> <input type="button" value="CANCEL"/> <input type="button" value="O K"/>	

Program Keys


Editing for Group Dialling

If you have to change or erase any of the Group Dialling, follow the steps below.



To change the setting of Group Dialling

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

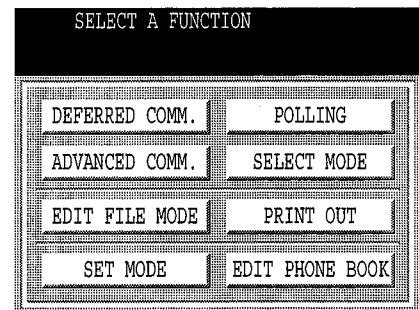

2

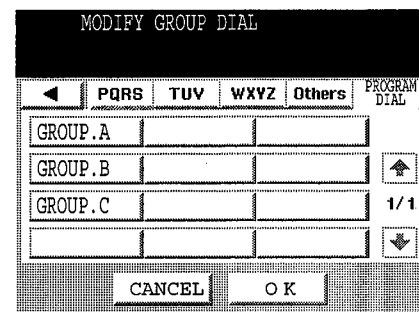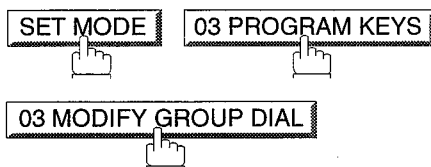


3

Enter the Group Dial you wish to change and press

OK.

Ex: **GROUP.A** and press **OK**

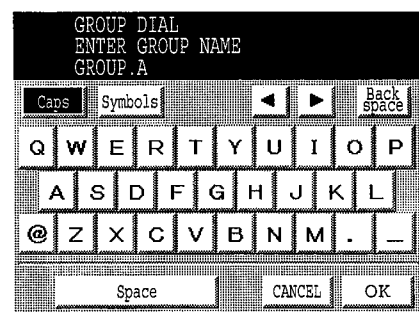

Program Keys

- 4** Enter the new Group Name (up to 15 characters) and press **OK**. (See Note 1)


Ex: NEW GROUP and press **OK**

- 5** Enter the new Key Name (up to 10 characters) and press **OK**. (See Note 1)

Ex: NEW GROUP and press **OK**

- 6** Edit the Phone Book Dialling. Press the Phone Book Dialling you wish to enter or erase the displayed station.

7

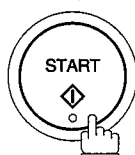

You can now set other Program Keys by repeating the procedures from Step 3, or return to standby by pressing **STOP**.

NOTE


1. If you make a mistake, use **◀** or **▶** to move the cursor one space beyond the incorrect character, press **CLEAR** then re-enter a new character.
2. The Group Dialling cannot be changed or erased until the communication has finished. To change or erase the settings, cancel the communication first by Edit File Mode. (See page 91)

Program Keys



Erasing the Program Key Settings

To erase the settings in a Program Key

1

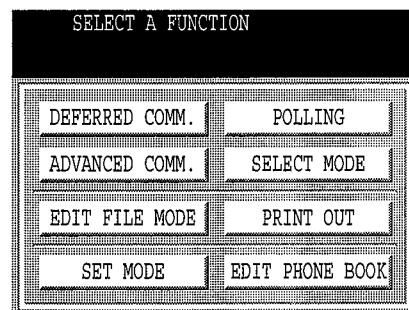

2

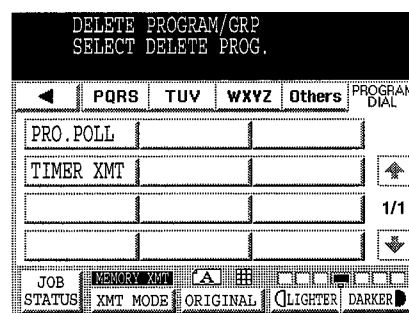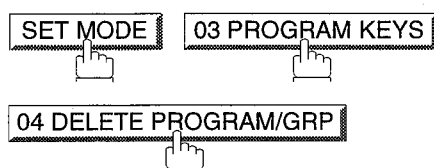

3

Press the Program key you want to erase.

Ex: PRO.POLL



Program Keys

4



5

You can now erase other Program Keys by repeating the procedures from Step 3, or return to standby by pressing .

PROGRAM KEYS SELECT A FUNCTION	
01 GROUP DIAL	<input type="text"/>
02 PROGRAM DIAL	<input type="text"/>
03 MODIFY GROUP DIAL	<input type="text"/>
04 DELETE PROGRAM/GRP	<input type="text"/>
05	<input type="text"/>
<input type="button" value="←"/>	<input type="button" value="→"/>
<input type="button" value="CANCEL"/>	<input type="button" value="OK"/>

NOTE

1. The Program Key cannot be changed or erased until the communication has finished. To change or erase the settings, cancel the communication first by Edit File Mode. (See page 91)


Edit File Mode

Your machine has a document image memory which enables you to reserve memory transmission, memory deferred transmission, memory polling and so on.


After reserving the communications in memory, you may need to change the settings of the communication(s) while it is still in memory. This section describes how to use the file editing features.

Printing or Viewing a File List


The contents of the communication settings may have to be modified or deleted. To verify the contents, follow the steps below to print or view a file list.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".


1

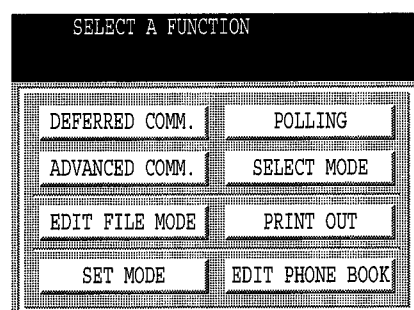

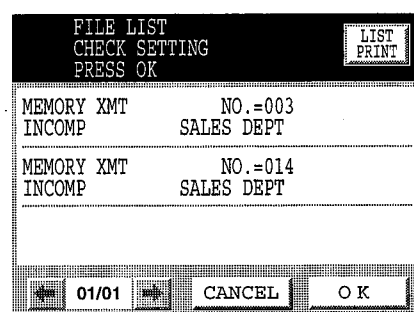

2

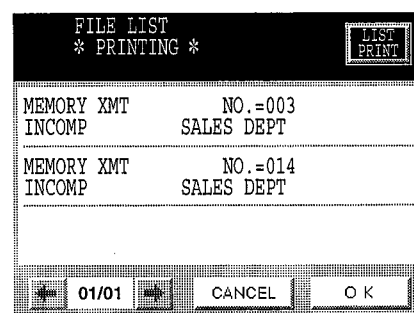

3a



3b

 or  repeatedly until the display shows a file you want to view.

Edit File Mode

4b



Sample File List

```
***** -FILE LIST- ***** DATE 15-AUG-2001 ***** TIME 15:00 *****

(1)   (2)           (3)       (4)       (5)   (6)
FILE  COMM. TYPE    CREATED TIME START TIME  PAGES DESTINATION(S)
No.

001   DEFERRED XMT   15-AUG 13:20   20:30           [PANAFAX]

002   MEM. DEF. XMT  15-AUG 13:20   22:30          003  [SALES DEPT] [TOKYO]

                                - PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212- *****
```


Explanation of Contents

- | | |
|------------------------------|--|
| (1) File number | : If the file is now being executed, an "*" is indicated on the left of the file number. |
| (2) Communication type | |
| (3) Stored date/time | : Date/time that these files were stored. |
| (4) Executing time | : If the file is a Timer Controlled Communication, the start time is printed in this column.
If the file is an incomplete file, "INCOMP" is printed in this column. |
| (5) Number of stored page(s) | |
| (6) Destination | : Phone Book Dialling No./Manual Dialling No. |


Edit File Mode

Changing the Start Time or the Station of a File



To change the start time and/or stations in a communication file, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

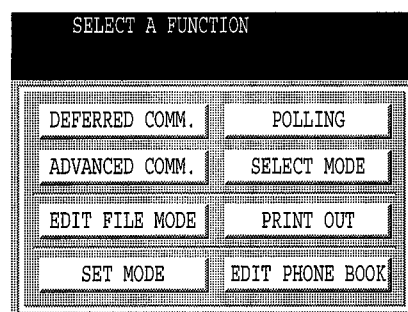


2

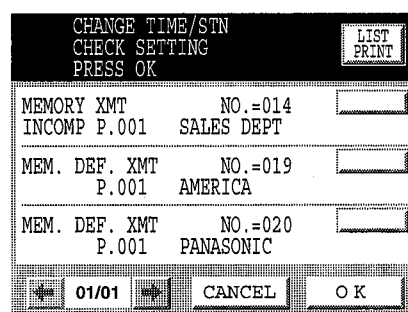 

3


Select the file that you want to change and press

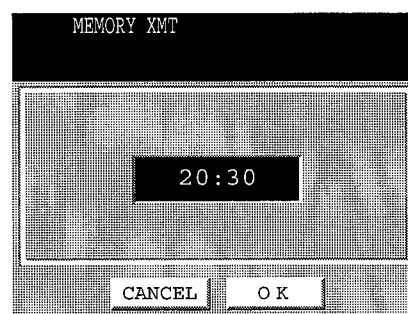

Edit File Mode

4

Enter a new start time and press **OK**.

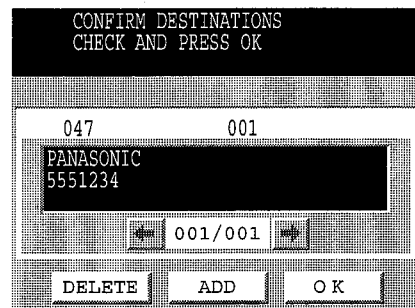

5

 
To delete the station(s), press **◀** or **▶** key until the station you want to delete appears. Then press **DELETE**.

or

To add additional station(s), press **ADD** and select the station(s) that you want to add from the Phone Book.

When finished, press


6




Edit File Mode

Deleting a File



To delete the file in memory, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

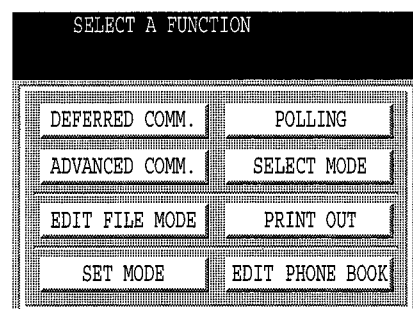


2

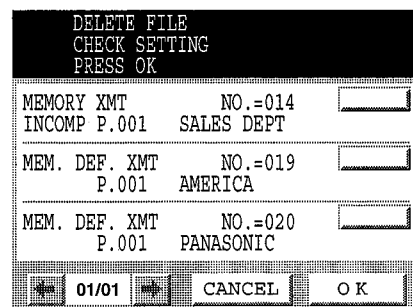 


3

Select the file that you want to delete and press **OK**.

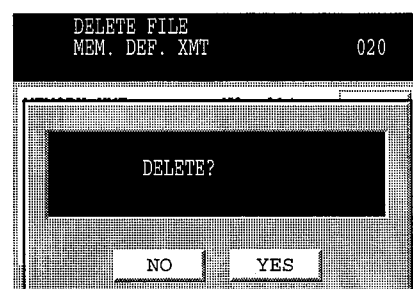

Edit File Mode

 4



NOTE

1. Your machine cannot delete the file while it is being sent.
2. If you want to delete all files in Step 3, press with no file selected (except the file in progress).
The following message is shown on the display.




Press to delete all files.

Edit File Mode

Printing Out a File

To print the contents of the communication file, follow the steps bellow.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

2

EDIT FILE MODE	04 PRINT FILE
----------------	---------------

PRINT FILE	
CHECK SETTING PRESS OK	
MEMORY XMT	NO.=014
INCOMP P.001	SALES DEPT
MEM. DEF. XMT	NO.=019
P.001	AMERICA
MEM. DEF. XMT	NO.=020
P.001	PANASONIC
01/01	CANCEL OK

3

Select the file that you want to print and press

OK

Edit File Mode

4

Your machine will print the file. The document(s) will remain in memory even after printing the file.


NOTE

1. *Your machine cannot print the file while it is being sent.*

Edit File Mode

Adding Documents Into a File

To add document(s) into the file, follow the steps bellow.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b




Place a book or an original face down on the Platen Glass.

2

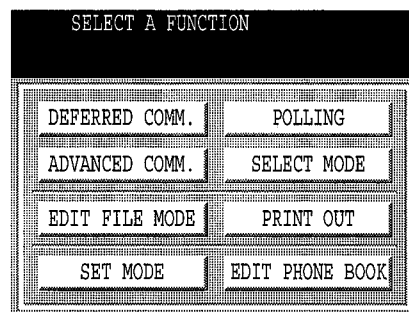

3

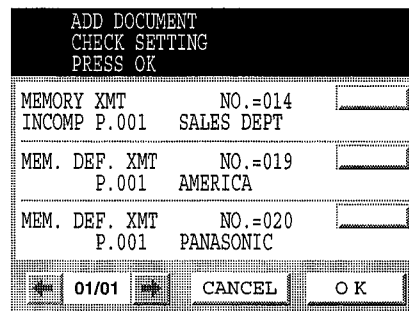

Edit File Mode

4 Select the file that you want to add document(s) to and press .

5 Your machine will start storing the document(s) into a file.

NOTE

1. Your machine cannot add document(s) into the file while it is being sent or waiting to redial.


Edit File Mode

Retry an Incomplete File

If a memory communication has been unsuccessful due to a busy line or no answer, the document(s) you stored is automatically erased from memory after the last redial.

If you need to retain the document(s) even if the communication failed, change the setting of Fax Parameter No. 031 (INC. FILE SAVE) to Valid in advance. (See page 34)

To retry the incomplete file, print a File List first to verify the file number. (See page 89)
Then, follow the steps below.


Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

2

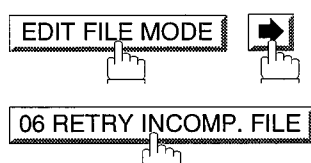

EDIT FILE MODE

06 RETRY INCOMP. FILE

RETRY INCOMP. FILE	
CHECK SETTING	ALL FILES
PRESS OK	
MEMORY XMT	NO.=014
INCOMP P.001	SALES DEPT

01/01	CANCEL	OK
-------	--------	----

Edit File Mode

3

Select the file that you want to retry.

RETRY INCOMP. FILE
CHECK SETTING
PRESS OK

ALL FILES

MEMORY XMT NO.=014
INCOMP P.001 SALES DEPT

01/01 CANCEL O K

4



Your machine will retry the file and start dialling immediately.

* STORE * COMPLETED
PAGE= 01
SALES DEPT

MEMORY XMT NO.=014
IN PRG P.001 SALES DEPT

01/01 CANCEL O K


NOTE

1. To confirm or change the entered telephone number for the file, see page 89 and 91.
2. If you set Fax Parameter No.031 to Valid, all incomplete files will remain in memory. To avoid memory overflow, please check the memory content frequently. We recommend that an optional flash memory card is installed when this function is used. See the Operating Instructions (For Copier).


Receive To Memory

This feature is used to secure all received documents by storing them into memory. To print the document(s) received in memory, the authorized operator must enter the correct password.



Setting the RCV To Memory Password

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

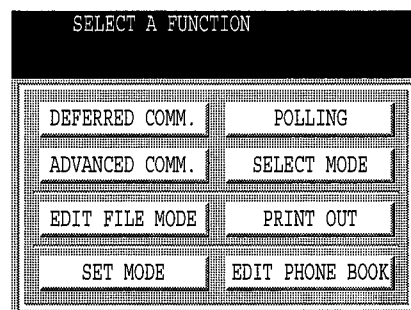

1

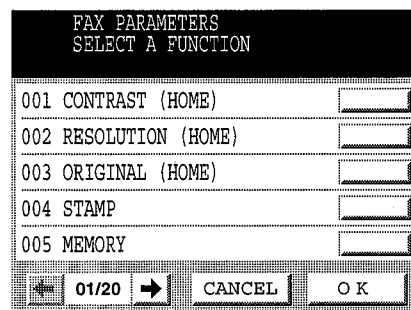 


2




3

Press  or  to scroll the display to the desired Fax Parameter.

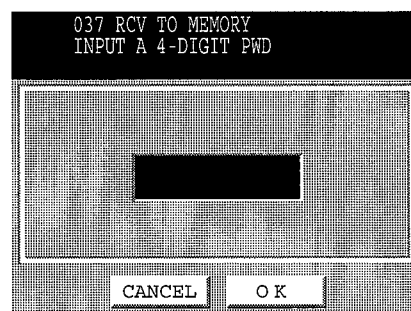


4

Enter a 4-digit RCV to Memory Password and then press .


Ex: ① ② ③ ④

 5




Receive To Memory


Setting RCV To Memory

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

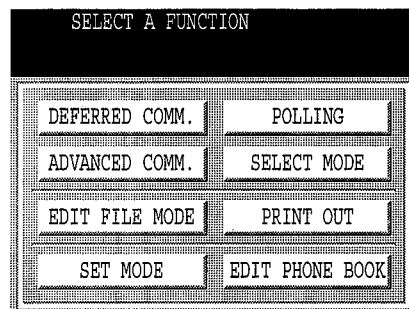

2

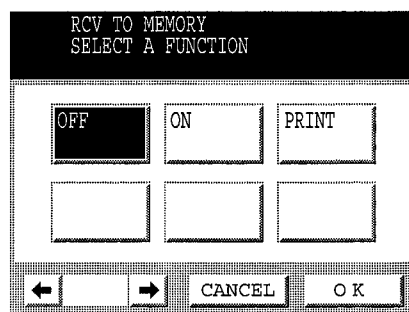

Receive To Memory

3



RCV TO MEMORY SELECT A FUNCTION		
OFF	ON	PRINT
←	→	CANCEL OK

4



AUG-15-2001 15:00 01%				
READY TO FAX				
< RCV TO MEMORY >				
ABC	DEF	GHI	JKL	MNO ▶
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			↑
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			↓
JOB	MEMORY XMT	▲	■	
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER

NOTE

1. When the memory overflows, the machine will stop receiving and release the line. The machine will not answer the next incoming call until there is space available in memory.
2. We recommend that optional flash memory card is installed when this function is used. See page 176 on Image Memory Capacity.


Receive To Memory

Printing Documents

After receiving documents with the Receive To Memory feature, the following message will appear on the display.

AUG-15-2001 15:00				
MESSAGE IN MEMORY				
ABC	DEF	GHI	JKL	MNO ▶
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			⬆
ANTARCTICA	BRAZIL			1/1
APOLLO	CANADA			⬇
JOB	MEMORY XMT	A	⬆	
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER ▶

To print the document(s), follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK


2

SELECT MODE	▶	06 RCV TO MEMORY
-------------	---	------------------


RCV TO MEMORY SELECT A FUNCTION		
OFF	ON	PRINT
←	→	CANCEL OK

Receive To Memory

3

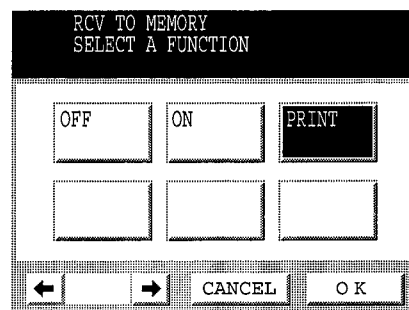

4

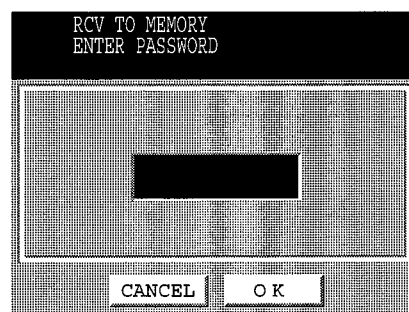

5

Enter the password to print the document(s) and then press **OK**.
(See Note 1)

Ex: ① ② ③ ④ and press **OK**

6

Machine will start to print the document(s).

NOTE

1. If the password has not been set, your machine will not prompt you to enter the password. The document(s) will be printed immediately after pressing **OK** in Step 4.
2. Once the RCV TO MEMORY feature is set to "On", the password cannot be changed (Fax Parameter No. 037 will not be selectable on the LCD display). If you wish to change the password, set the RCV TO MEMORY feature to "Off" first. Then change the password. (See page 101)

Distinctive Ring Detector (DRD)

This function is only effective for companies in countries which offer the DRD Service.

Your machine has a special feature in conjunction with an optional service provided by many local telephone companies. It can distinguish up to 2 telephone numbers with a corresponding ring pattern identifying each number. "DRD" lets you provide multiple phone numbers, one for your fax, business or personal use with only one single phone line.

Please check with your local telephone company on the availability of this service in your area.


Your machine can be programmed to respond to the specified ring pattern only for the DRD Service. To enable your machine to detect the ring pattern only for fax communication, change the setting of Fax Parameter No. 30 (See page 34).

The following table shows a typical example with 2 telephone numbers on a single phone line.

Ex: Specified Ring Pattern = Double Ring

Telephone No.	Usage	Distinctive Ring Sound	Ring Pattern
555-1111	Phone	<i>Riing.....Riing.....</i>	Standard Ring
555-2222	Fax	<i>Ring...Ring.....Ring...Ring.....</i>	Specified Ring (Double Ring)

The following illustration shows a typical set up, with your machine set to detect Specified Ring (Double Ring).

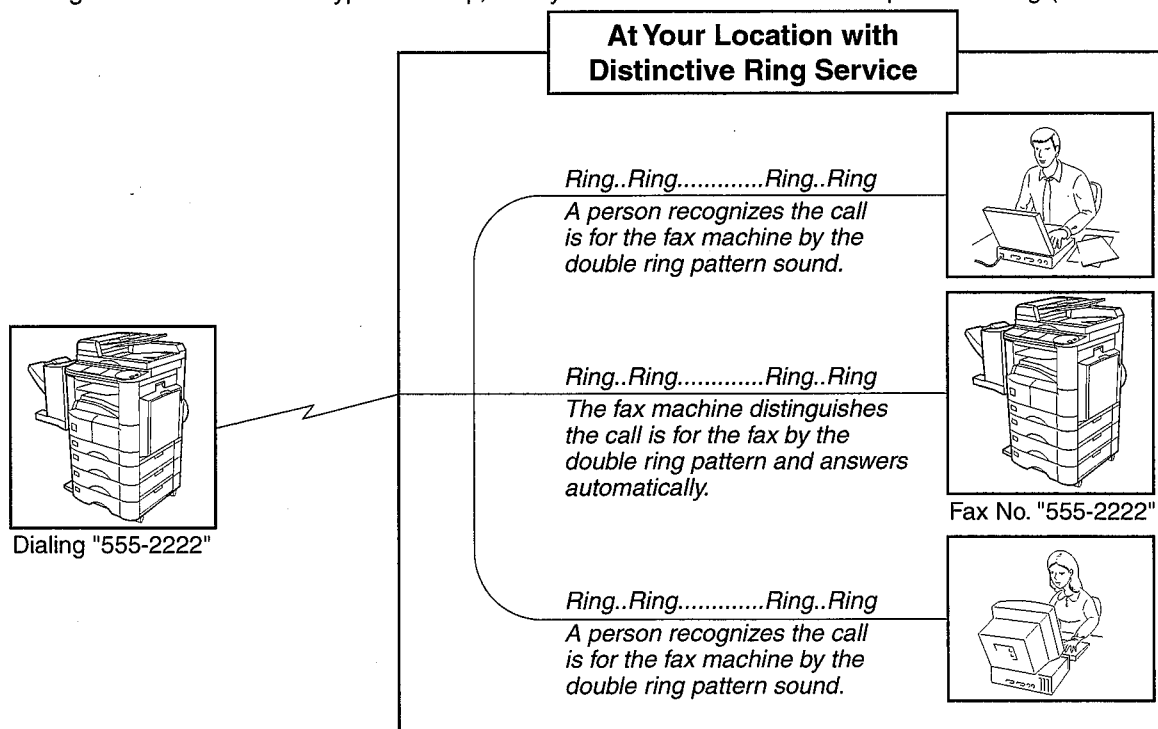

NOTE


1. ""Riing" means a long ringing sound and "Ring" means a short ringing sound.
2. The specified ring pattern may differ depending on the each country's regulation or specification.

Fax Cover Sheet


General Description

A Fax Cover Sheet can be automatically attached to your transmit document(s) that shows the recipient's name, originator's name and the number of pages attached.

Transmitted as:

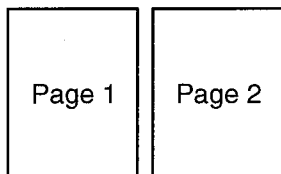


Received as:

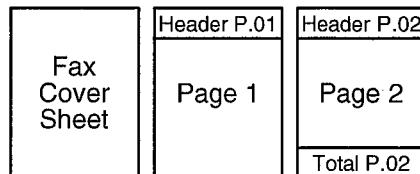

To Use the Fax Cover Sheet

To attach a Fax Cover Sheet to a transmission, follow the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b



Place a book or an original face down on the Platen Glass.

2

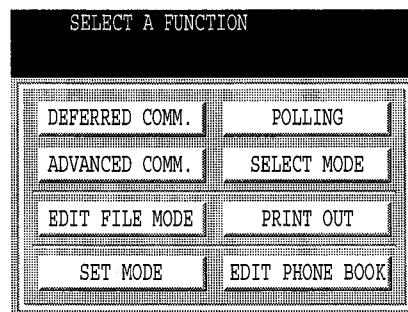


Fax Cover Sheet

3

SELECT MODE

04 COVER SHEET

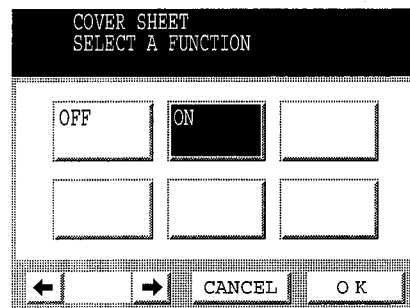

4

OFF

(Cover Sheet is not attached)


or

ON

(Cover Sheet is attached)

5

OK

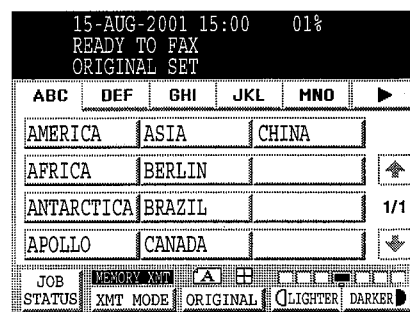

6

Dial the station(s) you wish to send the document(s) to.

Ex: PANASONIC START

NOTE

1. To change the preset Fax Cover Sheet Setting, change the setting of Fax Parameter No. 056 (See page 35).
2. This function is available for memory or direct transmission modes.
3. The Fax Cover Sheet is not counted in the number of pages column of the journals.

Fax Cover Sheet

Fax Cover Sheet Sample

***** FACSIMILE COVER SHEET *****

(1)

15-AUG-2001 15:00

(2)

Message To:

SALES DEPT.

(3)

Message From:

PANASONIC
201 555 1212

(4)

02

Page(s)

Following This Cover Page

Explanation of contents


- (1) Starting time of communication.
- (2) Recorded name in the Phone Book or dialled telephone number.
- (3) Your LOGO (up to 25 characters) and ID Number. (Up to 20 digits)
- (4) The number of pages to follow. This information is not shown when transmitting by Direct Transmission Mode.

Department Code

General Description

This operation requires the user to input a preset 4-digit Department Code before transmission. The Department Name of the selected Department Code is printed on the Header of each page sent, Cover Sheet, COMM. Journal and Individual Transmission Journal. When the Department Code is set, the Transaction Journal will be sorted by the Department Code number (01 - 50) when it is printed.

Setting the Department Code

 
Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

2



FAX PARAMETERS SELECT A FUNCTION	
001 CONTRAST (HOME)	<input type="text"/>
002 RESOLUTION (HOME)	<input type="text"/>
003 ORIGINAL (HOME)	<input type="text"/>
004 STAMP	<input type="text"/>
005 MEMORY	<input type="text"/>
← 01/20 →	CANCEL OK

Department Code

- 3** Press or to scroll the display to the desired Fax Parameter.

077 DEPARTMENT CODE



 
4

VALID



5

OK




NOTE


1. Use **COPY** to copy the default LOGO which is set in the User Parameters. You can add the department name following the default LOGO.
2. When enabling the Dept. Code feature for the first time, it is important to print the Journal by pressing **FUNCTION**, **PRINTOUT**, **04 FAX PARAMETER LIST** in order to erase the previous journal contents.

Department Code



Setting the Department Code Name

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

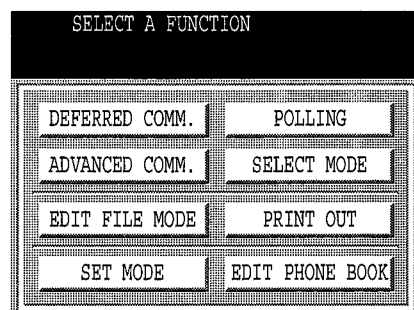


2

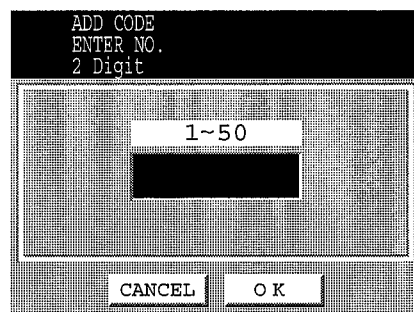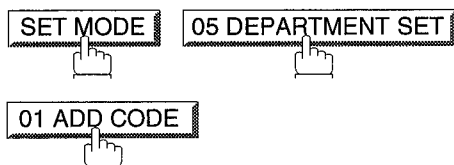

3

Enter Department Code Number and press **OK**.


Ex: **01** and press **OK**

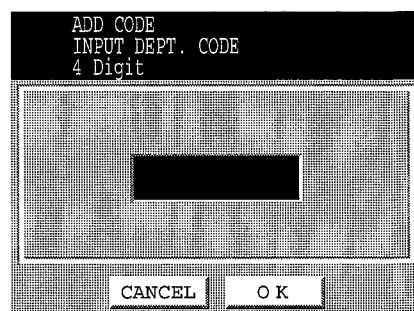

Department Code

4 Enter a 4-digit Department Code and press **OK**.


Ex: ① ① ① ① and press **OK**

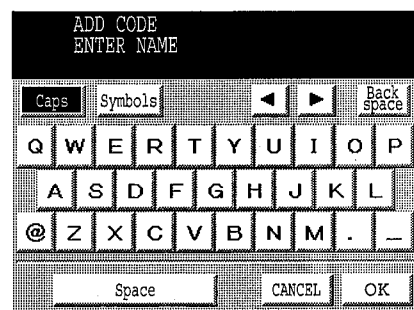

5 Enter your Department Name (max. 25 characters and digits).

And press **OK**.

Ex: DEPT.1 and press **OK**

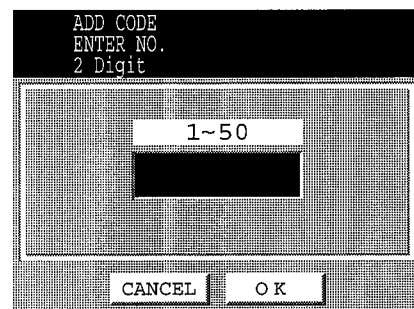


6 To record another Department Code, repeat Steps 3 to 5. To return to standby, press **STOP**.


Department Code

Changing the Department Code



If you have to change any of the Department Codes, follow the steps below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

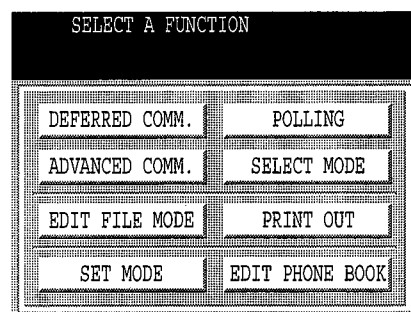


2

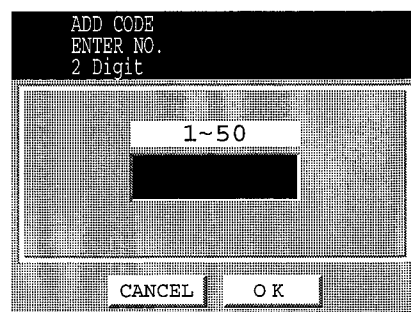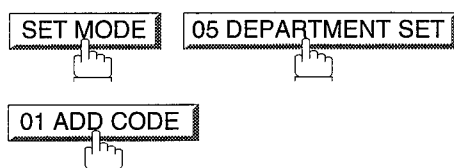

3


Enter Department Code Number that you wish to change and press **OK**.


Ex: 0 1 and press **OK**

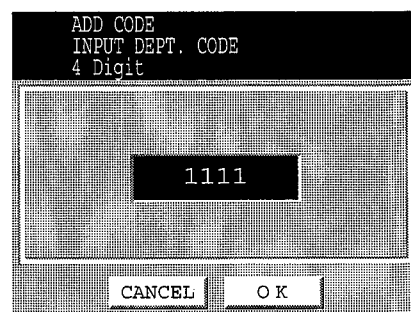

Department Code

- 4** Enter New Department Code and press **OK**.

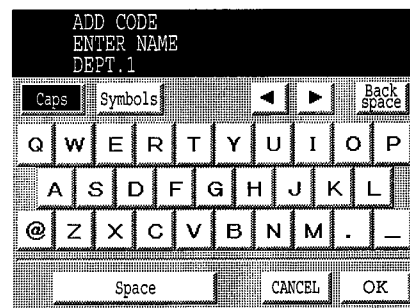


- 5**  then enter a new Department Name and press **OK**.


- 6** To change another Department Code, repeat Steps 3 to 5.
To return to standby, press **STOP**.

Department Code



Deleting the Department Code

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

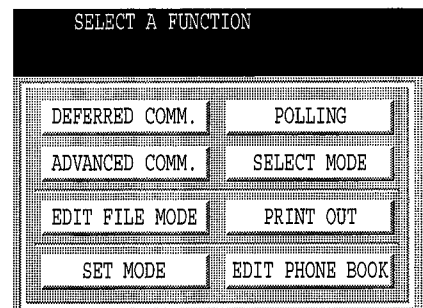


2

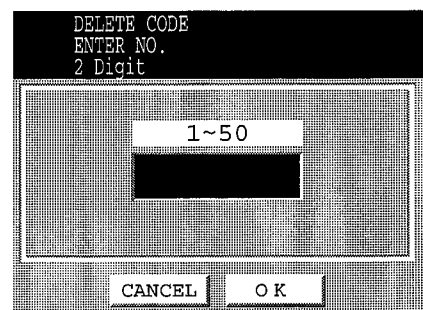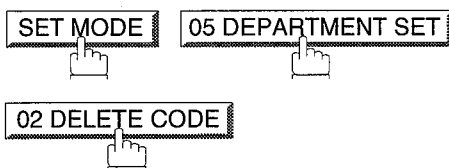

3

Enter Department Code you wish to delete and press **OK**.

Ex: **0 1** and press **OK**

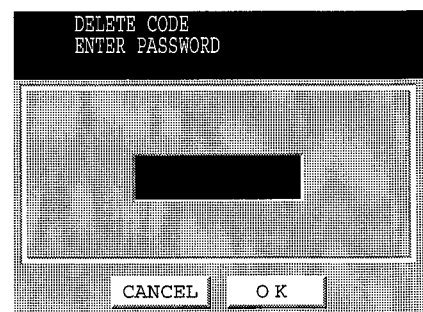


Department Code

4

Enter the Department Code and press **OK**.

Ex: **1 1 1 1** and press **OK**

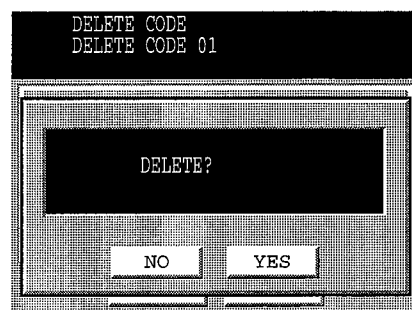

5



6

To delete another Department Code, repeat Steps 3 to 5.

To return to standby, press **STOP**.

Department Code

Sending a Document with Department Code

1



Set original(s) face down.

2


Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered (up to 70 stations)
- Phone Book Dialling (up to 200 stations)

Ex: **PANASONIC**

MEMORY XMT		0001	
PANASONIC			
5551234			
◀	PQRS	TUV	WXYZ Others PROGRAM DIAL
PANASONIC			
SALES DEPT			↑
			1/1
			↓
JOB STATUS	MEMORY XMT	▲	■
	XMT MODE	ORIGINAL	LIGHTER DARKER

3

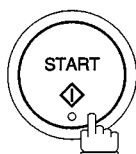

INPUT DEPT. CODE	
<div style="background-color: black; width: 100px; height: 20px; margin: 0 auto;"></div>	
CANCEL	OK

4

Enter a 4-digit Department Code and press **OK**.

5

The document is sent with the header of the selected Department Name. The selected Department Name is printed on the COMM. Journal, Individual Transmission Journal and Cover Sheet.

Department Code

Sending a Document with Department Code (Voice Mode Transmission)

 
1a



Place original(s) face up on the ADF.

or

1b




Place a book or an original face down on the Platen Glass.

2

Lift the optional handset or the external telephone or press **MONITOR**.

Ex: **MONITOR**

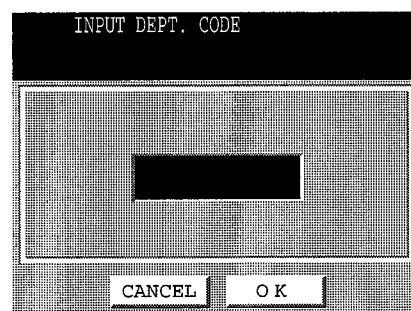

3

Enter a 4-digit Department Code and press **OK**.

Ex: ① ② ③ ④ and press **OK**

Department Code

4


Dial the telephone number from the keypad.

Ex: ⑤ ⑤ ⑤ ① ② ③ ④

JUL-15-2001 15:00			
* DIALING *			
5551234			
◀	PQRS	TUV	WXVZ Others PROGRAM DIAL
PANASONIC			
SALES DEPT			↑
			1/1
			↓
JOB STATUS	MEMORY XMT XMT MODE	ORIGINAL	CLIGHTER DARKER

5

When you hear a beep,

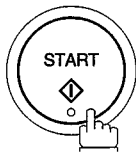

The document is sent with the header of the selected Department Name. The selected Department Name is printed on the COMM. Journal, Individual Transmission Journal and Cover Sheet.


Department Code

Printing a Department Code List

The Department Code List will print after the Fax Parameter List.


FUNCTION

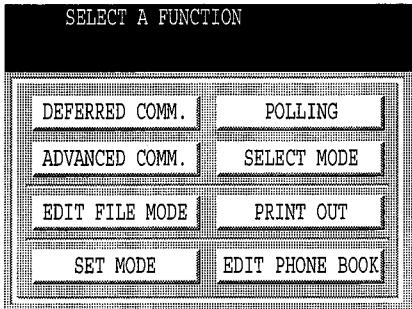

PRINT OUT

04 FAX PARAMETER LIST

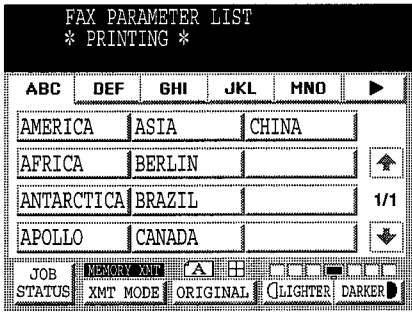

Department Code

Sample Department Code List (Prints following the Fax Parameter List)

***** -FAX PARAMETER LIST- ***** DATE 15-AUG-2001 ***** TIME 15:00 *** P.02

DEPARTMENT CODE LIST

(1) NUMBER	(2) DEPARTMENT NAME	(3) DEPARTMENT CODE
01	Panafax Sales	0001
02	Panafax Service	0002
03	Panafax Accounting	0003
(((
50	Panafax Engineering	0050

-PANASONIC

***** -HEAD OFFICE - ***** 201 555 1212 - *****

Explanation of contents


- (1) Department Code Number : 01-50
- (2) Department Name : Up to 25 characters
- (3) Department Code : 4 digits

Department Code


Printing a Department Code Journal

When the Department Code is set, the Transaction Journal will be sorted by the Department Code number when it is printed. All contents of the Journal will be erased automatically after being printed.

1

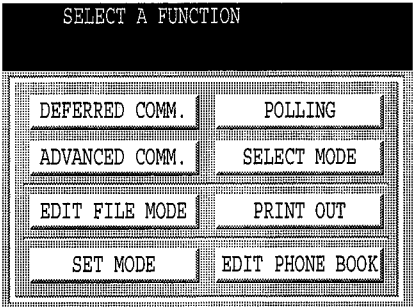

2

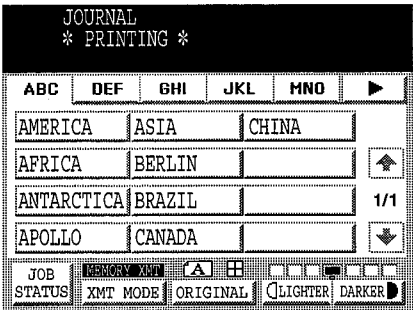

Department Code

Sample Department Code Journal / Originated Calls

***** -JOURNAL- ***** 15-AUG-2001 15:00 ***** TIME 15:00 *** P.01

ORIGINATED CALLS

13-AUG TO 15-AUG (1)

(2)

(3)

TOTAL PAGES = 000038 TOTAL TIME = 00:23:56

(4)

(5)

01: Panafax Sales

NO.	COMM.	PAGES	FILE	DURATION	X/R	IDENTIFICATION	DATE	TIME	DIAGNOSTIC
01	OK	005		00:05:13	XMT	☎ 5551234	13-AUG	15:10	C0044903C0000
21	OK	021/021	019	00:10:15	FWD	FAX FORWARD	13-AUG	18:10	C0044903C0000

(6)

(7)

TOTAL PAGES = 000026 TOTAL TIME = 00:15:28

02: Panafax Service

NO.	COMM.	PAGES	FILE	DURATION	X/R	IDENTIFICATION	DATE	TIME	DIAGNOSTIC
19	OK	001/001	017	00:00:13	XMT	☎ 5551234	14-AUG	10:10	C0044903C0000
30	OK	011/011	045	00:08:15	XMT	SERVICE DEPT.	15-AUG	13:10	C0044903C0000

TOTAL PAGES = 000012 TOTAL TIME = 00:08:28

-PANASONIC

***** -HEAD OFFICE - ***** 201 555 1212 - *****

Department Code

Sample Department Code Journal / Received Calls

```
***** -JOURNAL- ***** DATE 15-AUG-2001 15:00 ***** TIME 15:00 *** P.02

RECEIVED CALLS
13-AUG TO 15-AUG (1)
(2) (3)
TOTAL PAGES = 000011 TOTAL TIME = 00:13:41

NO. COMM. PAGES FILE DURATION X/R IDENTIFICATION DATE TIME DIAGNOSTIC
55 OK 005 00:05:13 RCV 4445678 13-AUG 12:10 C0044903C0000
56 OK 005/005 020 00:08:15 PLD 111 222 333 13-AUG 19:15 C0044903C0000

70 OK 001 017 00:00:13 RCV 44567345 14-AUG 10:10 C0044903C0000

- PANASONIC -
***** -HEAD OFFICE - ***** 201 555 1212 - *****
```

Explanation of contents

- (1) Period date of this journal
- (2) Number of total pages transmitted/received for this machine.
- (3) Total transmitted/received time for this machine.
- (4) Department Code Number : 01-50
- (5) Department Name
- (6) Number of total pages transmitted/received for this department.
- (7) Total transmitted/received time for this department.

This page is intentionally left blank.


Selective Reception

Your machine has a special feature, Selective Reception, which can prevent the receiving of unnecessary documents (i.e. junk fax, direct mail, etc.).


Before receiving the document(s), the last 4 digits of the ID Number received from the sending machine will be compared with the last 4 digits of the telephone number programmed in each Phone Book station.

When a match is found, your machine will start receiving the document(s). If a match is not found, your machine will cancel the reception and an Information Code 406 will be recorded on the Journal.



Setting the Selective Reception

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

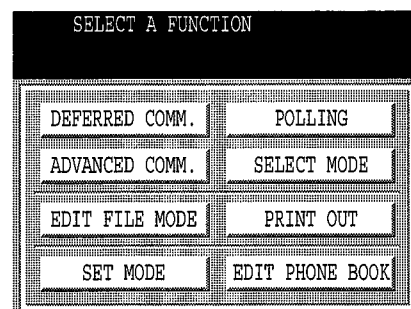

1

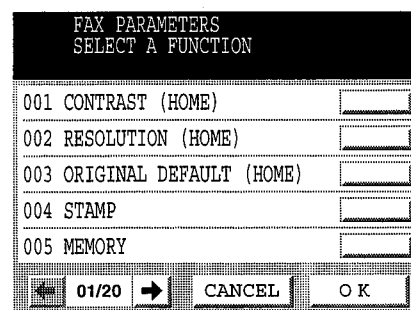 


2





3

Press  or  to scroll the display to the desired Fax Parameter.

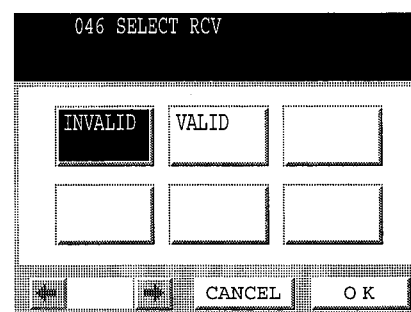


Selective Reception

 4

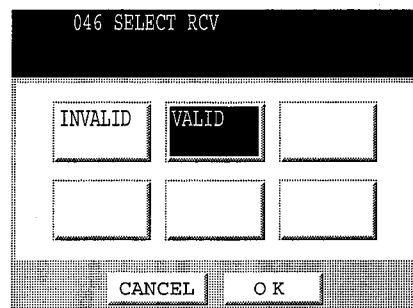

5

 

NOTE

1. When the Selective Reception is set, your machine can receive only from those stations which are programmed in the Phone Book.
2. If your ID number has not been set, your machine might not be able to receive from some models.
To set your ID number, see page 23.

Password Communications

General Description

Password Communications, including Password Transmission and Password Reception will prevent your machine from sending a fax to a wrong station or receiving a fax from an unauthorized stations. You can set Password Transmission and Password Reception independently, or both together.

To use Password Transmission, you must set a 4-digit transmission password in advance. The password must be shared with other compatible Panafax machine(s). If the transmission password in your machine does not match the transmission password in the other compatible Panafax machine(s), the transmission will fail. You can select password transmission by setting using FUNCTION - SELECT MODE - 05 (PASSWORD-XMT) to "ON" when you send an original.

To use Password Reception, you must set a 4-digit receiving password in advance. The password must be shared with the other compatible Panafax machine(s). If the password in your machine does not match the receiving password in the other compatible Panafax machine(s), the reception will fail. Once you set password reception and set the parameter to "ON", it stays until you change the setting to "OFF".

Compatibility with Other Machines


You can only use password transmission and reception with another Panafax compatible machine(s) listed below.

Model	Special Settings
DF-1100	Required. Please refer to the individual Operating Instructions of each model.
DP-2000	
DP-2500	
DP-3000	
FP-D250F	
FP-D350F	
UF-160	
UF-160M	
UF-170	
UF-260	
UF-270	
UF-270M	
UF-280M	
UF-300	
UF-312	
UF-322	
UF-550	
UF-560	
UF-585	
UF-595	
UF-650	
UF-733	
UF-744	
UF-745	
UF-750	
UF-750D	
UF-755	
UF-755e	
UF-766	
UF-770	
UF-788	
UF-880	
UF-885	
UF-895	
UF-M500	


Password Communications

Setting Password Transmission



To set transmission password and parameter

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

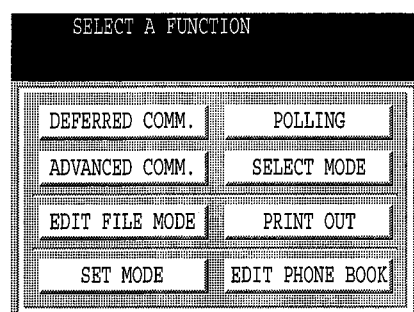

1

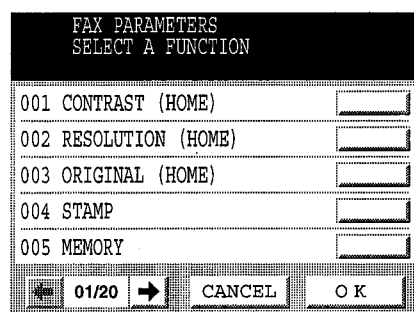 


2






3

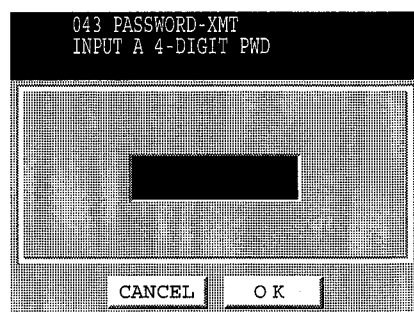Press  or  to scroll the display to the desired Fax Parameter.



4

Enter a 4-digit Transmission Password and press .
Ex: ① ② ③ ④ and press .

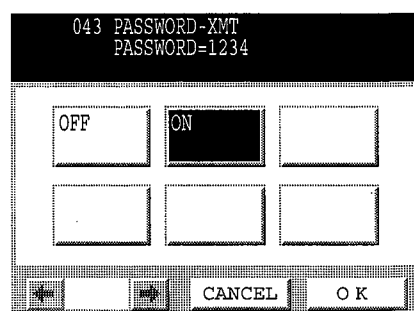

Password Communications

5



(password is not checked)

or



(password is checked)

6




NOTE

1. You can change the setting temporarily by using **FUNCTION** **SELECT MODE** **05 PASSWORD-XMT** for each transmission. See page 134 for details.
2. To change the password, press **CLEAR** in Step 4. Then re-enter a new one.


Password Communications

Setting Password Reception


To set receiving password and parameter

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

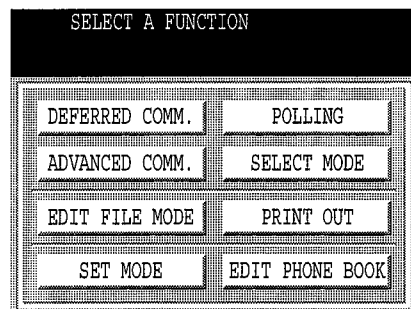

1

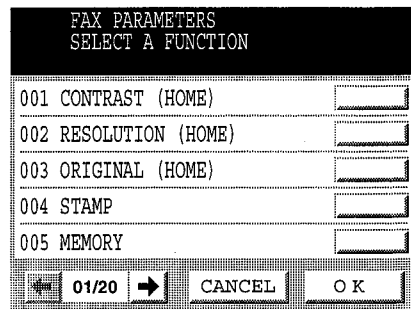


2



3

Press  or  to scroll the display to the desired Fax Parameter.

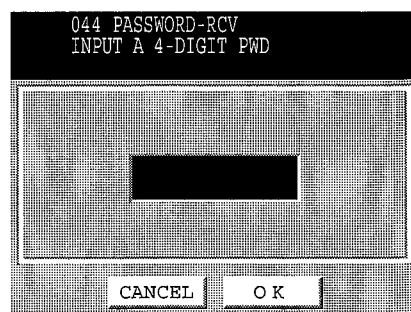


Password Communications

4

Enter a 4-digit Receiving Password and press **OK**.

Ex: ① ② ③ ④ and **OK**.

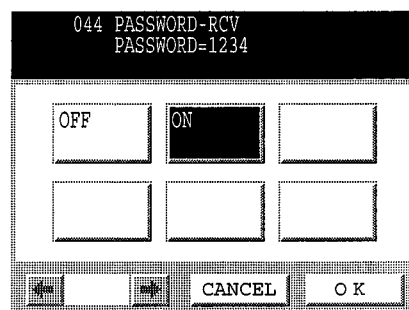

5



(password is not checked)

or



(password is checked)

6




NOTE

1. Once you set the parameter, you cannot select the parameter, "OFF" or "ON", for each reception. It is always "OFF" or "ON" until you change the setting.
2. To change the password, press **CLEAR** in Step 4. Then re-enter a new one.

Password Communications

Using Password Transmission

To use Password Transmission, you can set the **PASSWORD-XMT** "OFF" or "ON" for each Transmission by following the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b





Place a book or an original face down on the Platen Glass.


2

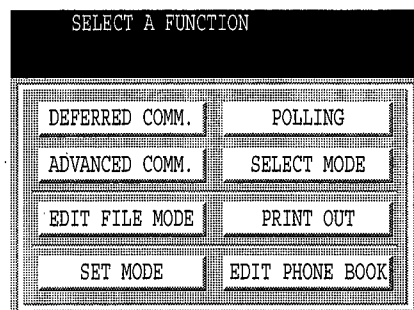


3

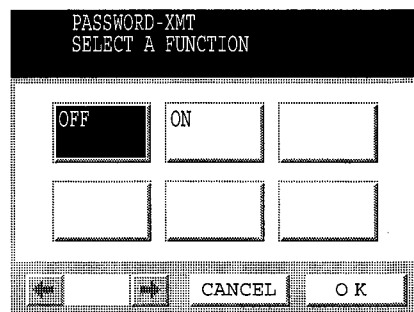 

4

 

or

 

Password Communications

5



15-AUG-2001 15:00 01%				
READY TO FAX				
ORIGINAL SET				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			1/1
ANTARCTICA	BRAZIL			
APOLLO	CANADA			
JOB	MEMO XMT			
STATUS	XMT MODE	ORIGINAL	LIGHTER	DARKER


6

Dial by any combination of the following methods:

- Manual Number Dialling, press **SET** after each station is entered (up to 70 stations)
- Phone Book Dialling (up to 200 stations)

Ex: **PANASONIC**

7

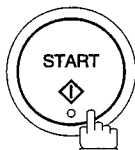

If your machine's Transmission Password coincides with the other station's Transmission Password, your machine starts sending the documents. When transmission is completed, PASSWORD-XMT returns to the original setting ("OFF" or "ON").

Using Password Reception

There is no additional operation required once you set the parameter by following the procedure on page 132. The parameter, "OFF" or "ON", cannot be selected for each reception. It is always "OFF" or "ON" until you change the setting.

Confidential Mailbox

Your machine is equipped with two Confidential Communication features which ensure that the Confidential information you send is received only by the person with the correct confidential code.

Confidential Mailbox

The confidential mailbox feature can be used as a mailbox to communicate with other compatible models using a 4-digit confidential code. The Confidential Mailbox feature receives document(s) with a confidential code into memory. These documents can only be printed by the person who has the correct confidential code.

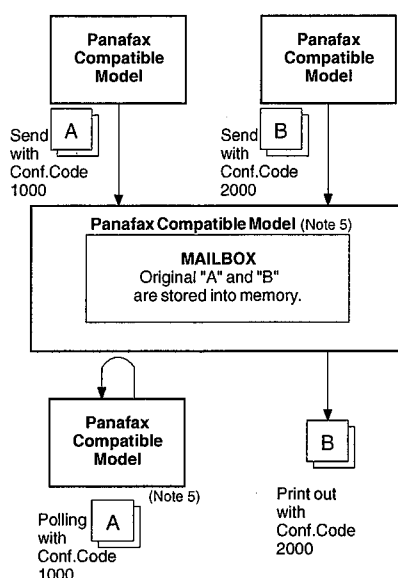


Figure 1 : Confidential Mailbox

Compatibility with Other Machines

Table 1 shows a list of compatible Panafax models which have the Confidential Mailbox feature. It also shows whether or not special settings are required.

Table 1 : Confidential Mailbox Requirement


Compatible Model							Special Settings
DF-1100	DP-2000	DP-2500	DP-3000	UF-280M	UF-312	UF-322	Not Required.
UF-332	UF-333	UF-342	UF-344	UF-550	UF-560	UF-585	
UF-595	UF-733	UF-744	UF-745	UF-755	UF-755e	UF-766	
UF-770	UF-788	UF-880	UF-885	UF-895			

NOTE

1. If your machine receives two confidential faxes with same confidential code, both documents are stored together in the same confidential mailbox.
2. Up to 20 Mailbox files can be stored in memory. So, you can receive the confidential fax using 20 different confidential codes.
3. If the memory overflows, the machine will stop receiving and release the line.
4. We recommend that optional flash memory card be installed when this function is used. (See page 176) on Image Memory Capacity.
5. If confidential faxes were received in the mailbox of UF-733, you cannot poll those documents. The UF-733 is designed to print the received confidential document(s) locally only.

Confidential Mailbox

Sending a Confidential Document to a Remote Station's Mailbox

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b





Place a book or an original face down on the Platen Glass.

2

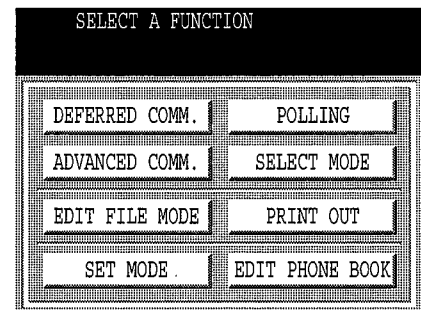

3

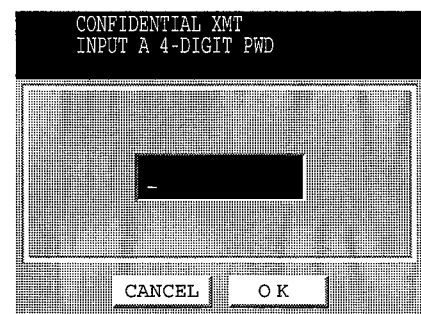 

Confidential Mailbox

4

Enter a 4-digit Confidential Code and press **OK**.

Ex: ② ② ③ ③ and press **OK**

CONFIDENTIAL XMT		STN(S):0000	
ENTER STATION(S)			
ABC	DEF	GHI	JKL MNO ▶
AMERICA	ASIA	CHINA	
AFRICA	BERLIN		⬆
ANTARCTICA	BRAZIL		1/1
APOLLO	CANADA		⬇
JOB STATUS	MEMORY XMT	⬆	⬇
XMT MODE	ORIGINAL	⬆	⬇
	LIGHTER		DARKER


5

Dial by any one of the following methods:

- Manual Number Dialling, press **SET** after each station is entered (up to 70 stations)
- Phone Book Dialling (up to 200 stations)

Ex: **PANASONIC**

6

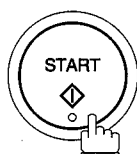

7

If necessary, contact the receiving person and tell them the Confidential Code.

 
NOTE

1. If the receiving station has a Network Password, you must set the same password, shared by the receiving station, to send confidential fax. (See pages 145 and 146)


Confidential Mailbox

Polling a Confidential Document from a Remote Station's Mailbox



After you have been informed that someone has transmitted confidential document(s) to a remote station's mailbox, you can poll the confidential document(s) from the remote station by following the procedure below.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

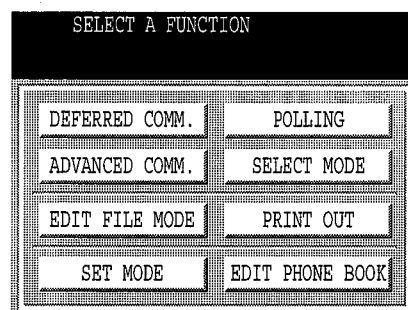


2

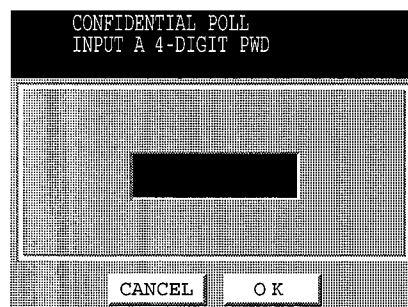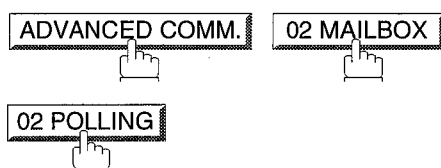

3

Enter a 4-digit Confidential Code and press **OK**.

Ex: ② ② ③ ③ and press **OK**

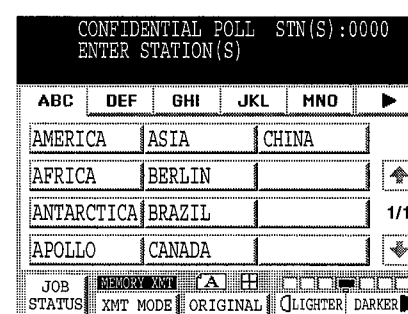

4


Dial by any one of the following methods:

- Manual Number Dialling, press **SET** after each station is entered. (Up to 70 stations)
- Phone Book Dialling. (Up to 200 stations)

Ex: **PANASONIC**

Confidential Mailbox

5

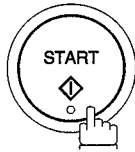

NOTE

1. The confidential file will be erased automatically at the center station after being polled.

Confidential Mailbox

Receiving a Confidential Document into Your Machine's Mailbox

No special setting is required, your machine comes with this feature ready to use. Your machine receives a confidential fax the same way it receives a normal fax message. When receiving the confidential fax, the display shows the following message (CONF. RCV REPORT) and prints the Confidential Receive Report.

Sample CONF. RCV Report

```
*****-CONF. RCV REPORT- *****DATE 15-AUG-2001 *****TIME 15:00 *****
      ** NOTICE OF CONFIDENTIAL DOCUMENT HELD **
(1)      (2)      (3)      (4)
FILE NO. RECEIVED FROM    PAGES    TIME RECEIVED
      040      PANAFAX      001      15-AUG 15:00
                                     -PANASONIC -
*****-HEAD OFFICE      -**** -      201 555 1212- *****
```

Explanation of contents

- (1) File number : 001 to 999
- (2) Received remote station's ID : Character ID or Numeric ID
- (3) Number of pages received
- (4) Received date and time


NOTE

1. If your machine receives two confidential faxes with same confidential code, both documents are stored together in the same confidential mailbox.
2. Up to 20 Mailbox files can be stored in memory. So, you can receive the confidential fax using 20 different confidential codes.
3. If the memory overflows, the machine will stop receiving and release the line.
4. You can verify whether the unit has received a confidential fax by printing the File List. (See page 89)

Confidential Mailbox

Storing a Confidential Document in Your Machine's Mailbox

Use the following procedure to store a document(s) into a confidential mailbox in your machine. Once the confidential document(s) is stored in your machine, it can be polled by another machine.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b





Place a book or an original face down on the Platen Glass.

2

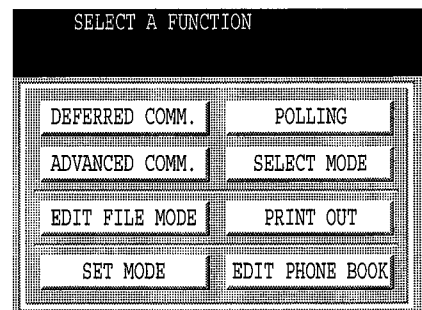

3

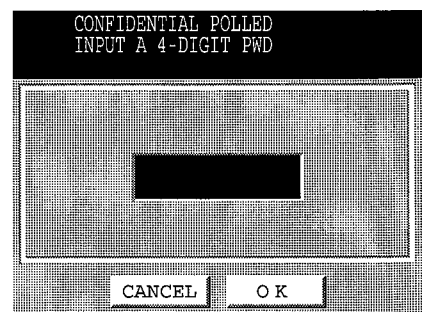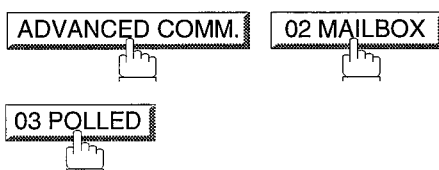

Confidential Mailbox

4

Enter a 4-digit Confidential Code and then press .

Ex: ② ② ③ ③ and press .

5

The document(s) will be stored into memory.
If necessary, contact the receiving party of the confidential document(s) and tell them the confidential code needed to poll the documents.


NOTE

1. The confidential file will be erased automatically after being polled.
If you wish to retain the confidential file even after being polled, change the setting of Fax Parameter No. 042 (CONF. POLLED FILE SAVE) to "Valid".


Confidential Mailbox

Printing a Confidential Document from Your Machine's Mailbox



After you have been notified that someone has transmitted a confidential document into your machine's mailbox, use the following procedure to print the confidential document(s).

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

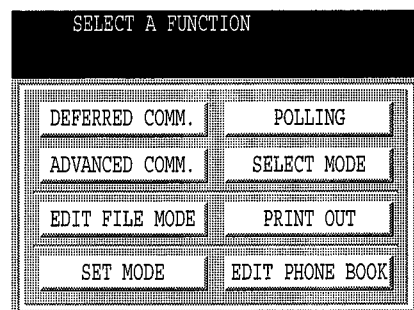

2

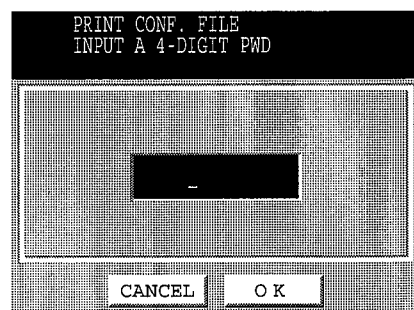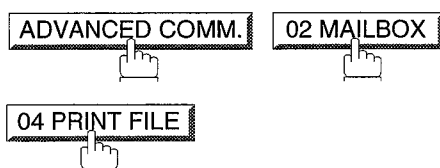

3

Enter the Confidential Code of the document you want to print and then press **OK**.

Ex: ② ② ③ ③ and press **OK**

4

The machine will print the confidential document(s).

NOTE

1. The confidential file will be erased automatically after being printed even if the setting of Fax Parameter No. 042 (CONF. POLLED FILE SAVE) is changed to "Valid".


Confidential Mailbox

Deleting a Confidential Document Stored in Your Machine's Mailbox


If your memory becomes full, or you just want to clean out your confidential documents, you may delete one or more confidential faxes stored in your machine by using the following procedure.

There are two types of methods for deleting the confidential file(s), one is to delete the file individually by its Confidential Code, and the other is to delete all confidential files in memory.



To delete a file using the Confidential Code

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

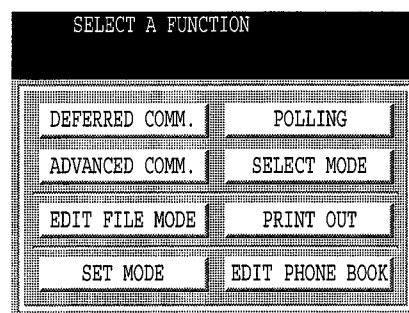

2

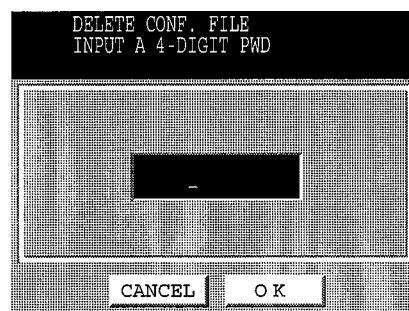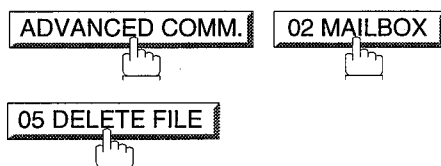

3


Enter a 4-digit Confidential Code and then press

.


Ex: and press .

Confidential Mailbox



To delete all confidential files from memory

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

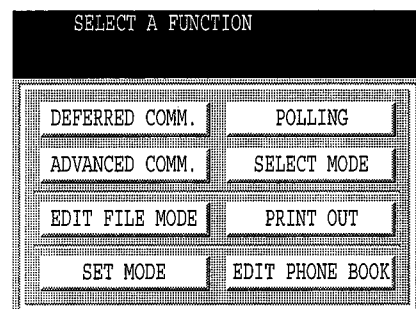

2

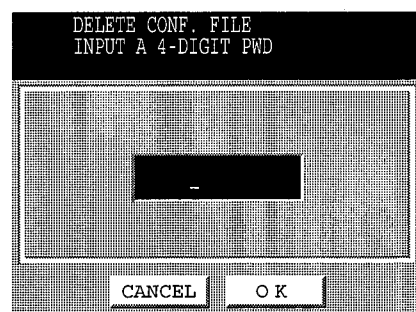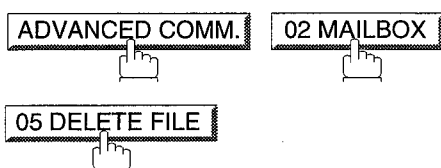

3



4




Sub-Addressing

General Description

The Sub-Addressing function allows you further routing, forwarding or relaying of document(s) to the desired recipient(s) when used in combination with the Networking version of LaserFAX software. This function conforms to the ITU-T recommendation for T. Routing-Facsimile Routing utilizing the Sub-Address.

Example of a Network

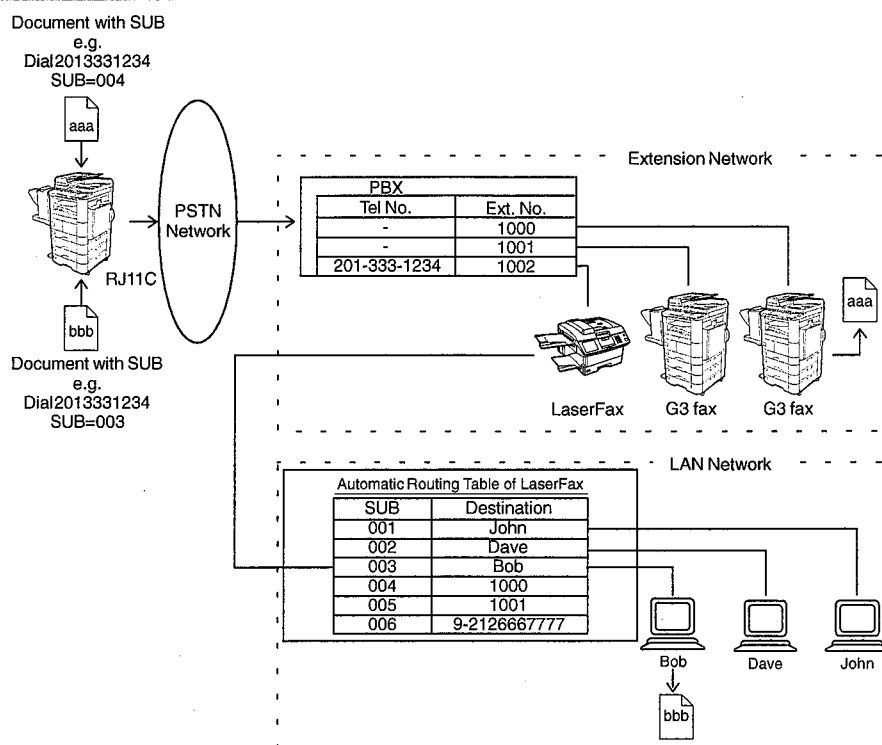

Compatibility with Other Machines

- Sub-Addressing Transmission: DF-1100/DP-2000/DP-2500/DP-3000/DX-1000/2000/FP-D250F/D350F/UF-332/333/342/344/550/560/585/595/770/788/880/885/895 (see Note 2)
- Sub-Addressing Reception: DX-1000/2000 and DF-1100/UF-342/344/550/560/585/595/770/788/880 with PC Interface using the Networking version of LaserFAX software.

Sub-Addressing Transmission Methods

You can send a document with Sub-Address information to the desired recipient by the following methods.

- By registering the Sub-Address information into the Phone Book Numbers.
- By specifying the Sub-Address information in the Manual Number Dialling Mode.

Setting of Routing, Forwarding or Relaying


You can customize the Automatic Routing to any combination of LAN (Local Area Network), PSTN (Public Switched Telephone Network) or PBX Extension with LaserFAX Routing Table (please refer to the LaserFAX User Manual).

NOTE


1. LaserFAX is trademarks of Wordcraft International Ltd.
2. UF-788 with PC Interface Option or the Option ROM installed.

Sub-Addressing



Setting the Sub-Address into a Phone Book Numbers

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

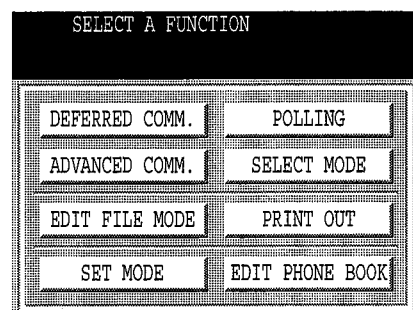

2

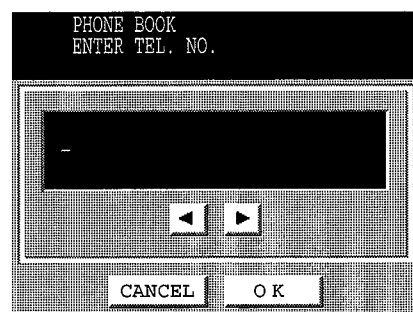 


3

Enter the telephone number, press **SUB-ADDR** then enter the Sub-Address. (Up to 20 digits)
(Up to 36 digits including telephone number, pauses, spaces, FLASH and Sub-Address.)

Ex: Telephone number = 5551234,
Sub-Address = 2762

Enter as: ⑤ ⑤ ⑤ ① ② ③ ④

SUB-ADDR ② ⑦ ⑥ ②

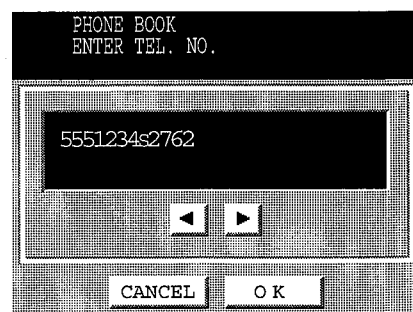

Sub-Addressing

4



And then continue to enter the station name and key name.

A screen titled "PHONE BOOK" with the instruction "ENTER NAME". Below the title is a keyboard layout with three rows of letters: QWERTYUIOP, ASDFGHJKL, and @ZXCVBNM. There are also buttons for "Caps", "Symbols", "Back space", "Space", "CANCEL", and "OK".

5



NOTE


1. **SUB-ADDR** separates the Sub-Address from the Telephone number and is indicated by an "s" in the display.

Sub-Addressing

Sending a Fax with Sub-Address

Using the Phone Book Dialling Numbers

The operation is the same as for normal dialling.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b




Place a book or an original face down on the Platen Glass.

2

Ex: SALES DEPT

MEMORY XMT SALES DEPT 5551234s2762					
◀	PQRS	TUV	WXYZ	Others	PROGRAM DIAL
PANASONIC					
SALES DEPT					↑
					1/1
					↓
JOB STATUS	MEMORY XMT	▲	■		
	XMT MODE	ORIGINAL	LIGHTER	DARKER	▶

3

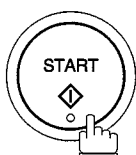


The document is stored into memory and your machine starts to dial the number of the station and sends the document(s) with Sub-Addressing information.

Sub-Addressing

Using Manual Number Dialling

Use **SUB-ADDR** to separate the Telephone number and the Sub-Address.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.

or

1b



Place a book or an original face down on the Platen Glass.

2

Enter the telephone number, press **SUB-ADDR** then enter the Sub-Address (up to 20 digits).
(Up to 36 digits including telephone number, pauses, spaces, FLASH and Sub-Address)


Ex: Telephone number = 5551234, Sub-Address=2762

Enter as: ⑤ ⑤ ⑤ ① ② ③ ④

SUB-ADDR ② ⑦ ⑥ ②

MEMORY XMT				STN(S):0000	
5551234s2762					
ABC	DEF	GHI	JKL	MNO	▶
AMERICA	ASIA	CHINA			
AFRICA	BERLIN				⬆
ANTARCTICA	BRAZIL				1/1
APOLLO	CANADA				⬇
JOB	MEMO XMT	ⓐ	ⓑ	ⓓ	ⓔ
STATUS	XMT MODE	ORIGINAL	ⓐ	ⓑ	ⓓ

3

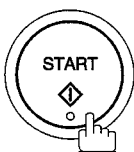


The documnet is stored into memory and your machine starts to dial the number of the station and sends the document(s) with Sub-Addressing information.

NOTE

1. **FLASH** separates the Sub-Address from the Telephone number and is indicated by an "s" in the display.
2. Manual Off-Hook or On-Hook Dialling cannot be used with the Sub-Addressed Transmission.
3. The Sub-Address is not transmitted during Manual Redial Mode.

Sub-Addressing

Use Sub-Address temporarily

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

 
1a



Place original(s) face up on the ADF.


or

1b





Place a book or an original face down on the Platen Glass.

2

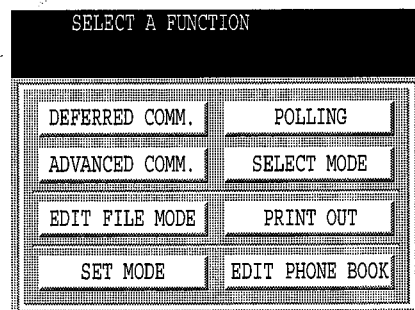


3

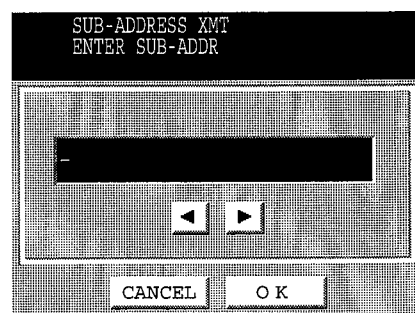 

Sub-Addressing


- 4** Enter the Sub-Address (up to 20 digits) and then press **OK**.

Ex: ② ⑦ ⑥ ② and press **OK**

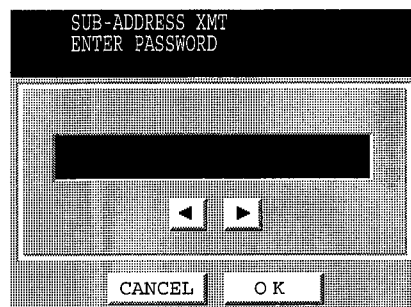

- 5** Enter the Password (max 20 digit) and then press **OK**.


Ex: ① ② ③ ④ ⑤ and press **OK**

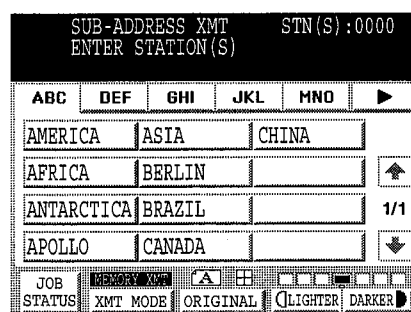

- 6** Dial by any combination of the following methods.

- Manual Number Dialling, press **SET** after each station is entered. (Up to 70 stations)
- Phone Book Dialling. (Up to 200 stations)

7

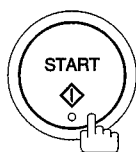


This page is intentionally left blank.

Journals and Lists

To help you maintain records of the documents you sent and received, as well as lists of the numbers you record, your facsimile machine is equipped to print the following journals and lists: Transaction Journal, Individual Transmission Journal, Communication Journal, Phone Book List, Program List, Fax Parameter List and File List.


Transaction Journal

The "Journal" is a record of the last 100 transactions (a transaction is recorded each time you send or receive a document). It prints automatically after every 100 transactions (See Note 1) or you can print or view it manually by using the following procedure:

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

FUNCTION



SELECT A FUNCTION

DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

2

PRINT OUT

01 JOURNAL

JOURNAL
SELECT A FUNCTION

01 PRINT OUT	
02 XMT ONLY (VIEW)	
03 ALL (VIEW)	
04	
05	

←

→

CANCEL

OK

3a

01 PRINT OUT

to print a Journal

Journals and Lists

3b

02 XMT ONLY



for viewing transmission transactions only


3c

03 ALL



to view all transactions

You can view the transactions in the journal by pressing ◀ or ▶. Press **STOP** to return to standby.

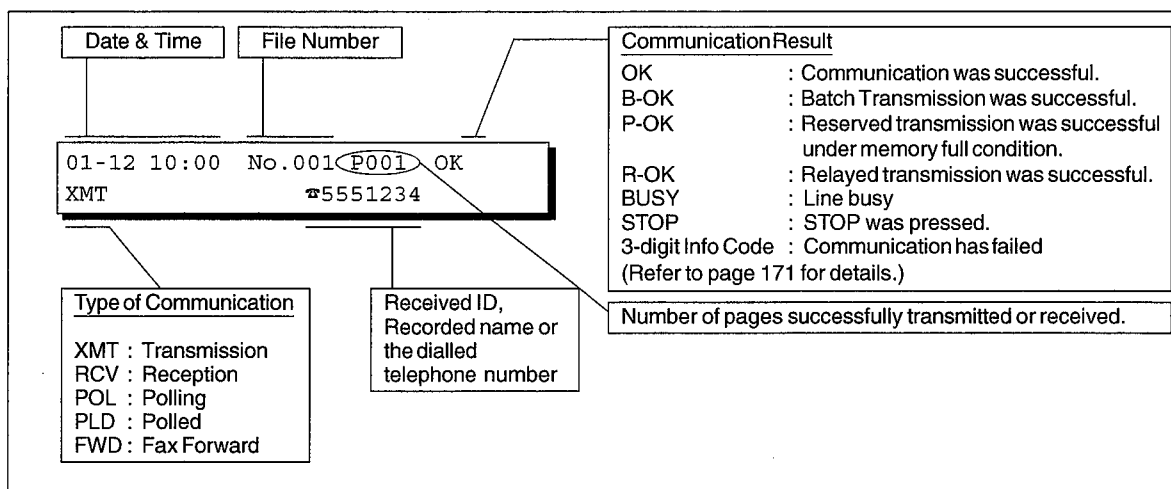


NOTE

1. If you wish to disable the automatic printing of the Transaction Journal, change the setting of Fax Parameter No. 013 to "Invalid". (See page 34)

Journals and Lists

Individual Transmission Journal (Ind. XMT Journal)

 An Individual Transmission Journal contains the information on the latest transmission.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1



SELECT A FUNCTION	
DEFERRED COMM.	POLLING
ADVANCED COMM.	SELECT MODE
EDIT FILE MODE	PRINT OUT
SET MODE	EDIT PHONE BOOK

2

PRINT OUT	05 IND. XMT JOURNAL
-----------	---------------------

IND. XMT JOURNAL				
* PRINTING *				
ABC	DEF	GHI	JKL	MNO
AMERICA	ASIA	CHINA		
AFRICA	BERLIN			1/1
ANTARCTICA	BRAZIL			
APOLLO	CANADA			
JOB STATUS	MEMO: XMT	ORIGINAL	LIGHTER	DARKER

Journals and Lists

Sample Transaction Journal

(1) (2)

***** -JOURNAL- ***** DATE 15-AUG-2001 ***** TIME 15:00 *****

(3) NO.	(4) COMM.	(5) PAGES	(6) FILE	(7) DURATION	(8) X/R	(9) IDENTIFICATION	(10) DATE	(11) TIME	(12) DIAGNOSTIC
01	B-OK	005/005		00:00:22	XMT	SERVICE DEPT.	14-AUG	17:35	C0044903C0000
		002/002	001						
		003/003	002						
02	OK	003	003	00:01:17	RCV	111 222 333	14-AUG	17:41	C0044903C0000
03	OK	001	004	00:00:31	XMT	ACCOUNTING DEPT.	14-AUG	17:50	C0044903C0000
04	630	000/005	005	00:00:00	XMT	☎342345676	14-AUG	17:57	0800420000000
05	STOP	000	006	00:00:34	XMT	☎12324567	14-AUG	18:35	0210260200000
06	OK	001/001	007	00:00:20	XMT	☎44567345	14-AUG	18:44	C8044B03C0000
07	408	*003	008	00:02:14	XMT	☎2345678	14-AUG	18:55	0040440A30080
48	OK	002/002	049	00:00:31	XMT	☎0245674533	15-AUG	08:35	C8044B03C1000
49	OK	003/003	050	00:01:32	XMT	☎0353678980	15-AUG	08:57	C8044B03C1000

(13)

-PANASONIC

***** -HEAD OFFICE - *****

(15) (14)

Sample Individual Transmission Journal (Ind. XMT Journal)

```

***** -IND. XMT JOURNAL- ***** (1) (2)
***** DATE 15-AUG-2001 ***** TIME 15:00 *****

(10) (11) DATE/TIME = 15-AUG-2001 09:00

(3) JOURNAL No. = 21

(4) COMM. RESULT = OK

(5) PAGE(S) = 001

(7) DURATION = 00:00:16

(6) FILE No. = 010

(16) MODE = MEMORY TRANSMISSION

(17) DESTINATION = [PANAFAX] / 555 1234 / [ABCDEFGF]

(18) RECEIVED ID =

(19) RESOLUTION = STD

(20) LINE NUMBER = 2

(13)
-PANASONIC

***** -HEAD OFFICE ***** 201 555 1212- *****
(15) (14)

```

Journals and Lists

Explanation of contents

- (1) Printout date
- (2) Printout time
- (3) Journal number
- (4) Communication result : "OK" indicates that the communication was successful.
 "BUSY" indicates that the communication has failed because of busy line.
 "STOP" indicates that **STOP** was pressed during communication.
 "B-OK" indicates that the Batch Transmission was successful.
 (All batched files are listed below the batched transaction.)
 "M-OK" indicates that the substitute reception message in memory was not printed.
 "P-OK" indicates that memory overflow or document misfeeding occurred while storing the documents into memory for transmission but successfully stored document(s) was sent.
 "R-OK" indicates that the Relayed XMT or Confidential Communication was successful.
 "3-digit Info Code" (See page 171) indicates that the communication has failed.
- (5) Number of pages transmitted or received : The 3-digit number is the number of pages successfully transmitted or received.
 When the documents are stored into memory, two 3-digit numbers will appear.
 The first 3-digit number represents the number of pages successfully transmitted. The second 3-digit number represents the total number of pages that were attempted to be transmitted.
 Asterisk "*" indicates that the quality of some received copies was poor.
- (6) File number : 001 to 999 (If the communication is stored into memory, a file number is assigned for each communication.)
- (7) Duration of communication
- (8) Type of communication : "XMT" means Transmission
 "RCV" means Reception
 "POL" means Polling
 "PLD" means Polled
 "FWD" means Fax Forward
- (9) Remote station identification : Name : Recorded name in Phone Book. Numbers or remote station's Character ID.
 ☎ number : Dialed telephone number (PIN code will not be shown)
 Number : Remote station's ID number.
 "◆" means communicated from optional 2nd G3 Fax Communication Port Kit. (Line-2)
- (10) Communication date
- (11) Communication Start time
- (12) Diagnostic : For service personnel only
- (13) Own LOGO : Up to 25 characters
- (14) Own ID number : Up to 20 digits
- (15) Own Character ID : Up to 16 characters
- (16) Type of communication : Transmission or memory transmission
- (17) Destination : If a Phone Book Number was used for transmission:
 Phone Book Number/Telephone Number/Recorded Name
 If not : Telephone number
- (18) Received remote station's ID : Character ID or ID number
- (19) Resolution: : "STD" means Standard resolution
 "FINE" means Fine resolution
 "S-FINE" means Super-Fine resolution
- (20) Line Number

Journals and Lists

Communication Journal (Comm. Journal)

The Communication Journal (Comm. Journal) lets you verify whether the transmission or polling was successful. You may select the printout condition (Off/Always/Inc. Only) in Fax Parameter No. 012.

Sample Comm. Journal

***** - COMM. JOURNAL - ***** DATE 15-AUG-2001 **** TIME 15:00 *****

(1)
MODE = MEMORY TRANSMISSION

(2)
START=15-AUG 14:50

(3)
END=15-AUG 15:00

FILE NO.= 050 (4)

(5) STN NO.	(6) COMM.	(7) KEY NAME	(8) STATION NAME/TEL NO.	(9) PAGES	(10) DURATION
001	OK	[SERVICE]	SERVICE DEPT.	001/001	00:01:30
002	OK	[SALES DEPT]	SALES DEPT.	001/001	00:01:25
003	407	[ACCOUNTING]	ACCOUNTING DEPT.	000/001	00:01:45
004	BUSY	☎	021 111 1234	000/001	00:00:00

- PANASONIC -

***** - HEAD OFFICE - ***** - 201 555 1212 - *****

THE SLEREXE COMPANY LIMITED

SAPORS LANE - BOOLE - DORSET - BH25 8ER

TELEPHONE BOOLE (945 13) 51617 - TELEX 123456

Our Ref. 350/PJC/EAC

18th January, 1972.

Dr. P.N. Cundall,
Mining Surveys Ltd

... variations of print density can cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.

At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.

Probably you have uses for this facility in your organisation.

Yours sincerely,

Phil.

P.J. CROSS
Group Leader - Facsimile Research

Journals and Lists


Explanation of contents

- (1) Indicates the communication mode
- (2) Start time of communication
- (3) End time of communication
- (4) File number : 001 to 999 (When the communication is stored into memory, a file number is assigned for each communication.)
- (5) Station number : Sequential number of the Stations.
- (6) Communication result : "OK" indicates that the communication was successful.
 "BUSY" indicates that the communication has failed because of busy line.
 "STOP" indicates that **STOP** was pressed during communication.
 "B-OK" indicates that the Batch Transmission was successful.
 "M-OK" indicates that the substitute reception message in memory was not printed.
 "P-OK" indicates that memory overflow or original misfeeding occurred while storing the document(s) into memory for transmission but successfully stored document(s) was sent.
 "R-OK" indicates that the Relayed XMT or Confidential Communication was successful.
 "3-digit Info Code" (See page 171) indicates that the communication has failed. In this case, the machine will print the attached report with first page of your document as shown on the previous page.
- (7) Abbreviated number or Φ mark : Φ mark indicates dialled by direct number dial.
- (8) Recorded name in One-Touch, ABBR. or direct dialling number
- (9) Number of pages transmitted or received : The 3-digit number is the number of pages successfully transmitted or received. When the documents are stored into memory, two 3-digit numbers will appear. The first 3-digit number represents the number of pages successfully transmitted. The second 3-digit number represents the total number of pages that were attempted to be transmitted.
- (10) Duration of Communication


Journals and Lists

Phone Book List


To print a Phone Book List of the telephone numbers you have stored

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

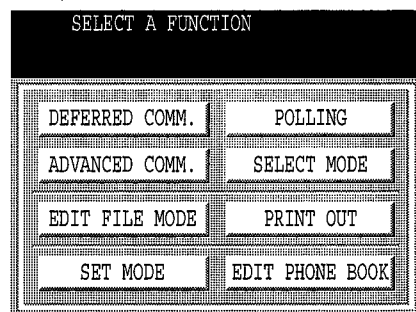

2

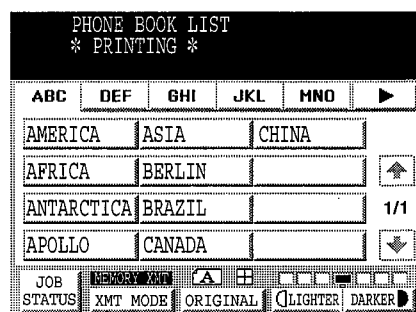

Journals and Lists

Sample Phone Book List

***** -PHONE BOOK LIST- ***** DATE 15-AUG-2001 ***** TIME 15:00 *****P.01

(1)	(2)	(3)	(4)	(6)
	KEY NAME	STATION NAME	TELEPHONE NO.	LINE
[A]	[ACCOUNTING]	ACCOUNTING DEPT	313 333 3456	AUTO
[E]	[ENG. DEPT.]	ENG. DEPT.	888 555 1234	AUTO
[P]	[PURCHASE]	PURCHASE DEPT	555 666 2345	L-1
[R]	[REGULATION]	REGULATION DEPT	777 333 3456	L-2
[S]	[SALES DEPT]	SALES DEPT.	121 555 1234	AUTO
	[SERVICE]	SERVICE DEPT	222 666 2345	AUTO

NO. OF STATIONS = 006 (5)

-PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212 - *****


Explanation of contents

- (1) The first letter of key name recorded in your machine
- (2) Key name recorded in the machine : Up to 10 characters
- (3) Station name recorded in the machine : Up to 15 characters
- (4) Telephone number recorded in the machine : Up to 36 digits
- (5) Number of recorded Phone Book numbers
- (6) Telephone Line used : AUTO, L-1, L-2 (Indicates the Telephone Line (L-1 = Line-1, L-2 = Line-2) that was used for the communication.)


Journals and Lists

Group and Program List



To print a Group and Program List of the Dialling Patterns that you have previously entered into the Program Keys.

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

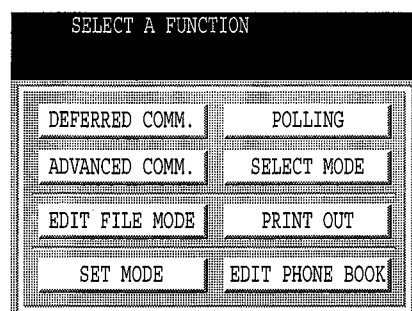

2

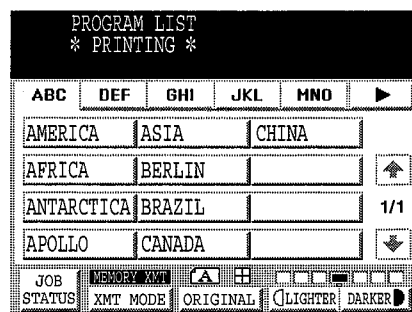 

Journals and Lists

Sample Group and Program List

```
***** -PROGRAM LIST- ***** DATE 15-AUG-2001 ***** TIME 15:00 *****P.01

(1)      (2)      (3)      (4)      (5)
KEY NAME  PROGRAM NAME  TYPE      TIMER      DESTINATION(S)

[GROUP1   ] PROG. A      GROUP      -----    [PANAFAX] [PANASONIC]
[GROUP2   ] PROG. B      GROUP      -----    [PANAFAX] [PANASONIC] [SALES DEPT]
[TIMER POLL] TIMER POLL  POLL       19:00      [PANASONIC]
[TIMER XMT ] TIMER XMT   XMT        12:00      [PANAFAX]

                                     -PANASONIC -

***** -HEAD OFFICE - ***** 201 555 1212- *****
```


Explanation of contents

- (1) Key name : Up to 10 characters
- (2) Program name : Up to 15 characters
- (3) Type of communication : "XMT" indicates transmission.
"POLL" indicates polling.
"GROUP" indicates that the Program key is programmed as a group key.
- (4) Timer : Indicates the starting time.
"----" indicates that the Program key contains "non-deferred" program.
- (5) Destination(s) : The destination's station name(s).


Journals and Lists

FAX Parameter List


To print a FAX Parameter List:

Make sure that the FAX lamp is ON. If not, press  to select the "FAX MODE".

1

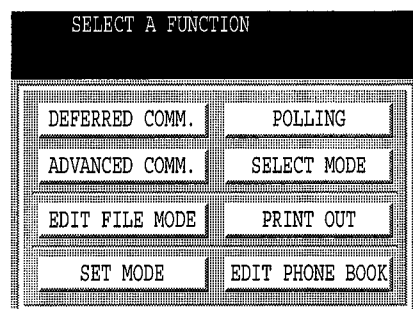

2

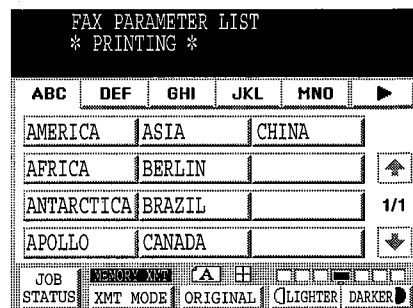

Journals and Lists

Sample FAX Parameter List

***** -FAX PARAMETER LIST- ***** DATE 15-AUG-2001 ***** TIME 15:00 *** P.01

(1) PARAMETER NUMBER	(2) DESCRIPTION	(3) SELECTION	(4) CURRENT SETTING	(5) STANDARD SETTING
(7)001	CONTRAST (HOME)	(1:Lighter 7:Darker)	4	4
* 002	RESOLUTION (HOME)	(1:Standard 2:Fine 3:S-Fine)	2	1
003	ORIGINAL (HOME)	(1:Text 2:T/P 3:Photo)	1	1
099	MEMORY SIZE (FLASH)		(2MB + 4MB)	(6)

-PANASONIC-

***** -HEAD OFFICE - ***** 201 555 1212- *****




Explanation of contents

- | | | |
|---|----------------------|---|
| (1) Parameter number | (4) Current setting | : "----" indicates code or password is not set. When the code or password is set, it is shown in parenthesis. |
| (2) Description : "(HOME)" means home position setting. | (5) Standard setting | : Factory preset standard setting |
| (3) Selection | (6) Memory size | : (Base memory + option memory) |
| | (7) Changed setting | : "*" indicates that the Factory preset setting was changed. |

This page is intentionally left blank.

Troubleshooting

If You Have Any of These Problems

Mode	Symptom	Cause / Action	Page
During Transmission	Document doesn't feed/multiple feeds	1. Check that your document is free of staples and paper clips, and that it is not greasy or torn. 2. Check that your document is the right type to send through an ADF by consulting the list on "Originals You Cannot Send". If your document has the characteristics listed, use the Platen instead. 3. Check that the document is loaded properly.	37
	Does not stamp	Check Fax Parameter No. 004 and No. 028 settings.	33, 34
	Stamp too light	Replace stamp or refill ink.	171
Transmission Copy Quality	Vertical lines on the transmitted document	Check own copy quality. If copy is OK, your machine has no problem, report to the receiving party that they have a problem. If copy is NG, clean the Scanning Area.	--
	Transmitted document is blank		
During Reception	 : Add Paper	Replenish the recording paper.	--
	Recording paper misfeed	Remove the misfed paper. (See Operating Instructions (for Copier page 58))	--
	Recording paper doesn't advance into machine	Make sure that there is paper in the Paper Tray(s). Follow the instructions for loading paper.	--
	Recording paper doesn't eject after printing	Check to see if the recording paper has misfed inside of the machine.	--
	Document auto reduction doesn't work	Check Print Reduction settings.	68
	 : Add Toner	Replace the Toner Cartridge.	--
	 : No Waste Toner Box	Install the Waste Toner Box.	--

Troubleshooting

Mode	Symptom	Cause / Action	Page
Communication	No dial tone	1. Check the connection of the telephone line. 2. Check the telephone line.	9
	No auto answer	1. Check the connection of the telephone line. 2. Check the Reception mode setting. 3. If the Fax Parameter No. 013 (AUTO JOURNAL PRINT) is set to "Valid" (default setting) and the machine is printing the received document(s) from memory, which also happens to be the 100th transaction, the machine will not auto answer until the Transaction Journal completes printing.	173 66
	Cannot transmit or receive	An information code will be shown on the display. Refer to the information code table to find out the trouble.	171
No Unit Operation	No unit operation	To reset the machine, turn-off the Power Switch for a few seconds then turn it on again.	9

Troubleshooting

Information Codes

When something unusual occurs, the display may show one of the Information Codes listed below. These will help you to identify and correct the problem.

Info. Code	Meaning	Action	Page
400	During initial handshake, receiving station did not respond or communication error occurred.	1. Check with the other party. 2. Reload the document(s) and send again.	--
401	Remote station required a Receiving Password to receive the original. Remote station does not have Confidential Mailbox.	Check the remote station.	--
402	During initial handshake, communication error occurred.	Reload the document(s) and send again.	--
403	No polling capability at the remote side.	Ask remote side to set "POLLED=ON".	--
404/405	During initial handshake, communication error occurred.	Reload the document(s) and send again.	--
406	Transmission Password does not match. Receiving Password does not match. Received from an unauthorized station in Selective Reception mode.	Check the password or the telephone number in the Phone Book.	127 130 132
407	No confirmation from the receiving station for the previous page sent.	Wait a few minutes and send again.	--
408/409	Remote side confirmation of previous page is illegible.	Wait a few minutes and send again.	--
410	Communication aborted on the transmitting side.	Check with the other party.	--
411	Polling password does not match.	Check the polling password.	34
412	No data from the transmitting side.	Check with the other party.	--
414	Polling password does not match.	Check the polling password.	34
415	Polling transmission error.	Check the polling password.	34
416/417 418/419	Received data has too many errors.	Check with the other party.	--
420/421	Machine goes to receiving mode, but receives no command from the transmitting side.	1. Remote side misdial. 2. Check with the other party.	--
422/427	Interface is incompatible.	Check with the other party.	--
430/434	Communication error occurred while receiving.	Check with the other party.	--
436/490	Received data has too many errors.	Check with the other party.	--
456	<ul style="list-style-type: none"> Unit received a confidential document or was requested to be polled of a confidential document under any of following conditions. <ol style="list-style-type: none"> Not enough space in memory to receive the confidential document. Confidential Mailbox is full. While printing received document(s). Unit was requested to relay a document. 	1. Print a File List and check the contents. 2. Wait until unit finishes printing.	89
492/493 494	Communication error occurred while receiving.	Check with the other party.	--
495	Telephone line disconnected.	Check with the other party.	--

Troubleshooting

Info. Code	Meaning	Action	Page
501/502	Communication error occurred using the internal V.34 Modem.	Check with the other party.	--
540/541 542 543/544	Communication error occurred while transmitting.	1. Reload the document(s) and send again. 2. Check with the other party.	--
550	Telephone line disconnected.	Check with the other party.	--
552/553 554/555	Communication error occurred while receiving.	Check with the other party.	--
580	Sub-Address transmission to a unit that has no Sub-Address function.	Check the remote station.	147
581	Sub-Address Password transmission to a unit that has no Password Sub-Address function.	Check the remote station.	147
630	Redial was not successful due to a busy line.	Reload the document(s) and send again.	--
631	During dialling, STOP was pressed.	Reload the document(s) and send again.	--
634	Redial was not successful due to no response from the called station or wrong number dialed. Note: If busy tone was not detected, the machine will only redial once.	Check the telephone number and send again.	--
638	Power failure occurred during the communication.	Check the power cord and plug.	--
870	Memory overflow occurred while storing document(s) into memory for transmission.	1. Transmit document(s) without storing into memory. 2. Install Optional Memory Card.	48 --

NOTE

- After identifying the problem and verifying the recommended action, if the Information Codes keep reoccurring or for help on Information Codes that appear on your machine but are not listed above, please contact your local Authorized Panasonic Dealer.
(For mechanical failures, see the Troubleshooting section in the Operating Instructions (For Copier page 66))


Troubleshooting

Verification Stamp

The Verification Stamp contains ink. When the stamp mark appears faded or hard to see, the stamp should be replaced.


To remove the stamp

1

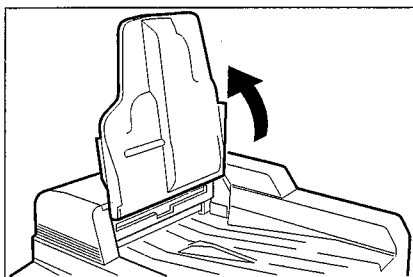


Open the ADF Input Tray.

2

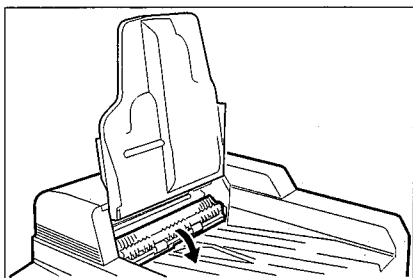

Open the ADF Exit Cover.


3

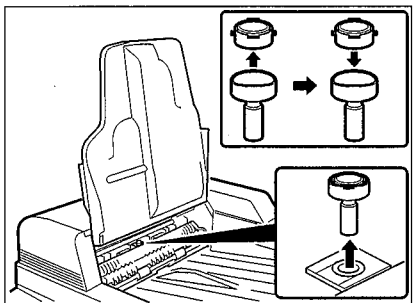

(1) Remove by pulling the Stamp Assembly upward.

(2) Remove the Stamp. Replace the stamp with a new one.

4

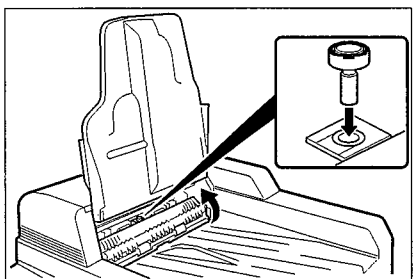

Reinstall the Stamp Assembly.


NOTE

1. Please contact your local Authorized Panasonic Dealer to purchase a new stamp. See page 72 of the Operating Instructions (For Copier) for order number.

Troubleshooting


If you do not hear a dial tone when the **MONITOR** key is pressed or the incoming call does not ring on your machine (No automatic receive).

1

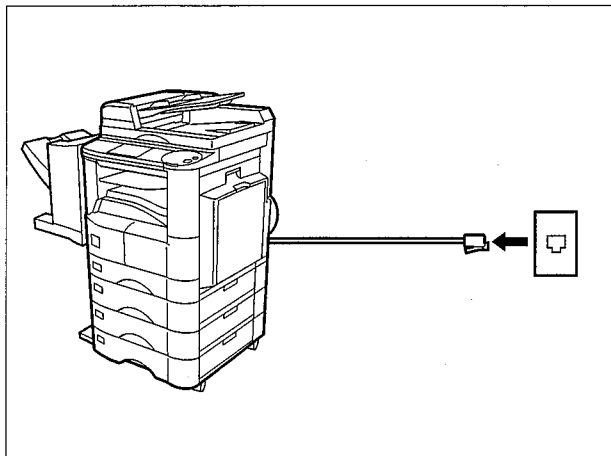


Unplug the Telephone Line Cable from the telephone jack that was supplied by the telephone company.

2

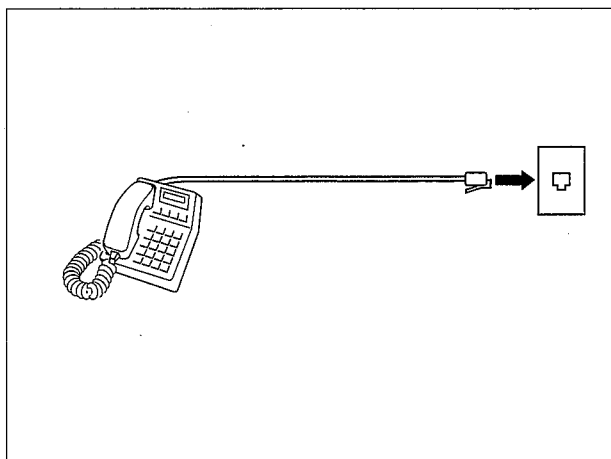

Plug a different regular telephone into the same telephone jack.

3

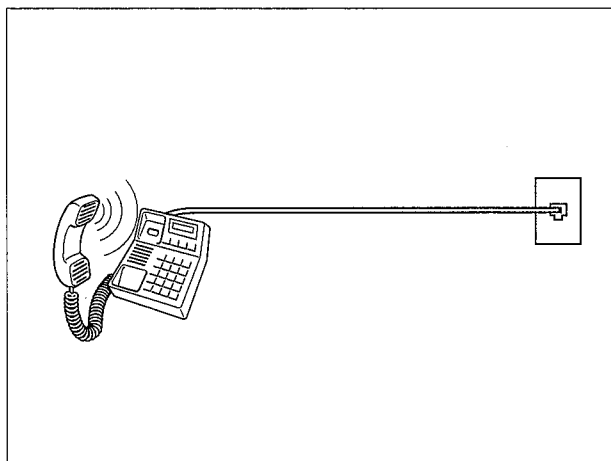


Check for dial tone through the handset. If there is still no dial tone, report it to your local telephone company.

or

Call from another telephone to this number. If the telephone does not ring, report it to your local telephone company.

Specifications

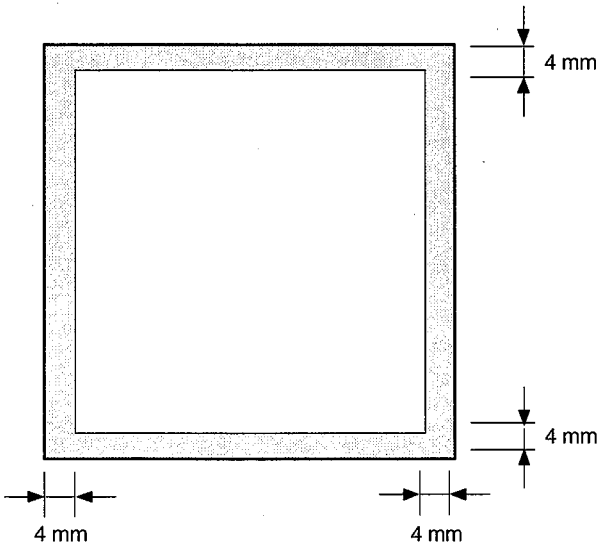Compatibility	ITU-T Group 3
Coding Scheme	JBIG, MH, MR, MMR (Conforms to ITU-T Recommendations)
Modem Type	ITU-T V.34, V.17, V.33, V.29, V.27ter and V.21
Modem Speed	33600 - 2400 bps
Original Size	A3/FLS-B4/A4/A5
Original Thickness	0.07 mm (50 g/m ²) - 0.15 mm (110 g/m ²)
ADF Capacity (Automatic Document Feeder)	Up to 50 sheets (A4, A5 : 64 g/m ²) Up to 30 sheets (A3,FLS-B4 : 64 g/m ²)
Scanning Method	Sheet Feeding or Flatbed with CCD type image sensor
Effective Scanning Width	292 mm
Scanner Resolution	Horizontal: 8 pels/mm : Standard and Fine Resolution : 16 pels/mm : Super Fine Resolution Vertical : 3.85 lines/mm : Standard Resolution : 7.7 lines/mm : Fine Resolution : 15.4 lines/mm : Super Fine Resolution
Print Margin	

Specifications

Phone Book Memory Capacity	200 stations Each station can register up to 36 digits for each telephone number (including pauses and spaces) and up to 15 characters for each station name																						
Image Memory Capacity	<table><tr><td>Base Memory</td><td>120 pages</td></tr><tr><td>with 4 MB Flash Memory Card</td><td>440 pages</td></tr><tr><td>with 8 MB Flash Memory Card</td><td>760 pages</td></tr></table> <p>(Based on ITU-T Image No. 1 chart, using Standard Resolution)</p>			Base Memory	120 pages	with 4 MB Flash Memory Card	440 pages	with 8 MB Flash Memory Card	760 pages														
Base Memory	120 pages																						
with 4 MB Flash Memory Card	440 pages																						
with 8 MB Flash Memory Card	760 pages																						
Power Consumption	<table><tr><td></td><td></td><td>(200 V Version,</td><td>100 V Version)</td></tr><tr><td>Normal Operation Mode:</td><td>Approx.</td><td>175 Wh,</td><td>175 Wh</td></tr><tr><td>Energy-Saver Mode</td><td>: Approx.</td><td>67 Wh,</td><td>74 Wh</td></tr><tr><td>Sleep Mode</td><td>: Approx.</td><td>3.5 Wh,</td><td>2.9 Wh</td></tr><tr><td>Maximum</td><td>: Approx.</td><td>1.4 kW,</td><td>1.4 Wh</td></tr></table>					(200 V Version,	100 V Version)	Normal Operation Mode:	Approx.	175 Wh,	175 Wh	Energy-Saver Mode	: Approx.	67 Wh,	74 Wh	Sleep Mode	: Approx.	3.5 Wh,	2.9 Wh	Maximum	: Approx.	1.4 kW,	1.4 Wh
		(200 V Version,	100 V Version)																				
Normal Operation Mode:	Approx.	175 Wh,	175 Wh																				
Energy-Saver Mode	: Approx.	67 Wh,	74 Wh																				
Sleep Mode	: Approx.	3.5 Wh,	2.9 Wh																				
Maximum	: Approx.	1.4 kW,	1.4 Wh																				

Options and Supplies

The DP-2500/3000 is a digital photocopier which can produce images with great clarity. Furthermore, its copying functionality can also be greatly enhanced by the addition of specially selected options and supplies. For a list of available options and supplies, see the Operating Instructions (For Copier).

Glossary

ADF (Automatic Original Feeder)	The mechanism that delivers a stack of original pages to the scanner one page at a time.
Automatic Reception	The mode that allows you to receive fax documents without user intervention.
Auto Print Reduction	The method of automatically reducing a received document so that it can be printed onto a standard size piece of plain paper. For example, your machine will reduce an incoming legal size page to 75% of its original size so it could fit on a letter size page.
Batch Transmission	The ability to accumulate different document files for the same destination(s) to be transmitted in a single phone call.
BPS (Bits Per Second)	The amount of data that is transmitted over the phone line. Your machine can start at the Max. Modem speed and automatically steps down to suitable speed depending on the phone line condition and the receiving machines capabilities. (Max. Modem Speed is 33600 BPS)
C.C.I.T.T.	Consultative Committee on International Telegraph and Telephone. This organization has presently developed four groups of industry standards that insure facsimile compatibility.
Character ID	A programmed proprietary code name that allows up to 16 alphanumeric characters identifying your facsimile machine.
Coding Scheme	The data compression method used by facsimile machines. Your machine utilizes Modified Huffman (MH), Modified Read (MR), Modified Modified Read (MMR) and Joint Bi-level Experts Group (JBIG) coding schemes.
Comm. Journal	Refers to either the Communication Journal, Relay Transmission Report, or the Confidential XMT Report.
Confidential RCV Report	The report that gives you information about a confidential document(s) that is held in your machine's memory.
Contrast	Signifies the scanning sensitivity in terms of lightness and darkness of your original transmitting pages.
Cover Sheet	A Fax Cover Sheet can be attached to your transmit document(s) that shows the recipient's name, originator's name and number of pages attached.
DDD (Direct Distance Dialling)	A telephone service that allows unassisted dialling, no operator assistance is required.
Deferred Polling	The ability to retrieve documents from other stations at a later time.
Deferred Transmission	The ability to send documents to other stations at a later time.
Department Code	This operation require the user to input a preset 4-digit Department Code before transmission. The Department Name of selected Department Code is printed on the Header of each page sent, Cover Sheet, Comm. Journal and Individual Transmission Journal.
Direct Dialling	The method of dialling where you enter the entire telephone number through the keypad.
DTMF (Dual Tone Multi-Frequency)	Dialling method that sends a different set of frequencies for each digit of the telephone keypad. Commonly refers to touch tone dialling.



Glossary

Duplex Scan	The ability to scan both sides of 2-sided original(s) for transmission.
ECM (Error Correction Mode)	The ability to correct transmission errors as detected during the transmitting phone call.
End Receiving Station	In a relay network, the final station designated to receive the document(s).
FAX Parameter List	The list that contains the home Fax Parameter settings that you have programmed into your machine.
F.C.C.	Federal Communications Commission. The U.S. Government organization that regulates communications originating or terminating in the United States.
File	A task that has been stored into the memory of your unit. Examples are deferred transactions.
Fixed Print Reduction	The method that allows you to determine one reduction rate, such as 75%, for all incoming documents.
Function	The control panel key that will be utilized to begin an operation or configuration of a feature.
G3 Mode (Group 3)	Refers to the standards and transmission capabilities of the current generation of facsimile machines.
Group Dialling	The ability to program many telephone numbers into a single station so that many locations can be dialled in sequence utilizing a single keystroke.
Handshaking	The exchange of a group of control signals that communicate between the transmitter and receiver. These signals determine the condition at which communication can occur.
Header	A row of information that is transmitted by the sending machine and printed on the top of each page by the receiving unit. This identifies the transmitting unit and information about the transmission, such as time and date.
ITU-T	International Telecommunication Union - Telecommunication, formerly known as C.C.I.T.T.
ITU-T Image No. 1	An industry standard original that allows comparisons of the transmission speeds and capabilities of facsimile machines.
ID	A programmable address of up to 20 digits identifying your machine.
Image Memory Capacity	This signifies the amount of memory available in your machine for storing pages of documents. All page units of measure are based on the ITU-T Image No.1.
Index Keys	A series of alphabetized keys for easy access to the stations programmed in the Phone Book.
Individual Transmission Journal	A report that is printed by the transmitting unit stating information regarding the last document transaction.
Industry Canada (D.O.C)	Department of Communications. The Canadian Government organization that regulates communications originating or terminating in Canada.
Information Code	A code that is internally generated by your Fax machine stating a specific operational error or machine failure.

Glossary

Initial Sending Station	In a relay network, the station that is originating the original transmission.
Journal	A report that is printed by your unit listing the last 100 transactions.
Key Name	An alternate to the station name that can be programmed for each Phone Book dialling number key. (By default it displays the first 10-characters of the station Name)
Keypad	A group of numeric keys located on your control panel.
LCD	Liquid Crystal Display. The display area of your machine.
Manual Reception	A mode that requires operator intervention to receive an incoming document.
Memory Transmission	The documents are scanned into memory before actual connection to the phone line for transmission.
Modem	A device that converts signals from your fax machine into signals that can be transmitted over telephone lines.
Multi-Station Transmission	The ability to broadcast the same set of documents to a programmed number of locations.
Off-Hook Dialling	The direct dialling of a telephone number with the optional handset out of the cradle or "off the hook."
On-Hook Dialling	The direct dialling of a telephone number with the optional handset in the cradle or "on the hook."
Overlap Printing	Documents too long to be reduced are automatically printed on two pages with approximately 13 mm overlap.
Panasonic Super Smoothing	An electronic image enhancement (Panasonic Super Smoothing) that will create a particular pattern for the improvement of copy quality.
Phone Book Number	The ability to store full phone numbers into the dialer and then utilizing a single keystroke to speed dial that number in the future.
Photo	A scanning technique to distinguish levels of gray from black and white. Your machine can detect up to 256 levels of gray in photo mode.
Polling	The ability to retrieve document(s) from another facsimile machine.
Polling Password	A 4-digit programmed code that enables the security of document(s) being polled.
Print Reduction Modes	The methods used to determine how an incoming document will be reduced to print onto the paper loaded in your machine.
Program Keys	Keys that are defined for storing a sequence of stations to be dialled or polled.
Protocol	A protocol is the special set of rules for communicating that the end points in a telecommunication connection use when they send signals back and forth. Both end points must recognize and observe the protocol.
PSTN	Public Switched Telephone Network. Network of interconnected switching equipment and transmission facilities.
Qwerty Keyboard	A keyboard on the Touch Panel Display that is used to enter letters and symbols for various programming functions.

Glossary

Receiving Password	A 4-digit password that is checked before a document is received.
Relay Transmission Report	A report that contains information regarding the last document transmission to a relay station.
Rotation XMT	The document is set as (← ) , the image is rotated by 90° and then transmitted as (← ) .
Selective Reception	A function that can be set so that your unit will receive from only those machines programmed into your dialer.
Station Name	Alphanumeric ID which can be programmed for each Phone Book dialling number.
Stored Originals	Documents that have been scanned and now are stored in your machine's memory.
Sub-Address	ITU-T recommendation for further routing, forwarding or relaying of incoming faxes.
Sub-Address Password	ITU-T recommendation for additional security that corresponds to the Sub-Address.
Substitute Memory Reception	Your machine's ability to store an incoming document into its memory, when it runs out of recording paper or toner.
Transmission Reservation	The ability to preset a telephone number so that you may reserve a transmission while your unit is performing another function.
Transmission Password	A 4-digit password that is checked when a document is transmitted.
User Parameter	Programmed parameters that provide information to other stations. Examples are logo, character ID, date and time.
Verification Stamp	A user selectable transmission verification stamp that stamps an "X" mark on the scanned documents that are successfully transmitted or stored in memory.
View Mode - File List	Allows you to view the brief contents of the memory files through the LCD display without having to print the Memory File List.
View Mode - Journal	Allows you to view the brief contents of the journal through the LCD display without having to print the journal.

This page is intentionally left blank.

Index

A

Adding Documents Into a File	97
Adding Telephone Numbers	25
Adjusting the Volume	16
Auto Journal Print.....	34
Automatic Reception	66
Automatic Redialling	65
Automatic Reduction	68

B

Basic Transmission Settings	38
Batch Transmission.....	71

C

Changing the Department Code	114
Changing the Start Time or the Station of a File ..	91
Character ID.....	21
Checking the Telephone Line	173
Comm. Journal.....	33
Communication Journal (Comm. Journal)...	40, 160
Compatibility with Other Machines.....	129, 136
Conf. Polled File Save.....	34
Confidential Code.....	136
Confidential Communication	136
Confidential Mailbox.....	136
Contrast.....	33, 38
Control Panel	10
Cover Sheet	35, 109
Customizing Your Machine	31

D

Deferred Advanced Communication	76
Deferred Polling	74
Deferred Transmission	72
Delayed Batch Transmission	71
Deleting a Confidential Document Stored in Your Machine's Mailbox.....	145
Deleting a File	93
Deleting the Department Code.....	116
Department Code.....	35, 110
Diagnostic Password.....	35
Dialling Method	33
Dialling Method (Tone or Pulse).....	13
Direct Transmission	48
Direct Transmission Reservation	63
Directory Dialling Numbers	25
Distinctive Ring Detector (DRD).....	106
Double-Sided Transmission (Receiving).....	50
Duplex Print.....	36
Duplex Scan.....	53

E

Edit File Mode	89
Editing for Group Dialling	85

Editing the Phone Book.....	27
Erasing the Program Key Settings	87
External View	9

F

Fax Cover Sheet	107
FAX Parameter List.....	166
Fax Parameter Table.....	33
File Acceptance Report.....	34
File List.....	89
Fixed Reduction	68
Flatbed Scanning	37
Function Key	8

G

General Description.....	107, 110, 129, 147
Group and Program List.....	164

H

Header Format	33
Header Print	33
How to Load Originals	37

I

ID Number.....	23
If You Have Any of These Problems	169
Image Memory Capacity	176
Incomplete File Save.....	34
Individual Transmission Journal (Ind. XMT Journal).....	157
Information Codes	171

J

Journals and Lists	155
--------------------------	-----

K

Key/Buzzer Volume.....	33
------------------------	----

L

Line Selection.....	36
List Output Tray.....	36
Loading Originals	37
Logo	19

Index

M

Manual Number Dialling.....	44
Manual Number Dialling (Direct Transmission)....	48
Manual Reception	66
Manual Redialling.....	65
Memory	33
Memory Size (Flash Memory)	36
Memory Transmission.....	42
Memory Transmission Reservation (Multi-Tasking)	61

O

Off-Hook Dialling	57
On-Hook Dialling	59
Original.....	33
Original (Text/Photo)	39

P

Password Communications.....	129
Password Reception	129, 132
Password Transmission.....	129
Password-RCV.....	35
Password-XMT.....	34
PC-Fax RCV Mode	35
Phone Book.....	25
Phone Book Dialling.....	46
Phone Book List	162
Polled File Save	34
Polling	77
Polling a Confidential Document from a Remote Station's Mailbox	139
Polling Documents from Another Station	79
Polling Password.....	34
Power Consumption.....	176
Preparing to be Polled.....	77
Print Margin.....	175
Print Reduction.....	34, 68
Printing a Confidential Document from Your Machine's Mailbox.....	144
Printing a Department Code Journal.....	123
Printing a Department Code List.....	121
Printing Out a File	95
Printing Out Documents.....	104
Priority Transmission Reservation	63
Program Keys	81

Q

Quick Memory XMT	35
------------------------	----

R

Ratio.....	68
RCV Output Tray.....	35
RCV to Memory.....	34
RCV'D Time Print.....	33

Real-Time Batch Transmission	71
Receive Mode	34
Receive To Memory	101
Receiving a Confidential Document into Your Machine's Mailbox	141
Receiving Originals	66
Receiving Oversize Documents	69
Redial	65
Reduction Ratio.....	34
Resolution	33, 38
Retry an Incomplete File	99
Ringer Volume	15, 35
Rotated Transmission	50
Rotation XMT	35
Rreceiving Password	132

S

Safety Information	4
Select RCV.....	35
Selecting the Print Reduction Mode.....	68
Selective Reception	127
Sending a Confidential Document to a Remote Station's Mailbox	137
Sending a Document with Department Code	118
Sending a Document with Department Code (Voice Mode Transmission)	119
Sending a Fax with Sub-Address.....	150
Sending Document(s) Using Duplex Scan.....	53
Sending Documents.....	42
Sending Non-Standard Size Originals	37
Setting Duplex Print	55
Setting for Group Dialling	81
Setting for Program Dial.....	83
Setting Password Transmission.....	130
Setting RCV To Memory	102
Setting the Date and Time	17
Setting the Department Code.....	110
Setting the Department Code Name	112
Setting the Fax Parameters	31
Setting the Monitor Volume.....	16
Setting the RCV To Memory Password	101
Setting The Ringer Volume and Monitor Volume	15
Setting the Rotation XMT	51
Setting the Sub-Address into a Phone Book Numbers	148
Setting Your Character ID	21
Setting Your LOGO	19
Special Tray	36
Stamp.....	33
Stamp at Mem. XMT	34
Storing a Confidential Document in Your Machine's Mailbox.....	142
Sub-Address Password.....	35
Sub-Addressing.....	147

Substitute Memory Reception	70
Substitute RCV	34

T

Timer Controlled Communications	72
To Use the Fax Cover Sheet	107
Transaction Journal	155
Transmission Password	130
Transmission Reservation	61
Troubleshooting	169

U

Use Sub-Address Temporarily	152
User Parameters	19, 20
Using Manual Number Dialling	151
Using Password Reception	135
Using Password Transmission	134

V

Verification Stamp	39, 173
Voice Mode Transmission	57

X

XMT Reduction	34
---------------------	----

For Service Call: _____

Matsushita Electric Industrial Co., Ltd.
Osaka 542-8588, Japan

DZSD001095-1 T0800-1031
March 2001
Printed in Japan

English