



NAVMAN




 
S-Series



# User Manual

# Important safety information

## PLEASE READ CAREFULLY BEFORE INSTALLING PRODUCT IN VEHICLE

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
	CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Removing original equipment, adding accessories or modifying your vehicle could affect the vehicle's safety or make it illegal to operate in some jurisdictions.

Follow all product instructions and all instructions in your vehicle owner's manual regarding accessories or modifications.

Consult your country's and/or state's laws regarding operation of a vehicle with any accessories or modifications.

It is your sole responsibility to place, secure and use the Navman in a manner that will not cause accidents, personal injury or property damage. Always observe safe driving practices.

Do not mount the Navman in a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.

Do not operate the Navman while driving.

Before you use the Navman for the first time, familiarize yourself with your device and its operation.

 
On main roads, the distance to an exit calculated by the Navman may be further than the distance shown on road signs. Road signs show the distance to the start of an exit while the Navman shows the distance to the next intersection, i.e., the end of the exit ramp or road. To prepare to exit a road, always follow distance information on road signs.

The use of information regarding safety or speed camera locations may be subject to local laws in the country of use. You are responsible for checking that you can legally use the information in your country or in the country where the information will be used.



Do not handle the Navman while it is hot. Let the product cool, out of direct sunlight.

At full power, prolonged listening to the Navman via headphones or earphones can damage the ear of the user.



Do not expose the Navman to direct sunlight in an unattended vehicle for prolonged periods. Overheating may damage the unit.

**To discourage theft, do not leave the Navman, mounting bracket or any cables in plain view in an unattended vehicle.**

## AC Adapter-specific safety information



To charge your Navman from the mains power, use the mains power charger (Model: PSAA05R-050; Input: 100-240V AC 50-60Hz; Output: 5V DC 1A Max) supplied by Navman as an accessory (may be sold separately). Using other mains power chargers with your Navman could result in serious injury or property damage.

Never use the charger if the plug or cord are damaged.

Do not expose the charger to moisture or water. Do not use the charger in a high moisture environment. Exposure to water may cause electrical sparks or fires.

Never touch the charger when your hands or feet are wet.

Allow adequate ventilation around the charger when using it to operate your Navman or charge the Navman internal battery. Do not cover the charger with paper or other objects that will reduce ventilation. Do not use the charger while it is inside a carrying case or other container.

Ensure that the charger is connected to a power source with the correct fitting and voltage requirements. The voltage requirements can be found on the mains power charger casing and/or packaging.

Do not attempt to service the charger as this could result in personal injury. Replace the charger if it is damaged or exposed to excess moisture.

## Internal battery-specific safety information



The Navman contains a non-replaceable internal lithium-ion polymer battery. The battery may burst or explode if mishandled, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush or puncture the battery.

Recycle or dispose of the battery safely and properly according to local laws and regulations. Do not dispose of the battery in fire or water.



Only use the correct mains power charger (sold separately) or in-vehicle charger supplied by Navman to charge the Navman internal battery.

Only use the Navman internal battery with the Navman unit.

The Navman battery will stop charging when the ambient temperature is less than 0°C (32°F) or more than 45°C (113°F).

### Warning Notice to Drivers in California and Minnesota

State law prohibits drivers in California and Minnesota from mounting objects on their windshields while driving. Other Navman mounting options are recommended and an alternative mounting option is included in this box. Navman does not take any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice. See California Vehicle Code Section 26708(a); Minnesota Statutes 2005, Section 169.71.

**Failure to adhere to these warnings and cautions may lead to death, serious injury or property damage. Navman disclaims all liability for installation or use of the Navman that causes or contributes to death, injury or property damage or that violates any law.**

# Contents

Important safety information.....	2
Welcome.....	7
Important information for using the manual .....	7
Getting to know your Navman.....	8
Components .....	8
How do I get started? .....	10
How do I turn my Navman on for the first time? .....	10
How do I adjust the volume?.....	13
How do I monitor the battery status?.....	13
How do I turn my Navman off?.....	14
What are the main screens I will use?.....	15
Main Menu screen .....	15
Map screens .....	15
How do I navigate with GPS? .....	16
How do I go from A to B? .....	17
What if I miss a turn? .....	17
How do I search for an address? .....	18
Case Study: How do I search for an address?.....	18
Using the <i>Keyboard</i> screen .....	20
Using the <i>Destination Search</i> screen.....	20
How do I create a trip with multiple stops? .....	22
Case Study: How do I navigate to multiple addresses? .....	22
How do I skip a waypoint during a multi-stop trip? .....	26
How do I search for a Point of Interest (POI)?.....	27
Case Study: How do I search for a Point of Interest?.....	27
How do I save Favourites and My Home?.....	30
How do I save a Favourite or My Home? .....	30
How do I navigate to a Favourite?.....	31
How do I navigate to My Home?.....	31
How do I edit the name of a Favourite? .....	32
How do I delete a Favourite? .....	32
How do I navigate to a recent location? .....	33
How do I view my route?.....	34
3D Map screen .....	34
2D Map screen .....	36
Traffic Overview screen .....	38
Route Overview screen.....	40
Turn-by-Turn screen .....	42
How do I use the Map Menu? .....	44
How do I avoid an area? .....	45
How do I add an Avoid Area? .....	45
How do I delete an Avoid Area? .....	45
How do I delete all Avoid Areas? .....	45
How do I preview a route? .....	46
How do I view my route statistics? .....	47
How do I view statistics on my current route? .....	47
How do I view statistics of my trips to date?.....	48
How do I view my trip logs? .....	48
How do I use the camera? .....	49
How do I take a <b>NavPix</b> ?.....	49

Viewfinder screen .....	50
How do I customize camera preferences? .....	51
How do I manage my <b>NavPix</b> ? .....	52
Album management .....	52
<b>NavPix</b> management .....	54
How do I navigate to a <b>NavPix</b> ? .....	56
How do I save a <b>NavPix</b> to a favourite? .....	57
How do I save a <b>NavPix</b> to a POI? .....	58
How do I save, e-mail or print <b>NavPix</b> ? .....	59
Via NavAlbum .....	59
Via Memory Card .....	59
Hands-free Calling .....	60
Pairing your Navman with a Bluetooth mobile phone .....	60
Making a phone call using the <i>Phone Dialler</i> screen .....	60
Making a phone call to a contact in your phonebook .....	61
Receiving a phone call .....	61
Switching calls between your mobile phone and your Navman (hands-free) .....	61
How do I view my call history? .....	62
How do I view my SMS/text messages? .....	63
Receiving a message .....	63
Traffic .....	64
How does my Navman receive traffic information? .....	64
How will I know when a Traffic Event occurs? .....	65
How do I view a list of all events on my route? .....	66
How do I view traffic details? .....	67
How do I know if a detour is recommended? .....	68
Traffic Messages .....	69
What can I customize? .....	70
Route Options .....	71
Route Calculation 1/4 .....	71
Road Types 2/4 .....	72
Driver Alerts 3/4 .....	73
Data Recording 4/4 .....	74
Map Display .....	75
Map Display 1/3 .....	75
Map Display 2/3 .....	76
Select Map 3/3 .....	77
Map POIs .....	78
Volume .....	79
Screen .....	80
POI Alerts .....	81
GPS .....	82
GPS Status .....	82
Setting your GPS mode .....	83
Language .....	84
Traffic .....	85
Traffic System Status .....	85
Traffic Event Notification .....	86
Select event sorting type .....	87
Power .....	88
Keyboard .....	89
How does predictive text (abc, def...) work? .....	89
Units .....	90
Units 1/2 .....	90
Units 2/2 .....	91
Start-up .....	92
Saved Info .....	93
Bluetooth Settings .....	94
Bluetooth On/Off .....	94
Phonebook setup .....	95
SMS Setup .....	96
Hands-free Setup .....	97
Tutorial .....	98

About .....	99
Shop Demo .....	99
What is NavDesk? .....	100
Can I use NavDesk with my computer? .....	100
How do I install a map for the first time? .....	100
How do I install NavDesk onto my computer? .....	101
NavDesk features .....	102
How do I keep NavDesk up-to-date? .....	103
NavDesk Preferences .....	103
My Maps .....	104
How do I install maps onto my Navman? .....	105
How do I install maps from DVD? .....	106
How do I remove maps from my Navman? .....	108
How do I know which map contains a particular city or town? .....	108
My Map Preferences .....	108
What is a Major Road Network map? .....	109
NavAlbum .....	110
Toolbar .....	111
How do I use NavAlbum? .....	112
How do I copy <b>NavPix</b> or albums from my Navman to NavAlbum? .....	112
How do I transfer pictures from NavAlbum to my Navman? .....	112
How can I view and edit pictures or albums on my computer? .....	112
What else can I do with pictures and albums on my computer? .....	113
NavAlbum Preferences .....	114
Image Search .....	115
How do I download <b>NavPix</b> from the internet? .....	115
How do I import <b>NavPix</b> to NavAlbum? .....	115
Mileage Reporter .....	116
How do I input my trip data? .....	116
How do I export a mileage report? .....	116
How do I delete travel logs from my Navman? .....	117
Mileage Reporter preferences .....	117
My subscriptions .....	118
Alerts .....	118
How do I install Safety Camera information? .....	118
How do I know which Safety Camera information is available? .....	118
Purchase a Subscription .....	118
Activate your Subscription .....	119
How do I update Safety Camera information on my Navman? .....	119
Custom POIs .....	120
How do I install custom Points of Interest? .....	120
How do I delete a Custom POI File from my Navman? .....	121
Voice Transfer .....	122
How do I install a voice file? .....	122
How do I remove a voice file? .....	122
PIN Security .....	123
How do I register my Navman and set a PIN? .....	123
How do I remove the PIN from my Navman? .....	123
What if I forget the PIN for my Navman? .....	124
How do I backup my Navman? .....	125
Reference .....	126
How do I insert a Memory Card? .....	126
How do I remove a Memory Card? .....	126
Remote Control .....	127
Point of Interest categories .....	128
Traffic and other TMC Events .....	130
For more information .....	132

# Welcome

Thank you for purchasing this Navman. This manual has been prepared to guide you through the operation of your Navman from first set-up through to continuous use. Please read this manual carefully before using your Navman for the first time. Keep this manual in a safe place and use as your first point of reference.

## Important information for using the manual

It is important to understand the terms and typographical conventions used in this manual.



### Formatting

The following formatting in the text identifies special information:

Convention	Type of Information
<b>Bold</b>	Navman components or items displayed on screen, including buttons, headings, field names and options.
<i>Italics</i>	Indicates the name of a screen.

### Icons

The following icons are used throughout this manual:

Icon	Description
	Case study
	Warning

### Terms

The following terms are used throughout this manual to describe user actions.






Term	Description
Press	Press and release a button quickly.
Press and hold	Press and hold a button for 2-3 seconds.
Tap	Press and release an item displayed on the touch screen.
Tap and hold	Tap and hold an item displayed on the touch screen for 2-3 seconds.
Select	Tap an item in a list or tap a command from a menu.

## Getting to know your Navman

We recommend that you familiarize yourself with the Navman's basic operations.

 
### Components





	Component	Description
<b>1</b>		Turns the camera on and displays the <i>Viewfinder</i> screen. Press again to take a <b>NavPix™</b> .
<b>2</b>	<b>Battery Indicator</b>	Indicates the level of battery charge: <ul style="list-style-type: none"> <li>Green - battery full</li> <li>Orange - battery charging.</li> </ul>
<b>3</b>		Turns the Navman on or off. For more information, see "How do I turn my Navman off?" on page 13.
<b>4</b>		Connection socket for GPS MMCX External Antenna (not included). To access the socket, gently lift the rubber cover.
<b>5</b>		Connection socket for microphone. To access the socket, gently lift the rubber cover.
<b>6</b>		Connection socket for headphones or earphones (not included). To access the socket, gently lift the rubber cover. Depending on your Navman model, this may also be the connection socket for your traffic antenna.
<b>7</b>	<b>Infrared receiver</b>	Receives signals from the remote control. <b>Note:</b> The remote control is not supplied with all models.

**Note:** Numbers highlighted red are not available on all models.

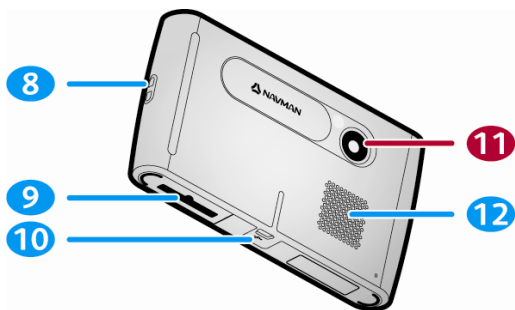



	Component	Description
8	Lanyard loop	Loop for connecting a lanyard. <i>Note: Lanyard sold separately.</i>
9		Slot for memory card. The memory card must be inserted with the label facing the front of your Navman. For more information, see “How do I insert a Memory Card?” on page 126. <i>Note: Memory cards may be sold separately.</i>
10		Connection socket for the following: <ul style="list-style-type: none"><li>▪ Cradle</li><li>▪ USB cable to connect to your computer</li><li>▪ In-vehicle charger to charge from a vehicle power socket</li><li>▪ Mains power charger to charge from an indoor power socket</li></ul> <i>Note: The mains power charger is not included with all models and may be purchased separately.</i>
11	Camera	The camera lens protected by a sliding shutter.
12	Speaker	For voice commands and warnings. Use the <i>Volume</i> preference screen to increase or decrease the volume.

*Note:* Numbers highlighted red are not available on all models.

## How do I get started?

### Note:

Before you begin, check if your vehicle is fitted with a heat-reflective or heated windscreen. If so, you may need to purchase an external antenna for your Navman to receive GPS signals.

The first time you use your Navman, it may take up to 15 minutes to establish a GPS connection. For more information about GPS, refer to the GPS Frequently Asked Questions guide on the enclosed DVD.

 
## How do I turn my Navman on for the first time?

 
To get started for the first time, complete the following steps:

1. **Read the Important Safety Information on page 3.**
2. **Position your Navman**


Follow the instructions below to position your Navman in your vehicle:

**Note:** Ensure that your Navman does not obstruct the driver's view, or interfere with the operation of the vehicle airbags and safety devices.

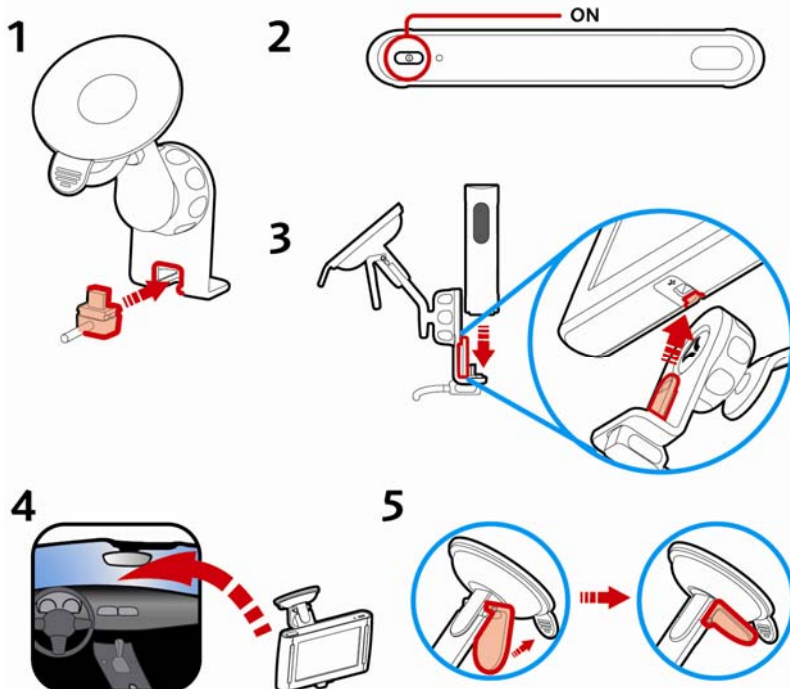

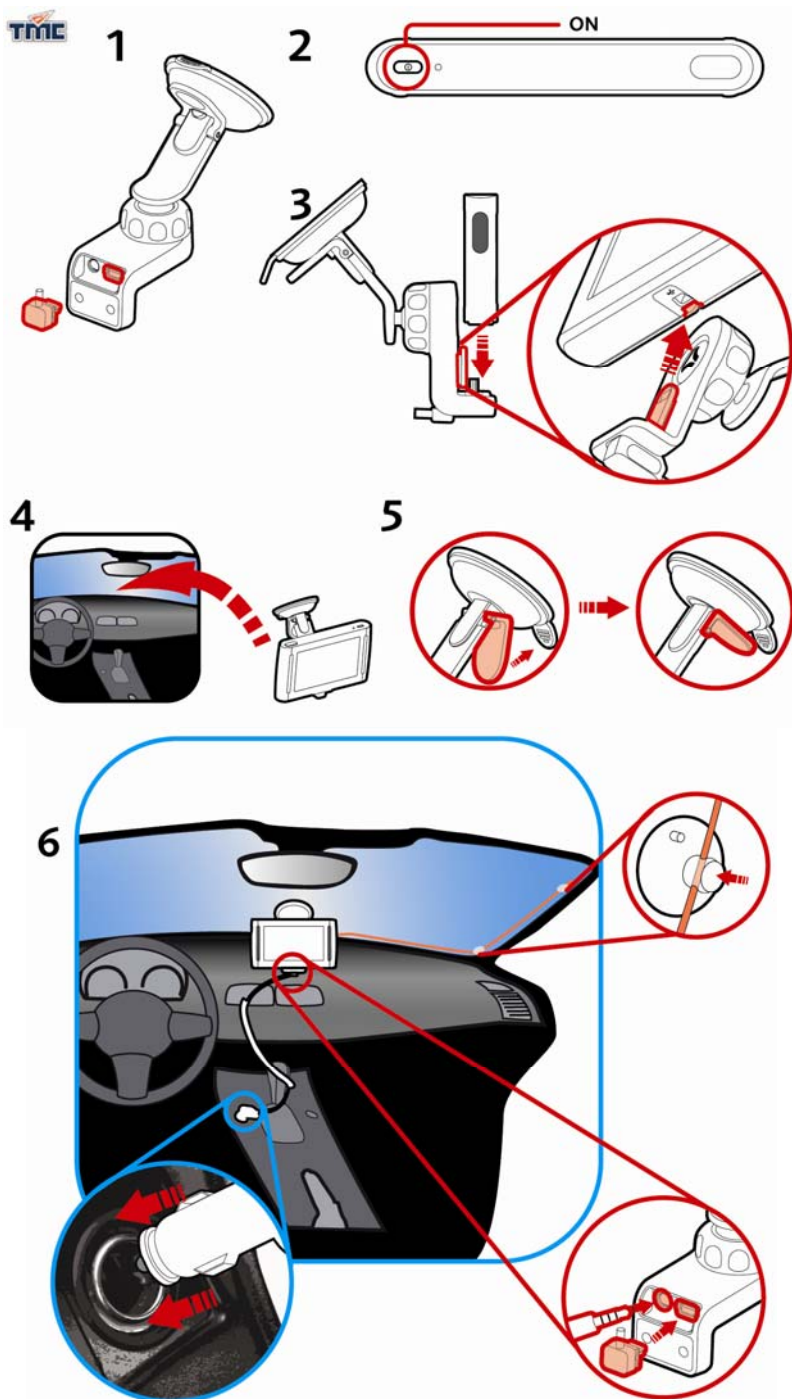

### 3. Turn your Navman on

Press and hold  to turn your Navman on.  
Your Navman will turn on and display the *Language* screen.

### 4. Select your preferred language

From the *Select Language* screen, tap your preferred language.



- To prevent the Select Language screen from displaying on each start-up, clear the Show on start-up check box.
- You can change your preferred language while using your Navman (see "Language" on page 84).



### 5. Read the warning message

- a) The *Safety Agreement* screen will display after you have selected your preferred language. Read the Safety Agreement message.
- b) To confirm that you have read and understood the message, tap **Accept**. The *Tutorial* will display.

**Note:** If you have maps installed from multiple continents, you may be prompted to select the maps you require. To use maps from a different continent at a later time, you can select a different continent via the *Change Continent* screen in the *Map Display* preferences; refer to page 77.

### 6. View the Tutorial

When you have accepted the Safety Agreement, the first *Tutorial* screen will display.

- To prevent the Tutorial from displaying again on start-up, clear the Show on start-up check box.
- To move forward through the Tutorial screens, tap .
- To view the previous screen, tap .
- To view the Tutorial again while using your Navman, see "Tutorial" on page 94.

 
When you have finished the *Tutorial*, the *3D Map* screen will display. If you have a GPS fix, your current location will be displayed on the map.

## How do I adjust the volume?

The volume on your Navman can be adjusted either by the volume control on the *Volume* preference screen or by using the volume control buttons on the remote control (sold separately).

To mute the volume from the map screens, tap  and then tap , or press  on the remote control (sold separately).

To adjust the volume, tap and hold  to display the Volume preference screen.

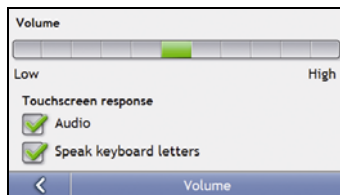

For more information on how to adjust the volume on your Navman, see “Volume” on page 79.

## How do I monitor the battery status?

 
Your Navman has an internal battery that when fully charged, should provide power for up to 3 hours.

The battery indicator light on the top of the Navman indicates the level of internal battery charge:

- Green - battery full
- Orange - battery charging


 

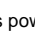
You can monitor battery power status on the *Power* screen.

To access the *Power* screen, tap  and hold  on the map screens.

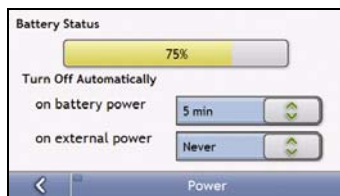


## How do I charge the battery?

The **Battery Status** bar displays **External Power** while the battery is charging; when the battery is fully charged, the **Battery Status** bar will display at 100%.


- To charge your Navman in a vehicle, plug the in-vehicle charger into  on the bottom of your Navman and the other end into the vehicle power socket.
- To charge your Navman using your computer, plug the large end of the USB cable directly into a USB port on your computer (not a USB hub) and plug the small end into  on the bottom of your Navman. To begin charging, ensure your Navman is turned off (press ).
- To charge your Navman using a mains power socket, plug the mains power charger cable into  on the bottom of the Navman and the mains power charger power pack into the power socket.


**Note:** The mains power charger is not included with all models and may be purchased separately.

## How do I turn my Navman off?

To turn your Navman off, press and hold .

### Power-saving standby mode

To enter standby mode, press .

To end standby mode, press  again.

When your Navman enters standby mode, the screen will turn off. When you turn your Navman on again, it will display the screen you were last viewing.


To save power, your Navman will automatically enter standby mode after a pre-determined period of time. You can change the default standby mode setting at the *Power* preference screen. For more information, see "Power" on page 88.

**Note:** If battery power is very low, your Navman will enter a standby mode whether you have set a pre-determined period of time or not.

## What are the main screens I will use?

### Main Menu screen

The *Main Menu* screen is your starting point for searching for a destination. The *Main Menu* screens also allow you to customize preferences, receive updated traffic information, make and receive phone calls and take **NavPix**.

The *Main Menu* can be accessed from the map screens by tapping  or by tapping the status bar at the bottom of any screen.





**Note:** The *Main Menu* screens may differ from those displayed above, depending on your Navman model.

### Map screens

There are five map screens used to view the route to your destination:

- 3D Map
- 2D Map
- Traffic Overview (if available)
- Route Overview
- Turn-by-Turn

The Map screens can be accessed from the *Main Menu* screen by tapping . The Map button displays the 3D Map screen, or the map screen you were last viewing.

You can cycle through the different map screens by pressing  on any map screen (the name of the map screen will display briefly as your cycle through).



- For more information on the map screens, see "How do I view my route?" on page 34.
- For information on using the *Map* menu from the *3D Map* and *2D Map* screens, see "How do I use the Map Menu?" on page 44.


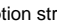

## How do I navigate with GPS?

The Global Positioning System (GPS) is available at any time, free of charge, and is accurate to within 5m (15ft). GPS navigation is made possible by a network of satellites that orbit the Earth at around 20,200km (12,552mi). Each satellite transmits a range of signals which are utilized by GPS receivers, such as your Navman, to determine an exact location. Although a GPS receiver can detect signals from up to 12 satellites at any time, only four signals are required to provide a position or "GPS fix" (latitude and longitude), for vehicle navigation systems.

### How does my Navman receive GPS signals?

Your Navman receives GPS signals via the internal GPS antenna. To guarantee the optimum GPS signal strength, ensure your Navman is outdoors, or in a vehicle outdoors, and has an unobstructed view of the sky. GPS reception is not usually affected by weather, however, very heavy rain or snow may have a negative effect on your reception.

### How do I view my GPS status?

You can view your GPS status at any time from the map screens or the *Viewfinder* screen.  displays green when a GPS fix is established and  when a GPS fix is unavailable. To indicate the reception strength of a GPS fix,  displays between one and four **green** vertical bars.

**Note:** Before you begin, check if your vehicle is fitted with a heat-reflective or heated windscreen. If so, you may need to purchase an external antenna for your Navman to receive GPS signals. The first time you use your Navman, it may take **up to 15 minutes** to establish a GPS connection.



- To view your GPS status in more detail, see "GPS Status" on page 82.
- To set your GPS mode, see "Setting your GPS mode" on page 83.
- For more information about GPS, refer to the *GPS Navigation - Frequently Asked Questions* guide on the NavDesk DVD.





## How do I go from A to B?

Your Navman is equipped with maps that provide street-level detail for door-to-door navigation, including Points of Interest such as accommodation, parking areas, petrol stations, railway stations and airports.

When you ...	Then ...
know the address of your destination	use the address-entry wizard to enter the address <ul style="list-style-type: none"><li>▪ see "How do I search for an address?" on page 18.</li></ul>
want to make multiple stops	use the <i>Multi-stop Trip Planner</i> screen to enter multiple waypoints <ul style="list-style-type: none"><li>▪ see "How do I create a trip with multiple stops?" on page 22.</li></ul>
need to find a named site, feature, landmark or public venue	search for a Point of Interest <ul style="list-style-type: none"><li>▪ see "How do I search for a landmark or venue?" on page 27.</li></ul>
want to navigate to a <b>NavPix™</b> location	use the <i>Go To NavPix</i> screen to navigate to a preinstalled <b>NavPix</b> , or a <b>NavPix</b> that you have taken yourself <ul style="list-style-type: none"><li>▪ see "How do I navigate to a NavPix?" on page 56.</li></ul>



**WARNING** For your safety, enter destination information before you start a journey. Do not enter a destination while driving.

## What if I miss a turn?

### Back-On-Track™ Automatic Rerouting

You will be redirected if you make a wrong turn. A message informing you that your route is being re-calculated will display at the top of the screen.

To cancel a route re-calculation tap . A warning will display, asking you to confirm the cancellation. If confirmed, both the re-calculation and your current route will be cancelled.

## How do I search for an address?


Enter a destination using the *Destination Search*, *Keyboard* and *Preview* screens, which used together form an address-entry wizard.

This section provides a case study to help guide you through setting your destination.

**Note:** In some countries, you can search for your destination by postcode or zip code.

If you are in the United Kingdom, and you know the postcode of your destination, you can search for it from the *Destination Search* screen by tapping **Postcode**, then entering a postcode of up to eight characters.

### Quick Steps

1. Open the *Destination Search* screen
2. Select the country
3. Search for the city/area
4. Search for the street
5. Search for the house number
6. Tap 



### Case Study: How do I search for an address?

This case study will show you how to enter an address and how to navigate to it.

 
The address we will be using in this example is:

**Note:** The below address is fictitious and used as an example only.

**1 Navman Street  
Horley  
Surrey  
RH6 8LD, United Kingdom.**

**Tip:** Before you enter your destination address, ensure that you have set your route preferences. For more information, see "Route Options" on page 71.

#### 1. Open the *Destination Search* screen

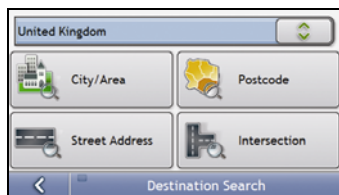


The *Destination Search* screen will display.

**Note:** If this is the first time you are setting your destination and you have maps from more than one country installed, then the *Select Country* screen will display instead of the *Destination Search* screen. Go directly to step 2b. The next time you perform this procedure, the *Destination Search* screen will open as expected.

## 2. Select the country

**Note:** If you only have the maps of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to step 3.

 
- a) From the *Destination Search* screen, tap . The *Select a country* screen will display.




- b) Select **United Kingdom** from the list. The *Destination Search* screen will display.

## 3. Search for the City/Area

- a) From the *Destination Search* screen, tap **City/Area**. The *Keyboard* screen will display.

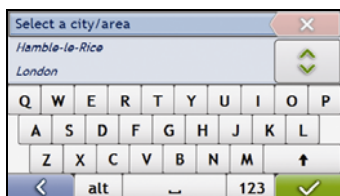


 - b) Use the *Keyboard* screen to search for **Horley** as the city or area of your destination, then tap the search result. The *Destination Search* screen will display.

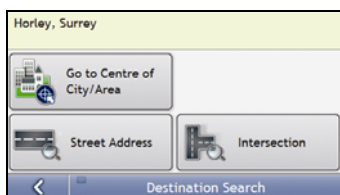

## 4. Search for the street name and house number

 - a) From the *Destination Search* screen, tap **Street Address**. The *Keyboard* screen will display.

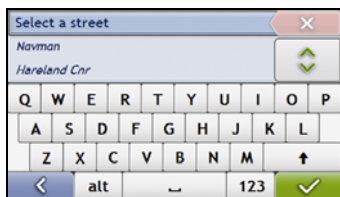


## Using the *Keyboard* screen

The *Keyboard* screen will display when you are required to enter text, such as when searching for a street name. Search results will be listed in matching order, with the closest matches appearing at the top of the list. A maximum of 99 results will display.

The *Keyboard* screen can display with various layouts depending on the information you need to enter, including alphabet, number, alternate characters and combinations of these.

 You can also choose the type of keyboard you prefer from alphabetic, QWERTY and keypad. For more information, see “Select Keyboard” on page 89.

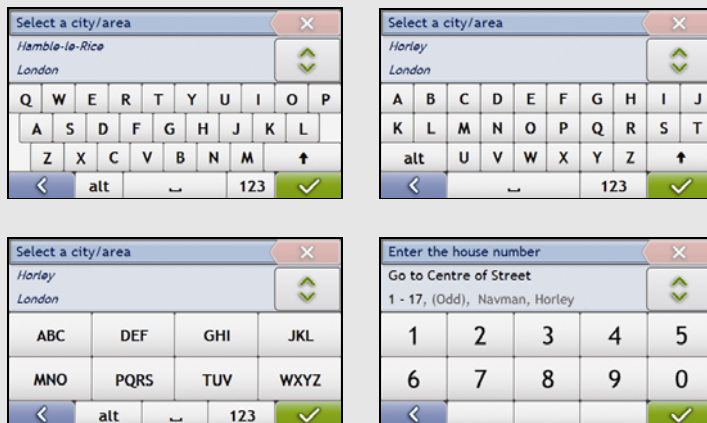


As you select each character, the first two results will display. Tap , then scroll to see more search results.

- To select a character or a search result, tap the character or search result.
- To delete a character, tap .
- To display more characters, tap 123, alt or abc, if available.

## Using the *Destination Search* screen

 The *Destination Search* screen is used to select your destination by area, street, postal or ZIP code, Points of Interest, intersection, city, area, state or country.

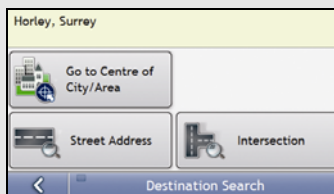


As you specify each part of the address, it will display at the top of the screen.


The available options will change to reflect the parts of the address still to be completed.

- b) Use the *Keyboard* screen to enter **Navman Street** as the street name of your destination, then tap the search result.

 **Note:** There may be multiple matches for a particular street name. Long streets that run through several neighbouring areas, and common street names will produce search results ordered by their city or area name.

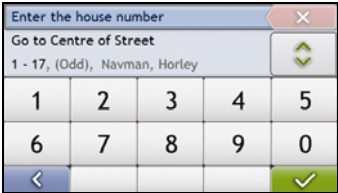


- c) Use the *Keyboard* screen to enter **12** as the house number of your destination. The *Preview* screen will display.

**Note:** If house numbers are available, but not the one that you require, you may have to choose the same street in a neighbouring area. Press  and select another search result. If house numbers are not available for your selected section of the street the *Preview* screen will display.



- d) Complete one of the following:

If you want to ...	Then ...
Navigate to your selected destination	tap  Your route is calculated; the <i>3D Map</i> screen will display.
view the position on the map screen	tap the map to display the position on the <i>2D Map</i> screen.
view more information about your destination	tap <b>More</b> . The <i>Destination Details</i> screen will display.
add the destination to a multi-stop trip	tap <b>Add</b> . The <i>Multi-stop Trip Planner</i> screen will display. The address is listed as a waypoint on the multi-stop trip. See "How do I create a trip with multiple stops?" on page 22.
save the destination as My Home	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <i>New Favourite</i> screen will display.</li><li>tap <b>Save as Home</b>.</li></ul>
save the destination as a favourite	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <i>New Favourite</i> screen will display.</li><li>tap <b>Save as Favourite</b>.</li></ul>


## How do I create a trip with multiple stops?

You can use the *Multi-stop Trip Planner* screen to set multiple stops or waypoints for your trip. Your route will be calculated to go via each of these points in the specified order.

Waypoints can be added via the *Multi-stop Trip Planner* screen or by selecting **Location**, then **Add to Trip** from the pop-up *Map* menu on the *2D Map* or *3D Map* screen. You can save up to 198 multi-stop trips, each with up to 14 waypoints.

**Note:** Waypoints added, updated or deleted after a multi-stop trip has commenced will not affect the current route.

### Quick Steps

1. Start your Multi-stop trip
2. Select the country
3. Search for the city/area
4. Search for the street and house number
5. Add additional waypoints
6. Tap .



### Case Study: How do I navigate to multiple addresses?

This case study will show you how to set a multi-stop trip by entering multiple waypoints.

 
The address we will be using in this example is:

**Note:** The below address is fictitious and used as an example only.

**12 Navman Street  
Horley  
Surrey  
RH6 8LD  
United Kingdom.**

**Tip:** Before you enter your destination address, ensure that you have set your route preferences. For more information, see "Route Preferences" on page 71.

### 1. Open your *Multi-stop Trip* screen

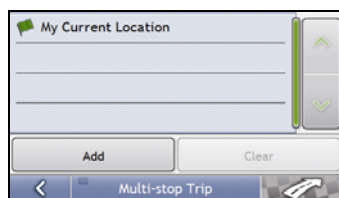

The *Multi-stop Trip Planner* screen will display.

- a) Tap **Add**.  
The *Add to Trip Menu* will display.



- b) Tap **Address**.  
The *Destination Search* screen will open.

**Note:** You can also add waypoints using favourites, recent destinations, POI locations and NavPix.

## 2. Select the country

**Note:** If you only have the maps of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to step 3.

 
- a) From the *Destination Search* screen, tap .  
The *Select a country* screen will display.




- b) Select **United Kingdom** from the list.  
The *Destination Search* screen will display.

## 3. Search for the City/Area

- a) From the *Destination Search* screen, tap **City/Area**.  
The *Keyboard* screen will display.

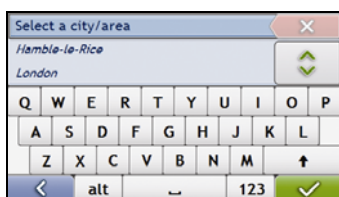


 - b) Use the *Keyboard* screen to search for **Horley** as the city or area of your destination, then tap the search result.  
The *Destination Search* screen will display.

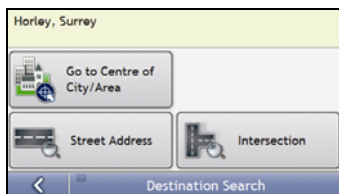


4. Search for the street name and house number

 - a) From the *Destination Search* screen, tap **Street Address**.  
The *Keyboard* screen will display.

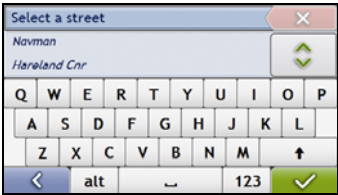

- b) Use the *Keyboard* screen to enter **Navman Street** as the street name of your destination, then tap the search result.

 **Note:** There may be multiple matches for a particular street name. Long streets that run through several neighbouring areas, and common street names will produce search results ordered by their city or area name.

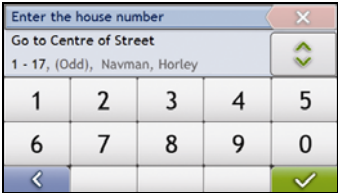


- c) Use the *Keyboard* screen to enter **1** as the house number of your destination.  
The *Preview* screen will display.

 **Note:** If house numbers are available, but not that you require, you may have to choose the same street in a neighbouring area. If house numbers are not available for your selected section of the street the *Destination Preview* screen will display.



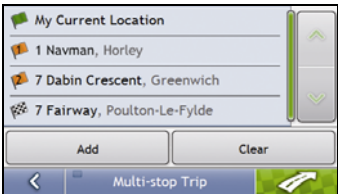

- d) Tap **Add**.  
The waypoint is automatically saved and the *Multi-stop-Trip* screen will display.



- e) Complete one or more of the following:

If you want to ...	Then ...
add another waypoint <b>Note:</b> Waypoints added after a multi-stop trip has commenced will not be included in the current route.	<ul style="list-style-type: none"><li>tap <b>Add</b>. The <i>Add To Trip Menu</i> will display.</li><li>return to step 1a.</li></ul>



If you want to ...	Then ...
navigate to your selected destination	<ul style="list-style-type: none"><li>tap  The <i>Preview</i> screen will display.</li><li>tap  The <i>3D Map</i> screen will display the calculated route.</li></ul>
change the order of your waypoints	<ul style="list-style-type: none"><li>tap a destination point to move. The <i>Preview</i> screen will display.</li><li>tap <b>Up</b> or <b>Down</b>. The <i>Multi-stop Trip Planner</i> screen will redisplay.</li></ul>
delete all waypoints	tap <b>Clear</b> .
delete one waypoint	<ul style="list-style-type: none"><li>tap a destination point to delete. The <i>Preview</i> screen will display.</li><li>tap <b>Delete</b>. The <i>Multi-stop Trip Planner</i> screen will redisplay.</li></ul>
save the multi-stop trip as a favourite	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <b>New Favourite</b> screen will display.</li><li>tap <b>Save as Favourite</b>. The Favourite will be saved.</li></ul>

## How do I skip a waypoint during a multi-stop trip?

To skip a waypoint during a multi-stop trip, complete the following:

1. Tap the map.  
The *Map Menu* will display.



2. Tap **Route**, then **Skip Waypoint**.  
The next waypoint will be skipped and the route recalculated to the following waypoint.

## How do I search for a Point of Interest (POI)?


A POI is a named site, feature, landmark or public venue which can be displayed as an icon on the map. POIs are grouped by type, such as petrol stations, parks, beaches and museums.

Select a POI using the Destination Search, Keyboard and Preview screens, which used together form a POI-entry wizard.

**Tip:** You can also quickly search for certain POIs based upon your current location via the [Main Menu](#) screen.

This section provides a case study to help guide you through finding or setting your POI as a destination.

### Quick Steps

1. Open the *Destination Search* screen
2. Select a country
3. Search for the City/Area
4. Search for a POI
5. Tap 



### Case Study: How do I search for a Point of Interest?

 
This case study will show you how to enter an address and navigate to it.

The address used in this example is:

**Note:** The below address is fictitious and used as an example only.

**Waterloo Railway Station**  
**Road (A301), Waterloo**  
**London**  
**SE1 8UD**  
**United Kingdom.**

#### 1. Open the *Destination Search* screen

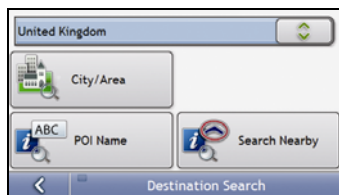

The *Destination Search* screen will display.

**Note:** If this is the first time you are setting your destination and you have maps from more than one country installed, then the *Select Country* screen will display instead of the *Destination Search* screen. Go directly to step 2b. The next time you perform this procedure, the *Destination Search* screen will open as expected.

## 2. Select the country

**Note:** If you only have the maps of one country installed and selected, that country is selected for your destination by default and cannot be changed. Go to step 3.

 
- a) From the *Destination Search* screen, tap . The *Select a country* screen will display.



- b) Select **United Kingdom** from the list. The *Destination Search* screen will display.

## 3. Search for the city/area

- a) From the *Destination Search* screen, tap **City/Area**. The *Keyboard* screen will display.

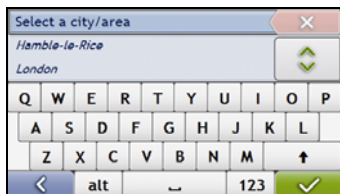


- b) Use the *Keyboard* screen to search for **London** as the city or area of your destination, then tap the search result. The *Select POI Category* screen will display.



**Tip:** The list of categories is divided into **Enabled Categories** which are set to display an icon on the map screens, and **Other POI Categories** which will not display an icon.

## 4. Search for a POI

 
- a) Either tap **Search by name** to search in all POI categories, or select a category from the list. The *Keyboard* screen will display.

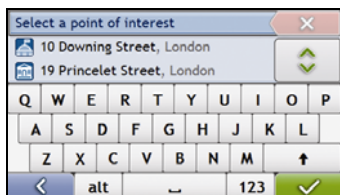

- b) Use the *Keyboard* screen to search for **Waterloo Railway Station** as your destination, then tap the search result.  
The *Preview* screen will display.



- c) Complete one of the following:

If you want to ...	Then ...
navigate to your selected destination	tap  . Your route is calculated and displayed on the <i>3D Map</i> screen.
view your position on the map screen	tap the map to display the position on the <i>2D Map</i> screen..
make a phone call to the POI	tap <b>Call</b> .
view more information about your destination	tap <b>More</b> . The <i>Destination Details</i> screen will display.
add the destination to a multi stop trip	tap <b>Add</b> . The <i>Multi-stop Trip Planner</i> screen will display. The address is listed as a waypoint on the multi-stop trip. See "How do I create a trip with multiple stops?" on page 22.
save the destination as My Home	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <i>New Favourite</i> screen will display.</li><li>tap <b>Save as My Home</b>.</li></ul>
save the destination as a Favourite	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <i>New Favourite</i> screen will display.</li><li>tap <b>Save as Favourite</b>.</li></ul>

## How do I save Favourites and My Home?

You can save up to 200 destinations as favourites, one of which can be saved as My Home.

You can save a favourite from the *Preview* screen after searching for an address, or from the *Map Menu* on the *3D* or *2D Map* screens. For more information, see "How do I use the Map Menu?" on page 44.


### Can I save a NavPix to a Favourite?

You can save a **NavPix** to any of your existing favourites. For more information, see "How do I save a **NavPix** to a Favourite?" on page 57.


### How do I save a Favourite or My Home?

1. Search for an address until the *Preview* screen is displayed.
2. Tap **Save**.  
The *New Favourite* screen will display.



3. To change the name of the favourite, tap .  
The *Keyboard* screen will display.



4. After you have entered a name for the favourite, tap .  
The *New Favourite* screen will display.
5. Complete one of the following:


If you want to ...	Then ...
save as a Favourite	tap <b>Save as Favourite</b> . The favourite is saved. The <i>Preview</i> screen will display.
save as My Home	tap <b>Save as My Home</b> . The favourite is saved as My Home. The <i>Preview</i> screen will display.

## How do I navigate to a Favourite?



1. Tap the Favourite destination you want to travel to. The *Preview* screen will display.



2. Tap . Your Navman will calculate the route from your current location. The *3D Map* screen will display.

## How do I navigate to My Home?

If you have not set an address as *My Home*, the first time you try to navigate to *My Home* you will be prompted to search for an address using the address-entry wizard.

### Option 1 - Via the *Main Menu*




Your Navman will calculate the route from your current location. The *3D Map* screen will display.

### Option 2 - Via the *Favourite Destinations* screen





1. From the *Favourite Destinations* screen, select *My Home*. The *Preview* screen will display.



2. Tap . Your Navman will calculate the route from your current location. The *3D Map* screen will display.

### Option 3 - Using the remote control

You can navigate to *My Home* by pressing  on the remote control (sold separately).

1. Press  to display the *My Home* screen.
2. Press  again, to calculate the route and display the *3D Map* screen.

 
# How do I edit the name of a Favourite?





1. From the *Favourite Destinations* screen, select a favourite to edit. The *Favourite Preview* screen will display.

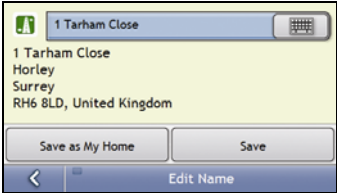

2. Tap **Edit**. The *Edit Name* screen will display.



3. To edit the name of the favourite, tap .
4. After you have edited the favourite name, tap .
5. Complete one of the following:

If you want to ...	Then ...
rename the Favourite	tap <b>Save</b> . The favourite is saved. The <i>Favourite Preview</i> screen will display.
save as My Home	tap <b>Save as My Home</b> . The favourite is saved as My Home. The <i>My Home Preview</i> screen will display.

# How do I delete a Favourite?



1. From the *Favourite Destinations* screen, select a favourite to delete. The *Preview* screen will display.



2. Tap **Delete**. The favourite is deleted. The *Favourite Destinations* screen will display.

 


# How do I navigate to a recent location?


To make navigating to an address easier, your Navman will automatically save all your start locations and destinations in a list of recent locations.



- 1. Tap a recent location.  
The *Preview* screen will display.

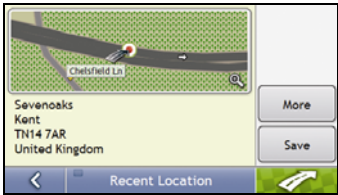

- 2. Complete one of the following:

If you want to ...	Then ...
calculate the route and open the <i>3D Map</i> screen	Tap  The <i>3D Map</i> screen will display.
view the full address details of the recent location	tap <b>More</b> . The <i>Recent Destination Details</i> screen will display.
save the recent location as My Home	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <i>New Favourite</i> screen will display.</li><li>tap <b>Save as My Home</b>.</li></ul>
save the recent location as a favourite	<ul style="list-style-type: none"><li>tap <b>Save</b>. The <i>New Favourite</i> screen will display.</li><li>tap <b>Save as Favourite</b>.</li></ul>

# How do I view my route?

When a route has been calculated, the *3D Map* screen will display. You will be directed to your destination by spoken and visual instructions.

 


The **Map** button cycles through the *3D Map*, *2D Map*, *Traffic Overview*, *Route Overview* and *Turn-by-Turn™* screens.


## 3D Map screen





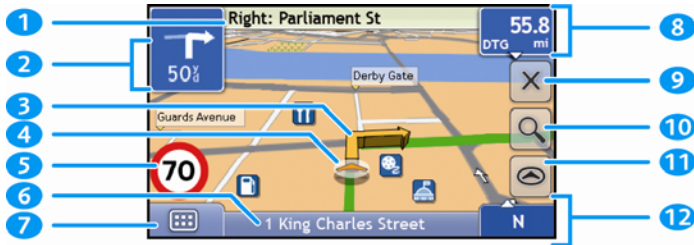





The *3D Map* screen displays your current position and follows your direction of travel.

- Tap and drag the screen, to move across the map.
- Tap the map to view the *Map Menu* (see "How do I use the Map Menu?" on page 44).



*Note:* Depending on the country you are travelling in, the colour of the direction and distance buttons may differ from the above example.

	Item	Description
1	Next instruction	The direction and name of the street to turn in to.
2	Direction and distance of next turn	The direction and distance of your next turn. <i>Note:</i> To repeat the spoken prompt of your next turn, tap the turn arrow.
3	Route	Your current route is highlighted.
4	Current position	Your current position is marked with  .
5	Speed indicator	Displays when you exceed your set speed limit. For more information, see "Driver Alerts 3/4" on page 73.
6	Status bar	Displays one of the following: <ul style="list-style-type: none"><li>▪ The name of the street you are located on</li><li>▪ Speed warnings</li><li>▪ Active POIs.</li></ul> Tap to display the <i>Main Menu</i> screen. <i>Note:</i> The Status Bar is replaced by current Traffic events, when Traffic is enabled. For more information, see "Traffic" on page 64.
7	Main Menu	The <b>Main Menu</b> button allows you to enter an address for your destination, customize preferences, receive updated traffic information, make and receive phone calls and take <b>NavPix</b> .
8	Distance and Time Information	Tap to expand and see the following options: <ul style="list-style-type: none"><li>▪ Time</li><li>▪ km/h or mph (Speed)</li><li>▪ TTG (Time to Go)</li><li>▪ DTG (Distance to Go)</li><li>▪ ETA (Estimated Time of Arrival).</li></ul> Tap to cycle through the options. <i>Note:</i> During a Multi-stop trip, Time to Go, Distance to Go and ETA will display as: Time to Waypoint, Distance to Waypoint and ETA at Waypoint.

	Item	Description
9	Cancel route	Cancels your current route.
10	Zoom	<p>To view zoom options, tap .</p> <ul style="list-style-type: none"><li>To zoom out, tap .</li><li>To zoom in, tap .</li></ul>
11	Map	The <b>Map</b> button allows you to cycle through different map screens.
12	Mute/unmute volume, TMC, Bluetooth™, phone, battery, GPS and compass information.	<p>Tap  to expand and see the following options:</p> <ul style="list-style-type: none"><li> Mute/unmute volume</li><li> TMC traffic status indicator. For more information, see “How does my Navman receive traffic information?” on page 64.</li><li> Bluetooth and phone connection indicator. The icon is grey when Bluetooth is on, but a phone has not been paired.</li><li> Battery charge indicator</li><li> GPS status indicator The icon displays <b>green</b> when a GPS fix is established and <b>red</b> when a GPS fix is unavailable. To indicate the reception strength of a GPS fix between one and four <b>green</b> vertical bars are displayed.</li><li> Compass indicator</li></ul>


## 2D Map screen











The *2D Map* screen shows your current position (if a GPS fix is active) and surrounding street names. If a route has been calculated, the route and turns are highlighted. The *2D Map* screen follows your direction of travel unless the *Map Display* preference is set to North (see “Map Display” page 76).

- Tap and drag the screen, to move across the map.
- Tap the map, to view the *Map Menu* (see “How do I use the Map Menu?” on page 60).



**Note:** Depending on the country you are travelling in, the colour of the direction and distance buttons may differ from the above example.

	Item	Description
1	<b>Next instruction</b>	The direction and name of the street to turn in to.
2	<b>Direction and distance of next turn</b>	The direction and distance of your next turn. <b>Note:</b> To repeat the spoken prompt of your next turn, tap the turn arrow.
3	<b>Route</b>	Your current route is highlighted.
4	<b>Status bar</b>	Displays one of the following: <ul style="list-style-type: none"> <li>▪ The name of the street you are located on</li> <li>▪ Speed warnings</li> <li>▪ Active POIs.</li> </ul> Tap to display the <i>Main Menu</i> screen. <b>Note:</b> The Status Bar is replaced by current Traffic events, when Traffic is enabled. For more information, see “Traffic” on page 64.
5	<b>Main Menu</b>	The <b>Main Menu</b> button allows you to enter an address for your destination, customize preferences, receive updated traffic information, make and receive phone calls and take <b>NavPix</b> .
6	<b>Distance and Time Information</b>	Tap to expand and see the following options: <ul style="list-style-type: none"> <li>▪ Time</li> <li>▪ km/h or mph (Speed)</li> <li>▪ TTG (Time to Go)</li> <li>▪ DTG (Distance to Go)</li> <li>▪ ETA (Estimated Time of Arrival).</li> </ul> Tap to cycle through the options. <b>Note:</b> During a Multi-stop trip, Time to Go, Distance to Go and ETA will display as: Time to Waypoint, Distance to Waypoint and ETA at Waypoint.
7	<b>Current position</b>	Your current position is marked with  .
8	<b>Cancel route</b>	Cancels your current route.

	Item	Description
9	Zoom	<p>To view zoom options, tap .</p> <ul style="list-style-type: none"><li>▪ To zoom out, tap .</li><li>▪ To zoom in, tap .</li></ul>
10	Map	<p>The <b>Map</b> button allows you to cycle through different map screens.</p>
11	Mute/unmute volume, TMC, Bluetooth™, phone, battery, GPS and compass information.	<p>Tap  to expand and see the following options:</p> <div><div></div><div>Mute/unmute volume</div><div></div><div>TMC traffic status indicator. For more information, see "How does my Navman receive traffic information?" on page 64.</div><div></div><div>Bluetooth and phone connection indicator. The icon is grey when Bluetooth is on, but a phone has not been paired.</div><div></div><div>Battery charge indicator</div><div></div><div>GPS status indicator The icon displays <b>green</b> when a GPS fix is established and <b>red</b> when a GPS fix is unavailable. To indicate the reception strength of a GPS fix between one and four <b>green</b> vertical bars are displayed.</div><div></div><div>Compass indicator</div></div>

# Traffic Overview screen



 




Depending on your Navman model traffic information may not be available or may require a traffic cradle.








The Traffic Overview screen displays a general overview of the traffic situation on your route, including all events in the immediate vicinity.

**Note:** A route must first have been calculated for this screen to be available.

- Tap and drag the screen, to move across the map.
- Tap the map, to view the Map Menu (see "How do I use Map Menu?" on page 44)



	Item	Description
1	Event icon	Displays icon to indicate type of event.
2		Your final destination.
3	Current position	Your current position is marked with  .
4	Status bar	Displays one of the following: <ul style="list-style-type: none"> <li>▪ The name of the street you are located on</li> <li>▪ Speed warnings</li> <li>▪ Active POIs.</li> </ul> Tap to display the <i>Main Menu</i> screen. <b>Note:</b> The Status Bar is replaced by current Traffic events, when Traffic is enabled. For more information, see "Traffic" on page 64.
5		Tap to display the <i>Event List</i> screen.
6		Tap to display the <i>Traffic System Status</i> screen.
7	Zoom	To view zoom options, tap  . <ul style="list-style-type: none"> <li>▪ To zoom out, tap .</li> <li>▪ To zoom in, tap .</li> </ul>
8	Map	The <b>Map</b> button allows you to cycle through different map screens.

	Item	Description
9	Mute/unmute volume, TMC, Bluetooth™, phone, battery, GPS and compass information.	<p>Tap  to expand and see the following options:</p> <p> Mute/unmute volume</p> <p> TMC traffic status indicator. For more information, see “How does my Navman receive traffic information?” on page 64.</p> <p> Bluetooth and phone connection indicator. The icon is grey when Bluetooth is on, but a phone has not been paired.</p> <p> Battery charge indicator</p> <p> GPS status indicator The icon displays <b>green</b> when a GPS fix is established and <b>red</b> when a GPS fix is unavailable. To indicate the reception strength of a GPS fix between one and four <b>green</b> vertical bars are displayed.</p> <p> Compass indicator</p>

## Route Overview screen

The *Route Overview* screen gives you a bird's eye view of your trip.

**Note:** A route must first have been calculated for this screen to be available.











- Tap and drag the screen, to move across the map.
- Tap the map to view the *Map Menu* (see "How do I use the Map Menu?" on page 44).



**Note:** Depending on the country you are travelling in, the colour of the direction and distance buttons may differ from the above example.

	Item	Description
1	<b>Next instruction</b>	The direction and name of the street to turn in to. <b>Note:</b> To repeat the spoken prompt of your next turn, tap the turn arrow.
2		Your final destination.
3	<b>Direction and distance to next turn</b>	The direction and distance of your next turn. <b>Note:</b> To repeat the spoken prompt of your next turn, tap the turn arrow.
4	<b>Route</b>	Your current route is highlighted.
5	<b>Scale bar</b>	Displays map scale.
6	<b>Main Menu</b>	The <b>Main Menu</b> button allows you to enter an address for your destination, customize preferences, receive updated traffic information, make and receive phone calls and take <b>NavPix</b> .
7	<b>Status bar</b>	Displays one of the following: <ul style="list-style-type: none"> <li>▪ The name of the street you are located on</li> <li>▪ Speed warnings</li> <li>▪ Active POIs.</li> </ul> Tap to display the <i>Main Menu</i> screen. <b>Note:</b> The Status Bar is replaced by current Traffic events, when Traffic is enabled. For more information, see "Traffic" on page 64.
8	<b>Current position</b>	Your current position is marked with ; if visible.



	Item	Description
9	Distance and Time Information	<p>Tap to expand and see the following options:</p> <ul style="list-style-type: none"><li>▪ Time</li><li>▪ km/h or mph (Speed)</li><li>▪ TTG (Time to Go)</li><li>▪ DTG (Distance to Go)</li><li>▪ ETA (Estimated Time of Arrival).</li></ul> <p>Tap to cycle through the options.</p> <p><b>Note:</b> During a Multi-stop trip, Time to Go, Distance to Go and ETA will display as: Time to Waypoint, Distance to Waypoint and ETA at Waypoint.</p>
10	Cancel route	Cancels your current route.
11	Zoom	<p>To view zoom options, tap .</p> <ul style="list-style-type: none"><li>▪ To zoom out, tap .</li><li>▪ To zoom in, tap .</li></ul>
12	Map	The <b>Map</b> button allows you to cycle through different map screens.
13	Mute/unmute volume, TMC, Bluetooth™, phone, battery, GPS and compass information.	<p>Tap  to expand and see the following options:</p> <div><div></div><div>Mute/unmute volume</div></div> <div><div></div><div>TMC traffic status indicator. For more information, see "How does my Navman receive traffic information?" on page 64.</div></div> <div><div></div><div>Bluetooth and phone connection indicator. The icon is grey when Bluetooth is on, but a phone has not been paired.</div></div> <div><div></div><div>Battery charge indicator</div></div> <div><div></div><div>GPS status indicator The icon displays <b>green</b> when a GPS fix is established and <b>red</b> when a GPS fix is unavailable. To indicate the reception strength of a GPS fix between one and four <b>green</b> vertical bars are displayed.</div></div> <div><div></div><div>Compass indicator</div></div>








## Turn-by-Turn screen

The *Turn-by-Turn* screen displays the next four turns of your route, the turn direction, the street name and the distance to the turn. You can view all the turns in the list, using the up and down arrows. A route must first have been calculated for this screen to be available.



 
**Note:** Depending on the country you are travelling in, the colour of the direction and distance buttons may differ from the above example.

	Item	Description
<b>1</b>	<b>Direction of turn</b>	The direction of the turn. Your next turn is highlighted. <b>Note:</b> To Repeat the spoken prompt of your next turn, tap the turn arrow.
<b>2</b>	<b>Distance to turn</b>	The distance to your next turn. Your next turn is highlighted.
<b>3</b>	<b>Instruction</b>	The direction and name of the street to turn in to. Your next turn is highlighted.
<b>4</b>	<b>Next turn</b>	Your next turn is at the top of the list.
<b>5</b>	<b>Upcoming turns</b>	The direction and distance of upcoming turns.
<b>6</b>	<b>Main Menu</b>	The <b>Main Menu</b> button allows you to enter an address for your destination, customize preferences, receive updated traffic information, make and receive phone calls and take <b>NavPix</b> .
<b>7</b>	<b>Status bar</b>	Displays one of the following: <ul style="list-style-type: none"> <li>The name of the street you are located on</li> <li>Speed warnings</li> <li>Active POIs.</li> </ul> Tap to display the <i>Main Menu</i> screen. <b>Note:</b> The Status Bar is replaced by current Traffic events, when Traffic is enabled. For more information, see "Traffic" on page 64.
<b>8</b>	<b>Distance and Time Information</b>	Tap to expand and see the following options: <ul style="list-style-type: none"> <li>Time</li> <li>km/h or mph (Speed)</li> <li>TTG (Time to Go)</li> <li>DTG (Distance to Go)</li> <li>ETA (Estimated Time of Arrival).</li> </ul> Tap to cycle through the options. <b>Note:</b> During a Multi-stop trip, Time to Go, Distance to Go and ETA will display as: Time to Waypoint, Distance to Waypoint and ETA at Waypoint.
<b>9</b>	<b>Scroll buttons</b>	Allow you to view each turn by moving up and down through the list.
<b>10</b>	<b>Map</b>	The <b>Map</b> button allows you to cycle through different map screens.


	Item	Description
11	Mute/unmute volume, TMC, Bluetooth™, phone, battery, GPS and compass information.	<p>Tap  to expand and see the following options:</p> <p> Mute/unmute volume</p> <p> TMC traffic status indicator. For more information, see “How does my Navman receive traffic information?” on page 64.</p> <p> Bluetooth and phone connection indicator. The icon is grey when Bluetooth is on, but a phone has not been paired.</p> <p> Battery charge indicator</p> <p> GPS status indicator The icon displays <b>green</b> when a GPS fix is established and <b>red</b> when a GPS fix is unavailable. To indicate the reception strength of a GPS fix between one and four <b>green</b> vertical bars are displayed.</p> <p> Compass indicator</p>

## How do I use the Map Menu?

The *Map Menu* allows you to access navigational functions from the *3D Map* and *2D Map* screens.

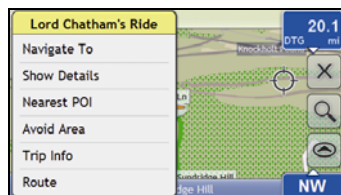

### Displaying the Map Menu

1. Tap  to display the *3D Map* or *2D Map* screen.
2. Tap and drag to move around the map to your selected location.
3. Tap the map.  
The *Map Menu* will display.

### Map Menu options

The following options are available via the *Map Menu*:

Menu Option	Description
<b>Navigate To</b>	Calculates a route from your current location, if your Navman has a GPS fix.
<b>Show Details</b>	Displays the <i>Preview</i> screen from where you can: <ul style="list-style-type: none"> <li>▪ View details of the location</li> <li>▪ Add the location to your multi-stop trip</li> <li>▪ Save the location as a favourite</li> <li>▪ Navigate to the location.</li> </ul> <p><b>Note:</b> If the cross-hairs are positioned over a traffic event, <b>Show Details</b> will instead display the <i>Traffic Event Details</i> screen. For more information, see "How do I view the Event Details screen?" on page 66.</p>
<b>Nearest POI</b>	Displays the <i>Select POI Category</i> screen. Select the <i>Category</i> , then <i>Search for a POI</i> to navigate to. For further information, see "How do I search for a Point of Interest?" on page 27.
<b>Trip Info</b>	Accesses the <i>Tripmeter-Current Route</i> , <i>Tripmeter-Global</i> and <i>Trip Recorder</i> screens giving you details about your calculated trip.
<b>Route</b>	<p><b>Note:</b> This option is only available when navigating a route.</p> <p>Displays the <i>Route</i> sub-menu from where you can:</p> <ul style="list-style-type: none"> <li>▪ <b>Set as Start.</b> Sets the location as your departure point.</li> <li>▪ <b>Demonstrate.</b> Starts the route demonstration, demonstrating navigation from your current position or departure point.</li> <li>▪ <b>Stop Demonstration.</b> Stops the route demonstration.</li> <li>▪ <b>Skip Waypoint.</b> Skips the next stop on your multi-stop trip.</li> <li>▪ <b>Show Summary.</b> Displays a summary of your route, including your departure and destination addresses, total distance and total estimated time to your destination.</li> <li>▪ <b>Detour.</b> Detours your route to avoid the next 1, 2, 5, 10 or 20 kilometres or the next 1, 2, 5, 10 or 20 miles.</li> </ul>
<b>Add Avoid Area</b>	Allows you to add an Avoid Area by tapping and dragging the map.
<b>Un-Avoid Area</b>	Deletes the selected Avoid Area.

## How do I avoid an area?

Your Navman can calculate a route that avoids a specified area on the map. Avoid Areas are displayed as shaded areas.



**CAUTION** If no alternative route around an Avoid Area exists, the route calculation will fail.

**CAUTION** If your destination is in an Avoid Area, you will be routed into that Avoid Area.

## How do I add an Avoid Area?

1. Tap the *3D Map* or *2D Map* screen to display the *Map Menu*.
2. Select **Add Avoid Area**.
3. Tap and drag to set the Avoid Area to the correct size and position.  
The Avoid Area is added.

## How do I delete an Avoid Area?

1. Find the Avoid Area that you want to delete.
2. Tap the Avoid Area to display the *Map Menu*.
3. Select **Un-Avoid Area**.  
The Avoid Area is deleted.

## How do I delete all Avoid Areas?



The *Saved Information* screen will display.

1. Tap **Delete Avoid Areas**.
2. When the *Caution* dialog-box opens, tap **Yes** to confirm.  
All Avoid Areas are permanently deleted.

## How do I preview a route?

Route demonstration allows you to:

 
- Preview a route.
- Plan and view a route without a GPS fix, such as when you are inside a building.

The following steps will show you how to preview one route.

### 1. Select a departure point

If you have a GPS fix, you do not need to select a departure point unless you want the demonstrated route to start elsewhere.

- a) Tap the *3D Map* or *2D Map* screen at your departure point.  
The *Map Menu* will display.

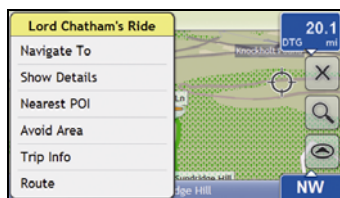

- b) Tap **Route**.  
The *Route* submenu will display.
- c) Tap **Set As Start**.  
The *Map Menu* will close, and the selected point is set as your departure point.

### 2. Select a destination point

Set a destination either by using the address entry wizard or by using the *Map Menu*:

- a) Locate your destination.
- b) Tap your destination to display the *Map Menu*.
- c) Tap **Navigate To**.  
The *Map Menu* will close and the map screen will display the calculated route.

### 3. Demonstrate the route

Once the route has been determined, you can demonstrate the route by completing the following:

- a) Tap the map screen to display the *Map Menu*.
- b) Tap **Route**.  
The *Route* submenu will display.
- c) Tap **Demonstrate**.  
The *3D Map* screen will display the calculated route in Route Demonstration mode.

## How do I view my route statistics?

The Navman provides information on your:

- distance travelled
- average speed
- maximum speed
- time taken for trip
- stationary time.

Trip information is presented in two different ways. These are:

 
- information for the current trip
- information for all trips to date, or since the tripmeter was last reset.

### How do I view statistics on my current route?


The *Tripmeter - Current Route* screen is used to view statistical information for your current trip.



The *Tripmeter - Current Route* screen will display.

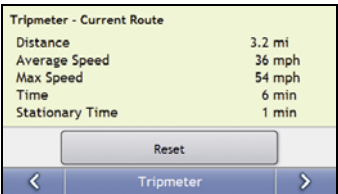

Complete one of the following:

If you want to ...	Then ...
view statistics for your trips to date	tap  to display the <i>Tripmeter - Global</i> screen.
reset the tripmeter	<ul style="list-style-type: none"><li>▪ tap <b>Reset</b>. A Warning dialog box will display.</li><li>▪ tap <b>Yes</b> to reset. The <i>Tripmeter - Current Route</i> screen will display.</li></ul>

How do I view statistics of my trips to date?

The *Tripmeter - Global* screen is used to view statistical information for all of your trips to date, or since the trip meter was last reset.



The *Tripmeter - Global* screen will display.



Complete one of the following:

If you want to ...	Then ...
view your trip logs	tap  to display the <i>Trip Recorder</i> screen.
view statistics for your current route	tap  to display the <i>Tripmeter - Current Route</i> screen.
reset the tripmeter	<ul style="list-style-type: none"><li>tap <b>Reset</b>. A Warning dialog box will display.</li><li>tap <b>Yes</b> to reset. The <i>Tripmeter - Global</i> screen will display.</li></ul>

How do I view my trip logs?

The *Trip Recorder* screen is used to record trip logs of your current trip. The Trip Recorder only records trip logs if you have chosen to record the logs.



The *Trip Recorder* screen will display.



Complete one of the following:

If you want to ...	Then ...
View statistics for your trips to date	tap  to display the <i>Tripmeter – Global</i> screen.
stop recording your trip logs	tap <b>Stop Logging</b> .
delete your trip logs	<ul style="list-style-type: none"><li>tap <b>Stop Logging</b>.</li><li>tap <b>Delete Logs</b> to remove the logs.</li></ul>



## How do I use the camera?

The camera feature is not available on all models.



Your Navman has a built-in camera with **NavPix™** technology. Pictures taken while you have a GPS fix are called **NavPix** and can be used to navigate to the photographed location.

The *Viewfinder* screen is used to take **NavPix**. The  will display green if your Navman has a GPS fix. If the GPS icon displayed **red** you will only take a standard photo.

Your **NavPix** can be stored on either the Navman internal memory or a memory card and can be viewed in full screen mode. To download new **NavPix** or share your **NavPix** with other users, visit [www.navpix.net](http://www.navpix.net).

## How do I take a NavPix?

### Quick Steps



1. Press  to display the *Viewfinder* screen.  
*Note: To take a NavPix you must have a GPS fix. If the GPS icon does not display green you will only take a standard picture.*
2. Press  again to take a **NavPix**.
3. The captured image is automatically saved in your **NavPix** album.

### Detailed Steps

The *Viewfinder* screen must be displayed before you can take a photo.

1. To display the *Viewfinder* screen, press  on top of your Navman.




2. When the *Viewfinder* screen is displayed, an image of what the camera is focused on will display.  
*Tip: Before you take a NavPix you can customize the lighting and brightness settings.*
3. When you are satisfied with the image displayed in the **Viewfinder**, press  to take the **NavPix**.
  - You can also tap  to take the **NavPix**.
4. The captured image will preview in the **Viewfinder** for two seconds before it is automatically saved in your **NavPix** album on the Navman internal memory.

*Note: If the *Viewfinder* screen is inactive for more than two minutes, the map screen will display.*








# Viewfinder screen

The *Viewfinder* screen allows you to take a **NavPix** and access the camera preferences.

To view the *Viewfinder* screen, press  on top of your Navman.

**Note:** Pressing  will not take a **NavPix** unless the *Viewfinder* screen is displayed.





	Element	Description
<b>1</b>		Captures a <b>NavPix</b> .
<b>2</b>		Displays the <i>Select an Album</i> screen.
<b>3</b>		Returns you to the last screen viewed.
<b>4</b>		Displays the current lighting setting. Tap to view lighting options.
<b>5</b>		Displays the brightness setting. Tap to view brightness options.
<b>6</b>	<b>Viewfinder</b>	Displays the image as it will appear as a <b>NavPix</b> .
<b>7</b>		GPS icon- displays <b>green</b> when a GPS fix is established and <b>red</b> when a GPS fix is unavailable. To indicate the reception strength of a GPS fix,  displays between one and four <b>green</b> vertical bars.







How do I customize camera preferences?

The camera has lighting and brightness settings which you can customize before taking a NavPix.

Lighting options



- 1. To view the *Viewfinder* screen, press .
- 2. From the *Viewfinder* screen, tap .  
The range of lighting options will display.



Setting	Description
	For outdoor use, in bright sunlight.
	For outdoor use, with cloud cover.
	For indoor use, under incandescent lighting.
	For indoor use, under fluorescent lighting.
	For night use; gives longer exposure time to enhance picture quality.
	Automatically selects the most suitable setting for the conditions.

- 3. Tap your preferred lighting option.  
Your selection will be saved.

Brightness options

- 1. Press  to display the *Viewfinder* screen.
- 2. From the *Viewfinder* screen, tap .  
The range of brightness options will display.



- 3. Tap your preferred brightness level.  
Your selection will be saved.

## How do I manage my NavPix?

 
### Album management

The albums contain all your **NavPix** and display them as thumbnails. You can store your **NavPix** in customizable albums on the Navman internal memory or on your memory card.

**Note:** When you take a **NavPix**, it is always saved to the **NavPix** album on the Navman internal memory. You can then copy it to another album or a memory card.



OR

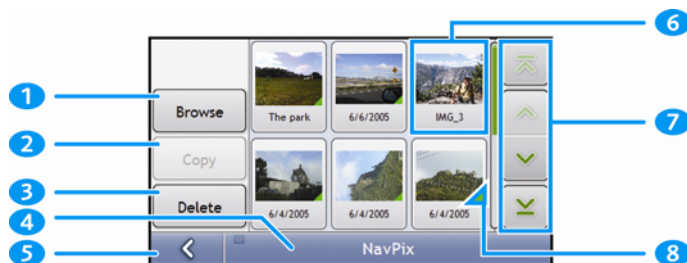

	Element	Description
1	<b>Browse</b>	Displays the <i>Select an Album</i> screen, from where you can select another album.
2	<b>Copy</b>	Copies selected <b>NavPix</b> from the displayed album to the memory card, or from the memory card to the <i>NavPix</i> album.
3	<b>Delete</b>	Deletes selected <b>NavPix</b> from the displayed album.
4	<b>Album title</b>	The title of the album.
5		Displays the previous screen.
6	<b>NavPix thumbnail</b>	<p>A <b>NavPix</b> thumbnail in the displayed album.</p> <ul style="list-style-type: none"> <li>To select a <b>NavPix</b>, tap the thumbnail. The <i>NavPix Details</i> screen will display.</li> <li>To select multiple <b>NavPix</b>, tap and hold the first thumbnail, then drag across the other thumbnails.</li> </ul> <p>When a <b>NavPix</b> is selected it displays with a <b>green</b> border.</p> <p><b>Note:</b> If the <b>NavPix</b> has been given a title it will display beneath the <b>NavPix</b>. If the <b>NavPix</b> has not been given a title, the file name of the <b>NavPix</b> will display.</p>
7	<b>Scroll buttons</b>	Use the scroll buttons to scroll through the <b>NavPix</b> .
8		Displays if the picture is a <b>NavPix</b> , with embedded GPS coordinates.

## How do I copy NavPix to my memory card?

NavPix can be copied from the albums on your Navman internal memory to your memory card and vice versa.

**Note:** The first time a NavPix is copied to your memory card, a folder will be created on the memory card called *NavPix*.

1. From the *Album* screen, tap **Browse**.  
The *Select an Album* screen will display.
2. Select the Album you want to view.
3. Tap and hold, then drag across the screen to select the **NavPix** you want to copy.  
As each **NavPix** is selected, a **green** border will appear around it.
  - To cancel a selection, tap and drag over the picture(s) again.
4. When you have finished the selection, tap **Copy**.
5. A warning screen will display, asking you to confirm or cancel the procedure.  
If confirmed, the **NavPix** will be copied.

## How do I delete NavPix from an Album?

NavPix can be deleted from an Album on your Navman internal memory or your memory card.

 
**Note:** When a NavPix has been saved as a Favourite destination, you will not delete the Favourite if you subsequently remove the NavPix.




1. From the *Album* screen, tap **Browse**.  
The *Select an Album* screen will display.
2. Select the Album you want to view.
3. Tap and hold, then drag across the screen to select the **NavPix** you want to delete.  
As each **NavPix** is selected, a **green** border will appear around it.
  - To cancel a selection, tap and drag across the **NavPix** again.
4. When you have finished the selection, tap **Delete**.
5. A warning screen will display, asking you to confirm or cancel the procedure.  
If confirmed, the **NavPix** will be deleted.

**Tip:** You can also delete a single NavPix via the *Photo Details* screen.

## NavPix management

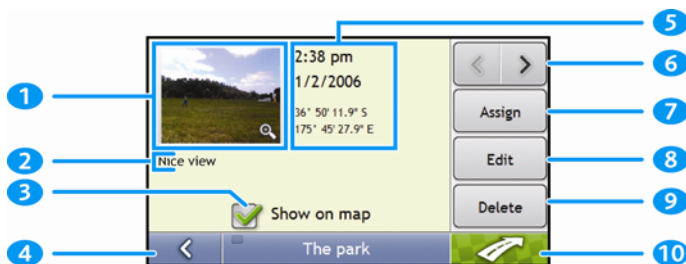The *NavPix Details* screen displays information about your **NavPix**. Tap a **NavPix** to display the *Photo Details* screen.



	Element	Description
1	Thumbnail	A thumbnail of the <b>NavPix</b> . Tap to display the <b>NavPix</b> in full-screen.
2	NavPix Title	The title of the <b>NavPix</b> ; tap <b>Edit</b> to add a title or edit the existing title.
3	Show on Map	When selected, displays an icon on the map at the location the <b>NavPix</b> was taken. <b>Note:</b> Show on map is available only if this is a <b>NavPix</b> with embedded GPS coordinates.
4		Tap to return to your album.
5	Time / Date and Location Coordinates	Displays the time and date the <b>NavPix</b> was taken. Displays the GPS coordinates if available.
6		Tap the scroll buttons to scroll through your album.
7	Save	Allows you to save a <b>NavPix</b> to an existing favourite, if GPS coordinates are associated with the <b>NavPix</b> .
8	Edit	Allows you to edit the name of the <b>NavPix</b> using the <i>Keyboard</i> screen.
9	Delete	Deletes a <b>NavPix</b> from the album on your Navman or memory card.
10		Your route will be calculated and displayed on the <i>3D Map</i> screen. <b>Note:</b> This button is only available if this is a <b>NavPix</b> with embedded GPS coordinates.







How do I view a NavPix in full-screen?

- 1. From the *NavPix Details* screen, tap the thumbnail of the **NavPix**.  
The **NavPix** will appear in full-screen.



*Note:* The icons disappear after a few seconds; tap the screen to have them reappear.

- 2. Complete the following:


If you want to ...	Then ...
zoom into the <b>NavPix</b>	tap  .
zoom out of the <b>NavPix</b>	tap  .
rotate the <b>NavPix</b>	tap  .  The <b>NavPix</b> will rotate 90 degrees anticlockwise each time  is tapped; the <b>NavPix</b> is saved at the new angle.
view parts of the <b>NavPix</b> not displayed on-screen	tap and hold the <b>NavPix</b> , then drag across the screen.
return to the <i>NavPix Details</i> screen	tap  .
scroll through your <b>NavPix</b>	tap  .

How do I add or edit a NavPix description?

A description can be added to your **NavPix** or an existing description can be edited. The description can be a maximum of 34 characters.

- 1. From the *NavPix Details* screen, tap **Edit**.  
The *Keyboard* screen will display.
- 2. Tap each character as required.  
The description will appear at the top of the screen.



- 3. When the description is complete, tap  .  
The *NavPix Details* screen will display, with the new description under the thumbnail.

*Note:* You can only edit names of **NavPix** taken via your Navman.

## How do I navigate to a NavPix?

Your Navman contains preinstalled **NavPix** that you can navigate to. If you have not yet navigated to a **NavPix**, three of the preinstalled **NavPix** will display on the *Go To NavPix* screen. Otherwise, three of your recently used **NavPix** are displayed.

**Note:** To navigate to a **NavPix** location, either a GPS fix must have been available when the **NavPix** was taken, or GPS coordinates have been added using NavDesk.

### How do I navigate to a recent NavPix?



1. Tap the **NavPix** you want to navigate to. The *Preview* screen will display.



2. Tap . Your Navman will calculate the route from your current location. The *3D Map* screen will display.

### How do I navigate to a NavPix I have taken or downloaded, or was preinstalled?



1. Tap a **NavPix**. The *NavPix Details* screen will display.



2. Tap . Your Navman will calculate the route from your current location. The *3D Map* screen will display.

 


# How do I save a NavPix to a favourite?

**Note:** When a **NavPix** is saved to an existing favourite, only the images, and not the GPS coordinates, are associated with the favourite.



- 1. From the *Album* screen, select and tap a **NavPix**.  
The *NavPix Details* screen will display.

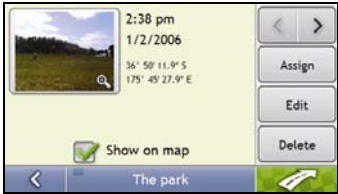

- 2. From the *NavPix Details* screen, tap **Assign**.  
The *Save Photo* screen will display.



- 3. Complete the following:


If you want to ...	Then ...
edit the name of the favourite	<ul style="list-style-type: none"><li>tap . The <i>Keyboard</i> screen will display.</li><li>Enter a name for your Favourite, then tap .</li></ul>
save the <b>NavPix</b> as a Favourite (when GPS coordinates are associated with a picture)	<ul style="list-style-type: none"><li>tap <b>Save as Favourite</b> and select <b>A new favourite</b> from the list. The <b>NavPix</b> is saved as a new Favourite and the <i>Photo Details</i> screen will display.</li></ul> <p><b>Note:</b> You cannot save a <b>NavPix</b> as a favourite if GPS coordinates are not available.</p>
save a picture to an address	<ul style="list-style-type: none"><li>tap <b>Save as Favourite</b> and select a favourite from the list. The <b>NavPix</b> is saved to a favourite and the <i>Photo Details</i> screen will display.</li></ul>

# How do I save a NavPix to a POI?



 **Note:** Only a NavPix with embedded GPS coordinates can be saved as a POI.

1. From the *Album* screen, select and tap a **NavPix**.  
The *NavPix Details* screen will display.

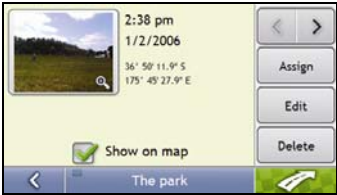

2. From the *NavPix Details* screen, tap **Assign**.  
The *Save Photo* screen will display.



3. Tap **Save as POI**.  
The *Select POI Categories* screen will display.
4. Complete the following:

If you want to ...	Then ...
edit the name of the POI	<ul style="list-style-type: none"><li>▪ tap . The <i>Keyboard</i> screen will display.</li><li>▪ Enter a name for your POI, then tap .</li></ul>
save the <b>NavPix</b> as a POI (when GPS coordinates are associated with a picture)	<ul style="list-style-type: none"><li>▪ tap <b>Save as POI</b> and select <b>POI Category</b> from the list., then tap .</li></ul> <p><b>Note:</b> You cannot save a NavPix as a favourite if GPS coordinates are not available.</p>
create a new custom POI category and save a <b>NavPix</b> as a POI	<ul style="list-style-type: none"><li>▪ tap <b>A new category</b> to create a custom POI category. The <i>keyboard</i> screen will display.</li><li>▪ Enter a name for your POI, then tap . The <i>Select POI Categories</i> screen will display the new POI category.</li><li>▪ select the <b>POI Category</b> from the list, then tap .</li></ul>

## How do I save, e-mail or print NavPix?

To save, e-mail or print **NavPix**, you must first transfer the **NavPix** to your computer; there are two ways to do this:

- Copy the **NavPix** from your Navman to your computer via NavAlbum software on your computer, or
- Copy the **NavPix** from a memory card to your computer via a memory card reader/writer.

### Via NavAlbum

Pictures can be copied from the *Album* on your Navman to your computer using NavAlbum application of NavDesk (see "What is NavAlbum?" on page 69).

NavAlbum is installed on your computer at the same time that you install NavDesk (see "How do I install NavDesk onto my computer?" on page 101).

### Via Memory Card

**NavPix** can be copied from the albums on your Navman internal memory to the *My Pictures* folder on your memory card. The first time a **NavPix** is copied to the memory card, the following folders will be created:

*E:\My Documents\My Pictures*, where "E" is the letter assigned to your memory card drive or reader.

All pictures in *My Pictures* are part of the same album and can be viewed on your Navman.

Once a **NavPix** has been copied to the album on your memory card, you can then use the card with your computer to save, e-mail or print the photo, or take the memory card to a digital photo retailer for printing.

## Hands-free Calling

Bluetooth® wireless technology is not available on all models.



If you have a mobile phone with *Bluetooth* wireless technology, you can use your Navman as a hands-free car kit. Models with Bluetooth capabilities can exchange information over a distance of about 10 metres (30 feet) without requiring a physical connection. For complete list of supported phones, visit [support.navman.com](http://support.navman.com)

**Note:** Before you can use Bluetooth for the first time, you must pair your mobile phone with your Navman. Then each time you use it, you must ensure that the *Bluetooth* wireless feature on your mobile phone is turned on before you begin pairing.

### Pairing your Navman with a Bluetooth mobile phone






1. Tap **OK**.
2. Your Navman will search for nearby *Bluetooth* devices. Ensure your mobile phone has Bluetooth turned on and is in discoverable mode (see your mobile phone user manual for more information). The *Select a device* screen will display a list of nearby Bluetooth devices.  
**Note:** See your mobile phone user manual for more information
3. Select your mobile phone from the list of local *Bluetooth* devices. The *Pairing with phone* screen will display.
4. Tap **Pair** to connect your Navman with your mobile phone. The *About phone* screen will display.
  - If you are prompted for a passkey or device PIN, enter 1234 (see your mobile phone user manual for more information).
5. When prompted, enter the same passkey on your mobile phone to establish a connection.
6. Tap **OK**. The *Phone Menu* screen will display.

**Note:** When you pair your mobile phone with your Navman, a connection is established between them. You can then disconnect or reconnect your mobile phone by tapping  or  on the Navman *Setup* screen.

### Making a phone call using the *Phone Dialler* screen





1. Enter the number you want to call.
2. Tap  to place the call.
  - Tap  to mute the call.
  - Tap  to end or cancel the call.

## Making a phone call to a contact in your phonebook

 






**Note:** If the contact list does not display, tap  to transfer the contact list from your phone. Your phone may disconnect, then reconnect to your Navman during the transfer.

1. Select a contact from the list.  
A call is placed to the contact.
  - Tap  to mute the call.
  - Tap  to end or cancel the call.
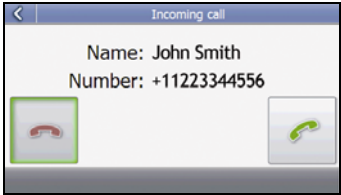
## Receiving a phone call

When you receive a call, the *Incoming call* screen will display.



1. Tap  to answer the call or  to reject the call.
  - Tap  to mute the call.
  - Tap  to end or cancel the call.

## Switching calls between your mobile phone and your Navman (hands-free)

Complete the following:

 
If you want to...	Then...
make and receive calls through your Navman	<ul style="list-style-type: none"><li>▪ tap (icon).</li></ul>
make and receive calls through your mobile phone	<ul style="list-style-type: none"><li>▪ tap (icon).</li></ul>




## How do I view my call history?




From the *Call log* screen you can view a list of Incoming Calls, Outgoing Calls and Missed calls.

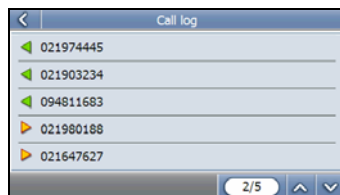

**Note:** If the call log does not display, tap  to transfer the call log from your phone. Your phone may disconnect, then reconnect to your Navman during the transfer.



Icon	Description
	Incoming calls
	Outgoing calls
	Missed calls


- To call a number in your call history, select a number from the list.  
The *Call* screen will display.
- Press  to place a call.  
A call is placed to the number you selected.
  - Tap  to mute the call.
  - Tap  to end or cancel the call.



## How do I view my SMS/text messages?



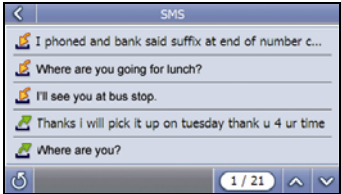

From the *SMS* screen you can view a list of sent and received messages.

**Note:** If the messages do not display, tap  to transfer the messages from your phone. Your phone may disconnect, then reconnect to your Navman during the transfer




Icon	Description
	Received messages
	Sent messages


1. Tap  or  to scroll through the messages.
2. Select a message to view the full message.

**Note:** You cannot send messages via your Navman.

## Receiving a message

When you receive a message, the *Message* screen will display.

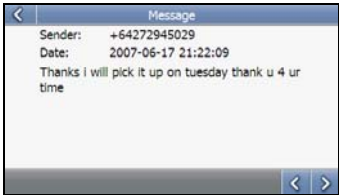

- Tap  to return to the previous screen.

# Traffic

Traffic information is only available in selected countries.

Your Navman can receive current traffic information for all main roads and motorways, enabling you to avoid potential delays on your route. Event messages and traffic icons will display as they occur. If an event message obscures your current location, the map will adjust to display both the message and your location.



## How does my Navman receive traffic information?

You can receive current traffic information on your Navman via the Navman Traffic cradle using the Traffic Message Channel (TMC) service. The TMC service is subscription-free. The traffic cradle may be sold separately.




The Traffic Message Channel (TMC) broadcasts real-time traffic and weather information via the FM Radio Data System (RDS). FM radio stations transmit TMC data on a cycle of several minutes, with hundreds of events able to be broadcast to TMC receivers, such as the Navman Traffic module.

### Traffic status

Your current traffic status is indicated by the colour of the TMC icon.

To view your current traffic status from the map screens, tap  and then tap .

The following table describes the three traffic status icons:

Traffic Status	Description
	<p>The TMC status is <b>grey</b> if traffic is currently inactive due to one of the following conditions:</p> <ul style="list-style-type: none"><li>Your Navman or Traffic module is connecting to the TMC service.</li><li>Your Navman or Traffic module cannot receive TMC data. This may be due to poor radio coverage in the local vicinity.</li><li>You are in a country that is not supported by the Navman Traffic module.</li></ul> <p>Tap to display the <i>Traffic Overview</i> screen.</p>
	<p>The TMC status is <b>orange</b> if one of the following conditions apply:</p> <ul style="list-style-type: none"><li>You have navigated into a country that is not supported by Navman Traffic, but there are still traffic events listed on the <i>Event List</i> screen.</li><li>You have separated your Navman from the Navman Traffic module, or the Navman Traffic module is not receiving power but there are still traffic events listed on the <i>Event List</i> screen.</li></ul> <p>Tap to display the <i>Traffic Overview</i> screen.</p>
	<p>The TMC status is <b>green</b> if your Navman or Traffic module is active and receiving traffic events.</p> <p>Tap to display the <i>Traffic Overview</i> screen.</p>

Your traffic status is displayed in more detail on the *Traffic System Status* screen.



## How will I know when a Traffic Event occurs?

Incoming events are handled according to your Traffic preferences. For more information, see "How do I customize Traffic preferences?" on page 79.

When travelling through an area in which you can receive traffic status, your Navman will decode these events and display them on-screen. An icon will display at the event location on the map screens, and an audible warning is given if an event is on your route. Where the extent of an event is a specific distance, the road will be highlighted and arrows will indicate the direction affected.





A message will display at the bottom of the screen with the road name, the section of road affected and the type of event that has occurred. The message remains on screen for 8 seconds and is added to the *Event List*.

## How do I view a list of all events on my route?

Your Navman creates a list of events as they are received, which is displayed on the *Event List* screen. This screen can only be viewed if the TMC icon is **green** or **orange**.

From the *Traffic Overview* screen, tap .

 


	Element	Description
1	Event description	Displays details of the Event, including: <ul style="list-style-type: none"><li>Name of road and direction in which Event is taking place.</li><li>Location of where Event begins and ends.<ul style="list-style-type: none"><li>&gt; indicates an Event from a location, to a location.</li><li>&lt;&gt; indicates an Event between locations.</li></ul></li><li>Type of Event.</li></ul>
2	Event icon	Displays icon to indicate type of event. See page 130 to view list of icons.
3		Tap to return to the previous screen.
4		Tap to display the <i>Select event sorting type</i> screen, where you can sort events by distance, road name or age.
5	Position indicator	Displays your position in the <i>Event List</i> screen.
6	Scroll buttons	Allow you to view all events by moving up and down through the list.
7	Event number	Displays the number of events in current list.






 
## How do I view traffic details?

There are several ways to view details of an event received by your Navman.

Choose one of the following:

Location	Option
From any of the screens used to view your route	<ul style="list-style-type: none"><li>▪ Tap the Event message when it appears on screen. The <i>Event Details</i> screen will display.</li></ul>
From the <i>Traffic Overview</i> screen	<ul style="list-style-type: none"><li>▪ Tap . The <i>Event List</i> screen will display.</li><li>▪ Select and tap the event you want to view. The <i>Event Details</i> screen will display.</li></ul>
From the <i>Map Menu</i>	<ul style="list-style-type: none"><li>▪ Tap and hold the traffic icon, which displays at the location of the event. The <i>Map View</i> menu will display.</li><li>▪ Tap <i>Show Details</i>. The <i>Event Details</i> screen will display.</li></ul>



	Element	Description
1	Event description	Displays Event details, including: <ul style="list-style-type: none"><li>▪ Time Event was received, or last updated.</li><li>▪ Name of road on which Event is taking place.</li><li>▪ Location of where Event begins and ends.<ul style="list-style-type: none"><li>&gt; indicates an Event from a location, to a location.</li><li>&lt;&gt; indicates an Event between locations.</li></ul></li><li>▪ Type of Event.</li></ul>
2	Event icon	Displays icon to indicate type of Event.
3	Detour information	Displays details of detour recommendation, if any. For more information, see "How do I know if a detour is recommended?" on page 67.
4		Tap to return to the previous screen.
5		<ul style="list-style-type: none"><li>▪ Tap  to view next Event in list.</li><li>▪ Tap  to view previous Event in list.</li></ul>
6	Event number	Displays the number of the event currently displayed and the total number of events in the list.
7		Tap to initiate a new route to avoid the event. <ul style="list-style-type: none"><li>▪ Only available if a detour or re-route is available.</li></ul> <p><b>Note:</b> Un-avoid area is represented by  and is displayed when a re-route has been calculated.</p>

## How do I know if a detour is recommended?


When a Traffic or Clearance event occurs on your route, a detour will always be recommended. The detour event message will display in the status bar on map screens. A detour icon will display at the event location on the 3D and 2D Map screens.

**Note:** Detours are only recommended for Traffic or Clearance Events on a calculated route.

## How do I avoid an event on my route?


From the *Traffic Overview* screen, tap



1. From the *Event List* screen, tap the event.  
The *Event Details* screen will display.
2. If a detour has been calculated to avoid an event on your route,  is available; tap to accept the new route and avoid the event.  
The *3D Map* screen will display.

## How do I cancel a detour around an event on my route?

If you have chosen to avoid an event and a new route has been calculated, you can cancel the detour around the event and return to your original route.

1. From the *Event List* screen, tap the Event you want to un-avoid.  
The *Event Details* screen will display.
2. Re-route information displays at the bottom of the screen.
  - If a re-route has been calculated,  is available; tap to accept the new route.  
The *3D Map* screen will display.

## How do I automatically avoid all traffic and clearance events on my route?

To automatically avoid all traffic and clearance events see Traffic preferences on page 118.

## Traffic Messages

The *Event Details* screen displays detour status information.

### Detour Not Available messages

If a detour is not available, one of the following messages will display:

Message	Description
This Event is not locatable This clearance is not locatable	A specific location for the Event cannot be identified.
This Event does not affect your route This clearance does not affect your route	The Event is not on the current leg of your journey, or is behind your current position.
You are avoiding this Event You have accepted this clearance	The Event is not on the current leg of your journey.
You are too distant to re-route You are too distant to accept this clearance	The Event is currently too distant to affect your journey.
Detour not found Clearance route not found	A detour / re-route could not be calculated.

### Detour recommended messages

If a detour is recommended, one of the following messages will display:

Message	Description
Finding detour.... Recalculating route.....	Your Navman is calculating a new route. During calculation, the % complete will display. <a href="#">Note: Exiting this screen before the new route is calculated will cancel the operation.</a>
Detour distance..... Clearance change	A detour has been calculated. The difference between the distance of your current route and the proposed route is displayed.

### How do I customize Traffic preferences?



To customize Traffic preferences, see “Traffic” preference section on page 79.

## What can I customize?

There are various customization options available to enhance your navigation experience.

The *Preferences* menu screens are accessed by pressing

 


- To move forward through the *Preferences* screens, tap .
- To revisit the previous screen, tap .

## Route Options

You can enhance your navigation experience by modifying aspects of your route and route calculation.

### Route Calculation 1/4

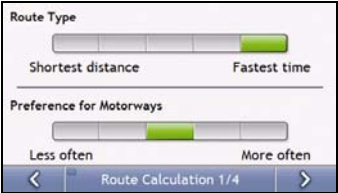

Complete the following:

If you want to...	Then...
change the route type	<p>move the <b>Route Type</b> slider towards <b>Fastest time</b> to give high priority to the fastest time when calculating a route.</p> <p>move the <b>Route Type</b> slider towards <b>Shortest distance</b> to give high priority to the shortest distance when calculating a route.</p>
change the preference for motorways	<p>move the <b>Preference for Motorways</b> slider towards <b>Less often</b> to use roads other than motorways where possible when calculating a route.</p> <p><b>Note:</b> This option may not completely remove <b>Motorways</b> from a route.</p> <p>move the <b>Preference for Motorways</b> slider towards <b>More often</b> to use motorways where possible when calculating a route.</p>

- Your preferences are automatically saved.

## Road Types 2/4

Select your routing preferences for the following road types:

	Avoid	Warn
Toll roads	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Unsurfaced roads	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Ferry routes	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

< Road Types 2/4 >

Complete the following:

If you want to...	Then...
avoid toll roads	select the <b>Toll roads</b> check box in the <b>Avoid</b> column.
receive a warning if your route includes toll roads	select the <b>Toll roads</b> check box in the <b>Warn</b> column. The warning will display at the start of every trip containing a toll road.
avoid unsurfaced roads	select the <b>Unsurfaced roads</b> check box in the <b>Avoid</b> column.
receive a warning if your route includes unsurfaced roads	select the <b>Unsurfaced roads</b> check box in the <b>Warn</b> column. The warning will display at the start of every trip containing unsurfaced roads.
avoid ferry routes	select the <b>Ferry routes</b> check box in the <b>Avoid</b> column.
receive a warning if your route includes ferry routes	select the <b>Ferry routes</b> check box in the <b>Warn</b> column. The warning will display at the start of every trip containing ferry routes.

- Your preferences are automatically saved.



Driver Alerts 3/4

 


Complete the following:

If you want to...	Then...
enable a visual warning if the <i>Main Menu</i> screen is accessed in a moving vehicle	select the <b>Warn me not to operate my Navman while driving</b> check box.
enable a warning chime when travelling at or above a designated speed	select the <b>Alert me when my speed exceeds</b> check box.
select your preferred speed	select your preferred speed from the <b>Speed</b> box.

- Your preferences are automatically saved.

Data Recording 4/4

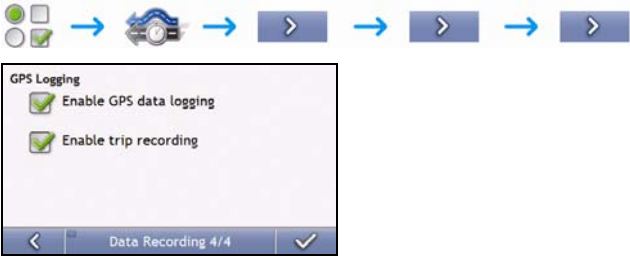

Complete the following:


If you want to...	Then...
record a GPS log of your trips	select the <b>Enable GPS data logging</b> check box.
record mileage that can be imported into NavDesk to create expense reports	select the <b>Enable trip recording</b> check box.

- Your preferences are automatically saved.

# Map Display

 You can change the look and behaviour of the *Map* screens by customizing the *Map Display* preferences.

## Map Display 1/3

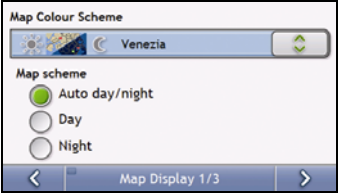


Complete the following:

If you want to...	Then...
change the map colour scheme	select your preferred scheme from the <b>Map Scheme</b> box.
set the screen contrast to automatically adjust	select the <b>Auto day/night</b> option.
improve screen contrast in light or dark conditions	select either the <b>Day</b> or the <b>Night</b> option to manually adjust the contrast.

- Your preferences are automatically saved.

## Map Display 2/3

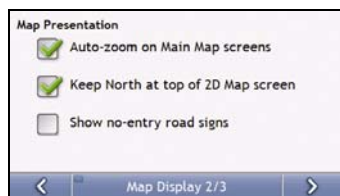 


Complete the following:

If you want to...	Then...
enable automatic zooming during navigation	select the <b>Auto-zoom on main map screens</b> check box. If selected, the <i>3D Map</i> and <i>2D Map</i> screens will automatically zoom in or out, depending on your speed, to allow optimal viewing of your route.
display North at the top of the <i>2D Map</i> screen	select the <b>Keep North at top of 2D Map screen</b> check box.  <b>Note:</b> If not selected, the direction you are travelling in will display at the top of the <i>2D Map</i> screen.
display "no entry" icons on "no entry" roads on the <i>2D Map</i> and <i>3D Map</i> screens	select the <b>Show no-entry road signs</b> check box.

- Your preferences are automatically saved.

 Select Map 3/3

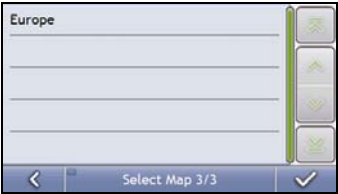

Complete the following:


If you want to...	Then...
use maps from a different continent	select a different continent from the maps you are currently using. When selected, the maps for the new continent will load and the <i>3D Map</i> screen will display.

- Your preferences are automatically saved.

## Map POIs

 Points of Interest (POIs) are grouped into categories. You may choose to either display (or hide) icons of all POI categories on the map screens, or only display the icons from selected categories.

For example, you may only be interested in entertainment venues and want to disable other categories such as schools.

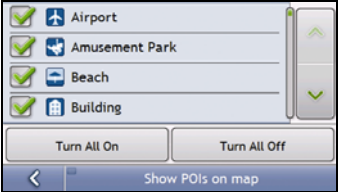


Complete the following:

If you want to...	Then...
display all POI icons (ie, icons from all categories)	Tap <b>Turn All On</b> .
display no POI icons	Tap <b>Turn All Off</b> .
select a specific POI category icon for display on the map screens	select the required POI category checkbox; repeat until all required categories are selected.

- Your preferences are automatically saved.

 Volume

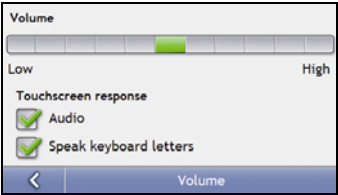


Complete the following:

If you want to...	Then...
increase or decrease the volume	move the <b>Volume</b> slider towards <b>High</b> to increase the volume. move the <b>Volume</b> slider towards <b>Low</b> to decrease the volume.
hear a tone when you tap the touch screen	select the <b>Audio</b> check box.
hear keyboard characters spoken to you	select the <b>Speak keyboard letters</b> check box.

- Your preferences are automatically saved.

# Screen

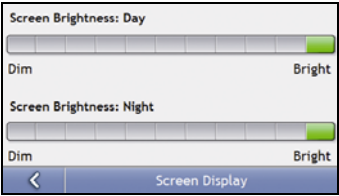 

Complete the following:

If you want to...	Then...
change the screen brightness	<p>move the <b>Screen Brightness</b> slider towards <b>Bright</b> to increase screen brightness.</p> <p>move the <b>Screen Brightness</b> slider towards <b>Dim</b> to decrease screen brightness.</p> <p><b>Warning:</b> Your Navman can heat up when the <i>Brightness</i> scale is set above 70% - i.e., when more than seven rectangles are coloured - therefore, use lower brightness whenever acceptable.</p> <p><b>Tip:</b> The screen brightness can also be adjusted using the remote control (sold separately).</p>

- Your preferences are automatically saved.



## POI Alerts

The POI Alert preferences allow you to set a warning chime and/or visual warning to Point of Interest categories that you have installed via NavDesk (Custom POIs). You may also be able to set warnings to certain POI categories that were preinstalled on your Navman or available by subscription, such as Safety Cameras.

If you have a route set, the warnings will occur when you are a certain distance (set by the **Warning Distance** preference) from the POI on your route.

If you do not have a route set, the warnings will occur when you are in the vicinity of the POI.



- 1. Tap a custom POI category.  
The activation preferences for the selected category will display.



- 2. Complete the following:

If you want to...	Then...
display locations in this category on the map	select the <b>Display on the map</b> check box.
enable a warning chime when locations in this category are in close proximity	select the <b>With an audible alert</b> check box.
enable a visual warning when locations in this category are in close proximity	select the <b>With a visual alert</b> check box.
select the distance at which the warnings will activate	move the <b>Warning distance</b> slider to select the distance at which the warnings will activate.

- Your preferences are automatically saved.

## GPS

### GPS Status

Signals are transmitted by Global Positioning System (GPS) satellites orbiting the Earth. The *GPS Status* screen provides a visual representation of the information being received.

Latitude and longitude are displayed, along with ground speed, the heading in degrees and a north-pointing compass. The strength of each satellite is displayed on a bar chart.



The satellites available from your current position are shown as grey, red and green coloured bars:

Bar colour	Description
Grey	No signal.
Red	A valid signal, but not being used to fix your position.
Green	A valid signal being used to fix your position.

### Resetting your GPS fix

Occasionally, the GPS fix may need to be reset. This may occur if the receiver has been transported a long distance since last being used; for example, to a different country, and is still trying to establish the previous position.

Complete the following:

If you want to...	Then...
reset the GPS	tap <b>Reset GPS</b> .

Setting your GPS mode



GPS mode

☒

Normal

☐

WAAS (only available in USA)

☐

EGNOS (only available in Europe)

<

Set GPS Mode 2/2

>

Complete the following:

 
If you want to...	Then...
use GPS	select the <b>Normal</b> option.
use WAAS	select the <b>WAAS (only available in USA)</b> option.
use EGNOS	select the <b>EGNOS (only available in Europe)</b> option.

**Note:**  
**WAAS** - Wide Area Augmentation System is a navigation system developed for civil aviation by the Federal Aviation Administration (FAA), a division of the United States Department of Transportation (DOT).  
**EGNOS** - European Geostationary Navigation Overlay Service is a satellite based augmentation system (SBAS) under development by the European Space Agency, the European Commission and EUROCONTROL.

**Tip:** You should only change the default setting if you are experiencing poor GPS performance.

- Your preferences are automatically saved.

## Language

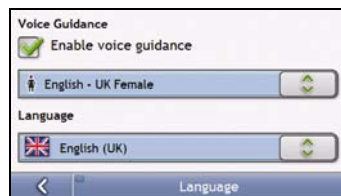

Complete the following:

If you want to...	Then...
enable voice guidance	select the <b>Enable voice guidance</b> check box.
change the on-screen language	select your preferred language from the <b>Language</b> box and tap <b>OK</b> . Your language preference is saved and the map screen is displayed.
change the voice scheme	select your preferred voice scheme from the <b>Voice Guidance</b> box. <a href="#">Note: Only voice schemes that are compatible with the chosen language are displayed.</a>

- Your preferences are automatically saved.

## Traffic

You can view your current traffic system status and change options by customizing the traffic preferences.

### Traffic System Status



OR

From the *Traffic Overview* screen:



The **Tuner** section displays the name and frequency of the radio station currently being used to receive traffic event information. A bar shows the strength of the traffic signal being received; the more green bars, the stronger the signal.

Complete the following:

If you want to...	Then...
change your preferred radio station	select your preferred radio station from the <b>Preferred Station</b> dropdown .

- Your preferences are automatically saved.

## Traffic Event Notification



OR

From the *Traffic Overview* screen:



☒ Notify me about nearby traffic events  
☒ Only notify me about events on my route  
☒ Only notify me if a detour is recommended  
☐ Automatically accept recommended detours

 
<
Traffic Event Notification
>

Complete the following:

If you want to ...	Then ...
turn on/ off traffic event notification	select the <b>Notify me about nearby traffic events</b> check box to receive traffic event notification.  clear the <b>Notify me about nearby traffic events</b> check box to turn off traffic event notification.  <a href="#">Note: Event icons will still display on the 3D and 2D Map screens.</a>
be notified about events that affect your current route	select the <b>Only notify me about events on my route</b> check box.
be notified only when a detour is recommended	select the <b>Only notify me if a detour is recommended</b> check box
automatically accept recommended detours and have a new route calculated	select the <b>Automatically accept recommended detours</b> check box.

- Your preferences are automatically saved.

Select event sorting type

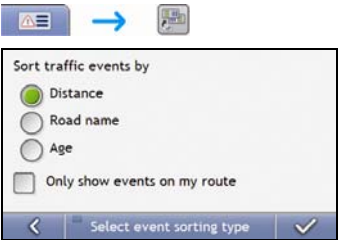


Complete one the following:

If you want to ...	Then ...
sort events by distance	select the <b>Distance</b> check box.
sort events by road name	select the <b>Road name</b> check box.
sort events by age	select the <b>Age</b> check box
only see events that occur on your route	select the <b>Only show events on my route</b> check box.

- Your preferences are automatically saved.

## Power

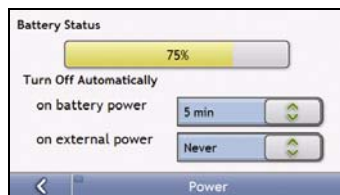 

The **Battery Status** bar shows the percentage of power left in the Navman battery; the words **External Power** will display when the battery is charging from an external power source. To charge the battery, see "Internal battery" on page **Error! Bookmark not defined..**

Complete the following:

If you want to...	Then...
change the time to elapse before turning off, when using battery power	tap the <b>on battery power</b> box and select a time to elapse before turning off; select <b>Never</b> for the Navman to never automatically turn off. <i>Note: If you select <b>Never</b>, your Navman will turn off if the power is very low.</i>
change the time to elapse before turning off, when using external power	tap the <b>on external power</b> box and select a time to elapse before turning off; select <b>Never</b> for the Navman to never automatically turn off.

- Your preferences are automatically saved.



# Keyboard



Complete the following:

If you want to...	Then...
use an alphabetic keyboard for entering information	select the <b>Use alphabetic type (a, b, c,...)</b> option.
use a QWERTY keyboard for entering information	select the <b>Use QWERTY type</b> option.
use a keypad-type keyboard (predictive text) when searching for an address	select the <b>Use keypad type (abc, def...) for address searches</b> check box.

- Your preferences are automatically saved.

## How does predictive text (abc, def...) work?

Predictive text allows addresses to be searched by a single key-press for each letter, as opposed to the multiple key-presses. As you enter a letter of an address, your Navman will compare all possible combinations against the maps you have installed and determine which address you intended to type.

 
For example:

To enter **London**, tap **JKL MNO DEF**.  
Your Navman will compare all possible combinations and display **London** as a search result. You can add further letters to narrow the search.

## Units

You can change the units used by your Navman by customizing the measurements preferences.

### Units 1/2

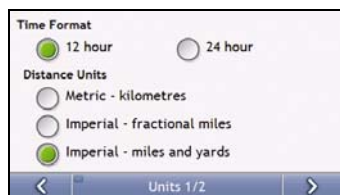

Complete the following:

If you want to...	Then...
change the time format	select either the <b>12 hour</b> or <b>24 hour</b> option
change the distance units <sup>1</sup>	select your preferred distance unit type from the <b>Distance Units</b> options.

- Your preferences are automatically saved.

<sup>1</sup> Only available when AU English, UK English or US English language is selected.

Units 2/2



Position Format

☐ Decimal degrees

☒ Degrees, minutes and seconds

<

Units 2/2


✓

Complete the following:

If you want to ...	Then ...
change the latitude, longitude position format	select either the <b>Decimal degrees</b> or the <b>Degrees, minutes and seconds</b> option.

- Your preferences are automatically saved.

## Start-up

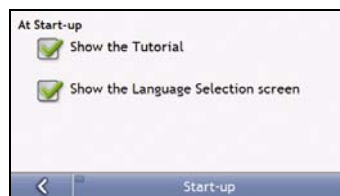 


Complete the following:

If you want to...	Then...
show the <i>Tutorial</i> when you turn on your Navman	select the <b>Show the Tutorial</b> checkbox.
show the <i>Language Selection</i> screen when you turn on your Navman	select the <b>Show the Language Selection screen</b> checkbox.

- Your preferences are automatically saved.

 Saved Info

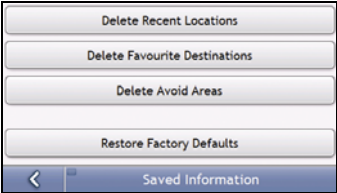

Complete the following:

If you want to...	Then...
delete recent locations	tap <b>Delete Recent Locations</b> .
delete favourites	tap <b>Delete Favourite Destinations</b> .
delete avoid areas	tap <b>Delete Avoid Areas</b> .
restore factory default settings	tap <b>Restore Factory Defaults</b> . <small>Note: The Restore Factory Defaults option does not delete recent locations or saved favourite destinations.</small>
clear all settings; for example, for use in a rental car	complete all of the above.


- When the warning dialog box displays, tap **Yes**.

## Bluetooth Settings
 
### Bluetooth On/Off



OR

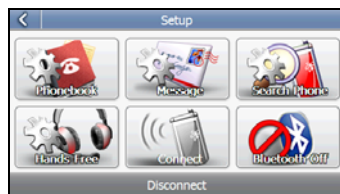

Complete the following:

If you want to...	Then...
switch on Bluetooth	<ul style="list-style-type: none"> <li>tap .</li> </ul>
switch off Bluetooth	<ul style="list-style-type: none"> <li>tap .</li> </ul>

- Your preferences are automatically saved.

## Phonebook setup



OR



Complete the following:

If you want to...	Then...
automatically import your mobile phonebook to your Navman when connected	select the <b>Import phonebook automatically</b> check box.
store your phonebook on the memory card of your Navman	select the <b>Keep phonebook in memory card</b> check box.

- Your preferences are automatically saved.

## SMS Setup



OR



Complete the following:

If you want to...	Then...
automatically import your SMS/text messages from your mobile phone to your Navman when connected	select the <b>Import message automatically</b> check box.
automatically display new messages when they are received	select the <b>Popup incoming message automatically</b> check box.
store your messages on the memory card of your Navman	select the <b>Keep messages in memory card</b> check box.

 
- Your preferences are automatically saved.



## Hands-free Setup



OR

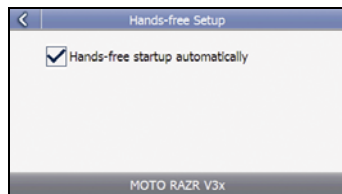

Complete the following:

If you want to...	Then...
make and receive calls on your Navman (hands-free) by default	select the <b>Hands-free startup automatically</b> check box.


- Your preferences are automatically saved.

## Tutorial

The *Tutorial* displays when you turn your Navman on, unless you have cleared the **Show tutorial on start-up** check box.

You can view the *Tutorial* at any other time:



- To prevent the *Tutorial* from displaying again on startup, clear the **Show on start-up** check box to clear it.
- To move forward through the *Tutorial* screens, tap .
- To revisit the previous screen, tap .

About



This preference contains copyright and trademark information.

Shop Demo



Complete the following:

If you want to...	Then...
enable a shop demonstration of SmartST to be played	tap <b>Shop Demo</b> on the preference screen. After a 10 second delay, the route demonstration will navigate between your first and second favourite.

## What is NavDesk?

NavDesk is a suite of tools you can use to access greater functionality and product information via your computer.

NavDesk allows you to:

- obtain software updates
- manage maps
- manage custom POIs
- manage safety camera subscriptions
- report trip mileage
- transfer pictures from your Navman using NavAlbum
- browse the Navman website for special offers.

### Can I use NavDesk with my computer?

Ensure your computer has the following *minimum* system requirements before installing NavDesk:

- IBM compatible PC,
- Microsoft® Windows® Vista, XP SP2 or 2000 SP4,
- Internet Explorer 6 or higher,
- DVD drive,
- USB port,
- Internet connection for activation.

**Note:** For Windows 2000 and XP users, Microsoft .NET 2.0 will be installed on your computer as part of the installation of NavDesk.

### How do I install a map for the first time?

The most common task performed using NavDesk is the installation of a new map to your Navman internal memory or memory card. Complete the following procedures:

Step	Action
1	Install NavDesk on your computer (see "How do I install NavDesk onto my computer?" on page 101).
2	Check for software updates for NavDesk on your Navman (see "How do I keep NavDesk up-to-date?" on page 103).
3	Install one or more maps on your Navman (see "How do I install maps onto my Navman?" on page 105).

## How do I install NavDesk onto my computer?

**Note:** Before you begin:

Ensure that your computer meets the minimum system requirements for NavDesk, especially:

- i. Ensure that *Internet Explorer 6* or higher is installed on your computer before you install NavDesk, even if it is not your default browser.
- ii. Windows XP users, ensure that *Windows XP Service Pack 2* or higher has been applied before you install NavDesk.



1. Close all programs on your computer.
2. Insert the NavDesk Application Installer DVD into your computer DVD drive.  
The NavDesk installer will start.

If your computer does not automatically launch the DVD, start the installation manually:

Start → Run.

Type **D:\Install.exe** where “D” is the letter assigned to your DVD drive, then click **OK**.



3. Select your preferred language for NavDesk.
4. Click **Install NavDesk**.
5. Follow the screen prompts to install NavDesk:
  - Review and accept the Licence Agreement for NavDesk when prompted.
  - Select a destination folder for NavDesk when prompted.
  - When the installation has finished, click Finish.  
NavDesk will open.
6. If prompted to connect your Navman to your computer, complete the following:
  - Plug the large end of the USB cable directly into a USB port on your computer (not a USB hub) and plug the small end into the **USB Socket** (  ) on the bottom of your Navman.  
**Tip:** Where possible, plug the USB cable into a USB port at the *back* of your computer.
  - Press and hold  to turn your Navman on.
  - When the following screen displays on your Navman, click **Next**:



 
7. If prompted to update your Navman software, follow the on-screen prompts.

You are now ready to use NavDesk to install maps to your Navman.

## NavDesk features

Depending on your Navman model, certain NavDesk features may not be functional.

Start → All Programs → Navman → NavDesk

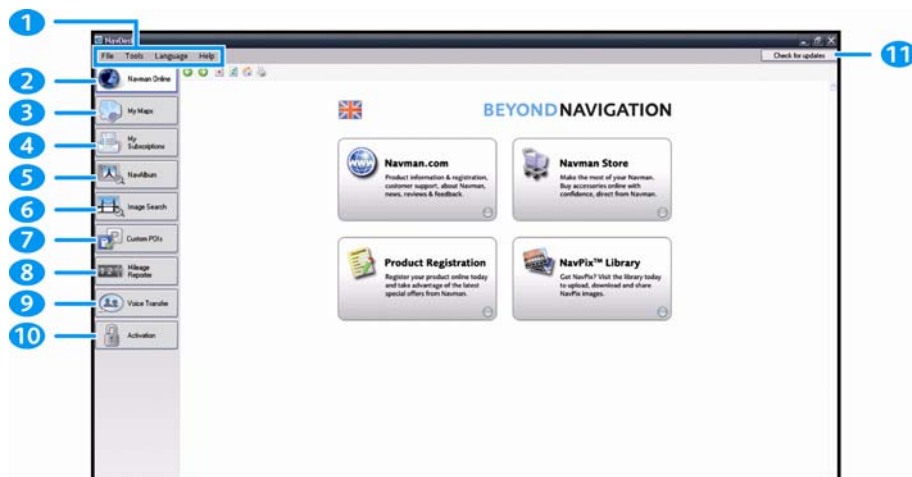

	Element	Description
1	Menu bar	Menus that provide access to basic NavDesk functionality.
2	Navman online	Displays the Navman website.
3	My Maps	Application used to install and manage maps.
4	My Subscription	Information on your current subscriptions, including safety camera subscription.
5	NavAlbum	Application used to transfer <b>NavPix</b> from your Navman to your computer. The software enables you to: <ul style="list-style-type: none"> <li>Manage albums</li> <li>Copy</li> <li>Delete</li> <li>More <b>NavPix</b> or albums between the <b>NavPix</b> library on your Navman and the <b>NavPix</b> library on your computer.</li> </ul>
6	Image Search	Search and download <b>NavPix</b> from a website. <b>Note:</b> This feature is powered by Flickr.
7	Custom POIs	Application that allows you to import custom POIs.
8	Mileage Reporter	Uses data recorder on your Navman allowing you generate expense reports on the mileage/estimated fuel usage of your trip.
9	Voice Transfers	Application that allows you to install or remove voice files from your Navman.
10	Activation	Application used to activate a product key when you purchase a subscription.
11	Check for updates	Click to check online for software updates or download software updates.

## How do I keep NavDesk up-to-date?

We recommend that you regularly use NavDesk to check the Navman server for NavDesk software updates.

**Note:** *Updating software is different from upgrading software:*  
When you **update** NavDesk, the latest service packs and bug fixes are downloaded from the Navman server and applied to your Navman.  
To **upgrade** NavDesk, you must first purchase a new version of NavDesk from a retailer, then install it on your Navman.

### How do I update NavDesk?

1. If you connect to the Internet via a dial-up connection, connect to the Internet now.
2. Open NavDesk, follow the prompts, then click **Check for updates**.  
Your computer will connect to the Navman server to check for software updates.
3. If a software update is available, complete the following:
  - a) Click **Update available**.  
The Navman website will open.
  - b) Select the update for your region and download it to your computer.
  - c) On the *Setup* menu, select **Update software**, then **Update software on Navman**.  
Follow the prompts to update your Navman software.

### NavDesk Preferences

Tools → Options → General

 
Complete one of the following:

If you want to ...	Then ...
automatically check for software updates	▪ select the <b>Auto check for software updates</b> check box. If a software update is available, complete step 3 above.
upgrade from a previous version of NavDesk	Follow the instructions in the <i>Installation Guide</i> or <i>Upgrade Guide</i> that came with your NavDesk upgrade.
change the NavDesk measurement to metric units	▪ Select the <b>Use Metric Units</b> check box.
change the NavDesk measurement to decimals	▪ Select the <b>Decimal Degrees</b> check box.

## My Maps

The My Map application allows you to install new maps, remove maps from your device and purchase new maps.

Start → All Programs → Navman → NavDesk → My Maps

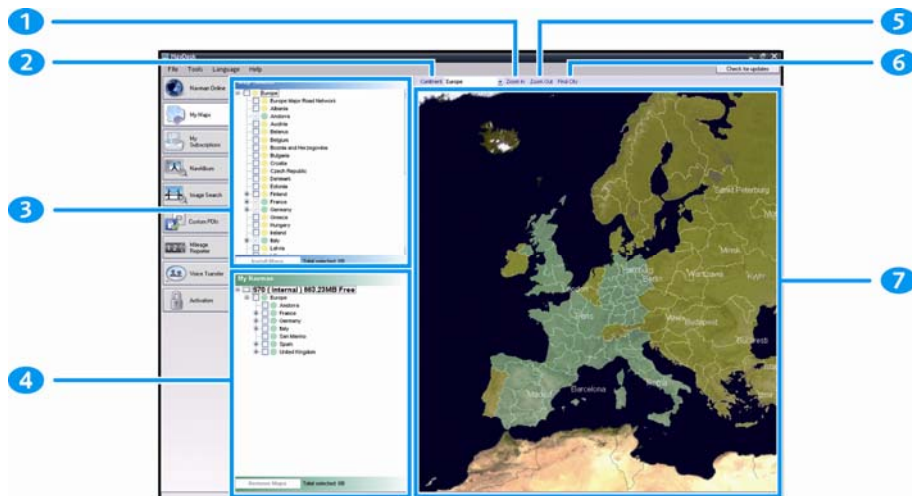

	Element	Description
1	Zoom In	Click to zoom in.
2	Continent	A drop down list of continents that have maps available for your Navman.
3	Map Source	A list of maps on the DVD or available for purchase via the Navman store website.
4	My Navman	A list of maps installed on your Navman.
5	Zoom Out	Click to zoom out.
6	Find City	Click to open the <i>Find City</i> window to search for a city or town.
7	Globe	A map of the world or a continent selected indicating the maps: <ul style="list-style-type: none"> <li>▪ on the current DVD,</li> <li>▪ installed on your Navman or memory card, or</li> <li>▪ available from Navman.</li> </ul>



## **How do I install maps onto my Navman?**

Your Navman comes with one or more pre-activated maps.

You can install maps from the enclosed DVDs to a memory card or your Navman internal memory; however you may need to purchase a Map Product Key to activate the maps.

## **Which map should I install?**

If you are not sure which map contains the town or city that you want to install, you can use the *Find City* window to identify the correct map. For more information, see "How do I know which map contains a particular city or town?" on page 108.

How do I install maps from DVD?

- 1. Open NavDesk, if it is not already open:  
*Start → All Programs → Navman → NavDesk*
- 2. Click **My Maps**.  
The *My Maps* application will display.
- 3. Insert a Map DVD into your computer DVD drive.
  - The maps that are already installed on your Navman are **green**.
  - The maps that are unlocked and ready to be installed to your Navman are **amber**.
  - The maps that require activation before being installed to your Navman are **red**.
  - The maps that are available for purchase from Navman are **blue**.

**Note:** If your computer opens Windows Explorer when the DVD is inserted, close the Windows Explorer window.



- 4. Complete the following:

If the map to be installed is ...	Then ...
amber	go to step 7.
red	the map needs to be activated via the Internet before it can be installed; continue to step 5.

- 5. If you connect to the Internet via a dial-up connection, connect to the Internet now.
- 6. Follow the prompts to activate your Map Product Key, including:
  - Enter the Map Product Key when prompted.



- Your computer will connect to the Internet and activate your Map Product Key.
- When activation has completed, the map will change colour to **amber**; continue to step 7.



7. Click the map you want to install to your Navman.  
The map will change colour to **green** to indicate it has been selected.

- To deselect a map, click the map again.

**Note:** You may need to install multiple maps to cover the required geographical area.

8. Complete the following:

If you want to ...	Then ...
select an <b>amber</b> map	go back to step 7.
select a <b>red</b> map	the map needs to be activated via the Internet before it can be installed; go back to step 5.
install the selected maps to your Navman	continue to step 9.

9. Select the destination media for the selected maps, then click **Transfer Now**.  
The selected maps will be installed and change colour to **green**.



10. To use your Navman, disconnect the USB cable.



**WARNING** Do not disconnect the USB cable from the Navman USB Socket until the installed map or maps have changed colour to **green**.

 
## How do I remove maps from my Navman?

1. Click **My Maps**.  
The *My Maps* application will display.
2. From the My Navman panel, select the check box next to the map you want to remove.
3. Click **Remove** maps to remove the selected maps.
4. Confirm that you want to remove the selected map when prompted.  
The map is removed from your Navman.

## How do I know which map contains a particular city or town?

Use the *Find City* window to find the map that contains a particular city or town.

1. Click **My Maps**.  
The *My Maps* application will display.
2. On the **My Maps** panel, click **Find City**.  
The *Search for City* window will open.

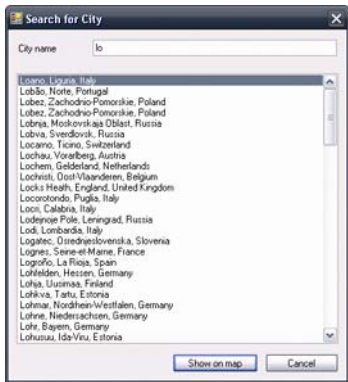

3. Type the name of the city or town in the **City Name** field.  
The list of available cities will reduce to match your search.
4. Select the name of the city or town, then click **Show on Map**.  
The globe will rotate to centre on the selected city or town.

## My Map Preferences

Tools → Options → My Maps

If you want to ...	Then ...
show longitude and latitude lines	<p>select the <b>Show Graticule</b> check box. The longitude and latitude lines will display.</p> <p><b>Note:</b> To view the latitude and longitude, you need to have a region selected.</p>

## What is a Major Road Network map?

### Continuous continental navigation

Navigation between particular countries is not available on all models.

Major Road Network maps allow you to seamlessly navigate between installed maps without installing maps of all regions along your route. Each Major Road Network map covers a large area, such as Western Europe, and contains main roads that connect cities and towns. You can select a road or Point of Interest on the Major Road Network map as your departure point or destination.

All Major Road Network maps:

- contain roads and ferry connections of high national and international importance.
- use less memory than would be necessary to install all equivalent detailed maps.
- exclude smaller roads and have a reduced level of geographical detail.

### How do I install or reinstall a Major Road Network map?

 
Major Road Network maps can be installed to a new memory card or reinstalled to your Navman the same way detailed maps are installed. For more information, see "How do I install maps from DVD?" on page 106.

## NavAlbum

Depending on your Navman model, certain NavAlbum features may not be functional.


NavAlbum is a NavDesk application which allows you to copy, delete or move pictures or albums between the **NavPix** library on your Navman and the **NavPix** library on your computer. You can upload them to [www.navpix.net](http://www.navpix.net) to share with other **NavPix** users.

Start → All Programs → Navman → NavDesk → NavAlbum

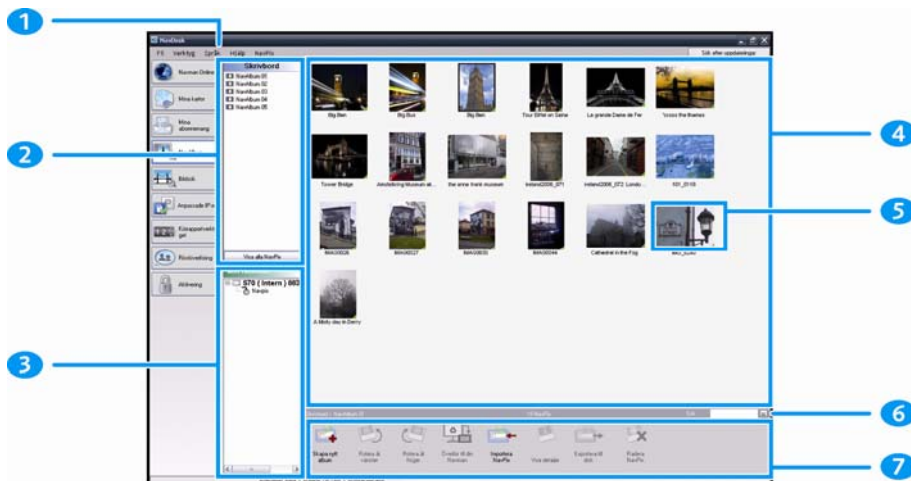

	Element	Description
1	NavPix menu	Gives access to NavAlbum functionality.
2	Desktop albums	Displays a list of all albums stored in the <b>NavPix</b> library on your computer.  Click an album to display its contents in the <b>Album display area</b> .  Click the <b>View all pictures</b> button to display all pictures stored in the <b>NavPix</b> library on your computer.
3	My Navman albums	Displays a list of albums stored on the Navman internal memory and on the memory card if one is inserted.  Click an album to display its contents in the <b>Album display area</b> .
4	Album display area	Displays thumbnails of pictures in the selected album.
5	Selected picture	When a thumbnail is selected it displays with a blue border.
6	Search	Type to search for a <b>NavPix</b> by name.
7	Toolbar	When a picture is selected, the icons which can be used will be active.

 
Toolbar

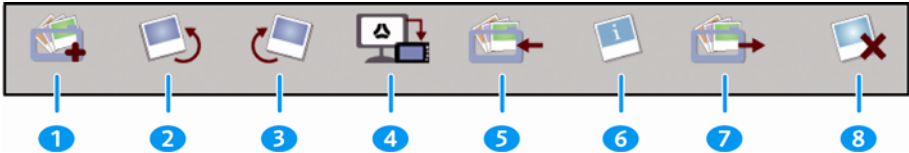

The following options are available on the toolbar:

	Button	Description
1	Create new album	Click to create a new album in the <b>NavPix</b> library you are viewing.
2	Rotate left	Rotates the selected <b>NavPix</b> 90° to the left.
3	Rotate right	Rotates the selected <b>NavPix</b> 90° to the right.
4	Transfer to your Navman or Transfer to your computer	<ul style="list-style-type: none"><li>▪ If you are viewing <b>NavPix</b> in the <b>NavPix</b> library on your computer, this will display as <b>Transfer to your Navman</b>. Click to transfer the selected <b>NavPix</b> to your Navman.</li><li>▪ If you are viewing <b>NavPix</b> in the Navman library this will display as <b>Transfer to your computer</b>. Click to transfer the selected <b>NavPix</b> to the <b>NavPix</b> library on your computer.</li></ul>
5	Import pictures	Imports <b>NavPix</b> from your computer to the <b>NavPix</b> library on your computer.
6	View details	Click to view the selected <b>NavPix</b> and edit <b>NavPix</b> details, including: <ul style="list-style-type: none"><li>▪ <b>NavPix</b> name</li><li>▪ latitude</li><li>▪ longitude</li><li>▪ description.</li></ul>
7	Export to disk	Click to save <b>NavPix</b> to your computer or a network drive.
8	Delete	Click to delete the selected <b>NavPix</b> .

## How do I use NavAlbum?

**Tip:** Before you begin, ensure your Navman is correctly plugged into your computer: Plug the large end of the USB cable directly into a USB port on your computer (not a USB hub); plug the small end into  on the side of your Navman.

## How do I copy NavPix or albums from my Navman to NavAlbum?

**NavPix** taken with your Navman can be saved on your computer, printed, emailed to friends or shared with other **NavPix** users around the world.

1. From the **My Navman** section, select the album containing your required **NavPix**.  
Thumbnails of the **NavPix** in the selected album will display in the **Album display area**.
2. Either click and drag the required **NavPix** to an album in the **Desktop albums** section, or click the **Transfer to your computer** icon on the toolbar.

**Note:** If an album is not selected in the **Desktop albums** section, you will be prompted to either select one, or create a new album.

3. Repeat steps 1 and 2 to copy **NavPix** from another album.

## How do I transfer pictures from NavAlbum to my Navman?

You can transfer pictures from your computer to your Navman, including **NavPix** downloaded from [www.navpix.net](http://www.navpix.net). You can import any JPEG (.jpg) into NavAlbum, add or edit GPS information, and then copy the picture to your Navman.

1. From the **Toolbar** section, select **Import NavPix**.  
The *Open* dialog box will open.
2. Select a **NavPix** from an album on your computer and click **Open**.  
Thumbnails of the **NavPix** will display in the **Album display area**.
3. Either click and drag the required **NavPix** to an album in the **Desktop albums** section, or click the **Transfer to your computer** icon on the toolbar.

**Note:** You can also drag and drop a **NavPix** from an album on your computer to an Album on your NavDesk.

**Note:** If you have transferred a **NavPix** with GPS coordinates you can then navigate to where the picture was taken.

## How can I view and edit pictures or albums on my computer?

If you want to ...	Then ...
rotate a picture to left	<ul style="list-style-type: none"> <li>▪ select the picture from the Album display area.</li> <li>▪ click <b>Rotate left</b> on the toolbar.</li> </ul>
rotate a picture to right	<ul style="list-style-type: none"> <li>▪ select the picture from the Album display area.</li> <li>▪ click <b>Rotate Right</b> on the toolbar.</li> </ul>
view the picture details	<ul style="list-style-type: none"> <li>▪ select the picture from the Album display area.</li> <li>▪ right click and select <b>View Details</b> or click <b>View Details</b> on the toolbar.</li> </ul>
edit GPS information	<ul style="list-style-type: none"> <li>▪ select the picture from the Album display area.</li> <li>▪ double click on the picture or click <b>View Details</b> on the toolbar.</li> <li>▪ Following information will display: Name Latitude and Longitude Description</li> <li>▪ Edit the details you want to modify.</li> <li>▪ Click <b>OK</b> to save the changes.</li> </ul>
delete a picture	<ul style="list-style-type: none"> <li>▪ select the picture from the Album display area.</li> <li>▪ right click and select <b>Delete</b> or click <b>Deletes</b> on the toolbar.</li> </ul>



## What else can I do with pictures and albums on my computer?

From the **NavPix** library on your computer, you can:

- add a picture to another album
- remove pictures from an album
- view and edit details of a selected picture
- upload pictures to Flickr™
- export to disk
- export pictures to Google Earth™
- upload pictures to the NavPix Online library
- search for pictures
- view all pictures in the library

If you want to ...	Then ...
add a picture to another album	<ul style="list-style-type: none"> <li>▪ in the <b>Desktop</b> albums section, select the album containing the <b>NavPix</b> you want to include in another album</li> <li>▪ select the <b>NavPix</b> then drag it to the other album.</li> </ul> <p><b>Note:</b> The selected <b>NavPix</b> is included in the new album, but is not moved, i.e., one instance of the <b>NavPix</b> in the library may be included in multiple albums.</p>
remove a picture from an album	<ul style="list-style-type: none"> <li>▪ in the <b>Desktop</b> albums section, select the album containing the <b>NavPix</b> you want to remove</li> <li>▪ select the <b>NavPix</b>, right click and select <b>Remove from album</b>.</li> </ul> <p><b>Note:</b> Click the <b>Delete</b> icon on the toolbar if you want to delete the <b>NavPix</b> from all albums.</p>
view and edit picture details	<ul style="list-style-type: none"> <li>▪ select the picture then click the <b>View Details</b> icon on the toolbar.</li> <li>▪ edit the fields as required.</li> </ul>
upload picture to the Flickr website	<ul style="list-style-type: none"> <li>▪ in the <b>Desktop</b> albums section, select the album containing the <b>NavPix</b> you want to upload to the Flickr website.</li> <li>▪ select the <b>NavPix</b>, right click and then select <b>Upload to Flickr</b>.</li> </ul> <p><b>Note:</b> You need a Flickr account to upload <b>NavPix</b>. To create a Flickr account visit <a href="http://www.flickr.com">www.flickr.com</a></p>
save a picture to your computer	<ul style="list-style-type: none"> <li>▪ select the picture from the Album display area.</li> <li>▪ right click and select <b>Export to disk</b> or click <b>Export to</b> on the toolbar.</li> </ul>
export to Google Earth™ (only <b>NavPix</b> with GPS coordinates can be exported to Google Earth)	<ul style="list-style-type: none"> <li>▪ in the <b>Desktop</b> albums section, select the album containing the picture you want to export to Google Earth.</li> <li>▪ select the <b>NavPix</b>, right click and then select <b>Export to Google Earth</b>.</li> </ul> <p><b>Note:</b> You need to install the Google Earth software on your computer to be able to view the file you have created. You can download Google Earth from <a href="http://www.earth.google.com">www.earth.google.com</a>.</p>
search for other <b>NavPix</b>	You can search for other <b>NavPix</b> near the longitude and latitude of your <b>NavPix</b> using Flickr.
upload pictures to the <b>NavPix</b> online library	<ul style="list-style-type: none"> <li>▪ in the <b>Desktop</b> albums section, select the album containing the <b>NavPix</b> you want to upload to the <b>NavPix</b> website.</li> <li>▪ select the <b>NavPix</b>, right click and then select <b>Upload to Navman</b>.</li> <li>▪ <b>NavPix</b> online library screen will display.</li> <li>▪ Enter your Username and Password to access the <b>NavPix</b> website.</li> </ul> <p><b>Note:</b> If you do not have a <b>NavPix</b> account, click <a href="#">Do you need an account? Click here to register</a> to visit the <b>NavPix</b> website and register.</p>
view all pictures in the library	click the <b>View all pictures</b> button at the bottom of the <b>Desktop</b> album section.

## NavAlbum Preferences


Complete one of the following:

If you want to ...	Then ...
change your <b>NavPix</b> location on your computer	<ul style="list-style-type: none"><li>▪ click <b>Change</b>. The <i>Save As</i> dialog box will open.</li><li>▪ select a location for your <b>NavPix</b> library.</li><li>▪ click <b>Save</b>. The warning message will display and you will be prompted to confirm your action.</li></ul> <p>Your <b>NavPix</b> library is moved to the new location.</p>
receive a warning message before deleting an image from your device	select <b>Warn me when permanently deleting an image from my device</b> checkbox.
receive a warning message before deleting an image from your <b>NavPix</b> library	select <b>Warn me when permanently deleting an image from my library</b> checkbox.

## Image Search

Image Search is a NavDesk application powered by Flickr™ allowing you to download photos and import them to NavAlbum. You can then upload the photo to either the **NavPix** or Flickr websites, transfer photos to your Navman, export pictures to Google Earth or search for other **NavPix** near the longitude and latitude of your **NavPix**.

 Start → All Programs → Navman → NavDesk → Image Search

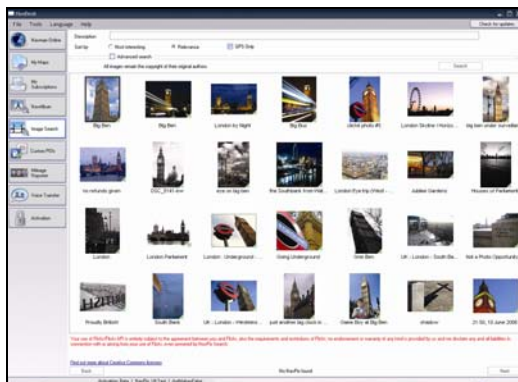

### How do I download NavPix from the internet?

1. In the **Description** field enter a search description for the image you are looking for.
2. Select one of the **Sort by** options.
3. Click **Search**.  
Thumbnails of the **NavPix** will display in the **NavPix display area**.

**Note:** You can narrow your search by selecting the **Advance Search** check box and then selecting a city from the drop down list or by entering longitude and latitude details.

### How do I import NavPix to NavAlbum?

 
1. From the **NavPix** display area select a picture or group of pictures you want to upload to your NavAlbum.
2. Right click and select **Import to NavAlbum**.  
A new album is created in the **Desktop album** section of NavAlbum.

**Note:** For more information, see "How do I use NavAlbum?" on page 112.

## Mileage Reporter

Mileage Reporter is a NavDesk feature that allows you to create expense reports (.csv format) based on the mileage and estimated fuel usage recorded by your Navman.

Start → All Programs → Navman → NavDesk → Mileage Reporter

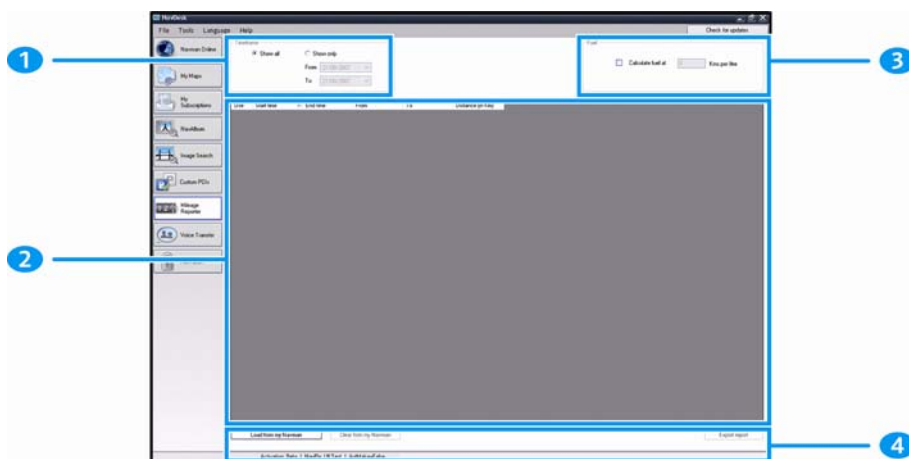

	Element	Description
1	Timeframe	specifies the time for which the mileage report will be created. <ul style="list-style-type: none"> <li>Select <b>Show All</b> to include all recorded mileage.</li> </ul>
2	Report panel	displays your trip logs.
3	Fuel	<ul style="list-style-type: none"> <li>Select to include the amount of fuel (estimate) used for the mileage recorded.</li> <li>If selected, specify the number of miles travelled per gallon, or kilometres travelled per litre.</li> </ul>
4	Report data buttons	click to input report data from your Navman or export to a report (.csv).

- To set the trip recording preference on your Navman, see “Data Recording” on page 74.

### How do I input my trip data?

- Select **Show All** in the *Timeframe* section.
- Select the **Calculate fuel** check box and enter the fuel price.
- Click **Load from Device** on the *Report data button* section. The Transfer Log progress bar will display.

All your trip logs can now be viewed in the Report panel section.

### How do I export a mileage report?

- Select a trip log from the report panel section.
- Click **Export report** on the *Report data button* section. The open dialog box will open.
- Select the file from your local or network drive, enter a name for your mileage report and then click **Save**.

**Note:** Mileage report is saved in .csv format.

You can view your mileage report by clicking on the file.

How do I delete travel logs from my Navman?

- 1. Select a trip log from the report panel section.
- 2. Click **Delete from device** on the *Report data button* section.
- 3. Click **Yes** to delete all travel logs.

Mileage Reporter preferences

Tools → Options → Mileage Reporter

Complete one of the following:

If you want to ...	Then ...
receive a warning when mileage logs are deleted from your device	Select the <b>Warnm me when deleting all log files from my Navman</b> checkbox.
calculate fuel economy preference by Distance per volume	select the <b>Distance per volume</b> option.
calculate fuel economy preference by Volume per distance	select the <b>Volume per distance</b> option.

## My subscriptions

Safety camera information is only available for selected countries.

Your Navman contains pre-loaded safety camera information. To subscribe to current Navman safety camera information, use the enclosed DVD to install NavDesk software on your computer.

For the latest safety camera coverage, to subscribe to safety camera information and to see our latest offers, visit [www.navman-stores.com](http://www.navman-stores.com).

Each country has a coloured circle indicating the status of your subscription.

### Alerts

Safety Camera can be set to enable a warning sound or visual warning when on your route (see "POI Alerts" on page 81).

### How do I install Safety Camera information?

Complete the following steps to install safety camera information on your Navman.

1. Purchase a subscription.
2. Activate your subscription.

### How do I know which Safety Camera information is available?

Start → All Programs → Navman → NavDesk → My Subscription

1. From the **Available Subscription** section, select the country for which you want to purchase the subscription.
2. Right click and select **Activate my subscription**.  
The *Activation* window will display.

*Note: Subscriptions are available only for those countries for which you have purchased maps.*

3. Enter a product key and follow the prompts to activate your subscription.

### Purchase a Subscription

 
1. To purchase a subscription to safety camera information, on the **Subscriptions** menu, select the country for which you want to purchase the safety camera and then select **Purchase an activation key from the Navman store**.  
The Navman Store website will open.
2. Follow the prompts to purchase your subscription.

A product key will be sent to you via email when you have subscribed. You will need to use this product key to activate your subscription.

## Activate your Subscription

Start → All Programs → Navman → NavDesk

- 1. From **Available Subscriptions** section, select the country for which you want to activate the safety camera.
- 2. Right click and select **Activate my subscription**.  
The Activation window will display.

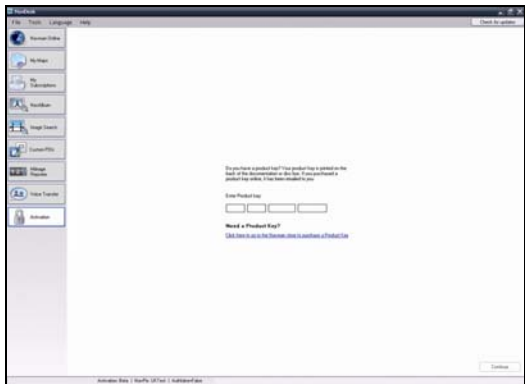

- 3. Enter the subscription product key in the **Product Key** field.
- 4. Click **Continue**.  
Follow the prompts to update your subscription.

Your software will update automatically.

## How do I update Safety Camera information on my Navman?

Start → All Programs → Navman → NavDesk → My Subscription

My Navman section will display a list of subscriptions already installed on your device.

 
Icon	Description
red	Expired subscriptions. <ul style="list-style-type: none"><li>▪ right click to purchase a new subscription.</li></ul>
Yellow	Available subscriptions. <ul style="list-style-type: none"><li>▪ right click to update and purchase new subscription.</li></ul>
green	Active subscriptions. <b>Note:</b> No updates are available for these subscriptions.

# Custom POIs

The Custom POI application allows you to create or import your own POI files. These are called custom POIs. Unlike preinstalled POIs, custom POIs can be removed from your Navman and can have audio as well as visual alerts associated to them.

## How do I install custom Points of Interest?

Start → All Programs → Navman → NavDesk → Custom POIs

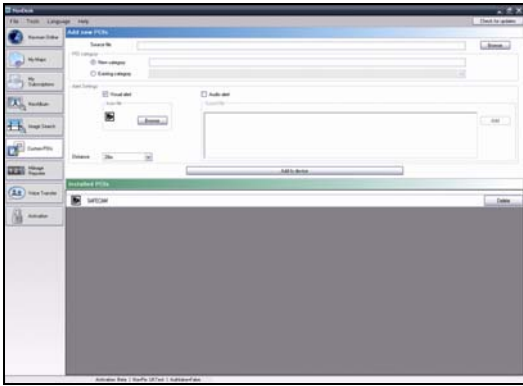

**Note:** Various POI files are available for download free or by subscription from third-party websites<sup>2</sup>. Ensure that downloaded files are in .csv (Comma Separated Values) format.

- 1. In the *Add new POIs* section, click **Browse** to select a source file. The open dialog box will open.
- 2. Select the file from your local or network drive, then click **Open**.
- 3. From the **POI Category** section:

If you want to ...	Then ...
use an existing custom POI category	select the <b>Existing Category</b> option, then select a type from the drop down list..
create a new custom POI category	select the <b>New Category</b> option, then type a name for the POI category.

- 4. Complete the following:

If you want to ...	Then ...
select an icon to display on the map screens for POIs of the category	Click <b>Browse</b> to select the icon file from your local or network drive. When you have located the icon file, select it and click <b>Open</b> .  The icon file must be a bitmap (.bmp) graphic with a minimum size of 6x6 pixels and a maximum size of 32x32 pixels.  <b>Note:</b> If you do not select a custom icon, a default icon will display.
enable a visual warning when a POI of this category is in close proximity	select the <b>Visual alert</b> check box.
enable a warning sound when a POI of this category is in close proximity	select the <b>Audio alert</b> check box.

<sup>2</sup> Navman is not responsible for the content or accuracy of the information or the reliability or availability of these websites. The use of information regarding safety camera locations may be subject to local laws in the country of use. You are responsible for checking that you can use the information in your country or in the country where the information will be used.



If you want to ...	Then ...
select the distance from a POI of this category at which the visual warning should display or the warning chime should sound	select the distance from the <b>Distance</b> box.  <b>Note:</b> To change the units used to measure distance for this POI category, from the <a href="#">tools menu click on options</a> and from the general option select <b>Use metric units</b> check box.
select a custom sound alert file to play when a POI of this category is in close proximity	<ul style="list-style-type: none"><li>▪ Either select a sound file from the list, or</li><li>▪ Click <b>Add</b> to select a sound file (.WAV format) from your local or network drive. When you have located the file, select it and click <b>Open</b>. The list of sounds is formed from default sound files and sound files that you have added using <i>My Sounds Admin</i>. For more information, see "How do I add sound files to My Sounds Admin?" on page 95.</li></ul> <b>Note:</b> If you do not select a custom sound file, a default sound alert will play.

5. Click on **Add to device** button to add the POI to your Navman.

**Note:** A maximum of 25 custom POI files can be saved on your Navman. Each file corresponds to a POI category; for example, *Hotels.csv* will be listed in your Navman as the *Hotels* category.

How do I delete a Custom POI File from my Navman?

1. On the **Installed POIs** section click **Delete** next to the file name.  
The file is removed from the list, but is not yet deleted.
2. Accept the warning message.  
The selected file is deleted.

## Voice Transfer

The Voice Transfer application is part of NavDesk and allows you to install or remove voice files.

Voice files take up space on your Navman's internal memory. If you do not use a voice file, you can remove it to free up space. You can later reinstall it to your Navman if required.

**Note:** Insert the NavDesk Application Installer DVD into your computer DVD drive.

*Start → All Programs → Navman → NavDesk → Voice Transfer*

### How do I install a voice file?

In the *Available voice files* section, select the voice file you would like to install, then click **Install selected voices**.

### How do I remove a voice file?

In the *Available voice files* section, select the voice file you would like to remove, then click **Remove selected voices**.

## PIN Security

PIN Security is a feature which allows you to set a PIN on your Navman. The PIN will disable your Navman in the event of theft.

To set a PIN you must first register your Navman with the Navman server.

### How do I register my Navman and set a PIN?

Tools → PIN Security

The PIN registration screen will display.



1. Click Register now and follow the prompts to complete the registration form online.
2. When Registration is complete, return to the **PIN** screen and click I have registered my Navman. The PIN Security screen displays.
3. In the **User Name** and **Password** fields, enter the Username and Password that you entered when registering online.
4. In the **PIN** field, enter the PIN you want to assign to your Navman.  
*Note: Your PIN must be between three and eight numerical digits.*
5. Click **OK**.  
The PIN for your Navman has been set.

*Note: The Enter your PIN screen will now display on your Navman when you turn your Navman on, or once every 24 hours.*

### How do I remove the PIN from my Navman?

Tools → PIN Security

1. In the **User Name** and **Password** fields, enter the username and password that you entered when registering online.
2. Leave the **PIN** field blank.
3. Click **OK**.  
The PIN is removed and your Navman will no longer require you to enter a PIN.

## What if I forget the PIN for my Navman?

Tools → PIN Security

1. In the **User Name** and **Password** fields, enter the username and password that you entered when registering online.
2. In the **PIN** field, enter a new PIN you want to assign to your Navman.  
**Note:** Your PIN must be between three and eight numerical digits.
3. Click **OK**.  
The PIN for your Navman has been set.

## How do I backup my Navman?



You can save backups of the following information, and later restore them to your Navman:

- Favourites and My Home
- Preferences, including Point of Interest and **NavPix** preferences
- Multi-stop trips
- Recent locations.

### How do I Backup my Navman?

1. *Tools* → *Backup Restore*  
The *Backup & Restore* window will open.
2. Click **Create new**.  
The *Create new backup* window will display.
3. Select the data you would like to backup, then enter a description for the backup in the **Description** field.
4. Click **OK**.  
The *New Backup* window will close and your backup will be saved to your computer. The backup will be listed on the *Backup & Restore* window.

### How do I Restore a Backup to my Navman?

1. *Tools* → *Backup Restore*  
The *Backup & Restore* window will open.
2. Select the backup from the list, then click **Restore**, then click **OK**.  
The backup will be restored to your Navman.

### How do I Delete a Backup?

1. *Tools* → *Backup Restore*  
The *Backup & Restore* window will open.
2. Select from the list the backup to delete.
3. Click **Delete**, then click **OK**.  
The backup is deleted.

## Reference

### How do I insert a Memory Card?

Hold the card by the edges and gently insert it into the  slot with the label facing the front of the Navman.



**CAUTION** Do not to apply pressure to the centre of the memory card.

### How do I remove a Memory Card?

Before removing the memory card, turn off the Navman. Next, gently push the top edge of the card to release it, and pull it out of the slot.

# Remote Control

The remote control is sold separately.



	Component	Description
1		Press twice to cancel the current route.
2		Increases the volume.
3		Decreases the volume.
4		Turns the sound off or on. The volume bar displays as grey to indicate that the volume is muted.
5		Navigate to My Home. Press once to display the <i>My Home</i> screen so that you can navigate home. Press again to calculate the route to My Home and display the map screen.
6		Increases screen brightness.
7		Decreases screen brightness.
8		Cycles through the <i>3D Map</i> , <i>2D Map</i> , <i>Traffic Overview</i> , <i>Route Overview</i> and <i>Turn-by-Turn™</i> screens.





















**CAUTION** Do not expose the remote control to direct sunlight for prolonged periods. Overheating may damage the remote control.

**CAUTION** If you are not going to use the remote control for three months or longer, remove the batteries from the remote control.

## Point of Interest categories

Icon	Description	Icon	Description
	Airline Access		Airport
	Amusement Park		Arts or Cultural Centre
	Bank		Beach
	Boat Ramp		Breakdown Service, Car Repair Facility
	Building		Camping Ground
	Car Dealer		Caravan Park, Trailer Park
	Cash Dispenser		Casino
	Centre of Settlement		Church
	Cinema		City Centre
	College or University		Company
	Concert Hall, Music Centre, Opera		Convention Centre, Exhibition Centre
	Courthouse		Cultural Centre
	Dentist		Doctor
	Drive-Through Bottle Shop		Embassy
	Emergency Medical Service		Ferry Terminal
	Fire Station		Frontier Crossing
	General POI		Golf course
	Government Office		Hospital/Polyclinic
	Hotel or Motel		Ice Skating Rink
	Important Tourist Attraction		Leisure Centre, Sports Centre
	Library		Military Cemetery
	Monument		Mountain Pass
	Mountain Peak		Museum
	Night life		Open Parking Area
	Park and Recreation Area		Petrol station
	Pharmacy		Place of Worship
	Police Station		Post Office







Icon	Description	Icon	Description
	Railway Station		Rent-a car Parking
	Rest Area		Restaurant Area
	Scenic or Panoramic View		School
	Shop		Shopping Centre
	Stadium		Swimming Pool
	Tennis Court		Theatre
	Tourist Information Office		Travel Agency
	Vehicle Equipment Provider		Veterinarian
	Water Sports		Winery
	Yacht Basin		Zoological park (zoo)





### Branded Points of Interest

Branded Points of Interest are available on some maps. These include well-known restaurants, accommodation providers, tourist attractions, petrol stations, etc. The icon will usually display the company logo.

### Point of Interest categories by Navman

















 
 
Icon	Description
	Favourite destination
	Multiple route trip
	My home
	NavPix

### Point of Interest categories by subscription





Icon	Description
	Safety Cameras
	Safety Camera (mobile)
	Safety Camera (average)
	Red Light Camera

## Traffic and other TMC Events

Each TMC Event is sorted in to one of nine categories. When an Event is received, one of the following icons will display:

Event	Avoided Event	Message Type	Event Description
		<b>Danger</b>	There is a dangerous situation on the route; for example, people are on the road.
		<b>Traffic</b>	Any event that will cause a delay on a route.
		<b>Weather</b>	Weather conditions are adversely affecting a route; for example, there is ice on the road.
		<b>Warnings</b>	There is a situation of which you should be aware on the route, but it is not serious enough to be considered a dangerous situation; for example, a minor accident has taken place.
		<b>Forecast</b>	An event is expected to occur on a route.
		<b>Restrictions</b>	There is a restricted flow of traffic on a route; for example, a lane has been closed on a motorway.
		<b>Clearance</b>	A Traffic Event that has now been cleared.
		<b>Information</b>	All other events.
		<b>Roadworks</b>	Roadworks are taking place on a route.

If a *Traffic* or *Clearance* event has a recommended detour, the following icons will display:

Event	Avoided Event	Message Type	Event Description
		<b>Traffic Detour</b>	A <i>Traffic</i> Event, for which a detour is recommended.
		<b>Clearance Re-route</b>	A <i>Clearance</i> Event, for which a re-route is recommended.

**Note:** Avoided Event icons will only display on the *2D Map* and *3D Map*, at the Event location.

© 2007 MiTAC International Corporation. Navman is a registered trademark of MiTAC International Corporation and is used under licence by Navman Technology NZ Ltd. All rights reserved.

The software contains proprietary information of Navman; it is provided under a licence agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Navman.

Back-On-Track, Drive-Away, NavDesk, **NavPix**, SmartST and Turn-by-Turn are either registered trademarks or trademarks of MiTAC International Corporation and are used under licence by Navman Technology NZ Ltd. All rights reserved.

Microsoft, Windows, Windows Vista, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All rights reserved.

The *Bluetooth* word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Navman New Zealand is under license.

Adobe and Acrobat Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. All rights reserved.

Location Identifiers © 2005 International Air Transport Association.

POI Data © 2007 InfoUSA.

All other trademarks and registrations are the property of their respective owners. Published in New Zealand.

## Safety Camera POIs

Navman products are designed to be used as an aid to safer driving. You can receive messages to alert you to locations of safety cameras, which will enable you to monitor your speed through these areas. Navman does not warrant that all types and locations of safety camera data are available, as cameras may be removed, relocated or new cameras installed. Navman does not condone speeding or any other failure to comply with your local traffic laws. It is your responsibility to drive within the posted speed limit at all times and to drive in a careful manner. Navman accepts NO liability whatsoever for you receiving any speeding fines or points on your license through using this device. Navman does not guarantee the accuracy of the data contained within this database either expressed or implied. In the event you receive a fine or any other penalty for speeding or contravention of any traffic law, or are involved in an accident, Navman is not responsible for any damages of any type. In some countries the data information regarding safety or speed cameras may conflict with local law and/or regulations. It is your responsibility to make sure that your use of the data is in compliance with local laws and/or regulations. Usage is at your own risk.

## Disclaimer

Due to continued product development this information may change without notice. Navman does not warrant that this document is error-free.

The screenshots and other presentations shown in this manual may differ from the actual screens and presentations generated by the actual product. All such differences are minor and the actual product will deliver the described functionality as presented in this User Manual in all material respects.

## Compliance



**WARNING** This product, its packaging and its components contain chemicals known to the State of California to cause cancer, birth defects or reproductive harm. This Notice is being provided in accordance with California's Proposition 65.

The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Products with the CE marking comply with Radio & Telecommunication Terminal Equipment Directive (R&TTE) (1999/5/EEC), the Electromagnetic Compatibility Directive (2004/104/EC) and the Low Voltage Directive (73/23/EEC) - issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Standards:

**EN 301 489-1:** Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.

**EN 301 489-3:** Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for Short-Range Devices (SRD) operating on frequencies between 9 kHz and 40 GHz.

**EN 301 489-17:** Electronic compatibility and Radio spectrum Matters (ERM), ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment.

**EN 300 328 (Bluetooth: S50, S70, S80, S90i only. Does not apply to S30.):** Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

**EN 55022:** Radio disturbance characteristics

**EN 55024:** Immunity characteristics

**EN 6100-3-2:** Limits for harmonic current emissions

**EN 6100-3-3:** Limitation of voltage fluctuation and flicker in low-voltage supply system

**EN 60950 / IEC 60950:** Product Safety

The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

The software is based in part on the work of the Independent JPEG Group.

The software application uses a modified version of the Minimal XML Library. The Minimal XML library and its use are covered by the GNU Lesser General Public License ([www.gnu.org/licenses/lgpl.html](http://www.gnu.org/licenses/lgpl.html)). The modified source code is available from: [www.navman.com/files/mxml.zip](http://www.navman.com/files/mxml.zip).

## For more information

### User Manual

The User Manual can be downloaded from the Navman website: <http://www.navman.com/manuals>

### Online support

For 24/7 help and support with Navman products, visit our Technical Support website at: [support.navman.com](http://support.navman.com)

You will find a fully searchable Frequently Asked Questions (FAQs) section for all Navman products.

At least 90% of our customers find answers to their questions at [support.navman.com](http://support.navman.com), however if you require further support, you can use the online email option to contact us.

### Phone support

If you would like to speak to a member of our Technical Support team, please call the following number for your region:

#### United Kingdom, Ireland and International

+44 (0) 1293 780 950

Monday to Friday: 09.00 - 17.30 UK time (10.00 - 18.30 Central European Time)

#### North America

+1-866-9NAVMAN (866-962-8626)

Monday to Friday: 9.00am - 6.00pm Eastern time

#### Australia

+61 2 9879 9000

Monday to Friday: 8.30am - 5.00pm Eastern Standard Time.

#### New Zealand

0800 GO NAVMAN (from NZ only)

Monday to Friday: 9.00am - 5.00pm

