

100W HF SSB TRANSCEIVER TYPE 6801

CONTENTS

1. General Information

1.1 Introduction

1.2 Performance Specification

1.3 Options and Accessories

2. Signal Path Block Diagram

3. Brief Description

3.1 Introduction

3.2 Transmit

3.2.1 Microphone Amplifier

3.2.2 Carrier Oscillator

3.2.3 Balanced Modulator

3.2.4 SSB Filter

3.2.5 SSB Filter Switching

3.2.6 Gain Controlled Amplifier

3.2.7 Channel Oscillator

3.2.8 Maintaining Amplifier

3.2.9 Balanced Mixer

3.2.10 Transmit RF Amplifier

3.2.11 Wideband Amplifier

3.2.12 PA Driver

3.2.13 PA Bias

3.2.14 Power Amplifier

3.2.15 Pi filter Network

3.3 Transmit/Receive Switching

3.4 Receive

3.4.1 RF Amplifier

3.4.2 Balanced Mixer

3.4.3 1st IF Amplifier

3.4.4 Noise Limiter

3.4.5 AM Filter

3.4.6 SSB Filter

3.4.7 2nd IF Amplifier

3.4.8 AM Detector

3.4.9 SSB Demodulation

3.4.10 AGC

3.4.11 AF Output Amplifier

3.5 Regulator

3.6 ALC

- 100W HF 250 TRIPLE BAND TRANSCEIVER TYPE 8801
- 3.7 Clarifier
 - 3.8 CW Oscillator
 - 3.9 Emergency Call (RFDS)
 - 3.10 Metering

4. Switching

- 4.1 General
- 4.2 Switching Voltages
- 4.3 Channel Selection
 - 4.3.1 Single Frequency Simplex
 - 4.3.2 Two Frequency Simplex
- 4.4 Audio Muting by Mode Switch
- 4.5 Automatic AM

5. Technical Description

- 5.1 Introduction
- 5.2 Transmit
 - 5.2.1 Microphone Amplifier
 - 5.2.2 Carrier Oscillator
 - 5.2.3 Balanced Modulator
 - 5.2.4 SSB Filter
 - 5.2.5 SSB Filter Switching
 - 5.2.6 Gain Controlled Amplifier
 - 5.2.7 Channel Oscillator & Clarifier
 - 5.2.8 Mixer Driver
 - 5.2.9 Balanced Mixer
 - 5.2.10 Transmit RF Amplifier
 - 5.2.11 Wideband Amplifier
 - 5.2.12 PA Driver
 - 5.2.13 PA Bias
 - 5.2.14 Power Amplifier
 - 5.2.15 Pi Filter Network
 - 5.2.16 ALC-Detector
 - 5.2.17 ALC Comparator
- 5.3 Receive
 - 5.3.1 RF Amplifier
 - 5.3.2 Balanced Mixer
 - 5.3.3 1st IF Amplifier
 - 5.3.4 Noise Limiter
 - 5.3.5 AM Filter
 - 5.3.6 2nd IF Amplifier
 - 5.3.7 AM Detector
 - 5.3.8 SSB Detector
 - 5.3.9 AGC Amplifier
 - 5.3.10 Audio Output Amplifier

- 5.4 CW Oscillator
- 5.5 Emergency Call (RFDS)
- 5.6 Metering

6. Setting-Up Procedure

6.1 Introduction

6.2 Channelising Procedure

- 6.2.1 RF Tuned Circuits
- 6.2.2 Channel Oscillator
- 6.2.3 ALC Components
- 6.2.4 Output Filter Network
- 6.2.5 Test Equipment Required
- 6.2.6 General Notes
- 6.2.7 Adjustment Procedure - Receiver
- 6.2.8 Adjustment Procedure - Transmitter
- 6.2.9 Receiver Performance Check
- 6.2.10 Frequency Adjustment

6.3 Preset Adjustments

- 6.3.1 General
- 6.3.2 Regulator Voltage
- 6.3.3 Driver Bias Current
- 6.3.4 Carrier Frequency
- 6.3.5 2nd IF Amplifier Tuning
- 6.3.6 Balanced Modulator Tuning
- 6.3.7 AM Carrier Level
- 6.3.8 1st IF Amplifier Tuning
- 6.3.9 Compressor 'Thump'
- 6.3.10 PA Bias Current
- 6.3.11 Transmit Lamp Brightness

7. Maintenance

- 7.1 PCB Interchangeability
- 7.2 Fault Finding
- 7.3 Transmitter Precautions
- 7.4 Lamp Replacement
- 7.5 PA Transistor Selection
- 7.6 Removal and Replacement of PA Transistors

8. Remote Control

8.1 Remote Channel Selection

- 8.1.1 Introduction
- 8.1.2 Technical Description
- 8.1.3 Fitting Solenoid Assembly

- 8.2 Remote Mode Selection
- 8.3 Remote ON-OFF
- 8.4 Interconnecting Cables

9. Parts Lists

10. List of Drawings

03 --- Outline Drawing, 04 --- Circuit Diagram, 08 --- Component Layout

<u>Title</u>	<u>Drg. No.</u>	<u>Sheet No.</u>
Tune and Load Components	03-00065	1
Circuit Diagram	04-00129	2
Circuit Notes		2
RF Ch. Sel. 1st IF& ALC - subcarrier	08-00012	2
2nd IF Amp Mod/Demod	08-00015	2
Wideband Amplifier	08-00068	2
Mic Amp & T/R Switch	08-00013	2
Audio Output Amplifier	08-00213	2
PA Input	08-00306	2
PA Output	08-00307	2
PA Groundplane	08-00308	2
PA Assembly	08-00309	-
Mother Board No. 1	08-00310	2
Mother Board No. 2	08-00311	2
Channel Crystal	08-00312	2
Channel Oscillator	08-00313	2
Driver/Regulator	08-00325	2
USB-LSB Filter Switching	08-00441	2
Metering	04-00288	-
Reflectometer	08-00434	2
Emergency Call Oscillator	04-00252	-
	08-00277	2
CW Oscillator	04-00251	-
	08-00402	2
Noise Limiter	04-00184	-
	08-00275	2
Remote Control Interface	04-00327	-
Automatic AM Facility	04-00318	-
Rack Mounting Wiring	04-00287	-
Transceiver Test Unit	04-00316	-