

## Table of Contents

Introduction, Features and Applications	2
Specifications and Operating Environment	3
Driver Connectors P1 and P2	4
Control Signal Connector (P1) Interface	5
Driver Connection to Motors (P2)	6
Driver Supply and Driver Voltage and Current	9
Setting Microstep Resolution and Driver Current Output	11
Connection Functions	12
Connection Diagram for Driver, Motor, Controller	13
Control Signal Waveform and Timing	13
Driver Connection	14
Q	14

## Introduction, Features and Applications

is a low cost high performance microstepping driver based on most advanced technology in the world today. It is suitable for driving any 2-phase and 4-phase hybrid step motors. By using a bipolar constant-current chopping technique, it can output more speed and power from the same motor, compared with traditional technologies such as L/R drivers. Its 3-state current chopping technology allows coil currents to be well controlled, with relatively small current ripple and therefore less motor heating.

### Features of this driver

- Patented technology
- High performance, low cost
- Supply voltage up to +50VDC, current output up to 4.2A peak
- Optically isolated input signals, pulse frequency up to 400 KHz
- Automatic idle-current reduction
- 3-state current control for less motor heating
- 16 selectable resolutions in decimal and binary
- Suitable for 4,6,8 lead motors
- Stepping on upward or downward pulse edge (selectable)
- EEPROM switch current setting with 8 different values
- CCW/CCW mode available (optional)
- Over-voltage and short-circuit protection
- Small size (118x75.5x33mm)

### Applications of this driver

It is suitable for a wide range of stepping motors of Nema 17, 23 and 34, and usable for various kinds of machines, such as X-Y tables, labeling machines, laser cutters, engraving machines, and so on. Particularly useful in applications with low vibration, high speed and high precision are desired.

## 2. Specifications and Operating Environment

### Electric Specifications (T<sub>a</sub> = 25°C)

Parameters	5042			
	Min.	Typical	Max.	Unit
Output Current	0.54	-	4.2(RMS 3A)	Amps
Supply voltage (DC)	20	36	50	VDC
Logic signal current	7	10	16	mA
Pulse input frequency	0	-	300	KHz
Isolation resistance	500			MΩ

### Operating Environment and Parameters

Cooling	Natural cooling or forced convection	
Environment	Space	Avoid dust, oil frost and corrosive gas
	Temperature	0° — 50°C
	Humidity	40 — 90%RH
	Vibration	5.9m/s <sup>2</sup> Max
Storage Temp.	-20°C — 125°C	
Weight	Approx. 0.280 Kg (9.9 oz)	

### Mechanical Dimensions (unit:mm, 1 inch = 25.4 mm)

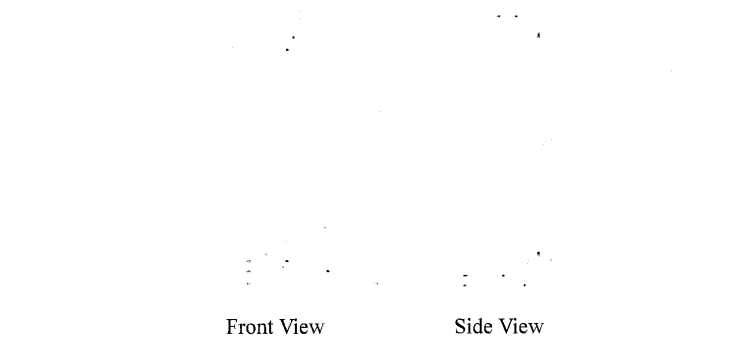


Figure 1: Mechanical dimensions

\*Recommended to use side mounting for better heat dissipation

### Heat Sink

Driver's reliable working temperature should be  $<65^{\circ}\text{C}$ , motor temperature  $<80^{\circ}\text{C}$ ;  
 It is recommended automatic half-current mode, i.e. current automatically reduced by 50% when motor stops, so as to decrease driver and motor's heating;  
 Please mount the driver vertically to maximize heat sink area.

### Driver Connectors, P1 and P2

Driver has two connectors, P1 for control signals, and P2 for power and motor connections.

Following is a brief description of the two connectors of the driver. More detailed descriptions of pins and related issues are presented in section 4, 5, 6, 9.

#### P1 Signal Connector P1-pins

Pin	Functions
1 (+5V)	<b>Pulse signal:</b> in single pulse(pulse/direction) mode, this input represents pulse signal, effective for each upward – rising edge; in double pulse mode (pulse/pulse) this input represents clockwise(CW)pulse. For reliable response, pulse width should be longer than $1.5\mu\text{s}$ .
2 (PUL)	
3 (+5V)	<b>Direction signal:</b> in single-pulse mode, this signal has low/high voltage levels, representing two directions of motor rotation; in double-pulse mode (set by inside jumper JMP1), this signal is counter-clock (CCW) pulse, effective on each rising edge. For reliable motion response, direction signal should be sent to driver $2\mu\text{s}$ before the first pulse in the reverse motion direction.
4 (DIR)	
5 (+5V)	<b>Enable signal:</b> this signal is used for enable/disable, high level for enabling driver and low level for disabling driver. Usually left unconnected(enabled).
6 (ENA)	

*k 1:* Pul/dir is the default mode, under-cover jumper JMP1 can be used to switch to CCW double-pulse mode.

*k 2:* Please note motion direction is also related to motor-driver wiring match. Changing the connection of two wires for a coil to the driver will reverse motion direction. (for example, reconnecting motor A+ to driver A- and motor A- to driver A+ will reverse motion direction).


#### connector P2 pins

Pin	Signal	Functions
1	Gnd	DC power ground
2	+V	DC power supply, +20VDC — +50VDC, including voltage fluctuation and EMF voltage.
3	Phase A	Motor coil A (leads A+ and A-)
4	Phase B	Motor coil B (leads B+ and B-)


## 4. Control Signal Connector (P1) Interface

This driver uses differential inputs to increase noise immunity and interface flexibility. Single-ended control signals from the indexer/controller can also be accepted by this interface. The input circuit has built-in high-speed opto -coupler, and can accept signals in the format of line driver, open-collector, or PNP output. Line driver (differential) signals are suggested for reliability. In the following figures, connections to open-collector and PNP signals are illustrated.

Open collector (common-anode)

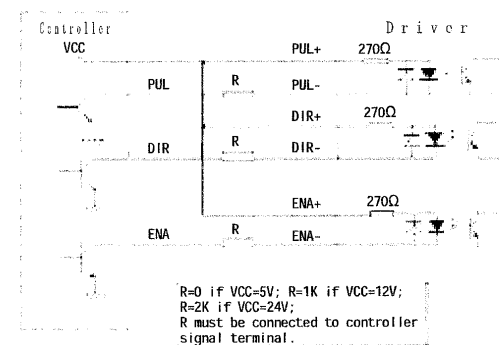

PNP output (common-cathode)

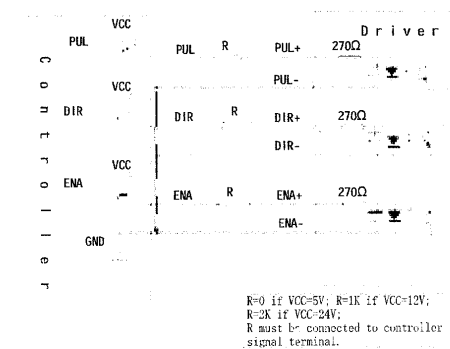

**ing Effective Pulse Edge**

can move motor one microstep upon receiving the upward-rising or downward-falling edge  
 else, depending on the JMP1 setting under driver cover, as shown on the below, default  
 is upward-rising edge effective.



J1 open collector  
 effective in upward-rising edge



J1 short circuit  
 Effective in downward-falling edge

**ing CW/CCW and PUL/DIR Mode**

is a jumper JMP3 inside the driver specifically for the purpose of selecting pulse signal  
 Settings for one-pulse mode (PUL/DIR) and for double-pulse mode (CW/CCW) are  
 on the following. Default mode out of factory is PUL/DIR mode.



J3 open collector  
 PUL/DIR mode



J3 short circuit  
 CW/CCW mode

**Driver Connection to Step Motors**

driver can drive any 4, 6, 8 lead hybrid step motors. The following diagrams illustrate  
 ation to various kinds of motor leads:

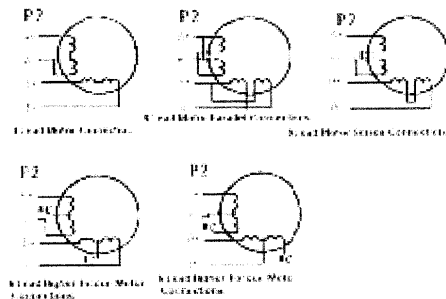


Figure 3: Driver Connection to Step Motor

hat when two coils are parallelly connected, coil inductance is reduced by half and motor  
 can be significantly increased. Serial connection will lead to increased inductance and thus  
 tor can be run well only at lower speeds.

**5.1 Connecting to 8-Lead Motors**

8 lead motors offer a high degree of flexibility to the system designer in that they may be  
 connected in series or parallel, thus satisfying a wide range of applications.

**Series Connection**

A series motor configuration would typically be used in applications where a higher torque at  
 lower speeds is required. Because this configuration has the most inductance, the performance will  
 start to degrade at higher speeds. Use the per phase (or unipolar) current rating as the peak output  
 current, or multiply the bipolar current rating by 1.4 to determine the peak output current.

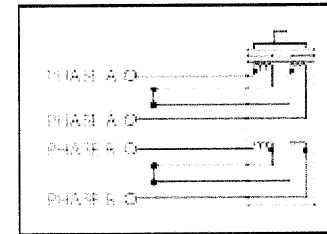


Figure 4: 8 Lead Motor Series Connections

**Parallel Connection**

An 8 lead motor in a parallel configuration offers a more stable, but lower torque at lower speeds.  
 But because of the lower inductance, there will be higher torque at higher speeds. Multiply the per  
 phase (or unipolar) current rating by 1.96, or the bipolar current rating by 1.4, to determine the  
 peak output current.

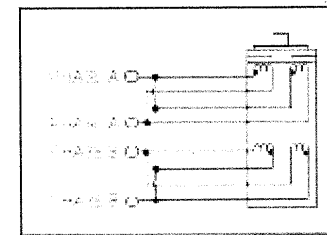


Figure 5: 8 Lead Motor Parallel Connections

**5.2 Connection to 6-Lead Motors**

Like 8 lead stepping motors, 6 lead motors have two configurations available for high speed or  
 high torque operation. The higher speed configuration, or half coil, is so described because it uses

If of the motor's inductor windings. The higher torque configuration, or full coil, use the full of the phases.

#### Coil Configuration

As previously stated, the half coil configuration uses 50% of the motor phase windings. This gives lower inductance, hence, lower torque output. Like the parallel connection of 8 lead motor, the output will be more stable at higher speeds. This configuration is also referred to as bipolar. In setting the driver output current multiply the specified per phase (or unipolar) current by 1.4 to determine the peak output current.

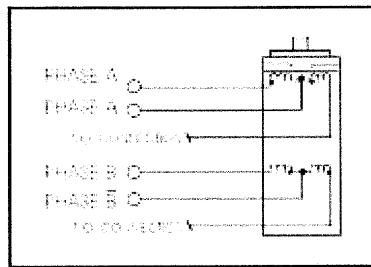


Figure 6: 6 Lead Half Coil (Higher Speed) Motor Connections

#### Coil Configuration

Full coil configuration on a six lead motor should be used in applications where higher torque or higher speeds is desired. This configuration is also referred to as full bipolar. Use the per phase (or unipolar) current rating as the peak output current.

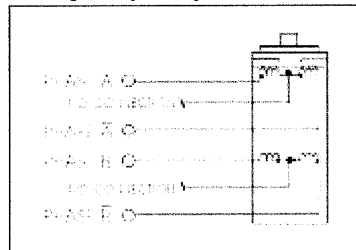


Figure 7: 6 Lead Full Coil (Higher Torque) Motor Connections

### 5.3 Connection to 4-Lead Motors

4 lead motors are the least flexible but easiest to wire. Speed and torque will depend on winding inductance. In setting the driver output current, multiply the specified phase current by 1.4 to determine the peak output current.

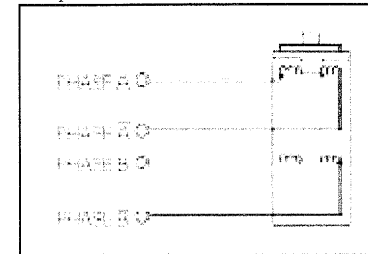


Figure 8: 4 Lead Motor Connections

## 6. Power supply Selection, Driver Voltage and Current Selection

### 6.1 Power Supply Selection

It is important to choose appropriate power supply to make the driver operate properly and deliver optimal performance.

#### Maximum Voltage Input:

The power MOSFETS inside the driver can actually operate within +20V — +50VDC, including power input fluctuation and back EMF voltage generated by motor coils during motor shaft deceleration. Higher voltage will damage the driver. Therefore, it is suggested to use power supplies with theoretical output voltage of no more than +52V, leaving room for power line fluctuation and Back EMF.

#### Regulated or Unregulated power supply:

Both regulated and unregulated power supplies can be used to supply DC power to the driver. However, unregulated power supplies are preferred due to their ability to withstand current surge. If regulated power supply (such as most switching supplies.) is indeed used, it is important to have large current output rating to avoid problems like current clamp, for example using 4A supply for 3A motor-driver operation. On the other hand, if unregulated supply is used, one may use a power supply of lower current rating than that of motor (typically 50%~70% of motor current). The reason is that the driver draws current from the power supply capacitor of the unregulated supply only during the ON duration of the PWM cycle, but not

OFF duration. Therefore, the average current withdrawn from power supply is erably less than motor current. For example, two 3A motors can be well supplied by one supply of 4A rating.

#### Multiple drivers:

It is recommended to have multiple drivers to share one power supply to reduce cost, provided the power supply has enough capacity. To avoid cross interference, **DO NOT** daisy-chain the supply input pin of the drivers. (instead, please connect them to power supply directly.)

Higher supply voltage will allow higher motor speed to be achieved, at the price of more noise and torque. If the motion speed requirement is low, it's better to use lower supply voltage to improve heating and reliability.

Do not connect power and ground in the wrong direction, as it will damage the driver.

### Driver Voltage and Current Selection

The driver can match small and medium size step motors (NEMA 17, 23 & 34) made by domestic or other motor manufacturers from around the world. To achieve good driving results, it is important to select supply voltage and output current properly. Generally, supply voltage determines the high speed performance of the motor, while output current determines the output torque of the driven motor (particularly at lower speed).

#### Selecting Supply Voltage:

Higher supply voltage can increase motor torque at higher speeds, thus helpful for avoiding losing steps. However, higher voltage may cause more motor vibration at lower speed, and it may also cause over-voltage protection and even driver damage. Therefore, it is suggested to choose only slightly higher supply voltage for intended applications.

#### Setting Proper Output Current

For a given motor, higher driver current will make the motor to output more torque, but at the same time causes more heating in the motor and driver. Therefore, output current is generally set to be such that the motor will not overheat for long time operation.


In both parallel and serial connections of motor coils will significantly change resulting inductance and resistance, it is therefore important to set driver output current depending on motor phase current, motor leads and connection methods.

Phase current rating supplied by motor manufacturer is important to selecting driver current, but the selection also depends on leads and connection.

## 7. Selecting Microstep Resolution and Driver Current Output

This driver uses an 8-bit DIP switch to set microstep resolution, and motor operating current, as shown below:

Current during motion      Microstep resolution

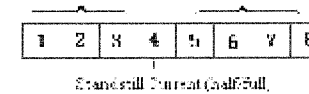

### 7.1 Microstep Resolution Selection

Microstep resolution is set by SW5, 6, 7, 8 of the DIP switch as shown in the following table:

Microstep	Steps/rev.(for 1.8° motor)	SW5	SW6	SW7	SW8
2	400	Off	On	On	On
4	800	On	Off	On	On
8	1600	Off	Off	On	On
16	3200	On	On	Off	On
32	6400	Off	On	Off	On
64	12800	On	Off	Off	On
128	25600	Off	Off	Off	On
5	1000	On	On	On	Off
10	2000	Off	On	On	Off
20	4000	On	Off	On	Off
25	5000	Off	Off	On	Off
40	8000	On	On	Off	Off
50	10000	Off	On	Off	Off
100	20000	On	Off	Off	Off
125	25000	Off	Off	Off	Off

### 7.2 Current Setting

The first three bits (SW1, 2, 3) of the DIP switch are used to set the current during motion (dynamic current). Select a setting closest to your motor's required current.

#### ● DIP Setting for current during motion:

Peak current	RMS	SW1	SW2	SW3
1.00A	0.71A	on	on	on
1.46A	1.04A	off	on	on

.91A	1.36A	on	off	on
.37A	1.69A	off	off	on
.84A	2.03A	on	on	off
.31A	2.36A	off	on	off
.76A	2.69A	on	off	off
.20A	3.00A	off	off	off

ks:

to motor inductance the actual current in the coil may be smaller than the dynamic current, particularly at higher speeds.

ic current setting

urrent automatically reduced to 60% of dynamic current setting 1 second after the last pulse. /ill, theoretically, reduce motor heating to 36% (due to  $I^2t$ ) of the original value. If the ation needs a different idle current, please contact Leadshine for minor modification of

#### IP setting for current during standstill:

s used for this purpose, current setting due to coil inductance. OFF meaning that the ill current is set to be half of the dynamic current, and ON meaning that standstill current is e the same as dynamic current.

### Protection Functions

rove reliability, the driver incorporates a number of built-in protections features.

#### Over-voltage protection

power supply voltage exceeds +50VDC, protection will be activated and power indicator will turn red. When power supply voltage is lower than +20VDC, the driver will not works ly.

#### oil-ground Short Circuit Protection

tion will be activated in case of short circuit between motor coil and ground.

#### Over-current Protection

tion will activated in case of short current which may otherwise damage the driver.

**tion:** since there is no protection against power leads ( + , - ) reversal, it is critical to sure that power supply leads correctly connected to driver. Otherwise, the driver will be ed instantly.

### 9. Connection Diagram for Driver, Motor, Controller

A complete stepping system should include stepping motor, stepping driver, power supply and controller (pulse generator).

A typical connection is shown below:


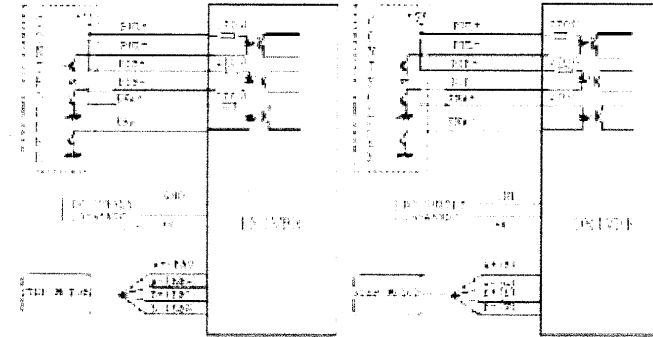


Figure 9: Driver connection in a stepping system

### 10. Control signal Waveform and Timing

In order to avoid some fault operation and deviation, PUL, DIR and ENA must accord with some parameters, as following diagram: (assuming JUMPER2 default setting is upward-rising edge of pulse being valid)

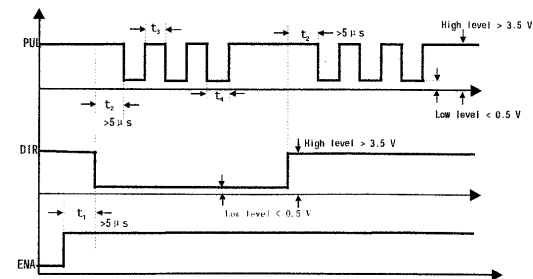

**rk:**

- 1) t1: ENA must be ahead of DIR by at least 5us, logic HIGH as valid. Generally ENA+ and ENA- is NC (not connected).
- 2) t2: DIR must be ahead of PUL effective rising edge by 5us to ensure correct direction;
- 3) t3: Pulse width not less than 1.5us;
- 4) t4: low level width not less than 1.5us.

**Wire Connection**

- (1) In order to improve driver noise rejection, it is recommended to use twisted pair shield cable.
- (2) To prevent noise incurred in pulse/dir signal, Pulse/direction signal wires and motor wires should not be tied up together. It is better to separate them by at least 10 cm, otherwise the motor noise will easily disturb pulse direction signals, motor position error, system instability and other types of failure.
- (3) If a power supply serves several drivers, separate connections drivers is recommended instead of daisy-chaining.
- (4) It is prohibited to pull and plug connector P2 while driver is powered ON, as there is still high current flowing through coil even when motor is stopped. Pulling and plugging P2 with power on will cause extremely high voltage surge EMF, destroy the driver..

**requent Asked Questions**

event that your 5042 doesn't operate properly, the first step is to identify whether the m is electrical or mechanical in nature. The next step is to isolate the system component causing the problem. As part of this process you may have to disconnect the individual nents that make up your system and verify that they operate independently. It is important .ment each step in the troubleshooting process. You may need this documentation to refer o at a later date, and these details will greatly assist our Technical Support staff in ining the problem should you need assistance.

Many of the problems that affect motion control systems can be traced to electrical noise, controller software errors, or mistake in wiring.

**Problem Symptoms and Possible Causes**

Symptom	Possible Problem
Motor not rotating	No power
	Invalid microstep resolution select setting
	DIP switch current setting is wrong
	Fault condition exists
	Unit is disabled
Motor rotating in the wrong direction	Motor phases may be connected in reverse
Unit in fault	DIP switch current setting is wrong
	Motor phase winding shorted
	Power input or output driver electrically overstressed
Erratic motor motion	Motor or power wiring unshielded or not twisted pair
	Logic wiring next to motor/power wiring
	Ground loop in system
	Open winding of motor
	Phase bad on driver
Motor stalls during acceleration	DIP switch current setting is wrong
	Motor is undersized for application
	Acceleration on controller is set too high
	Power supply voltage too low
Excessive motor and driver heating	Inadequate heat sinking / cooling
	Current reduction not being utilized
	Current set too high