 


Telecom  
NEW ZEALAND



# OPERATING GUIDE

 
---

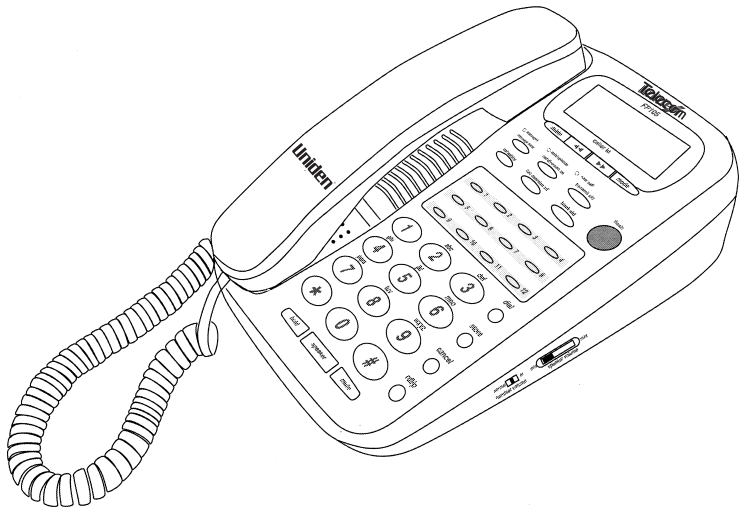

## Uniden<sup>®</sup> FP105

Caller Display with  
VIP Speaker phone

## WELCOME

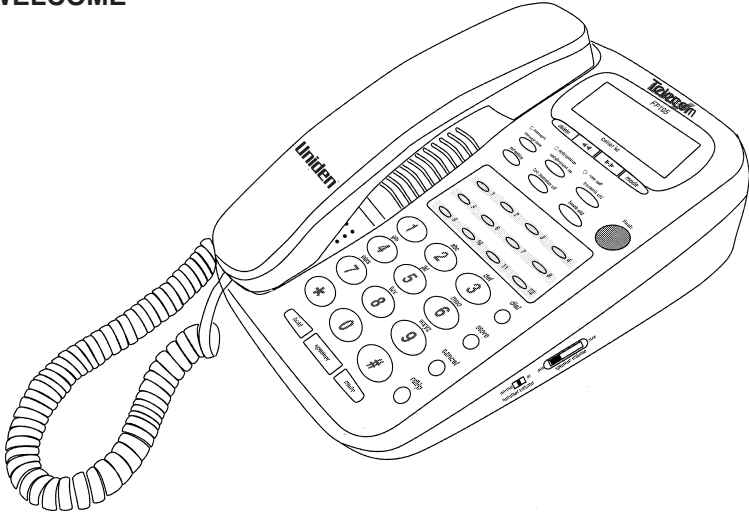

Congratulations on the purchase of your Uniden FP105 Telephone

The FP105 has been designed and engineered to exacting standards for reliability, long life and outstanding performance.

To obtain the full benefit from your new telephone, please read this Operating Guide thoroughly.

For your future reference, please fill in the panel below and attach your Purchase Receipt / Sales Docket.

Serial No: \_\_\_\_\_ Date of Purchase: \_\_\_\_\_  
(found on the bottom of the product box)

Name and Address of Dealer: \_\_\_\_\_  
\_\_\_\_\_

## CONTENTS

<b>Introduction / Welcome</b> .....	<b>1</b>
<b>Contents</b> .....	<b>2</b>
<b>Important Safety Instructions</b> .....	<b>4</b>
<b>Important Information</b> .....	<b>5</b>
Features .....	<b>6</b>
Included in Package .....	<b>7</b>
Controls and functions .....	<b>8</b>
<b>Installing your phone</b> .....	<b>11</b>
Wall mounting .....	<b>11</b>
Handset cord connection .....	<b>12</b>
Connecting the power .....	<b>13</b>
<b>Using your phone</b> .....	<b>14</b>
Placing a telephone call .....	<b>14</b>
Receiving a telephone call .....	<b>14</b>
Redial .....	<b>14</b>
Adjusting the ringer volume control .....	<b>14</b>
Adjusting the ringer tone control .....	<b>14</b>
Adjusting the handset volume control .....	<b>14</b>
Mute .....	<b>15</b>
Placing a call on hold .....	<b>15</b>
Speaker phone .....	<b>16</b>
Adjusting the speaker phone volume control .....	<b>16</b>
Memory dial numbers .....	<b>17</b>
Storing one-touch speed dial numbers .....	<b>17</b>
Memory storage card .....	<b>17</b>
Pause .....	<b>18</b>
Dialing stored numbers .....	<b>18</b>
Chain dialing .....	<b>18</b>
Call timer .....	<b>18</b>
LCD backlight display .....	<b>18</b>
Editing a stored one-touch speed dial memory .....	<b>19</b>
Deleting one speed dial memory .....	<b>19</b>
Deleting all speed dial memories .....	<b>19</b>

# CONTENTS

OF YOUR OPERATING GUIDE

<b>Using the pre-programmed feature buttons - SMARTPHONE</b>	<b>20</b>
Call Minder	20
Call Diversion	20
Call Return	21
Call Back	21
Call Waiting	21
Suspend Call Waiting	21
<b>Using Caller Display</b>	<b>22</b>
33 memory Caller Display	22
New call notification	22
New call review	22
Caller Display summary	23
Call review	23
Deleting a call from the call history	24
Deleting all calls from the call history	24
Speed dialing from the Caller Display list	24
Transferring a Caller Display number to a speed dial memory	24
Display messages	25
Special features - VIP	26
Setting a VIP call	26
Reviewing VIP calls	26
Speed dialing from the VIP list	26
Resetting a VIP call	27
Deleting a VIP call	27
Name matching	27
<b>Advanced user options menu</b>	<b>28</b>
Setting the LCD contrast	28
Setting the time and date	28
Setting the stutter dial tone detect on / off	28
Setting VIP alert on / off	28
<b>Troubleshooting</b>	<b>29</b>
<b>Specifications / Warranty</b>	<b>30</b>

## IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, these basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons:

- 1) Read and understand all instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning, and use a dry cloth, without liquid or aerosol cleaners.
- 4) Do not use this product near water; for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- 5) Do not place this product on an unstable cart, stand or table. The telephone may fall, causing serious damage to the unit.
- 6) This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- 7) Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
- 8) Do not overload wall outlets and extension cords, as this can result in the risk of fire or electrical shock.



This unit is not waterproof. To reduce the risk of fire, electrical shock or damage, **DO NOT** expose this product to rain, water or any other liquid or moisture.

## IMPORTANT INFORMATION

### CARING FOR YOUR TELEPHONE



- Clean your telephone using a soft damp cloth.
- DO NOT use solvents, detergents, sprays, abrasive pads, scouring powder or other products that may damage your telephone.
- DO NOT place the telephone in direct sunlight.
- DO NOT use in extreme humidity.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation, maintenance and service instructions in the literature accompanying this product.

### IMPORTANT NOTES

1. The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
2. Immediately disconnect this equipment should it become physically damaged, and arrange for its disposal or repair.
3. This equipment shall not be used in any manner which could constitute a nuisance to other Telecom customers.

This telephone has been designed to conform to local regulations, and you can connect it to most telephone lines, however you must not connect your phone to any of the following:

- Coin operated systems
- Party-line systems
- Most electronic key phone systems

 
Each device that you connect draws power from the phone line. We refer to the power drawn as the device's Ringer Equivalence Number (REN or RN). This number is shown on the bottom of your telephone. If you are using more than one phone or other device on the line, add up all the REN's. If the total is more than three, your phones may not ring.

**PLEASE READ BEFORE USE AND SAVE THESE INSTRUCTIONS**

## FEATURES


### Telephone

- LCD with backlight
- Hands-free speaker phone
- 12 one-touch speed dial
- 32 digit memory per speed dial
- 7 Pre-programmed feature buttons
- Hearing aid compatible
- Call Waiting compatible
- Redial, Flash and Pause
- Mute
- Call timer
- Wall mountable
- Adjustable ringer volume control
- Adjustable handset volume control
- Adjustable ringer tone control
- Adjustable speaker phone volume control

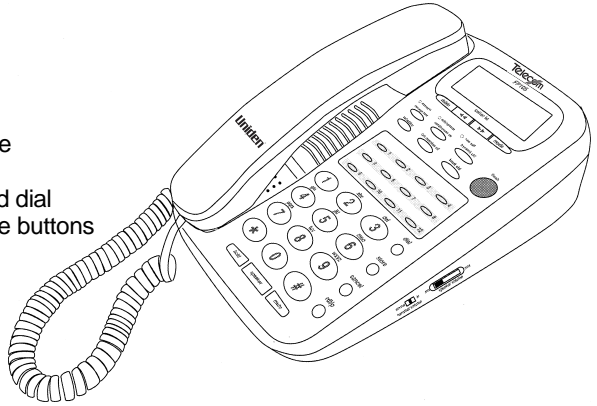


### Caller Display

 
- 33 memory Caller Display
- 24 digits and 16 characters per record
- Advanced Caller Display review functions
- VIP alert – 3 different ringer tones
- Name matching

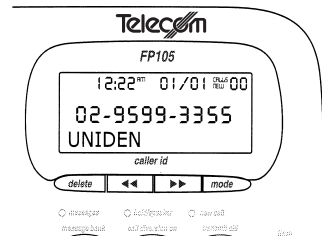


## INCLUDED IN YOUR PACKAGE

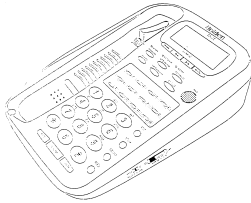 


Base Unit

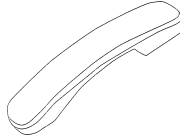 


Handset

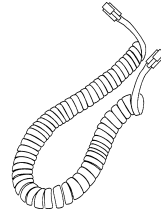 

Curly Cord

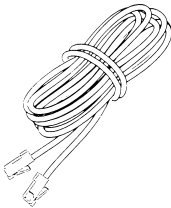 


Telephone line cord

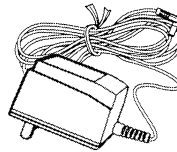 


AC Adaptor



 
Back-up Battery

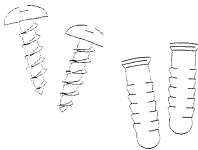


2 x Wall mounting  
screws and plugs

 

Memory storage card

 


Wall mounting bracket

 

Registration card



 Quick start guide



Operating guide

### TIP

 
To get the most from your purchase, please read this Operating Guide thoroughly. Also be sure to complete the Product Registration Form.

### NOTE


If any of these items are missing or damaged, contact the place of purchase.



## CONTROLS AND FUNCTIONS

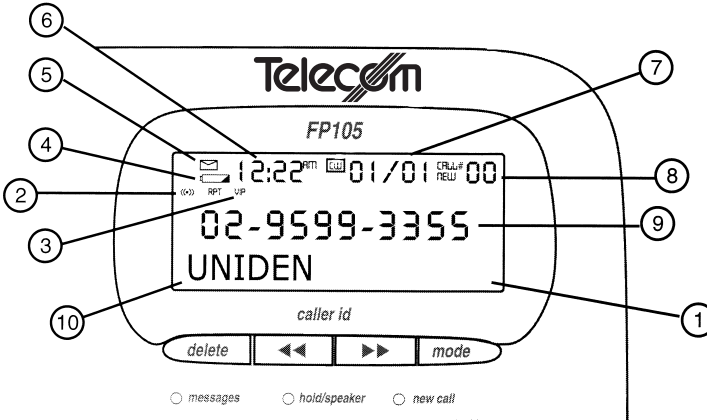


- |   |                               |    |                   |
|---|-------------------------------|----|-------------------|
| 1 | LCD screen                    | 7  | date              |
| 2 | VIP on icon                   | 8  | new call counter  |
| 3 | VIP call icon                 | 9  | numeric line      |
| 4 | low battery icon              | 10 | alpha line        |
| 5 | message waiting envelope icon | 11 | call waiting icon |
| 6 | time                          |    |                   |

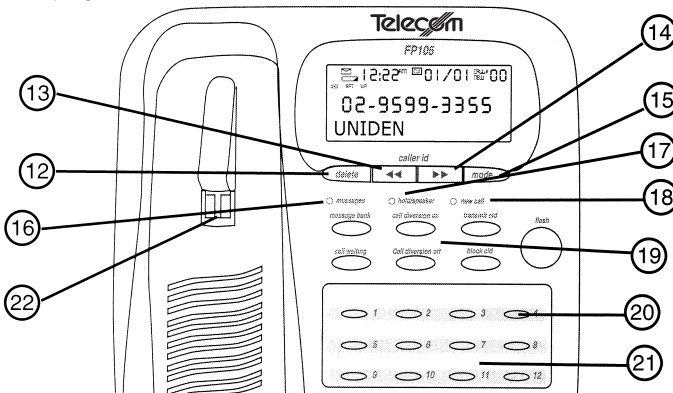 


- |    |                              |    |                                 |
|----|------------------------------|----|---------------------------------|
| 12 | Caller Display delete button | 18 | new call LED                    |
| 13 | << Scroll left button        | 19 | 7 Telecom Service buttons       |
| 14 | >> Scroll right button       | 20 | 12 one-touch speed dial buttons |
| 15 | Caller Display mode button   | 21 | memory storage card             |
| 16 | message waiting LED          | 22 | handset retainer tab            |
| 17 | hold / speaker LED           |    |                                 |



## Controls and Functions

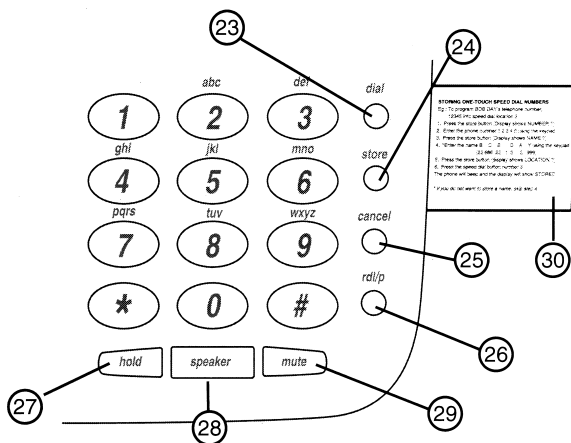 

 
- 23 dial button
- 24 store button
- 25 cancel button
- 26 redial / pause button
- 27 hold button
- 28 speaker phone button
- 29 mute button
- 30 memory storage instructions draw
- 31 handset volume control
- 32 speaker volume control

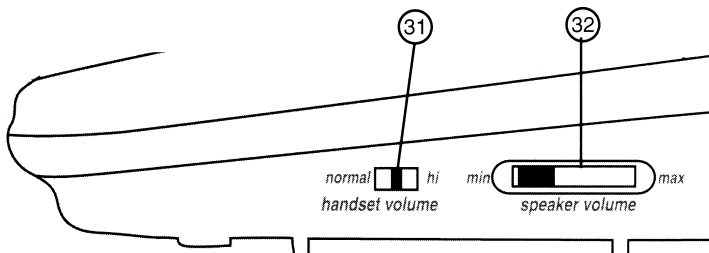

  - 33 AC adaptor power socket
- 34 telephone line socket
- 35 ringer tone control
- 36 ringer volume control
- 37 reset button
- 38 battery cover located underneath phone.

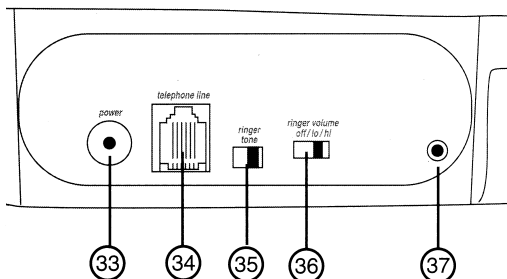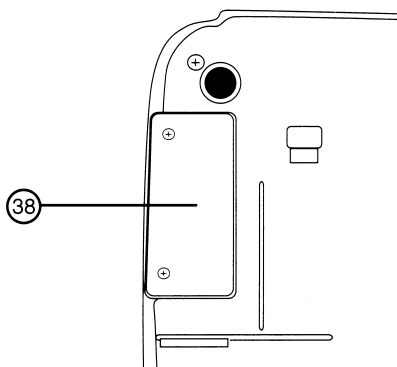

## BACK-UP BATTERY

 on the screen means;

- The back-up battery is either low or not fitted.



If the power fails or you unplug the AC adaptor, a 9v back up battery (supplied) would save the telephone memory.

 
Always use a new 9v alkaline battery for optimum performance.




**Disconnect the telephone line cord before replacing the battery.**

Follow these steps to install the back-up battery.

1. Use a Phillips screwdriver to remove the two screws on the battery compartment cover.

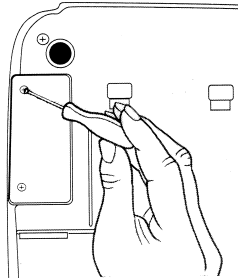

 2. Remove the battery compartment cover.
3. Snap the battery's contacts firmly to the battery connector, then place the battery inside the compartment

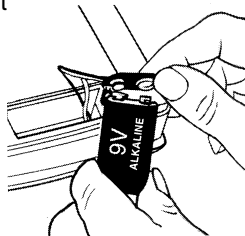

4. Replace the cover and secure with the screws.



**Dispose of old batteries promptly and properly.**

**Disconnect the telephone line cord before replacing the battery and always use a new 9v alkaline battery for optimum performance.**

## INSTALLING YOUR PHONE

 
### WALL MOUNTING

If required, you can mount your phone directly on a wall.


Before mounting your phone, please consider the following:

- Select a location away from electrical cables, pipes or other items behind the mounting location that could cause a hazard when inserting screws into the
- Make sure the wall material is capable of supporting the weight of the telephone.
- Use the screws (supplied) with anchoring devices suitable for the wall material where the telephone will be placed.


1. Insert two mounting screws 80mm apart. Allow about 5mm between the wall and screw heads for mounting the phone.

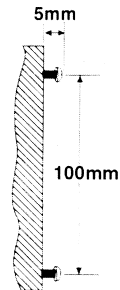

 2. Gently pull out the handset retainer tab, turn 180° and re-fit.

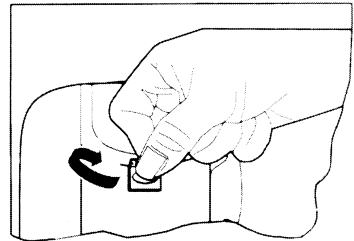


3. Attach the wall mounting bracket to the bottom of the telephone as shown.

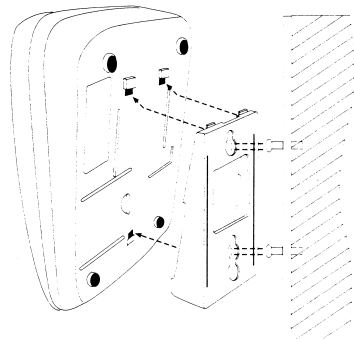 

4. Place the base unit on the screws and push down until it's firmly seated.


### HANDSET CORD CONNECTION

 Plug one end of the Handset Cord (curly) into the Handset and the othe end into the jack on the side of the telephone.

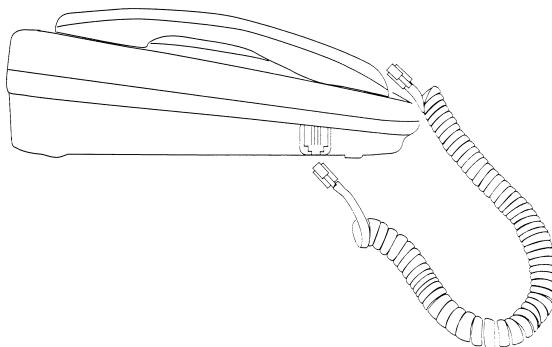

### TELEPHONE LINE CORD CONNECTION

 Plug one end of the Line Cord (straight) into the telephone line jack on the back of the telephone and the othe end into the wall outlet.

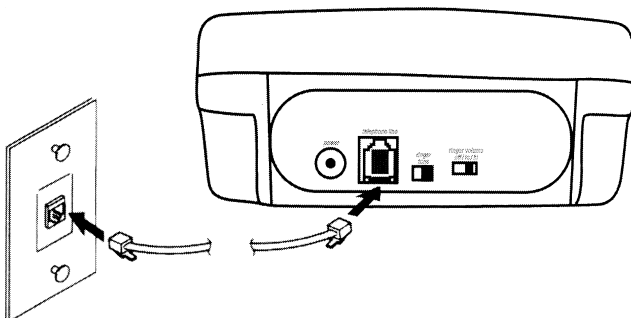

**NOTE:** Most phone equipment available now use modular jacks. Phone cards are fitted with a molded plastic connector which plugs into this type of jack. If you do not have modular phone jacks, contact Telecom or your local electrician for information about their installation.

**Never** install telephone wiring during a lightning storm.




**Never** touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.

**Use caution** when installing or modifying telephone lines.

## CONNECTING THE POWER

 1. Plug the AC adaptor into a standard 230~240V AC wall outlet and switch on.
2. Plug the AC adaptor lead into the power

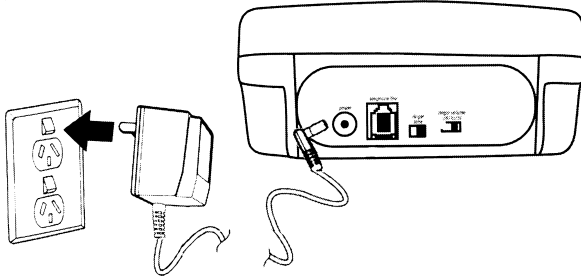

### CAUTION

Use only the AC adaptor supplied with this phone.

Place the power cord and line cord so that they do not create a trip hazard or where they could become chafed and create fire or electrical hazard.

## DISPLAYS

The telephone will beep and the display will show **SET TIME / DATE**

When you subscribe to Telecom Caller Display service, the time and date will be automatically updated when the first message is received.

After 10 seconds the display will show **TOTAL CALLS 0**

### NOTE

If you do not subscribe to Telecom Caller Display service, or you wish to set the clock manually, please refer to the Advanced User Options Menu on page 28.

### TIP

Once you have installed the phone, lift the handset and check for dial tone. If there is no dial tone, please refer to the troubleshooting section on page 29.

## USING YOUR PHONE

### PLACING A TELEPHONE CALL

1. Remove the handset from the base, or press the speaker button.
2. Press the keypad buttons to dial the phone number you want.
3. After you have completed the call, place the handset back on the cradle.

### REDIAL

 
If you want to redial the last number dialled, simply pick up the handset or press the speaker button, then press the redial button. The telephone will automatically redial the last number dialled.

### RECEIVING A TELEPHONE CALL

When the phone rings, pick up the handset from the cradle or press the speaker button and begin the conversation.


### ADJUSTING THE RINGER VOLUME CONTROL

While the phone is ringing, you can adjust the ringer volume of your telephone by moving the ringer volume switch, located at the rear of the telephone, to the desired off/lo/hi position.

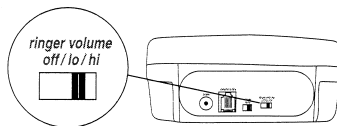


### ADJUSTING THE RINGER TONE CONTROL

 While the phone is ringing, you can adjust the ringer tone of your telephone by moving the ringer tone switch, located at the rear of the telephone, to the desired position.

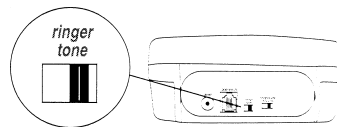

### ADJUSTING THE HANDSET VOLUME CONTROL

 
While using the telephone, you can adjust the handset volume slider control, located at the side of the telephone, to the desired position.



## MUTE

Press the mute button to turn off the handset microphone, allowing private conversations in the same room without the calling party hearing.

 Press the mute button again to resume the conversation with the calling party.

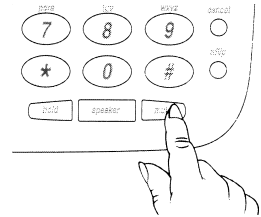


### NOTE

During the mute condition, the display will show < MIC MUTE >.

## PLACING A CALL ON HOLD

 1. To place a call on hold, press the hold button and hang up.

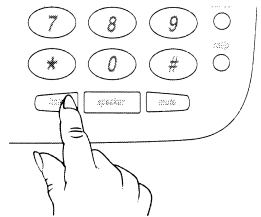

The hold/speaker LED will flash, the display will show < CALL ON HOLD > and the party on hold will hear music.



2. To begin conversation again:  
Pick up the handset or press the speaker button or pick up an extension phone, the hold will then be automatically released.




## SPEAKERPHONE

 To answer an incoming call ;

1. Press the speaker button and begin your hands-free speaker phone conversation.
2. Press the speaker button to hang up.

### NOTE

At any time during the conversation you can pick up the handset to resume normal conversation.

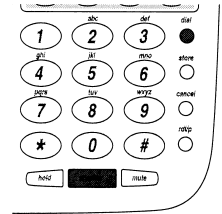

To make a speaker phone call ;


Press the speaker button, listen for dial tone and then use the keypad to dial the number you wish to call. Lift the handset to resume normal conversation.

During a regular conversation ;


Press the speaker button and replace the handset. The hold/speaker LED turns red and you can begin your speaker phone conversation.

## ADJUSTING THE SPEAKER PHONE VOLUME CONTROL

 During a speaker phone conversation, you can adjust the speaker volume slider control, located on the side of the telephone, until you hear the desired volume.

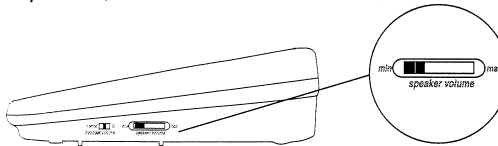

 When the telephone is in the speaker phone mode, the hold/speaker LED turns red and the display shows <SPEAKER PHONE>.

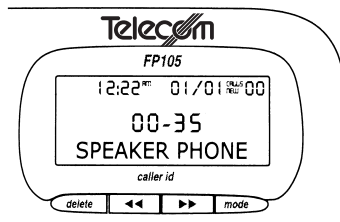

### NOTE

It is not recommended to operate the speaker phone mode under noisy room conditions.

## MEMORY DIAL NUMBERS

12 one-touch speed dial numbers can be programmed into the memory of your telephone. Each memory location can store a maximum of 32 digits.

## STORING ONE-TOUCH SPEED DIAL NUMBERS

**Eg :** To program BOB DAY's telephone number, 1234567 into speed dial location 3

1. Press the store button (Display shows NUMBER ?)
  2. Enter the phone number **1 2 3 4 5 6 7** using the keypad
  3. Press the store button (Display shows NAME ?)
  4. \*Enter the name **B O B D A Y** using the keypad  
(22 666 22 1 3 2 999)
  5. Press the store button (display shows LOCATION ?)
  6. Press the speed dial button number 3
- The phone will beep and the display will show STORED

\* If you do not want to store a name, skip step 4 by pressing store again.

### NOTE

In the above example, pressing the keypad digit '1' once inserts one space between letters B and D.

If you want to insert more than one space, use the >> button to move the cursor to the position required.

Repeated pressing of the keypad digit '1' will step through the following symbols :- ' ( ) & , .

Repeated pressing of any other keypad digit will step through the letters and number associated with that key.

Examples A=2, B=22, C=222, 2=2222, D=3, E=33, F=333, 3=3333

 
### TIP

Repeated pressing of the << or >> button will move the cursor backwards or forwards to the position required.

When the cursor is flashing on top of any character, you can press the delete button to delete that character.

## MEMORY STORAGE CARD

When you have programmed a number into the speed dial memory, you can write the name of the person on the memory storage card (supplied).

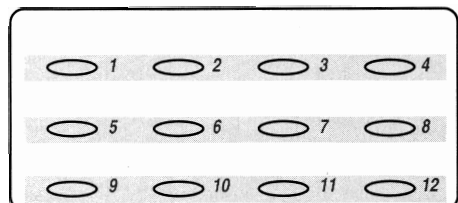

## PAUSE

During the memory storage procedure, you may wish to press the redial button to insert a pause between numbers. (This is sometimes useful for accessing a switch board, telephone banking or long distance dialling).

Pressing the redial button more than once will increase the pause between digits. Each time the redial button is pressed, a 'P' will show on the LCD to indicate a 2 second pause in the dialing sequence. Each pause counts as one digit.

## DIALING THE STORED NUMBERS

There are four different ways to dial a stored speed dial number, depending on your preference.

1. Pick up the handset and press the desired speed dial button (1 ~ 12).
2. Press the speaker button and then press the desired speed dial button (1 ~ 12).
3. Press the desired speed dial button (1 ~ 12), and check the LCD shows the correct information then press the **dial** button (the phone enters speakerphone mode and dials the displayed number).
4. Press the desired speed dial button (1 ~ 12), and check the LCD shows the correct information then pick up the handset and then press the **dial** button.



If you have selected a speed dial button that does not have a stored number, the telephone will not dial.  
For options 3 & 4, the LCD will show <EMPTY> if there is no number stored in the memory button pressed.

## CHAIN DIALING

On certain occasions (such as telephone banking), after dialing one number, you may wish to dial another number without hanging up. This is known as chain dialing or cascade dialing.

Simply store the second number in another memory location and press the corresponding speed dial button when required. In this way you can recall both numbers that are stored into their own memory locations at the relevant times.

 
## CALL TIMER

Approximately 10 seconds after the handset is picked up, or the speaker button is pressed, the call counter will begin and show the elapsed time on the display screen.

## LCD BACKLIGHT DISPLAY

The LCD has a back light that will turn on under the following conditions;

- Any incoming call
- Picking up the handset
- Pressing any button

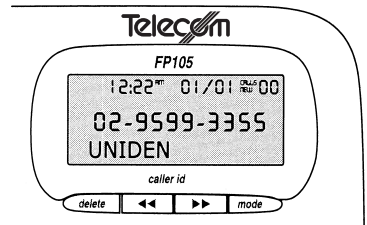

The backlight will switch off automatically approximately 15 seconds after the last activity. The back light will not work if the AC adaptor is switched off, disconnected or there is a power cut.

## EDITING A STORED ONE-TOUCH SPEED DIAL MEMORY

**Example :** To edit the details stored in speed dial location 3 from BOB DAY 1234567 to BOB MAY 1235467.

1. Press the store button then the speed dial button 3 (Display shows NUMBER ?).
2. Edit the phone number using the << or >> button.  
(Move the blinking cursor to after the digit 3 then enter 5 4 delete delete ).
3. Press the store button (Display shows NAME ?).
4. Edit the name by using the << or >> button.  
(Move the blinking cursor to the letter D. press the delete button to delete the letter D, then select the letter M by pressing the keypad digit 6).
5. Press the store button (Display shows LOCATION ?).
6. Press the speed dial button 3 to store this edited information into speed dial memory location number 3.

The phone will beep & the number will be stored.

## DELETING ONE SPEED DIAL MEMORY

**Example :** To delete the details stored in speed dial location 3.

1. Press the speed dial button 3 (Display shows contents of this memory).
2. Press the delete button (Display shows DELETE 03 ?).
3. Press the delete button again.

The phone beeps and the display shows DELETED.

## DELETING ALL SPEED DIAL MEMORIES

**Example :** To delete all details stored in all speed dial locations ;

1. Press and hold the store button for 2 seconds to enter the Advanced User Options Menu (Display shows LCD CONTRAST).
2. Press the store button 4 times.
3. Press the >> or << buttons to choose CLEAR SPEED DIAL.
4. Press the store button to confirm your choice and exit the Advanced User Options Menu.

### USING THE PRE-PROGRAMMED FEATURE BUTTONS - SMARTPHONE

This telephone has been pre-programmed to provide easy access to Telecom Call Minder and selected Telecom Smartphone services at the touch of a button. Your Telecom Smartphone service User Guide contains information about these services and how to use them.

For more information about Telecom Call Minder and Smartphone services, their availability, charges and subscribing to these services, call Telecom on 123 if you are a Residential or Home Business Customer, and 126 if you are a Business Customer.

 
#### CALL MINDER

If you subscribe to Telecom Call Minder, the CALL MINDER button allows you to access your Telecom Call Minder mailbox.

When a new message has been left in your mailbox, the Message Waiting LED on your phone will begin to flash and the Message Waiting envelope icon will show on the display.

##### To Use Call Minder :

1. Lift the handset.
2. Press the Call Minder button.
3. Enter your PIN at the prompt and follow the recorded instructions.

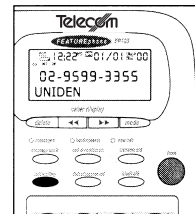

When you have cleared the message (from any phone), the Message Waiting LED and envelope icon will turn off.



There may be a delay in these indicators turning on or off.

#### CALL DIVERSION

If you subscribe to Telecom Call Diversion service, Call Diversion allows you to activate the Call Diversion number you have registered against the 161 Call Diversion code.

##### To Turn Call Diversion On :

1. Lift the handset.
2. Press the call diversion on button and wait for the confirmation tone. If required, place the confirmation call.
3. Hang up the phone.

##### To Turn Call Diversion Off :

1. Lift the handset and wait for the confirmation tone.
2. Press the call diversion off button and wait for the confirmation tone.
3. Hang up the phone.

---

## Using the pre-programmed feature buttons - SMARTPHONE

### **CALL RETURN (This Service is not currently offered by Telecom)**

If you subscribe to Telecom Call Return service, Call Return allows you to call the last number that called you, even if you didn't answer the call.

#### **To Use Call Return :**

1. Lift the handset.
2. Press the Call Return button
3. Follow the voice prompts - a message will let you know if the call was local or national.
4. Continue with the call or hang up.

### **CALL BACK (This Service is not currently offered by Telecom)**

If you subscribe to Telecom Call Back service, Call Back lets you know when that busy line is free.

#### **To Use Call Back :**

1. When you dial a number and receive the engaged tone, or there is no answer Hangup.
2. Lift the handset.
3. Press the Call Back button and wait for the confirmation tone.
4. Hang up the phone.
5. Your telephone will ring with a distinctive ring tone when the number you called is free.
6. Pick up the handset, and wait for the call to be connected.

### **CALL WAITING**

If you subscribe to Telecom Call Waiting service, Call Waiting lets you know if you have another call while you are already on the phone. Telecom Call Waiting sends you four beeps when you have another call. If you do not want to be disturbed during a call, you can temporarily Suspend Call Waiting

#### **To Use Call Waiting:**

1. Press the Call Waiting button when you hear the four Call Waiting beeps. The first call is placed on temporary hold and you are connected to the new call.
2. Press the Call Waiting button to return to the first call and put the second call on hold. You can alternate between the two calls as often as necessary.

#### **To Suspend Call Waiting Before a call :**

If you do not want to be interrupted during an important call, you can Suspend Call Waiting before you dial the telephone number.

 
Before making your call :

1. Lift the handset.
2. Press the Suspend Call Waiting button.
3. Dial the telephone number.

Call Waiting is turned off for this phone call only. Call Waiting resumes when you hang up.

## USING CALLER DISPLAY

When you subscribe to the Telecom Caller Display service, your telephone allows you to see information about the incoming call before you answer the phone. Caller Display gives you the reassurance that comes with having more certainty as to who is calling and allows you more choice of how to handle your call.


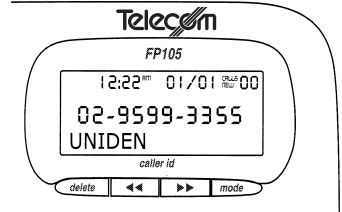


## 33 MEMORY CALLER DISPLAY

This telephone will store and display information about the last 33 calls received. Each call is numbered in the call history, together with the time and date the call was received and the number of the calling party. When the memory is full, the oldest call information is deleted to make room for new incoming call information.

## NEW CALL NOTIFICATION

  When a new call is received, the time, date and calling number will be displayed between the first and second ring.

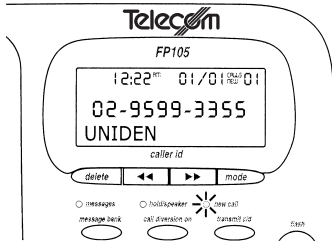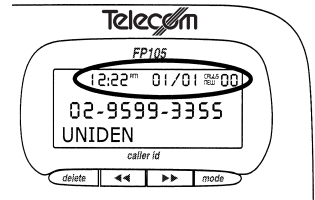


The new call LED will flash quickly when the phone is ringing, and then change to a slow flash. It will continue to flash until all new call information in the call history has been reviewed.

## NEW CALL REVIEW

 To review only new call information,

1. Press the mode button, and the display will show REVIEW NEW CALL.
2. Use the << or >> buttons to view the new calls.


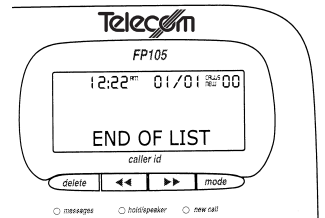


**NOTE**

When the display shows END OF LIST or TOP OF LIST, all new calls have been reviewed and the new call LED will stop flashing.

### CALLER DISPLAY SUMMARY

  The display will show the Caller Display summary  
TOTAL CALLS XX (where XX is the total number of  
calls stored in the memory)

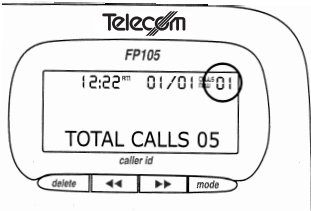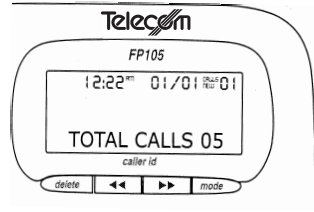


The display will also show the number of new  
calls received. (New calls means calls that have  
not been reviewed yet)

### CALL REVIEW

 
To review all the calls in the call history, use the << or >> buttons.  
When the display shows END OF LIST, all calls  
have been reviewed.



Press and hold the << or >> buttons for 2  
seconds and then release. The telephone  
will automatically scroll through the Caller  
Display records one by one. Press the cancel  
button to exit this mode at any time.

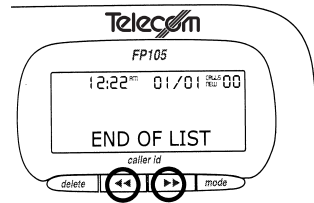

 If the Caller Display number is longer than  
16 digits, you can press the keypad digit '3'  
to view the next digit to the right and press  
the keypad digit '1' to view the next digit to  
the left. The phone will beep three times in quick  
succession when the end of the number has  
been reached.

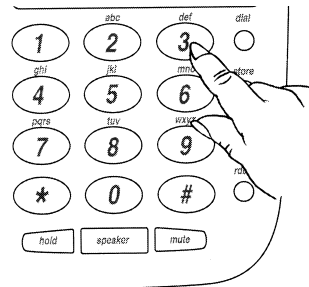




### DELETING A CALL FROM THE CALL HISTORY

To delete a call from the call history ;

1. use the << or >> buttons until the screen displays the information of the call you wish to remove.
2. Press the delete button once and the display will show DELETE ?
3. Press the delete button again.

 The phone will beep once, and the display will show DELETED.

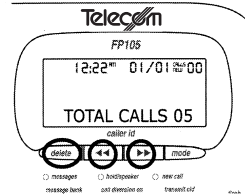

### DELETING ALL CALLS FROM THE CALL HISTORY

To delete all calls from the call history ;

1. Press the delete button once and the display will show DEL ALL CID ?
2. Press the delete button again.

The phone will beep once, all call records will be deleted and the display will show DELETED.



The display must be showing the call summary 'TOTAL CALLS XX'  
New calls can not be deleted until they have been reviewed.

 
 
### SPEED DIALING FROM THE CALLER DISPLAY LIST

1. Use the << or >> buttons to scroll through the call history until you locate the number you wish to call.
2. Press the dial button. The telephone will enter the speaker phone mode and dial the displayed number. Pick up the handset at any time.

### TRANSFERRING A CALLER DISPLAY NUMBER TO THE SPEED DIAL MEMORY


1. Use the << or >> buttons to scroll through the call history.

2. When you locate the number you wish to transfer, press the store button.  
The display will show STORE TO ?

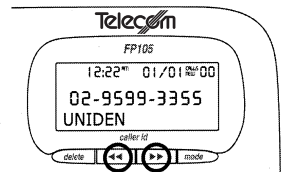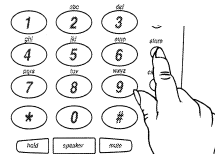

3. Press a speed dial button (1 ~ 12) to store the number into the one-touch speed dial list

 
The phone will beep once, and the display will show STORED.

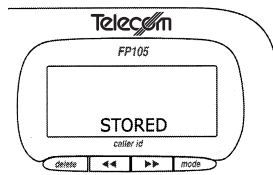

## DISPLAY MESSAGES


**PRIVATE** on the screen means;

 - The caller has chosen to withhold their number

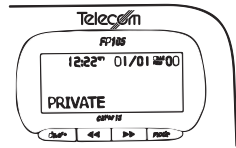


**UNAVAILABLE** on the screen means;

 - A call from some older telephone exchanges
- A call from a payphone
- A call coming from a non-Telecom network.

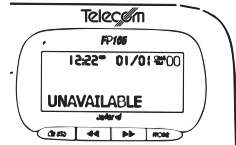


**0000** on the screen means;

 - A call coming from overseas

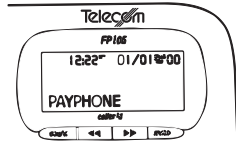


**DATA ERROR** on the screen means;

 - There has been an Error during the transmission of Caller Display information. This does not mean your phone is faulty.

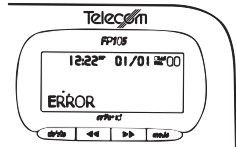


**END OF LIST or TOP OF LIST** on the screen means;

 - You have reached the end of the Caller Display history information.

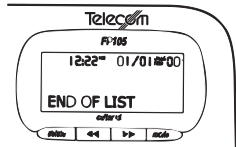

**TOTAL CALLS 00** on the screen means;

 - You have not received any Caller Display information
- No calls are stored in the Caller Display history

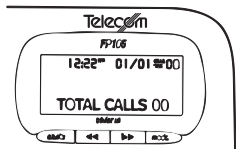

### **SPECIAL FEATURES – VIP**

You can transfer any Caller Display record into the VIP Call List and gain these special features:-

- The telephone will sound a special VIP tone (3 different VIP tones are available) to alert you to an incoming VIP call.
- You can speed dial from the VIP Call list

### **SETTING A VIP CALL**

1. Use the << or >> buttons to scroll through the call history until you locate the number you wish to transfer.
2. Press the mode button. The display will show SET AS VIP ?
3. Press the mode button again. The display will show RING TYPE : 1
4. Press the store button to accept VIP ring type 1 (or press the >> button to select a different ring type then press the store button to confirm)

The phone will beep once, and the display will show STORED.



Each time you press the >> button the telephone will sound the particular VIP ring tone so you can listen to the tone before choosing your preference.



As you scroll through the Caller Display history, any number that has been set as a VIP call will display the VIP icon.

### **REVIEWING VIP CALLS**

To review only VIP call information ;

1. Press the mode button twice, and the display will show REVIEW VIP CALL.
2. Use the << or >> buttons to view the VIP calls.

### **SPEED DIALING FROM THE VIP LIST**

1. Press the mode button twice and the display will show REVIEW VIP CALL
2. Use the << or >> buttons to scroll through the VIP list.
3. Locate the number you wish to call then press the dial button.  
The telephone will enter the speaker phone mode and dial the displayed number.  
Pick up the handset at any time.

### RESETTING A VIP CALL

To reset a VIP call to normal ;

1. Press the mode button twice, and the display will show REVIEW VIP CALL.
2. Use the << or >> buttons to view the VIP calls.
3. When you locate the VIP number you wish to reset to normal, press the mode button. The display will show SET AS NORMAL ?
4. Press the mode button again.

The phone will beep once, and the display will show STORED.

### DELETING A VIP CALL

To delete a VIP call ;

1. Press the mode button twice and the display will show REVIEW VIP CALL ?
2. Use the << or >> buttons to review the VIP calls.
3. When the screen displays the VIP call you wish delete, press the delete button. The display will show DELETE ?
4. Press the delete button again.

The phone will beep once, the displayed call record will be deleted and the display will show DELETED.

### NAME MATCHING

When the phone number of an incoming call is matched with the exact same number stored in one of the 12 one-touch speed dial memory locations, the name stored in the memory will automatically be displayed together with the Caller Display number.

#### Example

If the number '9123 4567' and the name 'MUM' is stored into one of the speed dial memory locations (1 ~12) and the caller display number '9123 4567' is sent by the Telecom Caller Display network, the name 'MUM' will be automatically displayed together with the phone number, time and date of the call.

#### NOTE

You must subscribe to Telecom Caller Display service for this feature to work

#### TIP

Always store names with the numbers in your 12 one-touch speed dial memories to maximise the benefit of this feature.

## ADVANCED USER OPTIONS MENU

To enter the Advanced User Options Menu press and hold the store button for 2 seconds. Release the store button when the display shows;

### LCD CONTRAST

1. Press the >> or << buttons to adjust the display contrast to the desired viewing level.
2. Press the store button to set and move to the next menu option or cancel to exit.

### SET TIME/DATE

The time and date can be set manually, as shown below.

#### Example

To set the time and date as : 08.45AM on the 9th of July

1. Use the keypad buttons and press \* 0 8 4 5 0 9 0 7
2. Press the store button to set and move to the next menu option or cancel to exit.



To select AM press the \* button, to select PM press the # button  
Each press of a keypad digit moves the cursor to the next position to be set.  
If you make a mistake, use the << or >> buttons to move the cursor and re-enter the correct information.



If you subscribe to TelecomCaller Display service, the time and date will be updated automatically when the first message is received, so you do not need to set it manually.

### VIP ALERT ON/OFF

1. Press the >> or << buttons to choose VIP ALERT ON/OFF
2. Press the store button to set and move to the next menu option or cancel to exit.

### SDT DETECT ON/OFF

1. Press the >> or << buttons to choose STUTTER DIAL TONE DETECT ON/OFF
2. Press the store button to confirm your choice and exit the Advance User Options Menu.



The Advanced User Options Menu can not be accessed if the handset is off the cradle or if the telephone is in the speaker phone mode.  
To exit the Advanced User Options Menu at any time, press the cancel button.

## TROUBLE SHOOTING

If your telephone is not performing to your expectations, here are some suggestions on how to resolve the problem.

Problem	Suggestion
Can't make or receive calls. No Dial Tone.	<ul style="list-style-type: none"> <li>• Make sure you use only the line cord supplied with this telephone.</li> <li>• Check that both ends of the telephone line cord and Handset cord are plugged in.</li> <li>• Plug another telephone into the telephone socket and check for a dial tone.</li> </ul>
Can't hear the telephone ringing.	<ul style="list-style-type: none"> <li>• Make sure the AC adaptor is plugged in and the wall socket switched on.</li> <li>• Make sure you do not have too many telephones connected to the telephone line.</li> <li>• Adjust the Ringer Volume Control</li> </ul>
Speaker phone volume is too low.	<ul style="list-style-type: none"> <li>• During speakerphone conversation, adjust the speaker volume slider control on the side of the telephone.</li> </ul>
One Touch speed dial numbers are not working correctly.	<ul style="list-style-type: none"> <li>• Repeat the memory storage procedures detailed on page 19.</li> </ul>
Handset does not hang up in the wall mount position.	<ul style="list-style-type: none"> <li>• Make sure the Handset Retainer Tab has been turned around (point facing up) and the Handset is placed firmly into the cradle.</li> </ul>
New Call LED keeps flashing	<ul style="list-style-type: none"> <li>• All new calls must be reviewed before the new call LED stops flashing.</li> </ul>
Caller Display feature not working Pre-programmed features not working	<ul style="list-style-type: none"> <li>• These are all subscription services. To subscribe, or check the pricing and availability, please contact Telecom Residential Sales and Service on '123' or Telecom Business on '126'</li> <li>• Make sure the AC adaptor is plugged in and the wall socket switched on.</li> </ul>
Blank or faint LCD screen	<ul style="list-style-type: none"> <li>• Make sure the ac adaptor is plugged in and the wall socket switched on.</li> <li>• Check / adjust the contrast control setting as described in the Advanced User Menu Options on page 28.</li> </ul>

## SPECIFICATIONS

**Compliance :** PTC200, AS3108, AS3548 / CISPR 22 Class B

**VMWI :** FSK Detection, SDT Detection

**Size :** 165mm(W) x 115mm(D) x 80mm(H)

**Weight :** Approx. 650g



Specifications, Features and availability of any Optional Accessories shown are typical and subject to change without notice.

## WARRANTY

### ONE YEAR LIMITED WARRANTY

**IMPORTANT:** Evidence of the original purchase is required for warranty service.

**WARRANTOR:** Uniden New Zealand Limited.

**ELEMENTS OF WARRANTY:** Uniden warrants to the original retail owner for the duration of this warranty its FP105 hereinafter referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original retail owner only is only valid in the original country of purchase and shall be of no further effect 12 months after the date of original retail sale. This warranty will be deemed invalid if the Product is: (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as a part of a system not manufactured by Uniden.

**PARTS COVERED:** This warranty covers for one (1) year, the telephone and Handset only. All accessories (Cable and Modular Plug) are covered for 90 days only.

**STATEMENT OF REMEDY:** In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor, at its discretion, will repair the defect or replace the Product and return it to you without charge for parts and service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT IN ANY WAY AFFECT YOUR RIGHTS UNDER THE CONSUMER ACT.

**WARRANTY CARD:** If a Warranty Card has been included with this Product, please complete and return to us within 14 days of purchase. Your name and the serial number of the Product will then be registered in our database and this will help us process your claim with greater speed and efficiency should you require warranty service.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** in the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase (e.g. a copy of the sales docket) to the warrantor at:

### UNIDEN NEW ZEALAND LIMITED SERVICE DIVISION

150 Harris Road,  
E Tamaki,  
Auckland.

Ph: (09) 273 8383 Fax: 274 0009 FREE CALL: 0800 486 4336

THANK YOU  
for purchasing a Uniden phone

**Uniden<sup>®</sup>**  
A Clear Signal of What's Ahead.