

Canon

EOS REBEL T4i EOS 650D

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T4i/EOS 650D Instruction Manual.



English

© CANON INC. 2012

CPQ-E042-000

Quick Start Guide

- Insert the battery.**
- Insert a SD card.**
- Attach the lens.**
Align the lens' white or red index with the camera's index in the matching color.
- Set the lens focus mode switch to <AF>.**
- Set the power switch to <ON>, and set the Mode Dial to <A+> (Scene Intelligent Auto).**

- Flip out the LCD monitor.**
- Focus the subject.**
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
- Take the picture.**
Press the shutter button completely to take the picture.
- View the image.**
The captured image will be displayed for 2 sec. on the LCD monitor.

- The ★ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M).
- Battery Life with Viewfinder Shooting**

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 550 shots	Approx. 440 shots

Image Playback

Index Magnify

Select image Playback

INFO, Shooting information Erase

Preparation

Menu Operations

<MENU> button

LCD monitor/Touch screen

<SET> button

Cross keys

- Press the <MENU> button to display the menu.
- Press the <◀▶> key to select a tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

Basic Zone Modes

Movie Shooting

Creative Zone Modes

Menu items

Menu settings

Image-Recording Quality

- Select [1: Image quality], then press <SET>.
- Press the <◀▶> key to select the quality, then press <SET>.

Image-recording quality

Recorded pixels

Possible shots

Picture Style★

- Press the <▼▲> button.
- Press the <◀▶> key to select the Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <F&C> (Neutral) and <F&F> (Faithful), refer to the camera's instruction manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

Basic Zone Modes

Creative Zone Modes

Shooting mode

Exposure compensation/AEB setting

Picture Style

AF operation

White balance

Return

Drive mode

White balance correction

Aperture

Highlight tone priority

ISO speed

Flash exposure compensation

Auto Lighting Optimizer

Built-in flash settings

Image-recording quality

White balance bracketing

Metering mode

- In Basic Zone modes, the settable functions differ depending on the shooting mode.
- Press the <◀▶> key to select a function, then turn the <Q> dial to set it.

Touch Screen

- The LCD monitor is a touch-sensitive panel that you can operate with your fingers.
- For information on touch screen operations, see the camera's instruction manual.

Custom Functions★

C.Fn I: Exposure

- Exposure level increments
- ISO expansion

C.Fn II: Image

- Highlight tone priority

C.Fn III: Autofocus/Drive

- AF-assist beam firing
- Mirror lockup

C.Fn IV: Operation/Others

- Shutter/AE lock button
- Assign SET button
- LCD display when power ON

