

# **NX300**

## **Firmware Upgrade guide**

### **(i-Launcher)**



**Digital Imaging Biz. CS Team**

## **NX300 Firmware upgrade guide**

- Easy Firmware upgrade: Please use i-Launcher program  
(You can install “i-Launcher” program using installation CD)
- If you download Firmware from Samsung.com homepage directly,  
→ refer to No.7(page 4)

### **※ Information**


- 1) Use the full charged battery
- 2) Suggested memory card format before upgrade start
- 3) During the updating process:  
  
Do not cut off the power / Do not remove the battery  
  
→ It causes the cannot power-on or the severe damage
- 4) Finish upgrade: all menu will be reset

## Firmware Upgrade method

1. You can connect the camera to your computer

2. Opening “Samsung i-Launcher”


→ select “Firmware Upgrade” menu

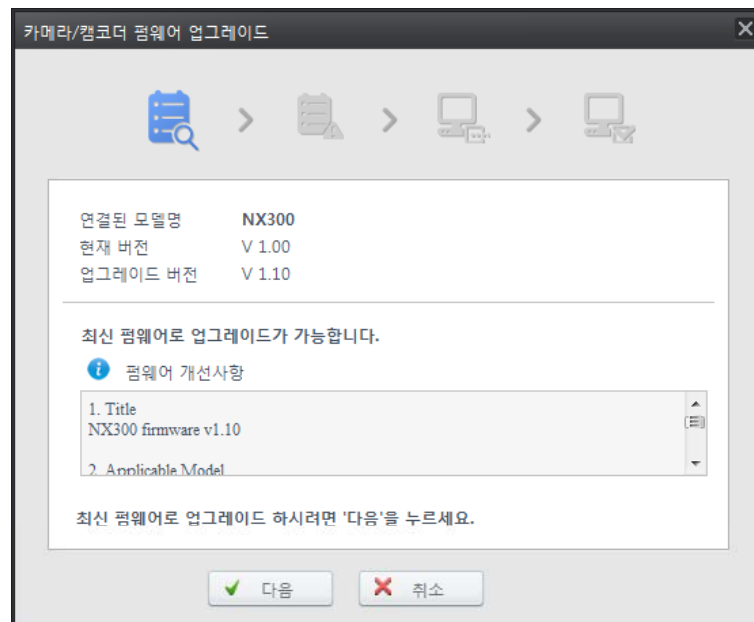


3. You can check precautions



4. Firmware download start

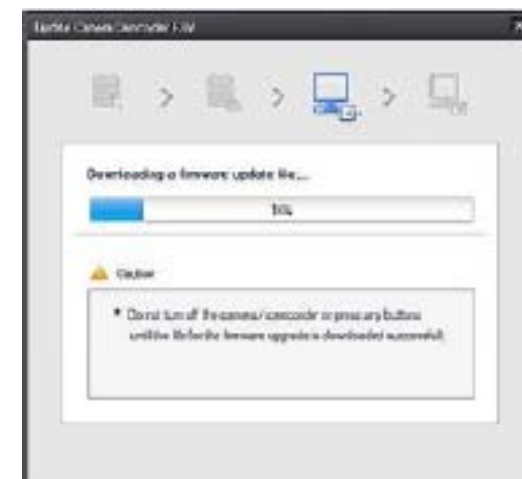

5. Once the transfer is complete, click the Close button

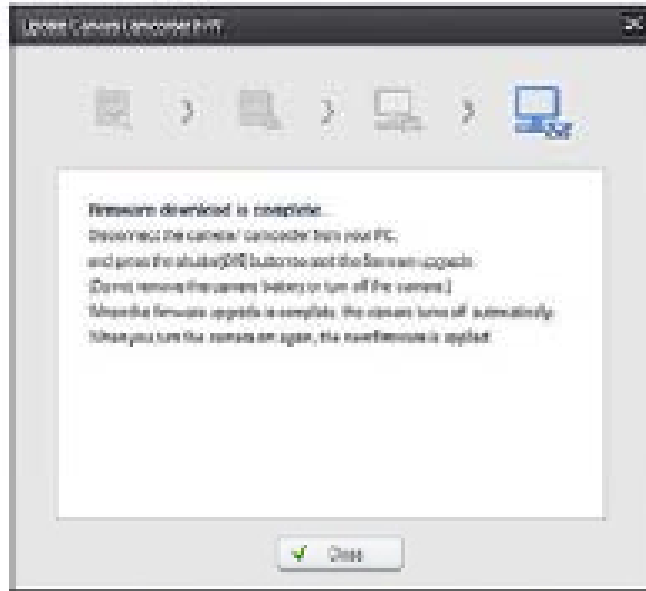

6. Terminate the USB cable connection

7. Turn the camera on

※ If you don't use i-Launcher but download Firmware from Samsung.com homepage directly  
→ unzip "zip" file & copy firmware file to SD card


8. Select the MENU → Setting  
→ Device Information



9. Select Firmware Update  
→ Body Firmware Update




## 10. Update will start follow below sequence

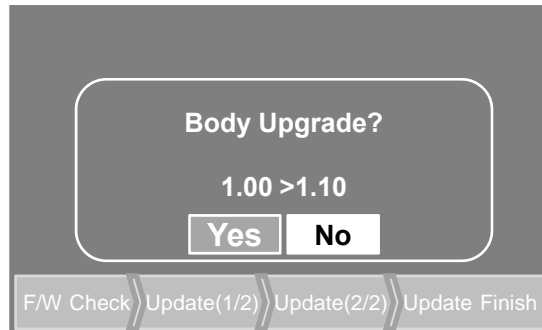


- ① Firmware version checking  
Press “Yes” → Upgrade start




- ② checking firmware file

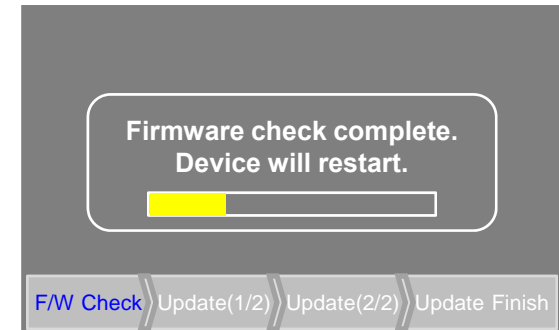


- ③ Device will restart after checking firmware

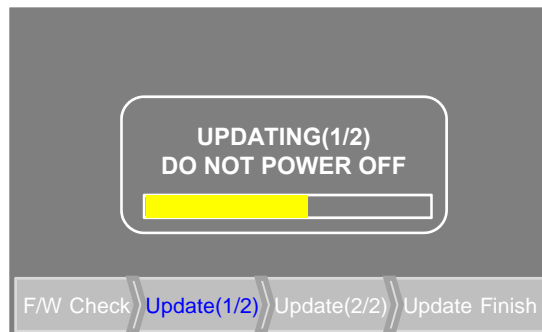

- ④ after restart → updating start  
※ Do not cut off the power  
Do not remove the battery

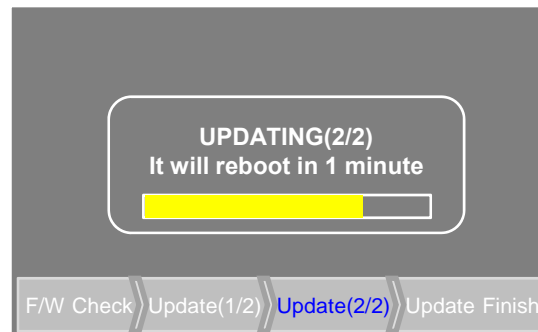

- ⑤ You can see the updating status  
→ After finish updating(2/2)  
→ Camera power-off & reboot  
※ upgrade is not finished

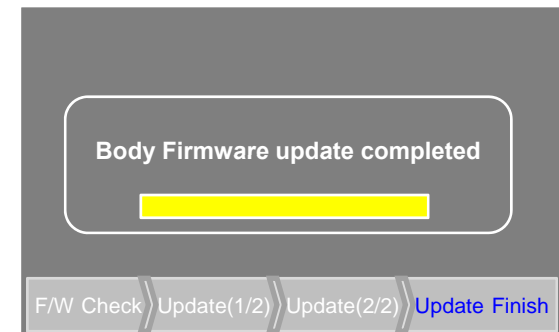

- ⑥ Finish upgrade  
→ You can see “Firmware update completed” message  
※ If your camera stop or power-off during upgrading  
→ Please retry upgrade