

EV512512



MT-519

a GK Technologies subsidiary

**FLIGHT & FIELD  
SERVICES LTD.**

P.O. BOX 11-340, WELLINGTON, N.Z.  
TELEPHONE 722-120

# **OPERATING MANUAL**

 
## **FOR THE**

# **MODEL 700**

# **INTERFERENCE LOCATOR**

••••

**SPRAGUE ELECTRIC COMPANY**



MFG  
DUNS

703 PLANTATION STREET • WORCESTER, MASS. 01605

Phones (617) 857-3515

TWX: 710-380-6739



1. Video Signal Jack
2. Speaker
3. Main Tuning Dial
4. External Meter Jack
5. Fine Tuning
6. Main Tuning
7. Meter
8. Antenna Input Jack
9. RF Attenuator
10. Volume
11. Earphone Jack
12. Sensitivity, Meter and Video
13. On-Off Switch
14. Charger Input Jack
15. Low-High Battery Indicator

## WARNING

DO NOT OPERATE THIS DEVICE BEFORE READING ALL OPERATING PROCEDURES. DO NOT OPERATE THIS DEVICE CONTRARY TO THE INSTRUCTIONS CONTAINED IN THIS MANUAL.

USE EXTREME CARE WHEN OPERATING THIS DEVICE (OR ANY SIMILAR DEVICE) IN THE PRIMARY FIELD OF POWER LINES. THIS IS ESPECIALLY TRUE WHEN THE CONDUCTORS ARE PHYSICALLY CLOSE TO THE OPERATOR, SUCH AS IN SWITCH YARDS AND AT THE TERMINALS OF GROUND-MOUNTED TRANSFORMERS AND BREAKERS. WHEN GAP-TYPE NOISE IS PRESENT, IT IS NOT NECESSARY TO GET PHYSICALLY CLOSE TO THE SOURCE TO PIN-POINT IT.

MAKE EVERY MOVE WITH THOUGHT AND CARE. FAILURE TO USE CARE WHEN IN CLOSE PROXIMITY TO ANY KIND OF ELECTRICAL POWER EQUIPMENT CAN RESULT IN INJURY OR ELECTROCUTION.