

MP3 - MF611

LASER MP3 With FM

USER MANUAL



• DECLARATION


Thank you for purchasing the LASER MF611 mp3 player. This manual contains detailed information and instructions to help get the most out of your MP3 player. Please read this manual carefully before using your new product.

Notice

- Please note that this product use 1 x AAA battery for power supply.
- Press and hold the "play" button for more than 3 seconds to suspend the player. The player is started again by the same method and will be returned to the last used screen.
- Please turn off the power if not using the player.
- Do not use this player in extreme hot, cold, dusty or wet environments.
- This player can only play MP3 or WMA format files. Please ensure that all music files are free of copy protection prior to transferring to the player.
- Images shown in this manual may vary slightly from actual product.
- Please respect the copyright laws in your area.

• EXTERNAL APPEARANCE AND KEYS

Before using the player please get to know the location of the keys and connections.

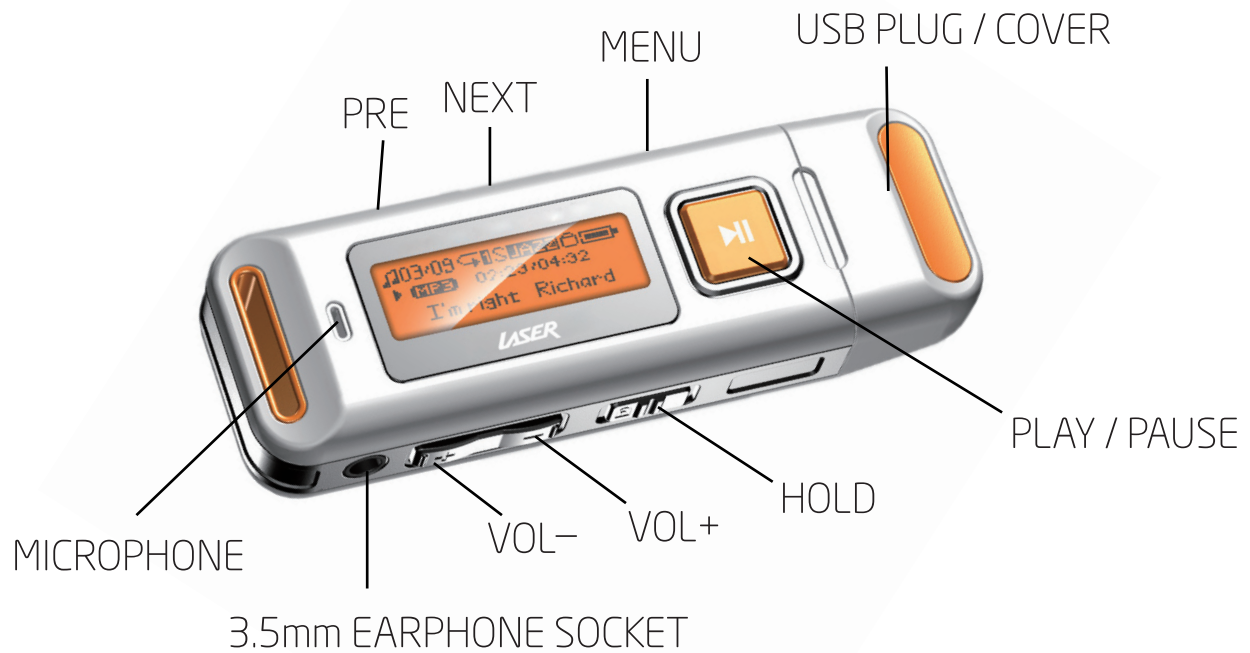

• QUICK START

Connect the player to the computer via the USB plug. When connected, the player will be detected and the operating system will load the drivers. The Player will be displayed in the "My Computer" window as a removable device and be assigned the next available drive letter. Please note that different operating systems may require different means of accessing the player. MP3/WMA files can then be simply copied & pasted to the player.








1. Insert the earphone into the earphone socket.
2. Load 1 AAA battery into the battery compartment.
3. Press and hold the "Play" button to power on, use the "Previous" or "Next" button to select the "Music" feature. Press the "menu" button to enter music playback mode.
4. Press the "Play" button to start music playback of current file. Press "Play" again to pause playback.
5. Choosing music files:
 - "Previous": To choose the previous music file.
 - "Next": To choose the next music file.
6. Volume control: Press the "VOL-" button to decrease volume; Press "VOL+" to increase the volume. The display will revert to playback mode after a few seconds from the last button press or by pressing the "Menu" button.
7. "Hold" function: Switch this button "on" to prevent button misoperations.
8. Press and hold the "Play" button to power off during playback.

• PLAYBACK OPTIONS

These features can be accessed during Playback mode while the track is playing.

1. During playback, press the "menu" button to access the playback features.
2. Use the "Previous" or "Next" button to select the feature then press the "Menu" button to confirm. Once the selection is made the screen will return to playback mode.
3. To exit options menu and return to playback mode press and hold the "menu" button.

Repeat Mode

	Normal	Play current music file only.
	Repeat One	Repeat current music file.
	Folder	Play all music files in current folder.
	Repeat Folder	Play and repeat all music files in current folder.
	Repeat All	Play and repeat all music files.
	Random	Play all the music files in the current folder at random.
	Intro	Play only the beginning of 10 seconds of each music file in the current folder.

• PLAYBACK OPTIONS

EQUALIZER

The following preset Equalizer (EQ) settings are available:

Natural, Rock, Pop, Classic, Soft, Jazz & DBB.

Use the "Menu" button to select the required EQ setting.

1. Press "Next" to choose "Equalizer".
2. Press "Menu" to enter Equalizer Setting mode.
3. Press "Next" to choose the effect you need, press "Menu" to confirm.
4. When selection is made the display will return to playback mode.

SRS WOW MODE

You can enhance your music effect by using this function.

1. Press "Menu" to enter SRS WOW mode menu.
2. Use "Prev" or "Next" buttons to highlight the "SRS WOW" icon, press "Menu" to enable the SRS WOW function; highlight the "Exit" icon and "Menu" to disable it.
3. Use "Prev" or "Next" buttons to highlight the "Adjust WOW" icon, press "Menu" to enter the SRS WOW setting menu. You can set 3 parameters: **SRS 3D, TruBass & Focus**, highlight the function you need to set, press "Menu" to enter the setting interface, use "Prev" or "Next" buttons to adjust the parameter you want, then press "Menu" to confirm. Highlight the "Exit" icon and press "Menu" to exit.

TEMPO RATE

Adjust the playback speed of music files.

1. Press the "Menu" button to select option.
2. Use the "Prev" and "Next" buttons to adjust the playback speed. "0" being normal playback speed.
3. When the required speed is selected, press the "Play" button to return to play back mode. All music playback will be played at selected speed until reset.

• **PLAYBACK OPTIONS**

REPLAY (A-B MODE)

Allows a part of a track to be repeated.

1. The icon "A" will flash once you activate this mode, press "Next" button to set the starting point you need to replay (point A);
2. After the step 1 completed, the icon "B" will flash, press "Next" again to set the ending point (point B);
3. The Replay will start once the step 2 completed, from point A to point B;
4. After the Replay complete, the icon "A" will flash again then you can set next A-B mode replay (the time of replay is according to the number of replay you set.).
5. Press "Menu" button to end A-B mode replay and resume the playback.

REPLAY TIMES

Set the number of times of replay, 1 to 10.

REPLAY GAP

Set the interval between replay.

EXIT

Return to previous screen.

• **ID3 FUNCTION / LYRICS DISPLAY**

The player supports the ".lrc" format file (lyrics file), lyrics can be shown on the display when the song is being played.

Please download ".lrc" file in the device: make sure the lyrics file's name should be consistent with the relevant song's name and these two files should be placed in the same directory / folder.

For example: song's name - mike my love.mp3

lyrics file's name - mike my love.lrc

The lyrics will be shown after pressing and holding the "Menu" button during playback.

• FILE MANAGEMENT UNDER PLAY BACK MODE

These features can be accessed during Playback mode while the track is paused.

1. Select the "Music" from the Main Menu, press the "Menu" button to enter Music Mode, and then press the "Menu" button again to access the playback file management function.
2. Use the "Previous" or "Next" button to select the required feature and then press the "Menu" button to select. Once the selection is made the screen will return to playback mode.
3. Please follow the screen instruction to handle the file deletion.
4. To exit options menu and return to playback mode, press and hold the "Menu" button.

Local folder	Choose the folder containing required tracks.
Delete file	Delete current file.
Delete All	Delete all files in current folder.
Exit	Return to Playback screen

WARNING



The deleted files can NOT be recovered, please use this function very carefully.

• VOICE RECORD

Recording

From the Main Menu, use "Previous" or "Next" button to select the "Record" function, press the "Menu" button to enter Voice Record.

1. Make sure that the microphone is clear of obstruction.
2. Press the "Play" button to start recording. Press "Play" again to pause recording.
3. Press "Play" to restart recording.
4. When recording is completed, press and hold the "Play" button to save the file.
5. The next recording will be save as a new file.
6. To exit recording and return to the main menu, press and hold the "Menu" button.

Options

These features can be accessed before recording.

1. Select "Record" from the Main Menu, press the "Menu" button to enter Record Mode, press the "Menu" button again to find the "REC Type" from Voice Record options.
2. Use the "Previous" or "Next" button to select the required feature and then press the "Menu" button to confirm. Once the selection is made, the screen will return to record mode.
3. To exit options menu and return to record mode, press and hold the "Menu" button.
4. Please follow the navigation instructions to operate.

• VOICE RECORD

Local folder	Choose the folder to save recording.
REC Type	Select recording setting to best suite your needs Fine REC (32K WAV) Long REC (ACT) Fine VOR (32K VOR) Long VOR (8k VOR)
Exit	Returns to Record screen

• VOICE PLAYBACK

Playback of files recorded in Record mode

1. From the Main Menu use the "Previous" or "Next" Button to select the "REPL" feature. Press the "Menu" button to enter Voice playback mode.
2. Use the "Previous" or "Next" button to select the file and press the "Menu" button to confirm. Once the selection is made, the screen will return to Voice playback mode.
3. Press the "Play" button to start playback of current file. Press "Play" again to pause playback.

Voice Playback options

These features can be accessed in voice playback mode.

1. Press "Menu" button during the playback of recorded voice file, use the "Previous" or "Next" button to select the required feature and then press the "Menu" button to confirm. Once the selection is made, the screen will return to record mode.

• VOICE PLAYBACK

2. Please follow the navigation instructions to operate.

Repeat	See options as listed in Music playback options.
Tempo Rate	See options as listed in Music playback options.
Replay	See options as listed in Music playback options.
Exit	Returns to Playback screen

• FILE MANAGEMENT UNDER VOICE PLAYBACK MODE

These features can be accessed in voice playback mode while the track is paused.

1. Select " REPL " from the main menu , press " Menu " button to enter record play mode and press " Menu " button again to access the playback file management feature.
2. Use the "Previous" or "Next" button to select the required feature and then press the "Menu" button to confirm. Once the selection is made the screen will return to record play mode.
3. Please use navigation instructions as described in music playback options.

• VOICE PLAYBACK

Local folder	Choose the folder containing required files.
Delete file	Delete current file.
Delete All	Delete all files in current folder.
Exit	Return to Playback screen.

WARNING



The deleted files can NOT be recovered, please use this function very carefully.

• FM RADIO

This feature requires the earphone to be fitted to the player as the radio antenna, the radio will not work if there is no earphone inserted into the earphone socket. Please ensure the player is in a good reception area to tune stations.

Enter the Main Menu

1. Press "Next" to select "FM Radio" mode;
2. Press "Menu" to enter FM Radio mode;
3. Automatic search:
Press and hold "Previous" or "next" for two seconds, the player will search in the required direction and will stop when a station is found; if you want to stop researching, press "Previous" or "next".
4. Store the stations searched:
Press "Menu" to save the current station and press "Menu" to confirm. Repeat scanning and save different stations as required.
5. With stations saved as previously described, press "Play" to skip between saved stations.

• TXT MODE

Place ".txt" files (text files) in any directory of the device, files can be shown on the display.

1. Use the "Prev" or "Next" buttons to highlight the "TXT" icon, press "Menu" to enter the TXT Mode.
2. Highlight the "Dir Select" icon and press "Menu" to enter the Directory interface, press "Prev" or "Next" to choose the exact directory which the text file is saved, then press "Menu" to confirm.
3. Highlight the "File Select" icon and press "Menu" to enter the Text file selecting interface, press "Prev" or "Next" to choose the name of the text file, then press "Menu" to load the file you selected.
4. Highlight the "Text Read" icon and press "Menu" to open and display the selected text file. Press "Next" and "Prev" to roll the lines up and down, press "Menu" to return to the previous menu.
5. Highlight the "Exit" icon and press "Menu" to exit TXT Mode.

• SETUP

Set & check the basic information of the system.

1. Enter the Main Menu and use the "Previous" or "Next" to select "System Setup" and then press "Menu" to enter the main Setup Menu.
2. Press the "Previous" or "Next" button to select the required option.
3. Press "Menu" to enter the System Setup.

• SETUP

Record Time	Set the date and time to mark recordings.
	1. Press "Play"
	2. Use "Vol +" and "Vol -" buttons to select, press "previous" or "next" buttons to adjust.
Backlight	Set the backlight lasting time. 0=Disabled.
Backlight mode	Set up different color as backlight
Language	Set Required language for display. 25 choices
Power off	Set automatically power off time. 0 = Disabled
Replay mode	Set the working condition of replay mode.
Contrast	Set the LCD contrast.
Memory info	Check the storage space currently used.
Firmware Version	Display the player's Firmware edition.
Firmware Upgrade	Professional for firm ware upgrading.
Exit	Exit current interface.

• TROUBLE SHOOTING

No power	Make sure you have put one AAA battery in it.
No sound	Make sure volume is not on 0 level and the connection to earphone is correct.
	Please make sure the earphone is clean.
	Damaged MP3 files may appear to play but generate no sound.
False characters on display	Make sure you have chosen the correct language.
FM radio has bad performance	Change location to ensure good reception.
	Earphone must be connected.
	Switch off power appliance nearby.
Cannot download music & detect the device	Check files are of the correct format.
	After reboot the PC, please try on following:
	1. Plug the unit direct to USB port instead of USB hub; 2. Change another USB port on your PC; 3. Try on different PC (with different Operation System if possible)
For support visit	http://www.laserco.com.au/downloads.htm

