



# ZX1200i/ZX1300i/ZX1600i BARCODE PRINTER USER MANUAL



ZX1200i/ZX1300i/ZX1600i  
USER MANUAL  
**CONTENTS**

<b>1</b>	<b>Barcode Printer</b>	<b>01</b>
1.1	Box Content	01
1.2	Getting to Know Your Printer	02
<b>2</b>	<b>Printer Setup</b>	<b>04</b>
2.1	Loading the label roll	04
2.2	Loading & Removing the Ribbon	08
2.3	Connecting the Printer to the Host Computer	11
2.4	Installing Printer Driver and GoLabel with Super Wizard CD	12
<b>3</b>	<b>Printer Setting and Control</b>	<b>17</b>
3.1	Operation Panel	17
3.2	LCD Interface Introduction	18
3.3	LCD Interface Function	23
3.4	Label Calibration and Self-Test	28
3.5	Error Alerts	30
3.6	USB Host	31
<b>4</b>	<b>NetSetting for Ethernet</b>	<b>34</b>
4.1	Installing the NetSetting Software	34
4.2	The Interface of NetSetting	35
<b>5</b>	<b>Accessories</b>	<b>42</b>
5.1	Preparation Steps	42
5.2	Installing the Cutter	39
<b>6</b>	<b>Maintenance and Adjustment</b>	<b>46</b>
6.1	Installing / removing the print head module	46
6.2	Adjusting the print line	47
6.3	Adjusting ribbon tension	48
6.4	Cleaning the thermal print head	49
6.5	Adjusting the balance and print head tension	50
6.6	Ribbon shield settings	51
6.7	Cutter settings	52
6.8	Troubleshooting	53

**Appendix**

## FCC COMPLIANCE STATEMENT FOR AMERICAN USERS

This equipment has been tested and found to comply with the limits for a CLASS A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

## ZX1200i SERIES TO WHICH THIS DECLARATION RELATES IS IN CONFORMITY WITH THE FOLLOWING STANDARDS

European Standard EN 55022:2010/AC:2011 Class A, EN 61000-3-2:2006/A1:2009 and /a2:2009, EN 61000-3-3:2008 and EN55024:2010(IEC 61000-4-2:2008, IEC 61000-4-3:2006/A1:2007/A2:2010, IEC 61000-4-4:2004/A1:2010, IEC 61000-4-5:2005, IEC 61000-4-6:2008, IEC 61000-4-8:2009, IEC 61000-4-11:2004). CFR 47, Part 15

### WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.'

# SAFETY INSTRUCTIONS

Please read the following instructions carefully.

1. Keep the equipment away from humidity.
2. Before you connect the equipment to the power outlet, please check the voltage of the power source.
3. Make sure the printer is off before plugging the power connector into the power jack.
4. It is recommended that you connect the printer to a surge protector to prevent possible transient overvoltage damage.
5. Be careful not to get liquid on the equipment to avoid electrical shock.
6. For safety and warranty reasons, ONLY qualified service personnel should open the equipment.
7. Do not repair or adjust energized equipment under any circumstances.

## Caution

---

- \* Danger of explosion if battery is incorrectly replaced. Replace only with the equivalent type recommended by the manufacturer.
- \*\* Dispose of used batteries according to the manufacturer's instructions.
- \*\*\* Only use with designated power supply adapter model.
- \*\*\*\* Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specifications are subject to change without notice.




# 1 Barcode Printer


## 1.1 Box Content

Please check that all of the following items are included with your printer.


- ZX1200i / ZX1300i / ZX1600i Barcode Printer

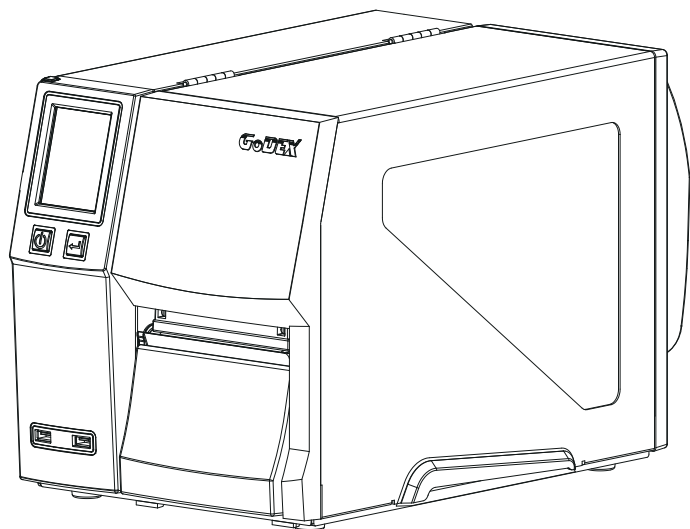

- Label Stock

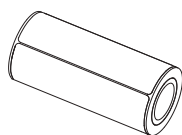


- USB Cable

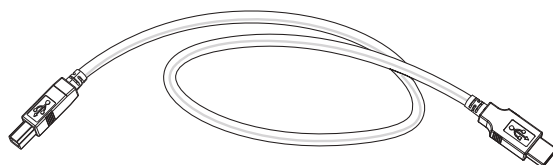


- Quick Guide




- Ribbon



- Power Adapter  
Power Cord

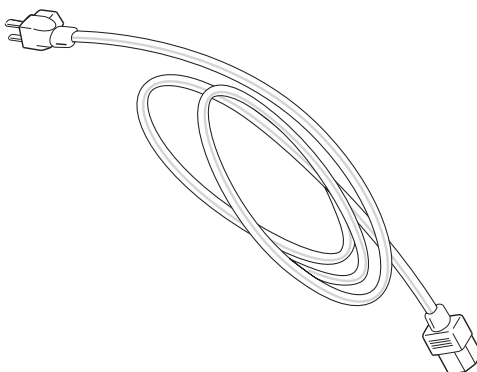

- CD  
Including GoLabel software  
and user's manual.

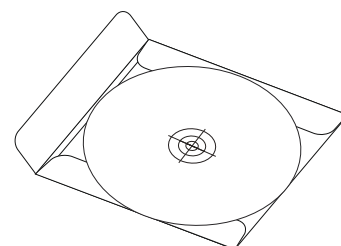


# 1 Barcode Printer


## 1.2 Getting to Know Your Printer

### Device Overview

- Front View

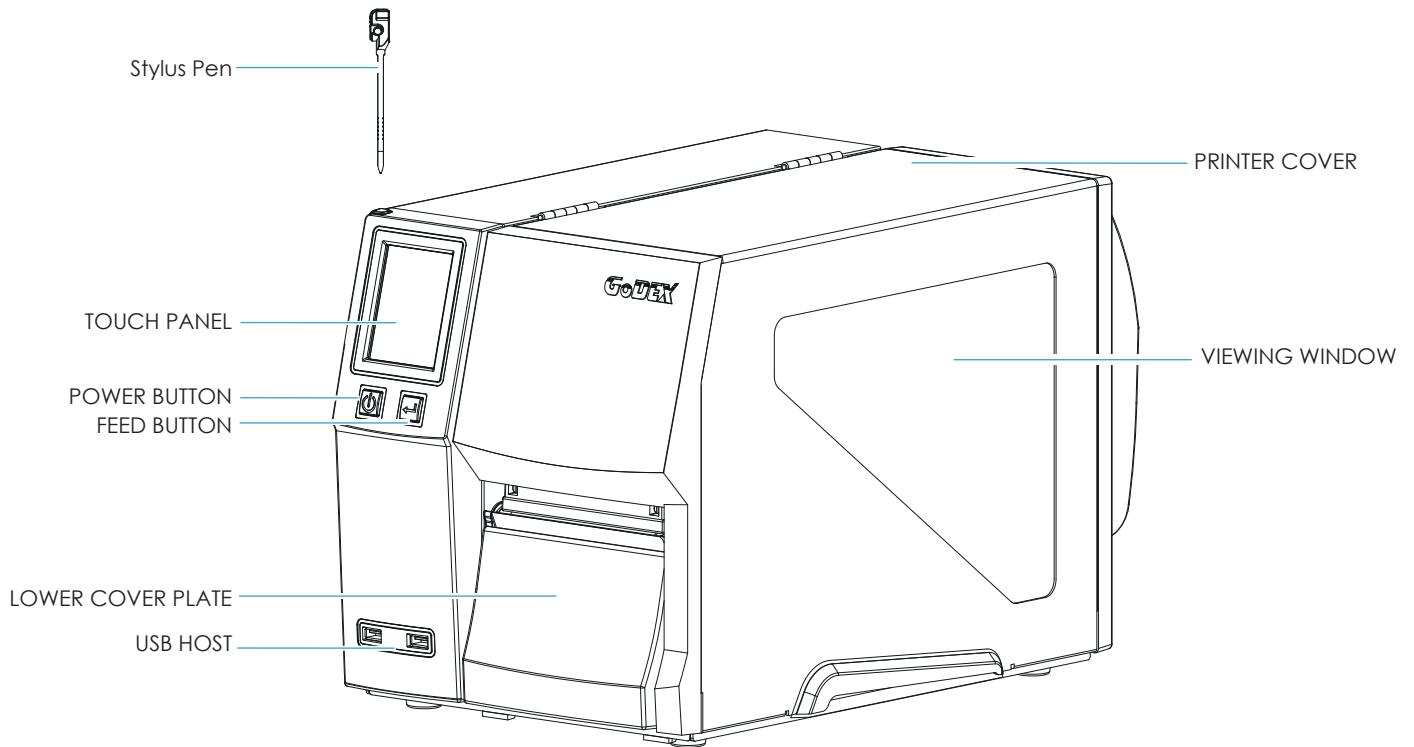


- Rear View

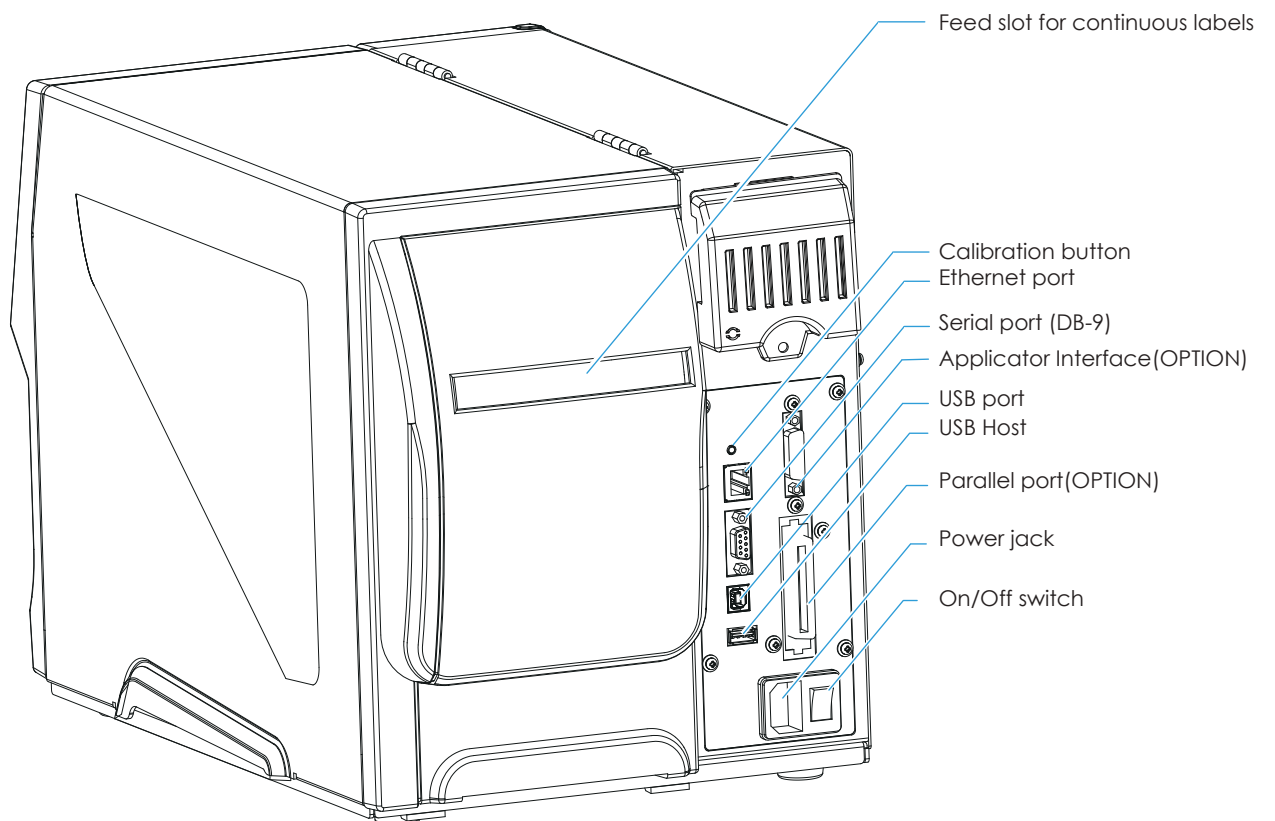

# 1 Barcode Printer

## The Internal View of Printer

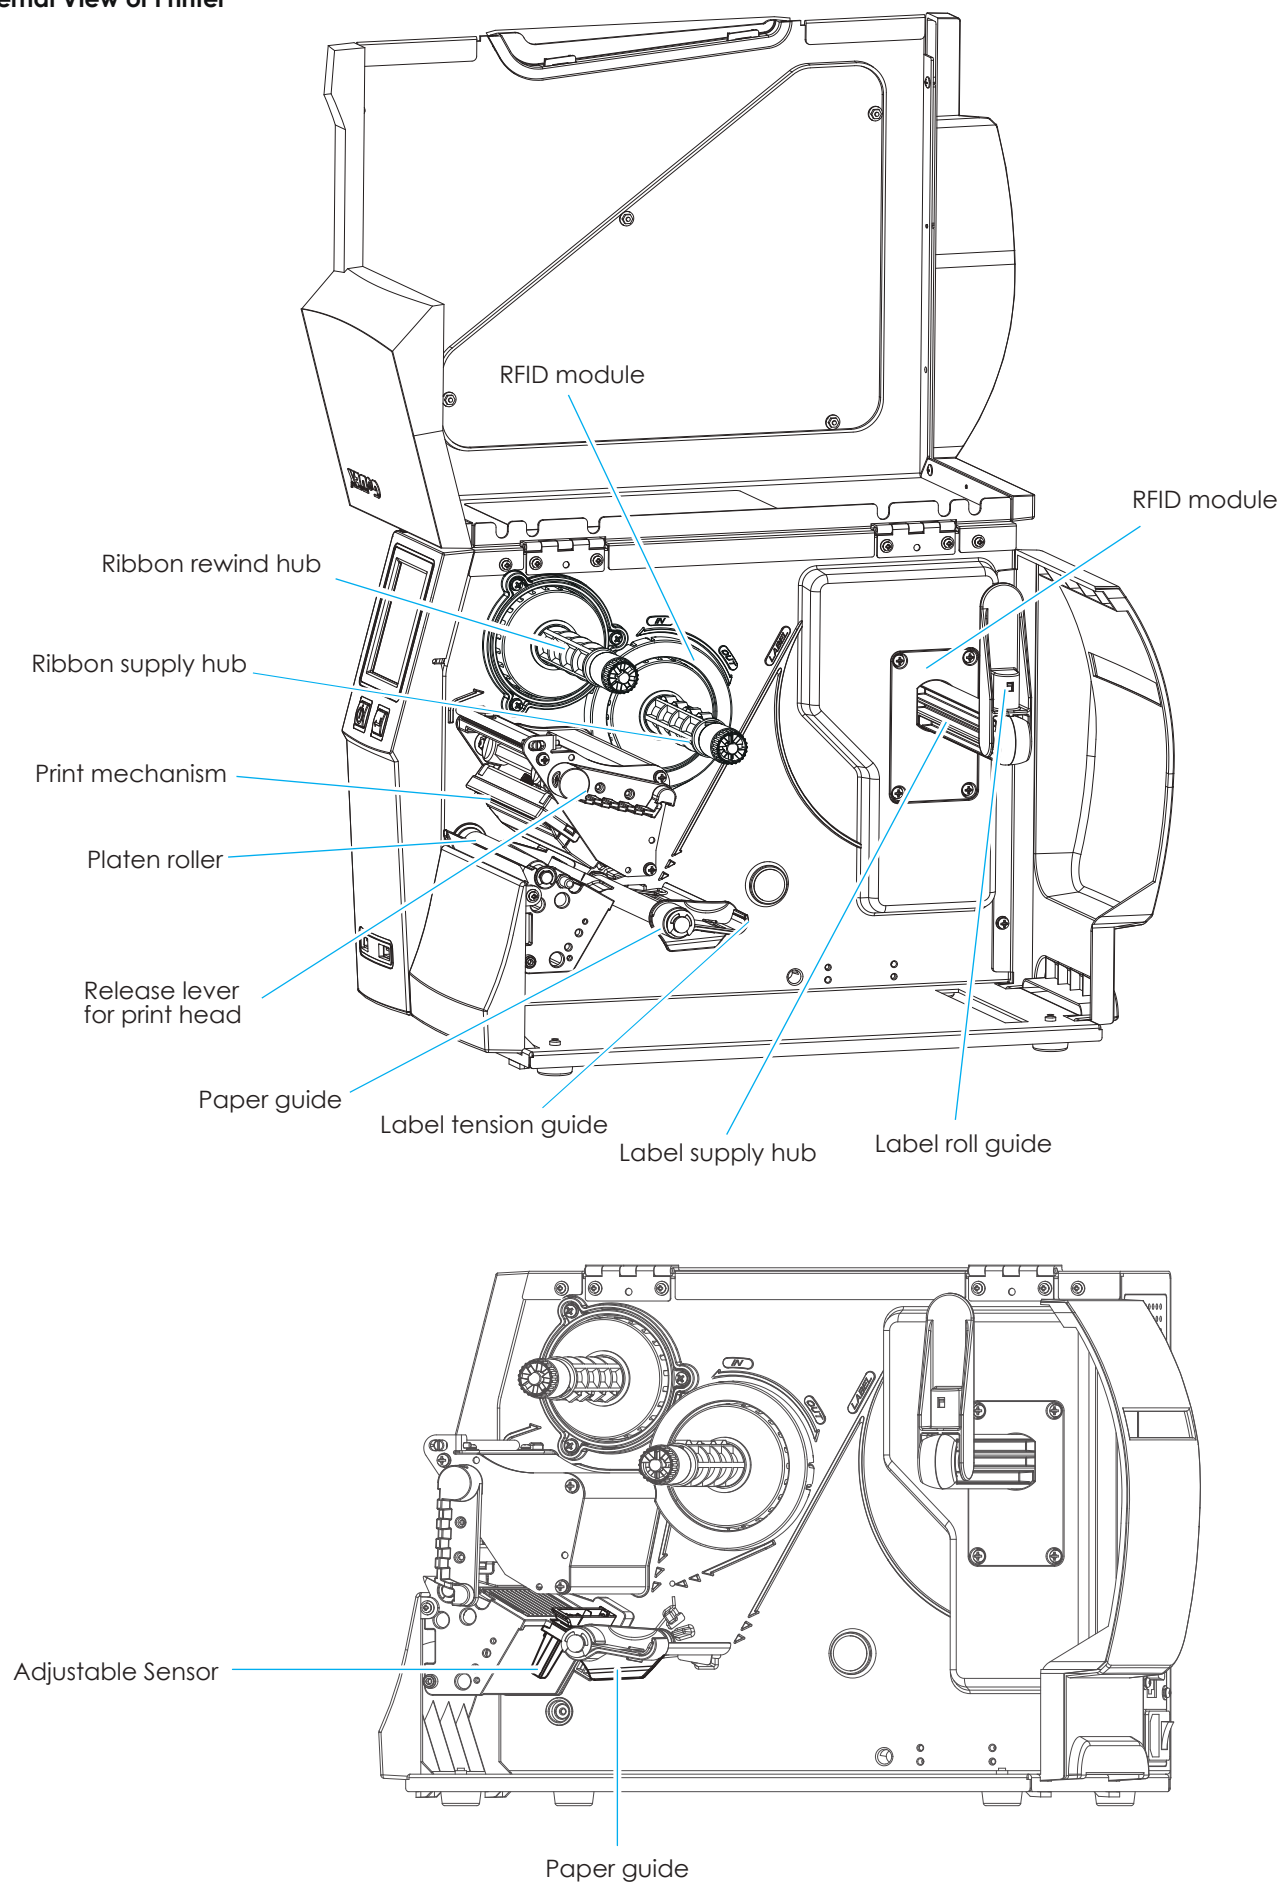

## 2 Printer Setup


### 2.1 Loading the label roll

This printer supports the following printing methods:

Thermal transfer printing (TTP) : Requires a ribbon for transferring a printed image to a medium.


Direct thermal printing (DTP) : Does not require a ribbon, only thermal paper.

Please check which printing method you are using and alter the settings accordingly in the printer driver, printer menu, and/or software.

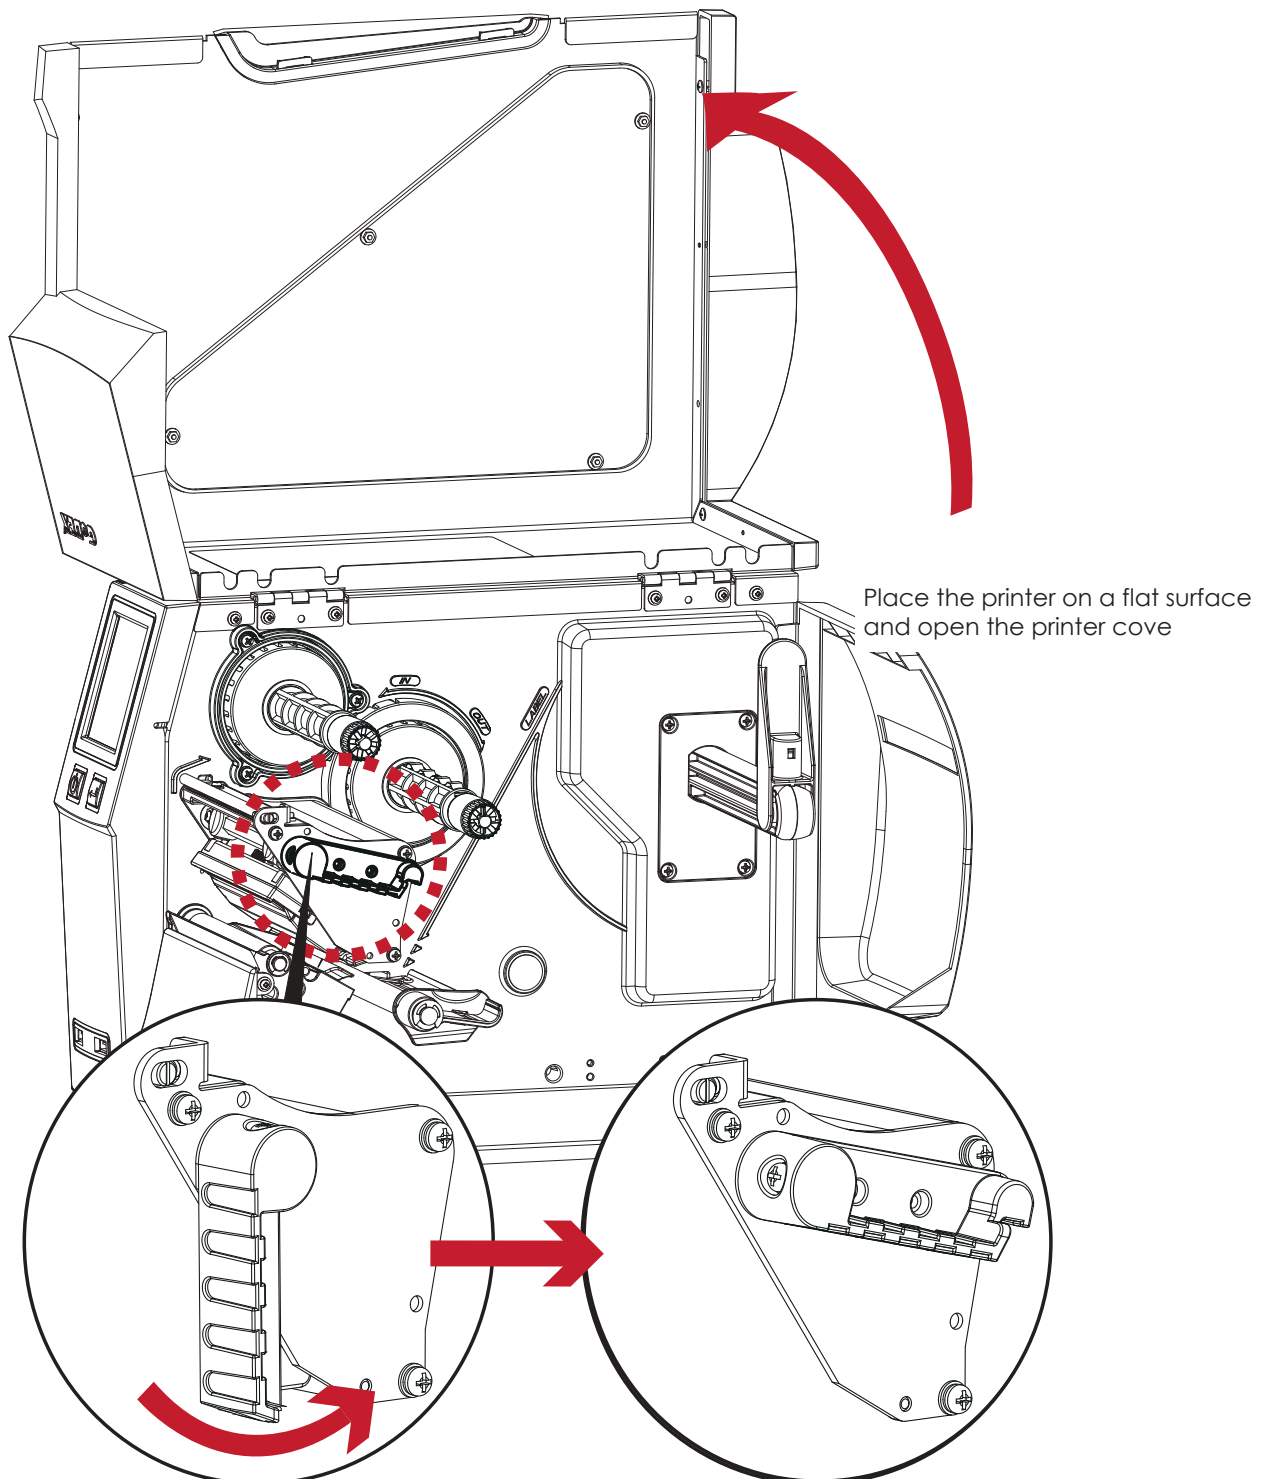


Turn it anticlockwise to a top right position as shown in the illustration

## 2 Printer Setup

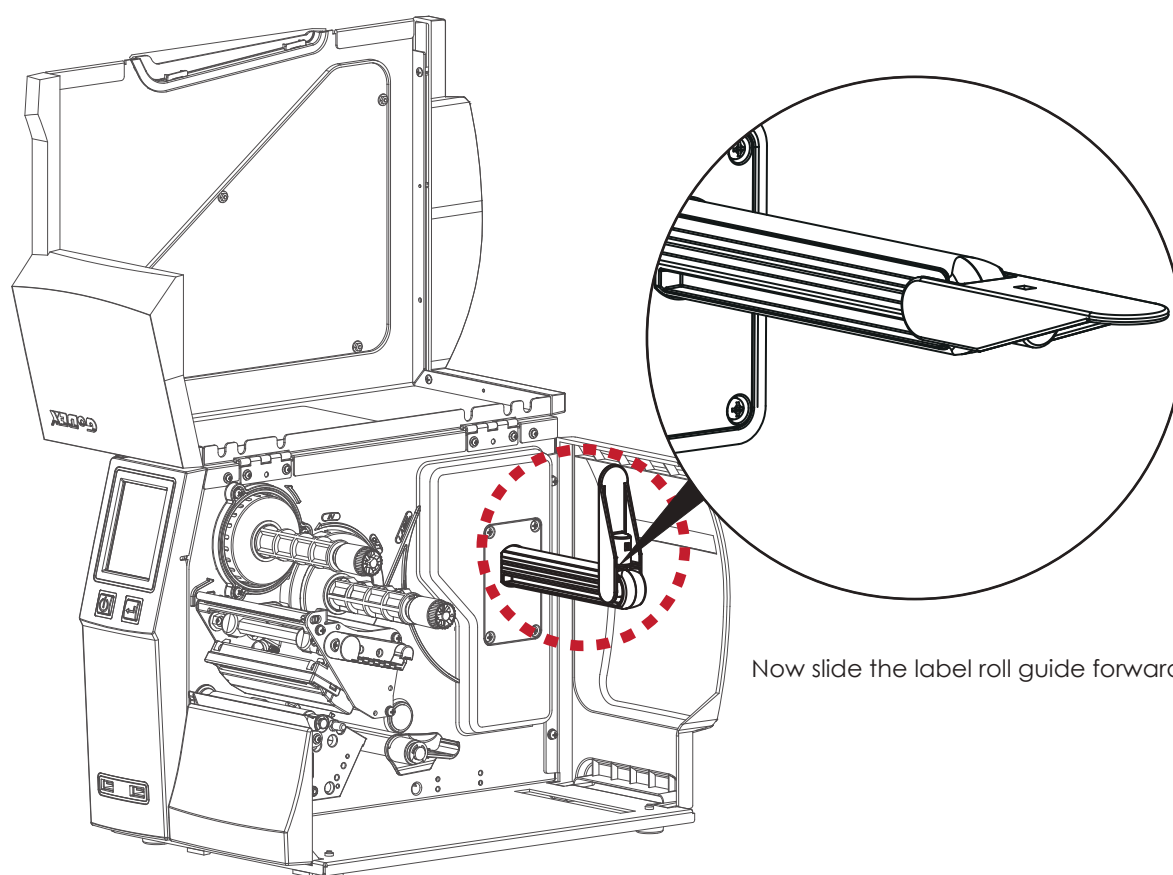

Now slide the label roll guide forward and fold it down

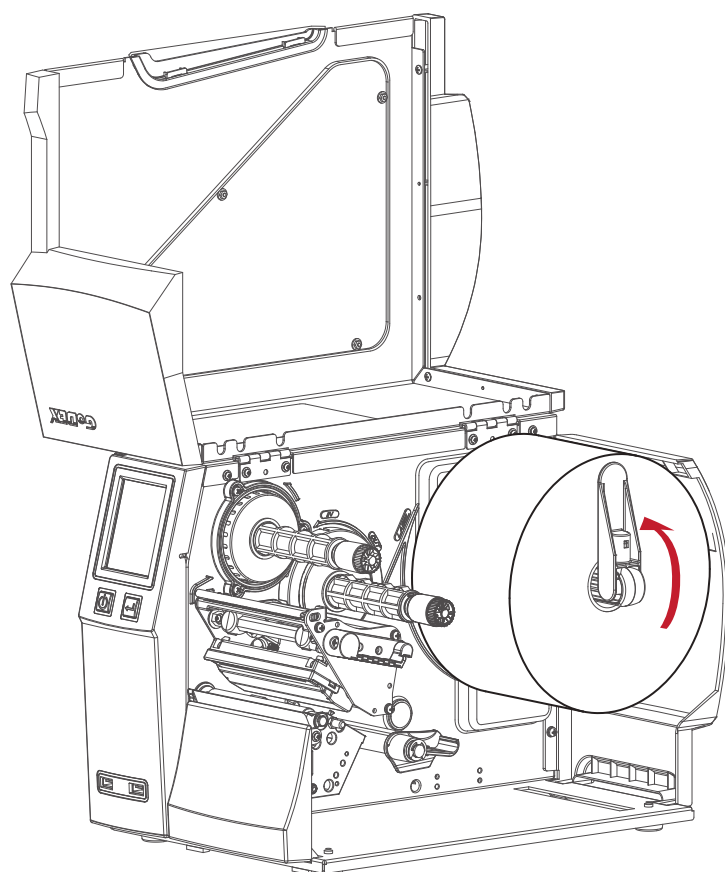


Place the label roll on the label supply hub , pushing it right up to the printer housing.

(Do not apply too much pressure to avoid damaging the label stock.)


### Note

\* When moving the label roll guide, hold it only by the end that is attached to the bracket, not by its top.

## 2 Printer Setup

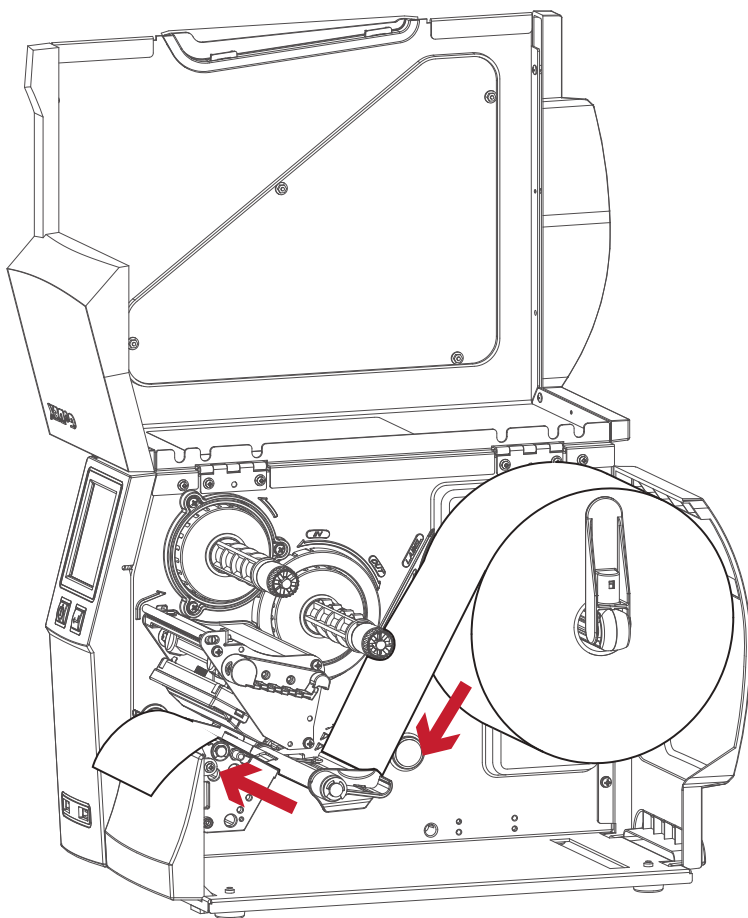

Load the label roll into the printer as shown in the illustration. Pass it through the printer as indicated by the red arrows.

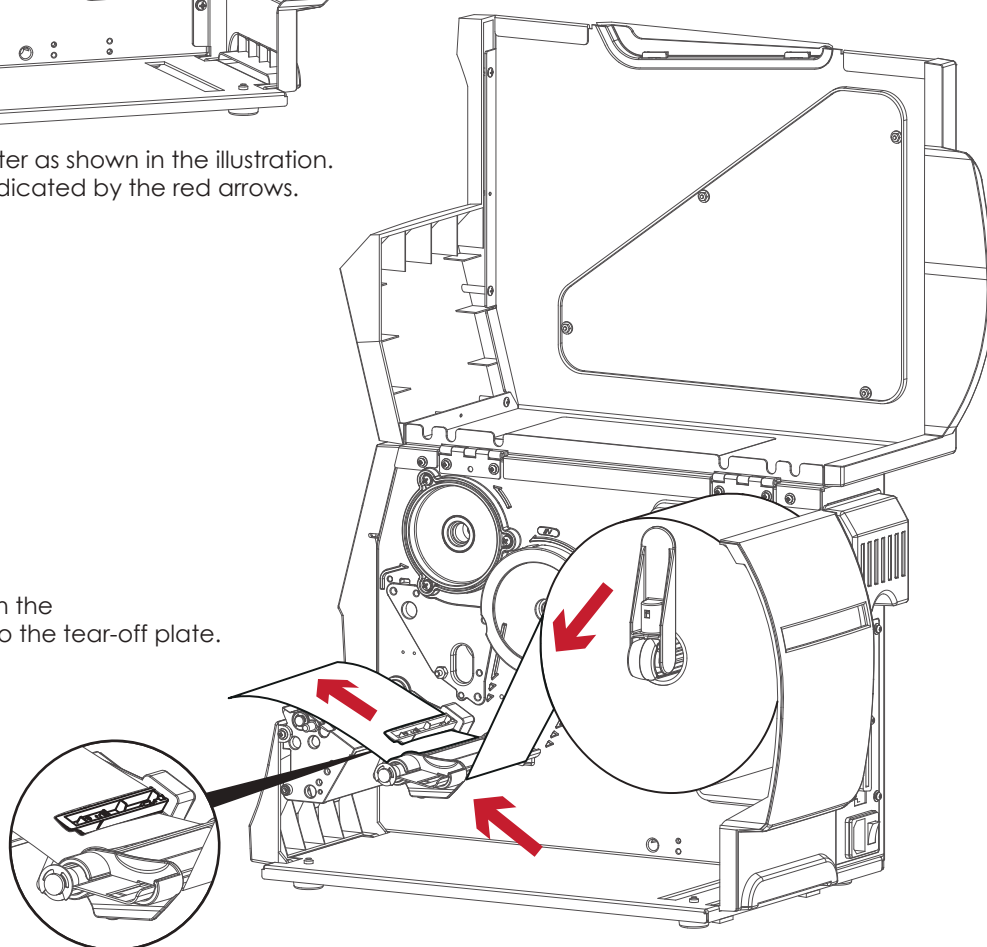


Pass the label stock through the Adjustable Sensor and up to the tear-off plate.

### Note


\* Remember to set the movable sensor to gap, black mark, or tag hole by changing the position of the sensor with the adjustment wheel.

## 2 Printer Setup

2. Return the print head release lever to its original position.

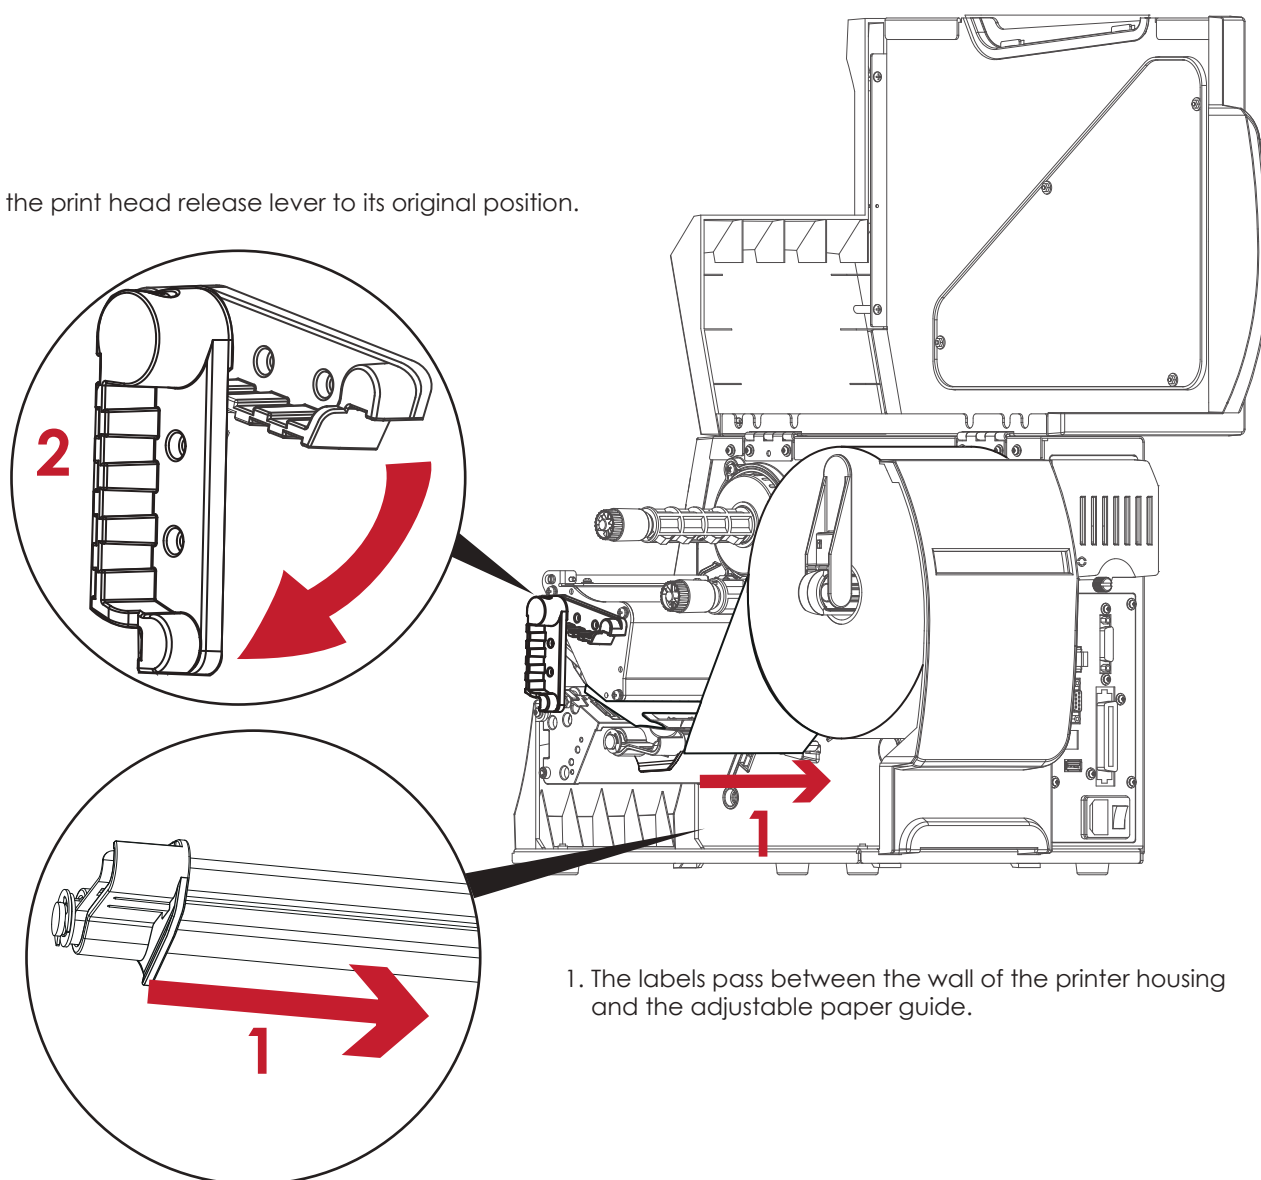

1. The labels pass between the wall of the printer housing and the adjustable paper guide.

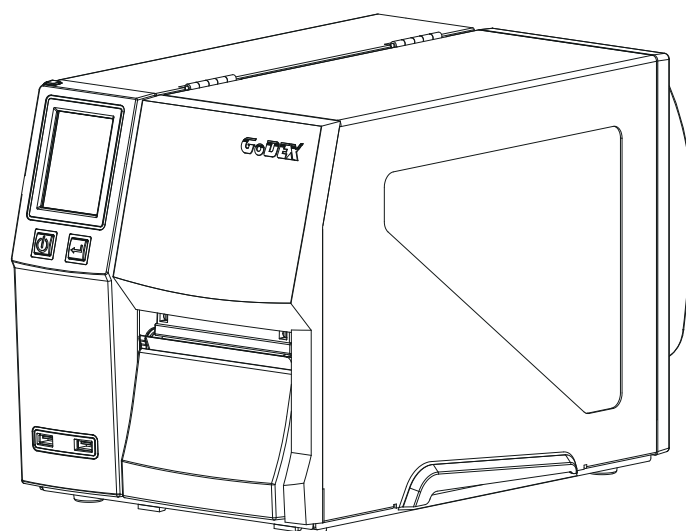


Then close the printer cover.



## 2 Printer Setup

### 2.2 Loading & Removing the Ribbon

#### Loading Ribbon

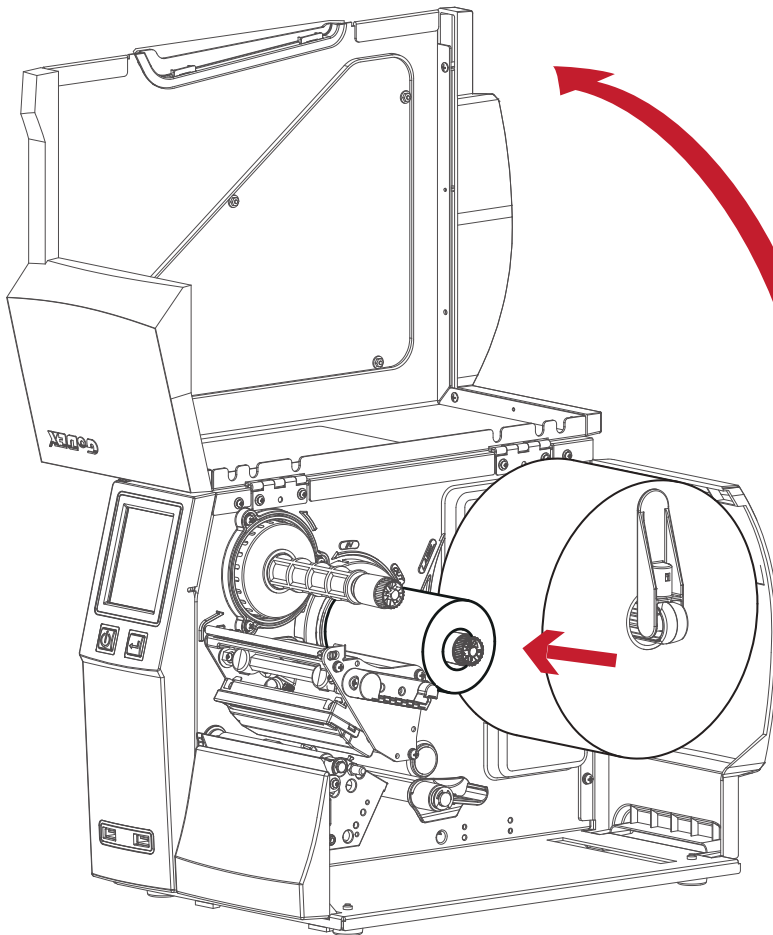


Place the printer on a flat surface and open the printer cover


Place a new ribbon on the ribbon supply hub.

The two illustrations as below show you how to install the ribbon depending on the ribbon type (ink side in or out).

Ink side out

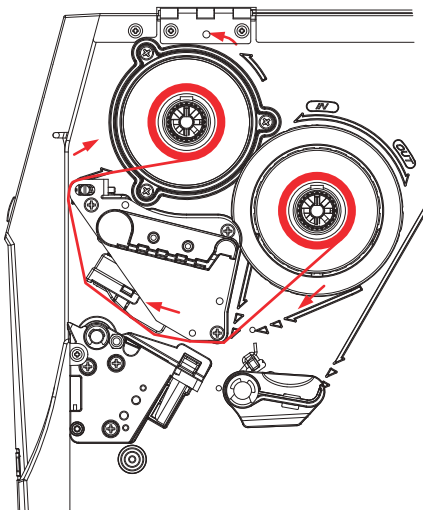


Ink side in

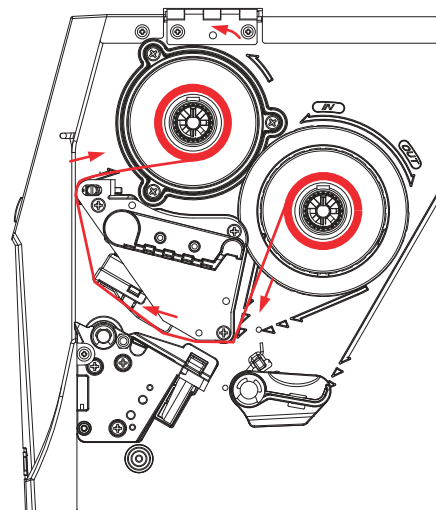



## 2 Printer Setup

Pass the ribbon under the print head and back up on the other side.  
Attach it to the empty ribbon core.

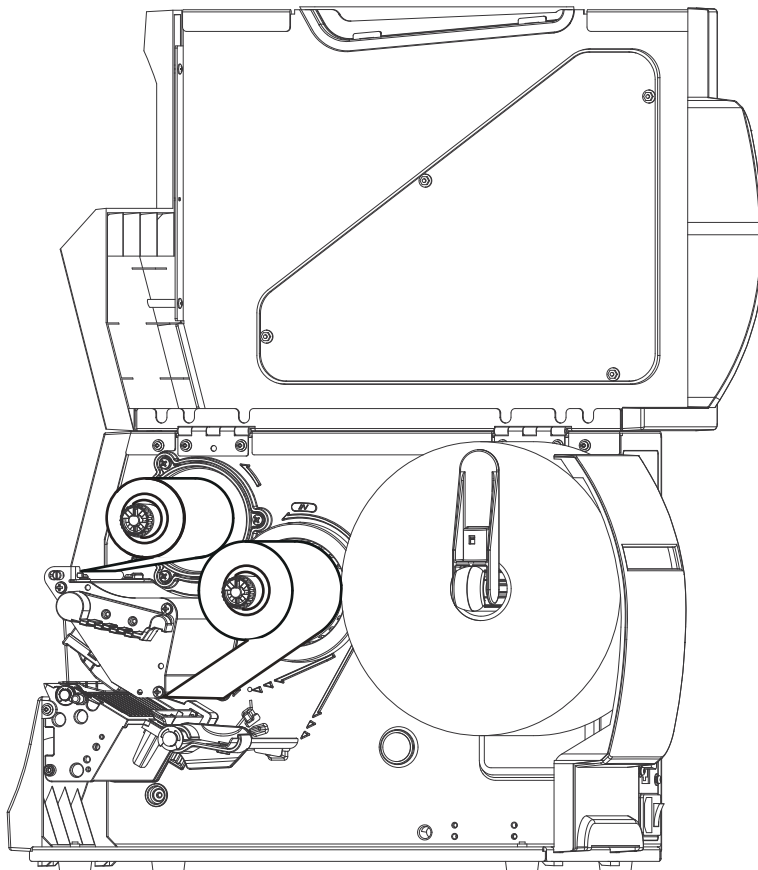


### Note

\* Do not pass the ribbon under the sensor.

## 2 Printer Setup

### 2.3 Connecting the Printer to the Host Computer

1. Please make sure that the printer is switched off.
2. Connect the power cord to the AC adapter and connect the adapter to the printer.
3. Connect the USB cable to the printer and host computer.
4. Switch on the printer. The operator panel should now light up.

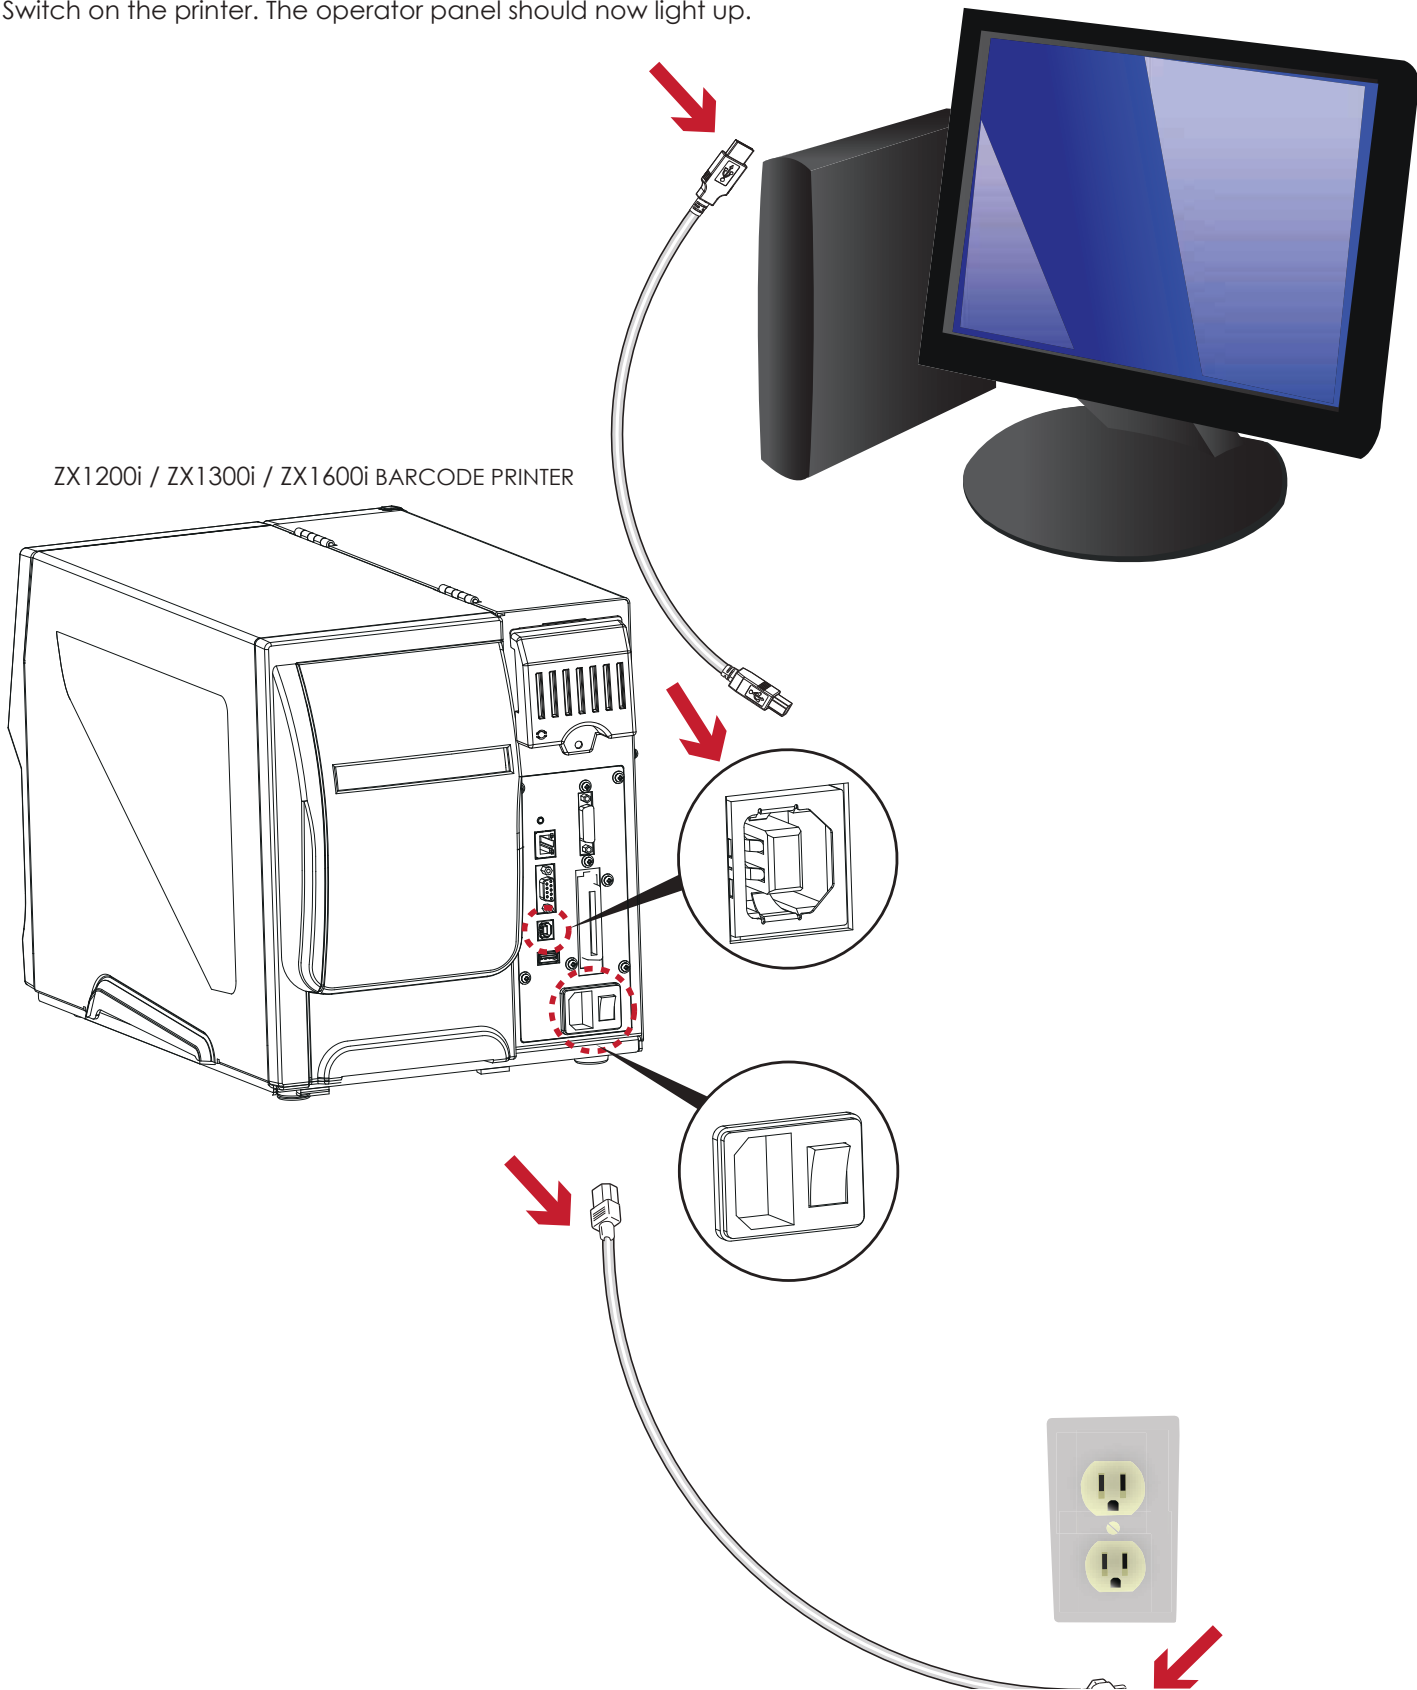

## 2 Printer Setup

### 2.4 Installing Printer Driver and GoLabel with Super Wizard CD

1. Insert the Super Wizard CD in the CD/DVD drive of the host computer and the program should pop up automatically.

You will see the Welcome screen first. On the Welcome screen, choose "Standard Installation".



2. The wizard will then ask you to make sure your USB and power cables are connected and that the power is turned on. Make sure that is done and then click "Next".




3. The next screen you will see to choose "Download the latest version from GoDEX server" or "Install from this product disc."



## 2 Printer Setup

4. As the printer driver and GoLabel are installing, a screen will display a progress bar.

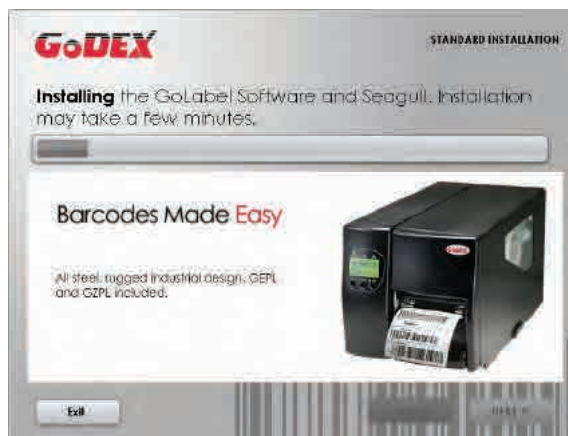

5. Once the installation is complete, you can start to make and print labels with GoLabel or through the printer driver.



6. As the optional steps, you can also print a test label or register your printer during the "Standard Installation" procedure.




### Note

- \* If you need more resources, tools or reference documents, you can also find them on Super Wizard CD. Just click "Other Choices" on Welcome Screen to access the files.

## 2 Printer Setup

### Installing Printer Driver Directly from CD Folder


1. Insert the product CD in the CD/DVD drive of the host computer and open the "Seagull Drivers" folder on the CD. Select the icon for the driver file and click it to start the installation.

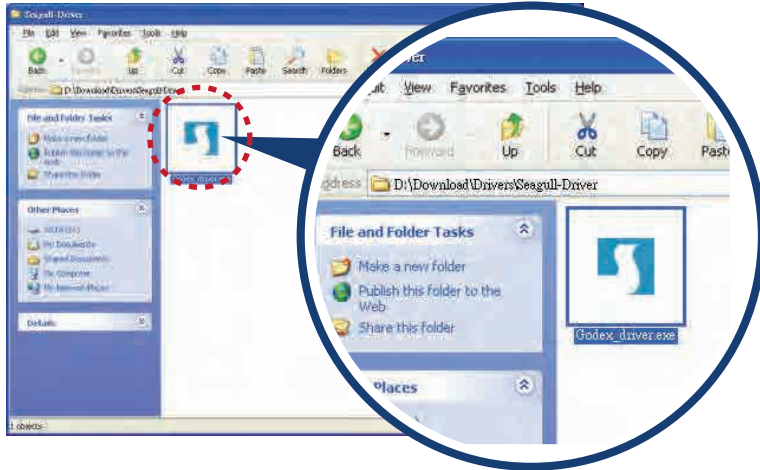

2. Follow the instructions on the screen. The Driver Wizard guides you through the installation procedure. Select "Install printer drivers".




3. Specify your printer model.

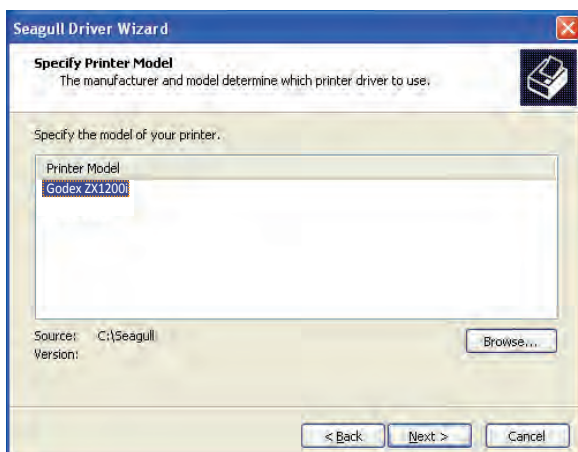


## 2 Printer Setup

- Specify the port used to connect the printer to the host computer.

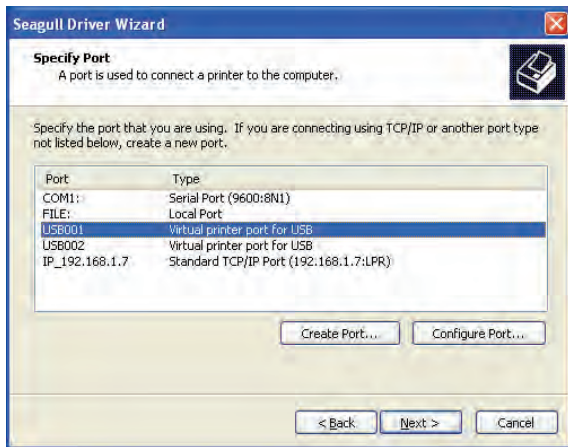

- Enter a printer name and assign the appropriate rights.

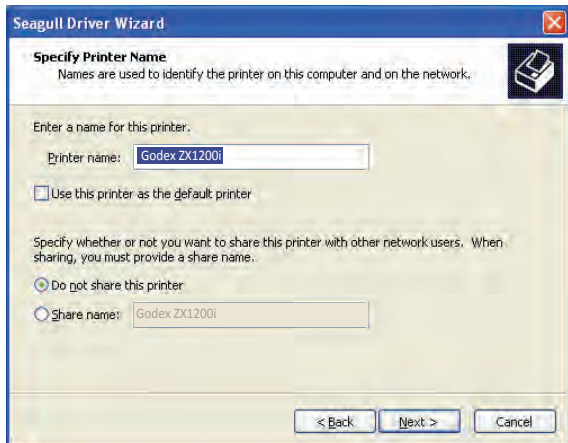


- Once the installation is complete, a summary of the printer settings is displayed. Check whether the printer settings are correct and click "Finish" to start copying the driver files. Wait until copying is complete, then finish the installation.



## 2 Printer Setup


7. Once the driver installation is complete, the new printer should appear in the "Printers and Faxes" folder.

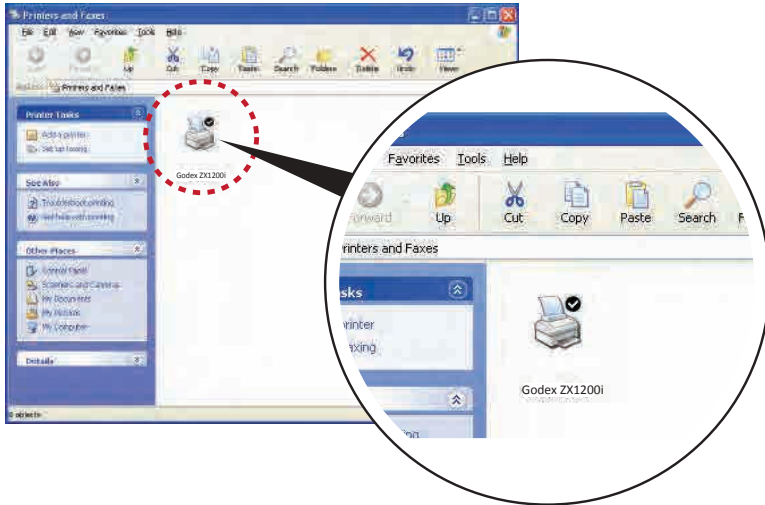



## 3 Printer Setting and Control

### 3.1 Operation Panel

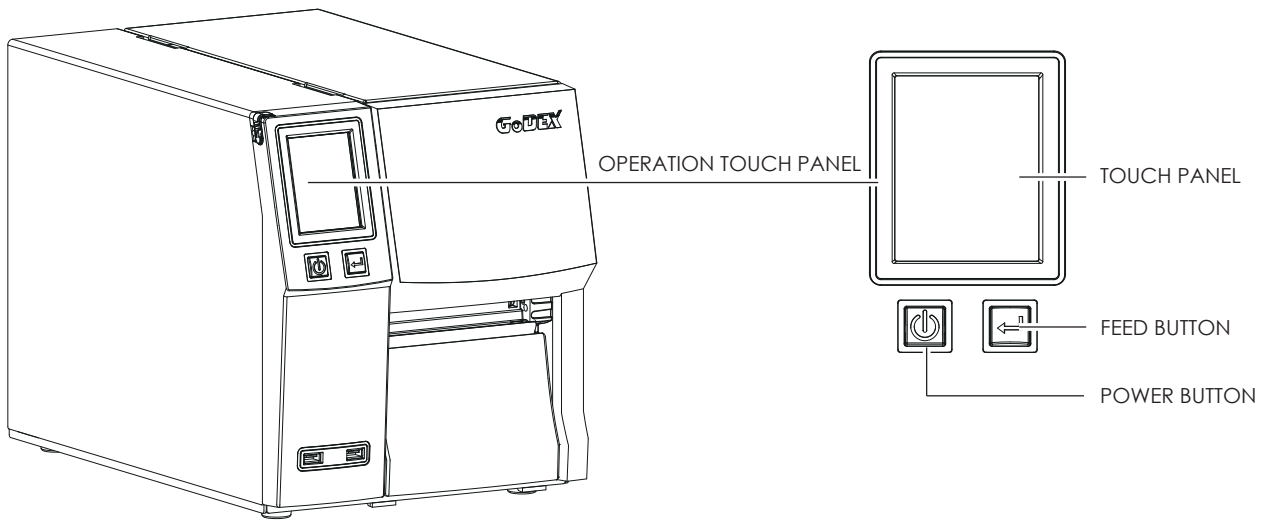

#### **POWER Button**

Press the POWER button to turn on the printer, and the START UP SCREEN appears. The printer is on "ready to print" status, the LCD screen should display the message "READY" on the screen.

When printer is turned on, hold and press down the POWER button for 3 second will turn the printer off.

#### **FEED Button**

Turn on the printer and press the FEED button.

When you press the FEED button, the printer will advance media until the FEED button is released.

If you are using continuous labels, pressing the FEED button will advance a length of media until the button is released.

If you are using media with gaps, pressing the FEED button once will advance only one label.

If the label does not stop at the correct position, you need to run the auto-detection function for your media,

please see Section 3.4 Label Calibration and Self-Test.

#### **PAUSE PRINTING\_FEED Button**

Pressing the FEED button while the printer is in standby mode will set the printer to pause mode. In this mode, the printer can receive commands, but it will only process them when it is reset to standby mode. Pressing the FEED button again will reset the printer to standby mode.

Pressing the FEED button during printing will interrupt printing. When the FEED button is pressed again, the printer resumes printing. Example: While a 10-label print job is running, you press the FEED button to pause the printer. Two of the labels have been printed. To resume printing and print the remaining eight labels, you will need to press the FEED button again.

#### **CANCEL PRINTING\_FEED Button**

Press and hold the FEED button for 3 seconds during printing cancels a print job. The current print job is cancelled.

Example: While a 10-label print job is running, you press the FEED button. Two of the labels have been printed.

The print job is cancelled and the remaining eight labels will not be printed.




## 3 Printer Setting and Control

### 3.2 LCD Interface Introduction

#### Getting Started

Press the POWER button to turn on the printer, and the START UP SCREEN appears.

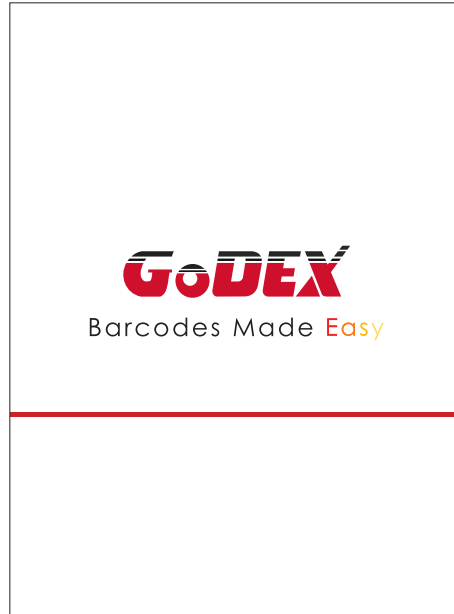


If the printer is on "ready to print" status, the LCD screen should display the message "Ready" on the screen. Use touch gestures to get around the Home screen and other screen for setting.



Tap the screen with your finger or the stylus pen when you want to select on screen items such as settings icons.



### 3 Printer Setting and Control

On the Ready Page, three function mode for setting. You can make various setting functions in FUNCTIONAL MODE.

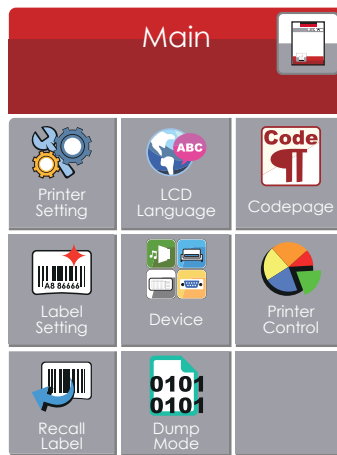



Tap "Main" --

Screen could show more detail of "Main"

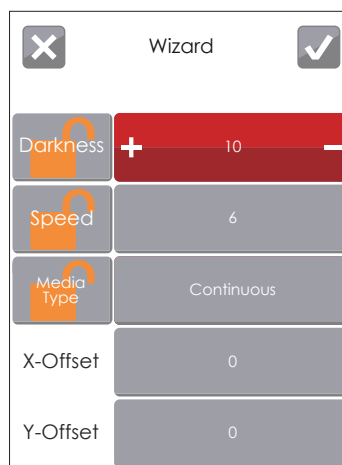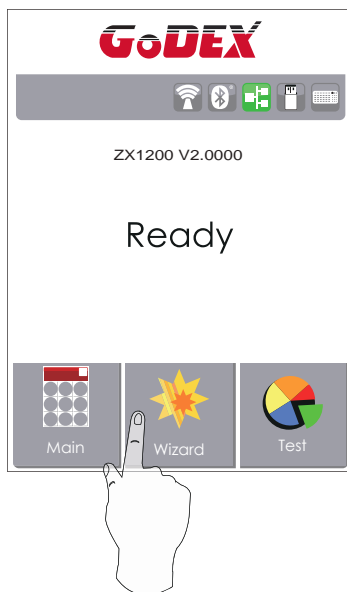

Tap "Wizard" --


Set up printer of "Darkness" "Speed" ...

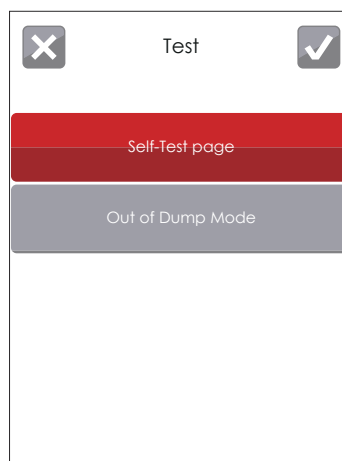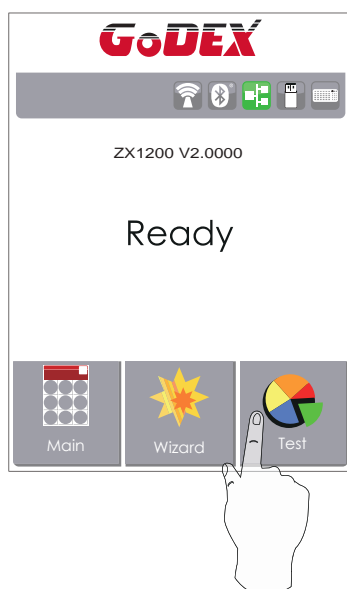





Tap "Test" --

self-Test page and Out of Dump Mode for setting.
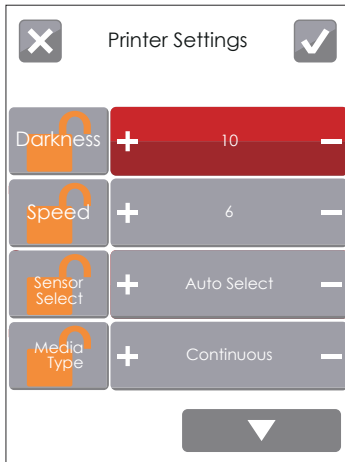
### 3 Printer Setting and Control



finish setting tap   
back to main page if  
do not save, tap   
system would not save  
any changes.

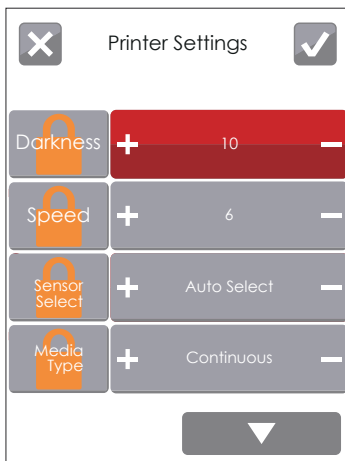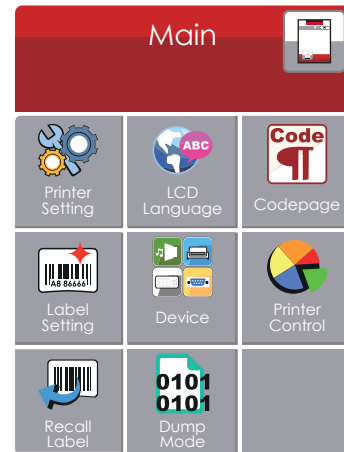

**UNLOCK**



**LOCK**

If printer functions locked, printer can not receive any commands  
from GoLabel or any devices.

### 3 Printer Setting and Control

#### Keyboard Mode

When plug-in an USB keyboard to the printer, LCD touch panel will display "Enter Standalone", press the "Y" key on keyboard to entering to the dialog for "Keyboard Mode" operation.



#### Preview Label function


User can choose any labels which have done in the printer and preview it. (See Instructions)

From the Home screen, tap




to Main Page.

From the Main Page tap Recall Label to Recall Label Page.

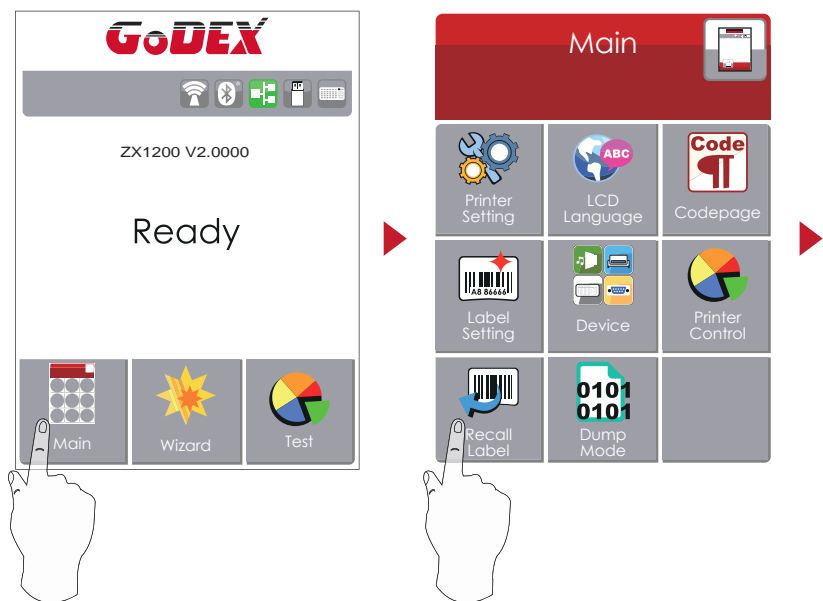

### 3 Printer Setting and Control

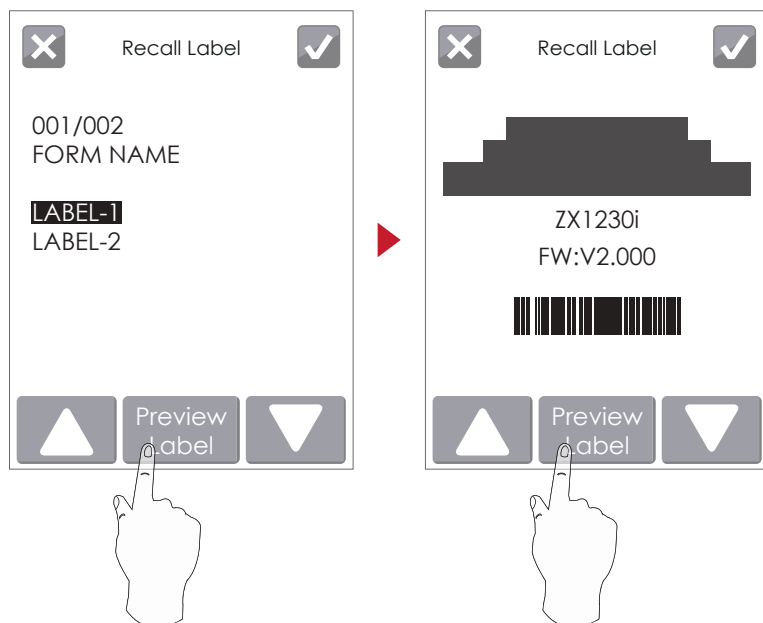

From the Recall Label Page the touch panel shown on all labels.

The Data processing time will be extend as long as the labels increase.



Tap up to choose labels.





Tap down to choose labels.



Tap Preview Label can see printing label.

Keeping tap to next page

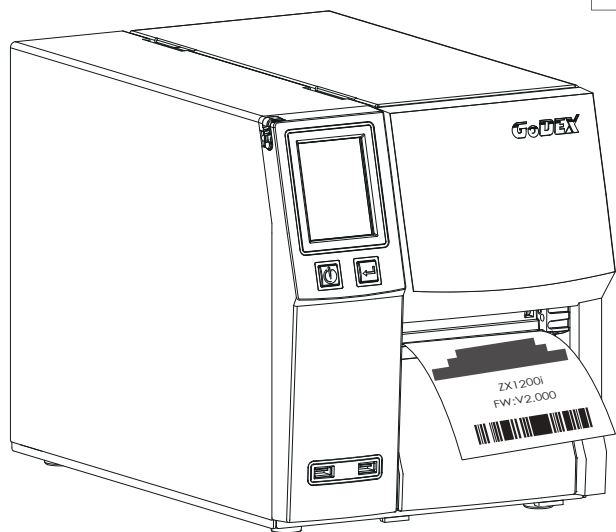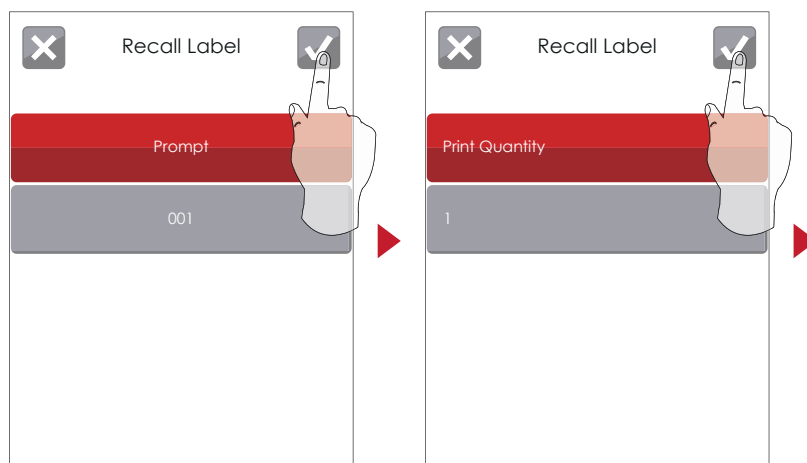

Print out selected label.

#### Note

\* Using recall label function send commands, printer display must be back to Ready Page.



## 3 Printer Setting and Control

### 3.3 LCD Interface Function

#### Main Page



Setting items for printer, ex. Printing speed, darkness. Also includes a Printing Wizard for your ease of printing.



More than 10 languages for printer setting



It consists of a table of values that describes the character set for a particular language



Setting items for printing label, ex. Rotation, Printing position offset.



Option modules and connection port settings.



Self-Diagnose functions for printer, ex. TPH testing, self-test page printing.




Recall Label



Dump Mode

# 3 Printer Setting and Control

## Device Page

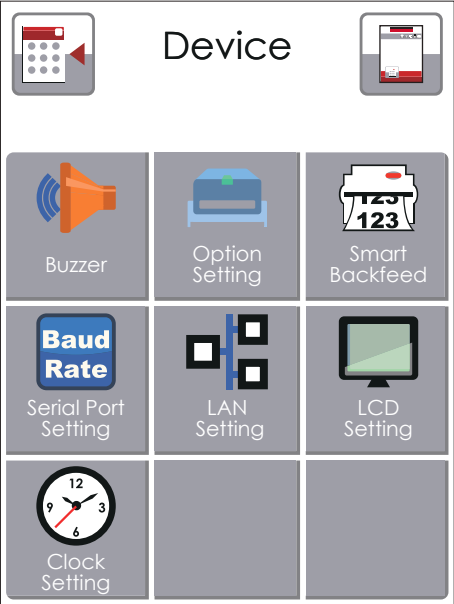

Setting off or on for buzzer



Setting items for options, ex. Cutter, Label Dispenser, Applicator



Choose ON. Printing labels would be back to start position.



Setting items for Serial Port , ex. Baud Rate, Parity, Data Bits, Stop Bits.



Setting items for LAN, ex. Port NO., DHCP, Dynamic IP, Default Gateway, Subnet Mask.



Setting items for LCD, ex. Brightness, Contrast , Power Saving, Password



Setting items for Clock, ex. Year, Month, Day, Hour, Minute

### 3 Printer Setting and Control

#### Setting Items in Setting Mode



Printer Setting	Darkness	0-19	
	Speed	2-5	
	Sensor Select	Media Detection	Auto Select
			See-Through
			Reflective
	Media Type		Label with Gaps
			Label with Marks
			Continuous
	Printing Mode	Direct Thermal	
		Thermat Transfer	
Tear-off Position	0-40		
Top of Form	Apply		
	Cancel		
LCD Language	English		
	Deutsch		
	繁體中文		
	簡體中文		
	Français		
	Español		
	日本語		
	Italiano		
	Русский		
Codepage	Türkçe		
	850		
	852		
	437		
	860		
	863		
	865		
	857		
	861		
	862		
	855		
	866		
	737		
	851		
	869		
	Win 1252		
	Win 1250		
	Win 1251		
	Win 1253		
	Win 1254		
Win 1255			
Win 1257			
Label Setting	Rotation		
	X-offset		
	Y-offset		
	Start Offset		





### 3 Printer Setting and Control



Device	Buzzer	OFF		
		ON		
	Optional Setting	None		
		Cutter		
		Label Dispenser		
		Applicator		
	Smart Backfeed	Off		
		On		
	Serial Port Setting	Baud Rate	4800 bps	
			9600 bps	
			19200 bps	
			38400 bps	
			57600 bps	
			115200 bps	
		Parity	Non	
			Odd	
			Even	
			Data bits	7 bits
			8 bits	
			Stop bits	1 bits
	2 bits			
	LAN Setting	DHCP	On	
		IP Address	0.0.0.0	
		Subnet Mask	255.255.255.0	
		Gateway	192.168.0.254	
	LCD Setting	Brightness	5	
		Contrast	5	
		Power Saving	15	
		Password	OFF	
	Clock Setting	Year		
		Month		
		day		
Hour				
Minute				
Printer Control	Test			
	Sample Pattern			
	Select Memory			
	Clear Memory			
	Calibration			
	Reset to Default			
Wizard	Darkness	2-5 or 7		
	Speed	0-19		
	Media Type	Label with Gaps		
		Label with Marks		
	X-Offset	Continuous		
		Y-Offset		
Bluetooth	Clear Bind	Enable		
		Disable		
	Make Device Visible	Enable		
		Disable		
	SSP	Enable		
	PIN Code	0000		
Test	Self-Test page			
	Out of Dump Mode			




### 3 Printer Setting and Control

#### Status of LCD Interface

When printer is on standby status (ready to print), the LCD interface will display "Ready" on screen. You can only print when you see the "Ready" status.



If there is any printers error, the LCD screen will display the error screen to show the type of error. You can fix the error according the notice.

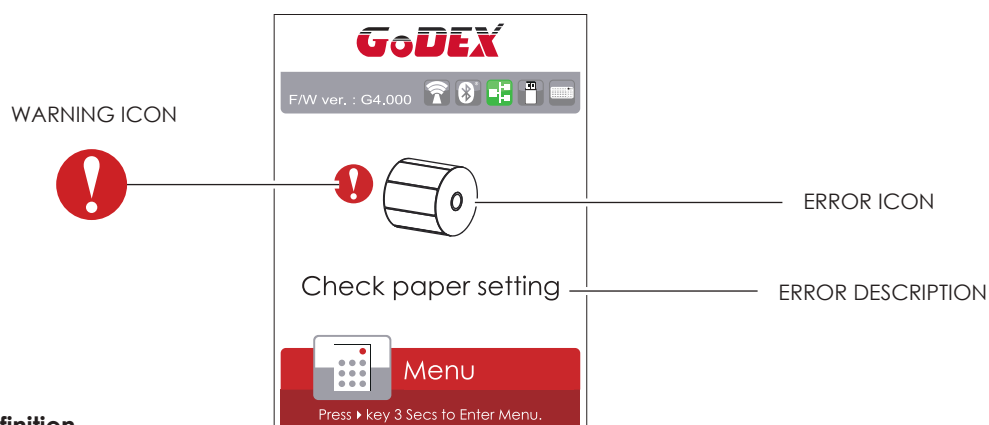

#### Icon Definition



To upper level

Appears on the NAVIGATION ICON of Setting Pages. It guides you back to upper level by touching display upper right icon.



To main page

Appears on the NAVIGATION ICON of Setting Value Pages. It guides you back to main page by touching display upper left icon.



Lock

On Setting Value pages, touch display icons to lock the value for preventing unexpected change.



Unlock

Touch display icons again to unlock the value.

## 3 Printer Setting and Control

### 3.4 Label Calibration and Self Test

#### Label Calibration

The printer can automatically detect and store label height.

That means the host computer does not need to transmit the label height to the printer.

#### Self Test

Self-test function lets you check whether the printer is functioning normally.

Here is how you run the label size calibration and self test.

1. Check that the label stock is loaded correctly.
2. Turn off the printer.
3. Turn the printer on again, keeping the FEED button pressed. When the LED starts to flash red, release the FEED button. The printer will now measure the label stock and store the label height.
4. Once the printer has successfully measured the label stock, it will print a self-test label.


The contents of a self-test printout are listed below.

Model & Version	ZX1200i:GX.XXX
USB ID setting	USB S/N:12345678
Serial port setting	Serial port:96,N,8,1
MAC address of Ethernet port	MAC Addr:xx-xx-xx-xx-xx-xx
IP protocol setting	DHCP Enable
IP address of Ethernet port	IP xxx.xxx.xxx.xxx
Gateway setting	Gateway xxx.xxx.xxx.xxx
Netmask setting	Sub-Mask xxx.xxx.xxx.xxx
	#####
Number of DRAM installed	1 DRAM installed
Image buffer size	Image buffer size:1500 KB
Number of forms	0000 FORM(S) IN MEMORY
Number of graphics	0000 GRAPHIC(S) IN MEMORY
Number of fonts	000 FONT(S) IN MEMORY
Number of Asian fonts	000 ASIAN FONT(S) IN MEMORY
Number of Databases	000 DATABASE(S) IN MEMORY
Number of Scalable fonts	000 TTF(S) IN MEMORY
Free memory size	4073 KB FREE MEMORY
Speed, Density, Ref. Point, Print direction	^S4 ^H8 ^R000 ~R200
Label width, Form length, Stop position	^W102 ^Q100,3 ^E18
Cutter, Label Dispenser, Mode	Option: ^D0 ^O0 ^AD
Sensor Setting	Reflective AD:1.96 2.84 2.49[0.88_23]
Code Page	Code Page:850


## 3 Printer Setting and Control

### Label Calibration Button

A hardware button to make a Label Calibration while printer encountering "Media Error" during the cases when first-time printer start up or change label or ribbon to another type, such as change using gap label to continuous or black mark labels.

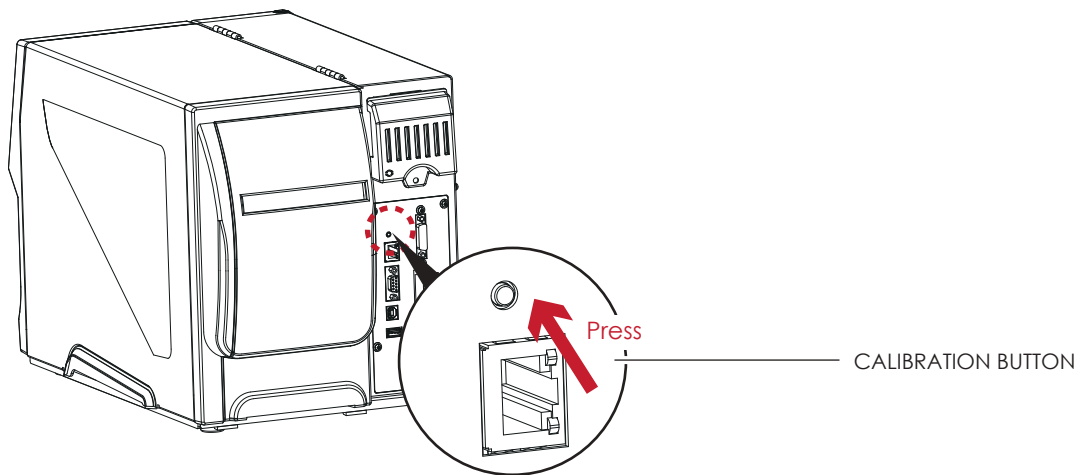

Press C-button for 2 seconds, it will make an auto-sensing to calibrate the label and ribbon's parameters.

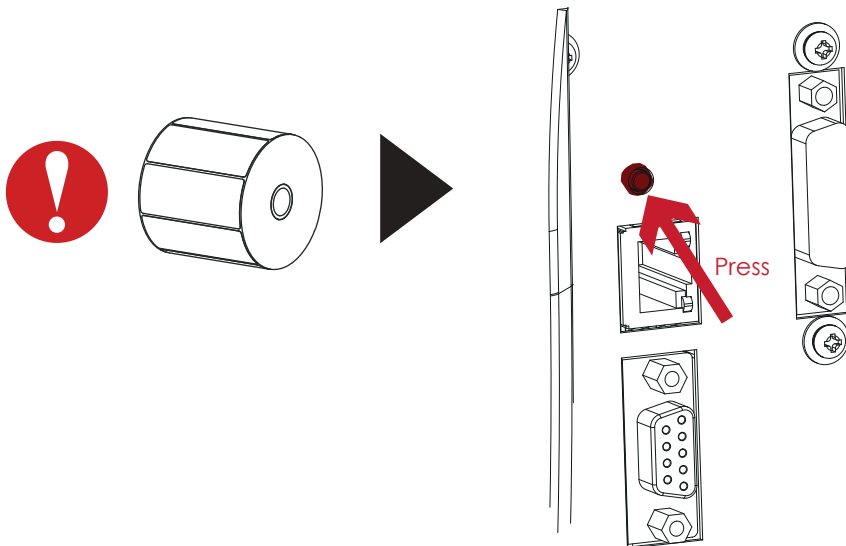


### Note

- \* Press C-button is equivalent to the auto-sensing command "~S,SENSOR" that will cancel on-printing-job and make the Label Calibration immediately.



## 3 Printer Setting and Control

### 3.5 Error Alerts

In the event of a problem that prevents normal functioning of the printer, you will see an error message on LCD screen and hear some beep signals. Please refer to below table for the error alerts.

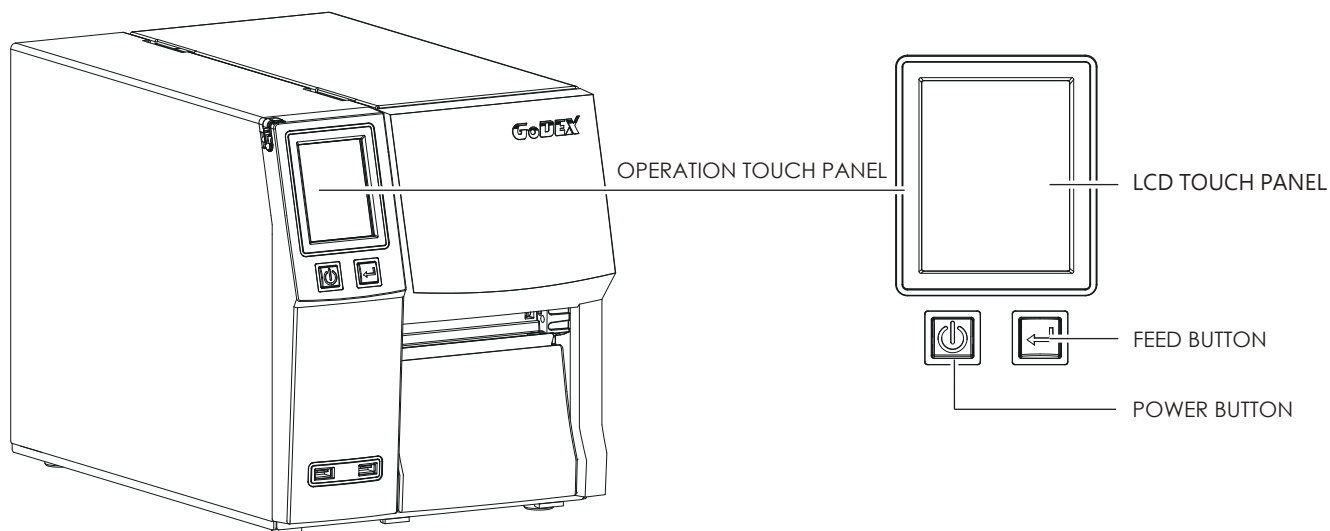
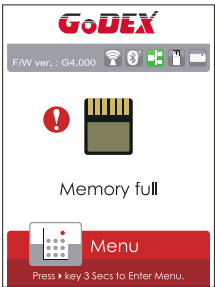
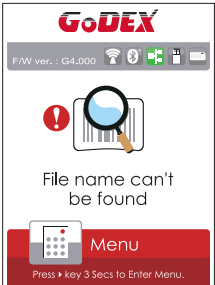



Operation Panel  
Status

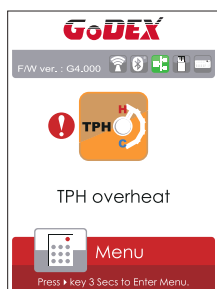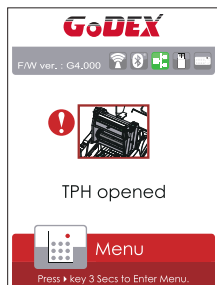

Type	Beeps	Description	Solution
Print Head Error	2 x 4 beeps	The printing mechanism is not correctly closed.	Open the print mechanism and close it again.
Print Head Error	None	High temperature at the print head.	Once the print head has cooled down, the printer switches to standby mode.
Media Error	2 x 3 beeps	No ribbon is installed and the printer displays an error.	Make sure that the printer is set to direct thermal printing mode.
		The ribbon is finished or the label supply hub is not moving.	Replace the ribbon roll.

### 3 Printer Setting and Control

Operation Panel Status	Status	Beeps	Description	Solution
	Media Error	2 x 2 beeps	No paper is detected.	Make sure that the label sensor is positioned correctly. If the sensor still does not detect the paper, run the auto-detection function again.
			Paper is finished.	Replace the label roll.
  	File Error	2 x 2 beeps	Printer feed problem.	Possible reasons: the print medium has become trapped around the rubber roll; the sensor cannot detect a gap or black mark between the labels; there is no paper. Please reset the sensor.
			The memory is full. The printer prints the message "File System full".	Delete unnecessary data or install additional memory.
			Unable to find file. The printer prints the message "File Name not found"	Use the "~X4" command to print all files. Then check whether the files exist and whether the names are correct.
			A file of the same name already exists. The printer prints the message "Duplicate Name".	Change the name of the file and try storing it again.

## 3 Printer Setting and Control

### 3.6 USB Host


Definition : USB Host port supports either device : USB memory stick, keyboard or scanner.

#### Purpose

- USB memory stick : It extends the user memory space up to 32GB for Graphic, Font, Label Format, DBF and Command files downloading. The printer's Firmware also can be updating if copy new version of Firmware into USB memory stick.
- Connecting an USB keyboard to printer for "Keyboard Mode" mode operation.
- Plug-in an USB scanner to operate the printer in "Keyboard Mode" .

#### Usage of Extended Memory

- USB memory stick : It supports hot-plugging function; printer will create a Folder "\\LABELDIR" and switch "User Flash" to "Extended Memory" automatically while user plugs an USB memory stick into a GoDEX printer.
- Connect the USB Stick plugged -in printer to PC via USB Device or Ethernet port and run "GoLabel" software to download Graphic, Font, Label Format, DBF and Command files to the printer.
- Detail download procedures, please refer to "GoLabel On-line Help".

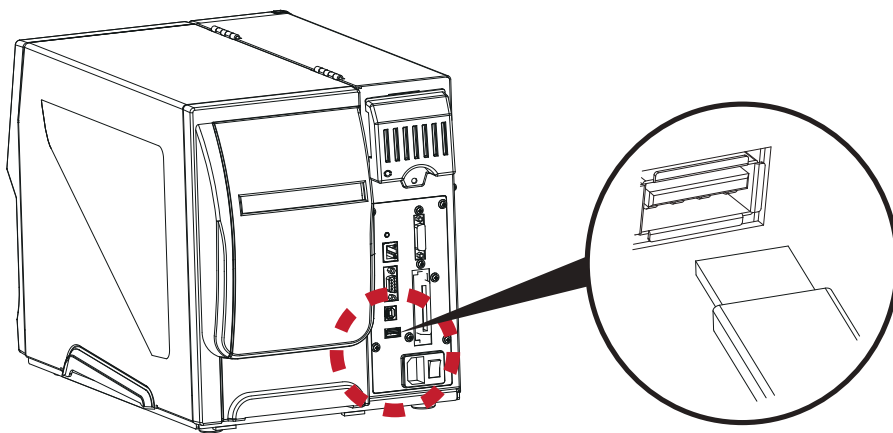

#### Usage of Firmware Update

- Remove USB memory stick from printer and plug-in it to a PC's USB port; delete Firmware '\*.bin' file from "\\LABELDIR\\FW" of USB memory stick if it existing; or create a Folder "\\LABELDIR\\FW" to USB memory stick if it doesn't existing.
- Copy a new version of Firmware "xxx.bin" to the Folder "\\LABELDIR\\FW"; and then remove USB and plug-in back to the printer that going to update Firmware.
- The printer will update the Firmware automatically when plug-it-into the printer and printer find-out the Firmware in "\\LABELDIR\\FW" is newer version.
- Don't remove the USB memory stick out while it's under updating with "Flash Writing..." message that displays on LCD panel.

## 3 Printer Setting and Control

### USB Keyboard

- When plug-in an USB keyboard to the printer, LCD touch panel will display "Enter Standalone", press the "Y" key on keyboard to entering to the dialog for "Keyboard Mode" operation.
- Here have six sub-dialogs "Recall Label" "Country Code" "Code Page" "Clock Setting" "Database Setting" "Label Edit" is able operating by keyboard as follow definition:
  1. Press "ESC" key to exist from "Keyboard Mode" or back to previous dialog
  2. Press "F1", it will let the printer from "Home Page" mode entering into "Keyboard Mode"
  3. Press "Enter", "Arrow" and "Alphabetic" keys as the usual in PC that will perform the key-in function of "Keyboard Mode".

### Scanner

- When plug-in an USB scanner to the printer, LCD touch panel will display "Enter Standalone", tap the "Y" to entering the dialog of "Keyboard Mode" operation.
- Scanner is using in "Keyboard Mode" to scanning the "Serial Number, Variable" and Print Quantity while the printer prompts a message on LCD touch panel and wait for data input.

### Note

---

- \* The USB Host port on GoDEX printer is without "HUB" function.
- \* The USB Memory Stick supports with "FAT32" Disk Format and up to 32GB only. The certified venders are Transcend, Apacer, Patriot, Consair and Kingston.
- \* The download function for Graphic, Font, Label Format, DBF and Command files is operated by GoLabel of PC and must go through the a "i" "x" model printer itself.
- \* On a PC, user may copy entire folder "\LABELDIR" from USB memory stick to PC or vice-versa. Copy a sub-folder or individual file in "\LABELDIR" to PC or vice-versa is not supported.




## 4 NetSetting for Ethernet


### 4.1 Installing the NetSetting software

The NetSetting software is used to manage the network configurations when connecting the printer via Ethernet port. It is available on product CD or can be downloaded from official website. To install the NetSetting, please follow below steps.

1. Insert the product CD in the CD/DVD drive of the host computer and open the "Ethernet" folder on the CD.
2. Select the icon for the NetSetting installation file and click it to start the installation.

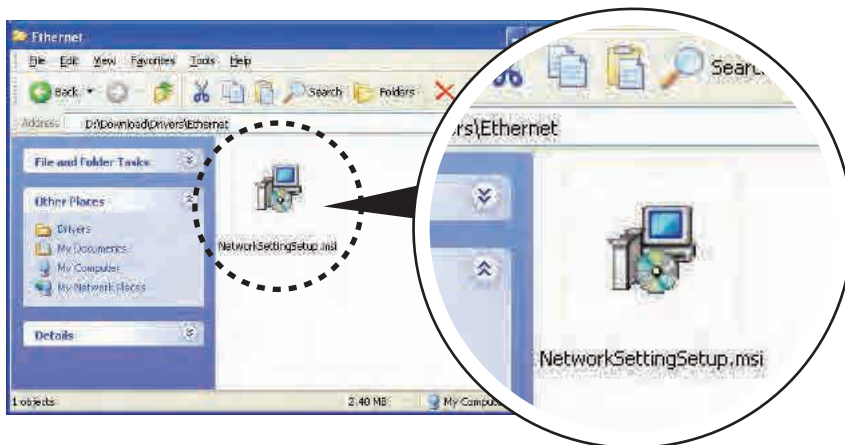

3. Follow the instructions on the screen. The Setup Wizard guides you through the installation procedure.
4. Specify the "Installation Folder".

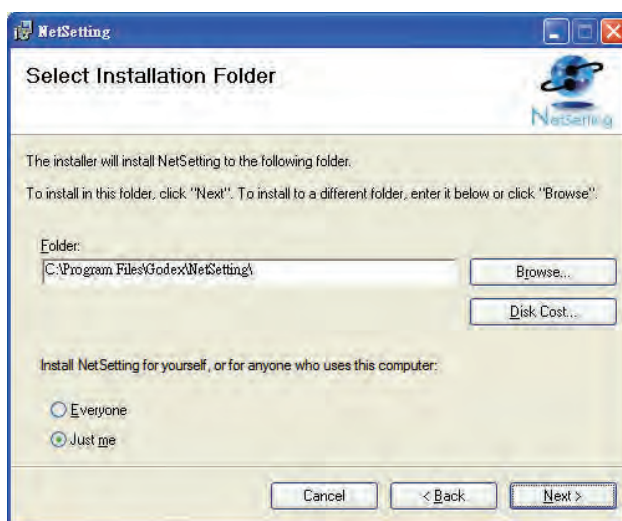

5. Click "Next" to start the installation.
6. Once the installation is completed; you will see the NetSetting icon on your desktop.




# 4 NetSetting for Ethernet

## 4.2 The Interface of NetSetting

Click the NetSetting icon to start the program; you will see the start page as below. The start page will display the basic information of connected printer and your PC.



Click the magnifier icon to search the Godex printers which are connected via Ethernet port in you network environment. Once a connected Godex printer is detected, it will be listed on the start page.

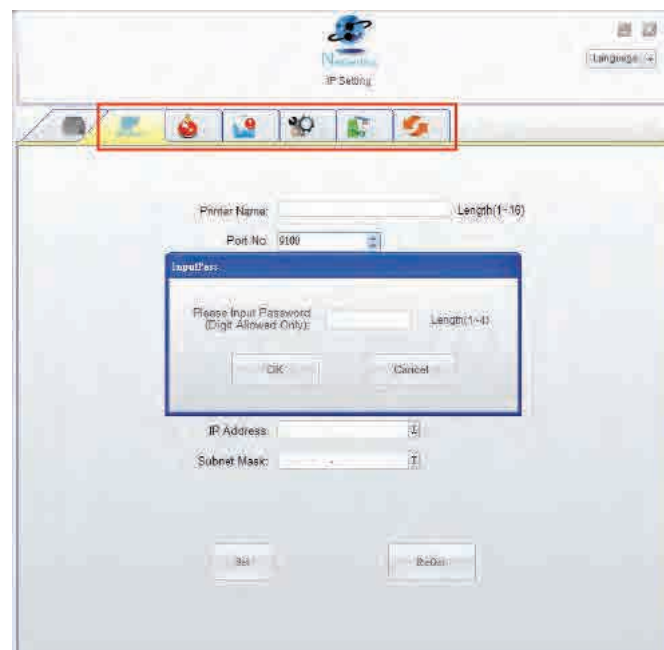

There are six tabs on the top of interface which can configure different types of network settings. But for the data security reason, you need correct password to enter the configuration pages.

### Notice

\* The default password is "1111", you can change the password later from the "IP Setting" tab.

## 4 NetSetting for Ethernet

### IP Setting

The IP Setting tab can change the printer name, Port number, Gateway setting and the password for configuring the printer. You can also set the printer's IP address either by DHCP or by Static IP.

The screenshot shows the 'GoDEX NetSetting IP Setting' window. The 'Printer Name' is 'Godex' (Length 1~16). The 'Port No.' is '9100'. The 'Default Gateway' is '192.168.0.254'. The 'Password' is '1111' (Length 1~4). The 'Get IP From DHCP Server' checkbox is unchecked, and the 'Static IP' radio button is selected. The 'IP Address' is '192.168.102.55' and the 'Subnet Mask' is '255.255.255.0'. At the bottom are 'Set' and 'Refresh' buttons.

You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

### Notice

- \* To fully benefit from the NetSetting software, you should be familiar with basic networking principles. Please contact your network administrator for related network setting information.
- \* When enabling DHCP, if you find the IP Address as: IP = 169.254.229.88, Netmask = 255.255.0.0, Gateway = invariable (last value), the IP Address is invalid.

## 4 NetSetting for Ethernet

### Alert Path Setting

NetSetting will send the alert messages to designated mail account when the error happened on printer. The alert messages are sent by SMTP (Simple Mail Transfer Protocol) or SNMP (Simple Network Management Protocol). You can set or change the configurations of SMTP and SNMP on this "Alert Path Setting" tab.

The screenshot shows the "Alert Mail Setting" window in the GoDEX NetSetting application. The window has a title bar with the GoDEX logo and "NetSetting Alert Mail Setting". Below the title bar is a toolbar with icons for printer, network, alert, settings, help, and a search icon. The main content area is divided into two sections: "Enable SMTP Alert Message Notification" and "Enable SNMP Alert Message Notification".

**Enable SMTP Alert Message Notification**

- ☐ Enable SMTP Alert Message Notification
- Login Account: default (Length(1~64))
- Login Password: (masked) (Length(1~16))
- Server IP Address: 192.168.0.1 (xxx.xxx.xxx.xxx)
- Mail Subject: Barcode printer message (Length(1~60))
- Mail From Address: default@default.com (Length(1~32))
- Mail To Address: default@default.com (Length(1~32))
- Duration Cycle: 1 (0 ~ 168 Hours)
- Event Counter: 5 (1 ~ 100)

**Enable SNMP Alert Message Notification**

- ☒ Enable SNMP Alert Message Notification
- SNMP Community: public (Length(1~16))
- SNMP Trap Community: public (Length(1~16))
- Trap IP Address: 192.168.0.1 (xxx.xxx.xxx.xxx)

At the bottom of the window are two buttons: "Set" and "Refresh".

You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

## 4 NetSetting for Ethernet

### Alert Message Setting

For the alert message notification function, you can decide which error cases need to be sent out to the operator. Moreover, the alert messages can be set to be sent by SMTP, SNMP or both.

SMTP	SNMP	Description
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Paper or Ribbon Empty
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Paper Jam
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Ribbon Out
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Printhead Up ( Open )
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Rewinder Full
<input type="checkbox"/>	<input checked="" type="checkbox"/>	File System Full
<input type="checkbox"/>	<input checked="" type="checkbox"/>	File Not Found
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Duplicated Name
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Syntax Unknown
<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cutter Jammed or Not Installed
<input type="checkbox"/>	<input checked="" type="checkbox"/>	TPH Over Heat

Set Refresh

You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

## 4 NetSetting for Ethernet

### Printer Configuration

Set or change the configurations of connected printer. Most of key settings for the printer operation can be done by this setting page.

The screenshot shows the 'GoDEX NetSetting Printer Configuration' window. The title bar includes the GoDEX logo, the 'NetSetting' icon, and the text 'Printer Configuration'. Below the title bar is a toolbar with icons for printer status, configuration, help, and other functions. The main area is divided into several sections:

- Printer Setup:** Contains dropdown menus for 'Printer Model' (ZX1200i), 'Tear-off Position' (12), 'Speed' (2), 'Darkness' (12), 'Dispenser/Applicator' (0 (None)), 'Labels per Cut' (0), and 'Printing Mode' (Thermal Transfer).
- Serial Port Setting:** Contains dropdown menus for 'Baud Rate' (4800), 'Parity' (None), 'Data Bits' (8), and 'Stop Bits' (1).
- Miscellaneous:** Contains dropdown menus for 'LCD Language' (Traditional Chinese), 'Keyboard Country Code' (US), 'Code Page' (Code Page 850), 'Sensing Mode' (0 - Reflective), 'Pre-Printing' (OFF), 'Top Of Form' (ON), and 'Buzzer' (ON).

At the bottom of the window are two buttons: 'Set' and 'Refresh'.

You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

## 4 NetSetting for Ethernet

### User Command

The "User Command" tab provides a communication interface for operator to control the printer. Input printer commands in "Input Command" window and press "Send Command" button, the commands will be sent to the printer.

For some commands that will return response message, the message will be displayed in "Output Message" window.



You can press "Send Command" button to send printer commands via Ethernet port and control the printer remotely.

## 4 NetSetting for Ethernet

### Firmware Download

On "Firmware Download" tab, the current version of printer firmware will be showed on the screen. If you need to update the printer firmware, just specify the file location of firmware file and press "Start Download Firmware" button. The printer firmware then can be updated remotely.



In addition to the firmware update, you can press "Recover To Factory Settings" button to restore the printer configurations back to factory default.




## 5 Accessories

### 5.1 Preparation Steps

Before installing the optional modules, please make some preparations as follows.

1. Turn off the printer :  
Remember to switch off the printer before installing any module.
2. Open the printer cover

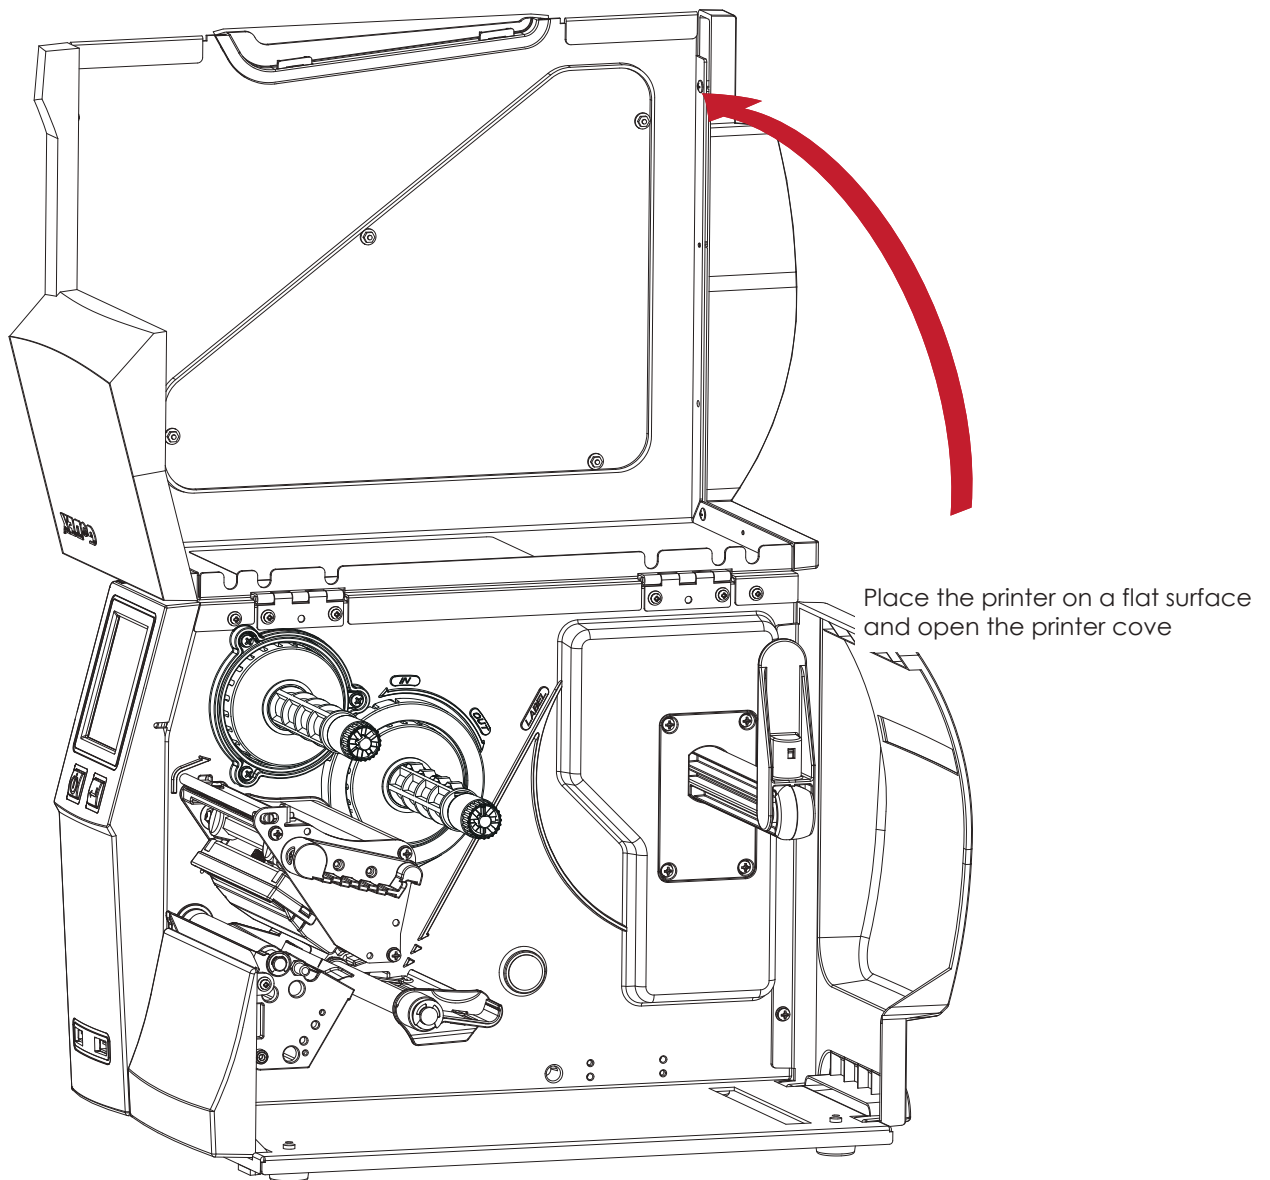

### Notice

- \* Remember to switch off the printer before installing the cutter.
- \*\* Do not use to cut adhesive labels! Glue residue will be left on the cutter blade and impair its functioning.
- \*\*\* Under the ordinary paper application condition, the cutter performs 300000 cuts of a heavy paper with up to 250  $\mu\text{m}$  thick or 100000 cuts of a plastic sheet with up to 300  $\mu\text{m}$  thick.



# 5 Accessories

## 5.2 Installing the Cutter


### The Overview of the Cutter

1.Cutter module

2. Screw

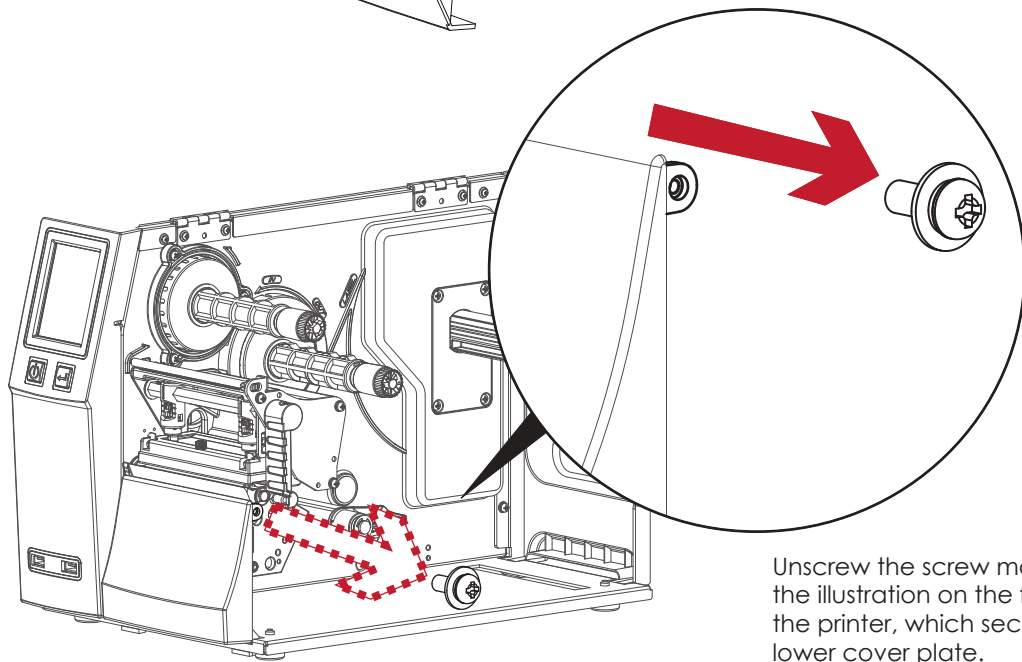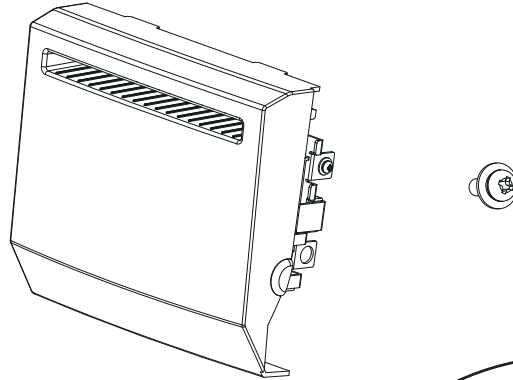


Unscrew the screw marked in the illustration on the front of the printer, which secures the lower cover plate.

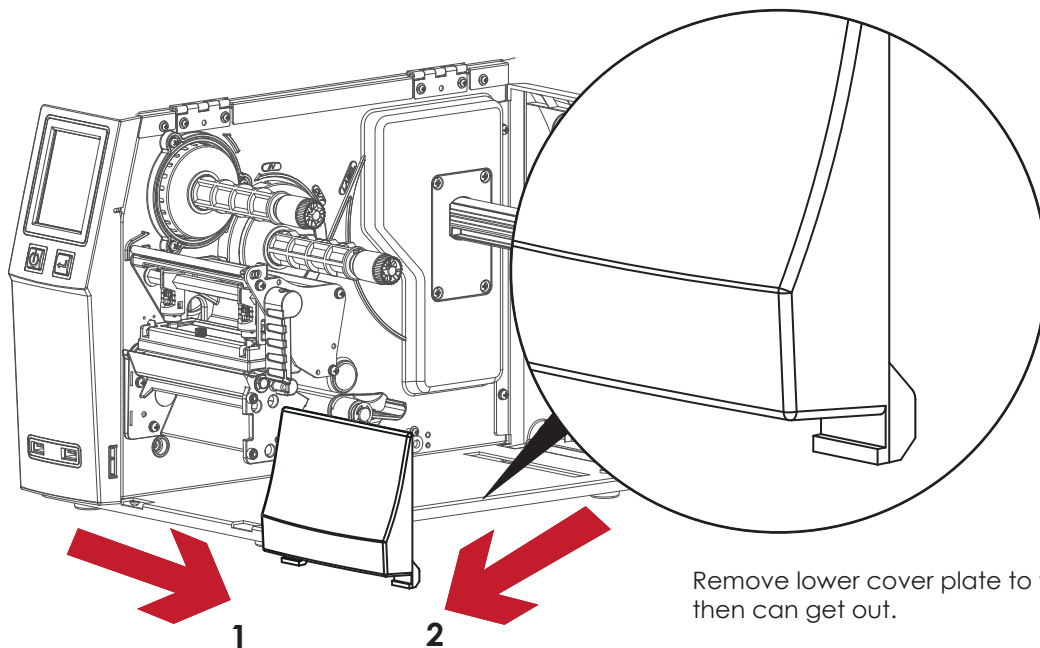


Remove lower cover plate to the a little bit right then can get out.

## 5 Accessories

Connect the cutter cable connector to the cutter jack on the printer.

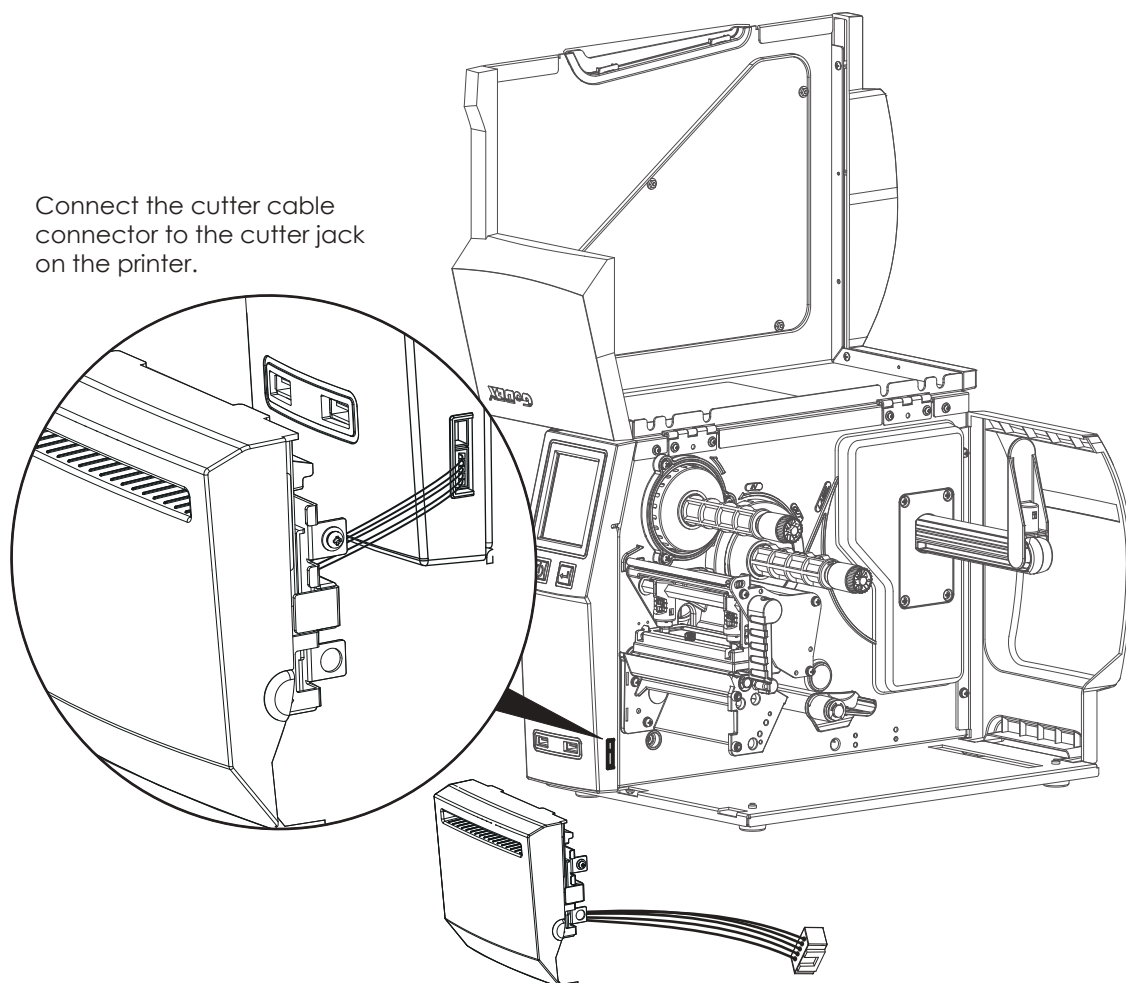


Be sure the cutter module insert to printer properly.  
(see red arrow)

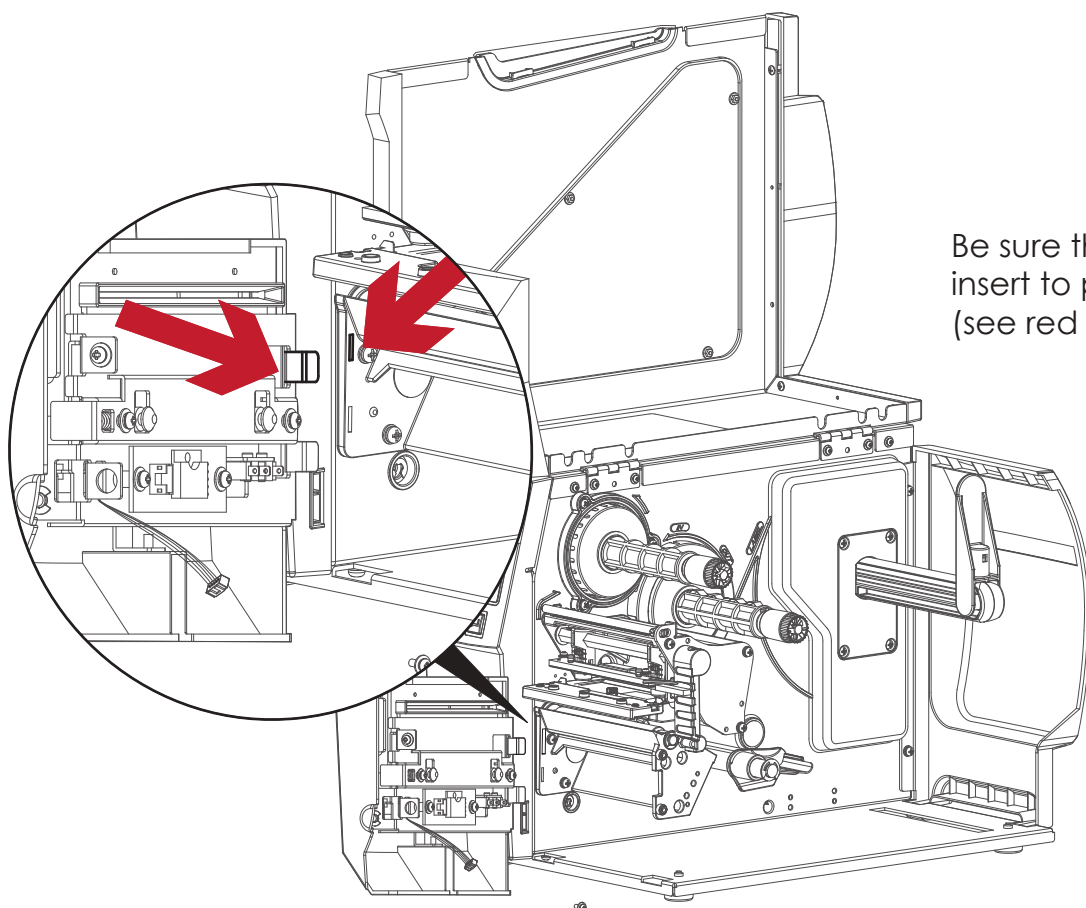


## 5 Accessories


Secure the cutter module on the printer housing using the screws.

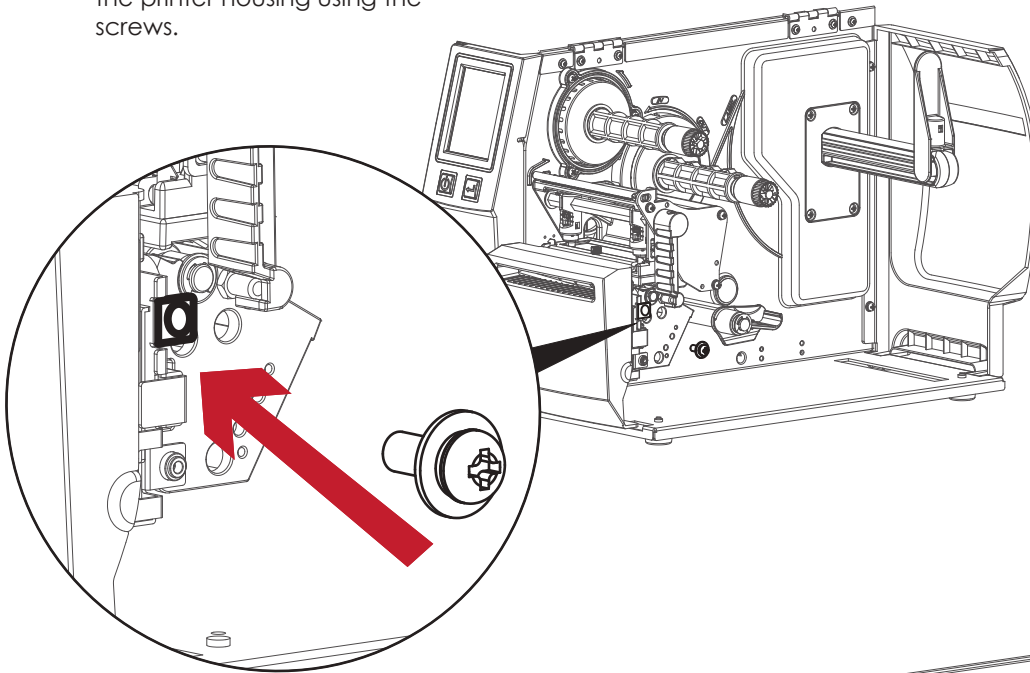

Finish the cutter module installed.

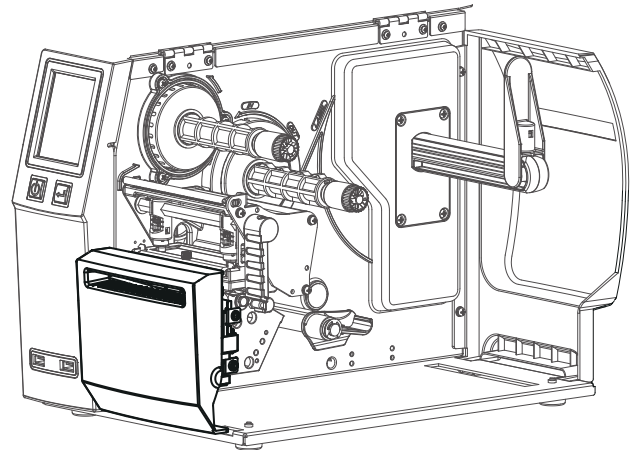

Now load the label roll into the printer and close the printer cover.

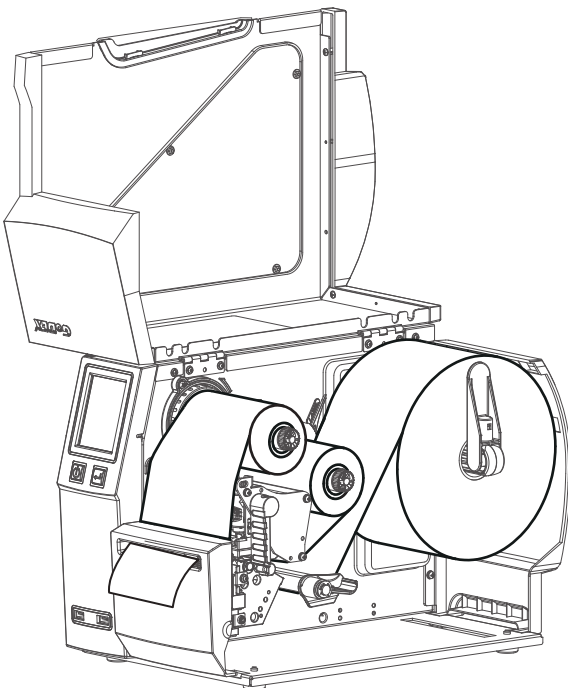


### Notice

- \* Check whether the cutter function is enabled in the printer.
- \*\* Labels or paper should be at least 30 mm high.
- \*\*\* After installation of the cutter module, set the stop position (^E) to 30.

## 5 Accessories



### 5.3 Option Rewind Ribbon Hub Removing Ribbon

Use tool to cut off the ribbon.

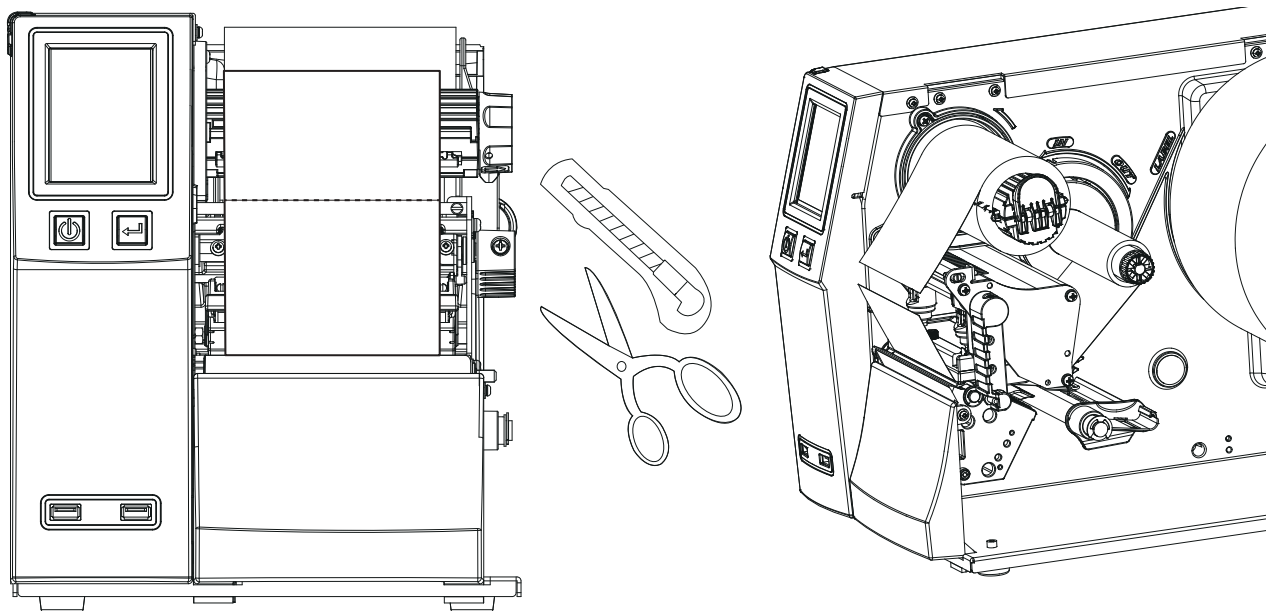

## 5 Accessories

Pull open the knob, ribbon could be easy to remove.

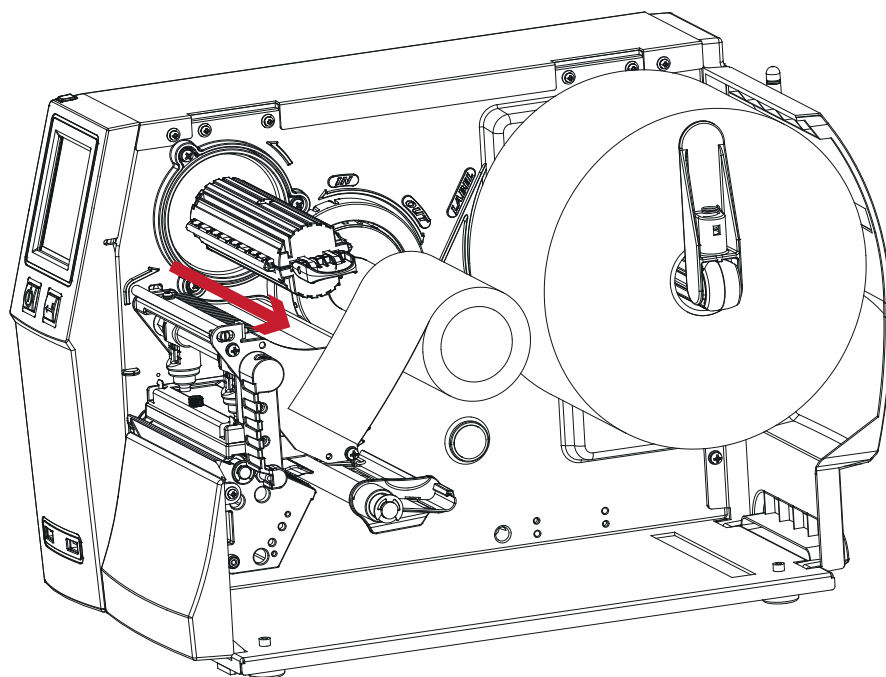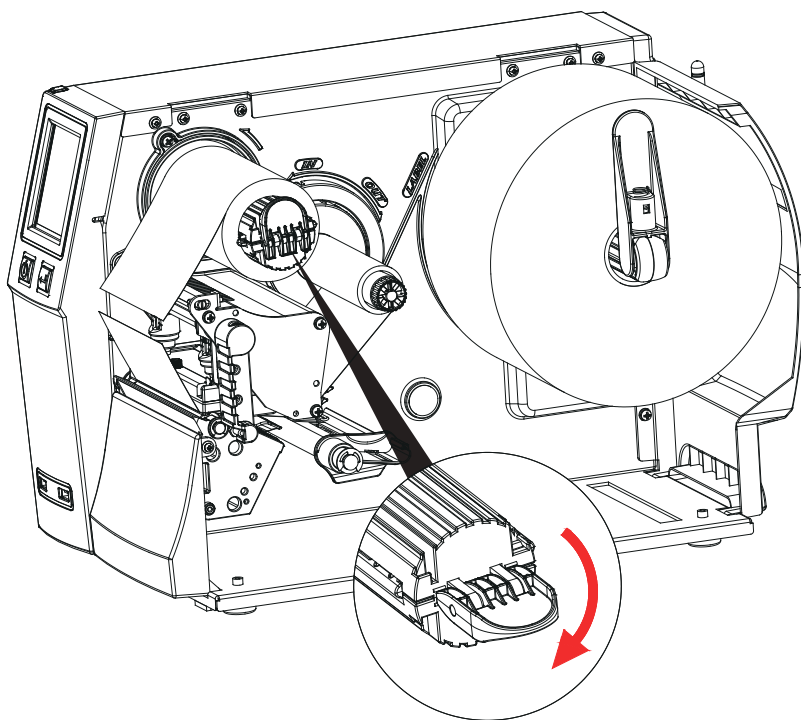





## 6 Maintenance and Adjustment

### 6.1 Installing / removing the print head module



Open the printer cover.

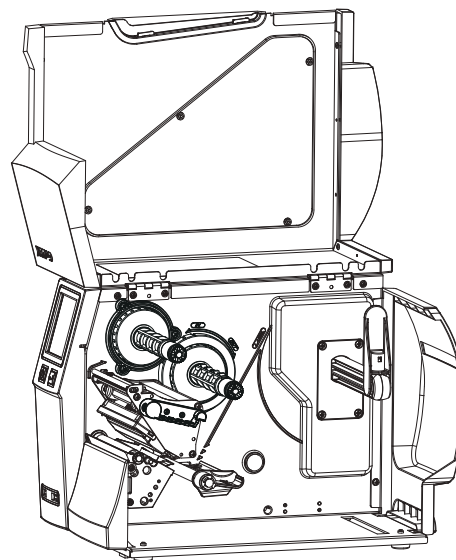


using a screwdriver or a coin, loosen the screw to take out the TPH module.

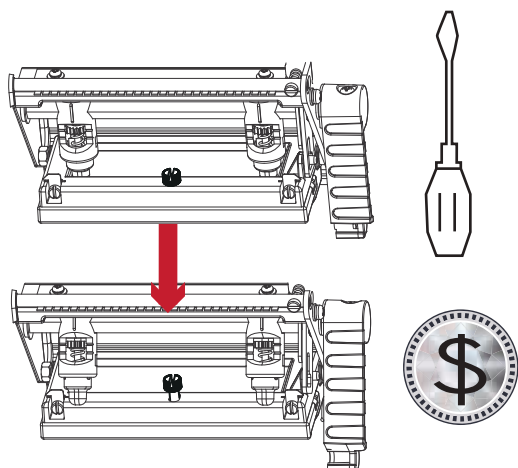

Turn the print head counterclockwise to a top right position

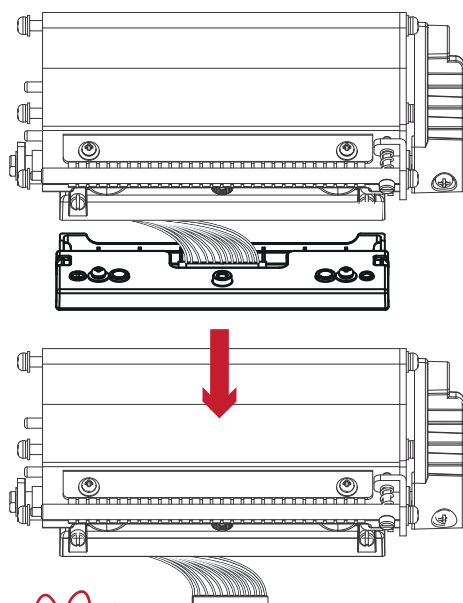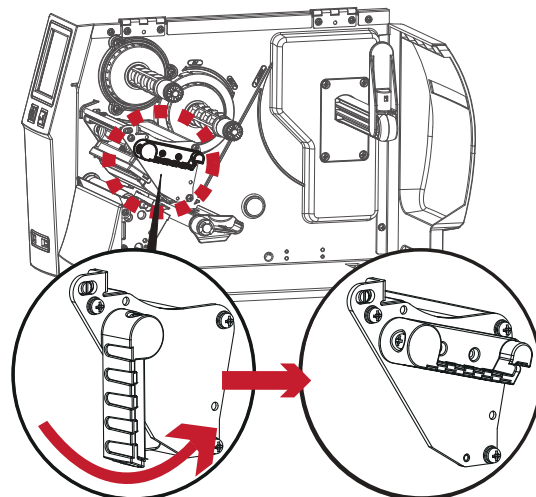

Hold the print head module , pull out the TPH cable smoothly.  
To install TPH module, follow the reverse order.

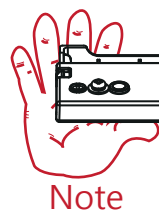


\* Remember to switch off the printer before removing the print head module.


## 6 Maintenance and Adjustment

### 6.2 Adjusting the print line



Open the printer cover.

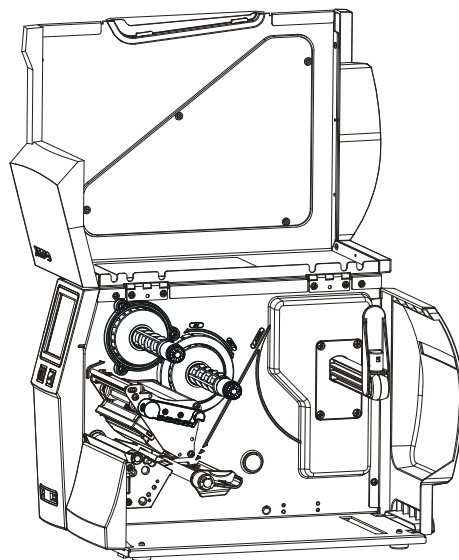

using a screwdriver or a coin to loosen the screw

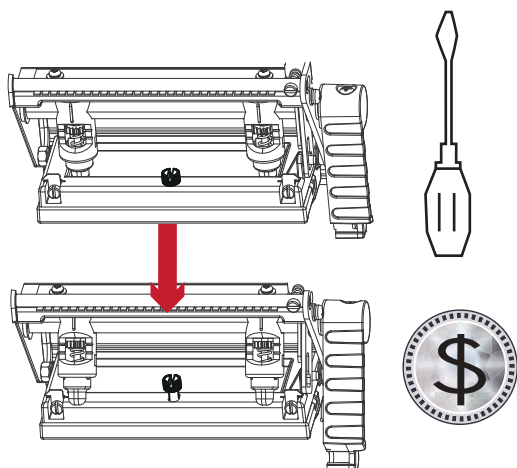

Turn the print head counterclockwise to a top right position

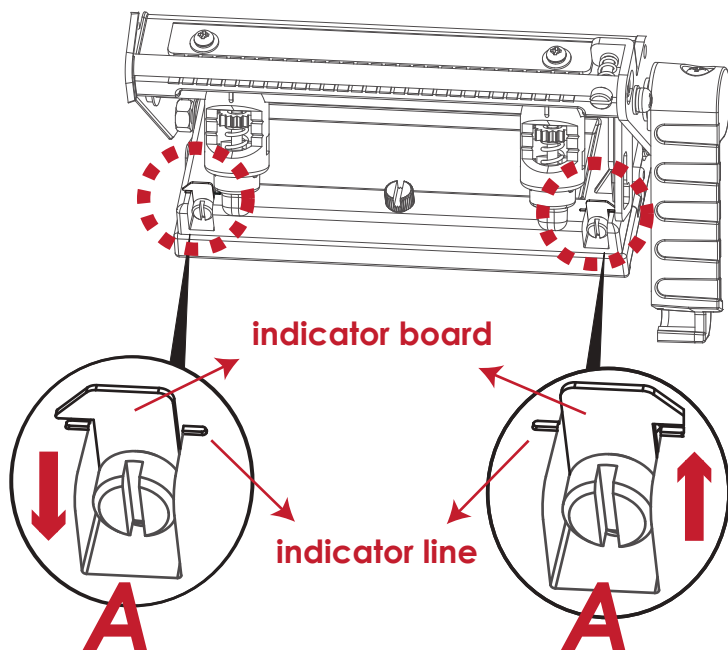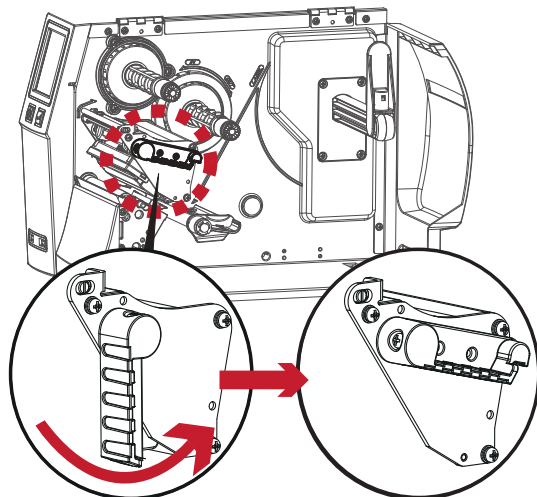

If no improvement is visible, turn the screws(A) clockwise or counterclockwise as far as possible and be sure to align with the indicator board and indicator line. Repeat the adjustment process until printing quality has improved.



## 6 Maintenance and Adjustment

### 6.3 Adjusting ribbon tension

You can adjust the ribbon tension by turning the ribbon shaft knob (see illustration) clockwise or counterclockwise. There are 4 possible settings, which is marked on the ribbon supply hub.


# 1 : Tension is the highest

# 4 : Tension is the lowest

If the tension is so low that the ribbon does not move forward, you need to reduce the tension of the ribbon supply hub. To set the tension, press in the knob and turn it clockwise or counterclockwise as required.

Increasing the tension of the ribbon rewind hub will remove any wrinkling of the ribbon during printing, which results from the use of different ribbon materials. (For details about the wrinkling/creasing of ribbons, see Section 6-6.)

If you are using a very narrow ribbon, the printer may not move the label stock forward (particularly with a ribbon that is less than 2" wide). In that case, reduce the tension by turning the knob of the ribbon supply hub counterclockwise.

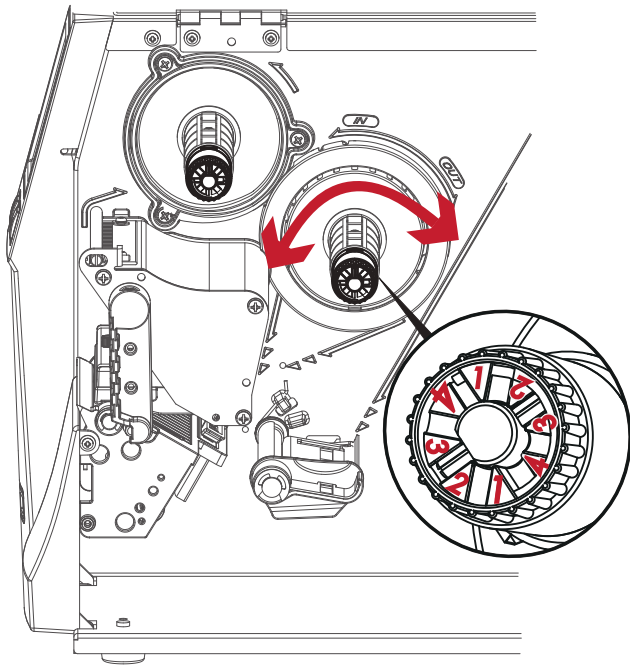


## 6 Maintenance and Adjustment

### 6.4 Cleaning the thermal print head

Dirt on the print head or ribbon may result in inadequate print quality (there are only partial images on the label). The printer cover should therefore be kept closed when possible.

Keeping dirt and dust away from the paper or labels ensures a good print quality and a longer lifespan of the print head. Here is how you clean the print head:

1. Switch off the printer.
2. Open the printer cover.
3. Remove the ribbon.
4. Release the print head by turning the print head release lever.
5. To remove any label residue or other dirt from the print head (see Red arrow), please use a soft lint-free cloth dipped in alcohol to wipe.

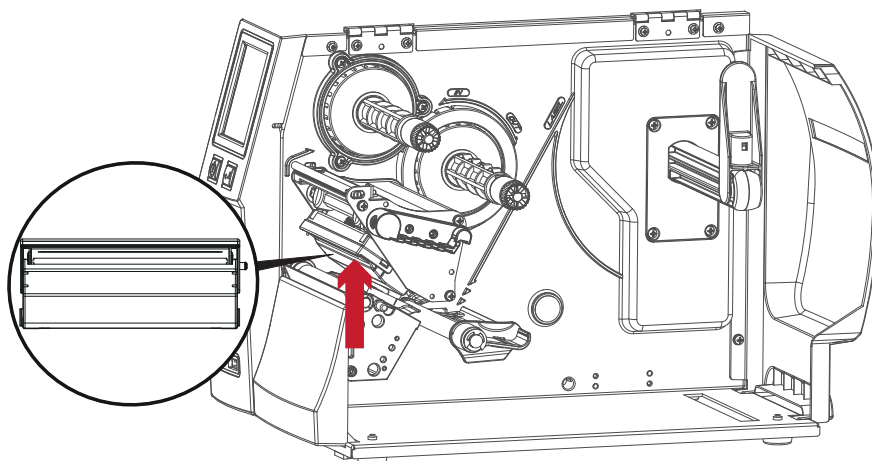

#### Note



\* The print head should be cleaned once a week.

\*\*Please make sure that there are no metal fragments or other hard particles on the soft cloth used to clean the print head.

## 6 Maintenance and Adjustment

### 6.5 Adjusting the balance and print head tension



Open the printer cover.

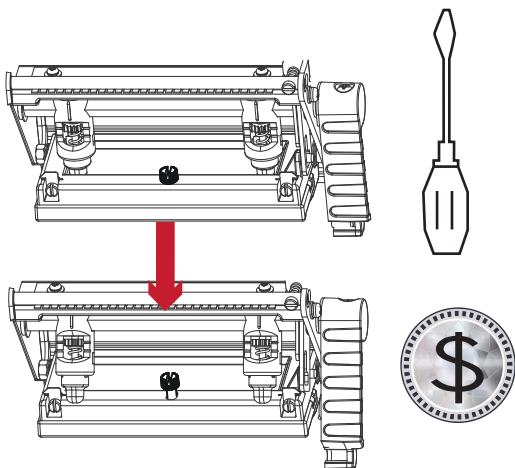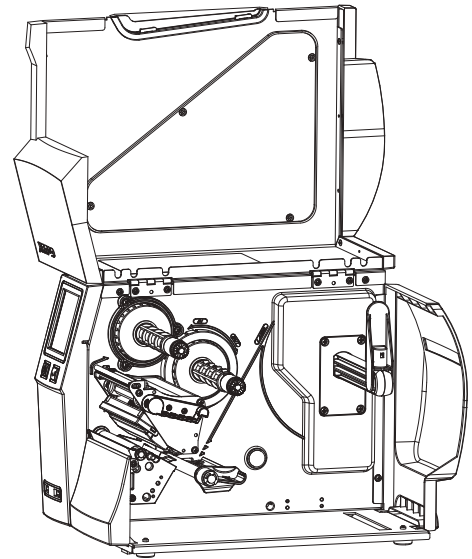

using a screwdriver or a coin to loosen the screw

When using a variety of label stock and ribbons, the ink may not be evenly distributed. If there is no printed image on one side of the paper, or the ribbon wrinkles, the print head pressure must be readjusted using the TPH spring boxes.

Move the TPH spring boxes as shown in the illustration to change the print head pressure. The wider the label you are using, the further apart the TPH spring boxes must be moved away from each other. If there is no quality improvement, you need to change the pressure on the TPH spring boxes.

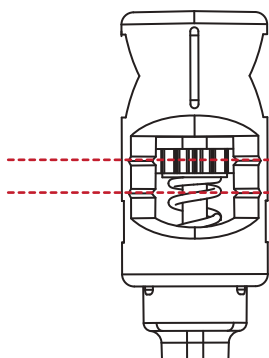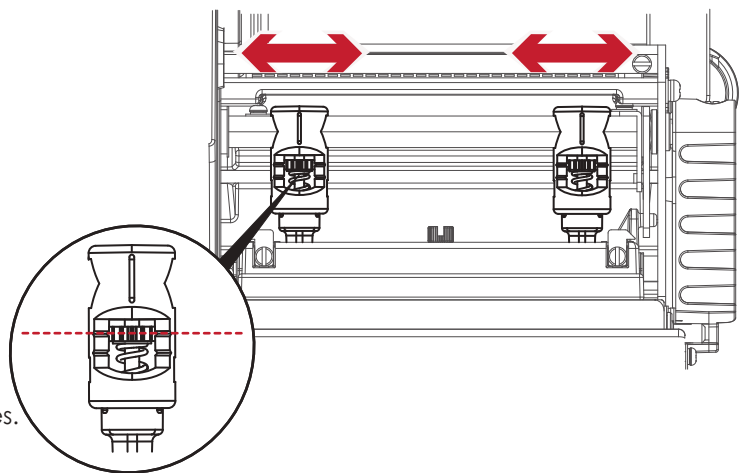

**Reset Mark (A)**  
**Mark (B)**

Turning the screw left increases the pressure, while turning it right reduces the pressure. Be sure not to turn the screw so that it goes below Mark(B).

## 6 Maintenance and Adjustment


### 6.6 Ribbon shield settings

The use of different ribbon materials may cause wrinkling of the ribbon, which in turn affects the print result as illustrated by the examples in (a) and (b). To change the print quality, you can adjust the ribbon shield screws. If your print result looks like the example in (a), you need to turn ribbon shield screw clockwise.

If your print result looks like the example in (b), you need to turn ribbon shield screw counterclockwise.



To keep track of the change in print quality, you should adjust the screws by half a turn at a time. Print a test page. If there is no improvement in the print result, turn the screw by another half turn. Do not turn the adjustment screw more than two full turns(360°).

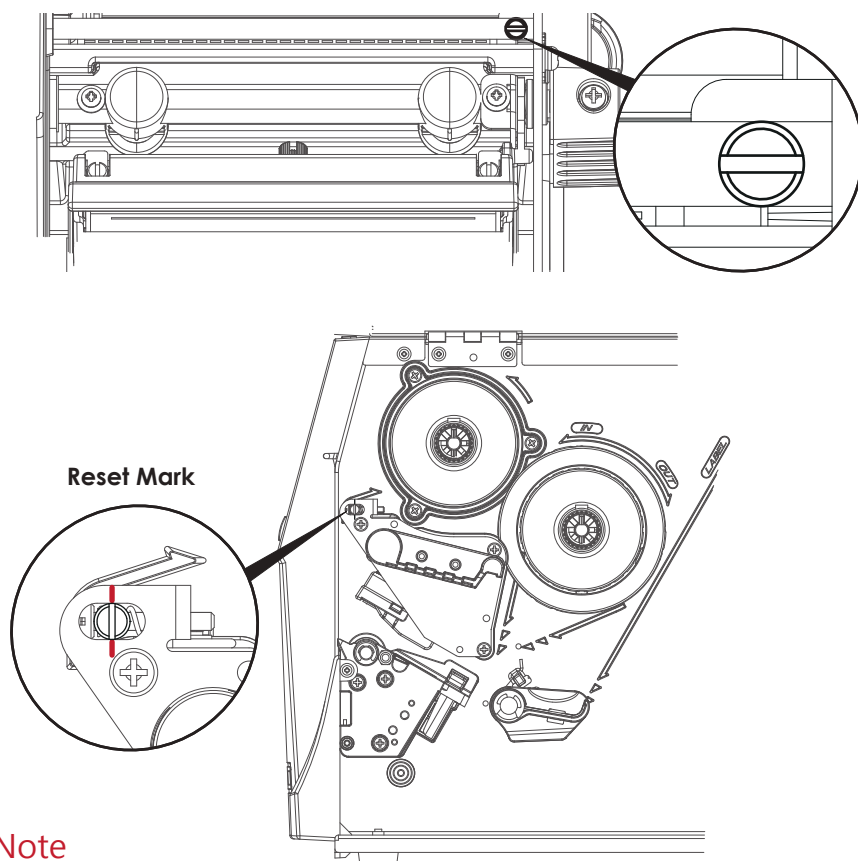


#### Note

\* If you adjust the screw by more than two full turns, the paper feed may no longer function correctly. In that case, unscrew the ribbon shield screws to align the reset mark and restart the adjustment process.


## 6 Maintenance and Adjustment

### 6.7 Cutter settings

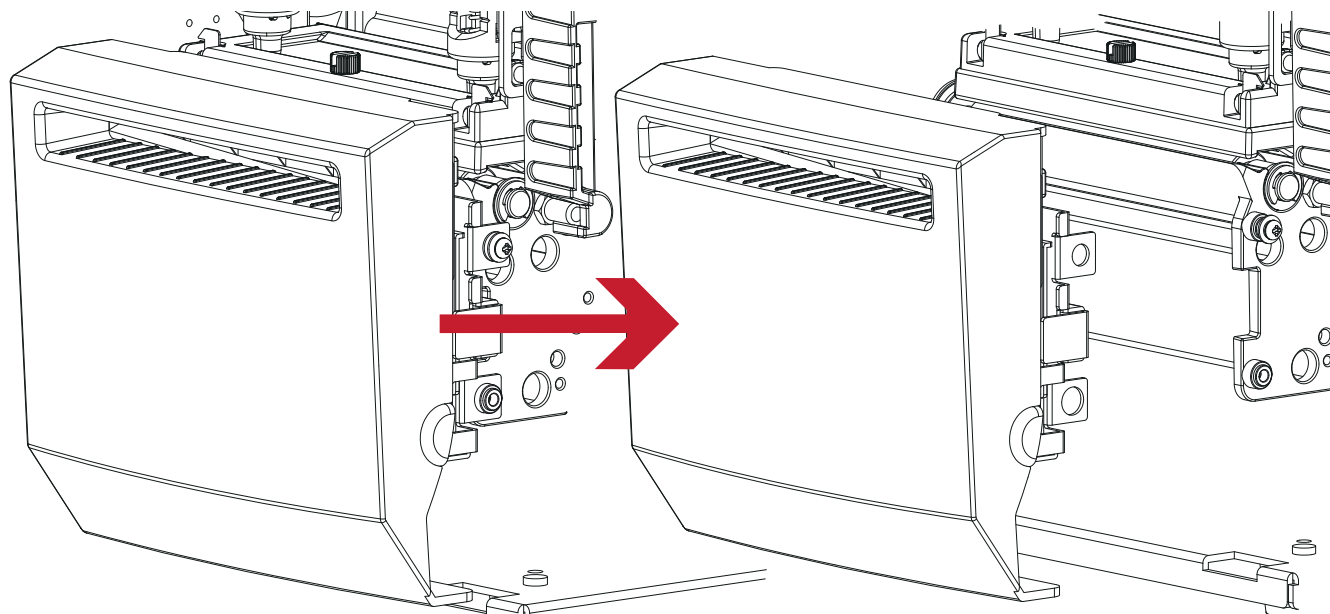


Switch off the printer before removing the CUTTER.


(remove or install cutter refer to "accessories" in Section 5)

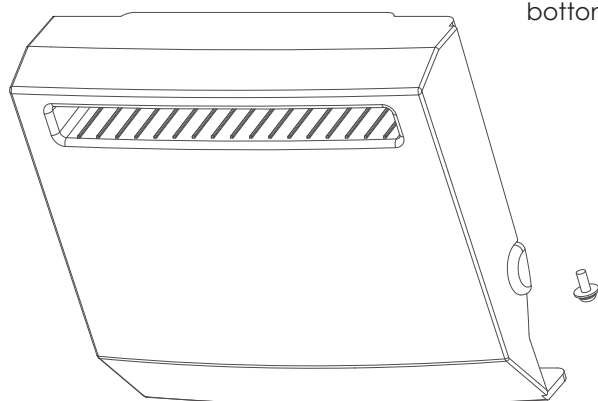

Unscrew the screw at the bottom of cutter .

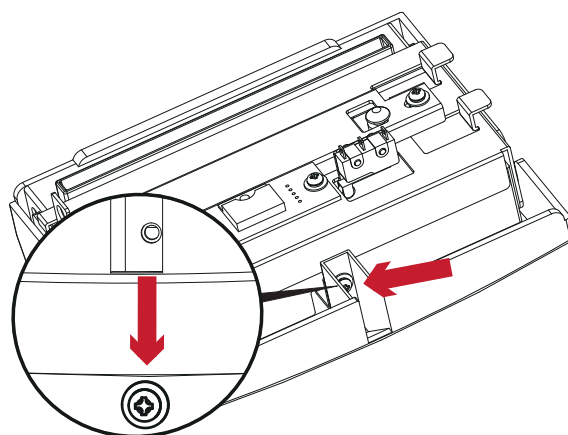

Remove the cutter cover.  
Clean and remove jammed paper.  
Reinstall CUTTER back onto printer.

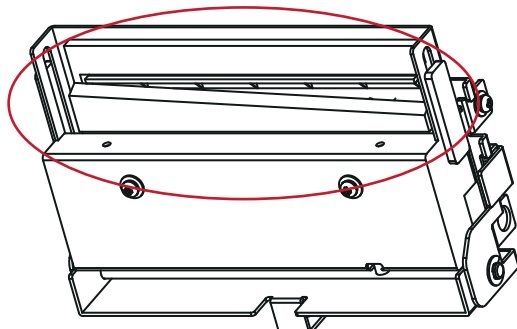

#### Note

\* Remember to switch off the printer before removing the CUTTER.

\*\*The label medium should be at least 30 mm long to ensure correct functioning of the cutter.

## 6 Maintenance and Adjustment

### 6.8 Troubleshooting

Problem		Solution
The printer is switched on but the LED does not light up.	◆	Check the power supply. Please see the Section 2.4
The LED lights up red and printing is interrupted.	◆ ◆ ◆	Check the software settings (driver settings) or command codes. Look for the error alert in the table in Section 3.3, Error Alerts. Check whether the print mechanism is closed correctly. Please see the Section 3.3
The label stock passes through the printer but no image is printed.	◆ ◆ ◆	Please make sure that the label stock is loaded the right side up and that it is the suitable material. Choose the correct printer driver. Choose the correct label stock and a suitable printing mode.
The label stock jams during printing.	◆	Clear the paper jam. Remove any label material left on the thermal print head and clean the print head using a soft lint-free cloth dipped in alcohol. Please see the Section 6.1
There is no printed image on some parts of the label.	◆ ◆ ◆ ◆	Check whether there is any label material or ribbon stuck to the the print head. Check for errors in the application software. Check whether the starting position has been set correctly. Check the ribbon for wrinkles.
There is no printed image on part of the label or the image is blurred.	◆ ◆ ◆	Check the thermal print head for dust or other dirt. Use the internal "~T" command to check whether the thermal print head will carry out a complete print job. Check the quality of the print medium.
The printed image is positioned incorrectly.	◆ ◆ ◆	Check whether there is paper or dust covering the sensor. Check whether the label stock is suitable. Contact your supplier. Check the paper guide settings.
Skipping labels during printing.	◆ ◆ ◆	Check the label height setting. Check whether there is dust covering the sensor. Run the auto-detection function. Please see the Section 3.2
The printed image is blurred.	◆ ◆	Check the darkness setting. Check the thermal print head for dust or dirt. Please see the Section 6.1
The cutter does not cut off the labels in a straight line.	◆	Check whether the label stock is positioned straight.
The cutter does not cut off the labels completely.	◆	Check whether the label is more than 0.2 mm thick.
When using the cutter, the labels are not fed through or cut off incorrectly.	◆ ◆	Check whether the cutter has been correctly installed. Check whether the paper guides are functioning correctly.
The label dispenser is not functioning normally.	◆ ◆	Check whether there is dust on the label dispenser. Check whether the label stock is positioned correctly.

### Note

\* If any problems occur that are not described above, please contact your dealer.

## APPENDIX

## PRODUCT SPECIFICATIONS

Model Name		ZX1200i	ZX1300i	ZX1600i
<b>Print Method</b>		Thermal Transfer / Direct Thermal		
<b>Resolution</b>		203 dpi (8 dots/mm)	300 dpi (12 dots/mm)	600 dpi (24 dots/mm)
<b>Print Speed</b>		Up to 10 IPS (254 mm/s)	Up to 7 IPS (177 mm/s)	Up to 3 IPS (76.2 mm/s)
<b>Print Width</b>		4.09" (104 mm) Up to (108mm)	4.09" (104 mm) Up to (105.7mm)	4.09" (104 mm)
<b>Print Length</b>		Min. 0.16" (4 mm)** – Max. 180" (4572 mm)	Min. 0.16" (4 mm)** – Max. 85" (2159 mm)	Min. 0.16" (4 mm) ** – Max. 26" (660 mm)
<b>Processor</b>		32-bit MPU		
<b>Memory</b>	<b>Flash</b>	128 MB Flash (60 MB for user storage)		
	<b>SDRAM</b>	32 MB		
<b>Sensor Type</b>		Adjustable reflective sensor and transmissive sensor, left aligned		
<b>Media</b>	<b>Type</b>	Continuous form, gap labels, black mark sensing, and punched hole; label length set by auto sensing or programming		
	<b>Width</b>	Tear : Min. 1" (25.4 mm) – Max. 4.64" (118 mm) Cutter : Max. 4.61" (117 mm) Dispenser / Rewind : Max. 4.64" (118 mm)		
	<b>Thickness</b>	Min. 0.003" (0.06 mm) – Max. 0.01" (0.25 mm)		
	<b>Label roll diameter</b>	Max. 8" (203.2 mm)		
	<b>Core diameter</b>	Min. 1.5" (38.1 mm) – Max. 3" (76.2 mm)		
<b>Ribbon</b>	<b>Types</b>	Wax, wax/resin, resin		
	<b>Length</b>	Max. 1476' (450 m)		
	<b>Width</b>	Min. 1.18" (30 mm) – Max. 4.33" (110 mm)		
	<b>Ribbon roll diameter</b>	3" (76.2 mm)		
	<b>Core diameter</b>	1" (25.4 mm)		
<b>Printer Language</b>		EZPL, GEPL, GZPL auto switch		
<b>Software</b>	<b>Label design software</b>	GoLabel (for EZPL only)		
	<b>Driver</b>	Windows XP, Vista, Win7, Win8, Server 2003 & 2008		
	<b>DLL</b>	Windows XP, Vista, Win7, Server 2003 & 2008		
<b>Resident Fonts</b>	<b>Bitmap Fonts</b>	6, 8, 10, 12, 14, 18, 24, 30, 16X26 and OCR A&B Bitmap fonts 90°, 180°, 270° rotatable, single characters 90°, 180°, 270° rotatable Bitmap fonts 8 times expandable in horizontal and vertical directions		
	<b>Scalable Fonts</b>	90°, 180°, 270° rotatable		
<b>Download Fonts</b>	<b>Bitmap Fonts</b>	Bitmap fonts 90°, 180°, 270° rotatable, single characters 90°, 180°, 270° rotatable		
	<b>Asian Fonts</b>	Asian fonts 90°, 180°, 270° rotatable and 8 times expandable in horizontal and vertical directions		
	<b>Scalable Fonts</b>	Scalable fonts 90°, 180°, 270° rotatable		
<b>Barcodes</b>	<b>1-D Bar Codes</b>	Code 39, Code 93, EAN 8 / 13 (add on 2 & 5), UPC A / E (add on 2 & 5), I 2 of 5 & I 2 of 5 with Shipping Bearer Bars, Codabar, Code 128 (Subset A, B, C), EAN 128, RPS 128, UCC 128, UCC / EAN-128 K-Mart, Random Weight, Post NET, ITF 14, China Postal Code, HIBC, MSI, Plessey, Telepen, FIM, GS1 DataBar		
	<b>2-D Bar Codes</b>	PDF417, Micro PDF417, Datamatrix code, Maxicode, QR code, Micro QR code and Aztec code		
<b>Code Pages</b>		Codepage 437, 850, 851, 852, 855, 857, 860, 861, 862, 863, 865, 866, 869, 737		
<b>Graphics</b>		Unicode (UTF8 - UTF16) Resident graphic file types are BMP and PCX, other graphic formats are downloadable from the software		
<b>Interfaces</b>		<ul style="list-style-type: none"> <li>• USB 2.0 (B-Type)</li> <li>• Serial port: RS-232 (DB-9)</li> <li>• IEEE 802.3 10/100 Base-Tx Ethernet port (RJ-45)</li> <li>• 3 USB Host (A-Type). 2 ports at the front panel, 1 port at the rear panel</li> </ul>		
<b>Control Panel</b>		<ul style="list-style-type: none"> <li>• Backlight 3.2" touch screen LCD</li> <li>• 1 Power on/off button with green color LED backlight</li> <li>• 1 Control key : FEED / PAUSE / CANCEL with dual color LED backlight: Ready (Green); Error (Red)</li> <li>• 1 Calibration button at rear panel</li> </ul>		
<b>Real Time Clock</b>		Standard		
<b>Environment</b>	<b>Power</b>	Auto Switching 100-240V AC, 50-60Hz		
	<b>Operation temperature</b>	41°F to 104°F (5°C to 40°C)		
<b>Humidity</b>	<b>Storage temperature</b>	-4°F to 140°F (-20°C to 60°C)		
	<b>Operation</b>	20-85%, non-condensing		
<b>Agency Approvals</b>	<b>Storage</b>	10-90%, non-condensing		
	<b>Length</b>	CE (EMC) · FCC Class A · CB · cUL · CCC · GOST-R · KC		
<b>Dimension</b>	<b>Height</b>	18.30" (465 mm)		
	<b>Width</b>	10.35" (263 mm)		
	<b>Weight</b>	12" (305 mm)		
<b>Options</b>		30 lbs (13.6 Kg), excluding consumables Cutter module Parallel port adaptor module (Centronic female 36-pin) Bluetooth module WiFi print server module (IEEE 802.11b/g/n) Applicator Interface (DSUB female 15-pin) External label roll holder for 10" (250 mm) O.D. label rolls External label rewinder Label Dispenser + Internal Rewinder (factory install) Core-free Ribbon Rewinder (factory install) RFID R/W module (project option)		

## Notice

Specifications are subject to change without notice. All company and/or product names are trademarks and/or registered trademarks of their respective owners.

\*\* Minimum print height and maximum print speed specification compliance can be dependent on non variables such as label type, thickness, spacing, liner construction, etc. Godex is pleased to test non minimum print height and maximum print speed capability.



## APPENDIX

## INTERFACE

- Parallel port

Handshaking : DSTB is sent to the printer, BUSY to the host computer  
 Interface : Parallel cable compatible with IBM computers  
 cable  
 Pinout : See below

Pin No.	Function	Transmitter
1	/Strobe	Computer / printer
2-9	Data 0-7	Computer
10	/Acknowledge	Printer
11	Busy	Printer
12	/Paper empty	Printer
13	/Select	Printer
14	/Auto-Linefeed	Computer / printer
15	N/C	
16	Signal Gnd	
17	Chassis Gnd	
18	+5V, max 500mA	
19-30	Signal Gnd	Computer
31	/Initialize	Computer / printer
32	/Error	Printer
33	Signal Ground	
34-35	N/C	
36	/Select-in	Computer / printer

- Serial Port

Default settings : Baud rate 9600, no parity, 8 data bits, 1 stop bit, XON/XOFF protocol and RTS/CTS

RS232 Housing(9-pin to 9-pin)				
DB9 Socket			DB9 Plug	
-	1	1	+5V, max 500mA	
RXD	2	2	TXD	
TXD	3	3	RXD	
DTR	4	4	N/C	
GND	5	5	GND	
DSR	6	6	RTS	
RTS	7	7	CTS	
CTS	8	8	RTS	
RI	9	9	N/C	
Computer			Printer	

## Notice

\* The total current to the serial port may not exceed 500mA.



ZX1200i/ZX1300i/ZX1600i  
USER MANUAL  
**APPENDIX**  
INTERFACE

---

- USB Port

Computer Connector : Type A

Pin NO.	1	2	3	4
Function	VBUS	D-	D+	GND

Connector Type : Type B

Pin NO.	1	2	3	4
Function	VBUS	D-	D+	GND


- Ethernet (RJ-45)

PIN NO.	FUNCTION
1	T+
2	T-
3	R+
4	N/C
5	N/C
6	R-
7	N/C
8	N/C


- Applicator

PIN NO.	FUNCTION
1	GND
2	+5V,max 500mA
3	START_PNT
4	SLEW_LABEL
5	PAUSE
6	REPRINT
7	+24V,max 1.5A
8	GND
9	RIBBON_LOW
10	SERV_REQ
11	END_PRINT
12	MEDIA_OUT
13	RIBBON_OUT
14	DATA_READY
15	OPT_FAULT


## Bluetooth Module Installation

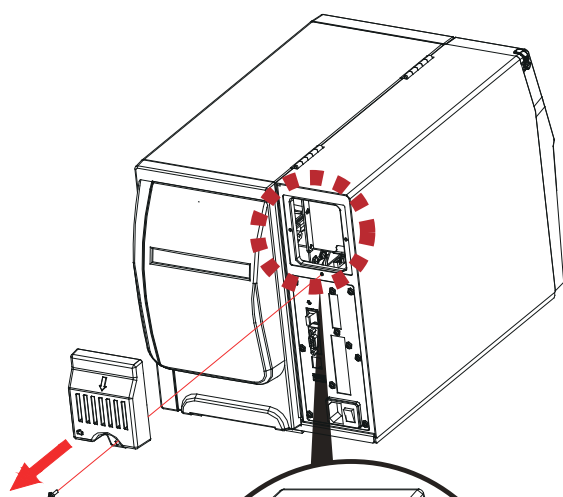


1. Remove the screws
2. Unattach the option cover

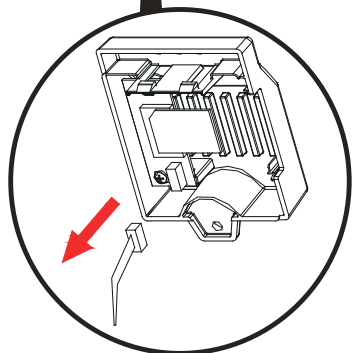

3. Unattach the connector

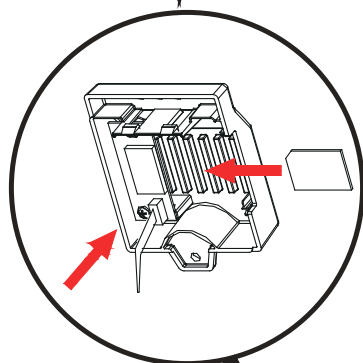

4. Insert Bluetooth Module
5. Plug the connector

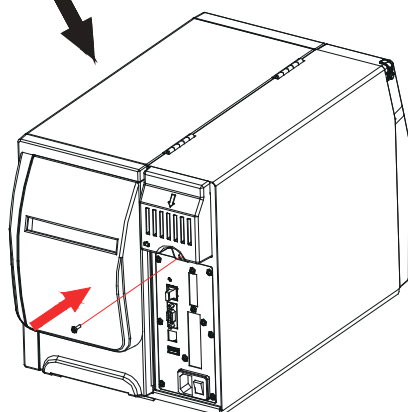

6. Put the option cover back and screw it

ZX1200i/ZX1300i/ZX1600i  
USER MANUAL  
**APPENDIX**  
INTERFACE

---

## Wifi Module Installation

1.Remove the screws


2.Unattach the option cover

3.Unattach the connector

4. Install Wifi Module


5. Plug the connector

6. Put the option cover back and screw it


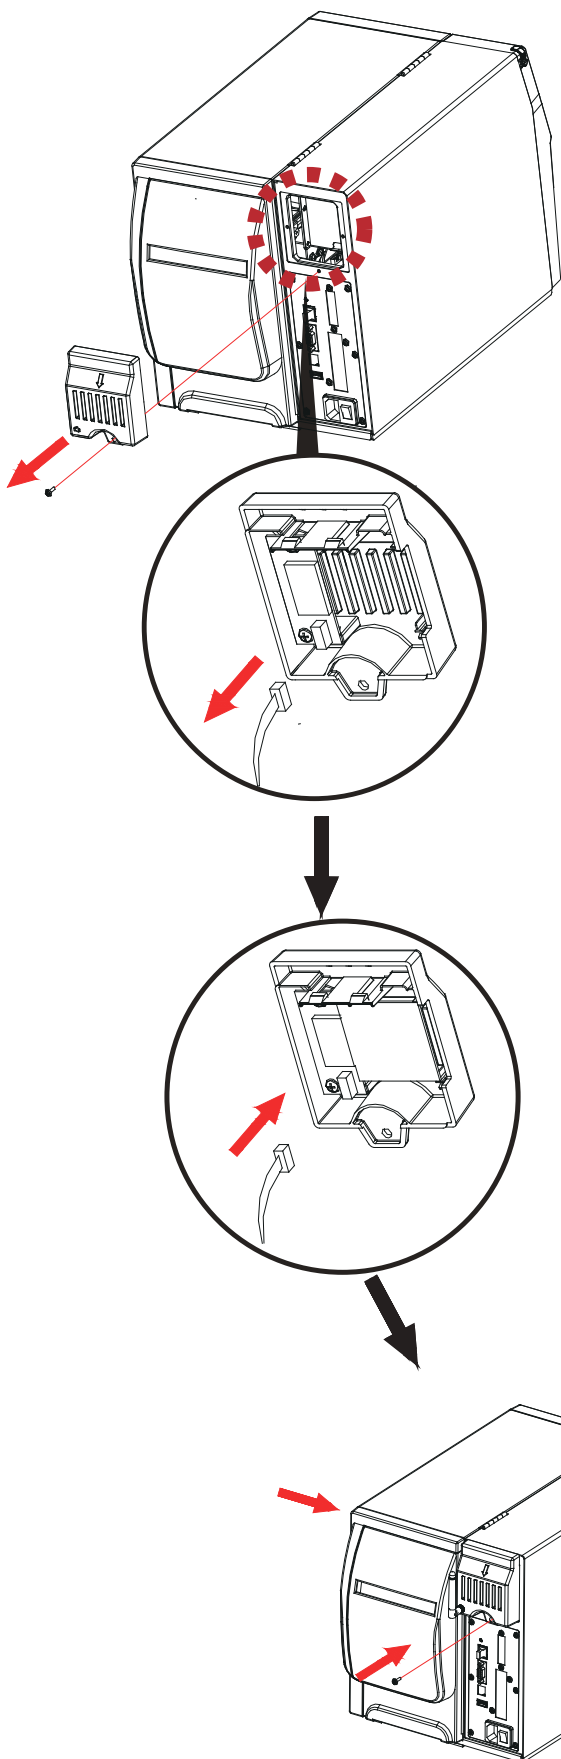


# APPENDIX

## Liner Rewind Operation

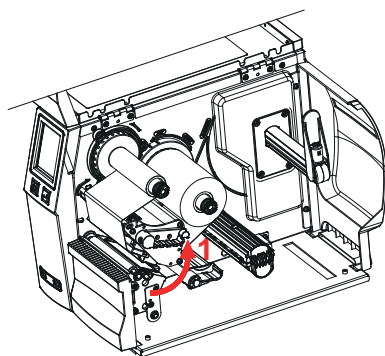


Step 1. Open TPH rotary arm

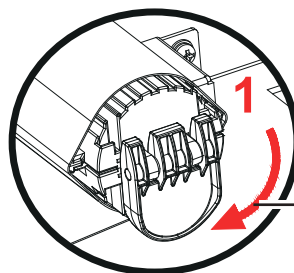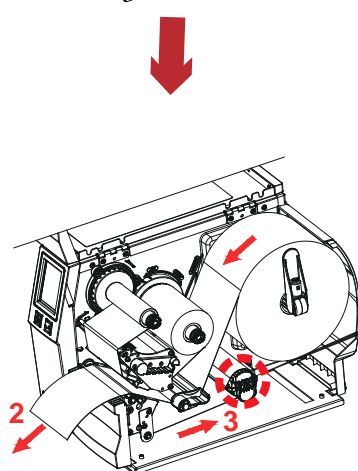


Check whether the rewinder knob is in closed position

Step 2. Install the label roll

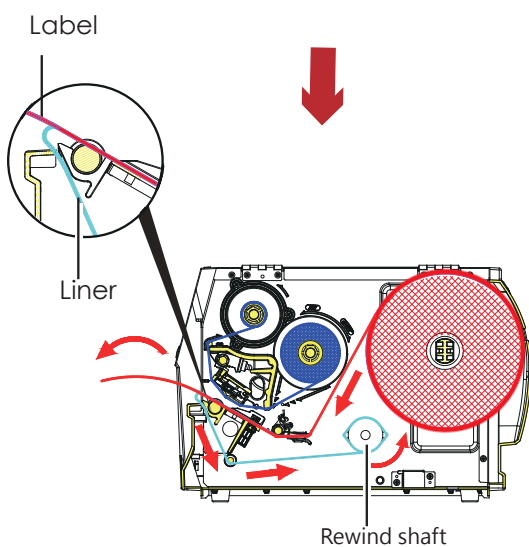

Step 3. Pull the Liner back to rewinder shaft and rotate it in 2~3 circles

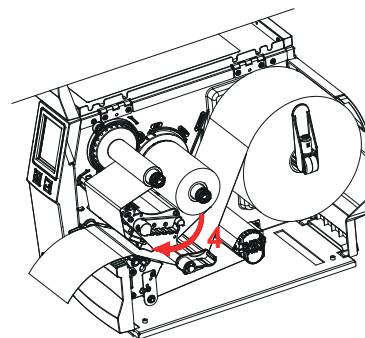


Step 4. Close TPH rotary arm and the printer is ready to print

### Note


- \* With the rewind installed, set the stop position in GoLabel (E value) and Driver to 6.
- \* Liner rewind can be operated without setting GoLabel and Driver.

# APPENDIX

## Remove Liner Roll

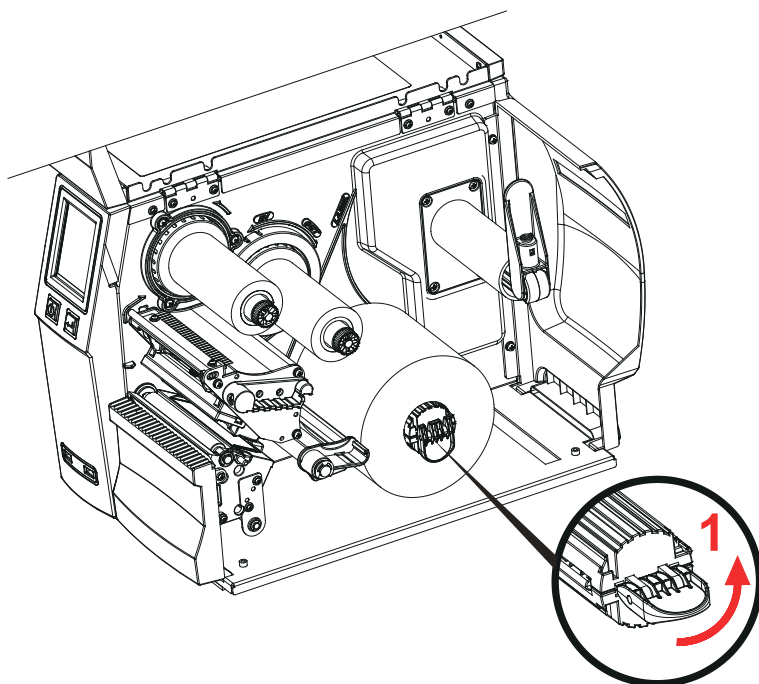

Step 1. Have the rewinder knob to straight position

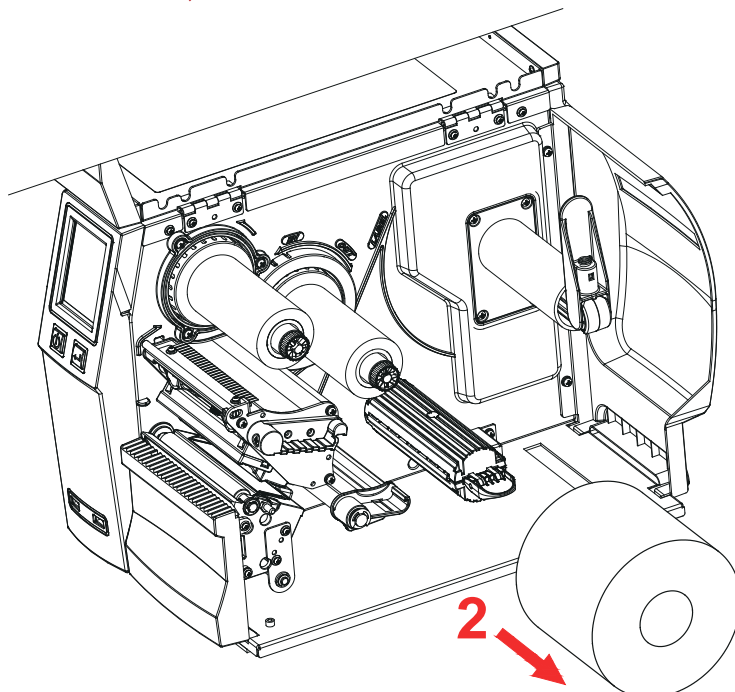

Step 2. Pull the Liner roll out

### Note

- \* The rewind is applied to liner only, and do not use it with other printed labels.
- \* If any adhesion is left on the label dispenser cover, Please clean it with soft fabric and denatured alcohol.

# Appendix

## Wi-Fi setting

---


### Steps for setting Wi-Fi module

Step 1. Power off the printer.

Step 2. Install the Wi-Fi module.

Note : Methods for installing Wi-Fi module, please refer to Wi-Fi module installation.

Step 3. Power on the printer and wait 15 seconds. The main manu will display gray Wi-Fi icon and it means that the Wi-Fi module is already detected by the printer, as the figure below indicates.

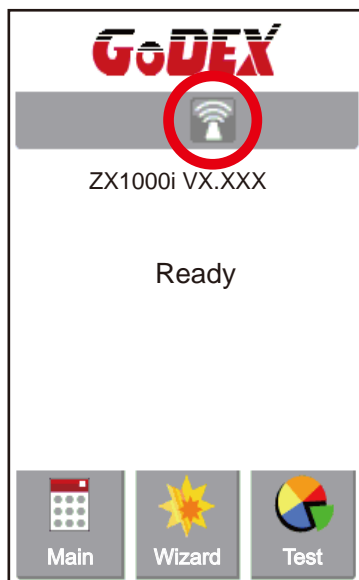

### Note

---

- \* The firmware version of the printer should be above V.2005, otherwise you can not use Wi-Fi function.
- \*\* GoLabel version should be above V1.12, otherwise you can not use Wi-Fi Tool function.
- \*\*\* When a Wi-Fi module is installed into a printer, the Ethernet of the printer will lose its function.

# Appendix

## Wi-Fi setting

## Steps for setting Access Point ( D-Link)

Step 1. Execute browser and log in the setting page of access point.

Step 2. Click "WIRELESS SETUP" on the left side of the setting page (red circle 1) and enter into AP setting page.

For the contents of setting, please refer to the figure below.

Step 3. Click "Save Settings" button after the Wi-Fi AP is completely set.

After approx.20 Seconds, the the setting of AP is stored and takes effect.

**DAP-1360** //

SETUP    ADVANCED    MAINTENANCE    STATUS    HELP

**WIRELESS SETUP**

LAN SETUP

**WIRELESS NETWORK**

Use this section to configure the wireless settings for your D-Link Access Point. Please note that changes made on this section may also need to be duplicated on your wireless client.

Save Settings    Don't Save Settings    **Save Settings**

**WIRELESS NETWORK SETTINGS :**

5    Enable Wireless : ☒ Always    Add New

Wireless Mode : Access Point    Site Survey

**Wireless Network Name : MXAP**    (Also called the SSID)

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Wireless Channel : 10

Enable Auto Channel Scan : ☐

Channel Width : Auto 20/40MHz

Visibility Status : ☐ (Also called Disable SSID Broadcast)

**WIRELESS SECURITY MODE :**

Security Mode : WPA-Personal

**WPA**

Use **WPA of WPA2** for legacy clients while maintaining high security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For security use **WPA2 Only** mode. This mode uses AES(CCM) cipher and legacy stations are not supported. To achieve better wireless performance use WPA2 Only security mode (or in other words AES cipher)

WPA Mode : WPA only

Cipher Type : AES

**PRE-SHARED KEY**

Enter an 8 to 63 character alphanumeric pass-phrase. For good security it should be a random length and should not be a commonly known phrase.

Pre-Shared Key : 8LQKNM6B0CFB7JIDGDA7J53QMB

**Helpful Hints..**

**Wireless Mode :**  
Select a function mode to configure your wireless network. Function wireless modes include Access Point, AP Client, Bridge, Bridge with AP, Repeater, WISP Client Router and WISP Repeater. Function wireless modes are designed to support various wireless network topologies and applications.

**Wireless Network Name :**  
Changing the Network Name is the first step in securing your wireless network. We recommend that you change it to a familiar name that does not contain any personal information.

**Hidden Wireless :**  
Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they perform scan to see what's available. In order for your wireless devices to connect to your network, you will need to enter the Network Name on each device.

**Security Keys :**  
If you have enabled Wireless Security, make sure you write down WEP Key or Passphrase that you have configured. You will need to enter this information on any wireless device that you connect to your wireless network.

**Bridge setting :**  
If you want to bridge with the other Bridge AP, please write down the MAC address of the Bridge AP. Besides, you also need to write down the MAC address of the other Bridge AP.


## Methods for setting Wi-Fi module

### How to execute Wi-Fi Tool

Step 1. Execute GoLabel Version V1.12

Step 2. Select desired ZX1000i printer model, as the figure below indicates.

Step 3. Click "Save" , as the figure below indicates.

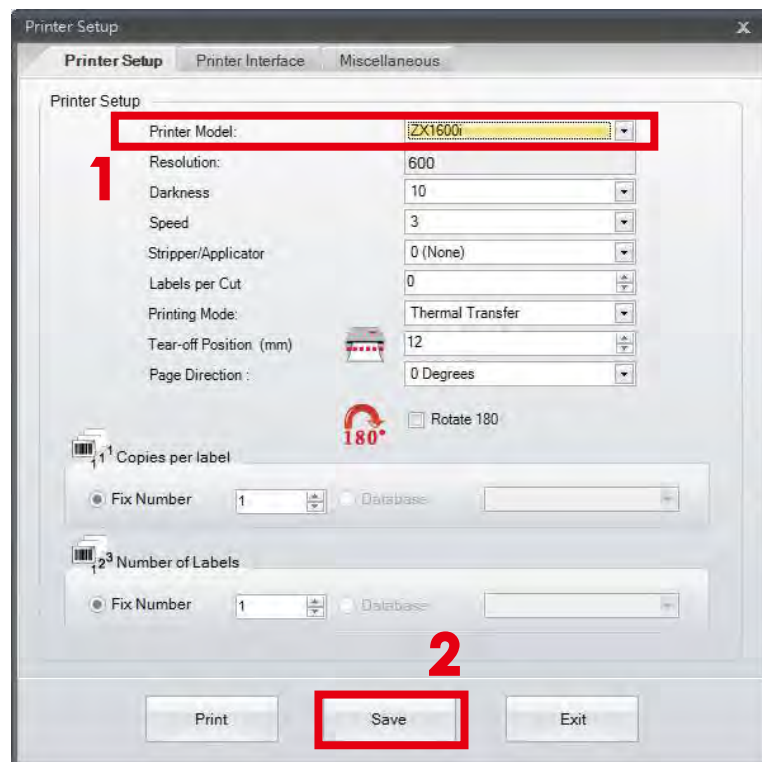

Step 4. Execute Wi-Fi Tool, as the figure below indicates.






## How to set the corresponding items between Wi-Fi Tool and AP


Step 1. Set Wi-Fi parameters, as the figure below indicates.

Step 2. Click "Set Data" button after the parameters are completely set.

Approx. 5 seconds later, the printer will automatically reboot.

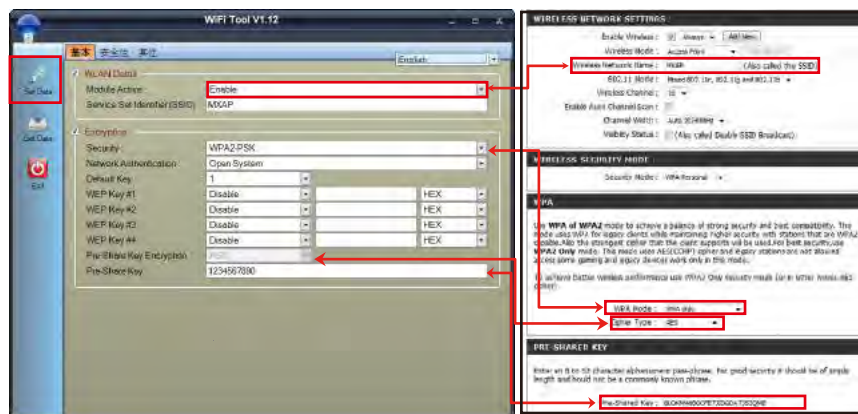

Step 3. Approx. 15 seconds, LCD panel will display gray Wi-Fi icon, and it means that the Wi-Fi module is already detected by the printer.

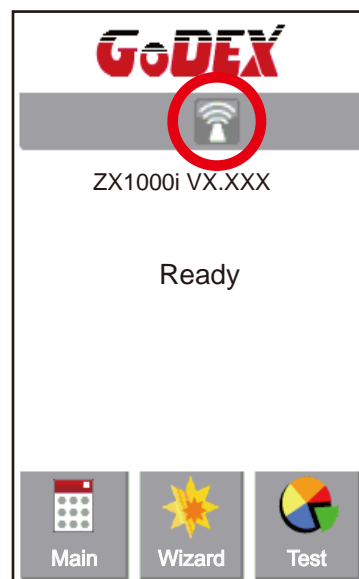

### Note

\* The Setting content of Wi-Fi Tool should be corresponding with the setting of AP.


# Appendix

## Wi-Fi setting

### Check whether the Wi-Fi connection is successfully created

After 8~10 seconds, the Wi-Fi icon' s will change from gray to purple


and it means that the Wi-Fi connection is successfully created, as the figures below indicate.

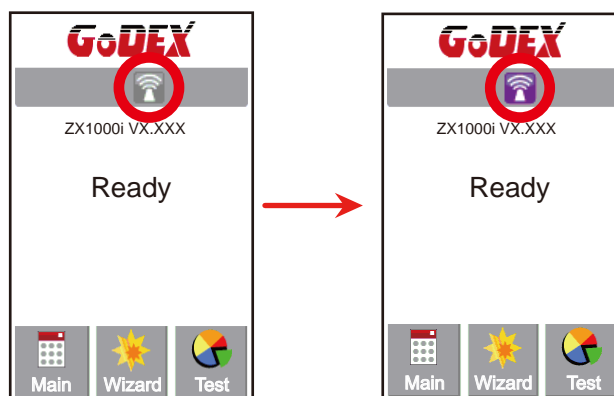


### Check the related information of LAN

Step 1. Select "Main" on the bottom left Corner of LCD panel.

Step 2. Select "Devices"

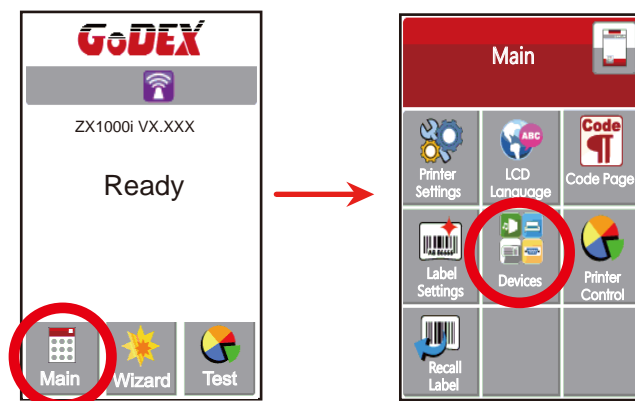

Step 3. Select "LAN Settings" and the display indicates the related information of LAN

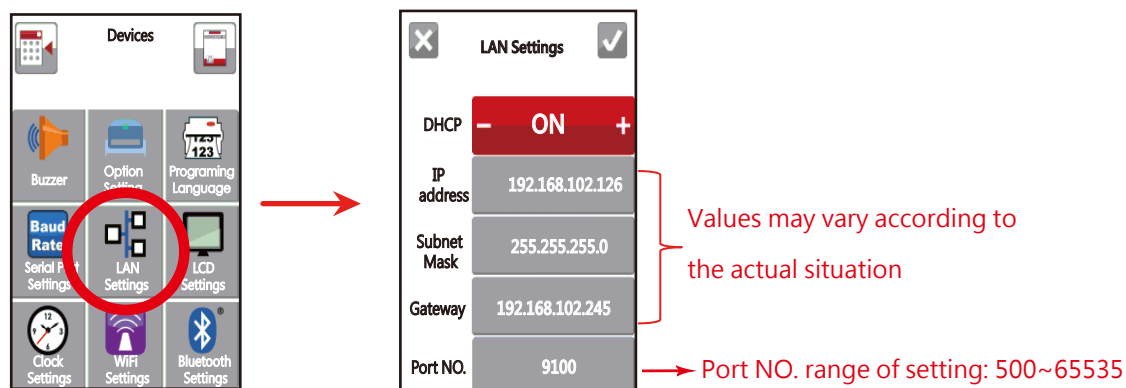

# Appendix

## Wi-Fi setting


### How to create a connection between computer and printer via Wi-Fi

Step 1. Execute GoLabel Version V1.12

Step 2. Select "Printer Setup"

Step 3. Select "Printer Interface" and Click "LAN Port", and enter IP address, as the figure below indicates.

Step 4. Click "Save"

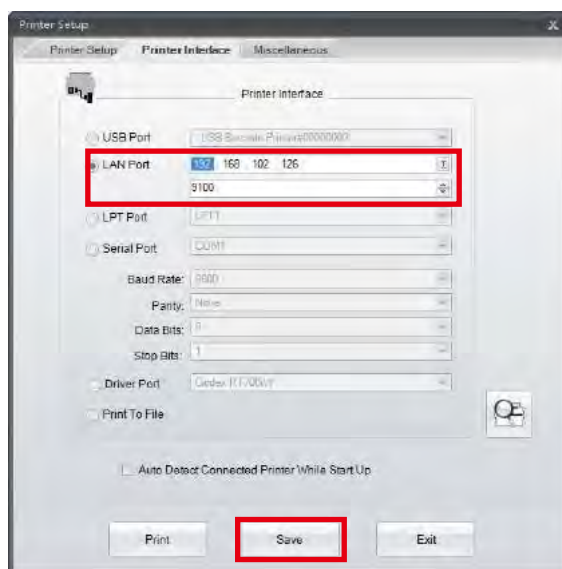

Step 5. Select "Virtual Terminal" and enter "~B" into "Command field", and then click "Send".

The Wi-Fi connection is working if the printer return related information automatically, as the figure below indicates.

