

Network Management Card (Network-MS)

User Manual



Network Management Card (Network-MS)

User Manual

Contents

1	EATON NETWORK SOLUTION	6
1.1	GENERAL PRESENTATION	6
1.1.1	Connecting the UPS to the Ethernet network	7
1.1.2	Protection of the computers/servers	7
1.1.3	Supervision of the UPSs over the network	8
1.1.4	Connection	8
1.2	PRESENTATION OF THE NETWORK MANAGEMENT CARD (NMC)	10
1.2.1	Compatibility with UPSs	10
1.2.2	Direct sending of E-mail	11
1.2.3	Sending text messages (SMS)	11
1.2.4	Compatibility with the Network Management Systems (NMS) – Trap sending	11
1.2.5	Environment Sensor (option)	11
1.3	TECHNICAL DATA	12
1.3.1	Hardware characteristics	12
1.3.2	EMC Compatibility	12
1.3.3	Configuration	12
1.3.4	Administration	13
1.3.5	Network	13
1.3.6	Environment sensor	14
1.3.7	MIB (Management Information Base)	14
1.3.8	Default parameters	15
2	INSTALLATION	17
2.1	UNPACKING AND CHECK ON CONTENTS	17
2.2	INDICATIONS	17
2.3	INSTALLATION IN THE UPS	18
2.4	SENSOR INSTALLATION (OPTION)	19
3	CONFIGURATION	20
3.1	CONFIGURE IP PARAMETERS	20
3.1.1	Your network is equipped with a DHCPv4 server	21
3.1.2	Your network is not equipped with a DHCPv4 server	22
3.1.3	IPv6 Parameters	22
3.2	TEST AFTER CONFIGURATION	22
4	SUPERVISION AND ADMINISTRATION BY BROWSER	23
4.1	OPTIMISING THE PERFORMANCE OF YOUR BROWSER	23
4.2	UPS	24
4.2.1	UPS properties page	24

Network Management Card (Network-MS) User Manual

4.2.2	On-line help	37
4.2.3	Logging In	38
4.2.4	UPS control	39
4.2.5	UPS weekly schedule programming	41
4.2.6	Shutdown parameters	42
4.2.7	Measurements	44
4.2.8	Event log	45
4.2.9	System log	46
4.3	NOTIFICATION	47
4.3.1	Email Notification	47
4.3.2	E-mail Message Settings	49
4.4	CONFIGURATION	51
4.4.1	Network settings	51
4.4.2	RADIUS	54
4.4.3	LDAP	56
4.4.4	System	59
4.4.5	Notified Applications	60
4.4.6	Central shutdown configuration	63
4.4.7	Access control	64
4.4.8	SNMP Setting	66
4.4.9	Date and time	68
4.4.10	Firmware upload	70
4.5	ENVIRONMENT SENSOR (OPTION)	71
4.5.1	Characteristics	71
4.5.2	Environment Status	72
4.5.3	Environment Settings	73
4.5.4	Log	75
5	SERVER PROTECTION	76
5.1	SET-UP OF THE SHUTDOWN PARAMETERS	76
5.1.1	Shutdown criteria managed by the Network Management Card	76
5.1.2	Controlled outlets	79
5.1.3	Protection of a server connected to a controlled outlet	79
5.2	THE DIFFERENT SERVER AND UPS SHUTDOWN SEQUENCES	81
5.2.1	Extended power outage, shutdown initiated by the Shutdown Timer (Shutdown after)	81
5.2.2	Extended power outage, shutdown initiated by the "Low battery power" message	81
5.2.3	Case of power restoration before the end of the "shutdown duration" counter	82
5.3	SHUTDOWN MANAGEMENT WITH 2 NMC BOARDS	83
5.3.1	Shutdown Duration	83
5.3.2	Settings	83
6	TELNET/SSH/CLI INTERFACES	84

Network Management Card (Network-MS)

User Manual

6.1	INTRODUCTION	84
6.2	SETTINGS LIST	84
6.2.1	Network settings	84
6.2.2	System settings	85
6.2.3	Trap receivers	85
6.2.4	Access control	85
6.2.5	Shutdown settings	85
6.2.6	Authentication settings	86
6.2.7	RADIUS settings	86
6.2.8	LDAP settings	86
6.2.9	SNMP settings	87
6.2.10	Date and time	87
6.2.11	Environment settings	87
6.3	MENU INTERFACE	88
6.3.1	Tree description	89
6.3.2	Main menu	90
6.3.3	Reset item	91
6.3.4	Network menu	91
6.3.5	Trap receivers menu	93
6.3.6	System menu	94
6.3.7	Shutdown menu	94
6.3.8	Access Control menu	95
6.3.9	Date and time menu	96
6.3.10	Environment menu	96
6.3.11	Authentication settings	98
6.3.12	Return to default Login/Password	100
6.3.13	Return to default configuration	100
6.4	COMMAND LINE INTERFACE	100
6.4.1	Generic command	101
6.4.2	Network settings	102
6.4.3	Trap receivers	105
6.4.4	System settings	106
6.4.5	Shutdown settings	107
6.4.6	Access control settings	108
6.4.7	Authentication settings	109
6.4.8	Date and time settings	113
6.4.9	Environment settings	114
6.5	CONSTRAINTS/LIMITATIONS	117
7	CONFIGURATION VIA RS232	118
7.1	CHOICE 1: RESTART / RESET	119

Network Management Card (Network-MS)

User Manual

7.2	CHOICE 2: NETWORK CONFIGURATION	119
7.2.1	Choice 1: Read IPv4&IPv6 Network settings	119
7.2.2	Choice 2: Modify IPv4 Network settings	120
7.2.3	Choice 3: Set Ethernet speed	120
7.3	CHOICE 3: LOST PASSWORD / SET LOGIN PASSWORD TO DEFAULT	121
7.4	CHOICE 4: RETURN TO DEFAULT CONFIGURATION	122
8	APPENDIX	123
8.1	TABLES OF ALARMS AND EVENTS	123
8.1.1	Table of alarms	123
8.1.2	Table of UPS events	126
8.1.3	Table of system alarms	129
8.2	SNMP OBJECTS	130
8.2.1	IETF MIB	130
8.2.2	EATON Pulsar MIB (ex MGE)	130
8.2.3	TRAPS table: (1.3.6.1.4.1.705.1.11)	134
8.2.4	EATON Powerware MIB	135
8.3	AUTHENTICATION CONFIGURATION EXAMPLE	138
8.3.1	RADIUS	138
8.3.2	LDAP	139
9	GLOSSARY	141

1 EATON Network Solution

1.1 General Presentation

EATON Network Solution:

- Provides information on events concerning the supply of power to the computers connected to your network,
- Carries out automatic shutdown of computer systems,
- Monitors and controls all the UPSs connected to the network.

EATON Network Solution provides 3 main functions:

- Supervision of the UPSs over the Network: Web browser, Intelligent Power Manager, or SNMP Network Management System (NMS).
- Protection of the computers (multi-platform) with Intelligent Power Protector
- Connexion of the UPS to the Network.

Network Management Card (Network-MS) User Manual

1.1.1 Connecting the UPS to the Ethernet network

This function can be performed through network Cards inserted in the UPS (Network Management Card). Also a software "agent" running on a nearby PC that is called the IPP Shutdown controller feature can be used. IPP Shutdown controller feature allows USB or Serial connected UPS to be seen on the network through the PC.

The Network Management Card or Shutdown Controller:

- Manages communication with the UPS (as well as local protection of the machine on which Proxy is installed).
- Periodically accesses the information concerning the UPS.
- Makes this information available to the connected applications (Intelligent Power Protector, Web Browser, Network Management Systems, Intelligent Power Manager).
- Sends notifications on certain events.

Operation may be in standard secure mode (the default mode) or in SSL secured mode (Secure Socket Layer SSL).

1.1.2 Protection of the computers/servers

This function is performed by **Intelligent Power Protector** installed on each of the computers to be protected. Note that Intelligent Power Protector are available on several Operating Systems.

Protection applications:

- Continuously gets information from the **Network Management Card**/Proxy connected to the UPS.
- Warns administrators and users if AC power fails and proceeds to a graceful system shutdown before the end of battery backup power is reached.

Network Management Card (Network-MS) User Manual


1.1.3 Supervision of the UPSs over the network

Depending on your needs, you can either use:

- Internet browser to monitor each UPS, as IPP Shutdown Controller and Management Card includes a Web server
- Company's standard Network Management System (HP-Openview, CA Unicenter, HP Insight Manager, IBM Tivoli Netview)

To simplify integration of EATON UPSs, use one of the Network Management System Kits for EATON devices. These kits are available on the Software Suite CD-ROM or on the <http://powerquality.eaton.com> website.

- The supervisor "Intelligent Power Manager".

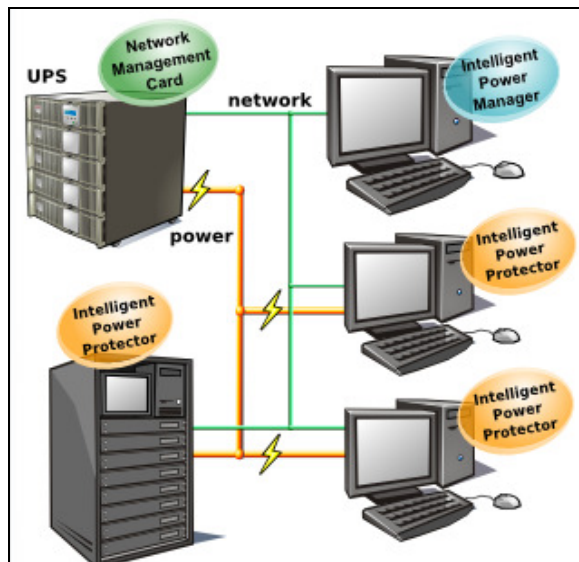

1.1.4 Connection

Before installing the Network Solution, the UPS must be set up as indicated in the steps below.

Shut down the computers to be protected by the UPS.

Connect the UPS to a wall outlet. (For UPSs above 3kVA, please refer to the UPS installation manual).

Connect the power cord of each computer to an outlet on the UPS. (For more details, please refer to the UPS installation manual)

Network Management Card (Network-MS) User Manual

1.1.4.1 How to connect UPS / agent / network:

Insert the optional NMC communication card in the UPS and connect the UPS to the computer network.
Start the UPS, then the computers.

1.1.4.2 Setting up the protection:

Set up the Network Management Card (see user manual).

Install and configure the protection application on all machines that are to be protected by the UPS:

- Intelligent Power Protector for EATON Pulsar series UPS: The software components for each platform and the user manuals are on the Software Suite CD or available at <http://powerquality.eaton.com>

Network Management Card (Network-MS) User Manual

1.2 Presentation of the Network Management Card (NMC)

1.2.1 Compatibility with UPSs

The Minislot Network Management Card is compatible with the UPS listed into the compatibility list:

Pulsar MX	All models
MX, MX frame	All models
Pulsar M 2200 / 3000	All models
Pulsar 700 / 1000 / 1500	All models
EX 700 / 1000 / 1500 / 2200 / 3000	All models
Evolution 650 / 850 / 1150 / 1550 / 2000	All models
Evolution S 1250 / 1750 / 2500 / 3000	All models
Pulsar Evolution 500 / 800 / 1100	Technical level 06 or higher
Pulsar Evolution 2200 / 3000	Technical level 05 or higher
Pulsar Evolution 1500	Technical level 05 or higher
EXtreme C 700 / 1000 / 1500	Technical level B2 or higher
EXtreme C 2200 - 3200	Technical level 02 or higher
Pulsar EX 700 / 1000 / 1500 RT (US ^o)	Technical level 03 or higher
Pulsar EX 2200 / 3200 (US ^o)	Technical level 09 or higher
EX 5 / 7 / 11 RT	Equipped with Minislot port.
Powerware 5130	All models
9120	All models
9130	All models
9135	All models
9170	All models
9E 20000 / 30000 / 40000 / 60000 / 80000 / 100000 / 120000 / 160000 / 200000	All models
9P 50000 / 100000 / 150000 / 200000	All models
5PX 1000 / 1500 / 2000 / 2200 / 3000	All models
5P 550 / 650 / 750 / 850 / 1000 / 1150 / 1500 / 1550 / 2200 / 3000	All models
93PM 50 / 100 / 150 / 200 / 250 / 300 / 350 / 400 / 450 / 500 / 550 / 600 / 650 / 700 / 750	All models
9SX 5000 / 6000 / 8000 / 11000	All models
9PX 5000 / 6000 / 8000 / 11000	All models
9PX 6000 SP / 8000 SP / 10000 SP	All models
9PX 6000i 3 :1 / 8000i 3 :1 / 11000i 3:1	All models

Network Management Card acquires information regarding the operation status of the UPS systems and provides remote control of the system through the ETHERNET network from any SNMP administration station or Web browser.

Network Management Card (Network-MS) User Manual

NMC also supplies alarms to the Intelligent Power Protector in order to trigger shutdowns or manage other automatic actions on protected servers.

1.2.2 Direct sending of E-mail

When a UPS event occurs, the Network Management Card can directly notify up to 4 addresses by e-mail. (see E-mail Notification and [E-mail message settings](#))

1.2.3 Sending text messages (SMS)

SMS notification requires the use of a third-party application that converts emails to SMS. The card offers the possibility of redirecting UPS alarms to an e-mail server. The format of these e-mails is compatible with mobile telephone e-mail/SMS transfer systems proposed by ISPs. The format to be used depends on the service provider.

1.2.4 Compatibility with the Network Management Systems (NMS) – Trap sending

The Network Management Cards are compatible with the major Network Management Systems (IBM Tivoli, CA Unicenter, HP Insight Manager). The Software Suite offering includes the necessary SNMP plug-ins to allow an easy integration in the NMS. Events are notified by SNMP trap.

- NMS can subscribe on page [“Notified Applications”](#)
- The trap list is given in the [appendix](#).

1.2.5 Environment Sensor (option)

The optional [Environment Sensor](#) (EMP) solution can be connected to the Card Settings port of the Network Management Cards.

Environment Sensor enables measurement of temperature and humidity around the UPS, allows managing external alarms via 2 dry contacts and notification of alarms according to pre-programmed thresholds. (see [Environment Status](#) and [Environment Configuration](#))

1.3 Technical data

1.3.1 Hardware characteristics

Dimensions

- Dimensions (L x l x H) 132 x 66 x 42 mm
- Weight (gr) 70 g

Storage

- Storage temperature -10 °C to 70 °C

Ambient conditions

- Operating temperature 0 °C to 40 °C
- Ambient humidity 90 % RH max without condensation
- ROHS 100 % compatible

1.3.2 EMC Compatibility

When correctly installed and used in accordance with the manufacturer's instructions, the Network ManagementCard complies with the following standards:

- Safety for ATI: IEC/EN 60950-1 2005
- EMC: EN 61000-6-2 (2002), EN 61000-6-3 (2002). IEC/EN 62040-2 (2002).

As per European directives:

- Low voltage: 73/23/EEC and 93/68/EEC
- EMC: 89/336/EEC and 93/68/EEC.

1.3.3 Configuration

- The NMC Card can be easily installed while the UPS is online, maintaining the highest system availability

The user can configure the card with one of the following means:

- Web browser
- Telnet/SSH/CLI
- Local serial link (network parameters)
- BOOTP/DHCP (network parameters).

Network Management Card (Network-MS) User Manual

1.3.4 Administration

- NEW features:
 - External User Authentication from RADIUS or LDAP
- Up to 35 workstations (in TCP connected mode) or up to 100(in UDP broadcasted mode) protected by Intelligent Power Protector.
- Up to 5 browsers connected at the same time (3 in SSL).
- Minimum recommended browser versions: Internet Explorer 8, Mozilla Firefox 3.6, Chrome.
- E-mail sending configurable according to UPS alarms and transmission of a periodical report.
- Control of UPS on/off switching via the HTML interface.
- Adjustment and control of PowerShare outlets via the HTML interface, sequential starting of the installation and optimisation of backup time by shutting down non-priority systems.
- Automatic data and time adjustment via NTP server.
- Protection by encrypted password.
- Protection by secure SSL connection.
- Backup logs in the non-volatile memory.
- Languages available: English / French/ Spanish / German / Italian / Chinese Traditional / Chinese Simplified / Japanese / Portuguese / Russian / Korean / Czech.
- On-line help in English available for each page.
- Card firmware update via the network.
- Card Mass settings via the network with Intelligent Power Manager.
- Firmware Mass Upgrade via the network with Intelligent Power Manager.
- Ability to change the SMTP, SNMP and TRAP ports.

1.3.5 Network

Fast ETHERNET 10/100 Mbits compatibility with auto-negotiation on the RJ45 outlet.

Compatible with 1Gbits networks in 100 Mbits mode

1.3.5.1 List of ports used

Protocol	Direction	Type	Port Number
SSH	in	TCP	22
TELNET	in	TCP	23
SMTP	out	TCP	25*
HTML	out	TCP	80
NTP	in/out	UDP	68, 67
BootP, DHCP	in/out	UDP	68, 67
SNMP V1 & V3	in/out	UDP	161*
TRAP SNMP	in/out	UDP	162*
SSL	out	TCP	443

Network Management Card (Network-MS) User Manual

IPP in connected mode	in/out	TCP	5000
IPP in UDP broadcast mode	in/out	UDP	4679, 4680R
RADIUS	out	UDP	1812*
LDAP	out	TCP	389*

* These ports can be changed by the user, the values shown are the defaults defined by the standards.

1.3.6 Environment sensor

- Temperature measurement from 0 to 70 °C with +/- 1 °C accuracy.
- Measurement of humidity from 0 to 100 % with +/- 6 % accuracy.
- Min / max time-stamped function for temperature and humidity.
- Choice of temperature readings in Celsius or Fahrenheit.
- High and low thresholds, hysteresis and offset adjustable via Web interface.
- Possibility of notification of status changes by e-mail, SMS or SNMP trap.
SMS notification requires the use of a third-party application that converts emails to SMS.
- Position detection of 2 dry contacts (maximum sensor/contact distance: 20 m).
- Name and status of each configurable contact.
- Recording of events and measurements in the card log
- Possibility of shutting down the installation in the event of a threshold being exceeded or on opening / closure of a dry contact
- Connection to the card with straight shielded CAT5 RJ45 network cables (maximum card/sensor distance: 10 m)

1.3.7 MIB (Management Information Base)

- The card is Compatible with following MIBs:
- MIB II (RFC 1213)
- Internet Engineering Task Force (IETF) Standard UPS MIB (RFC 1628)
- EATON Pulsar MIB (ex MGE) V1.7
- EATON Powerware MIB (PowerMib)
-
- See the [appendix](#) Chapter

Network Management Card (Network-MS) User Manual

1.3.8 Default parameters

Function	Parameter	Default value	Possible value
Network	IP address Subnet mask Gateway Address BOOTP/DHCP IPv6 Enabled IPv6 Auto Config Enabled Firmware Upload SMTP server Port	192.168.1.2 255.255.0.0 0.0.0.0 Enabled Disabled Disabled Enabled smtpserver 25	Network IP address Network IP address Network IP address Active / Deactivated Active / Deactivated Active / Deactivated Active / Deactivated 49 characters maximum 1 to 65535
RADIUS	Port Time Out Retry Number	1812 10 3	1 to 65535 1 to 9999 1 to 9999
LDAP	Authentication Mechanism User Search Authorization Mode Port	Simple Anonymous None 389	Simple or by digest MD5 Anonymous or by a dedicated LDAP user None/by attribute/by group 1 to 65535
System	UPS Contact UPS Location History log interval (sec.) Environment log interval (sec.) Default Language	Computer Room Manager Computer Room 60 300 English	49 characters maximum 31 characters maximum 10 to 99999 sec. 10 to 99999 sec. English / French / Spanish / German / Italian / Chinese Traditional / Chinese Simplified / Japanese / Portuguese / Russian / Korean / Czech
Notified Application table		empty	NA
Access control	User name Password Telnet access enabled Telnet security enabled Console interface External Authentication Authentication Order Session duration without activity Maximum sessions duration	admin admin Enabled Disabled Menu None Local First, then External 300 seconds 9999 seconds	10 characters maximum 10 characters maximum Enabled/Disabled Enabled/Disabled Menu/CLI

Network Management Card (Network-MS) User Manual

SNMP	Community name read	public	32 characters maximum
	SNMP port	161	1 to 65535
	Trap port	162	1 to 65535
	SNMP Version	V1&V3	Disabled, V1, V3, V1&V3
	Read-Only User	readuser	1 character minimum, 32 characters maximum
	Read-Only Security Level	Authentication	None, Authentication, Authentication&Privacy
	Read-Only Password	readuser	8 characters minimum, 24 characters maximum
	Read-Write User	wirteuser	1 character minimum, 32 characters maximum
	Read-Write Security Level	Authentication&Privacy	None, Authentication, Authentication&Privacy
	Read-Write Password	writeuser	8 characters minimum, 24 characters maximum
	Notification Username	notifuser	8 characters minimum, 24 characters maximum
Date and time	Date and time adjustment	Accept automatic update from IPP or IPM	Synchronise with an NTP server Accept automatic update from NSM or EPM Synchronise manually
	NTP server	ntpserver	49 characters maximum
Serial link	Speed	9600 baud	Not configurable
	Data bits	8	Not configurable
	Stop bits	1	Not configurable
	Parity	without	Not configurable
	Flow control	without	Not configurable


Network Management Card (Network-MS) User Manual

2 Installation


2.1 Unpacking and check on contents

The installation kit contents:

- A Network Management Card (Network-MS)
- A serial communication cable for configuration (**720-C2270-00**)
- Installation manual (**34003905**)

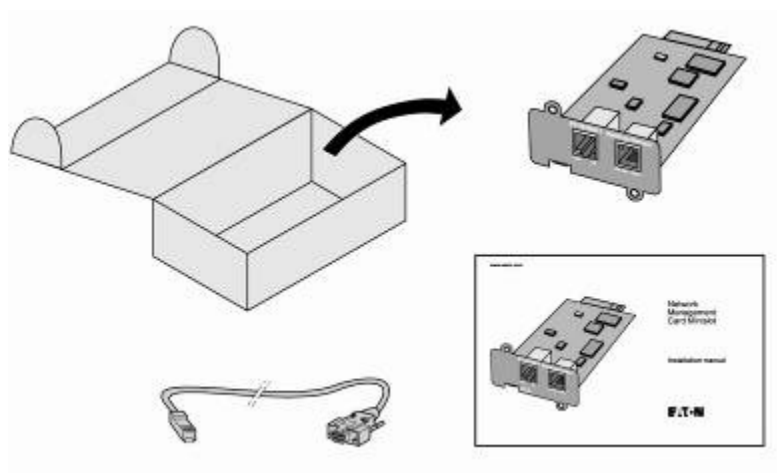

2.2 Indications

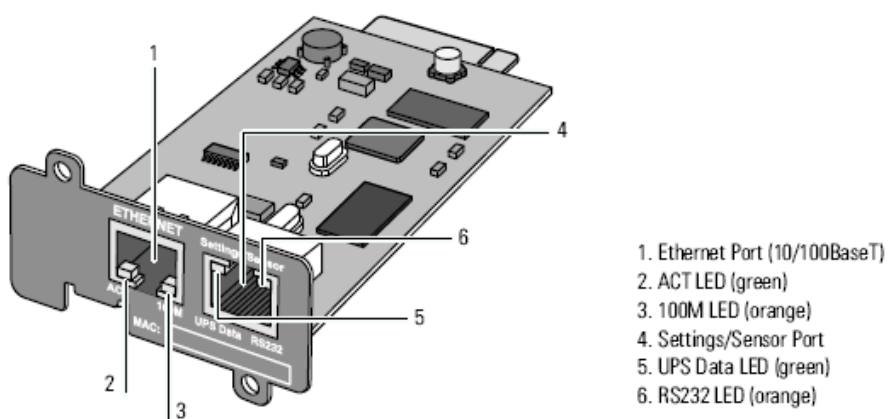

Network Management Card (Network-MS) User Manual

Ethernet Port

LED	Colour	Activity	Description
ACT	Green	• Off	• Card not connected to the network.
		• On	• Card connected to the network but without activity
		• Flashing	• Port is active in receiving / transmission
100M	Orange	• Off	• Port operating at 10Mbps/s.
		• On	• Port operating at 100Mbps/s.


Settings/Sensor Port

LED	Colour	Activity	Description
UPS Data	Green	• Off	• Card startup in progress.
		• On	• Communication with UPS in progress
		• Flashing	• Normal operation. Communication with the UPS is operational
RS232	Orange	• Off	• Configuration menu is active
		• On	• Normal operation. Configuration menu is deactivated
		• Flashing	• Communication with the Environment Sensor (option).

2.3 Installation in the UPS

The **Network Management Card (Network-MS)** is "hot-swappable". It can be installed in all UPSs of the EATON Pulsar series or EATON Powerware series equipped with a Minislot without having to shut it down.

- On the UPS, remove the cover from the Minislot

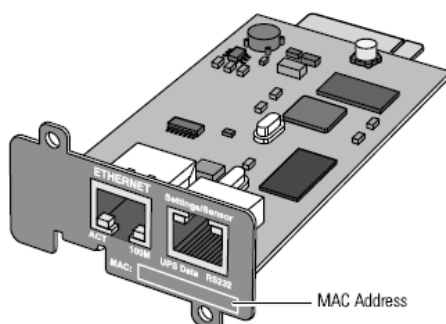

- Insert and tighten the card's retaining screws
- Connect the ETHERNET cable
- Wait 2min 30s. The card is completely operational when the green UPS Data LED flashes continuously.

Network Management Card (Network-MS) User Manual


2.4 Sensor installation (option)

The Environment sensor is available as an option for the Network Management Card and is available from EATON (EMP).

The sensor allows remote monitoring of the UPS's environment through regular measurements: temperature, humidity, status of two external contacts. It also enables notification of alarms (e-mail, trap SNMP) according to pre-programmed thresholds.

It is connected to the Service port (Settings/Sensor) directly on the Network Management Card with a standard Ethernet cable (10 meters maximum).

Recognition is automatic. Supervision and configuration are performed via a menu that can be accessed directly from the home page.

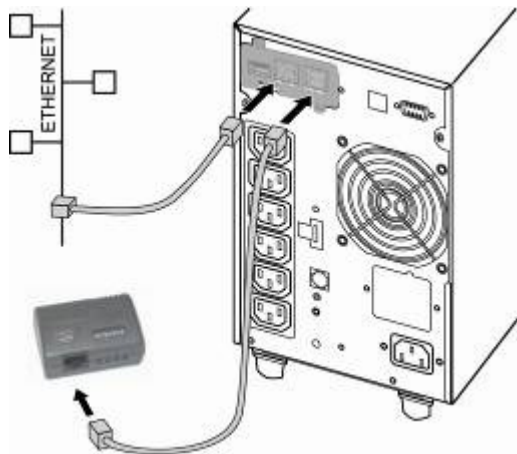

3 Configuration

3.1 Configure IP parameters

Once the card has started:

Connect one end of the cable (34003918) to the Service port.

Connect the other end of the cable to the COM port (IOIOI) of a PC.

Launch a HyperTerminal™ type emulator with the following configuration:

Speed: 9600

Data bits: 8

Parity: none

Stop bits: 1

Flow control: none

"Locally reproduce the characters entered" option: deactivated.

Enter admin. The main menu is displayed:

```
-----  
EATON  
NETWORK MANAGEMENT CARD  
-----  
1 : Reset  
2 : Network configuration  
3 : Set Login Password to Default  
4 : Return to Default Configuration  
0 : Exit  
-----
```

3.1.1 Your network is equipped with a DHCPv4 server

The card is configured by default with this service activated.

The card automatically collects IP parameters.

To know the IP parameters, type 2, the next menu is displayed:

```
-----  
Network settings  
-----  
1 : Read Network settings  
2 : Modify Network settings  
3 : Set Ethernet speed  
0 : Exit  
-----
```

Then type 1. The menu is displayed:

```
Network configuration :  
MAC address : 00:20:85:FD:1C:07  
Mode : Static IP  
IP address : xxx.xxx.xxx.xxx  
Subnet mask : xxx.xxx.xxx.xxx  
Gateway : xxx.xxx.xxx.xxx  
Link Local IPv6 address : xxxx::xxxx:xxxx:xxxx:xxxx /xx  
Global IPv6 address : xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx /xx  
Global IPv6 address : xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx /xx
```

Note the IP address.

The IPv6 parameters are only read only.

To exit, enter 0 then 0. The card is operational.

Note: As long as the card is not connected to the network, it continuously attempts to make connection. Once the connection has been established, the operational mode presented in the table above becomes effective.

3.1.2 Your network is not equipped with a DHCPv4 server

In the main menu enter 2, then 2 again. The menu is displayed:

Follow the instructions and enter the static IP parameters.

At the end of the menu, wait for the "Done" message to be displayed indicating that the IP parameters have been saved.

```
-----
Network settings
-----

1 : Read Network settings
2 : Modify Network settings
3 : Set Ethernet speed
0 : Exit
-----

For each of the following questions, you can press <Return> to select the
value
shown in braces, or you can enter a new value.
Should this target obtain IP settings from the network?[N] N
Static IP address [xxx.xxx.xxx.xxx]? xxx.xxx.xxx.xxx
Static IP address is xxx.xxx.xxx.xxx
Subnet Mask [xxx.xxx.xxx.xxx]? xxx.xxx.xxx.xxx
Subnet Mask is xxx.xxx.xxx.xxx
Gateway IP address [xxx.xxx.xxx.xxx]? xxx.xxx.xxx.xxx
Gateway IP address is xxx.xxx.xxx.xxx
Wait during your new configuration is saved ...
Reset the card to take into account the new configuration.
```

Return to the main menu and enter 1 then 2.

The card restarts with the new IP parameters.

3.1.3 IPv6 Parameters

The IPv6 parameters are read only through the serial line configuration menu. If IPv6 is enabled, all IPv6 addresses of the card can be read from the HyperTerminal™. The "Your network is equipped with a DHCPv4 server" chapter describes the steps to follow to display this addresses.

3.2 Test after configuration

To check that the Network Management Card is operational after installation and configuration:

- From a station connected to the same subnet as the card, open a web browser and enter the IP address of the card in the address field
- Check the display of the [home page](#).

4 Supervision and administration by browser

- On a computer equipped with a Web browser (Internet Explorer, FireFox, Google chrome or Opera recommended), enter the address initialised previously in the Installation chapter.
- The "UPS properties" home page is displayed.

4.1 Optimising the performance of your browser

- To view status changes on the UPS in real time, the browser must be configured so that it automatically refreshes all the objects on the current page.


Example on IE 8: Tools / Internet Options / General / Parameters menu, tick Every time this page is visited and validate.

Network Management Card (Network-MS) User Manual

4.2 UPS




4.2.1 UPS properties page

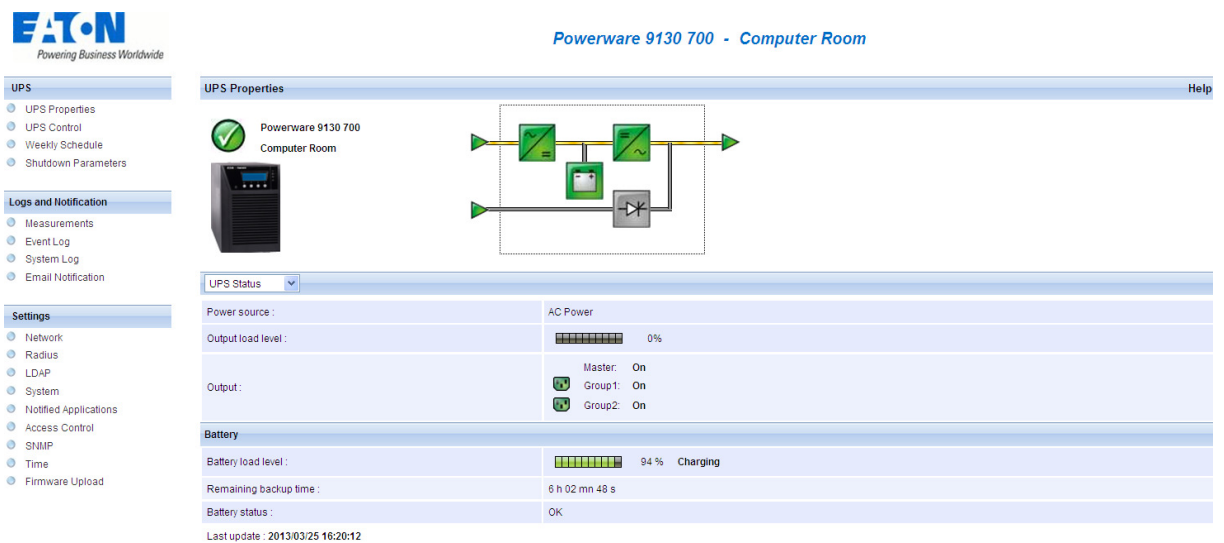- Essential information about the UPS status is available on the UPS Properties page (see Figure), which refreshes automatically every ten seconds.
- The UPS Properties page shows an image and generic name of the UPS range. You can customize Computer Room to name the location of your system (see “System Settings”).
- An animated diagram displays for online UPSs showing an overview of the current UPS operating mode.



4.2.1.1 UPS status icons.


The various icons showing the status of the UPS are:

	Normal operation
	Alarm present. This icon links directly to the alarm page.
	Loss of communication with the UPS

Animated synoptic: An animated synoptic gives a global overview of the UPS current operating mode.

This synoptic is available on all On-Line UPS.

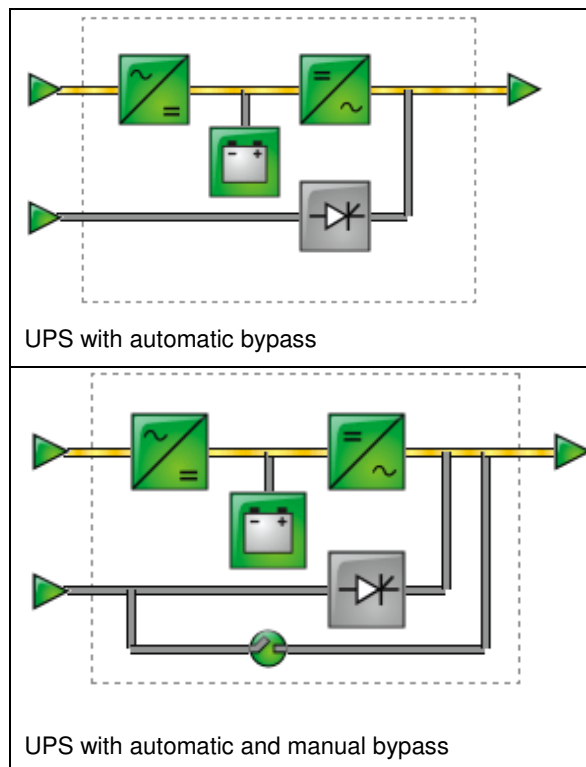

The synoptic drawing depends on the UPS topology. The different drawings are described in the table below.



Note: In case of loss of communication with the UPS, all the elements of the synoptic are grey.



The various elements of the synoptic are the following ones:

- AC Normal Input:




	Green	In tolerances
	Gray	Out of tolerances

Network Management Card (Network-MS) User Manual




- AC Normal Flow:

	Yellow	AC to DC converter powered by AC Normal
	Gray	AC to DC converter not powered by AC Normal



- AC to DC Converter:

	Green	Powered
	Gray	Not powered
	Red	Internal failure



- Battery:

	Green	Remaining capacity > 50%
	Orange	Remaining capacity < 50%
	Red	Low battery when UPS is on Battery Battery to be checked (battery test result)

- Battery Output Flow:




	Yellow	DC to AC converter powered by battery
	Gray	DC to AC converter not powered by battery

- DC to AC Converter Input flow:



	Yellow	Energy flow present
	Gray	No energy flow

Network Management Card (Network-MS) User Manual



- DC to AC Converter :

	Green	Powered
	Gray	Not powered
	Red	Internal failure

- DC to AC Converter Output:



	Yellow	Energy flow present
	Gray	No energy flow

- AC Bypass Input:




	Green	In tolerances
	Red	Out of tolerances

-



- AC Automatic Bypass Flow :

	Yellow	Energy flow present
	Gray	No energy flow



- AC Automatic Bypass Status:

	Green	Powered
	Gray	Not powered
	Red	Internal failure

- AC Manual Bypass Flow:



	Yellow	Energy flow present
	Gray	No energy flow

- AC Manual Bypass Status:



	Green / Gray	Open
	Red / Yellow	Closed

Network Management Card (Network-MS) User Manual

- AC Output Flow:

	Yellow	Energy flow present
	Gray	No energy flow (or Load = 0%)


- AC Output:

	Green	Load protected
	Red	Load not protected

Network Management Card (Network-MS) User Manual

- UPS measurements :

Place the cursor over an element in the diagram to display the UPS measurement detail (see Figure). These measurements are available for Input, Battery, Output, and Bypass mode. The available measurements depend on the UPS range.

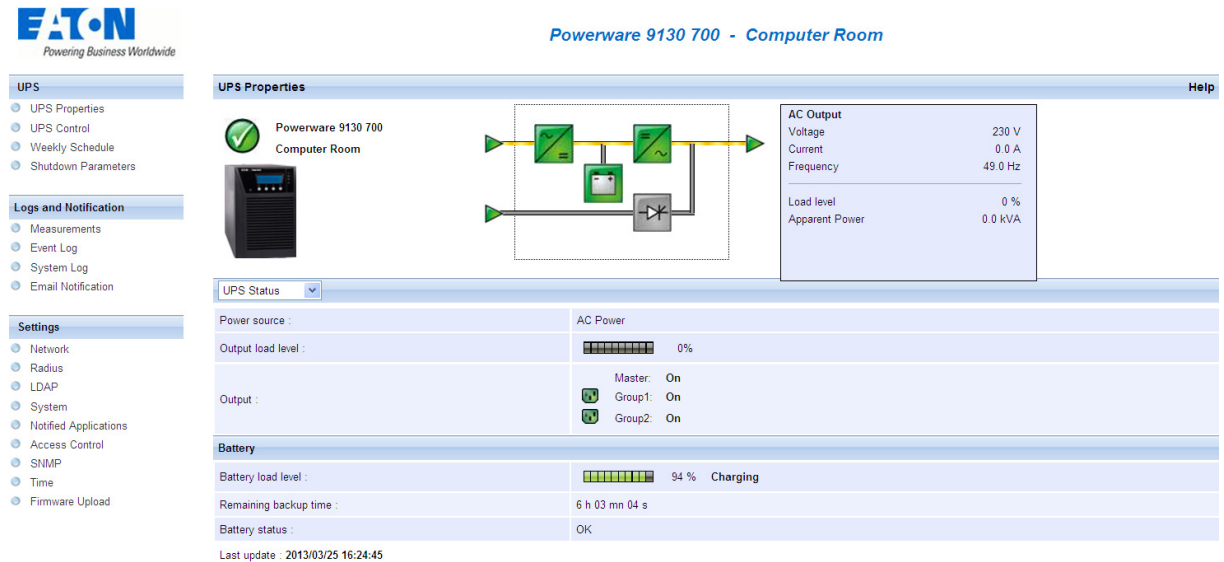

Network Management Card (Network-MS) User Manual



4.2.1.2 UPS status

- **Active sources:** (available on parallel or modular UPS)
x UPS + y UPS redundant : x indicates the minimal number of UPS necessary to power the load,
y indicates the number of UPS in redundancy.

An alarm can be generated if the number of UPS in redundancy is less than a configurable threshold. See UPS modules section.

- **Power source:** indicates whether the power comes from the utility or from the UPS battery
- **Output load level:** indicates the power percentage used at UPS output
- **Output:** indicates if the different UPS outputs are protected.
- **Master:** indicates if the UPS main output is protected
- **Group1** and **Group2:** indicates if the controlled outlets (if available) are powered.

The various icons showing the status of the UPS outputs are:

 (green outlet)	Outlet powered
 (red outlet)	Outlet not powered or not protected

Battery Information:

- **Battery load level:** remaining battery charge (in percent).
The information is completed with the 3 following labels:
 - **Charging:** if the utility power is present and the battery charge is in progress.
 - **Discharging:** if the UPS operates on battery.
 - **Fault:** if the battery is faulty.
- **Remaining backup time:** Estimation of the battery's maximum backup time remaining before UPS shutdown
- **Battery status:** Result of the last automatic battery test carried out by the UPS
Possible values are:
 - **OK:** the test was completed correctly.
 - **NOK:** the battery needs to be checked.
 - **Deactivated:** the automatic battery test is not validated on the UPS.

Network Management Card (Network-MS) User Manual

4.2.1.3 Viewing the modules (Only with Eaton MX Frame UPS)

- Click on **UPS Modules** scroll list to view the information about the UPS modules.

EATON
Powering Business Worldwide

Network Management Card

UPS Properties Help

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

MX Frame 16U Computer Room

UPS Status

Active sources :	0 UPS + 0 UPS redundant
Power source :	AC Power
Output load level :	0%
Output :	Master: On Group1: On Group2: On
Battery	
Battery load level :	100 % Charging
Remaining backup time :	5 h 49 min 29 s
Battery status :	OK

Last update : 2011/07/27 09:53:59

- Active sources:**

x UPS + y UPS redundant : x indicates the minimal number of UPS necessary to power the load, y indicates the number of UPS in redundancy.

The addition of these 2 values is the total number of available UPS.

- The **Minimum redundant UPS modules to trigger alarm** can be configured from this page. The button **Save** makes the card setting the parameter into the UPS. A warning message informs the user about the consequences of this parameters modification.
The redundancy lost can generate Email notification (if set in the email notification page) and SNMP trap. It can also be used by IPP for server protection criteria.
- The **Module Nr** gives the location of the module in the UPS.

Network Management Card (Network-MS) User Manual

- The **Status** can take the next forms:



or



when the module is working properly with no alarm.



when the module has at least one alarm (level Warning) active.



when the module has at least one alarm (level Critical) active.



when the module has a communication fault.

When the module is working properly with no alarms, the icon is not reactive, otherwise it is reactive and clicking on it makes the page Alarm Table appear.

- **Output load level:** Value of the percentage of load at module output
- **Battery load level:** Percentage of charge available in the battery module

Network Management Card (Network-MS) User Manual

4.2.1.4 Viewing the power usage

Click on **Power usage** scroll list to view the information about the consumptions.

- **Average power usage:** indicates the average consumption on the last hour of each output. The sum of these 3 consumptions is also given.
- **Cumulative power usage:** indicates the consumption cumulated of each output since the last reset. The sum of these 3 consumptions is also given.

Note: The consumptions are only available with UPS Eaton 5PX, 5P, 9PX and 9SX. The consumption of each output is only available with UPS Eaton 5PX.

The displaying is the following :

Power Usage ▾			
Output	Average power usage	Cumulative power usage	
Master	0 kWh	0.00 kWh 2012/09/14 09:51:00	<input type="button" value="Reset"/>
Group1	0 kWh	0.00 kWh 2012/09/14 09:51:00	<input type="button" value="Reset"/>
Group2	0 kWh	0.00 kWh 2012/09/14 09:51:00	<input type="button" value="Reset"/>
Total	0 kWh	0.00 kWh 2012/09/14 09:51:00	<input type="button" value="Reset"/>

Network Management Card (Network-MS) User Manual


4.2.1.5 Viewing the alarms

Click on "Alarm Table" scroll list to view the list of current alarms. The table of managed alarms is included in the [appendix](#).

The level of the alarms appears like below:

-  Critical
-  Warning
-  Unknown

- Alarm table for standard UPS:


Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters


Logs and Notification


- Measurements
- Event Log
- System Log
- Email Notification


Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload





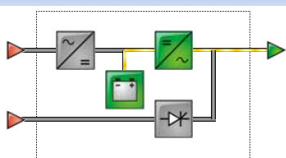

UPS Properties Help



 **Powerware 9130 700**
Computer Room




UPS Alarms

	Alarm Time	Alarm Description	Severity
UPS	2013/03/25 16:26:21	Normal AC switch open	
	2013/03/25 16:26:21	Normal AC NOK	
	2013/03/25 16:26:32	Normal AC voltage out of tolerance	
	2013/03/25 16:26:32	Normal AC voltage too low	
	2013/03/25 16:26:32	Bypass AC voltage out of tolerance	
	2013/03/25 16:26:32	UPS on battery	

Network Management Card (Network-MS)

User Manual

- Alarm table for modular UPS:



Powering Business Worldwide

Network Management Card

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters


Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification


Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

UPS Properties Help



**MX Frame 16U
Computer Room**

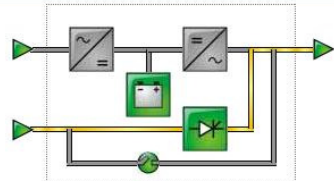


UPS Alarms ▼

	Alarm Time	Alarm Description	Severity
UPS	1970/01/01 00:01:09	Load not protected - On Automatic Bypass	⚠

Network Management Card (Network-MS) User Manual

4.2.1.6 Viewing the “About your UPS” page

Click on **About your UPS** scroll list to view the information about the UPS and the card.



Powering Business Worldwide

UPS

- Properties
- Control
- Weekly Schedule
- Shutdown Parameters


Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Pulsar 1000 - Computer Room

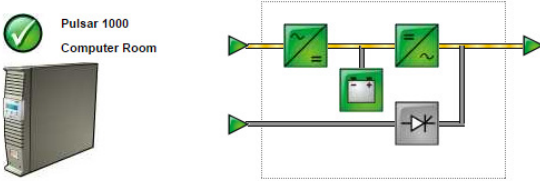

UPS Properties

About your UPS

Device name :	Pulsar 1000
Part Number :	unknown
Serial Number :	SN
System Technical Level / Firmware Revision :	00

Network Management Card

Card Firmware revision :	JD_Beta1
Card Commercial Reference :	NetworkMS
Card Technical Level :	17
Card Revision :	JA
Card Serial Number :	BJ3L270CB
Card Ethernet Mac Address :	00:20:85:F5:79:1A
Card Ethernet Speed :	100 MBit
System Clock Frequency :	55 MHz


4.2.2 On-line help

On-line contextual help in English is available at the top of each page by clicking on the Help link, which is always located on the top right corner. The navigation menu of the on-line help is identical to that of the card's pages.

The Help page always opens a new window.



Powerware 9130 700 - Computer Room

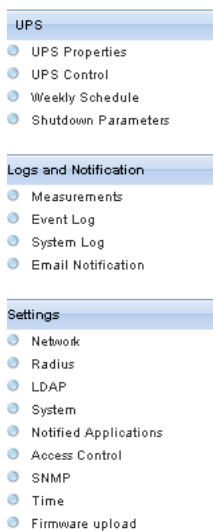

UPS Properties Help

The UPS Properties page is the default page and displays the basic status of the UPS.

At the top of the page, the UPS is identified: image, name, and location.

The symbol that displays above the UPS image indicates the UPS status. Click the symbol to go to the UPS Alarm page.

Red - Alarm present
Green - No active alarm

Electric diagram of the UPS displays the main parts of the UPS and shows the electrical flow that powers the load.

Note: the electric diagram is not available for a line-interactive UPS.

The second segment of the page refreshes every 10 seconds and displays information determined by your selection in the combo box.

UPS Status selects the main status of the UPS:

Active sources shows the current use of a modular UPS, the notation x UPS + y UPS is meaning : x is the number of modules necessary to power the load, y is the number of redundant modules.

Power source shows where the power originates.

Output load level displays the load level.

Output displays the status and the average consumption on the last hour (only available with UPS Eaton 5PX) of all UPS outputs.

UPS Modules selects the status of the modules of the UPS, available only for modular UPS:

Each module of the UPS has static informations as the serial number, or dynamic information as the global status shown with an alarm icon and also its percent load and battery level.

UPS Alarms displays all the active alarms present on the UPS.

Power Usage displays information related to UPS consumption (in Wh or kWh). For each parameter, the user is allowed to reset the timestamp:


Average Power Usage displays the average of power usage in Wh. If available, this information is provided for each output and also summed over all outputs.

Cumulative power usage displays the cumulative power usage in kWh, since the last reset. If available, this information is provided for each output and also summed over all outputs. The user is allowed to reset the timestamp

About your UPS displays all the static informations identifying the UPS and the NMC card.

4.2.3 Logging In

By default, the user name and password are both admin for the local account (see Figure). If an external authentication is used, the username and password will be those defined in LDAP or RADIUS authentication depending on the type chosen.

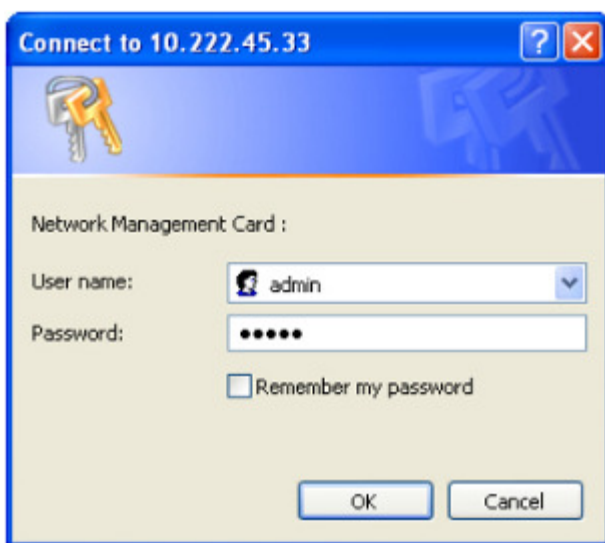

Both the user name and password fields accept up to a maximum of ten characters. After five minutes have elapsed, or if the browser is closed and reopened, you must re-enter the user name and password. An error in either field results in rejection of the requested action (such as save, page access, or card reboot). After three unsuccessful login attempts, you must refresh the browser. Both the user name and password fields are encrypted with an MD5 type algorithm, ensuring total security.

See "[Set Login Password to Default](#)" to reset the password (from RS232 serial link).

Network Management Card (Network-MS) User Manual

4.2.4 UPS control



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

UPS configuration may prevent the shutdown and restart commands from being properly run. Read the UPS user manual for more information.

Powerware 9130 700 - Computer Room

Output	Status	Control	Off Delay	Toggle Duration	On Delay
Master	On	None	0 sec	0 sec	0 sec
Group1	On	None	0 sec	0 sec	0 sec
Group2	On	None	0 sec	0 sec	0 sec

Execute Save

This page enables triggering of [startup and shutdown sequences](#) for the UPS main output and controlled outlets.

- The status of each output is displayed by a symbol associated with the Off label (red symbol) or On (green symbol).
- The shutdown sequences take into account the time required for the registered servers to shut down without losing data ([see shutdown parameters](#)).
- The main outlet has priority over the controlled outlets. Shutdown of the main outlet causes the controlled outlets to shut down. Controlled outlets can only be started if the master outlet is on.

The system proposes six different commands, and a command is only actually started after clicking on **Execute**:

- **Safe power down:** A sequence to switch off output power is launched immediately. The systems supplied are shut down correctly while the shutdown sequence is running, then the output is cut.
- **Safe power down & reboot:** A sequence to switch off then restore output power is launched immediately. The powered systems are shut down correctly during the shutdown sequence, then the output is switched off.
- Finally, the restart sequence is launched at the end of the time delay specified in the "Toggle duration" parameter. The output status is updated.

Network Management Card (Network-MS) User Manual

- **Immediate On:** A sequence to switch on output power is launched immediately. The output is re-powered and the systems supplied start up correctly.
- **Delayed, safe power down:** This is the same switch off sequence as for the "Safe power down" command, but postponed by the number of seconds programmed in the "Off Delay" parameter.
- **Delayed, safe power down & reboot:** This is the same switch off then on sequence as for the "Safe power down & reboot" command, but postponed by the number of seconds programmed in the "Off Delay" parameter.
- **Delayed On:** This is the same switch on sequence as for the "Immediate On" command, but postponed by the number of seconds programmed in the "On Delay" parameter.

The **Save** button saves the Off Delay, Toggle duration and On Delay parameters on the card.


Network Management Card (Network-MS) User Manual

4.2.5 UPS weekly schedule programming

Click on the **Weekly schedule** section of the menu.



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.



Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS	Weekly Schedule	Help																								
<ul style="list-style-type: none"> • UPS Properties • UPS Control • Weekly Schedule • Shutdown Parameters 	<p>Powerware 9130 700 Computer Room</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #e6f2ff;"> <th>Day</th> <th>Shutoff Time</th> <th>Restart Time</th> </tr> </thead> <tbody> <tr> <td>Sunday</td> <td>22:00</td> <td>-</td> </tr> <tr> <td>Monday</td> <td>-</td> <td>06:30</td> </tr> <tr> <td>Tuesday</td> <td>-</td> <td>-</td> </tr> <tr> <td>Wednesday</td> <td>-</td> <td>-</td> </tr> <tr> <td>Thursday</td> <td>-</td> <td>-</td> </tr> <tr> <td>Friday</td> <td>-</td> <td>-</td> </tr> <tr> <td>Saturday</td> <td>-</td> <td>-</td> </tr> </tbody> </table> <p style="text-align: center;"><input type="button" value="Save"/></p>	Day	Shutoff Time	Restart Time	Sunday	22:00	-	Monday	-	06:30	Tuesday	-	-	Wednesday	-	-	Thursday	-	-	Friday	-	-	Saturday	-	-	
Day	Shutoff Time	Restart Time																								
Sunday	22:00	-																								
Monday	-	06:30																								
Tuesday	-	-																								
Wednesday	-	-																								
Thursday	-	-																								
Friday	-	-																								
Saturday	-	-																								
<p>Logs and Notification</p> <ul style="list-style-type: none"> • Measurements • Event Log • System Log • Email Notification 																										
<p>Settings</p> <ul style="list-style-type: none"> • Network • Radius • LDAP • System • Notified Applications • Access Control • SNMP • Time • Firmware Upload 																										

UPS configuration may prevent the shutdown and restart commands from being properly run. Read the UPS user manual for more information.

The weekly schedule enables the administrator to optimise power consumption or program a reboot of the protected equipment at a set time.

In a shutdown sequence, the **Intelligent Power Protector** connected to the card are informed and ensure that each machine is shut down correctly before the UPS output is switched off. Up to 7 UPS shutdown sequences can be programmed in one week, with a minimum shutdown delay of 30 minutes.

The On / Off sequences are valid only if the card's time has been properly set.

Network Management Card (Network-MS) User Manual

4.2.6 Shutdown parameters



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

This page enables viewing and configuration of UPS operating parameters in battery mode and for power restoration.

Click on the **Shutdown parameters** section in the menu to see the list of parameters.



Pulsar 1000 - Computer Room

Shutdown Parameters				Help
Pulsar 1000 Computer Room				
Output	On battery	System Shutdown	Restart	
<div>UPS</div> <div>Master</div>	<div>Shutdown</div> <div>if Remaining time under: 180 sec</div> <div>if Capacity under: 20 %</div> <div><input type="checkbox"/> after: 30 min</div>	<div>Shutdown duration : 120 sec</div> <div>Turn off UPS after Sequential Shutdown: <input type="radio"/> Enable <input checked="" type="radio"/> Disable</div>	<div>If Capacity exceeds: 0 %</div>	
<div>UPS</div> <div>Group1</div>	<div>Switch Off</div> <div>after: 1920 sec</div> <div>if Capacity under: 0 %</div>	<div>Shutdown duration : 120 sec</div>	<div>Switch On</div> <div>after: 3 sec</div>	
<div>UPS</div> <div>Group2</div>	<div>Switch Off</div> <div>after: 1920 sec</div> <div>if Capacity under: 0 %</div>	<div>Shutdown duration : 120 sec</div>	<div>Switch On</div> <div>after: 6 sec</div>	
Save modified settings :			<input type="button" value="Save"/>	

The Output column enables each outlet to be named (maximum 20 characters).

Note

As priority is given to the main outlet, the card cannot supply the controlled outlets when main outlet power is off.

Network Management Card (Network-MS) User Manual

For the main outlet ("Master" by default)

The first shutdown criteria initiates the restart of the [shutdown sequence](#).

- **If remaining time is under** (0 to 99999 seconds, 180 by default) is the minimum remaining backup time from which the shutdown sequence is launched.
- **If battery capacity is under** (0 to 100%); this value cannot be less than that of the UPS and is the minimum remaining battery capacity level from which the shutdown sequence is launched.
- **Shutdown after** (0 to 99999 minutes, not validated by default) is the operating time in minutes left for users after a switch to backup before starting the shutdown sequence.
- **Shutdown duration** (120 seconds by default) is the time required for complete shutdown of systems when a switch to backup time is long enough to trigger the shutdown sequences. It is calculated automatically at the maximum of Shutdown duration of subscribed clients but can be modified in the Advanced mode.
- **If battery capacity exceeds** Minimum battery level to reach before restarting the UPS after utility restoration
Important: Certain UPSs do not support this option
- **Turn off UPS after sequential shutdown**
On **Disable** mode, the card doesn't send the Shutoff command to the UPS.
On **Enable** mode, the card sends the Shutoff command to the UPS on the shutdown criteria.
Important: By default, this option is set to **Disable**. But if the card detects that an IPP is connected to the card, then the option goes automatically to **Enable**, and stays in this state. At this time, only the user can modify this setting.

For the controlled outlets ("group 1 or group 2" by default)

The page enables programming of operation time and level in backup mode to manage outlet load shedding in the event of electric power failure:

- **Switch Off after** (from 0 to 99999, 65535 by default) defines the time during which the outlet is supplied starting from the moment of utility failure. Caution, this time includes the outlet shutdown duration.
- **Switch Off if battery capacity under** (0 by default) is an extra condition for outlet shutdown that can trigger the shutdown sequence before the shutdown duration runs out.
- **Shutdown duration** is the time required for complete shutdown of the systems supplied by the outlet when an outlet shutdown sequence is launched.
It is calculated automatically using the maximum shutdown durations of notified applications on the outlets.
- **Switch On after** (from 0 to 99999, default 65535) is the period between main output startup and startup of the relevant programmable outlet, therefore outlet startup can be delayed in relation to the main output.
Important: Certain UPSs do not support this option

Network Management Card (Network-MS) User Manual

4.2.7 Measurements

Click on "*Measurements*" in the menu

- The next window shows the measurements for a single phase UPS.

EATON
Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Measurements

Powerware 9130 700

Save Log Clear Log

Help
Computer Room

Date	Time	AC Normal		AC Output				Battery	
		Voltage	Frequency	Voltage	Frequency	Power(kVA)	Load level(%)	Capacity(%)	Remaining time(mn)
2013/03/26	03:23:32	241	49.0	230	49.0	0.0	0	100	385
2013/03/26	03:24:31	241	49.0	230	50.0	0.0	0	100	385
2013/03/26	03:25:32	242	50.0	230	49.0	0.0	0	100	385
2013/03/26	03:26:32	242	50.0	230	49.0	0.0	0	100	385
2013/03/26	03:27:32	242	50.0	230	50.0	0.0	0	100	385
2013/03/26	03:28:33	242	50.0	230	50.0	0.0	0	100	385
2013/03/26	03:29:33	242	50.0	229	50.0	0.0	0	100	385
2013/03/26	03:30:34	242	50.0	230	50.0	0.0	0	100	385
2013/03/26	03:31:34	241	49.0	230	50.0	0.0	0	100	385
2013/03/26	03:32:34	242	49.0	230	49.0	0.0	0	100	385
2013/03/26	03:33:35	241	49.0	230	50.0	0.0	0	100	385
2013/03/26	03:34:34	242	50.0	230	50.0	0.0	0	100	385
2013/03/26	03:35:35	242	50.0	230	50.0	0.0	0	100	385

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

The following measurements are saved and time-stamped (About. 430):

- AC Normal : Voltage:** Value of the utility voltage supplying the UPS
- AC Normal : Frequency:** Value of the utility frequency supplying the UPS
- AC Output : Voltage:** Value of the output voltage of your UPS
- AC Output : Frequency:** Value of the output frequency of your UPS
- AC Output : Power (kVA):** Value of the output power of your UPS
- AC Output : Load level (%):** Value of the percentage of load at UPS output
- Battery : Capacity (%):** Percentage of charge available in the battery
- Battery : Remaining time (mn):** Estimation of the remaining backup time
- The save frequency of these values is defined in the "[System](#)" page (60 seconds by default). Approximately 435 time-stamps are stored permanently on the card. The oldest time-stamps are automatically deleted.
- Save Log** enables all saved values to be opened or saved in CSV format. (compatible with Excel type spread sheets)
- Clear Log** enables deletion of all records. Enter the login/password to validate this action.

Network Management Card (Network-MS) User Manual

4.2.8 Event log

- Click on **Event Log** in the menu

EATON
Powering Business Worldwide

Powerware 9130 700 - Computer Room

Event Log Help

Powerware 9130 700 Save Log Clear Log

Date	Time	Event Description
2013/03/25	16:26:21	Normal AC switch open
2013/03/25	16:26:21	Normal AC NOK
2013/03/25	16:26:32	Normal AC voltage out of tolerance
2013/03/25	16:26:32	Normal AC voltage too low
2013/03/25	16:26:32	Bypass AC voltage out of tolerance
2013/03/25	16:26:32	UPS on battery
2013/03/25	16:26:32	System shutdown in 4 h 45 mn 44 s
2013/03/25	16:26:32	Outlet group 1 shutdown in 13 mn 00 s
2013/03/25	16:26:32	Outlet group 2 shutdown in 28 mn 00 s
2013/03/25	16:31:02	Normal AC switch closed
2013/03/25	16:31:02	Normal AC OK
2013/03/25	16:31:12	Normal AC voltage OK
2013/03/25	16:31:12	Bypass AC voltage OK
2013/03/25	16:31:12	UPS on normal AC
1970/01/01	00:00:00	UPS communication restored

- Save log** enables all saved values to be opened or saved in CSV format. (compatible with Excel type spread sheets)
- Clear log** enables deletion of all records. The administrator must enter his/her login / password to validate this action.

The card can save 435 events. The table of managed alarms is included in the [appendix](#).

Network Management Card (Network-MS) User Manual

4.2.9 System log

- Click on **System log** in the menu

The screenshot shows the Eaton Network Management Card (Network-MS) web interface. The top navigation bar includes 'UPS', 'System Log', and 'Help'. The 'System Log' section is active, displaying 'Powerware 9130 700' and 'Computer Room'. Below this, there are 'Save Log' and 'Clear Log' buttons. A table lists log entries with columns for Date, Time, and Event Description. The left sidebar contains a tree view with categories: UPS (UPS Properties, UPS Control, Weekly Schedule, Shutdown Parameters), Logs and Notification (Measurements, Event Log, System Log, Email Notification), and Settings (Network, Radius, LDAP, System, Notified Applications, Access Control, SNMP, Time, Firmware Upload).

Date	Time	Event Description
2013/03/25	17:02:00	Network Management Card startup
2013/03/26	09:14:53	Time changed by user with 2013/03/26 09:14:49

- Save log** enables all saved values to be opened or saved in CSV format. (compatible with Excel type spread sheets)
- Clear log** enables deletion of all records. The administrator must enter his/her login / password to validate this action.

The card can save 435 events. The table of managed alarms is included in the [appendix](#).

Network Management Card (Network-MS) User Manual

4.3 Notification

4.3.1 Email Notification



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

The card offers the possibility of redirecting UPS alarms to an e-mail server. The format of these e-mails is compatible with mobile telephone transfer systems using text messages (SMS).

SMS notification requires the use of a third-party application that converts emails to SMS.



Pulsar 1000 - Computer Room

Email Notification		Help
Pulsar 1000		Computer Room
<p>UPS</p> <ul style="list-style-type: none"> UPS Properties UPS Control Weekly Schedule Shutdown Parameters <p>Logs and Notification</p> <ul style="list-style-type: none"> Measurements Event Log System Log Email Notification <p>Settings</p> <ul style="list-style-type: none"> Network Radius LDAP System Notified Applications Access Control SNMP Time Firmware Upload 	<p>Recipient list</p> <p>recipient1@domain.com recipient2@domain.com recipient3@domain.com recipient4@domain.com</p> <p>Save</p> <p>Recipient : recipient1@domain.com</p> <p>Disabled ▾</p> <p><input type="checkbox"/> Enotify</p> <p>Attached files :</p> <p><input type="checkbox"/> Measurements <input type="checkbox"/> Event Log <input type="checkbox"/> System Log</p> <p>Periodic report : Every 0 day(s) at: 00:00 ▾</p> <p>day of next report: - ▾</p> <p>Test</p> <p>Email Message Settings Configure SMTP Server on Network Settings</p>	
		<p>Notified events for the selected Recipient</p> <p>Battery operation</p> <p>UPS on battery <input type="checkbox"/></p> <p>UPS on normal AC <input type="checkbox"/></p> <p>UPS Off sequence in progress <input checked="" type="checkbox"/></p> <p>Low battery <input type="checkbox"/></p> <p>UPS alarms</p> <p>Battery fault <input type="checkbox"/></p> <p>Battery OK <input type="checkbox"/></p> <p>UPS overload <input type="checkbox"/></p> <p>UPS returns to normal load <input type="checkbox"/></p> <p>UPS fault <input checked="" type="checkbox"/></p> <p>UPS OK <input type="checkbox"/></p> <p>UPS communication failed <input type="checkbox"/></p> <p>UPS communication restored <input type="checkbox"/></p> <p>Charger fault <input type="checkbox"/></p> <p>Output on by-pass <input type="checkbox"/></p> <p>Return from by-pass <input type="checkbox"/></p> <p>Software alarms</p> <p>Firmware upgrade <input type="checkbox"/></p> <p>Set Default</p>

- Recipient List:**

On the left side of this page, up to four recipients can be configured to receive e-mails from the card. Each addressee has its own trigger events, selected from the right side of the page, for which an e-mail is sent. The card's log indicates e-mail transmission errors.

Each recipient is configured with the following parameters:

- Recipient:** (Field is limited to 99 characters) this is the e-mail address of the person or department to receive the e-mail.

The default value is : recipientx@domain.com
- eNotify:** This parameter enables communications to the Eaton eNotify Monitoring and Diagnostics Service. **NOTE:** Available only for customers with a valid eNotify Service Contract.
- Attached files:** The files selected (Measurements, Event log, System log, Environment measurements) are enclosed with each e-mail sent. The files are sent

Network Management Card (Network-MS) User Manual

in CSV format

- **Periodic report:** In addition to the e-mails sent when events occur, a periodic e-mail containing the 3 log files (or 4 when the optional Sensor is connected) can be sent to the recipient every x days at the time specified by the user.

To configure the first transmission, specify the day, time and frequency of the next transmission in the "next report" box. After this date, the page will show the date and time of the next transmission.

Data are sent in CSV format.

- **Save:** Saves any modifications.
- **Test:** enables an e-mail to be sent to the recipient immediately. This is one way of checking e-mail transmission, particularly access to the SMTP server configured in "Network" settings. A transmission report is added to the system log.
The event label in the subject and text of the message is replaced with a test label.
If the user makes any modifications to the page, they must be saved before using the "Test" function.
- **Notified events:**
The right side of the page shows the events that can be notified.
By default, two events are selected for notification. The user can modify this pre-selection by ticking other events or can, on the contrary, restore the initial configuration by clicking Set Default.
- **Email Message Settings:** access to the message configuration page
- **Network Settings:** enables the name of the SMTP server to be entered. [See page](#)

4.3.2 E-mail Message Settings

This page enables customisation of the content of the messages received by recipients of e-mails sent by the card.

Customisation is common to the four recipients that can be notified (see [E-mail notification](#)).


The screenshot shows the 'Email Message Settings' page for a 'Powerware 9130 700 - Computer Room'. The interface includes a left sidebar with navigation menus for 'UPS', 'Logs and Notification', and 'Settings'. The main content area is titled 'Email Message Settings' and contains the following fields:

- Sender:** A text input field containing 'ups@domain.com'.
- Subject:** A text input field containing 'Network Management Card - <Event message>'.
- Message text:** A large text area with the placeholder text 'Type here your own text'.

Below the 'Subject' field, there are three checkboxes: 'UPS Name', 'UPS Location', and 'Event message'. The 'Event message' checkbox is checked. A 'Save' button is located at the bottom of the form.

- Sender:** (59 characters maximum) identifies the source of the message. The default value is *ups@domain.com*.
 This field is free. However, depending on the type of SMTP server configuration, it is possible that the server checks that the domain name contained in the Sender address exists, and even that the user in the Sender address belongs to this domain.
- Subject:** enables the user to specify the subject of the e-mail to be sent. By entering some free text and selecting from several optional fields, if desired, the message subject is built:
 - **UPS name** recalls the name of the UPS; it may or may not be selected.
 - **UPS location** recalls the geographic location of the UPS (see System Settings); it may or may not be selected.
 - **Event message** identifies the event generating the e-mail; it may or may not be selected.
- Message text** is a free zone long of 255 characters maximum.
 The body of the e-mail sent is composed of:
 - Message text, which is free text.
 - The date and time of the event, as saved in the log.
 - URL of the card, enabling a direct link with the card to be established.
 - Attachments, as configured for the e-mail recipients.
 - Duplication of the subject, as configured.

Network Management Card (Network-MS) User Manual

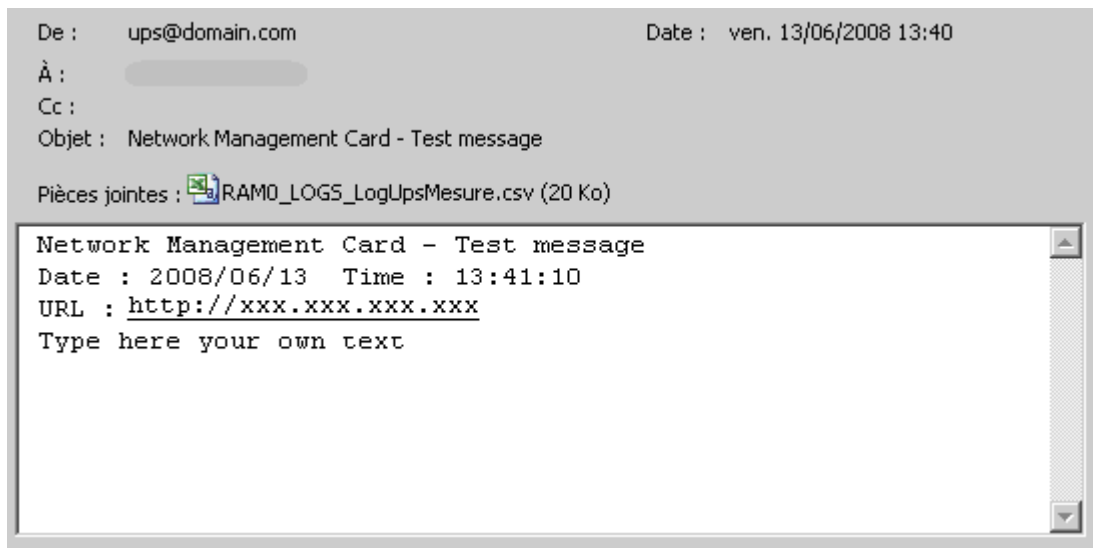

Network Management Card (Network-MS) User Manual

4.4 Configuration


4.4.1 Network settings

Click on **Network** in the menu.



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

This menu enables the administrator to configure the network parameters of the card and authorisation of the remote upgrade of the embedded system.


Powerware 9130 700 - Computer Room

UPS	Network Settings	Help																																										
<ul style="list-style-type: none"> • UPS Properties • UPS Control • Weekly Schedule • Shutdown Parameters 	<div style="display: flex; justify-content: space-between; align-items: center;"> <div>Powerware 9130 700</div> <div>Computer Room</div> </div> <table style="width: 100%;"> <tr> <td style="width: 50%;">BootP/DHCP :</td> <td style="width: 50%;">Enabled</td> </tr> <tr> <td>IP address :</td> <td>100.100.100.100</td> </tr> <tr> <td>Subnet Mask :</td> <td>100.100.100.100</td> </tr> <tr> <td>Gateway Address :</td> <td>100.100.100.100</td> </tr> <tr> <td>Hostname :</td> <td>ups36</td> </tr> <tr> <td>Domain Name :</td> <td>ups.domain.com</td> </tr> <tr> <td><input checked="" type="checkbox"/> IPv6 Enabled</td> <td></td> </tr> <tr> <td><input checked="" type="checkbox"/> IPv6 Auto Config Enabled</td> <td></td> </tr> <tr> <td>IPv6 Address 1 :</td> <td>Waiting Router Advertisement...</td> </tr> <tr> <td>Prefix length :</td> <td>0</td> </tr> <tr> <td>IPv6 Gateway :</td> <td></td> </tr> <tr> <td>IPv6 Local Address :</td> <td>FE80::220:85FF:FEF5:7924</td> </tr> <tr> <td>IPv6 Address 2 :</td> <td>Waiting Router Advertisement...</td> </tr> <tr> <td>Firmware Upload :</td> <td>Enabled</td> </tr> <tr> <td>Primary DNS Server (IPv4 or IPv6) :</td> <td>100.100.100.100</td> </tr> <tr> <td>Secondary DNS Server :</td> <td>100.100.100.100</td> </tr> <tr> <td>SMTP Server (for Email Notification) :</td> <td></td> </tr> <tr> <td><input type="checkbox"/> SMTP port :</td> <td>25</td> </tr> <tr> <td><input type="checkbox"/> SMTP server authentication</td> <td></td> </tr> <tr> <td>Login :</td> <td>smtplogin</td> </tr> <tr> <td>Password :</td> <td>*****</td> </tr> </table>	BootP/DHCP :	Enabled	IP address :	100.100.100.100	Subnet Mask :	100.100.100.100	Gateway Address :	100.100.100.100	Hostname :	ups36	Domain Name :	ups.domain.com	<input checked="" type="checkbox"/> IPv6 Enabled		<input checked="" type="checkbox"/> IPv6 Auto Config Enabled		IPv6 Address 1 :	Waiting Router Advertisement...	Prefix length :	0	IPv6 Gateway :		IPv6 Local Address :	FE80::220:85FF:FEF5:7924	IPv6 Address 2 :	Waiting Router Advertisement...	Firmware Upload :	Enabled	Primary DNS Server (IPv4 or IPv6) :	100.100.100.100	Secondary DNS Server :	100.100.100.100	SMTP Server (for Email Notification) :		<input type="checkbox"/> SMTP port :	25	<input type="checkbox"/> SMTP server authentication		Login :	smtplogin	Password :	*****	
BootP/DHCP :	Enabled																																											
IP address :	100.100.100.100																																											
Subnet Mask :	100.100.100.100																																											
Gateway Address :	100.100.100.100																																											
Hostname :	ups36																																											
Domain Name :	ups.domain.com																																											
<input checked="" type="checkbox"/> IPv6 Enabled																																												
<input checked="" type="checkbox"/> IPv6 Auto Config Enabled																																												
IPv6 Address 1 :	Waiting Router Advertisement...																																											
Prefix length :	0																																											
IPv6 Gateway :																																												
IPv6 Local Address :	FE80::220:85FF:FEF5:7924																																											
IPv6 Address 2 :	Waiting Router Advertisement...																																											
Firmware Upload :	Enabled																																											
Primary DNS Server (IPv4 or IPv6) :	100.100.100.100																																											
Secondary DNS Server :	100.100.100.100																																											
SMTP Server (for Email Notification) :																																												
<input type="checkbox"/> SMTP port :	25																																											
<input type="checkbox"/> SMTP server authentication																																												
Login :	smtplogin																																											
Password :	*****																																											
<ul style="list-style-type: none"> • Measurements • Event Log • System Log • Email Notification 																																												
<ul style="list-style-type: none"> • Settings • Network • Radius • LDAP • System • Notified Applications • Access Control • SNMP • Time • Firmware Upload 																																												

Save modified settings :
Save

- **BOOTP/DHCP:** Authorises (choose "Enabled") configuration of network parameters with your BootP/DHCP server when the card is booted.

Network Management Card (Network-MS) User Manual

Sequence with BootP/DHCP server: After each startup, the card makes 3 attempts to recover the network parameters. If no response is received from the server, the card boots with the last saved parameters from the previous start. These parameters are those shown on the page.

The default value for this parameter is "Enable"

Note 1:

If the hostname is not used, the IP address supplied by the DHCP server must be fixed to maintain connection with the clients installed on the stations to be protected.

Note 2:

During the first connection, if the DHCP query is not successful, the NMC starts with the following IP configuration:

Default IP address: 192.168.1.2

Subnet mask: 255.255.255.0

Gateway Address: 0.0.0.0

- **IP Address:** The IPv4 address of the card.
- **Subnet Mask:** The mask of the sub-network of your IPv4 network.
- **Gateway Address:** Indicate the IP address of the gateway to access the stations located outside the card's subnet.
- **Hostname** must be suited to the card. This is the first part of the fully qualified domain name, used by the DNS.
As the card does not support NetBIOS protocol, the hostname will only be sent to DNS if the DHCP server sends it the hostname with the new IP address. This mechanism is described in the update of the Dynamic DNS protocol [RFC 2136](#)
- **Domain Name** is the domain to which the card belongs. This is the part of the fully qualified domain name that follows the hostname and is used by the DNS. The default value of the two parameters comprising the fully qualified domain name: ups.domain.com
- **IPv6 Enabled:** Authorises (choose "Enabled") IPv6 support.
- **IPv6 Auto Config Enabled:** Authorises (choose "Enabled") the card to obtain configuration of IPv6 parameters from an IPv6 router. In this case, none IPv6 parameters are editable.
- **IPv6 Address 1:**
 - If Auto Config is enabled: this field displays the first IPv6 address built from the IPv6 router (not editable).
 - If Auto Config is not enabled: this field is editable and allows setting a static IPv6 address.
- **Prefix length:**
 - If Auto Config is enabled: this field displays the prefix received from router (not editable).
 - If Auto Config is not enabled: this field is editable and allows setting a prefix.
- **IPv6 Gateway:**
 - If Auto Config is enabled: this field is empty and not editable.
 - If Auto Config is not enabled, this field is editable and allows setting the default gateway.
- **IPv6 Local Address:** display the IP local address of the card, build from the MAC address. This field is

Network Management Card (Network-MS) User Manual

not editable. Always available when the IPV6 is enabled.

- IPv6 Address 2:
- If Auto Config is enabled: this field displays the second IPv6 address built from the IPv6 router (not editable).
- If Auto Config is not enabled, this field is empty and not editable.
- **Firmware Upload:** Authorise (chose "Enabled") remote updating of the card's embedded software. The default value for this parameter is "Enabled".
- **Primary DNS Server:** contains the IPv4 or IPv6 address of the main DNS server ensuring conversion of the domain name to IP address.
- **Secondary DNS Server:** contains the IPv4 or IPv6 address of the secondary DNS server ensuring conversion of the domain name to IP address if the primary DNS server is not available.
- **SMTP Port:** contains the port number of the SMTP server.
- **SMTP Server:** contains the name or IP address of the local server with which the card connects to send e-mails.
It may be filled in either as host + domain name (DNS resolution), or directly with the IP address.
The default value is smtpserver. The card uses the standard port (25) for sending e-mails.
- **SMTP Server Authentication:** Displays **login** and **password** fields in order to connect the NMC card to a SMTP Server that requires an authentication.

Important note:

The card must be rebooted after any changes to these IP parameters. [See "System" page](#)

Network Management Card (Network-MS) User Manual

4.4.2 RADIUS

4.4.2.1 Setting Page Configuration

Click on **RADIUS** in the menu.



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

This menu allows the administrator to configure RADIUS settings on the card. They are editable only if the parameter of the External Authentication on the [Access control](#) Access controlpage is set to RADIUS.

EATON
Powering Business Worldwide

Evolution 650 - Computer Room

Radius Configuration

Priority	Radius Server Name or IP Address	IIAS IP Address	Auth. Port	Time Out	Retry Number
PRIMARY	xxx.xxx.xxx.xxx	xxx.xxx.xxx.xxx	1812	10	3
SECONDARY	xxx.xxx.xxx.xxx	xxx.xxx.xxx.xxx	1812	10	3

Select the Radius Server to be modified. [Modify Server](#)

Two RADIUS servers can be registered. The secondary server is used when the primary does not respond in the delay (time out) and after the number of retry set.

The button “Modify Server” allows to edit and to modify the server configuration selected.

Network Management Card (Network-MS)

User Manual

The screenshot shows the Eaton Network Management Card (Network-MS) web interface. The top navigation bar includes the Eaton logo, the title "Evolution 650 - Computer Room", and a power icon. The left sidebar contains a menu with sections: UPS (UPS Properties, UPS Control, Weekly Schedule, Shutdown Parameters), Logs and Notification (Measurements, Event Log, System Log, Email Notification), and Settings (Network, Radius, LDAP, System, Notified Applications, Access Control, SNMP, Time, Firmware Upload). The main content area is titled "Radius Settings" and "Evolution 650 Computer Room". It contains the following fields: Enable Configuration (Enabled), Primary/Secondary (Primary), Radius Server (xxx.xxx.xxx.xxx), Secret (masked with dots), NAS IP Address (xxx.xxx.xxx.xxx), Auth. Port (1812), Time Out (10), and Retry Number (3). There are "Save" and "Back" buttons at the bottom.

- **Enable Configuration:** If enabled, this server will be used during radius authentication process.
- **Primary/Secondary:** identifies the priority order between Radius servers. The primary is used in first (if enabled) , if it is unreachable, the secondary is used.
- **Radius Server:** identifies the name or the IP (IPv4 or IPv6) address of the server.
- **Secret:** identifies the secret shared between the card and the Radius Server
- **NAS IP Address:** identifies the IP address of the NAS (the Network Management Card) to use. The possible values in the GUI list are based on the IPv4 and IPv6(s) addresses of the card.
- **Auth. Port:** identifies the remote radius server port.
- **Time Out:** identifies the delay to wait before to send another radius request.
- **Retry Number:** identifies the number of request to send before testing another Radius server (if available).

4.4.2.2 Authorization management

After an authentication success, the card must check if the user has the permission to open a (admin) session. Two radius attributes are used to manage admin authorization:

- An IETF attribute: Service-Type (6)
- An Eaton Vendor Specific Attribute (534): Eaton-UserLevel (28)

If one of these attribute is present with the value as defined in the following table the access of the card is allowed, else the access is **refused**:

Attribute Definition			Value for Admin Authorization
IETF Attribute Name	Attribut ID		
Service-Type	6		6
Vendor Specific Attribute Name	Vendor ID	Attribut ID	1
Eaton-UserLevel	534	28	

Network Management Card (Network-MS) User Manual

4.4.3 LDAP

4.4.3.1 Setting Page Configuration

Click on **LDAP** in the menu.



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

This menu allows the administrator to configure LDAP settings on the card. The settings on this page are editable only if the parameter of the External Authentication on the [Access control](#) page is set to LDAP.

Evolution 650 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

LDAP Configuration

Evolution 650

Computer Room

Authentication Mechanism:
User Search Bind:
Search User:
Search User Password:
User Base DN:
User Object:
User Attribute:
Authorization Mode:
UPS Group Base DN:
Group Name Attribute:
User Name Attribute:

	Priority	LDAP Server Name or IP Address	Port
<input checked="" type="radio"/>	PRIMARY	xxx.xxx.xxx.xxx	389
<input type="radio"/>	SECONDARY		389

Select the LDAP Server to be modified.

- **Authentication Mechanism:** identifies the binding type used. The card supports simple and Digest MD5 (SASL) mechanisms. For Digest MD5, your DNS server MUST support the reverse lookup on the IP address of your LDAP server.
- **User Search Bind:** identifies the binding type used to search user. The card supports anonymous bind and a bind with an accredited user. When an accredited user is used, the Mechanism used is the Mechanism set in the Authentication Mechanism field.
- **Search User:** identifies the User which is used to search user information during login step. This attribute is a Distinguished Name when the Authentication Mechanism is set to simple, and a SASL username when the Authentication Mechanism is set to Digest MD5.
- **Search User Password:** identifies the password of the Search User.

Network Management Card (Network-MS) User Manual

- **User Base DN:** identifies the database entry from which the user search is started.
- **User Object:** identifies the LDAP class of the user object.
- **User Attribute:** identifies the attribute name where the login identifier is stored.
- **Authorization Mode:** identifies the method to use for authorization:
 - None: all authenticated users are authorized.
 - By User Attribute: the authorization credential (UPSAdministrators value) is stored in the Group Name Attribute of the LDAP user.
 - By Group: the authorization credential is stored in LDAP Groups.
- **UPS Group Base DN:** identifies the database entry from which the UPS group search is started.
- **Group Name Attribute:** identifies the attribute name where the UPS group identifier ("UPSAdministrators" value) is stored.
- **User Name Attribute:** identifies the attribute name in the object group where the user identifier is stored.

Two LDAP servers can be registered. The secondary server is used when the primary does not respond in the delay (time out).

The button Modify Server' allows to edit and to modify the server configuration selected.

The screenshot shows the 'Evolution 650 - Computer Room' web interface. On the left is a navigation menu with sections: UPS (UPS Properties, UPS Control, Weekly Schedule, Shutdown Parameters), Logs and Notification (Measurements, Event Log, System Log, Email Notification), and Settings (Network, Radius, LDAP, System, Notified Applications, Access Control, SNMP, Time, Firmware Upload). The main content area is titled 'LDAP Settings' and includes a 'Help' link. Below the title, it says 'Evolution 650' and 'Computer Room'. The settings are as follows:

Enable Configuration:	Enabled
Primary/Secondary:	Primary
LDAP Server:	xxx.xxx.xxx.xxx
Port:	389

At the bottom of the settings area are 'Save' and 'Back' buttons.

- **Enable Configuration:** If enabled, this server will be used during LDAP authentication process.
- **Primary/Secondary:** identifies the priority order between LDAP servers. The primary is used in first (if enabled) , if it is unreachable, the secondary is used.
- **LDAP Server:** Server Name or IP Address of the server.
- **Port:** identifies the remote LDAP server port.

4.4.3.2 Authorization management

When an authorization mode is set, the “**UPSAdministrators**” string is searched in the LDAP Directory. Consequently, the LDAP Directory must be updated in the following way to allow users to open Web session in the NCM card:

- If the mode is “**By User Attribute**”: the administrator must set the LDAP attribute defined by the “**Group Name Attribute**” with the “**UPSAdministrators**” value. This update must be done for all allowed users.
- If the mode is “**By Group**”: the LDAP administrator must create a group with the following properties :
 - The location of this group in the LDAP directory must set under the DN path set in the **UPS Group Base DN** value.
 - The attribute defined in the **Group Name Attribute** must be set with the “**UPSAdministrators**” value.
 - All allowed users must be declared as member of this group: the multi valued attribute defined in the **User Name Attribute** must be set with all allowed users DN .

4.4.3.3 MD5 Authentication Mechanism

When MD5 is set as Authentication Mechanism, the following rule must be applied:

- A DNS server must be registered in the Network Configuration of the card.
- A DNS reverse lookup must be possible for the LDAP IP server.
- If an Accredited User is used for the LDAP search, its name is no longer a DN but a SASL name.
- The user login must be compliant with the SASL name rules of the LDAP server used.

4.4.3.4 Typical Setting Values for Active Directory

If the LDAP server is Active Directory, the following values are usually employed:

For user settings :

- User Object: **user**
- User Attribute: **sAMAccountName**

For Authorization settings when the group mode is set:

- Group Name Attribute: **sAMAccountName**
- User Name Attribute: **member**

Network Management Card (Network-MS) User Manual

4.4.4 System

Click on **System** in the menu.



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

This menu enables the customisation of the information on the [UPS properties](#) pages.

Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS	System Settings	Help
<ul style="list-style-type: none"> UPS Properties UPS Control Weekly Schedule Shutdown Parameters 	<p>Powerware 9130 700</p> <p>Computer Room</p> <p>UPS Contact : <input type="text" value="Computer Room Manager"/></p> <p>UPS Location : <input type="text" value="Computer Room"/></p> <p>Default Language : <input type="text" value="English"/></p> <p>History log interval (sec): <input type="text" value="60"/></p> <p>Environment log interval (sec): <input type="text" value="300"/></p> <p>Save modified settings : <input type="button" value="Save"/></p> <p><input checked="" type="checkbox"/> Keep TCP/IP parameters</p> <p><input type="button" value="Reset Communication"/></p> <p><input type="button" value="Factory Reset"/></p>	
<p>Logs and Notification</p> <ul style="list-style-type: none"> Measurements Event Log System Log Email Notification 		
<p>Settings</p> <ul style="list-style-type: none"> Network RADIUS LDAP System Notified Applications Access Control SNMP Time Firmware Upload 		

- **UPS Contact:** This text field is limited to 49 characters. Enter the name of the person responsible for UPS administration at IT network level and/or electrical maintenance. This field does not appear on any other Web page. By default, its value is "Computer Room Manager".
- **UPS Location:** Enter a description (limited to 31 characters) of the location of the UPS in your installation (e.g. Computer room E1-C066). This text is displayed in the home page and in the title of the page. By default, its value is "Computer Room".
- **Default Language:** Enables initialisation of the browser language at card connection. Choice of one of the available languages: English, French, German, Spanish, Italian, Chinese Traditional, Chinese simplified, Japanese, Portuguese, Russian, Korean, Czech changes the language of the html interface pages (Refresh the web page <F5> after modification).
- **History log interval:** [from 5 to 99999 sec., 60 by default]. Measurement save period.
- **Environment log interval:** [from 60 to 99999 sec., 300 by default]. Temperature and humidity measurement save period.
- **Reset Communication button:** performs a remote reboot of the card without modifying the configuration. This action is compulsory for consideration of any changes made on the "Network Settings" page.
- **Factory Reset button:** enables restoration of the default configuration of all the card's parameters. TCP/IP parameters: IP address, subnet mask, gateway and BootP/DHCP value are maintained if the "Keep TCP/IP parameters" option is selected.

Network Management Card (Network-MS) User Manual

4.4.5 Notified Applications

Click on **Notified Applications** in the menu.



NOTE *If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.*

This menu enables:

- The addition of the supervision stations receiving traps and configuration of the trap type.
- To list all the Notified Applications and the main parameters.
- To test the operation of notified applications
by simulating power loss
by sending a real shutdown sequence.

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- RADIUS
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Notified Applications

Help

Powerware 9130 700

Computer Room

All	Nr	Hostname or IP Address	Application Name	Output	Configuration	Shutdown duration(sec)	Shutdown after(min)	Connected
Select the applications to be removed. <div>Remove</div>								
Select the applications to be tested. <div>Utility failure Test</div> <div>Shutdown Test</div>								
Select the Network-Management-System to be modified. <div>Modify NMS</div> <div>Add NMS</div>								

Up to 100 destinations can be managed by the card:

- 35 in TCP connected mode or
- 100 in UDP not connected mode or
- mixed mode: 20 connected and 50 not connected.

Important note: It is not necessary to add the Intelligent Power Protector protecting your servers in this list. These modules subscribe and unsubscribe themselves automatically.

Select an entry in the list to modify the values in the edit zone at the bottom of the page. The table displays the following information:

- **All**: selects all the lines.
- **Nr**: the index where the application is stored into the table.
- **Hostname or Address IP**: By priority, the hostname of the computer is displayed when the IP address can be converted into a hostname by a DNS server or if the application has been entered as a hostname.

Network Management Card (Network-MS) User Manual

- **Application Name:** Given by the application at subscription time.
- **Output:** number of the UPS output from which the client is powered.
- **Configuration:** shows where the parameters of the Intelligent Power Protector come from: Local (coming from the application) or Central (coming from the card).
The [Central shutdown configuration](#) is available by clicking on the **Configuration** link.
- **Shutdown duration:** the shutdown duration necessary to properly shutdown the computer.
- **Shutdown after:** the time available to the user from the power failure until the launch of the shutoff sequence of the UPS and equipment.
- **Connected:** This value is set to YES if the notified application connects through TCP protocol.

Many actions are available on this page:

- **Remove:** Depending on the kind of application, the selected ones will definitively disappear from the table as SNMP applications, or they will disappear and automatically re-subscribe as Intelligent Power Protector applications.
- **Utility failure Test:** Two alarms, 'Utility failure' and 'Utility restored' spaced 60 seconds apart, will be sent to the applications selected, making sure that the applications can be reached over the network.
- **Shutdown Test:** This test simulates a UPS low battery sequence. It enables an easy check to see if the server protection works correctly.
 - No intervention on the UPS is required.
 - The applications selected will process the simultaneous alarms and perform an actual shutdown sequence.

WARNING!

- This test will generate a REAL shutdown sequence of the selected servers on which the Intelligent Power Protector application is running.

- **Add NMS:** allows an SNMP trap receiver to be added such as a Network Management System.
- **Modify NMS:** allows an SNMP trap receiver to be modified.

Both buttons open a new window where it is possible to enter the Application name, the Hostname or IP Address, the trap port, the protocol version needed: V1, V3 or both, the Trap community (only used in V1) and the filter on the several implemented MIBs.

Network Management Card (Network-MS) User Manual



Powerware 9130 700 - Computer Room

UPS		Network Management System	
<ul style="list-style-type: none"> UPS Properties UPS Control Weekly Schedule Shutdown Parameters 	Powerware 9130 700 Computer Room		
		Application Name :	<input type="text"/>
		Hostname or IP address :	<input type="text"/>
		<input type="checkbox"/> Trap Port :	<input type="text" value="162"/>
		Protocol :	V1&V3 <input type="button" value="v"/>
		Trap Community :	<input type="text"/>
		MIB filter:	<input type="checkbox"/> Pulsar <input type="checkbox"/> IETF <input checked="" type="checkbox"/> Powerware
		<input type="button" value="Cancel"/> <input type="button" value="Save"/>	

By default, the MIB filter selected corresponds to UPS: Pulsar or Powerware.

4.4.6 Central shutdown configuration

Note: Intelligent Power® Manager provides more advanced configuration management features

Click on Notified Applications in the menu, then Configuration.

EATON
Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Central shutdown configuration Help

Powerware 9130 700 Computer Room

This configuration will be used by the shutdown application, on next connection.

Shutdown Parameters

☐ Shutdown after: min Shutdown duration: sec

Broadcast

- ☒ Administrators
- ☒ Users

This page is used to define either the "shutdown" or the "notification" settings used by the Intelligent Power Protector that connects to Network Management Card. These settings are used by the Intelligent Power Protector if they are in central-configuration mode or if their configuration is not valid.

- **Shutdown duration:** the shutdown duration necessary to properly shutdown the computer.
- **Shutdown after:** the time available to the user from the power failure until the launch of the shutoff sequence of the UPS and equipment. This parameter is optional. Uncheck the box if you wish not to use this parameter.
- **Broadcast :** Sends network notifications to the **Administrators** and **Users** groups on events declared in the server hosting the NSM

If you wish to set up a new configuration for the Network Shutdown Modules already set to "central-configuration mode", proceed as follows:

- Change the IPP parameters in the "Notified Applications" page.
- Click the "Save" button.
- In this page, select the IPPs for which you want to apply the new configuration.
- Press the "Remove" button.
- The IPPs selected will disconnect then reconnect and use the new configuration.

4.4.7 Access control

Click on **Access Control** in the menu.



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

This menu enables configuration of the different parameters enabling secure access to the card via a browser.

The screenshot displays the 'Access Control' configuration page for the 'Evolution 650 - Computer Room'. The left sidebar contains a navigation menu with categories: UPS, Logs and Notification, and Settings. The 'Settings' category is expanded, showing options like Network, Radius, LDAP, System, Notified Applications, Access Control (selected), SNMP, Time, and Firmware Upload. The main content area is titled 'Access Control' and includes a 'Help' link. Below the title, the 'Evolution 650' section is active, showing the 'Computer Room' configuration. The form includes fields for 'Enter New Manager Login' (set to 'admin'), 'Enter New Password' (masked with dots), and 'Confirm New Password' (masked with dots). It also features dropdown menus for 'External Authentication' (set to 'LDAP') and 'Authentication Order' (set to 'Local First, then External'). Session management settings include 'Session Time expiration after inactivity (s)' (500) and 'Maximum Session Time (s)' (9999). Under 'Security mode', three radio buttons are present: 'Authentication for configuration' (selected), 'Full authentication', and 'SSL and full authentication'. Checkboxes for 'Telnet Access enabled' (checked) and 'SSH Security enabled' (unchecked) are also visible. The 'Console Interface' is set to 'CLI'. At the bottom, there is a 'Save modified settings' button.

- **Enter New Manager Login:** The login user name. This text field (limited to thirty characters) enables secure access and modification of pages. Default value is admin.
- **Enter New Password:** This text field (limited to thirty characters) enables secure access to Configuration menu pages. Default value is **admin**.
- **Confirm New Password:** Re-enter the new password.
- **External Authentication:** identifies the type of authentication used between LDAP and Radius. If None is chosen, the local user database is used.
- **Authentication Order:** identifies the priority order used between local and external authentication.
- **Session Time expiration after inactivity (s):** identifies the time after which the session is closed if no activity is detected.
- **Maximum Session Time (s):** identifies the maximum time of a session whatever activity.
- **Security mode:** Manages the various authentication methods for page access:
 - Authentication for configuration:** Only the configuration pages are protected by login / password
 - Full authentication:** All pages are protected by login / password
 - SSL and full authentication:** All pages are protected by login / password and are only accessible in SSL

SSL Access: When selected, access to the Web interface is made in secure mode (https).

Network Management Card (Network-MS) User Manual

Connections with Intelligent Power Protector stay in standard mode (secure TCP)

SSL Security Implementation:

SSL	→ version 3.0
TLS	→ version 1.0
Method	→ TLS_RSA_WITH_512_MD5
Certificate	→ 1024 bits
Auth	→ RSA
Key Exchange	→ RSA
Encryption	→ RC4_512
Digest	→ MD5

Changes take effect after a card reboot

- **Telnet access:** This parameter enables the access to the setting parameters interface via a Telnet/SSH connection.
- **Telnet security:** This parameter defines the protocol for the access to the setting parameters interface. These 2 values are mutually exclusive.
- **TELNET:** The data are read or written via an unsecured access.
- **SSH:** The data are read or written via a secured access.
- **Console interface:** This parameter defines the way to access the setting parameters. The 2 values are mutually exclusive. The selected HMI (Human Machine Interface?) is available for the TCP/IP connection (RS232 not concerned) and for the 2 protocols (Telnet, SSH). The new value will be taken into account after a manual reset of the NMC.
- **MENU:** The HMI is a menu interface and the parameters are accessible via some pre-defined menus.
- **CLI:** The access to the parameters is done independently of each other using the command line interface.
- **Save:** Saves any modifications.

Network Management Card (Network-MS) User Manual

4.4.8 SNMP Setting

Click on **SNMP** in the menu.

To access this page, the login and password are systematically requested if they have not already been entered.

This menu enables configuration of the SNMP security parameters.

EATON
Powering Business Worldwide

Pulsar 1000 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

SNMP Settings Help

Pulsar 1000 Computer Room

SNMP Version : V1&V3 ▼

☐ SNMP Port : 161

SNMP V1 Setting

Community Read-Only : public

SNMP Write : Enabled ▼

Community Write : private

SNMP V3 Setting

Read-Only User : readuser

Read-Only Security Level : Auth No Priv ▼

Read-Only Authentication Password :

Read-Only Privacy Password :

Read-Write User : writeuser

Read-Write Security Level : Auth Priv ▼

Read-Write Authentication Password :

Read-Write Privacy Password :

Notification Username : notifuser

Save modified settings :

- **SNMP Version:** This field allows the user to select the snmp protocol version: {Disabled, V1, V3 are supported by the card}.
- **SNMP Port:** Allows the user to select and modify the port number of the SNMP server.
- **SNMP Community Read-Only:** The SNMPv1 Read community name that identifies a sub-group attached to a network manager or a logical entity. The card and the clients must share the same community name to communicate.
- **SNMP Write Enabled:** Enables SNMP write function.
SNMP Community Write: Displays only if SNMP Write is enabled. The SNMPv1 Write community name that identifies a sub-group attached to a network manager or a logical entity. The card and the clients must share the same community name to communicate.
- **Read-Only User:** identifies the login of the user in the SNMPv3 version which is authorized to read only SNMP variables.
- **The Read-Only Security Level:** selects the security level
- **No Auth No Priv:** the user must not use authentication and privacy to access to SNMP variables.

Network Management Card (Network-MS) User Manual

- Auth No Priv: the user must use authentication and NOT privacy to access to SNMP variables.
- Auth Priv: the user must use authentication and privacy to access to SNMP variables.
- **The Read-Only Authentication Password:** allows administrator to specify a new authentication password for the Read-Only User. Its length must be ranging between 8 and 24 characters and using only letters, numbers and <>@#%_=:;,./?|\$(*)-~ symbols.
- **The Read-Only Privacy Password:** allows administrator to specify a new privacy password for the Read-Only User. Its length must be ranging between 8 and 24 characters and using only letters, numbers and <>@#%_=:;,./?|\$(*)-~ symbols.
- **The Read-Write User:** identifies the user in the SNMPv3 version which is authorized to read and write SNMP variables.
- **The Read-Write Security Level:** selects the security level:
 - No Auth No Priv: the user must not use authentication and privacy to access to SNMP variables.
 - Auth No Priv: the user must use authentication and NOT privacy to access to SNMP variables.
 - Auth Priv: the user must use authentication and privacy to access to SNMP variables.
- **The Read-Write Authentication Password:** allows administrator to specify a new authentication password for the Read-Write User. Its length must be ranging between 8 and 24 characters and using only letters, numbers and <>@#%_=:;,./?|\$(*)-~ symbols.
- **The Read-Write Privacy Password:** allows administrator to specify a new privacy password for the Read-Write User. Its length must be ranging between 8 and 24 characters and using only letters, numbers and <>@#%_=:;,./?|\$(*)-~ symbols.
- **The Notification username:** allows administrator to specify the “username” field for SNMPV3 notifications. This field has to also be defined in the applications that received those notifications.
- **Save:** Saves any modifications.

Network Management Card (Network-MS) User Manual

4.4.9 Date and time

Click on **Date and Time** in the menu.

This menu enables initialisation of the date and time of the card in three different ways.

The date format is always of year/month/day type

EATON
Powering Business Worldwide

Pulsar 1000 - Computer Room

Setting time Help

Pulsar 1000 Computer Room

Current date and time

Date (yyyy/mm/dd):	2014/09/22
Time (hh:mm:ss):	10:56:02

Setting time

☐ Set manually

Date (yyyy/mm/dd):	2014/09/22
Time (hh:mm:ss):	10:56:02

☒ Accept automatic update from EATON applications

☐ Synchronize with NTP server

Hostname :	ntpserver
Time-Zone :	((GMT) Casablanca, Greenwich Mean TIME : Dublin, Lisbon, London ▼)
Daylight saving time	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Start	First ▼ Sunday ▼ January ▼ Time 00:00 [HH:MM]
End	First ▼ Sunday ▼ January ▼ Time 00:00 [HH:MM]

Save modified settings : Save

- **Set manually:** Enables initialisation of the date and time of the card, with the values entered in the Date and Time fields. This update is made after clicking on the **Save** button.
Maximum drift is +/- 2 min./month
- **Accept automatic update from IPP or IPM:** Enables initialisation of the date and time of the card, with the values provide by the Intelligent Power Protector or the Intelligent Power Manager.
- **Synchronize with NTP server:** Enables connection with a time server, either available on the company's internal network or on the Web. This server communicates GMT time. The IP address or hostname of the time server must be entered, and the time zone of your geographic area must then be selected from the list. Connection is made with the server and the date and time are set after clicking on the "Save" button. Time is updated every five hours, thus preventing any drift in the time. After two attempts, if the NTP server is not accessible, the card resends periodic requests.
The card uses the NTP protocol (UDP 123 port). The "firewall" must be configured to transmit queries outside the intranet. When ntp could not be contacted, an error message is issued at the top of the web page.
Daylight Savings Time: Enable the time adjustment for daylight saving time.

Network Management Card (Network-MS) User Manual

1. Select the **Week** number, **Day**, **Month**, and **Time** for which daylight saving time should start. For example, if daylight saving time starts the second Sunday of March at 2:00 am, select Second Sunday and March, and then enter 02:00.
2. Select the **Week** number, **Day**, **Month**, and **Time** for which daylight saving time should end. For example, if daylight saving time ends the first Sunday of November at 3:00 am, select First Sunday, and November, and then enter 03:00

Note 1:

The even the card is used in a UPS supporting time-stamping, the card's time is automatically synchronized with that of the UPS.

Note 2:

After start-up, if the card is in manual mode or if no NTP server was reached, the card initializes at 01/01/1970.

Network Management Card (Network-MS) User Manual

4.4.10 Firmware upload

Click on **Firmware Upload** in the menu.

This menu enables a new firmware version to be uploaded



EATON
Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Firmware Upload

Powerware 9130 700


Firmware to Upload :

Choisissez un fichier | Aucun fichier choisi | Upload

WARNING: This action takes a few minutes.
Don't click on any button or item during this operation.

To upload a new version of the card's firmware, select the file to be loaded using the **Browse...** button and click Upload.

Do not interrupt the operation before the card displays the following screen:

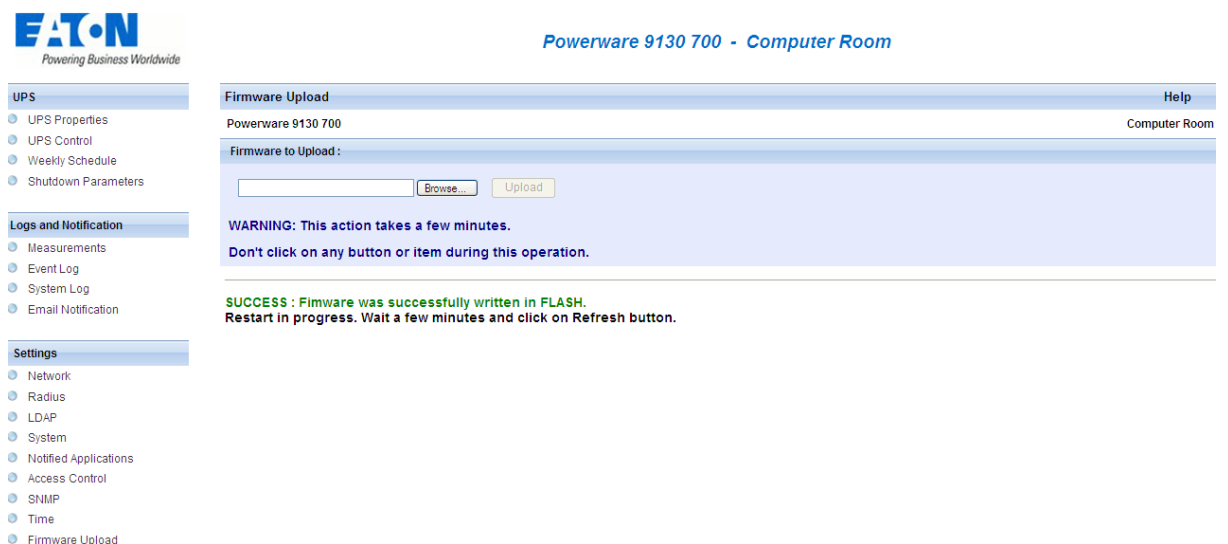

EATON
Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Firmware Upload

Powerware 9130 700

Firmware to Upload :

Browse... | Upload

WARNING: This action takes a few minutes.
Don't click on any button or item during this operation.

SUCCESS : Firmware was successfully written in FLASH.
Restart in progress. Wait a few minutes and click on Refresh button.

4.5 Environment Sensor (option)

The environment sensor (66846) is an option that enables temperature and humidity to be measured, and indication of the position of two external contacts. It is connected with a standard network cable to the Card Settings port of the Network Management Card.

The card automatically detects sensor presence. The main menu then displays an additional section "Environment" with the following elements:


- Status
- Configuration
- Log

Important note: To switch the serial port to the configuration mode, just disconnect the cable and [reset the card](#).

4.5.1 Characteristics

- Temperature measurement from 0 to 70 °C with +/- 1 °C accuracy
- Measurement of humidity from 0 to 100% with +/- 6% accuracy
- Min / max time-stamped function for temperature and humidity
- Choice of temperature readings in Celsius or Fahrenheit
- High and low thresholds, hysteresis and offset adjustable via Web interface
- Possibility of notification of status changes by e-mail, SMS or SNMP trap
Note: SMS notification requires the use of a third-party application that converts emails to SMS
- Position detection of 2 dry contacts (maximum sensor/contact distance: 20 m)
- Name and status of each configurable contact
- Recording of events and measurements in the card log
- Possibility of shutting down the installation safely if one of the thresholds is exceeded or dry contact status change
- Connection to the Network Management Card by shielded CAT5 straight RJ45 network cables (maximum card/sensor distance: 10m)

4.5.2 Environment Status

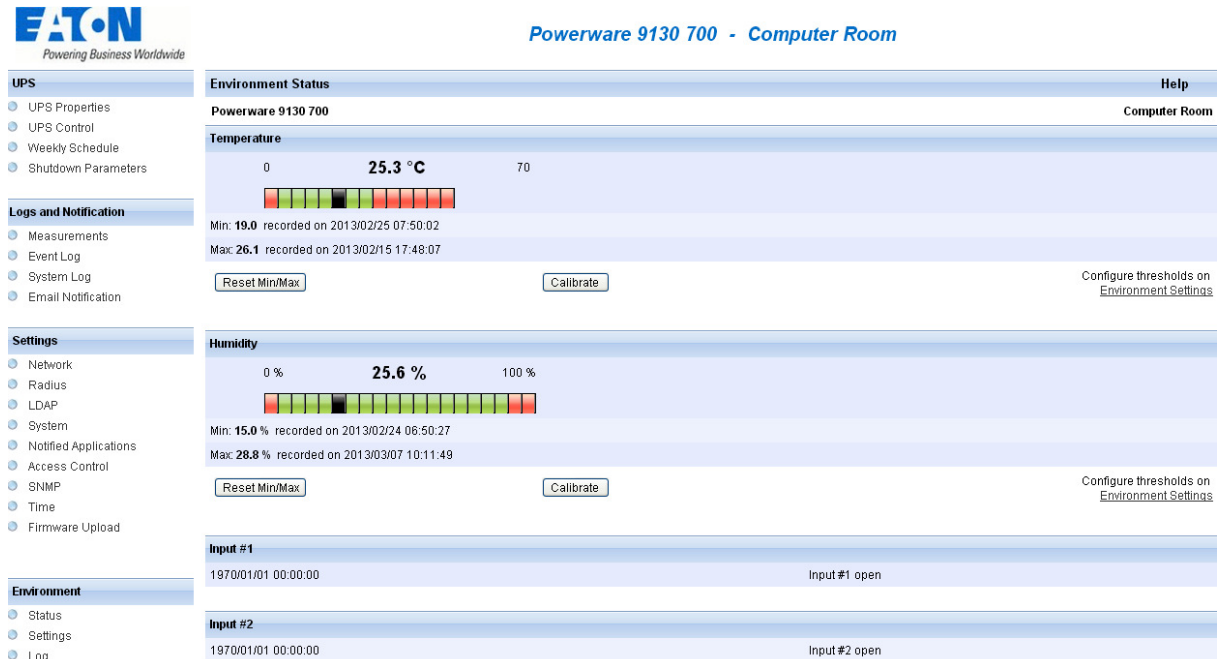

For both measurements, a graduated gauge proposes the following functions:

The cursor indicates the current value.

Two red zones to the left and right represent the high and low thresholds that can be set on the Environment Settings page.

When the measured value enters one of these zones, an alarm can be notified (see Notification parameter in the Environment Settings page).

Time-stamped minimum and maximum temperatures show the extreme values recorded since the last Reset Min/Max.

Min and Max can be forced at any time to the current value by clicking on the Reset Min/Max button.

Calibrate: The sensor is factory-calibrated, but the user can apply an offset to adjust the measurement.

Input #1 and Input #2 show the position of the two contacts acquired by the sensor.

The position is displayed with the parameters entered in the Environment Settings page.

The last status change of each contact is time-stamped.

The Internet browser updates this page every 10 seconds

Network Management Card (Network-MS) User Manual

4.5.3 Environment Settings



NOTE If you are not already logged on, you will be prompted to enter your user name and password before accessing this page.

EATON Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Environment

- Status
- Settings
- Log

Environment Settings

Powerware 9130 700

Sensor name:	Environment sensor		Notification	System Shutdown
Temperature	High threshold:	40	<input type="checkbox"/>	<input type="checkbox"/>
	Low threshold:	5	<input type="checkbox"/>	<input type="checkbox"/>
	Hysteresis:	2		
Humidity	High threshold:	90 %	<input type="checkbox"/>	<input type="checkbox"/>
	Low threshold:	5 %	<input type="checkbox"/>	<input type="checkbox"/>
	Hysteresis:	5 %		
Input #1:	Input #1	closed when closed	<input type="checkbox"/>	<input type="checkbox"/>
		open when open	<input type="checkbox"/>	<input type="checkbox"/>
Input #2:	Input #2	closed when closed	<input type="checkbox"/>	<input type="checkbox"/>
		open when open	<input type="checkbox"/>	<input type="checkbox"/>

☒ Show advanced parameters

Save modified settings:

The environment sensor measures temperature, humidity and gives the status of the 2 contacts (used for door, alarms or generator unit).

The temperature and humidity thresholds can be adjusted and can trigger notification and correct shutdown of the protected system.

The Sensor name is the function name given to the sensor, usually it enables location of the sensor.

Temperature: Choose the temperature unit (°C or °F) from the selection box.

Note: Changing the temperature unit clear the log file.

High threshold: if this value is exceeded, a notification if enabled. The default value is 40 °C / 104 °F.

Low threshold: If this value is exceeded, a notification if enabled. The default value is 5 °C / 41 °F.

Hysteresis must be set to prevent multiple notifications if temperature fluctuates around a threshold.

The default value is 2 °C / -3.6 °F.

The high alarm disappears when the value drops below the High threshold - Hysteresis value

The low alarm disappears when the value returns above the Low threshold + Hysteresis value

Humidity

High threshold: If this value is exceeded, a notification is sent if this is validated. The default value is 90%.

Low threshold: If this value is exceeded, a notification is sent if this is validated. The default value is 5%.

Hysteresis must be set to prevent multiple notifications if humidity fluctuates around a threshold. The default value is 5%.

Network Management Card (Network-MS) User Manual

The high alarm disappears when the value drops below the High threshold - Hysteresis value

The low alarm disappears when the value returns above the Low threshold + Hysteresis value

Input #1 and **Input #2**: Enter an identifier corresponding to the acquired contact (e.g.: rack door, air conditioning, generator unit, etc.). Max. length is 28 characters.

When closed and when open: are the names associated to the two contact positions. (e.g.: "open" and "closed" for a door, "On" and "Off" for a generator).

Each status change triggers a notification if enabled.

When the **Notification** box is enabled, the following functions are activated for each event selected:


- display in the [list of current alarms](#)
- Consideration in the [UPS log](#)
- SNMP trap generation
- notification by e-mail (if the Environment sensor notification option is enabled in the [e-mail notification](#) page)

The list of messages is provided in the [appendix](#)

System shutdown can be triggered for each notification if this option is enabled. If notification is disabled, the Shutdown option cannot be used.

Network Management Card (Network-MS) User Manual

4.5.4 Log



Powering Business Worldwide

Powerware 9130 700 - Computer Room

UPS

- UPS Properties
- UPS Control
- Weekly Schedule
- Shutdown Parameters

Logs and Notification

- Measurements
- Event Log
- System Log
- Email Notification

Settings

- Network
- Radius
- LDAP
- System
- Notified Applications
- Access Control
- SNMP
- Time
- Firmware Upload

Environment

- Status
- Settings
- Log

Environment Log Data

Powerware 9130 700

Save Log

Clear Log

Help

Computer Room

Date	Time	Temperature (°C)	Humidity (%)
2013/03/06	09:32:11	23	24
2013/03/06	09:37:19	23	24
2013/03/06	09:42:27	23	24
2013/03/06	09:47:35	23	24
2013/03/06	09:52:43	23	24
2013/03/06	09:57:51	23	24
2013/03/06	10:02:59	23	24
2013/03/06	10:08:07	23	24
2013/03/06	10:13:15	23	24
2013/03/06	10:18:23	23	24
2013/03/06	10:23:31	23	24
2013/03/06	10:28:39	23	24
2013/03/06	10:33:47	23	24
2013/03/06	10:38:55	23	24
2013/03/06	10:44:03	23	24
2013/03/06	10:49:12	23	24
2013/03/06	10:54:20	23	24
2013/03/06	10:59:28	23	24

The two environment sensor measurements: Temperature and Humidity are recorded at an interval defined by the Environment log interval in the [System settings](#) page.

By default, this period is 300 seconds.

Each measurement is dated and stored in the log of the UPS's communication card.

The size of log files is limited by a time indexing system.

The user can **Save** the log on his/her workstation at any time, in a CSV format file.

The user can also **Clear** the files contained in the card to reset the log.

5 Server protection

5.1 Set-up of the shutdown parameters

The protection application: Intelligent Power Protector, on protected server boot, subscribes itself automatically to [notified applications](#) list and sends its essential data:

- IP Address or hostname of the server on which it is installed: So that the card can inform it of power events.
- Time required to shutdown the server (Shutdown Duration, configurable in the "Set-up" menu of each IPP): The card takes into account the longest shutdown time of all the Intelligent Power Protector subscribed (This is the Shutdown duration of the [Shutdown parameters](#) page to manage UPS shutdowns without affecting any of IPP connected.

During normal operation, the protection application periodically checks its connection with the card.

In case of a major power event, the card sends information to the protection application which reacts according to the situation. (shutdown order, programmed actions, messages to the administrator and to users via the network)

When the server shuts down, the protection application unsubscribes itself from the [notified applications](#).


5.1.1 Shutdown criteria managed by the Network Management Card

During an extended power failure, three criteria may cause the server shutdown procedure to be initiated. If several criteria are selected, (See page [Shutdown parameters](#)), the first criterion encountered will launch the shutdown procedure.

At the end of the shutdown procedure, when all servers have been shut down, the UPS may shut down to avoid unnecessary discharge of its batteries, depending on its configuration.

Network Management Card (Network-MS)

User Manual

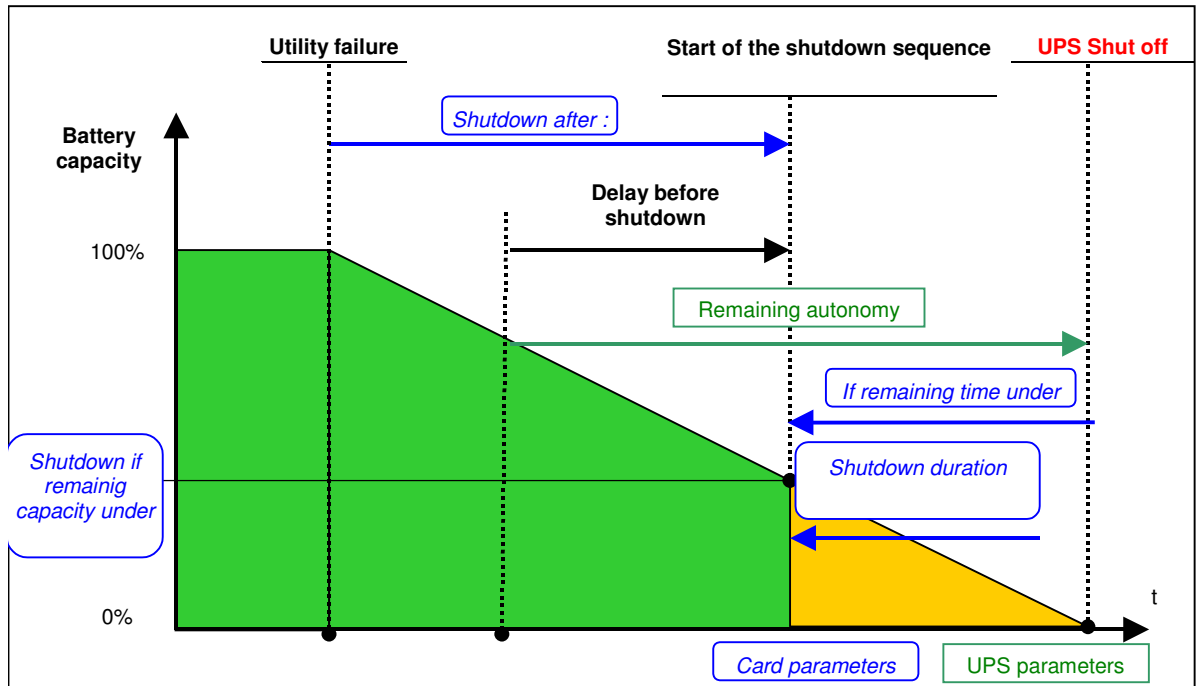

5.1.1.1 Backup time before initiating the shutdown procedure (Shutdown After – Shutdown Timer)

When the UPS switches to battery, the Network Management Card starts the Shutdown Timer countdown and launches the system shutdown procedure at the end of the countdown.

This value must be chosen so that users have time to complete their tasks and disconnect, without exceeding battery backup time.

Note 1:

The Intelligent Power Protector can also manage its own Shutdown Timer (configurable in the Shutdown Module "set-up" menu of each Intelligent Power Protector) launched when the UPS switches to battery. Note that if this criterion is selected to initiate system shutdown, automatic system reboot when power is restored is not guaranteed (e.g. power restoration if only this system was shut down).

5.1.1.2 Initiating the shutdown procedure when the battery level is lower than: (If Capacity under)

When the card detects that the remaining backup time percentage is less than the configured level, the shutdown sequence is started.

By default, this value is set at 20%.

Note:

The UPS already manages an equivalent parameter for the end of backup pre-alarm.

Network Management Card (Network-MS) User Manual

The card does not accept values less than that programmed in the UPS.
Check the UPS documentation.

5.1.1.3 Shutdown when backup time is less than

When the Network Management Card detects that the percentage of backup time remaining is less than the value set, the shutdown sequence is started.

5.1.1.4 Shutdown duration

Duration (in seconds) required for the system protected by the protection application to shut down.

The protection applications send their own "Shutdown duration" to the Network Management Card.
Based on these values (maximum Shutdown duration of all subscribed customer systems) that the card will send to the delayed shutdown order to the UPS.

5.1.2 Controlled outlets


Certain UPS models are equipped with controlled outlets (generally 2) which are always dependant on the UPS's main outlet.

Shutdown of the main outlet systematically causes shutdown of the programmable outlets.

Warning: Some inverters have only 2 programmable plugs without mains plug (Powerware). With this type of UPS, stopping a programmable outlet causes the UPS shutdown.

The following notations are used to identify these outlets:

- Main outlet: Main
- Controlled outlet 1 1
- Controlled outlet 2 2

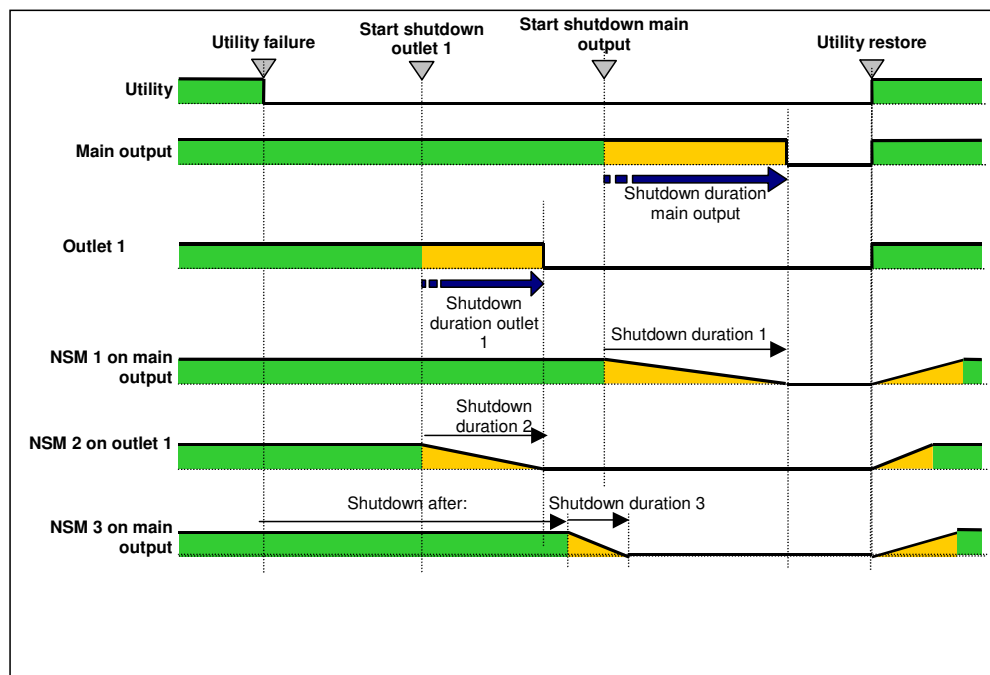

5.1.3 Protection of a server connected to a controlled outlet

Intelligent Power Protector (IPP) starting with version 3.0 are compatible with the controlled outlets.

After connecting the server electrically to one of the controlled outlets, the IPP must be informed of the outlet number to which it is connected.

Refer to the documentation of the IPP available on the internet site www.eaton.com

5.1.3.1 Load shedding or sequential shutdown

It is possible to optimise backup time by shutting down non-priority equipment or sequencing the shutdown of several devices.

Network Management Card (Network-MS) User Manual

Two shutdown criteria are possible:

- Shutdown of outlets after a set battery back-up time (After)
- Shutdown of outlets at a given battery discharge level (if battery capacity under)

It is possible to specify values for both criteria. The first criterion reached will initiate server shutdown.

5.1.3.2 Sequential startup

It is possible to delay outlet power-on to reduce inrush currents on startup or to sequence the startup of several devices.


Controlled outlet startup after a given time is based on startup of the main outlet.

5.2 The different server and UPS shutdown sequences

5.2.1 Extended power outage, shutdown initiated by the Shutdown Timer (Shutdown after)

During battery backup time, the Shutdown Timer of the Network Management Card is reached: After a user-defined backup time period ([Shutdown parameters](#) page), the shutdown of all servers is initiated, followed by the UPS shutdown (depending on its configuration). The UPS restarts when utility power is restored (depending on its configuration)

Shutdown duration: Maximum value of shutdown times of protection application subscribed to the card. This value is updated each time a client subscribes/ unsubscribes.

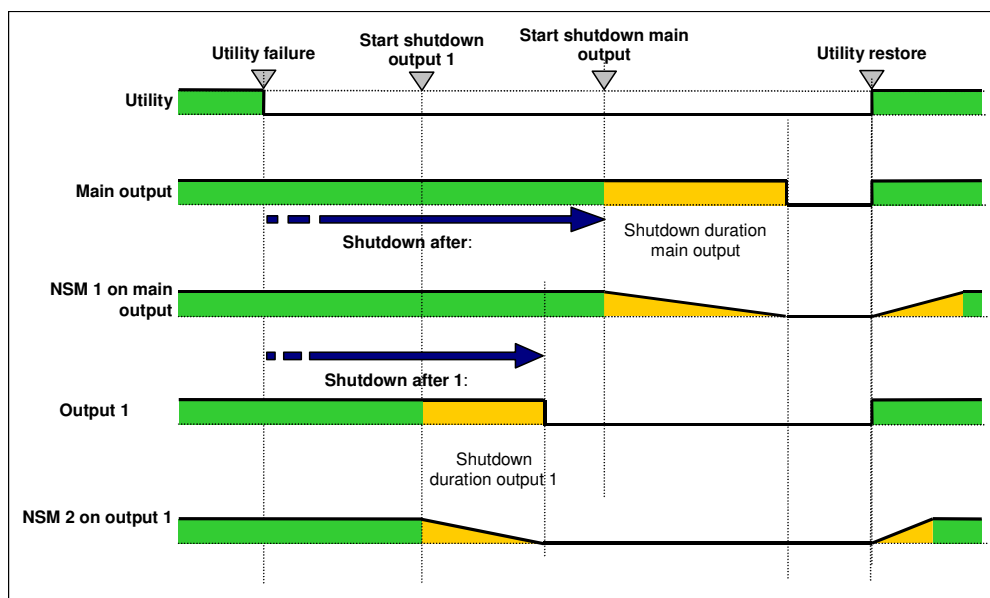


5.2.2 Extended power outage, shutdown initiated by the "Low battery power" message

When the "Low battery power" criterion is displayed, the UPS is shut off after taking into account the shutdown duration of the servers.

"Low battery power": The message appears if either of the two following criteria is reached:


- Low Battery Level
- Low Battery Delay

Network Management Card (Network-MS) User Manual

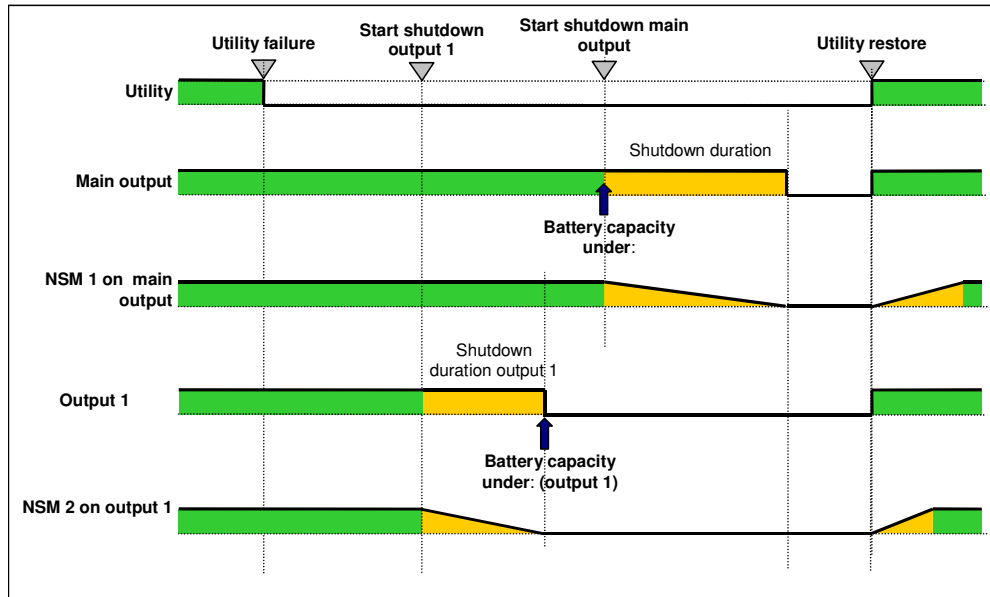

5.2.3 Case of power restoration before the end of the "shutdown duration" counter

If power is restored before the end of the Shutdown Duration, the UPS is shut off after the Shutdown Duration for a time equal to the forced reboot delay (10 seconds)

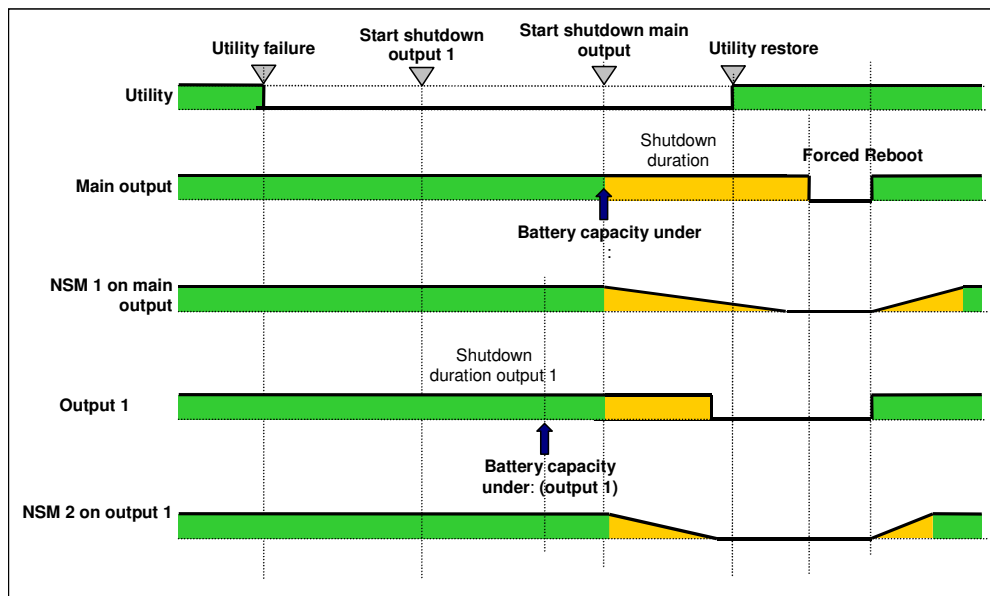

5.3 Shutdown management with 2 NMC boards

Certain UPS can have 2 NMC boards in order to:

- Increase the number of protected servers,
- Protect 2 groups of server connected to different networks physically separated.

5.3.1 Shutdown Duration

As described in the 5.1.1.4 paragraph, the protection application transmit their own "Shutdown duration" to the Network Management Card. Based on these values (maximum Shutdown duration of all subscribed customer systems) that the card will send to the delayed shutdown order to the UPS.

If the UPS have two NMC cards, the maximum shutdown duration of the two groups of protected systems will be used for the delayed shutdown order.

Example: If the subscribed customers of the first NMC card have a maximum Shutdown duration of 60s and the ones of the second NMC card of 120s, the servers shutdown will be launched 120s before the UPS shutoff..

5.3.2 Settings

Set-up shutdown parameters to the same value on the 2 cards are highly recommended (for the main output and the controlled outlets).

If the settings are not the same, the first criteria reached on one the 2 cards will launch the secure shutdown of all servers

Please, note that in any case the shutdown of the protected servers will be executed safely.

6 TELNET/SSH/CLI interfaces

6.1 Introduction

This chapter describes how to use the Telnet/SSH/CLI interfaces of the IBM Network Management Card.

6.2 Settings list

The parameters accessible via Telnet, SSH or CLI are the same as those offered by WEB interface.

The use of these parameters remains the same. For more explanation about these parameters, the default values, possible values, please refer to the previous chapter (§4 - Supervision and administration by browser) of this document

6.2.1 Network settings

These settings enable the administrator to configure the network parameters of the card and authorisation of the remote upgrade of the embedded system.

The parameter list is the following:

- MAC address (read only)
- IP address
- Subnet mask
- Gateway address
- Host name
- Domain name
- BOOTP/DHCP
- IPv6
- IPv6 autoConfig
- IPv6 address 1
- IPv6 prefix length
- IPv6 Gateway address
- IPv6 local address (read only)
- IPv6 address 2 (read only)
- Updating software
- Primary DNS server
- Secondary DNS server
- SMTP server
- SMTP port
- SMTP server authentication
- SMTP login
- SMTP password

6.2.2 System settings

These settings enable the customisation of the information on the UPS properties pages.

The parameter list is the following:

- UPS contact
- UPS location
- History log interval
- Environment log interval
- Default language

6.2.3 Trap receivers

This is the list of the supervision stations receiving traps. There is a maximum of 3 trap receivers.

The parameter list is the following:

- Receiver 1, 2 or 3 :
 - Application name
 - Host name
 - Trap port
 - Protocol
 - Trap community
 - MIB filter

6.2.4 Access control

These settings enable the configuration for secure access to the card via a web browser or SNMP. This menu can also define Telnet/SSH/CLI procedure to access to the card.

The parameter list is the following:

- Login
- Password
- Security mode
- Telnet access
- Telnet security
- Console interface

6.2.5 Shutdown settings

These settings are used to define the behaviour of the UPS during a shutdown.

The parameter list is the following:

- Outlet 1 (main):
 - Name
 - Remaining time limit
 - Remaining capacity limit
 - Shutdown after

- Shutdown timer selected
- Shutdown duration
- Battery capacity exceeds
- Outlet 2 & 3:
 - Name
 - Switch off after
 - Remaining capacity limit
 - Shutdown duration
 - Switch on after

6.2.6 Authentication settings

6.2.7 RADIUS settings

This is the list of Radius Servers. There is a maximum of 2 servers.

The parameter list is the following:

- Radius Server Primary&Secondary:
 - Radius Server
 - Secret
 - NAS IP Address
 - Auth. Port
 - Time Out
 - Retry Number

6.2.8 LDAP settings

This is the list of LDAP Settings.

The parameter list is the following:

- Authentication Mechanism
- User Search Bind
- Search User
- Search User Password
- User Base DN
- User Object
- User Attribute
- Authorization Mode
- UPS Group Base DN
- Group Name Attribute
- User Name Attribute
- LDAP Server Primary&Secondary:
 - Server Name

- Port
- Time Out

6.2.9 SNMP settings

These settings configure the 2 SNMP versions available, v1 and v3.

The parameter list is the following:

- Version
- SNMP port
- SNMP v1 community Read-Only
- SNMP v1 write enables
- SNMP v1 community write
- SNMP v3 user Read-Only
- SNMP v3 security Read-Only
- SNMP v3 password Read-Only
- SNMP v3 user Read-Write
- SNMP v3 security Read- Write
- SNMP v3 password Read- Write
- Notification user name

6.2.10 Date and time

These settings enable the initialisation of the date and time of the card in three different ways.

The parameter list is the following:

- Date & Time
- Type of synchronisation
- NTP host name
- Time-Zone
- Daylight saving time

6.2.11 Environment settings

These settings enable the configuration of the environment sensor. If not present, this menu is not available.

The parameter list is the following:

- Sensor name
- Temperature:
 - Unity
 - High threshold
 - Low threshold
 - Hysteresis
 - Offset
 - High notify

Network Management Card (Network-MS) User Manual

- Low notify
- High shutdown
- Low shutdown
- Humidity:
 - High threshold
 - Low threshold
 - Hysteresis
 - Offset
 - High notify
 - Low notify
 - High shutdown
 - Low shutdown
- Input#1:
 - Identifier
 - Close label
 - Close notify
 - Close shutdown
 - Open label
 - Open notify
 - Open shutdown
- Input#2:
 - Identifier
 - Close label
 - Close notify
 - Close shutdown
 - Open label
 - Open notify
 - Open shutdown

6.3 Menu interface

The setting parameter “HMI Type” defines which HMI will be available. To use the menu interface, this parameter has to be equal to “MENU”.

The menu interface is defined with menus and submenus. It is available with the 2 protocols, Telnet and SSH.

The only language implemented is English.

For simplicity, the settings are sorted in the same way as the Web interface.

According to the current configuration, some settings may be read-write, read-only, write-only or hidden.

In each screen, it is possible to close the session with the command “quit”.

The code colour is the following:

- Settings in read-write or write-only mode: light green.

Network Management Card (Network-MS) User Manual

- Settings in read-only mode: yellow.
- Warning message: green.
- Error message: light red.

6.3.1 Tree description

<input type="checkbox"/> Main menu	<input type="checkbox"/> Reset menu	
	<input type="checkbox"/> Network menu	<input type="checkbox"/> MAC address
		<input type="checkbox"/> ../..
		<input type="checkbox"/> SMTP menu
		<input type="checkbox"/> Host name
		<input type="checkbox"/> ../..
		<input type="checkbox"/> SNMP menu
		<input type="checkbox"/> Version
		<input type="checkbox"/> ../..
	<input type="checkbox"/> Trap receivers	<input type="checkbox"/> Receiver 1
		<input type="checkbox"/> Host name
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Receiver 2
		<input type="checkbox"/> Host name
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Receiver 3
		<input type="checkbox"/> Host name
		<input type="checkbox"/> ../..
	<input type="checkbox"/> System menu	<input type="checkbox"/> UPS contact
		<input type="checkbox"/> ../..
	<input type="checkbox"/> Shutdown menu	<input type="checkbox"/> Master
		<input type="checkbox"/> Name
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Outlet 2
		<input type="checkbox"/> Name
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Outlet 3
		<input type="checkbox"/> Name
		<input type="checkbox"/> ../..
	<input type="checkbox"/> Access Control menu	<input type="checkbox"/> Login
		<input type="checkbox"/> ../...
	<input type="checkbox"/> Date & Time menu	<input type="checkbox"/> Date
		<input type="checkbox"/> ../..
	<input type="checkbox"/> Environment menu	<input type="checkbox"/> Sensor Name
		<input type="checkbox"/> Temperature
		<input type="checkbox"/> Unity
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Humidity
		<input type="checkbox"/> High Threshold
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Input#1
		<input type="checkbox"/> Identifier
		<input type="checkbox"/> ../..
		<input type="checkbox"/> Input#2
		<input type="checkbox"/> Identifier
		<input type="checkbox"/> ../..
	<input type="checkbox"/> Authentication settings menu	<input type="checkbox"/> Authentication Methode
		<input type="checkbox"/> Authentication Order

Network Management Card (Network-MS) User Manual

- ☐ Session Time
- ☐ Max Session Time
- ☐ Radius Menu ☐ Primary Server: Enable
- ☐ Radius Menu ☐ Primary Server: Name
- ☐ Radius Menu ☐ Primary Server: ☐ Secret
- ☐ Radius Menu ☐ Primary Server: ☐ Port
- ☐ Radius Menu ☐ Primary Server: ☐ NAS
- ☐ Radius Menu ☐ Primary Server: ☐ Retry
- ☐ Radius Menu ☐ Primary Server: ☐ TimeOut
- ☐ Radius Menu ☐ Secondary Server: Enable
- ☐ Radius Menu ☐ Secondary Server: Name
- ☐ Radius Menu ☐ Secondary Server: Secret
- ☐ Radius Menu ☐ Secondary Server: Port
- ☐ Radius Menu ☐ Secondary Server: NAS
- ☐ Radius Menu ☐ Secondary Server: Retry
- ☐ Radius Menu ☐ Secondary Server: TimeOut
- ☐ LDAP Menu ☐ Primary Server: Enable
- ☐ LDAP Menu ☐ Primary Server: Name
- ☐ LDAP Menu ☐ Primary Server: Port
- ☐ LDAP Menu ☐ Secondary Server: Enable
- ☐ LDAP Menu ☐ Secondary Server: Name
- ☐ LDAP Menu ☐ Secondary Server: Port
- ☐ LDAP Menu ☐ Mechanism
- ☐ LDAP Menu ☐ Search Mode
- ☐ LDAP Menu ☐ Search User Distinguished Name
- ☐ LDAP Menu ☐ Search User Password

- ☐ Login password to default
- ☐ Default Configuration

6.3.2 Main menu

This screen is the main screen displayed when the connection is established.

Network Management Card (Network-MS)

User Manual

NETWORK MANAGEMENT CARD

Main menu

- 1 : Reset
- 2 : Network settings
- 3 : Trap receivers
- 4 : System settings
- 5 : Shutdown settings
- 6 : Access control
- 7 : Date and Time
- 8 : Environment settings
- 9 : Item not available
- 10 : Authentication settings
- 11 : Set login password to default
- 12 : Default configuration

Quit : Close session

6.3.3 Reset item

This menu item is used to reset the card. It is not possible to reset the card when a flash write process is in progress. When a reset operation is completed, a prompt is displayed to confirm the reset.

6.3.4 Network menu

This menu is used to view or modify the network settings.

Network Management Card (Network-MS) User Manual

NETWORK MANAGEMENT CARD

Network settings

- : MAC address [00:20:85:FD:1C:07] ⁽³⁾
- 1 : BootP/DHCP (0=Disabled, 1=Enabled) [1]
- 2 : IP Address [xxx.xxx.xxx.xxx] ⁽¹⁾
- 3 : Subnet Mask [xxx.xxx.xxx.xxx] (1)
- 4 : Gateway Address [xxx.xxx.xxx.xxx] ⁽¹⁾
- 5 : Host Name [ups1]
- 6 : UPS Domain Name [ups.domain.com]
- 7 : IPv6 (0=No, 1=Yes) [0]
- 8 : IPv6 Auto-config (0=No, 1=Yes) [0] ⁽²⁾
- 9 : IPv6 add.1/prefix len. [] ⁽³⁾⁽⁵⁾
- 10 : IPv6 gateway address [] ⁽³⁾
- 11 : IPv6 local address ⁽⁴⁾
- 12 : IPv6 address 2 ⁽⁴⁾
- 13 : Firmware upgradable (0=No, 1=Yes) [1]
- 14 : Primary DNS Server (IPv4 or IPv6) [xxx.xxx.xxx.xxx]
- 15 : Secondary DNS Server [xxx.xxx.xxx.xxx]
- 16 : SMTP menu
- 17 : SNMP menu

- 0 : Exit

(1) Read-only or read-write according to "BootP/DHCP" status

(2) Read-only or read-write according to "IPv6 enabled" status

(3) Read-only or read-write according to "IPv6 enabled" and "IPv6 auto-config" status

(4) Read-only

(5) The value is a concatenation of the IPv6 address 1 and of the prefix length.

NETWORK MANAGEMENT CARD

Network settings - SMTP

- 1 : Hostname (for Email notification) [smtpserver]
- 2 : SMTP Port (Default Value: 25) [25]
- 3 : Authentication (0=No, 1=Yes) [1]
- 4 : Login [smtplogin] ⁽¹⁾
- 5 : Password [*****] ⁽²⁾

- 0 : Exit

(1) Read-only or read-write according to "Authentication" status

(2) Write-only or hidden according to "Authentication" status

NETWORK MANAGEMENT CARD

Network settings - SNMP

1 : Version (Disabled, V1, V3, V1V3) [V1V3]

2 : SNMP port (Default value: 161) [161]

** About V1 **

3 : Community read-only [publicuser]

4 : SNMP write (0=No, 2=Yes) [2]

5 : Community write [privateuser] ⁽¹⁾

** About V3 **

6 : Read-only user [readuser]

7 : R/O security (1=No Auth, 2=Auth NoPriv, 3=Auth Priv) [2]

8 : Read-only password [*****] ⁽²⁾

9 : Read-Write user [writeuser]

10 : R/W security (1=No Auth, 2=Auth NoPriv, 3=Auth Priv) [2]

11 : Read-Write password [*****] ⁽³⁾

12 : Notification user name [notifuser]

0 : Exit

All items from 3 to 11 are read-write or masqued according to "Version" status.

(1) Read-write or read-only according to "SNMP write" status;

(2) Write-only or hidden according to "R/O security" status; the length has to be 8 characters at least;

(3) Write-only or hidden according to "R/W security" status; the length has to be 8 characters at least.

6.3.5 Trap receivers menu

This menu is used to view or modify the applications receiving traps and to configure trap type.

NETWORK MANAGEMENT CARD

Trap receiver

1 : Receiver 1

2 : Receiver 2

3 : Receiver 3

0 : Exit

NETWORK MANAGEMENT CARD

Trap receiver X

-
- 1 : Hostname or IP address [xxx. xxx. xxx. xxx]
 - 2 : Application mane [MyTrap]
 - 3 : Trap Port (Default value: 162) [162]
 - 3 : Trap community []
 - 4 : Protocol (Disabled, V1, V3, V1V3) [Disabled]
 - 5 : MIB filter (b0=Pulsar, bit1=Power MIB, bit2=IETF) [2] ⁽¹⁾
 - 0 : Exit
-

(1) Only the 3 less significant bits are used (b0 to b2). The possible value are from 0 to 7 (3 bits used set to 1).

6.3.6 System menu

This menu is used to view or modify the system settings.

NETWORK MANAGEMENT CARD

System settings

-
- 1 : UPS contact [Computer Room Manager]
 - 2 : UPS Location [Room Manager]
 - 3 : Item not available
 - 4 : History log interval (sec) [50]
 - 5 : Environment log interval (sec) [300]
 - 6 : Item not available
 - 7 : Language (AUTO,FRE,ENG,SPA, GER,ITA,CHI,CHT,JPN,KOR,CZI,RUS,POR) [AUTO]
 - 0 : Exit
-

6.3.7 Shutdown menu

This menu is used to view or modify the shutdown settings for the 3 outlets.

NETWORK MANAGEMENT CARD

Shutdown settings

-
- 1 : Master
 - 2 : Outlet 2
 - 3 : Outlet 3
 - 0 : Exit
-

NETWORK MANAGEMENT CARD

Shutdown settings - Master

-
- 1 : Name [Master]
 - 2 : Shutdown if remaining time under (sec) [180]
 - 3 : Shutdown if capacity under (%) [20]
 - 4 : Shutdown timer enabled (0=No, 1=Yes) [0]
 - 5 : Shutdown timer (sec) [1800]
 - 6 : Shutdown duration (sec) [120]
 - 7 : Restart if capacity exceed (%) [0]

0 : Exit

NETWORK MANAGEMENT CARD

Shutdown settings – Outlet 1

-
- 1 : Name [Group1]
 - 2 : Switch off after (sec) [2147483647]
 - 3 : Switch off if capacity under (%) [0]
 - 4 : Shutdown duration (sec) [120]
 - 5 : Switch on after (sec) [0]

0 : Exit

6.3.8 Access Control menu

This menu defines the accessibility of the card by a client.

NETWORK MANAGEMENT CARD

Access settings

-
- 1 : New Login [MyName]
 - 2 : Password [*****] ⁽¹⁾
 - 3 : Security Mode (1=conf., 2=full auth., 3=full auth. & SSL) [1]
 - 4 : Telnet access enabled (0=No, 1=Yes) [1]
 - 5 : Telnet security enabled (0=No, 1=Yes) [0] ⁽²⁾
 - 6 : Console interface (Menu, CLI) [Menu] ⁽²⁾

0 : Exit

(1) Write-only and encrypted

(2) Read-write or read-only according to “Telnet access enabled” status.

6.3.9 Date and time menu

This menu defines the date and time management.

```
-----  
NETWORK MANAGEMENT CARD  
Date & Time settings  
-----  
  1 : Date (yyyy/mm/dd) [2010/11/05] (1)  
  2 : Hour (HH:MM:SS) [11:30:00] (1)  
  3 : Type of synchronization (MANUAL, AUTO, NTP) [MANUAL]  
  4 : Host Name [ntpserver]  
  5 : Time zone (+/-hh:mm) [  0: 0] (2)  
  6 : Day light enabled (0=No, 1=Yes) [0]  
  
  0 : Exit  
-----
```

(1) Read-write or read-only according to "Type of synchronization" status

(2) Setting resolves to the nearest half hour; for example, sending +02:36 results in +02:30, and sending +02:46 results in +03:00.

6.3.10 Environment menu

These menus define the settings of the environment sensor.

```
-----  
NETWORK MANAGEMENT CARD  
Environment settings  
-----  
  1 : Sensor Name [My Sensor]  
  2 : Temperature  
  3 : Humidity  
  4 : Input #1  
  5 : Input #2  
  
  0 : Exit  
-----
```


Network Management Card (Network-MS)

User Manual

NETWORK MANAGEMENT CARD

Environment settings - Temperature

- 1 : Unity (C=Celsius, F=Fahrenheit) [C]
- 2 : High Threshold [40]
- 3 : Low Threshold [5]
- 4 : Hysteresis [2]
- 5 : Offset [0.0]
- 6 : High notify (0=No, 1=Yes) [0]
- 7 : Low notify (0=No, 1=Yes) [0]
- 8 : High shutdown (0=No, 1=Yes) [0]
- 9 : Low shutdown (0=No, 1=Yes) [0]

0 : Exit

NETWORK MANAGEMENT CARD

Environment settings - Humidity

- 1 : High Threshold [90]
- 2 : Low Threshold [5]
- 3 : Hysteresis [5]
- 4 : Offset [0.0]
- 5 : High notify (0=No, 1=Yes) [0]
- 6 : Low notify (0=No, 1=Yes) [0]
- 7 : High shutdown (0=No, 1=Yes) [0]
- 8 : Low shutdown (0=No, 1=Yes) [0]

0 : Exit

NETWORK MANAGEMENT CARD

Environment settings – Input #1

1 : Identifier [Fan1]

*** State 0 ***

2 : Label [Fan running]

3 : Notify (0=No, 1=Yes) [0]

4 : Shutdown (0=No, 1=Yes) [0]

*** State 1 ***

5 : Label [Fan stopped]

6 : Notify (0=No, 1=Yes) [0]

7 : Shutdown (0=No, 1=Yes) [0]

0 : Exit

6.3.11 Authentication settings

These menus define the settings of the authentication.

EATON NETWORK MANAGEMENT CARD

Authentication settings

1 : Authentication Method (LOCAL, RADIUS, LDAP) [LDAP]

2 : Authentication Order (Local_Only, Local_External, External_Local, External_Only) [Local_External] ⁽¹⁾

3 : Session Time (s) [300]

4 : Max Session Time (s) [9999]

5 : Radius menu

6 : LDAP menu

0 : Exit

(1) Read-write or read-only according to “Authentication Method” status

Network Management Card (Network-MS) User Manual

EATON NETWORK MANAGEMENT CARD

Radius settings ⁽¹⁾

*** About Primary Server ***

- 1 : Enable (0=No, 1=Yes) [0]
- 2 : Name [] ⁽²⁾
- 3 : Secret ⁽²⁾
- 4 : Port [1812] ⁽²⁾
- 5 : NAS (IPV4, IPV6_1, IPV6_2, IPV6_LOCAL) [IPV4] ⁽²⁾
- 6 : Retry [3] ⁽²⁾
- 7 : TimeOut (s) [10] ⁽²⁾

*** About Secondary Server ***

- 8 : Enable (0=No, 1=Yes) [0]
- 9 : Name [] ⁽³⁾
- 10 : Secret ⁽³⁾
- 11 : Port [1812] ⁽³⁾
- 12 : NAS (IPV4, IPV6_1, IPV6_2, IPV6_LOCAL) [IPV4] ⁽³⁾
- 13 : Retry [3] ⁽³⁾
- 14 : TimeOut (s) [10] ⁽³⁾

0 : Exit

(1) Read-write or read-only according to "Authentication Method" status

(2) Read-write or read-only according to "Enable" and "Authentication Method" status of the Primary Server

(3) Read-write or read-only according to "Enable" and "Authentication Method" status of the Secondary Server

Network Management Card (Network-MS) User Manual

EATON NETWORK MANAGEMENT CARD

LDAP settings⁽¹⁾

*** About Primary Server ***

1 : Enable (0=No, 1=Yes) [1]

2 : Name [10.130.32.6]⁽²⁾

3 : Port [389]⁽²⁾

*** About Secondary Server ***

4 : Enable (0=No, 1=Yes) [0]

5 : Name []⁽³⁾

6 : Port [389]⁽³⁾

*** About binding ***

7 : Mechanism (SIMPLE, DIGEST-MD5) [SIMPLE]

8 : Search Mode (ANONYMOUS, USERBIND) [USERBIND]

9 : Search User Distinguished Name

10 : Search User Password [*****]⁽⁴⁾

0 : Exit

(1) Read-write or read-only according to "Authentication Method" status

(2) Read-write or read-only according to "Enable" status of the Primary Server

(3) Read-write or read-only according to "Enable" status of the Secondary Server

(4) Read-write or read-only according to "Search Mode" status

6.3.12 Return to default Login/Password

If the login or password is lost, select this option to enable the return to the default Login/Password.

6.3.13 Return to default configuration

This item is used to return to default configuration which is described in this document.

The NMC card is automatically restarted after returns to default configuration.

6.4 Command Line Interface

Command Line Interface (CLI) API provides functions for building and processing a user-defined HMI. To use the CLI, the parameter "HMI type" has to be equal to "CLI".

When opening a new session, TELNET or SSH, a specific prompt "#>" is sent to the client. The user can enter a command. If the command is recognized, it is processed, else a warning message is sent to the client.

The syntax used is based on that already implemented for the XML description of objects. The blank character is

Network Management Card (Network-MS) User Manual

not allowed in command arguments except for the strings. The strings are in double quotes ("").

The code colour is the following:

- Setting in read-write or write-only mode: light green
- Setting in read-only mode: yellow
- Warning message: green
- Error message: light red

The recognized commands are given in the following chapters and may be updated later.

6.4.1 Generic command

6.4.1.1 “help” and “?”

Purpose	Display help about a specific command.
Syntax	help [command] or [command] ?
Examples	#> help getNetwork #> getNetwork ?

6.4.1.2 “setEcho”

Purpose	Hide, or not, all characters. If hidden, each character entered is replaced by an “*”
Syntax	setEcho [option] option : ON OFF
Examples	#> setEcho ON

6.4.1.3 “quit”

Purpose	Close a current CLI session
Syntax	quit
Examples	#> quit

6.4.1.4 “reset”

Purpose	Software reset
Syntax	reset
Examples	#> reset

6.4.1.5 “version”

Purpose	Get information about software versions
Syntax	version
Examples	#> version

Network Management Card (Network-MS) User Manual

6.4.1.6 “defaultPass”

Purpose	Returns to default Login/Password
Syntax	defaultPass
Examples	#> defaultPass

6.4.1.7 “defaultConf”

Purpose	Returns to default Configuration
Syntax	defaultConf
Examples	#> defaultConf
Comments	The card is automatically reset.

6.4.2 Network settings

6.4.2.1 “getNetwork”

Purpose	To read a network setting
Syntax	getNetwork [option1] [option2]... options : DHCP IPAddress IPMask IPGateway HostName DomainName IPv6Enable IPv6AutoConf IPv6Address1 IPv6DefaultGateway IPv6LocalAddress IPv6Address2 PrimaryDNS SecondaryDNS FirmwareUpgrade
Examples	#> getNetwork IPAddress

6.4.2.2 “setNetwork”

Purpose	To modify a network setting
Syntax	setNetwork [option1=xxxx] [option2=yyyy]... options : DHCP = 0 1 (0=No, 1=Yes) IPAddress = “xxx.xxx.xxx.xxx” ⁽¹⁾

Network Management Card (Network-MS) User Manual

	IPMask = "xxx.xxx.xxx.xxx" ⁽¹⁾ IPGateway = "xxx.xxx.xxx.xxx" ⁽¹⁾ HostName = "xx..xx" DomainName = "xx..xx" IPv6Enable = 0 1 (0=No, 1=Yes) IPv6AutoConf = 0 1 (0=No, 1=Yes) ⁽²⁾ IPv6Address1 = "xx.xx/xxx" ⁽³⁾⁽⁴⁾ PrefixLength = xx ⁽³⁾ IPv6DefaultGateway [=] ⁽³⁾ PrimaryDNS = "xx..xx" SecondaryDNS = "xx..xx" FirmwareUpgrade = 0 1 (0=No, 1=Yes)
Examples	#> setNetwork IPAddress=xxx.xxx.xxx.xxx IPMask= xxx.xxx.xxx.xxx
Comments	⁽¹⁾ : Writing enabled according to "DHCP" status ⁽²⁾ : Writing enabled according to "IPv6Enable" status ⁽³⁾ : Writing enabled according to "IPv6AutoConf" status ⁽⁴⁾ : The value is a concatenation of IPv6 address 1 and prefix length

6.4.2.3 "getSMTP"

Purpose	To read a SMTP setting
Syntax	getSMTP [option1] [option2]... options : HostName SmtPort Authentication Login Password ⁽¹⁾
Examples	#> getSMTP HostName
Comments	⁽¹⁾ : All characters are replaced with the star character "*" (asterisk).

6.4.2.4 "setSMTP"

Purpose	To modify a SMTP setting
Syntax	setSMTP [option1=xxxx] [option2=yyyy]... options : HostName = "xx..xx" SmtPort = xx (Default value: 25) (1..65535) Authentication = 0 1 (0=No, 1=Yes) Login = "xx..xx" ⁽¹⁾ Password = "*** ..**" ⁽¹⁾⁽²⁾

Network Management Card (Network-MS) User Manual

Examples	#> setSMTP HostName = "SmtP Server"
Comments	⁽¹⁾ : Writing enabled according to "Authentication" status ⁽²⁾ : Don't forget to set echo off

6.4.2.5 "getSNMP"

Purpose	To read a SNMP setting
Syntax	getSNMP [option1] [option2]... options : snmpVersion snmpPort ReadCommunityName WriteCommunitySecurityLevel WriteCommunityName User UserSecurityLevel UserPassword ⁽¹⁾ Admin AdminSecurityLevel AdminPassword ⁽¹⁾ NotificationUserName FirmwareUpgrade
Examples	#> getSNMP User
Comments	⁽¹⁾ : All characters are replaced with the star character "**"

6.4.2.6 "setSNMP"

Purpose	To modify a SNMP setting
Syntax	getSNMP [option1] [option2]... options : snmpVersion = Disabled V1 V3 V1V3 snmpPort = xx (Default value: 161) (1..65535) ReadCommunityName = "xx..xx" ⁽¹⁾ WriteCommunitySecurityLevel = 0 2 (0=No, 2=Yes) ^(*) WriteCommunityName = "xx..xx" ⁽¹⁾⁽²⁾ User = "xx..xx" ⁽¹⁾ UserSecurityLevel = 1 2 3 (1=No Auth, 2=Auth NoPriv, 3=Auth Priv) ⁽¹⁾ UserPassword = "xx..xx" ⁽¹⁾⁽³⁾⁽⁵⁾⁽⁶⁾ Admin = "xx..xx" ⁽¹⁾ AdminSecurityLevel = 1 2 3 (1=No Auth, 2=Auth NoPriv, 3=Auth Priv) ⁽¹⁾ AdminPassword = "xx..xx" ⁽¹⁾⁽⁴⁾⁽⁵⁾⁽⁶⁾

Network Management Card (Network-MS) User Manual

	NotificationUserName = "xx.xx" FirmwareUpgrade = 0 1 (0=No, 1=Yes)
Examples	#> setSNMP User = "readuser"
Comments	⁽¹⁾ : Writing enabled according to "snmpVersion" status ⁽²⁾ : Writing enabled according to "WriteCommunitySecurityLevel" status ⁽³⁾ : Writing enabled according to "UserSecurityLevel" status ⁽⁴⁾ : Writing enabled according to "AdminSecurityLevel" status ⁽⁵⁾ : Don't forget to set echo off ⁽⁶⁾ : The length has to be 8 characters at least.

6.4.3 Trap receivers

6.4.3.1 "getTrap"

Purpose	To read a trap receiver setting
Syntax	getTrap N [option1] [option2]... N = 0 1 2 options : Name HostName TrapPort TrapSnmpVersion TrapCommunity TrapSelectedMibs
Examples	#> getTrap HostName Name
Comments	

6.4.3.2 "SetTrap"

Purpose	To modify a trap receiver setting
Syntax	setTrap N [option1] [option2]... N = 0 1 2 options : Name = "xx..xx" HostName = "xx..xx" TrapPort = xx (Default value: 162) (1..65535) TrapSnmpVersion = Disabled V1 V3 V1V3 TrapCommunity = "xx..xx" TrapSelectedMibs = 0 1 2 3 4 5 6 7 ⁽¹⁾
Examples	#> setTrap 0 Name="My application"
Comments	⁽¹⁾ : bit0 = 1 : MIB Pulsar enabled bit1 = 1 : Power MIB enabled

	bit2 = 1 : MIB IETF enabled
--	-----------------------------

6.4.4 System settings

6.4.4.1 “getSystem”

Purpose	To read a system setting
Syntax	getSystem [option1] [option2]... options : Contact Location upsCustomName Language
Examples	#> getSystem Location
Comments	

6.4.4.2 “setSystem”

Purpose	To modify a system setting
Syntax	setSystem [option1] [option2]... options : Contact = “xx.xx” Location = “xx.xx” upsCustomName = “xx.xx” Language = AUTO FRE ENG SPA GER ITA CHI CHT JPN KOR CZI RUS POR
Examples	#> setSystem Location=”my office”
Comments	

6.4.4.3 “getHistSyst”

Purpose	To read a history system setting
Syntax	getHistSyst [option] options : Interval
Examples	#> getHistSyst Interval
Comments	

6.4.4.4 “setHistSyst”

Purpose	To modify a history system setting
Syntax	setHistSyst [option] options : Interval = xx (10..2147483647 in s)

Network Management Card (Network-MS) User Manual

Examples	#> setHistSyst Interval=12
Comments	

6.4.4.5 “getEnvSyst”

Purpose	To read a environment system setting
Syntax	getEnvSyst [option1] [option2] options : Interval Delimiter
Examples	#> getEnvSyst Delimiter
Comments	

6.4.4.6 “setEnvSyst”

Purpose	To modify a environment system setting
Syntax	setEnvSyst [option1] [option2] options : Interval = xx (10..2147483647 in s) Delimiter = Comma Tab
Examples	#> setEnvSyst Delimiter = Comma
Comments	

6.4.5 Shutdown settings

6.4.5.1 “getShutdown”

Purpose	To read a shutdown setting
Syntax	getShutdown N [option1] [option2] ... N = 1 2 3 options for N=1 : iName RunTimeToEmptyLimit RemainingCapacityLimit ShutdownTimerSelected ShutdownTimer ShutdownDuration RestartLevel options for N=2 or 3: iName ShutdownTimer RemainingCapacityLimit ShutdownDuration

Network Management Card (Network-MS) User Manual

	StartupTimer
Examples	#> getShutdown 1 ShutdownDuration
Comments	

6.4.5.2 “setShutdown”

Purpose	To modify a shutdown setting
Syntax	<p>setShutdown N [option1] [option2] ...</p> <p>N = 1 2 3</p> <p>options for N=1:</p> <p>iName = “xx..xx”</p> <p>RunTimeToEmptyLimit = xx (0..9999 in sec)</p> <p>RemainingCapacityLimit = xx (0..100 in sec)</p> <p>ShutdownTimerSelected = 0 1 (0=No, 1=Yes)</p> <p>ShutdownTimer = xx (0..5999940/60 in min)</p> <p>ShutdownDuration = xx (0..999 in sec)</p> <p>RestartLevel = xx (0..100 %)</p> <p>options for N=2 or 3:</p> <p>iName = “xx..xx”</p> <p>ShutdownTimer = xx (99..99999 in sec)</p> <p>RemainingCapacityLimit = xx (0..100 in sec)</p> <p>ShutdownDuration = xx (0..999 in sec)</p> <p>StartupTimer = xx (0..65535 in sec)</p>
Examples	#> setShutdown 1 ShutdownDuration=120
Comments	

6.4.6 Access control settings

6.4.6.1 “getAccess”

Purpose	To read an access control setting
Syntax	<p>getAccess [option1] [option2]...</p> <p>options :</p> <p>Login</p> <p>Password ⁽¹⁾</p> <p>Security</p>
Examples	#> getAccess Login
Comments	⁽¹⁾ : All characters are replaced with the star character “*”

6.4.6.2 “setAccess”

Purpose	To modify an access control setting
Syntax	setAccess [option1] [option2]

Network Management Card (Network-MS) User Manual

	options : Login = "xx..xx" Password = "***..**" (1)(2) ConfirmPass = "***..**" (1)(2) Security = 1 2 3 (1=conf., 2=full auth., 3=full auth. & SSL)
Examples	#> setAccess Security=3
Comments	⁽¹⁾ : Don't forget to set echo off ⁽²⁾ : The 2 passwords entered must be the same for to be taken into account

6.4.6.3 "getTelnet"

Purpose	To read a Telnet setting
Syntax	getTelnet [option1] [option2]... options : Access Security Console
Examples	#> getTelnet Security
Comments	

6.4.6.4 "setTelnet"

Purpose	To modify a Telnet setting
Syntax	setTelnet [option1] [option2] options : Access = 0 1 (0=Disabled, 1=Enabled) Security = 0 1 (0=No, 1=Yes with SSH) Console = CLI Menu
Examples	#> setTelnet Security=0
Comments	

6.4.7 Authentication settings

6.4.7.1 "getAuth"

Purpose	To read an Authentication setting
Syntax	syntax: getAuth [options...] options : SessionTime MaxSessionTime AuthOrder AuthMethod

Network Management Card (Network-MS) User Manual

Examples	#> getAuth SessionTime
Comments	

6.4.7.2 “setAuth”

Purpose	To modify an Authentication setting
Syntax	syntax: setAuth [options...] options: SessionTime=xx <-- in sec. 1..9999 --> MaxSessionTime=xx <-- in sec. 1..9999 --> AuthOrder=Local_Only Local_External External_Local External_Only ⁽¹⁾ AuthMethod=LOCAL RADIUS LDAP
Examples	#> setAuth SessionTime =200
Comments	⁽¹⁾ : Writing enabled according to “AuthMethod” status

6.4.7.3 “getRadPrimSrv”

Purpose	To read an Radius primary server setting
Syntax	syntax: getRadPrimSrv [options...] options: Server Enable <-- 0=No, 1=Yes --> Server ServerName Server SharedSecret Server Port Server NasIdentifierType Server Retry Server Timeout
Examples	#> getRadPrimSrv Port
Comments	

6.4.7.4 “setRadPrimSrv”

Purpose	To modify an Radius primary server setting
Syntax	syntax: setRadPrimSrv [options...] options: Server Enable <-- 0=No, 1=Yes --> ⁽¹⁾ Server ServerName="Server Name" ^{(1) (2)} Server SharedSecret="Shared Secret" ^{(1) (2)} Server Port=xx <-- 1..65535 --> ^{(1) (2)} Server NasIdentifierType=IPv4 IPv6_1 IPv6_2 IPv6_LOCAL ^{(1) (2)} Server Retry=xx <-- 1..9999 --> ^{(1) (2)} Server Timeout=xx <-- 1..9999 --> ^{(1) (2)}
Examples	#> setRadPrimSrv Port =1812

Network Management Card (Network-MS) User Manual

Comments	⁽¹⁾ : Writing enabled according to “AuthMethod” status ⁽²⁾ : Writing enabled according to “Enable” status
----------	--

6.4.7.5 "getRadSecondSrv"

Purpose	To read an Radius secondary server setting
Syntax	syntax: getRadSecondSrv [options...] options: Server Enable <-- 0=No, 1=Yes --> Server ServerName Server SharedSecret Server Port Server NasIdentifierType Server Retry Server Timeout
Examples	#> getRadSecondSrvPort
Comments	

6.4.7.6 "setRadSecondSrv"

Purpose	To modify an Radius secondary server setting ⁽¹⁾
Syntax	syntax: setRadSecondSrv [options...] options: Server Enable <-- 0=No, 1=Yes --> ⁽¹⁾ Server ServerName="Server Name" ^{(1) (2)} Server SharedSecret="Shared Secret" ^{(1) (2)} Server Port=xx <-- 1..65535 --> ^{(1) (2)} Server NasIdentifierType=IPv4 IPv6_1 IPv6_2 IPv6_LOCAL ^{(1) (2)} Server Retry=xx <-- 1..9999 --> ^{(1) (2)} Server Timeout=xx <-- 1..9999 --> ^{(1) (2)}
Examples	#> setRadSecondSrv Port =1812
Comments	⁽¹⁾ : Writing enabled according to “AuthMethod” status ⁽²⁾ : Writing enabled according to “Enable” status

6.4.7.7 "getLDAPPrimSrv"

Purpose	To read an LDAP primary server setting
Syntax	syntax: getLDAPPrimSrv [options...] options: Enable <-- 0=No, 1=Yes --> ServerName Port
Examples	#> getLDAPPrimSrv Port

Comments	
----------	--

6.4.7.8 "setLDAPPrimSrv"

Purpose	To modify an LDAP primary server setting
Syntax	syntax: setLDAPPrimSrv [options...] options: Enable <-- 0=No, 1=Yes --> ⁽¹⁾ ServerName="Server Name" ^{(1) (2)} Port=xx <-- 1..65535 --> ^{(1) (2)}
Examples	#> setLDAPPrimSrv Port =389
Comments	⁽¹⁾ : Writing enabled according to "AuthMethod" status ⁽²⁾ : Writing enabled according to "Enable" status

6.4.7.9 "getLDAPSecondSrv"

Purpose	To read an LDAP secondary server setting
Syntax	syntax: getLDAPSecondSrv [options...] options: Enable <-- 0=No, 1=Yes --> ServerName Port
Examples	#> getLDAPSecondSrv Port
Comments	

6.4.7.10 "setLDAPSecondSrv"

Purpose	To modify an LDAP secondary server setting
Syntax	syntax: setLDAPSecondSrv [options...] options: Enable <-- 0=No, 1=Yes --> ⁽¹⁾ ServerName="Server Name" ^{(1) (2)} Port=xx <-- 1..65535 --> ^{(1) (2)}
Examples	#> setLDAPSecondSrv Port =389
Comments	⁽¹⁾ : Writing enabled according to "AuthMethod" status ⁽²⁾ : Writing enabled according to "Enable" status

6.4.7.11 "getLDAPSearch"

Purpose	To read the Search LDAP setting
Syntax	syntax: getLDAPSearch [options...] options: AuthMechanism SearchMode

Network Management Card (Network-MS) User Manual

	SearchUser SearchUserPassword UserBaseSearchDn UserObject UserAttr AuthzMode UPSGroupNameAttr UserNameAttr GroupBaseSearchDn
Examples	#> getLDAPSearch AuthMechanism
Comments	

6.4.7.12 "setLDAPSearch"

Purpose	To modify the Search LDAP setting
Syntax	syntax: setSearchLDAP [options...] options: AuthMechanism=SIMPLE DIGEST-MD5 ⁽¹⁾ SearchMode=ANONYMOUS USERBIND ⁽¹⁾ SearchUser="Search User (Distinguished Name)" ^{(1) (2)} SearchUserPassword="Password" ^{(1) (2)} UserBaseSearchDn="User Base Search Dn" ⁽¹⁾ UserObject="User Object" ⁽¹⁾ UserAttr="User Attribute" ⁽¹⁾ AuthzMode=NONE USER GROUP ⁽¹⁾ UPSGroupNameAttr="UPS Group Name Attribute" ^{(1) (3)} UserNameAttr="User Name Attribute" ^{(1) (3)} GroupBaseSearchDn="Group Base Search DN" ^{(1) (3)}
Examples	#> setLDAPSearch SearchMode =USERBIND
Comments	⁽¹⁾ : Writing enabled according to "AuthMethod" status ⁽²⁾ : Writing enabled according to "SearchMode" status ⁽³⁾ : Writing enabled according to "AuthzMode" status

6.4.8 Date and time settings

6.4.8.1 "getDate"

Purpose	To read a date and time setting
Syntax	getDate [option1] [option2]... options : Date

Network Management Card (Network-MS) User Manual

	Time TimeSync TimeNtp TimeZone TimeDaylight
Examples	#> getDate timeSync
Comments	

6.4.8.2 “setDate”

Purpose	To modify a date and time setting
Syntax	setDate [option1] [option2]... options : Date = yyyy/mm/dd ⁽¹⁾ Time = hh:mm:ss ⁽¹⁾ TimeSync = MANUAL AUTO NTP TimeNtp = “xx.xx” TimeZone = +/-hh:mm ⁽²⁾ TimeDaylight = 0 1 (0=No, 1=Yes)
Examples	#> setDate TimeSync=MANUAL
Comments	⁽¹⁾ : Writing enabled according to “TimeSync” status ⁽²⁾ : The smallest granularity is half an hour; for a bad value, the nearest value is taken into account

6.4.9 Environment settings

6.4.9.1 “getEnv”

Purpose	To read an environment setting
Syntax	getEnv [option1] options : Name
Examples	#> getEnv Name
Comments	

6.4.9.2 “setEnv”

Purpose	To modify an environment setting
Syntax	setEnv [option1] options : Name = “xx.xx”
Examples	#> setEnv Name=”sensor”
Comments	

6.4.9.3 “getTemp”

Purpose	To read a temperature setting
Syntax	<pre>getTemp [option1] [option2] ...</pre> <p>options :</p> <ul style="list-style-type: none"> Unit HighThreshold LowThreshold Hysteresis Offset HighNotify LowNotify HighShutdown LowShutdown
Examples	#> getTemp Unit
Comments	

6.4.9.4 “setTemp”

Purpose	To modify a temperature setting
Syntax	<pre>setTemp [option1] [option2] ...</pre> <p>options :</p> <ul style="list-style-type: none"> Unit = C K HighThreshold = xx LowThreshold = xx Hysteresis = xx (0..5) Offset = xx (-5..5) HighNotify = 0 1 (0=No, 1=Yes) LowNotify = 0 1 (0=No, 1=Yes) HighShutdown = 0 1 (0=No, 1=Yes)⁽¹⁾ LowShutdown = 0 1 (0=No, 1=Yes)⁽¹⁾
Examples	#> setTemp Unit=C
Comments	⁽¹⁾ : Writing enabled only if the notification is enabled

6.4.9.5 “getHum”

Purpose	To read a humidity setting
Syntax	<pre>getHum [option1] [option2] ...</pre> <p>options :</p> <ul style="list-style-type: none"> HighThreshold LowThreshold Hysteresis Offset

Network Management Card (Network-MS) User Manual

	HighNotify LowNotify HighShutdown LowShutdown
Examples	#> getHum Offset
Comments	

6.4.9.6 “setHum”

Purpose	To modify a humidity setting
Syntax	setHum [option1] [option2] ... options : HighThreshold = xx LowThreshold =xx Hysteresis = xx (0..5) Offset = xx (-5..5) HighNotify = 0 1 (0=No, 1=Yes) LowNotify = 0 1 (0=No, 1=Yes) HighShutdown = 0 1 (0=No, 1=Yes) ⁽¹⁾ LowShutdown = 0 1 (0=No, 1=Yes) ⁽¹⁾
Examples	#> setHum HighNotify=0
Comments	⁽¹⁾ : Writing enabled only if the notification is enabled

6.4.9.7 “getInput1” or “getInput2”

Purpose	To read input setting
Syntax	getInput1 [option1] [option2] ... options : iName State[0].Description State[0].Notify State[0].Shutdown State[1].Description State[1].Notify State[1].Shutdown
Examples	#> getInput1 iName
Comments	

6.4.9.8 “setInput1” or “setInput2”

Purpose	To modify input setting
Syntax	setInput1 [option1] [option2] ... options :

Network Management Card (Network-MS) User Manual

	iName = "xx..xx" State[0].Description = "xx..xx" State[0].Notify = 0 1 (0=No, 1=Yes) State[0].Shutdown = 0 1 (0=No, 1=Yes) State[1].Description = "xx..xx" State[1].Notify = 0 1 (0=No, 1=Yes) ⁽¹⁾ State[1].Shutdown = 0 1 (0=No, 1=Yes) ⁽¹⁾
Examples	#> setInput1 State[0].Label = "Door open" State[0].Notify = 1
Comments	⁽¹⁾ : Writing enabled only if the notification is enabled

6.5 Constraints/Limitations

1. It is not possible to open sessions with different protocols (see table below).
2. The maximum number of sessions opened at same time is 5.
3. Email recipients can not be configured through Telnet/SSH/CLI.


Table of compatibility:

	TELNET & MENU	TELNET & CLI	SSH & MENU	SSH & CLI
TELNET & MENU	<input type="checkbox"/>			
TELNET & CLI	<input type="checkbox"/>	<input type="checkbox"/>		
SSH & MENU	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
SSH & CLI	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Network Management Card (Network-MS) User Manual

7 Configuration via RS232

- Use the cord supplied with the card (only with reference 34003918 or CAB-00010 or 720-C2270-00).

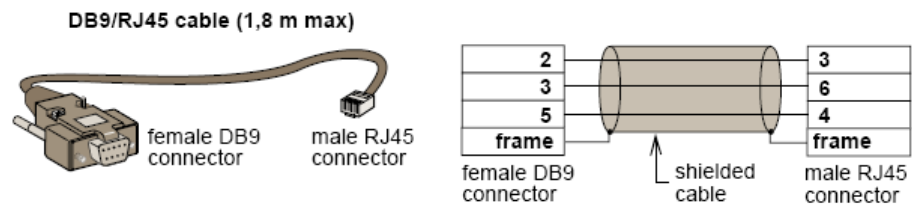

- Connect the card to a computer equipped with a hyperterminal type emulator. The serial link must be set at 9600 baud, 8 bits, no parity, 1 stop bit, and without flow control.
- Check that UPS power is on.
- Enter admin as password (not modifiable).
- The menu is in English only.

EATON
NETWORK MANAGEMENT CARD

1 : Reset
2 : Network configuration
3 : Set Login Password to Default
4 : Return to Default Configuration
0 : Exit

7.1 Choice 1: Restart / Reset

Use this function to restart the card from the boot

This is equivalent to a restart of the electrical power supply.

----- Reset ----- 1 : Restart the card from the boot 0 : Exit -----
--

7.2 Choice 2: Network Configuration

Use this function to access network settings.

----- Network settings ----- 1 : Read Network settings 2 : Modify Network settings 3 : Set Ethernet speed 0 : Exit -----

7.2.1 Choice 1: Read IPv4&IPv6 Network settings

Enables reading of the card's routine settings

Network configuration : MAC address : 00:20:85:FD:1C:07 Mode : Static IP IP address : xxx.xxx.xxx.xxx Subnet mask : xxx.xxx.xxx.xxx Gateway : xxx.xxx.xxx.xxx Link Local IPv6 address : xxxx::xxxx:xxxx:xxxx:xxxx /xx Global IPv6 address : xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx /xx Global IPv6 address : xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:xxxx /xx

7.2.2 Choice 2: Modify IPv4 Network settings

Enables the modification of network parameters

For each of the following questions, you can press <Return> to select the value shown in braces, or you can enter a new value.
Should this target obtain IP settings from the network?[N]
Static IP address [xxx.xxx.xxx.xxx]?
Subnet Mask [xxx.xxx.xxx.xxx]?
Gateway IP address [xxx.xxx.xxx.xxx]?
Wait during your new configuration is saved ...
Reset the card to take into account the new configuration.

In DHCP mode, the card can receive the following parameters according to the DHCP server settings

- IPv4 address
- Subnet Mask
- IPv4 Gateway address
- Primary DNS server
- Secondary DNS server

The card must be [restarted](#) in order for the new parameters to be taken into account.

7.2.3 Choice 3: Set Ethernet speed

Enables the modification of the network speed

Set the Ethernet speed : [1 : Automatic, 2 : 10 MBit]
1
New Ethernet speed : Automatic
Wait during the new setting is saved ...
Reset the card to take into account the new configuration.

The card must be [restarted](#) in order for the new parameters to be taken into account.

7.3 Choice 3: Lost password / Set Login Password to Default

In the even the login or password is lost, choice 3 enables the return to the default password:

```
-----  
EATON  
NETWORK MANAGEMENT CARD  
-----  
1 : Reset  
2 : Network configuration  
3 : Set Login Password to Default  
4 : Return to Default Configuration  
0 : Exit  
-----  
Wait during Login Password return to default ...
```

Wait for the confirmation message.

```
Login & Password have been successfully set.
```

The card is now accessible via the Web with the password admin.

The card must be [restarted](#) in order for the new parameters to be taken into account.

7.4 Choice 4: Return to Default Configuration

Enables restoration of the [default configuration](#) of all the card's parameters

```
-----  
EATON  
NETWORK MANAGEMENT CARD  
-----  
1 : Reset  
2 : Network configuration  
3 : Set Login Password to Default  
4 : Return to Default Configuration  
0 : Exit  
-----  
Wait during configuration returns to default ...
```

Wait for the confirmation message.

```
Configuration has been set to default one.  
You must Reset the card.
```

The card must be [restarted](#) in order for the new parameters to be taken into account.

8 Appendix

8.1 Tables of alarms and events

8.1.1 Table of alarms

List of time dated alarms

Alarm on	Alarm off
Battery fuse blown	Battery fuse OK
No Battery	Battery present
Battery temperature fault	Battery temperature OK
Battery charger fault	Battery charger OK
Battery fault	Battery OK
MAX charger voltage fault	Charger voltage OK
MIN charger voltage fault	Charger voltage OK
Charger temperature fault	Charger temperature OK
Rectifier fault	Rectifier OK
Chopper fault	Chopper OK
Normal AC frequency out of tolerance	Normal AC frequency OK
Normal AC fuses blown	Normal AC fuses OK
Normal AC module fault	Normal AC module OK
Normal AC voltage out of tolerance	Normal AC voltage OK
Normal AC NOK	Normal AC OK
Site wiring fault	Site wiring OK
Bypass AC frequency out of tolerance	Bypass AC frequency OK
Bypass AC phase out of tolerance	Bypass AC phase OK
Bypass AC voltage out of tolerance	Bypass AC voltage OK
Automatic Bypass fault	Automatic Bypass OK
Automatic Bypass overload	Automatic Bypass load OK
Automatic Bypass over temperature	Automatic Bypass temperature OK
Automatic Bypass thermal overload	Automatic Bypass load OK
Automatic Bypass switch (Q4S) open	Automatic Bypass switch (Q4S) closed
Normal AC switch (Q1) open	Normal AC switch (Q1) closed
Battery switch (QF1) open	Battery switch (QF1) closed
Manual Bypass switch (Q3BP) closed	Manual Bypass switch (Q3BP) open
UPS on manual bypass	
Output switch (Q5N) open	Output switch (Q5N) closed
Single wave load fault	Load OK
Negative DC bus too high	Negative DC bus OK

Network Management Card (Network-MS) User Manual

Positive DC bus too high
Negative DC bus too low
Positive DC bus too low
Inverter limitation
Inverter fuses blown
Inverter fault
Inverter overload
Inverter over temperature
Inverter short circuit
Inverter thermal overload
Load not protected - On Automatic Bypass
Load short circuit
Load not powered
Protection Lost
Emergency button ON
Fan fault
Redundancy Lost
Low battery
UPS communication failed
UPS data base not available
UPS on battery
UPS internal fault
UPS overload
UPS overtemperature
Imminent UPS shutoff
<Sensor name>:
Temperature is above high threshold xx °C
<Sensor name>:
Humidity is above high threshold xx %
<Sensor name>:
Temperature is below low threshold xx °C
<Sensor name>:
Humidity is below low threshold xx %
<Sensor name>: <Input #1 label> <when closed label>
<Sensor name>: <Input #1 label> <when open label>
<Sensor name>: <Input #2 label> <when closed label>
<Sensor name>: <Input #2 label> <when open label>

Positive DC bus OK
Negative DC bus OK
Positive DC bus OK
Inverter end of limitation
Input fuses OK
Inverter OK
Inverter load OK
Inverter temperature OK
Inverter OK
Inverter load OK
Load protected - Return from Bypass
Load OK
Load powered
Protection OK
Emergency button OFF
Fan OK
Redundancy OK
Battery OK
UPS communication restored
UPS data base OK
UPS on normal AC
UPS OK
UPS returns to normal load
UPS temperature OK
UPS OK
<Sensor name>:
Temperature is in normal range
<Sensor name>:
Humidity is in normal range
<Sensor name>:
Temperature is in normal range
<Sensor name>:
Humidity is in normal range
<Sensor name>: <Input #1 label> <when closed label>
<Sensor name>: <Input #1 label> <when open label>
<Sensor name>: <Input #2 label> <when closed label>
<Sensor name>: <Input #2 label> <when open label>

Network Management Card (Network-MS) User Manual

If the UPS is modular UPS, for each module:

Battery fuse blown

No Battery
Battery temperature fault
Battery charger fault
Low battery
Charger temperature fault
MAX charger voltage fault
MIN charger voltage fault
Chopper fault
Normal AC fuses blown
Normal AC module fault
Inverter fuses blown
Inverter fault
Inverter short circuit
Load short circuit
Rectifier fuse blown
Rectifier fault
DC bus unbalanced
Emergency button ON
Load not powered
UPS internal fault
Battery fault
Imminent UPS shutoff
Normal AC frequency out of tolerance
Normal AC voltage out of tolerance
Normal AC switch (Q1) open
Site wiring fault
Automatic Bypass switch (Q4S) open
Bypass AC frequency out of tolerance
Automatic Bypass fault
Automatic Bypass overload
Automatic Bypass overtemperature
Automatic Bypass thermal overload
Bypass AC phase out of tolerance
Bypass AC voltage out of tolerance
Load not protected - On Automatic Bypass
Battery switch (QF1) open
Manual Bypass switch (Q3BP) closed
UPS on manual bypass

Battery fuse OK

Battery present
Battery temperature OK
Battery charger OK
Battery OK
Charger temperature OK
Charger voltage OK
Charger voltage OK
Chopper OK
Normal AC fuses OK
Normal AC module OK
Input fuses OK
Inverter OK
Inverter OK
Load OK
Rectifier OK
Rectifier OK
Load OK
Emergency button OFF
Load powered
UPS OK
Battery OK
UPS OK
Normal AC frequency OK
Normal AC voltage OK
Normal AC switch (Q1) closed
Site wiring OK
Automatic Bypass switch (Q4S) closed
Bypass AC frequency OK
Automatic Bypass OK
Automatic Bypass load OK
Automatic Bypass temperature OK
Automatic Bypass load OK
Bypass AC phase OK
Bypass AC voltage OK
Load protected - Return from Bypass
Battery switch (QF1) closed
Manual Bypass switch (Q3BP) open

Network Management Card (Network-MS) User Manual

Inverter limitation
Inverter overload
Inverter over temperature
Inverter thermal overload
Negative DC bus too high
Positive DC bus too high
Negative DC bus too low
Positive DC bus too low
Output switch (Q5N) open
Normal AC NOK
UPS on battery
UPS overload
UPS over temperature
Fan fault
UPS communication failed

Inverter end of limitation
Inverter load OK
Inverter temperature OK
Inverter load OK
Negative DC bus OK
Positive DC bus OK
Negative DC bus OK
Positive DC bus OK
Output switch (Q5N) closed
Normal AC OK
UPS on normal AC
UPS returns to normal load
UPS temperature OK
Fan OK
UPS communication restored

8.1.2 Table of UPS events

List of time dated informations

Alarm on

Battery fuse blown
Battery temperature fault
No Battery
Battery charger fault
Charger temperature fault
MAX charger voltage fault
MIN charger voltage fault
End of Warranty
End of battery life
End of life of the wearing parts
Outlet 1 open
Outlet 2 open
Chopper fault
Normal AC switch (Q1) open
Normal AC frequency out of tolerance
Normal AC fuses blown
Normal AC module fault
Normal AC voltage out of tolerance
Site wiring fault

Alarm off

Battery fuse OK
Battery temperature OK
Battery present
Battery charger OK
Charger temperature OK
Charger voltage OK
Charger voltage OK
LCM message OK
LCM message OK
LCM message OK
Outlet 1 closed
Outlet 2 closed
Chopper OK
Normal AC switch (Q1) closed
Normal AC frequency OK
Normal AC fuses OK
Normal AC module OK
Normal AC voltage OK
Site wiring OK

Network Management Card (Network-MS) User Manual

Automatic Bypass switch (Q4S) open
Bypass AC frequency out of tolerance
Automatic Bypass fault
Automatic Bypass overload
Automatic Bypass over temperature
Bypass AC phase out of tolerance
Automatic Bypass thermal overload
Load not protected - On Automatic Bypass
Bypass AC voltage out of tolerance
Battery switch (QF1) open
Manual Bypass switch (Q3BP) closed
UPS on manual bypass
Inverter limitation
Inverter fuses blown
Inverter fault
Inverter overload
Inverter overtemperature
Inverter short circuit
Inverter thermal overload
Output switch (Q5N) open
Load short circuit
Single wave load fault
Negative DC bus too high
Positive DC bus too high
Rectifier fault
Negative DC bus too low
Positive DC bus too low
Protection Lost
Redundancy Lost
Normal AC NOK
Low battery
UPS communication failed
UPS data base not available
UPS on battery
Emergency button ON
Fan fault
Load not powered
UPS internal fault
Battery fault
UPS overload
UPS over temperature

Automatic Bypass switch (Q4S) closed
Bypass AC frequency OK
Automatic Bypass OK
Automatic Bypass load OK
Automatic Bypass temperature OK
Bypass AC phase OK
Automatic Bypass load OK
Load protected - Return from Bypass
Bypass AC voltage OK
Battery switch (QF1) closed
Manual Bypass switch (Q3BP) open

Inverter end of limitation
Input fuses OK
Inverter OK
Inverter load OK
Inverter temperature OK
Inverter OK
Inverter load OK
Output switch (Q5N) closed
Load OK
Load OK
Negative DC bus OK
Positive DC bus OK
Rectifier OK
Negative DC bus OK
Positive DC bus OK
Protection OK
Redundancy OK
Normal AC OK
Battery OK
UPS communication restored
UPS data base OK
UPS on normal AC
Emergency button OFF
Fan OK
Load powered
UPS OK
Battery OK
UPS returns to normal load
UPS temperature OK

Network Management Card (Network-MS) User Manual

Imminent UPS shutoff

< Sensor Name> : Temperature is above high threshold <xx> (°C) or (°F)

< Sensor Name> : Humidity is above high threshold <xx> (%)

< Sensor Name> : Temperature is below low threshold <xx> °C or (°F)

< Sensor Name> : Humidity is below high threshold <xx> (%)

<Sensor name>: <Input #1 label> <when closed label>

<Sensor name>: <Input #1 label> <when open label>

<Sensor name>: <Input #2 label> <when closed label>

<Sensor name>: <Input #2 label> <when open label>>

UPS OK

<Sensor Name> : Temperature is in normal range

<Sensor Name> : Temperature is in normal range

<Sensor Name> : Temperature is in normal range

<Sensor Name> : Temperature is in normal range

Network Management Card (Network-MS) User Manual

8.1.3 Table of system alarms

Network Management Card startup
Send test mail SUCCESS
Send test mail ERROR
Send mail to <recipient> ERROR
<Sensor name> Communication failure
<Sensor name> Communication restored
Firmware upgraded
Connected NSM list Full, last connection refused
sendTrap()-> Unable to resolve hostname <hostname>
SNMP Send Trap # <num> failure to <hostname>
Time changed by user with yyyy/mm/dd hh:mm:ss
Time synchronized by NSM or EPM with yyyy/mm/dd hh:mm:ss

8.2 SNMP objects

8.2.1 IETF MIB

The Card implements the full IETF standard UPS MIB (RFC 1628), including the IETF alarm table and traps. Visit <http://tools.ietf.org> for a description of the MIB. The UPS MIB access path is 1.3.6.1.2.1.33

8.2.2 EATON Pulsar MIB (ex MGE)

This section contains an overview of MIB definitions for each of the MIB files:

Eaton Pulsar MIB (MGE MIB)

Eaton Pulsar MIB (MGE MIB) for environmental sensors

The NMC implements the reduced Eaton Pulsar MIB (MGE MIB), only the objects listed in the following tables are managed. The entire MIB description is available at <http://download.mgeops.com>

The Eaton Pulsar MIB access path is 1.3.6.1.4.1.705.1.

MIB object	SNMP Format	Add.path
upsmgIdentFamilyName	String	{1.1.0}
upsmgIdentModelName	String	{1.2.0}
upsmgIdentFirmwareVersion	String	{1.4.0}
upsmgIdentSerialNumber	String	{1.7.0}
upsmgConfigLowBatteryTime	seconds	{4.7.0}
upsmgConfigLowBatteryLevel	%	{4.8.0}
upsmgConfigAutoRestart	1(yes) 2(no)	{4.9.0}
upsmgConfigVARating	VA	{4.12.0}
upsmgBatteryRemainingTime	seconds	{5.1.0}
upsmgBatteryLevel	%	{5.2.0}
upsmgBatteryVoltage	deciVolts	{5.5.0}
upsmgBatteryCurrent	deciAmps	{5.6.0}
upsmgBatteryFaultBattery	1(yes) 2(no)	{5.9.0}
upsmgBatteryReplacement	1(yes) 2(no)	{5.11.0}
upsmgBatteryLowBattery	1(yes) 2(no)	{5.14.0}
upsmgBatteryChargerFault	1(yes) 2(no)	{5.15.0}
upsmgBatteryLowCondition	1(yes) 2(no)	{5.16.0}
upsmgInputPhaseNum		{6.1.0}
mginputVoltage_1	DeciVolts	{6.2.1.2.1.0}
mginputVoltage_2	DeciVolts	{6.2.1.2.2.0}
mginputVoltage_3	DeciVolts	{6.2.1.2.3.0}

Network Management Card (Network-MS) User Manual

mginputFrequency_1	DeciHz	{6.2.1.3.1.0}
mginputFrequency_2	DeciHz	{6.2.1.3.2.0}
mginputFrequency_3	DeciHz	{6.2.1.3.3.0}
mginputMinimumVoltage		{6.2.1.4.0}
mginputMaximumVoltage		{6.2.1.5.0}
mginputCurrent_1	DeciAmps	{6.2.1.6.1.0}
mginputCurrent_2	DeciAmps	{6.2.1.6.2.0}
mginputCurrent_3	DeciAmps	{6.2.1.6.3.0}
upsmgInputBadStatus		{6.3.0}
upsmgInputLineFailCause		{6.4.0}
upsmgOutputPhaseNum		{7.1.0}
mgoutputPhaseIndex_1		{7.2.1.1.1.0}
mgoutputPhaseIndex_2		{7.2.1.1.2.0}
mgoutputPhaseIndex_3		{7.2.1.1.3.0}
mgoutputVoltage_1	decivolts	{7.2.1.2.1.0}
mgoutputVoltage_2	decivolts	{7.2.1.2.2.0}
mgoutputVoltage_3	decivolts	{7.2.1.2.3.0}
mgoutputFrequency_1	decihz	{7.2.1.3.1.0}
mgoutputFrequency_2	decihz	{7.2.1.3.2.0}
mgoutputFrequency_3	decihz	{7.2.1.3.3.0}
mgoutputLoadPerPhase_1	%	{7.2.1.4.1.0}
mgoutputLoadPerPhase_2	%	{7.2.1.4.2.0}
mgoutputLoadPerPhase_3	%	{7.2.1.4.3.0}
mgoutputCurrent_1	deciamps	{7.2.1.5.1.0}
mgoutputCurrent_2	deciamps	{7.2.1.5.2.0}
mgoutputCurrent_3	deciamps	{7.2.1.5.3.0}
upsmgOutputOnBattery	1(yes) 2(no)	{7.3.0}
upsmgOutputOnByPass	1(yes) 2(no)	{7.4.0}
upsmgOutputUtilityOff	1(yes) 2(no)	{7.7.0}
upsmgOutputInverterOff	1(yes) 2(no)	{7.9.0}
upsmgOutputOverLoad	1(yes) 2(no)	{7.10.0}
upsmgOutputOverTemp	1(yes) 2(no)	{7.11.0}
upsmgAgentIpAddress		{12.1.0}
upsmgAgentSubnetMask		{12.2.0}
upsmgAgentDefGateway		{12.3.0}
upsmgAgentType		{12.6.0}
upsmgAgentMibVersion		{12.11.0}
upsmgAgentFirmwareVersion		{12.12.0}
upsmgAgentCommUPS	1(yes) 2(no)	{12.13.0}

Network Management Card (Network-MS)

User Manual

Network Management Card (Network-MS) User Manual

This table lists objects that are managed if there is an optional Sensor / Environmental Monitoring Probe (EMP) installed. The Eaton Pulsar MIB access path is 1.3.6.1.4.1.705.1.

upsmgEnvironAmbientTemp	0.1 degré	{8.1.0}
upsmgEnvironAmbientHumidity	0.1 %	{8.2.0}
upsmgEnvironmentNum		{8.6.0}
upsmgEnvironmentIndex		{8.7.1.1.1}
upsmgEnvironmentComFailure	1(yes) 2(no)	{8.7.1.2.1}
upsmgEnvironmentTemperature	0.1 degré	{8.7.1.3.1}
upsmgEnvironmentTemperatureLow	1(yes) 2(no)	{8.7.1.4.1}
upsmgEnvironmentTemperatureHigh	1(yes) 2(no)	{8.7.1.5.1}
upsmgEnvironmentHumidity	0.1 %	{8.7.1.6.1}
upsmgEnvironmentHumidityLow	1(yes) 2(no)	{8.7.1.7.1}
upsmgEnvironmentHumidityHigh	1(yes) 2(no)	{8.7.1.8.1}
upsmgEnvironmentInput1State	closed(1), open(2)	{8.7.1.9.1}
upsmgEnvironmentInput2State	closed(1), open(2)	{8.7.1.10.1}

8.2.3 TRAPS table: (1.3.6.1.4.1.705.1.11)

SNMP traps are sent when alarms appears and disappears.

Level 1: informational, 2: major, 3: critical

MIB TRAP	Trap #	Level
upsmgBatteryFault	Trap 1	Level 3
upsmgBatteryOK	Trap 2	Level 1
upsmgAtLowBattery	Trap 5	Level 3
upsmgFromLowBattery	Trap 6	Level 1
upsmgChargerFault	Trap 7	Level 3
upsmgChargerOK	Trap 8	Level 1
upsmgOnBattery	Trap 11	Level 2
upsmgReturnFromBattery	Trap 12	Level 1
upsmgOnByPass	Trap 13	Level 2
upsmgReturnFromByPass	Trap 14	Level 1
upsmgUtilityFailure	Trap 17	Level 2
upsmgUtilityRestored	Trap 18	Level 1
upsmgOverLoad	Trap 21	Level 3
upsmgLoadOK	Trap 22	Level 1
upsmgOverTemperature	Trap 23	Level 3
upsmgTemperatureOK	Trap 24	Level 1
upsmgOffToStart	Trap 29	Level 2
upsmgOffInProgress	Trap 31	Level 3
upsmgCommunicationFailure	Trap 37	Level 3
upsmgCommunicationRestored	Trap 38	Level 1
upsRedundancyLost	Trap 65	Level 2
upsRedundancyOK	Trap 66	Level 1
upsProtectionLost	Trap 67	Level 2
upsProtectionOK	Trap 68	Level 1

If the Environment Sensor is detected, the following information is managed:

upsEnvironmentComFailure	Trap 53	Level 2
upsEnvironmentComOK	Trap 54	Level 2
upsEnvironmentTemperatureLow	Trap 55	Level 2
upsEnvironmentTemperatureHigh	Trap 56	Level 2
upsEnvironmentTemperatureOK	Trap 57	Level 2
upsEnvironmentHumidityLow	Trap 58	Level 2
upsEnvironmentHumidityHigh	Trap 59	Level 2

Network Management Card (Network-MS) User Manual

upsEnvironmentHumidityOK	Trap 60	Level 2
upsEnvironmentInput1Closed	Trap 61	Level 2
upsEnvironmentInput1Open	Trap 62	Level 2
upsEnvironmentInput2Open	Trap 64	Level 2
upsEnvironmentInput2Closed	Trap 63	Level 2

The level is used to select traps to be sent to the supervisor. This adjustment is available from the “Notified applications” page

8.2.4 EATON Powerware MIB

The Card implements the full Eaton Powerware MIB (PowerMIB), including alarm tables. The Eaton traps are sent. The Eaton Powerware MIB access path is 1.3.6.1.4.1.534.

Table is an abbreviated list of objects from the PowerMIB. The UPS output/load segment controls objects and the entire MIB description is available at <http://powerquality.eaton.com/Support/SoftwareDrivers>.

MIB Object	SNMP Format	Add.path
xupsIdentManufacturer	String	{1.1.0}
xupsIdentModel	String	{1.2.0}
xupsIdentSoftwareVersion	String	{1.3.0}
xupsIdentOemCode	Integer	{1.4.0}
xupsBatTimeRemaining	Seconds	{2.1.0}
xupsBatVoltage	Volts DC	{2.2.0}
xupsBatCurrent	Amps DC	{2.3.0}
xupsBatCapacity	Percent	{2.4.0}
xupsBatteryAbmStatus	Integer	{2.5.0}
xupsBatteryLastReplacedDate	String	{2.6.0}
xupsInputFrequency	0.1 Hertz	{3.1.0}
xupsInputLineBads	Integer	{3.2.0}
xupsInputNumPhases	Integer	{3.3.0}
xupsInputTable		{3.4.0}
xupsInputPhase	Integer	{3.4.1.1.x}
xupsInputVoltage	RMS Volts	{3.4.1.2.x}
xupsInputCurrent	RMS Amps	{3.4.1.3.x}
xupsInputWatts	Watts	{3.4.1.4.x}
xupsInputSource	Integer	{3.5.0}
xupsDualInputStatus	Integer	{3.6.0}

Network Management Card (Network-MS) User Manual

xupsSecondaryInputWatch	Integer	{3.7.0}
xupsOutputLoad	Percent	{4.1.0}
xupsOutputFrequency	0.1 Hertz	{4.2.0}
xupsOutputNumPhases	Integer	{4.3.0}
xupsOutputTable		{4.4.0}
xupsOutputPhase	Integer	{4.4.1.1.x}
xupsOutputVoltage	RMS Volts	{4.4.1.2.x}
xupsOutputCurrent	RMS Amps	{4.4.1.3.x}
xupsOutputWatts	Watts	{4.4.1.4.x}
xupsOutputSource	Integer	{4.5.0}
xupsBypassFrequency	0.1 Hertz	{5.1.0}
xupsBypassNumPhases	Integer	{5.2.0}
xupsBypassTable		{5.3.0}
xupsBypassPhase	Integer	{5.3.1.1.x}
xupsBypassVoltage	RMS Volts	{5.3.1.2.x}
xupsEnvAmbientTemp	Degrees C	{6.1.0}
xupsEnvAmbientLowerLimit	Degrees C	{6.2.0}
xupsEnvAmbientUpperLimit	Degrees C	{6.3.0}
xupsEnvAmbientHumidity	Percent	{6.4.0}
xupsEnvRemoteTemp	Degrees C	{6.5.0}
xupsEnvRemoteHumidity	Percent	{6.6.0}
xupsEnvNumContacts	Integer	{6.7.0}
xupsContactSenseTable	table	{6.8.0}
xupsContactIndex	Integer	{6.8.1.1.x}
xupsContactType	Integer	{6.8.1.2.x}
xupsContactState	Integer	{6.8.1.3.x}
xupsContactDescr	String	{6.8.1.4.x}
xupsEnvRemoteTempLowerLimit	Degrees C	{6.9.0}
xupsEnvRemoteTempUpperLimit	Degrees C	{6.10.0}
xupsEnvRemoteHumidityLowerLimit	Percent	{6.11.0}
xupsEnvRemoteHumidityUpperLimit	Percent	{6.12.0}
xupsAlarmTable	table	{7.2.0}
xupsAlarmID		{7.2.1.1.x}
xupsAlarmDescr		{7.2.1.2.x}
xupsAlarmTime		{7.2.1.3.x}

Network Management Card (Network-MS) User Manual

xupsOnBattery		{7.3.0}
xupsLowBattery		{7.4.0}
xupsUtilityPowerRestored		{7.5.0}
xupsReturnFromLowBattery		{7.6.0}
upsOutputOverload		{7.7.0}
xupsInternalFailure		{7.8.0}
xupsBatteryDischarged		{7.9.0}
xupsInverterFailure		{7.10.0}
xupsOnBypass		{7.11.0}
xupsBypassNotAvailable		{7.12.0}
xupsOutputOff		{7.13.0}
xupsInputFailure		{7.14.0}
xupsBuildingAlarm		{7.15.0}
xupsShutdownImminent		{7.16.0}
xupsOnInverter		{7.17.0}
xupsBreakerOpen		{7.20.0}
xupsAlarmBatteryBad		{7.23.0}
xupsOutputOffAsRequested		{7.24.0}
xupsDiagnosticTestFailed		{7.25.0}
xupsCommunicationsLost		{7.26.0}
xupsUpsShutdownPending		{7.27.0}
xupsAlarmTestInProgress		{7.28.0}
xupsAmbientTempBad		{7.29.0}
xupsLossOfRedundancy		{7.30.0}
xupsAlarmTempBad		{7.31.0}
xupsAlarmChargerFailed		{7.32.0}
xupsAlarmFanFailure		{7.33.0}
xupsAlarmFuseFailure		{7.34.0}
xupsPowerSwitchBad		{7.35.0}
xupsModuleFailure		{7.36.0}
xupsOnAlternatePowerSource		{7.37.0}
xupsAltPowerNotAvailable		{7.38.0}
xupsNoticeCondition		{7.39.0}
xupsRemoteTempBad		{7.40.0}
xupsRemoteHumidityBad		{7.41.0}
xupsAlarmOutputBad		{7.42.0}
xupsAlarmAwaitingPower		{7.43.0}
xupsOnMaintenanceBypass		{7.44.0}

Network Management Card (Network-MS) User Manual

xupsTestBatteryStatus	Integer	{8.2.0}
xupsLastGeneralTest	Integer	{8.3.0}
xupsLastGeneralTestResult	Integer	{8.4.0}
xupsConfigOutputVoltage	RMS Volts	{10.1.0}
xupsConfigInputVoltage	RMS Volts	{10.2.0}
xupsConfigOutputWatts	Watts	{10.3.0}
xupsConfigOutputFreq	0.1 Hertz	{10.4.0}
xupsConfigDateAndTime	String	{10.5.0}
xupsConfigLowOutputVoltageLimit	RMS Volts	{10.6.0}
xupsConfigHighOutputVoltageLimit	RMS Volts	{10.7.0}
xupsConfigInstallDate	String	{10.8.0}
xupsTopologyType	Integer	{13.1.0}
xupsTopoMachineCode	Integer	{13.2.0}
xupsTopoUnitNumber	Integer	{13.3.0}
xupsTopoPowerStrategy	Integer	{13.4.0}

8.3 Authentication Configuration Example

8.3.1 RADIUS

A IP card is running with the 166.99.224.96 IP address.

A freeradius (version 1.1.7-r0.0.2) is running (IP address:166.99.224.129, port :1812), with the following configuration:

- **clients.conf file:** allows NAS (NMC card) with an address in the 166.99.224/8 network to send requests to the server (shared secret between the server and the NMC cards: eaton123)

```
client 166.99.224.0/8{
    secret          = eaton123
    shortname       = nmc
    require_message_authenticator = no
}
```

- **users.conf file:** allows (with Service-Type attribute) the access to the NMC cards as an administrator for the user:
 - name: "admin",
 - password "myPassword "

Network Management Card (Network-MS) User Manual

admin Cleartext-Password := "myPassword"
Service-Type = Administrative-User

The following RADIUS configuration must be apply(value of the masked field secret: *eaton123*):

Enable Configuration:	Enabled ▾
Primary/Secondary:	Primary ▾
Radius Server:	166.99.224.129
Secret:	••••••••
NAS IP Address:	166.99.224.96 ▾
Auth. Port:	1812
Time Out:	10
Retry Number:	3

Save

Back

8.3.2 LDAP

A IP card is running with the 166.99.224.96 IP address.

An Active Directory server is running (IP address: 10.130.32.6, port : 389), with the following configuration:

- Base Name : **DC=mbdevd,DC=ch,DC=etn,DC=com**
- User with the necessary rights to search information about users and groups:
 - Distinguish Name : **CN=searchUser,CN=Users,DC=mbdevd,DC=ch,DC=etn,DC=com**
 - Password: **eaton**
- NMC Card User:
 - Distinguish Name: **CN=UPSUser,CN=Users,DC=mbdevd,DC=ch,DC=etn,DC=com**
 - LDAP Class Type: **user**
 - sAMAccountName Attribute: **UPSAdmin**
 - Password: **eaton**
- Group managing permissions to access to the NMC cards
 - Distinguish Name : **CN=UPSAdmins,OU=eUPSOU,DC=mbdevd,DC=ch,DC=etn,DC=com**
 - sAMAccountName Attribute: **UPSAdministrators**
 - Attribute member : **CN=UPSAdminUser,CN=Users,DC=mbdevd,DC=ch,DC=etn,DC=com**

In order to allow the Web access for the user:

- Login identifier: **UPSAdmin**

Network Management Card (Network-MS) User Manual

- Password: **eaton**

The following LDAP configuration must be apply(value of the masked field "Search User Password": *eaton*):

Authentication Mechanism:	Simple <input type="button" value="v"/>
User Search Bind:	By Accredited User <input type="button" value="v"/>
Search User:	CN=searchUser,CN=Users,DC=mbdevd,DC=ch,DC=etn,DC=
Search User Password:
User Base DN:	CN=Users,DC=mbdevd,DC=ch,DC=etn,DC=com
User Object:	user
User Attribute:	sAMAccountName
Authorization Mode:	By Group <input type="button" value="v"/>
UPS Group Base DN:	OU=eUPSOU,DC=mbdevd,DC=ch,DC=etn,DC=com
Group Name Attribute:	sAMAccountName
User Name Attribute:	member

	Priority	LDAP Server Name or IP Address	Port
<input checked="" type="radio"/>	PRIMARY	10.130.32.6	389
<input type="radio"/>	SECONDARY		389

Select the LDAP Server to be modified.

9 Glossary

Bootp:

Protocol based on UDP used to allocate an IP address corresponding to an Ethernet card during the startup phase. Defined by the RCF 951

CLI Command line interface

This interface allows direct access to the individual configuration parameters.

Community name:

Access key to access SNMP agent information

DHCP Dynamic Host Configuration Protocol

This IETF protocol enables remote, automatic, self-configuration of the IP addresses of a workstation.

DN Distinguished Name

An LDAP object is referenced by its distinguished name (DN). A DN is a sequence of relative distinguished names (RDN) connected by commas.

DNS Domain Name Service

The DNS protocol ensure correspondence between the name of a machine and its IP address

Gateway

Interconnection equipment between networks with different conventions, to enable communication between them

HTML HyperText Markup Language

Language used to describe hypertext pages on the web.

HTTPS

Secure version of HTTP, the communication protocol of the World Wide Web. It was invented by Netscape Communications Corporation to provide authentication and encrypted communication and is used in electronic commerce.

IPP Intelligent Power Protector

Protection software installed on a PC or server to protect it

IPP SHUTDOWN CENTER

Communication software installed on a PC connected to the UPS to supervise it and communicate with Intelligent Power Protector to insure power protection on servers

Network Management Card (Network-MS) User Manual

MIB Management Informatique Base

Group of software commands to control and administrate a device through the network. Each type of device (server, hub, PC, UPS, etc.) has its own MIB

NMC Network Management Card

Communication cards to supervise UPS and communicate with Intelligent Power Protector to insure power protection on servers

NMS Network Management Station (SNMP)

The dedicated PC or workstation is used on the company's networks to administrate all devices connected to the network. Data are transmitted using the SNMP protocol. Popular NMS systems include HP OpenView, IBM Tivoli, CA Unicenter, etc.

IPP: Intelligent Power Protector

Protection software installed on a PC or server to protect it

NTP Network Time Protocol

Network protocol that synchronizes the time on several machines.

Programmable outlet (controlled outlet):

Outlet that can be remote-switched on or off. UM-Client components enable management of such outlets.

RDN Relative Distinguished Names

A RDN is an LDAP attribute with an associated value in the form attribute=value.

REBOOT: To restart a system after an interruption.

- To perform an obstacle-free "reboot", it is essential that the system is correctly and carefully shut down beforehand.
- The reboot is usually automatic if the computer is re-supplied with electricity (from the utility or from the UPS).

RFC

Request for Comments. All documents defining internal Internet operation.

SNMP Simple Network Management Protocol

Protocol used to remote-supervise, administrate and control devices connected to a company network.

SMTP Simple Mail Transfer Protocol

Enables message transfer between e-mail servers or between the client and its server. It is based on the server's port 25. It is described in RFC 821

SSH Secure SHell

Network Management Card (Network-MS) User Manual

Telnet is not a secure protocol, but it is possible to secure the connection using SSH

SSL (Secure Sockets Layers) is a protocol developed by Netscape Communications Corporation for securing data transmission in commercial transactions on the Internet. Using public-key cryptography, SSL provides server authentication, data encryption, and data integrity for client/server communications

Subnet mask

Mask of bits used to identify and differentiate the network address and the equipment address in an IP address. Normally, the mask is automatically determined by the class of address, which defines in a unique manner the network part/equipment part division of the IP address.

- Class A: internet address: 255.0.0.0.
- Class B: internet address: 255.255.0.0.
- Class C: internet address: 255.255.255.0.

TELNET Terminal over NETWORK

Telnet is a terminal emulation protocol. It is used to access and configure the parameters for the NMC.

Trap (SNMP): This term describes an event that affects a MIB variable. Traps are sent to the manager, which is programmed to perform specific tasks upon reception of the traps.