

PHILIPS



Instruction manual
Gerätehandbuch
Notice d'emploi et d'entretien

L.F.-Generator
N.F. Generator
Générateur de b.f.

PM 5107
(9445 051 07..1)



IMPORTANT

In correspondence concerning this instrument, please quote the type number and serial number as given on the type plate.

WICHTIG

Bei Schriftwechsel über dieses Gerät wird gebeten, die Typennummer und die Gerätenummer anzugeben. Diese befinden sich auf dem Typenschild an der Rückseite des Geräts.

IMPORTANT**RECHANGE DES PIECES DETACHEES (Réparations)**

Dans votre correspondance et dans vos réclamations se rapportant à cet appareil, veuillez TOUJOURS indiquer le numéro de type et le numéro de série qui sont marqués sur la plaquette caractéristiques.

Note:

The design of this instrument is subject to continuous development and improvement. Consequently, this instrument may incorporate minor changes in detail from the information contained in this manual.

Bemerkung:

Die Konstruktion und Schaltung dieses Geräts werden ständig weiterentwickelt und verbessert. Deswegen kann das Gerät von den in dieser Anleitung stehenden Angaben abweichen.

Remarques:

Cet appareil est l'objet de développements et améliorations continus. En conséquence, certains détails mineurs peuvent différer des informations données dans la présente notice d'emploi et d'entretien.

Contents

1.	GENERAL INFORMATION	7
1.1.	Introduction	7
1.2.	Technical data	7
1.3.	Accessories	9
1.4.	Description of the block diagram	9
2.	DIRECTIONS FOR USE	10
2.1.	Installation	10
2.1.1.	Safety regulations	10
2.1.2.	Position	10
2.1.3.	Earthing	10
2.1.4.	Connection to the mains	10
2.1.5.	Controls and sockets	11
2.2.	Operation	11
2.2.1.	Switching on	11
2.2.2.	Selecting the waveform	11
2.2.3.	Setting the frequency	12
2.2.4.	Setting the amplitude	12
2.2.5.	Decreasing the settling time	12
2.2.6.	TTL Impulse-signal output	12
3.	SERVICE DATA	27
3.1.	Gaining access to the parts	27
3.2.	Replacing a pushbutton switch	27
3.3.	Checking and adjusting	28
3.4.	Parts list	30

LIST OF FIGURES

1	Block diagram	33
2	Transformer connections (MA8981)	33
3	Front view	34
4	Rear view	34
5	Replacing a switch of the pushbutton unit	35
6	Front view mechanical parts	36
7	Rear view mechanical parts	36
8	Inside view top side	37
9	Inside view bottom side	37
10	Printed wiring board with components	38
11	Circuit diagram	39

1. General information

1.1. INTRODUCTION

The L.F. generator produces sine and squarewave signals in the frequency range 9 Hz up to 110 kHz with very low harmonic distortion. The output voltage is continuously variable and an additional 20 dB attenuation may be set by means of a pushbutton switch. A second output delivers a squarewave signal which is TTL compatible.

This compact and lightweight instrument is extremely suitable for education and service purposes due to its simple operation, and because of its low distortion it is ideal for the servicing of HI-FI equipment.

1.2. TECHNICAL DATA

General information

The instrument has been designed and tested in accordance with IEC publication 348 for Class 1 instruments and has been supplied in a safe condition.

This instruction manual contains information and warnings which must be followed by the purchaser to ensure safe operation and to maintain the instrument in a safe condition.

Only properties expressed in numerical values, with tolerances stated, are guaranteed by the factory. All specifications will be met after a warming-up period of 30 minutes in a constant position.

If not stated otherwise, relative tolerances (in p.p.m. or %) relate to the adjusted value.

SPECIFICATIONS

Frequency

Nominal range	9 Hz to 110 kHz
Measuring range	10 Hz to 100 kHz, divided into four overlapping sub-ranges
Adjustment	dial with a half-logarithmic scale, and four range-selector switches; x10 Hz, x100 Hz, x1 kHz, x10 kHz
Setting error	$\pm 5\% \pm 1 \text{ Hz}$ of the set value
Short-time drift, within 15 minutes	$< 500 \cdot 10^{-6}$
Long-term drift, within 7 hours	$< 1500 \cdot 10^{-6}$
Temperature coefficient	$< 500 \cdot 10^{-6}/\text{deg C}$ (500 ppm/deg C)
Dependence on mains voltage (within nominal range)	$< 10 \cdot 10^{-6}$

Wave forms

Sinewave
Squarewave

Outputs

1. Output Z_o 600 Ω

Connector	BNC socket
Internal resistance	600 Ω
Maximum load	Short-circuit proof
Load resistance	
— nominal range	$\geq 100 \Omega$
— reference value	600 Ω

Sinewave mode

Open circuit voltage	2 Vr.m.s.
— nominal value	
Step attenuator	0 dB; 20 dB $\pm$ 0.3 dB
Amplitude control range	0 dB to > 40 dB
D.c. offset voltage	< 30 mV, ATTENUATOR in 0 dB position
Distortion (in position  LOW DISTORTION)	< 0.7 % in range 10 Hz to 100 kHz < 0.03 % in range 300 Hz to 20 kHz
Distortion (in position  FAST SETTLING)	< 1.5 % in range 10 Hz to 100 kHz < 0.5 % in range 100 Hz to 100 kHz
Amplitude response, referred to 1 kHz	< 2 %
Temperature coefficient	± 0.3 % /deg C
Dependence on mains voltage (within nominal range)	$\pm 10^{-3}$

Squarewave mode

Open-circuit voltage, nominal value	2 Vr.m.s. ($\Delta 4$ Vp-p)
Step attenuator	0 dB; 20 dB $\pm$ 0.3 dB
Amplitude control range	0 dB to > 40 dB
D.c. offset voltage	< 30 mV, ATTENUATOR in 0 dB position
Overshoot and ripple	< 1.5 %
Tilt	< 2 % at 20 Hz < 1 % at 50 Hz
Temperature coefficient	± 0.1 % /deg C
Duty cycle	0.5 ± 0.025 0.5 ± 0.007 in position 1x10 kHz
Rise-time	< 0.5 μ s
Fall-time	< 0.5 μ s

2. OUT TTL

Connector	BNC socket
Open-circuit voltage	TTL-compatible
— nominal voltage	$+ (4.5 \pm 0.7)$ V = HIGH < 0.3 V = LOW
Nominal output current	0.8 mA for HIGH 32 mA for LOW
Fan-out	20
Tilt	< 1 %
Rise-time, from 0.6 V to 2.2 V	< 30 ns, at $R_L = 200 \Omega$ and $C_L = 15$ pF
Fall-time, from 2.2 V to 0.6 V	< 15 ns, at $R_L = 200 \Omega$ and $C_L = 15$ pF
Duty cycle	0.5

ENVIRONMENTAL CONDITIONS

The environmental data are valid only if the instrument is checked in accordance with the official checking procedures. Details on these procedures and failure criteria are supplied on request by the Philips Organisation in your country, or by N.V. Philips' Gloeilampenfabrieken, Test and Measuring Dept., Eindhoven, Holland.

Ambient temperature

- reference value +23 deg C
- nominal operating range +5 deg C to +40 deg C
- range for transport and storage -40 deg C to +70 deg C

Relative humidity

- reference value 45 % to 75 %
- nominal range 20 % to 80 %

Air circulation speed

- reference value 0 to 0.2 m/s
- nominal value 0 to 0.5 m/s

Not designed for use in direct sunlight.

Operating position

Optional

Power supply

- reference value 230 V
- nominal values 115 V, 230 V (internally selectable; set to 230 V on delivery)
- nominal range $\pm 15\%$ of set value
- Frequency range 50 Hz to 100 Hz
- tolerance $\pm 5\%$ of nominal value
- Consumption 4 W
- Warming-up period 30 min.

Cabinet

- Protection type (see IEC 144) IP 20 (see DIN 40 050)
- Protection class (see IEC 348) Class 1, protective conductor
- Overall dimensions
 - height 90 mm
 - width 210 mm
 - length 200 mm
- Weight 1.25 kg

1.3. ACCESSORIES

- Standard
 - 1 operating manual
 - 1 mains cable
- Optional
 - Coaxial cable with BNC/BNC socket: PM 9075

1.4. DESCRIPTION OF THE BLOCK DIAGRAM (see Fig. 1)

The frequency-determining part of the generator is the WIEN-NETWORK in the feedback circuit of the OSCILLATOR AMPLIFIER. This oscillator generates a sinewave voltage with low distortion, stable frequency and amplitude. By means of the FAST SETTling switch a shorter amplitude-settling time is obtained for lower frequencies (i.e. less bouncing).

The frequency, from 10 Hz to 100 kHz, can be selected in four decimal steps by means of the FREQUENCY Hz x 10 to x10 k pushbuttons. In each range the frequency is continuously variable by means of the front-panel frequency dial, which has a half-logarithmic scale from 1 Hz to 10 Hz.

Choice of sinewave or squarewave signal is provided by the WAVEFORM pushbuttons.

When pushbutton ~ is selected, the output of the oscillator is applied via the AMPLITUDE control to OUTPUT STAGE 1. This output stage serves to provide a constant output impedance of 600 Ω at the OUTPUT socket via the STEP ATTENUATOR.

The STEP ATTENUATOR provides the possibility to attenuate the output signal in one step of 20 dB.

When pushbutton  is selected, a SQUARER is connected between the oscillator amplifier and the AMPLITUDE control.

The SQUARER also delivers a TTL-compatible squarewave signal via OUTPUT STAGE II to the  OUT TTL socket, regardless of the waveform selected.

The POWER SUPPLY provides a stabilised d.c. voltage for the various circuits.

2. Directions for use

2.1. INSTALLATION

Before any other connection is made, the protective earth terminal must be connected to a protective conductor (see section 2.1.3. Earthing).

2.1.1. Safety Regulations (see IEC 348 or VDE 0411)

Before connecting the instrument to the mains, visually check the cabinet, controls and connectors etc., to ascertain whether any damage has occurred in transit. If any defects are apparent, do not connect the instrument to the mains.

Always disconnect the instrument from the mains before removing any protective covers.

Any maintenance and service work necessary with the instrument switched on, should only be performed by a qualified technician.

The mains connector must only be plugged into an earthed mains socket.

Do not make this safety protection ineffective; for example, by the use of an extension cable without protective conductor.

2.1.2. Position

The instrument may be used in any desired position.

Do not position the instrument on any surface which produces or radiates heat, or in direct sunlight.

2.1.3. Earthing

Before switching on, the instrument must be earthed in conformity with the local safety regulations, via the three-core mains cable.

(See also section 2.1.1. Safety Regulations.)

WARNING:

Any interruption of the protective conductor inside or outside the instrument, or disconnection of the protective earth terminal, is likely to make the instrument dangerous. Intentional interruption is prohibited.

When an instrument is brought in from a cold environment for use in a warm room condensation may cause a hazardous condition. Therefore, ensure that the earthing requirements are strictly adhered to.

2.1.4. Connection to the mains

Before inserting the mains plug into the mains socket, ensure that the instrument is set to the local mains voltage. The instrument must be connected only to an a.c. supply. On delivery the instrument is set to 230 V $\pm 15\%$. If the instrument is to be used on 115 V supply, proceed as follows:

- Unplug the mains connector.
- Loosen the two screws at the rear and remove the lower cabinet cover.

- Change the primary connections of the transformer in accordance with the indication on the p.c. board near the transformer.
- Change the mains voltage plate on the rear of the instrument in accordance with the mains voltage selected.
- Close the instrument.


Fuse replacement

Ensure that only fuses with the required rated current and of the specified type are used for replacement. The use of repaired fuses must be avoided. The instrument must be disconnected from all voltage sources when a fuse is to be replaced.

Internal mains adjustment and fuse replacement must only be undertaken by a skilled person who is aware of the hazards involved.

2.1.5. Controls and sockets

Front panel (see Fig. 3)

Textplate indication	Function
o ON POWER o OFF	Mains switch; white spot for ON-position
 OUT TTL	TTL-pulse output
OUTPUT Z_0 600 Ω	Signal output
AMPLITUDE  LOW DISTORTION  FAST SETTLING	Amplitude control, combined with pull switch to decrease the settling time
WAVEFORM 	Waveform selector
ATTEN 20 dB	Step attenuator
FREQUENCY Hz x10 x100 x1 k x10 k	Frequency range selector
	Frequency control

Rear panel (see Fig. 4)

Rear panel indication	Function
230 V/50 Hz	Mains input socket

2.2. OPERATION

2.2.1. Switching on the instrument

After the generator has been connected to the mains in accordance with sections 2.1.3 and 2.1.4, it may be switched on by depressing the mains switch **POWER**.

The white spot inside the **POWER** switch indicates mechanically that the instrument is switched on.

After a warming-up period of 30 minutes the instrument is ready for use.

2.2.2. Selecting the waveform

The output signal mode can be selected by operating the relevant pushbutton ( or ) of the **WAVEFORM** selector.

2.2.3. Setting the frequency

The frequency can be adjusted in two different ways:

- continuously, with the frequency dial
- in steps, with the FREQUENCY Hz pushbuttons

The output frequency equals the product of the value on the frequency dial and the value of the selected FREQUENCY Hz range pushbutton (e.g. frequency dial setting 1.9 x range switch 10 k = 19 kHz output frequency).

2.2.4. Setting the amplitude

The signal amplitude at the OUTPUT BNC socket is continuously variable by means of the AMPLITUDE control to r.m.s. values between 0 V and 2 V.

An attenuation of 20 dB can be obtained by depressing the ATTEN pushbutton.

2.2.5. Decreasing the settling time

When using the instrument in sinewave mode with low frequency values it is possible to decrease the settling time by means of the LOW DISTORTION/FAST SETTling switch, which is incorporated in the AMPLITUDE control.

Pulling the AMPLITUDE control out selects the FAST SETTling mode.

As a result of this, the distortion factor increases.

2.2.6. TTL Impulse-signal output

A TTL-compatible squarewave signal with a duty cycle of 0.5 is available at the $\square$ OUT socket. The frequency of this signal is the same as that set for the other output.

3.4.2. ELECTRICAL PARTS

Resistors

Carbon

— typical dissipation at $T_{amb.} = 70^{\circ}C$ — max. hot spot temp. = $155^{\circ}C$

CR16 = 0,2 W CR52 = 0,67 W

CR25 = 0,33 W CR68 = 1,15 W

CR37 = 0,5 W CR93 = 2 W

Metal film

— typical dissipation at $T_{amb.} = 70^{\circ}C$ — max. hot spot temp. = $175^{\circ}C$

MR 25 = 0,4 W

MR30 = 0,5 W

MR52 = 0,75 W

ITEM	ORDERING NUMBER	TYPE/DESCRIPTION
------	-----------------	------------------

TRANSISTORS

301 5322 130 44197 BC558B

302-304 4822 130 40937 BC548B

305 5322 130 40417 BSX20

306 5322 130 40645 BD135

307 5322 130 44197 BC558B

308 4822 130 40937 BC548B

INTEGRATED CIRCUITS

350 5322 209 85193 TAA761A

DIODES

401 5322 130 30781 BZX79-C15

402 5322 130 34049 BZX75-C2V1

403 5322 130 30771 BZX79-C13

404 5322 130 34377 BZX70-C30

405 5322 130 30414 BY164

406 5322 130 34174 BZX79-B4V7

407, 408 5322 130 30759 BZX79-C5V6

409-410 5322 130 34321 IN4151

ITEM	ORDERING NUMBER	FARAD	TOL (%)	VOLTS	REMARKS
------	-----------------	-------	---------	-------	---------

CAPACITORS

501, 502 5322 121 54171 330N 1 63 POLYSTYRENE FOIL

503, 504 5322 121 54111 33N 1 63 POLYSTYRENE FOIL

505, 506 4822 121 50389 3,3N 1 63 POLYSTYRENE FOIL

507 5322 121 54059 220P 1 500 POLYSTYRENE FOIL

508 4822 122 31081 100P 2 100 CERAMIC PLATE

509 5322 121 54047 270P 1 500 POLYSTYRENE FOIL

510 5322 125 54025 5,5-65P 100 TRIMMER

511 5322 125 54013 2-15P 100 TRIMMER

512, 513 4822 124 20526 220MU 25 ELECTROLYTIC

514 4822 122 31052 8,2P 0,25P 100 CERAMIC PLATE

515 4822 122 30043 10N -20/+80 63 CERAMIC PLATE

516 4822 121 40337 4,7N 10 630 POLYESTER FOIL

517 5322 124 24067 1000MU 63 ELECTROLYTIC

518 5322 124 24167 2200MU 25 ELECTROLYTIC

519 4822 122 30105 1,5P 0,25P 100 CERAMIC PLATE

520 4822 122 31041 3,3P 0,25P 100 CERAMIC PLATE

521 4822 122 31081 100P 2 100 CERAMIC PLATE

522 4822 124 20526 220MU 25 ELECTROLYTIC

ITEM	ORDERING NUMBER	OHM	TOL (%)	TYPE	REMARKS
RESISTORS					
601	5322 102 34016	2X50K	2		CARBON TANDEM POTM
602	4822 100 10037	1.0K	20	0.1W	TRIMMING POTM
603	5322 116 54585	3.48K	1	MR25	METAL FILM
604	5322 116 50729	4.22K	1	MR25	METAL FILM
605	5322 116 34026	50K	20	0.003W	NTC
606	5322 116 50569	95.3	1	MR25	METAL FILM
607	4822 116 30021	4.7K	10	0.6W	NTC
608	4822 110 63107	1.0K	5	CR25	CARBON
609	4822 100 10037	1.0K	20	0.1W	TRIMMING POTM
610	4822 110 63085	150	5	CR25	CARBON
611	4822 110 63107	1.0K	5	CR25	CARBON
612	4822 110 60115	2.0K	5	CR25	CARBON
613	4822 110 60115	2.0K	5	CR25	CARBON
614	5322 116 50664	2.05K	1	MR25	METAL FILM
615	5322 100 10151	1.0K	20	0.1W	TRIMMING POTM
616	4822 110 63101	560	5	CR25	CARBON
617	4822 110 60093	300	5	CR25	CARBON
618	4822 110 63107	1.0K	5	CR25	CARBON
619,620	5322 116 54549	1.0K	1	MR25	METAL FILM
621	5322 116 54623	11K	1	MR25	METAL FILM
622	5322 116 54541	825	1	MR25	METAL FILM
623	5322 116 54565	1.62K	1	MR25	METAL FILM
624	4822 110 63096	390	5	CR25	CARBON
625	4822 110 63103	680	5	CR25	CARBON
626	5322 110 30117	2.4K	5	CR37	CARBON
627	4822 110 60097	430	5	CR25	CARBON
629	4822 110 53161	100K	5	CR37	CARBON
630	4822 110 63116	2.2K	5	CR37	CARBON
631,632	4822 110 63112	1.5K	5	CR25	CARBON
633,634	5322 116 50561	590	1	MR25	METAL FILM
635	5322 116 54513	332	1	MR25	METAL FILM
636	5322 116 50636	2.74K	1	MR25	METAL FILM
637	5322 116 54598	5.49K	1	MR25	METAL FILM
638	5322 116 54534	681	1	MR25	METAL FILM
640	5322 101 64013	22K	20	0.125W	CARBON POTM LIN + SWITCH
641	4822 110 63132	8.2K	5	CR25	CARBON
642	4822 100 10051	22K	20	0.05W	TRIMMING POTM
643	4822 110 63136	12K	5	CR25	CARBON

MISCELLANEOUS

Item	Fig.	Ordering number	Description
—		5322 321 10071	Mains cable
26	8	5322 146 14108	Mains transformer
27	8	4822 252 20001	Thermal fuse


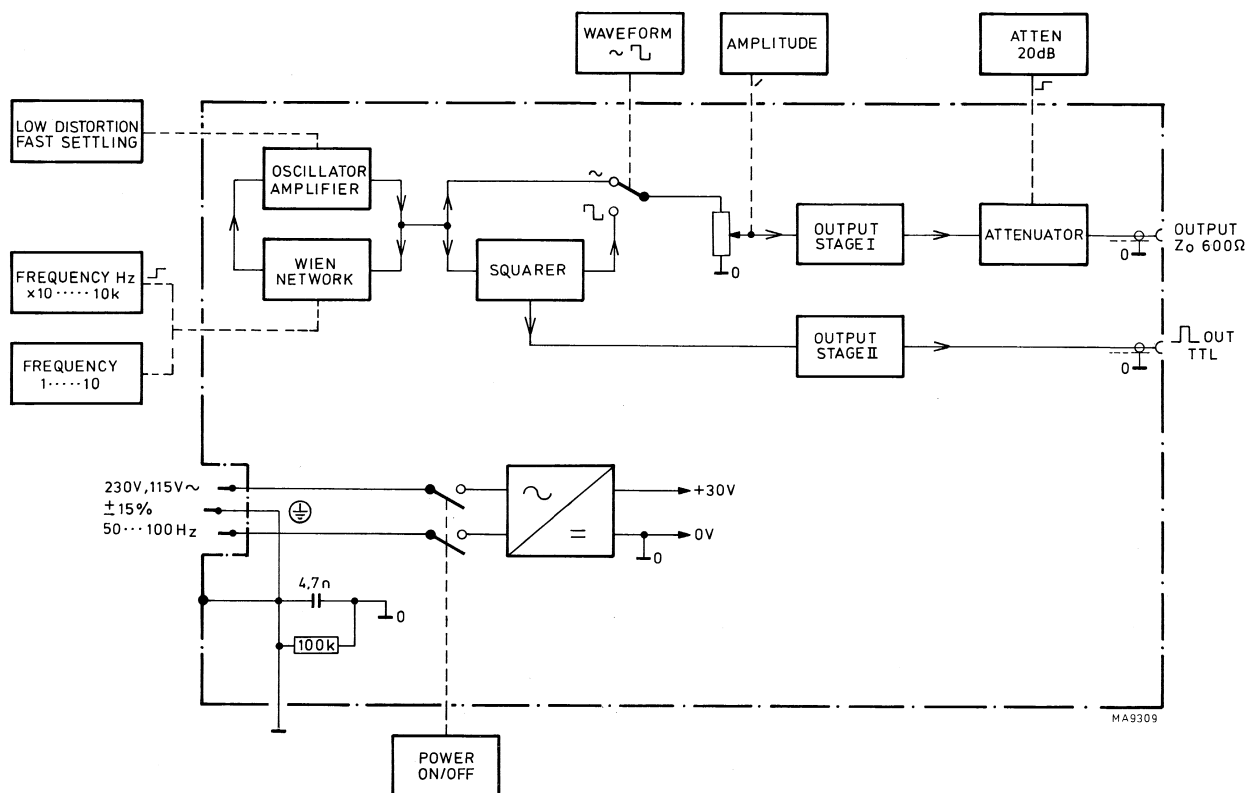


Fig. 1. Block diagram
 Blockschaltbild
 Schéma synoptique

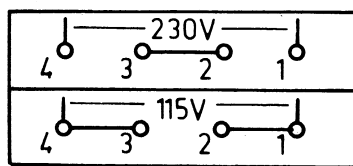

MA8981

Fig. 2. Transformer connections (MA8981)
 Transformator Anschlüsse
 Adaptation à la tension secteur

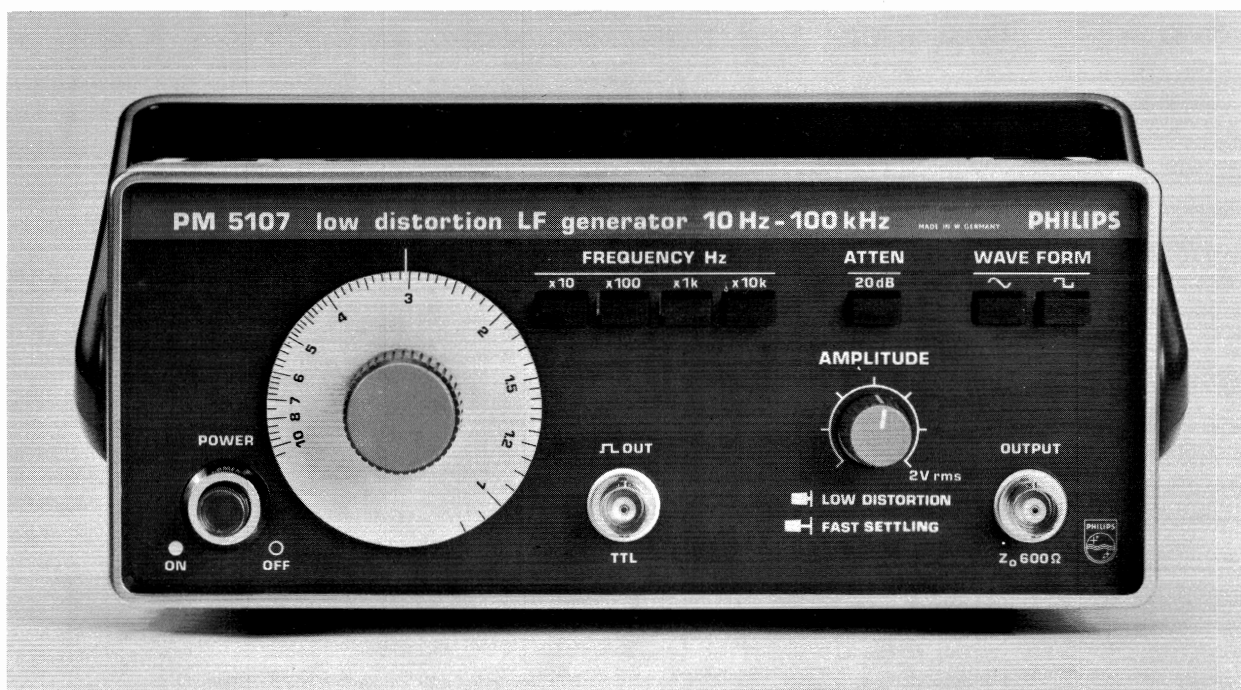


Fig. 3. Front view
Frontansicht
Vue avant

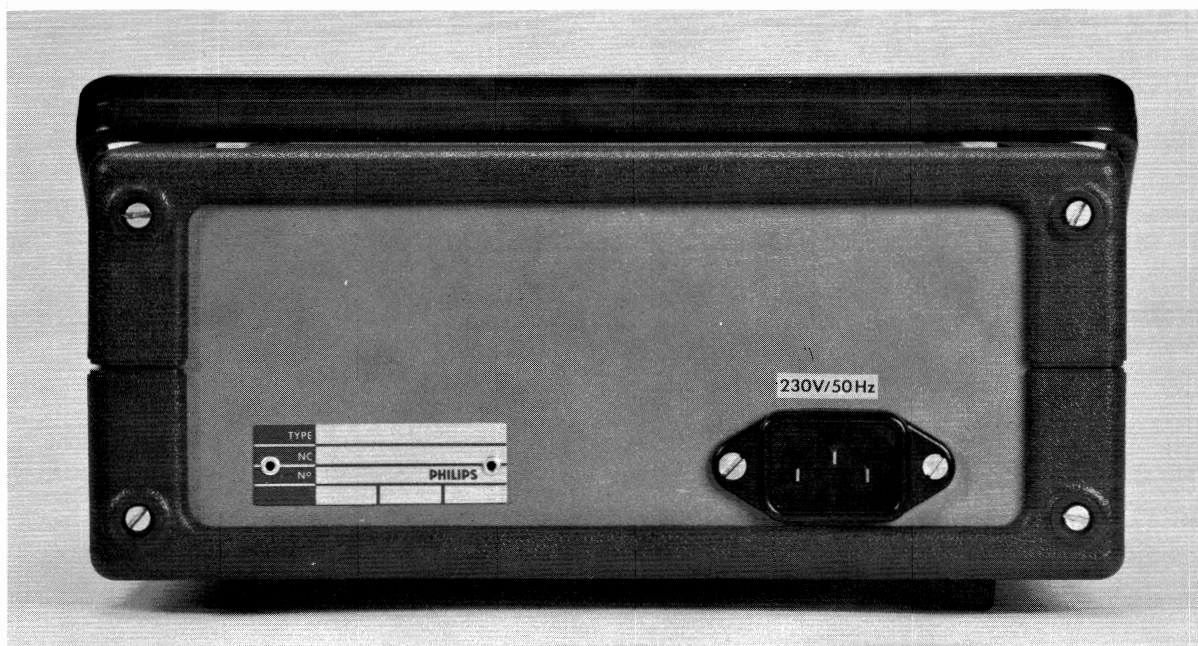


Fig. 4. Rear view
Rückansicht
Vue arrière

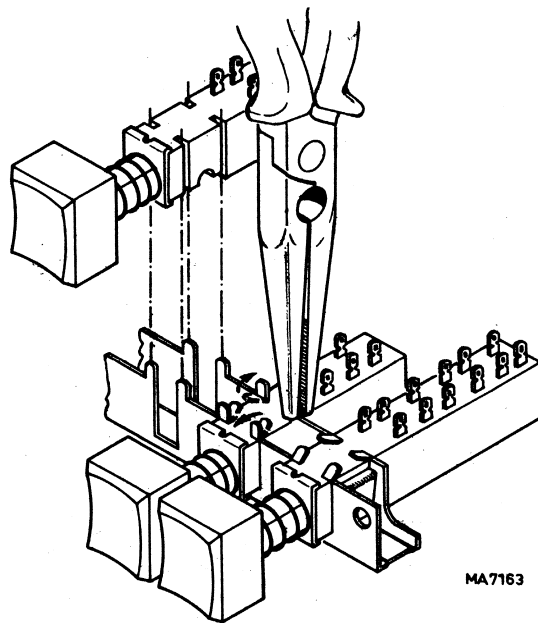


Fig. 5. Replacing a switch of the pushbutton unit.

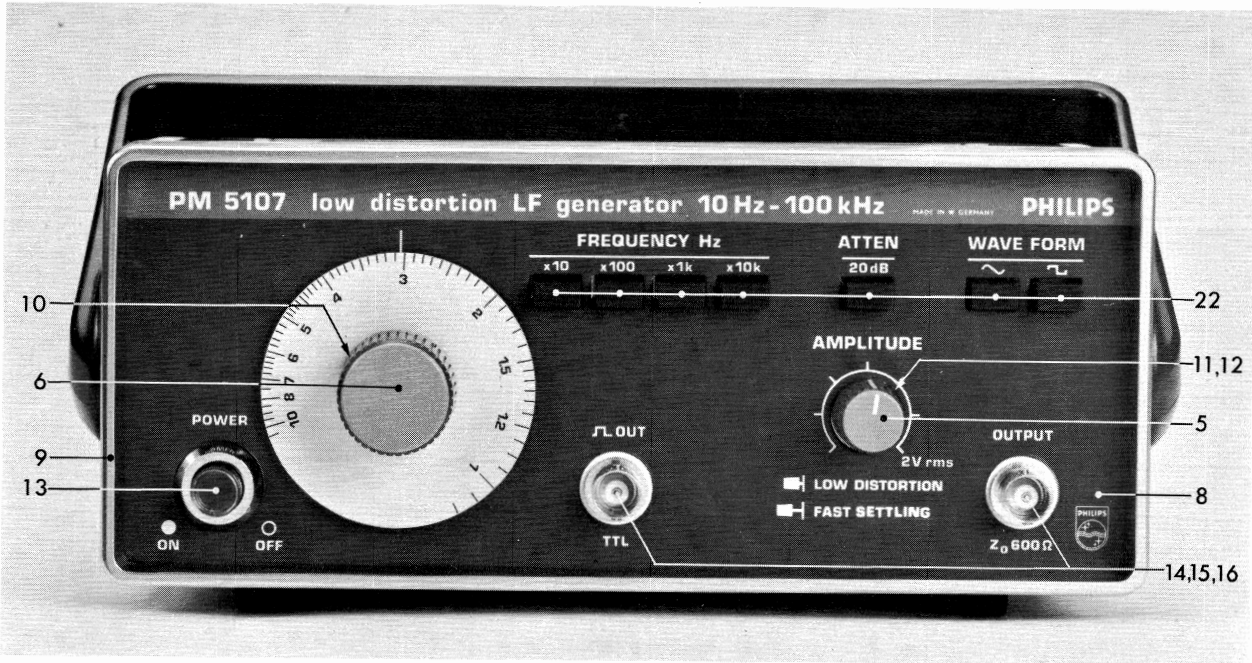


Fig. 6. Front view mechanical parts.

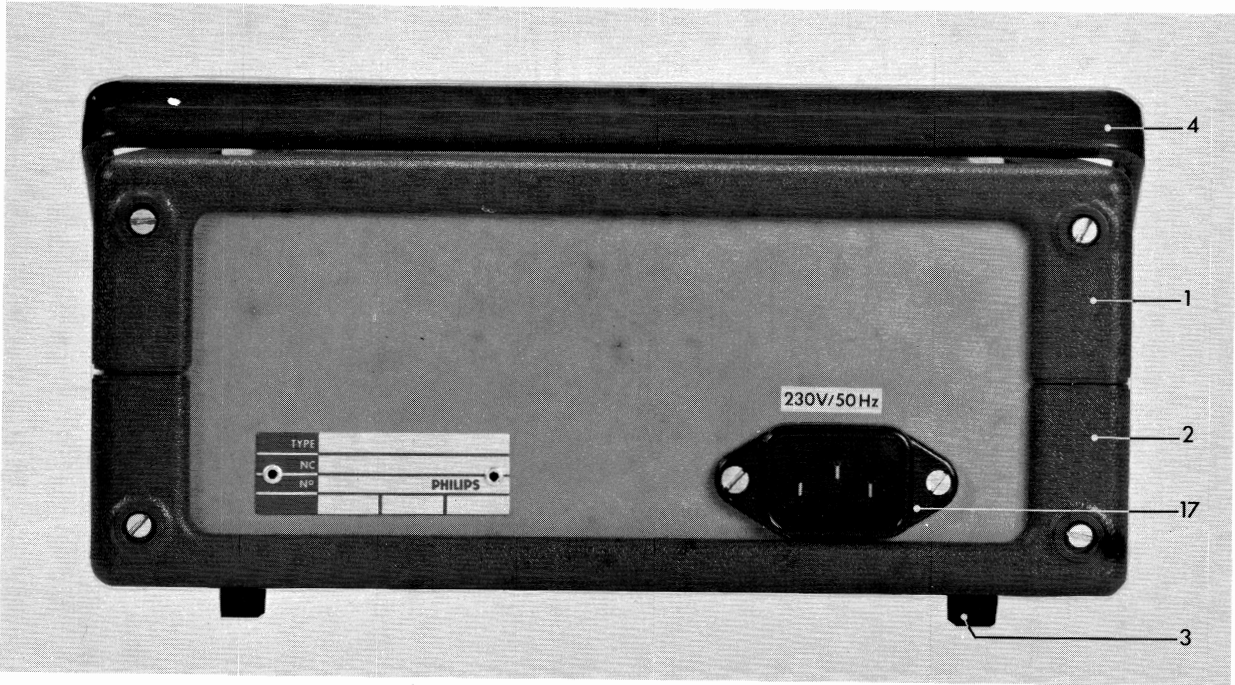


Fig. 7. Rear view mechanical parts.

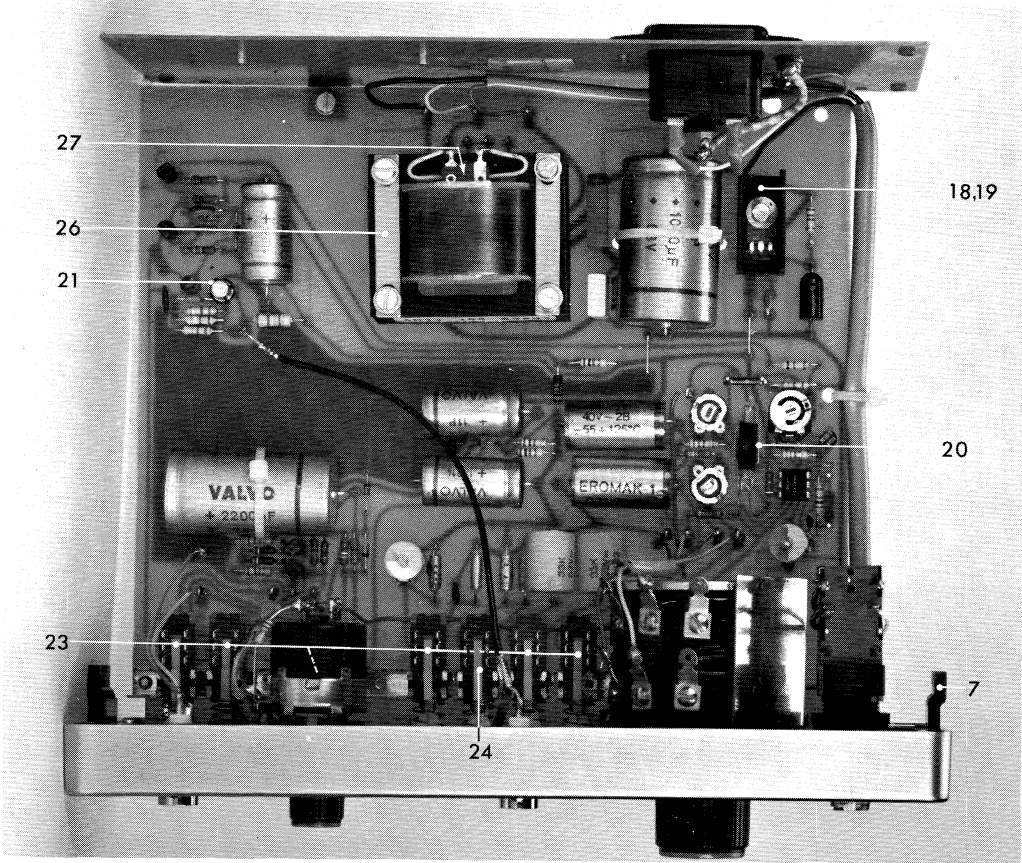


Fig. 8. Inside view top side.

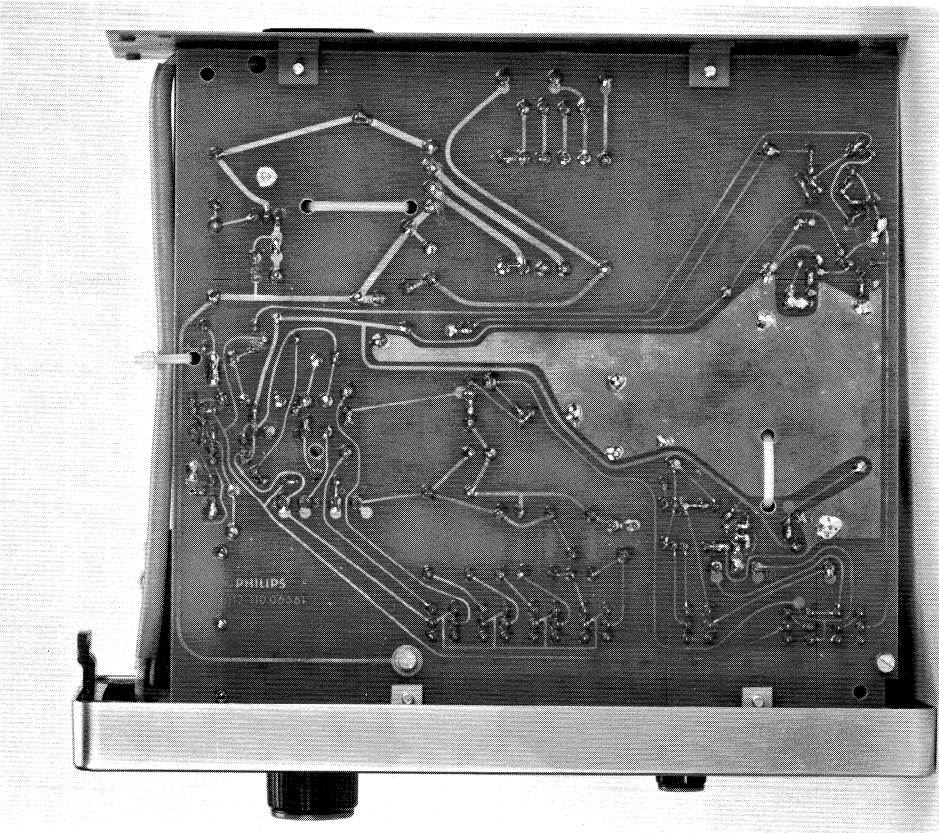


Fig. 9. Inside view bottom side.

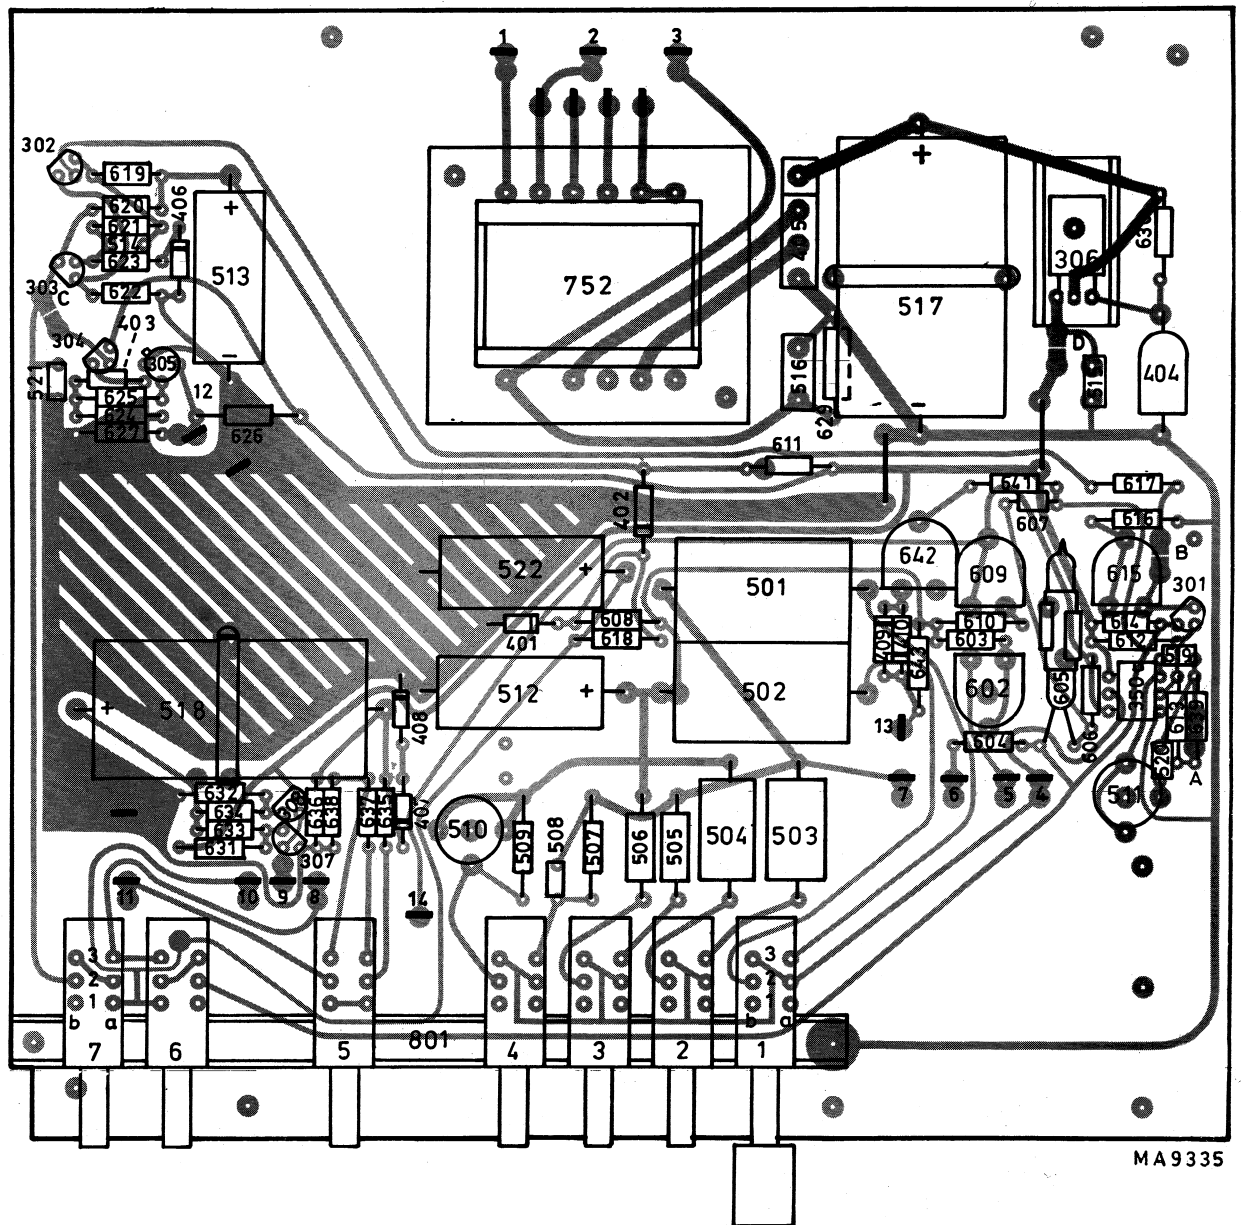


Fig. 10. Printed wiring board with components.

QUALITY REPORTING

CODING SYSTEM FOR FAILURE DESCRIPTION

The following information is meant for Philips service workshops only and serves as a guide for exact reporting of service repairs and maintenance routines on the workshop charts.

For full details reference is made to Information G1 (Introduction) and Information Cd 689 (Specific information for Test and Measuring Instruments).

LOCATION



Unit number

e.g. 000A or 0001 (for unit A or 1; not 00UA or 00U1)

or: Type number of an accessory (only if delivered with the equipment)

e.g. 9051 or 9532 (for PM 9051 or PM 9532)

or: Unknown/Not applicable
0000

CATEGORY



- 0 Unknown, not applicable (fault not present, intermittent or disappeared)
- 1 Software error
- 2 Readjustment
- 3 Electrical repair (wiring, solder joint, etc.)
- 4 Mechanical repair (polishing, filing, remachining, etc.)
- 5 Replacement
- 6 Cleaning and/or lubrication
- 7 Operator error
- 8 Missing items (on pre-sale test)
- 9 Environmental requirements are not met

COMPONENT/SEQUENCE NUMBER



Enter the identification as used in the circuit diagram, e.g.:

GR1003	Diode GR1003
TS0023	Transistor TS23
IC0101	Integrated circuit IC101
R0....	Resistor, potentiometer
C0....	Capacitor, variable capacitor
B0....	Tube, valve
LA....	Lamp
VL....	Fuse
SK....	Switch
BU....	Connector, socket, terminal
T0....	Transformer
L0....	Coil
X0....	Crystal
CB....	Circuit block
RE....	Relay
BA....	Battery
TR....	Chopper

Parts not identified in the circuit diagram:

990000	Unknown/Not applicable
990001	Cabinet or rack (text plate, emblem, grip, rail, graticule, etc.)
990002	Knob (incl. dial knob, cap, etc.)
990003	Probe (only if attached to instrument)
990004	Leads and associated plugs
990005	Holder (valve, transistor, fuse, board, etc.)
990006	Complete unit (p.w. board, h.t. unit, etc.)
990007	Accessory (only those without type number)
990008	Documentation (manual, supplement, etc.)
990009	Foreign object
990099	Miscellaneous

Sales and service all over the world

Alger: Sadetel; 41 Rue des Frères Mouloud
Alger; tel. 656613-656607

Argentina: Philips Argentina S.A., Cassila
Correo 3479, Buenos Aires; tel. T.E. 70, 7741
al 7749

Australia: Philips Electrical Pty Ltd., Philips
House, 69-79 Clarence Street, Box 2703
G.P.O., Sydney; tel. 2.0223

België/Belgique: M.B.L.E., Philips Bedrijfs-
apparaatuur, 80 Rue des Deux Gares, Bruxelles;
tel. 02/13.76.00

Bolivia: Industriás Bolivianas Philips S.A.
LA Jón postal 2964 La Paz tel. 50029

Brasil: S.A. Philips Do Brasil; Avenida Paulista
2163; P.O. Box 8681; Sao Paulo S.P.;
tel. 81-2161.

Burundi: Philips S.A.R.L., Avenue de Grèce,
B.P. 900, Bujumbura

Canada: Philips Electronic Industries Ltd.,
Scientific and Electronic Equipment Division,
Philips House, 116 Vanderhoof Avenue, Toronto
17 M 4G 2JL tel. (416)-425-5161.

Chile: Philips Chilena S.A., Casilla 2687,
Santiago de Chile; tel. 94001

Colombia: Industrias Philips de Colombia
S.A., Calle 13 no. 51-03, Apartado Nacional
1505, Bogota; tel. 473640

Costa Rica: Philips de Costa Rica Ltd.,
Apartado Postal 4325, San José; tel. 210111

Danmark: Philips Elektronik Systemer A/S
Afd. Industri & Forskning; Strandlodsvej 4
2300-København S; Tel (0127) AS 2222;
telex 27045

Deutschland (Bundesrepublik): Philips Elek-
tronik Industrie GmbH, 35 Kassel-Bettenhausen,
Miramstrasse 87; tel. (0561) 501521.

Ecuador: Philips Ecuador S.A., Casilla 343,
Quito; tel. 239080

Egypt: Ph. Scientific Bureau 5 Sherif Str.
Cairo - A.R. Egypt P.O. Box 1807; tel. 78457-
57739

Eire: Philips Electrical (Ireland) Ltd., New-
stead, Clonskeagh, Dublin 14; tel. 976611

El Salvador: Philips de El Salvador, Apartado
Postal 865, San Salvador; tel. 217441

España: Philips Ibérica S.A.E., Avenida de
America, Apartado 2065, Madrid 17; tel.
2462200

Ethiopia: Philips Ethiopia (Priv. Ltd. Co.),
P.O.B. 2565; Cunningham Street, Addis Abe-
ba; tel. 48300

Finland: Oy Philips Ab, Postboks 10255,
Helsinki 10; tel. 10915

France: Philips Industrie, Division de la S.A.
Philips Industrielle et Commerciale 105 Rue
de Paris, 93 002 Bobigny; tel. 830-11-11

Ghana: Philips (Ghana) Ltd., P.O.B. M 14,
Accra; tel. 66019

Great Britain: Pye Unicam Ltd., York Street,
Cambridge; tel. (0223) 58866

Guatemala: Philips de Guatemala S.A.,
Apartado Postal 238, Guatemala City; tel. 64857

Hellas: Philips S.A. Hellénique, 54, Ave
Syngrou, Athens; tel. 230476, P.O. Box 153

Honduras: Hasbun de Honduras Apartado
Postal 83, Tegucigalpa; tel. 2-9121...5

Hong kong: Philips Hong Kong Ltd., P.O.B.
2108, St. George's Building, 21st floor, Hong
Kong; tel. 5-249246

India: Philips India Ltd., Shivsagar Estate,
Block "A", Dr. Annie Besant Road, P.O.B.
6598, Worli, Bombay 18; tel. 370071

Indonesia: P. T. Philips Development Cor-
poration, Jalan Proklamasi 33, P.O.B. 2287,
Jakarta; tel. 51985-51986

Iran: Philips Iran Ltd., P.O.B. 1297, Teheran;
tel. 662281

Iraq: Philips Iraq W.L.L. Munir Abbas Building
4th Floor; South Gate. P.O. box 5749 Baghdad;
tel. 80409

Island: Heimilistaeki SF, Saetún 8, Reykjavik;
tel. 24000

Islas Canarias: Philips Ibérica S.A.E., Triana
132, Las Palmas; Casilla 39-41, Santa Cruz de
Tenerife

Italia: Philips S.p.A., Sezione PIT; Viale
Elvezia 2, 20052 Monza; tel. (039) 361-441;
telex 35290

Kenya: Philips (Kenya) Ltd., P.O.B. 30554,
Nairobi; tel. 29981

Malaysia: Philips Malaya Sdn Bhd. P.O. Box
332, Kuala Lumpur; Selangor W. Malaysia;
tel. 774411

Mexico: Philips Comercial S.A. de C.V.,
Uruapan 7, Apdo 24-328, Mexico 7 D.F.;
tel. 25-15-40

Nederland: Philips Nederland B.V., Bosch-
dijk, Gebouw VB, Eindhoven; tel. 793333

Ned. Antillen: N.V. Philips Antillana, Post-
bus 523, Willemstad; tel. Curaçao 36222-
35464

New Zealand: Philips Electronical Industries
(N.Z.) Ltd., Professional and Industrial Division,
70-72 Kingsford Smith Street, P.O.B. 2097,
Lyal Bay, Wellington; tel. 73-156

Nigeria: Philips (Nigeria) Ltd., 6 Ijora Cause-
way, P.O.B. 1921, Lagos; tel. 45414/7

Nippon: Nihon Philips Corporation, P.O.B. 13,
World Trade Center, 32nd Floor, Tokyo 105;
tel. (03) 435-5211

Norge: Norsk A.S. Philips, Postboks 5040,
Oslo; tel. 463890

Österreich: Oesterreichische Philips Industrie
GmbH, Abteilung Industrie Elektronik, Partart-
gasse 32, A-1230 Wien; tel. (0222)-831501.

Pakistan: Philips Electrical Co. of Pakistan
Ltd., El-Markaz, M.A. Jinnah Road, P.O.B.
7101, Karachi; tel. 70071

Paraguay: Philips del Paraguay S.A., Casilla
de Correo 605, Asuncion; tel. 8045-5536-6666

Perú: Philips Peruana S.A., Apartado Postal
1841, Lima; tel. 326070

Philippines: Philips Industrial Development
Inc., 2246 Pasong Tamo P.O.B. 911, Makati

Rizal D-708; tel. 889453 to 889456

Portugal: Philips Portuguesa S.A.R.L., Av.
Eng.° Duarte Pacheco, 6 - Lisboa - 1

Rwanda: Philips Rwanda S.A.R.L., B.P. 449,
Kigali

Saudi Arabia: A. Rajab and A. Silsilah
P.O. box 203 Jeddah - Saudi Arabia; tel. 5113-
5114

Schweiz-Suisse-Svizzera: Philips A.G.,
Binzstrasse 15, Postfach 8027, Zürich; tel.
051-442211

Singapore: Philips Singapore Private Ltd.
P.O. Box 340; Toa Payoh Central Post Office;
Singapore 12; tel. 538811

South Africa: South African Philips (Pty)
Ltd., P.O.B. 7703, 2, Herb Street, New Doorn-
fontein, Johannesburg; tel. 24-0531

Sverige: Svenska A.B. Philips, Fack, Liding-
övägen 50, Stockholm 27; tel. 08/635000

Syria: Philips Moyen-Orient S.A. Rue Fardoss
79 Immeuble Kassas and Sadate B.P. 2442
Damas; tel. 18605-21650

Taiwan: Yung Kang Trading Co. Ltd., San
Min Building, Gnd Floor, 57-1 Chung Shan N
Road, 2 Section, P.O.B. 1467, Taipei; tel.
577281

Tanzania: Philips (Tanzania) Ltd., Box 20104,
Dar es Salaam; tel. 29571

Thailand: Philips Thailand Ltd., 283, Silom
Road, Bangkok; tel. 36980, 36984-9

Turkey: Türk Philips Ticaret A.S., Posta
Kutusu 504, Beyoglu; Gümüssüyü Caddesi
78/80 Istanbul 1 Turkeye

Uganda: Philips Uganda Ltd. p.o. Box 5300
Kampala; tel. 59039

Uruguay: Industrias Philips del Uruguay,
Avda Uruguay 1287, Montevideo; tel. 915641
Casilla de Correo 294

U.S.A.: Philips Test and Measuring Instru-
ments Inc.; 400 Crossways Park Drive, Wood-
bury, N.Y. 11797; tel. (516) 921-8880

Venezuela: C.A. Philips Venezolana, Apar-
tado Postal 1167, Caracas; tel. 360511

Zaire: Philips S.Z.R.L., B.P. 1798, Kinshasa;
tel. 31887-31888-31693

Zambia: Philips Electrical Ltd., Professional
Equipment Division, P.O.B. 553 Kitwe; tel.
2526/7/8; Lusaka P.O. Box 1878

760101

For information on change of address:

N.V. Philips
Test and Measuring Instruments Dept.
Eindhoven - The Netherlands

For countries not listed:

N.V. Philips PIT Export Dept.
Test and Measuring Instruments Dept.
Eindhoven - The Netherlands