


CASA Assembly Instruction Ref. "11SMC--5-RG316-Sel.Prt"

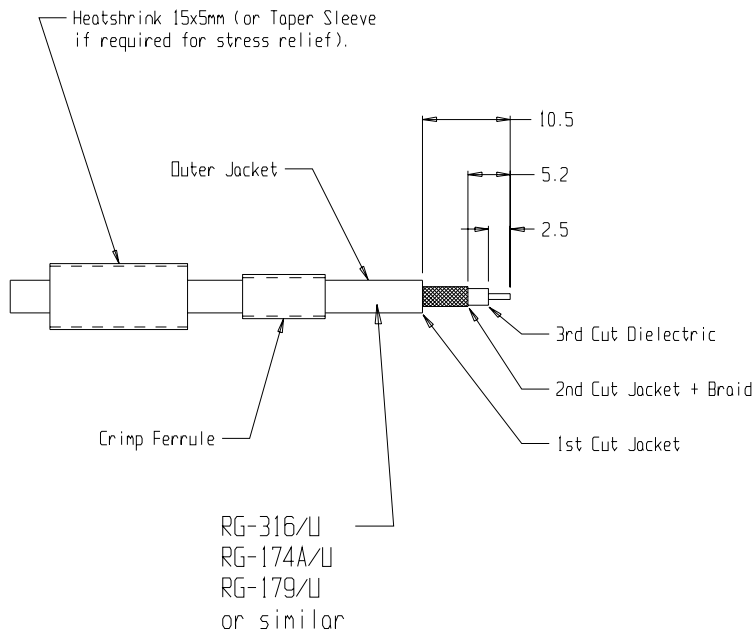

Installation Steps:-

- 1) Prepare Cable End to Drawing detail
- 2) Fit Ferrule (and Heatshrink/Taper Sleeve)
- 3) Crimp Centre Contact to inner conductor
- 4) Flare Braid to receive spigot
- 5) Install Connector Body onto contact & cable
- 6) Slide Ferrule over Spigot & Braid
- 7) Crimp Ferrule with "2C" Hex Cavity
- 8) Install Heatshrink (or taper sleeve).

JOB No.

2831

CASA Modular Systems P.O. BOX 38-828, WELLINGTON, NEW ZEALAND TELEPHONE : (64-4) 5687 277 FACSIMILE : (64-4) 5685 161 E-MAIL : aland@casa.co.nz	CUSTOMER : CASA Modular Systems		SIZE	DRAWING Reference No.	ISSUE
	DESCRIPTION : Assembly for 11SMC-RG316-Selectro		A4	11SMC-RG316-Sel	A
	DRAWN : AWD	DATE : 29/3/13	APPROVED : ?	DWG. SCALE : 1:1	© COPYRIGHT : CASA Modular Systems ALL RIGHTS RESERVED