


# Amphenol

## 7/16 型连接器(配 1/2" 普通电缆)安装说明



Installation instructions of 7/16 type male connector for 1/2" normal cable

AFB5-8


ITEM : 2160299.1

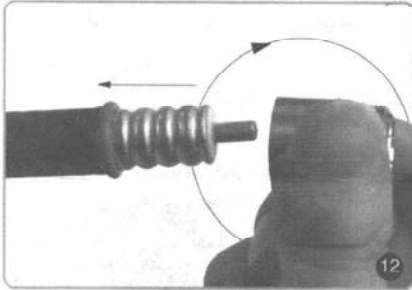

将后壳体装上电缆, 电缆夹部分卡在第一波纹槽内  
Assemble the connector end make the clamp snapped in the first corrugation root.

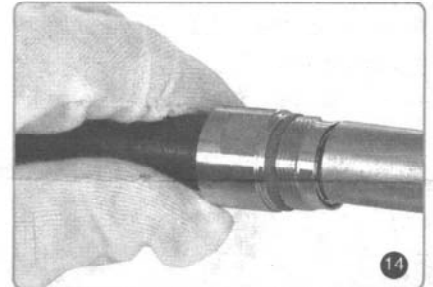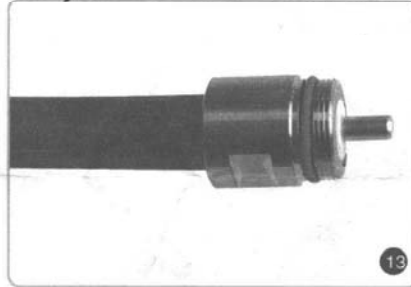


电缆外导体胀口, 使电缆外导体和泡沫层分开  
Flare the outer conductor, separate the outer conductor from the insulator.

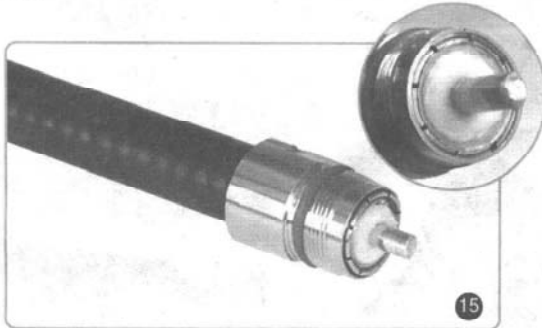


胀口如图所示  
Flaring as showing.




清洁  
Keep it clean.

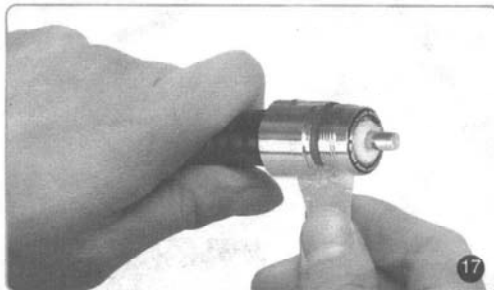


O 型圈涂油脂  
Wipe the O-ring with grease.

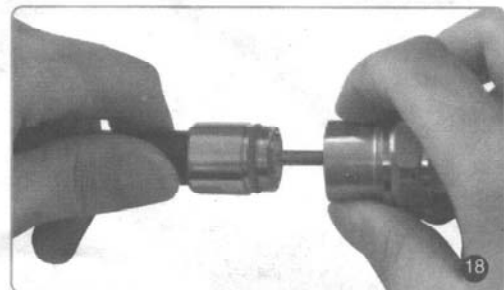

将主壳体旋至后壳体上  
Screw the connector head onto the connector end.

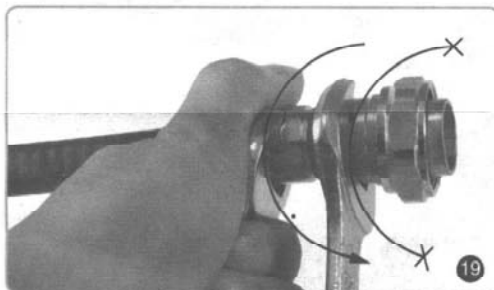

保持前壳体不动, 将后壳体旋紧至前壳体组件, 推荐力矩为 25N·m  
Keep the connector head steady, screw the connector end onto the connector head tightly. Recommended torque is 25 N·m

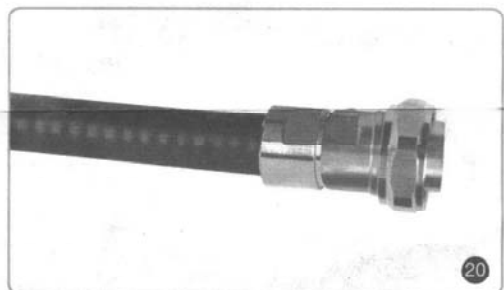

与配对的插座连接时需 20N.m 力矩  
The recommended torque is 20N.m when it is connected to the matched jack.