


ASSEMBLY  
INSTRUCTIONS

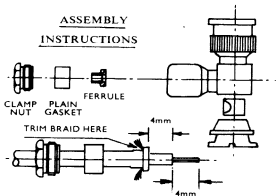

Place clamp nut and gasket over cable and cut back sheath 8mm. Comb braid and insert ferrule. Trim dielectric to dimension indicated and tin centre conductor. Solder contact to cable. Slide clamp nut and gasket up to ferrule. Engage in body and tighten.