



# Crimp 02 : Full crimp

## COMPONENTS

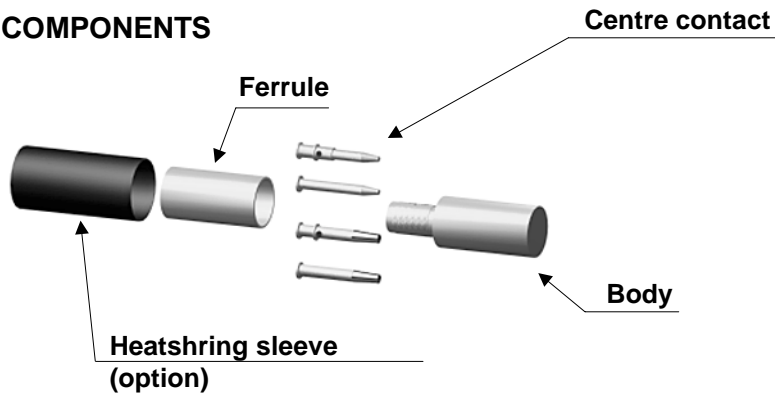


## STRIPPING DIMENSIONS

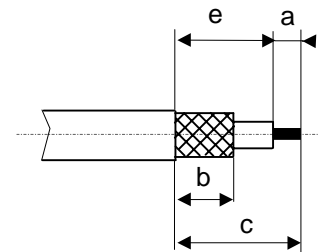


1

Slide the heatshrink sleeve onto the cable (Option).  
Slide the ferrule onto the cable.  
Strip the cable.

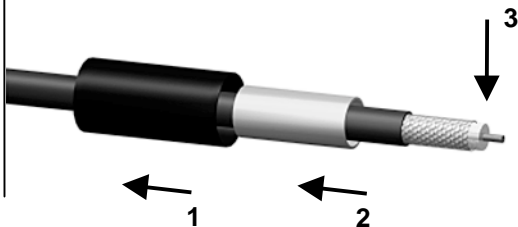


4

Slide the cable into the body until it bottoms against insulator.

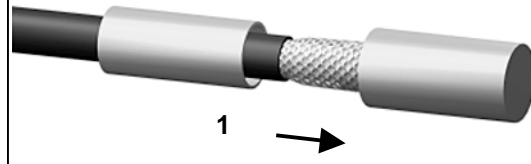


2

Slide the centre contact on until it bottoms against the cable dielectric.  
Crimp the centre contact with crimping tool ( see connector TDS ).

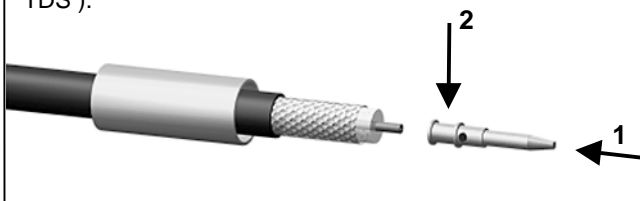


5

Slide the ferrule over the braid.  
Crimp the ferrule with crimping tool ( see connector TDS ).

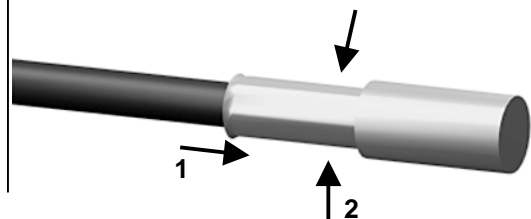

3

Fan the braid.

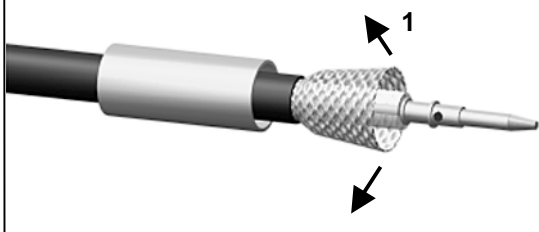

6

Cut the excess of braid if necessary.  
Slide the sleeve over the ferrule and heatshrink it in place (Option).

