


CASA Assembly Instruction Ref. "INST-11BNC-PIP" (drawing ASS-316.PRT)

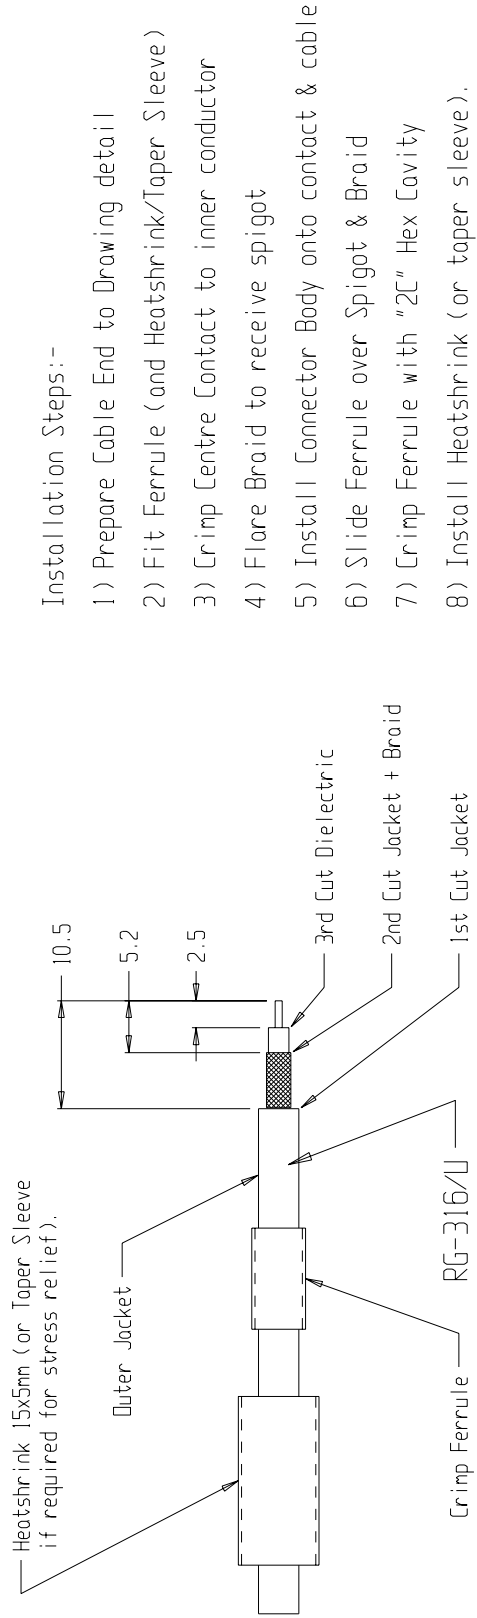

Installation Steps:-

- 1) Prepare Cable End to Drawing detail
- 2) Fit Ferrule (and Heatshrink/Taper Sleeve)
- 3) Crimp Centre Contact to inner conductor
- 4) Flare Braid to receive spigot
- 5) Install Connector Body onto contact & cable
- 6) Slide Ferrule over Spigot & Braid
- 7) Crimp Ferrule with "2C" Hex Cavity
- 8) Install Heatshrink (or taper sleeve).

CUSTOMER : CASA Modular Systems		SIZE	DRAWING Reference No.	ISSUE
DESCRIPTION : Assembly for 11/24BNC-50-2-Pin-in-Pin		A4	ASS-PIP	A
DRAWN : AWD	DATE : 14/10/97	APPROVED : ?	DWG. SCALE : 1:1	© COPYRIGHT : CASA Modular Systems ALL RIGHTS RESERVED