



SP21、SP29、SY21 Rear-nut mount socket screw Assembling Instruction


1.Strip the cable. (mm)

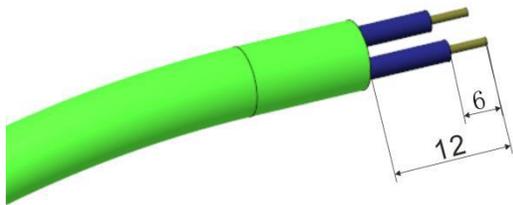

2.Screw the wire to the contact.

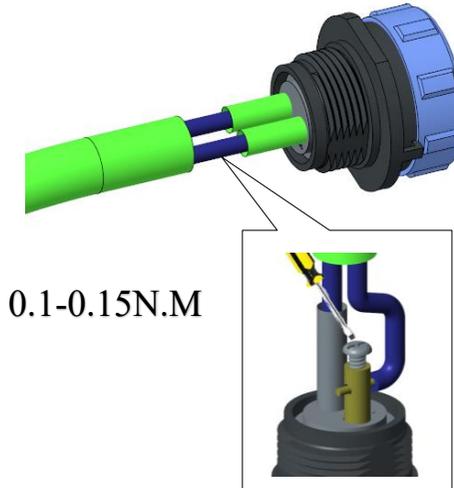

3.Put the socket through the panel cut hole.

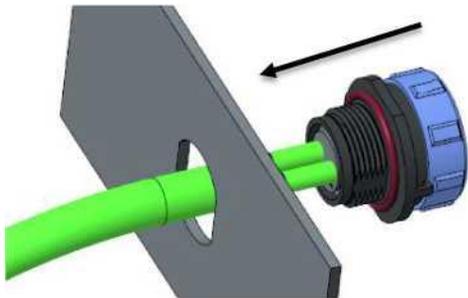

4.Tighten the retaining nut according to the torque.

Series	Max Panel thickness(mm)
SP21/SY21	3.50
SP29	3.00

1-1.1N.M

