


Fixed (square flange) plugs and sockets


These plugs and sockets are supplied complete with panel mounting gasket, corner bushes, nuts, bolts and washers.

Where outlets are used, outlet Nuts must be specified as additional items.


MOUNTED FROM REAR OF PANEL

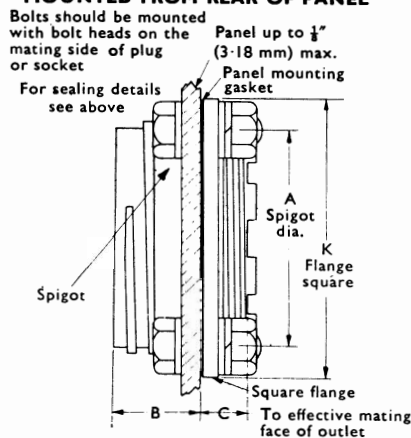

MOUNTED FROM FRONT OF PANEL

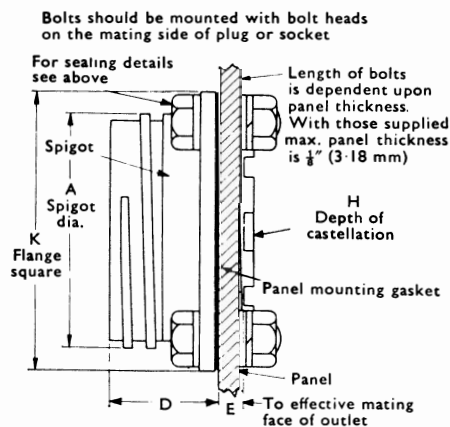

SEALING DETAILS

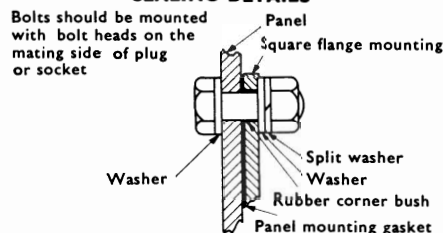


Contact Arrangement	Weight (oz.)		Shell Size	A dia. max.	B	C	D	E	K sq.	H								
	Plug	Skt.																
2-19 amp. 250 V	2.6	2.7	1	.990	.54	.38	.67	.26	1.33	.045								
3-5 amp. 250 V	2.7	2.6																
4-5 amp. 250 V	2.7	2.7																
6-5 amp. 250 V	2.7	2.7																
2-35 amp. 250 V	4.1	4.0	2	1.209	.55	.38	.68	.26	1.65	.045								
3-19 amp. 2 kV	4.0	4.0																
4-19 amp. 250 V	4.1	4.1																
6-5 amp. 500 V	4.0	4.0																
6-5 amp. 2 kV	4.0	4.0																
12-5 amp. 250 V	4.1	4.1																
3-60 amp. } 250 V	6.2	5.9	3	1.585	.61	.40	.77	.25	1.92	.060								
1-19 amp. }																		
2-60 amp. } 250 V																		
3-19 amp. }	6.1	6.2																
6-19 amp. 2.5 kV																		
9-19 amp. 250 V																		
13-12 amp. 250 V																		
18-5 amp. spec.																		
25-5 amp. 250 V																		
	6.0	5.9																

Panel piercing details

For fixed coupler plugs and sockets (square flange).

The spigot on the shell is a sliding fit in hole 'A'. Minimum distance between centres of adjacent plugs or sockets is dimension 'L'.

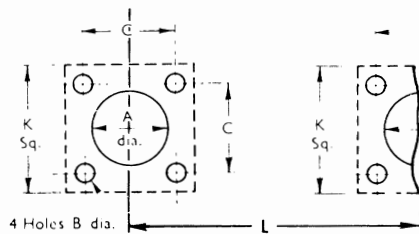

Shell Size	A dia.	B dia.	C	K sq.	L
1	.995	.147	1.000	1.33	1.45
	1.000	4BA			
2	1.215	.191	1.235	1.65	1.71
	1.220	2BA			
3	1.590	.191	1.515	1.92	2.19
	1.595	2BA			