HP Data Vault User's Guide

Table of Contents

Chapter 1. Welcome to the HP Data Vault	1
Chapter 2. Set up and Installation	3
What's in the Box? The Server at a Glance Find a Home for Your Server Server Location Network Requirements Supported Operating Systems Wireless Support Turn on the Server Install the Software Update Your Firewall's Trusted Program List Install Software on the First PC Install Software on Additional PCs Install the Software on a Mac Troubleshooting a Mac Connection to the Server Uninstall the Software Uninstall the PC Client Software Uninstall the Mac Client Software HP Software Updates HP Update Settings Update and Roll Back the Server Update and Roll Back Client PCs Update and Roll Back Mac Clients	3 3 5 5 5 6 7 7 9 20 28 31 32 39 39 40 40 42 46 51
Chapter 3. Start Using Your Server	55
Guided Tour HP Home Page Windows Home Server Console First Steps PC Backup and Restore Mac Time Machine Backup Using Shared Folders Enable Guest Account or Set up User Accounts Configure Remote Access Secure your Server from Intruders Add Shared Folders to Network Places Install HP Add-ins for Windows Home Server Register Your Server Configure Server Settings Getting Help for Using Your Server	55 55 57 59 59 60 63 66 69 71 75 77 78 85
Chapter 4. HP Media Collector	89
About HP Media Collector Configuring Media Collector Configuring Media Collector General Settings Configuring Media Collector for Photos Configuring Media Collector for Music Configure Media Collector for Videos Media Collector Status HP Media Collector Troubleshooting	89 91 91 91 94 97 98

Video Converter Status Troubleshooting and FAQs Examples of Video Converter Profiles Using Media Collector with Video Converter 112 Giving Users Access to the Converted Videos Folder Enabling Converted Videos for TwonkyMedia Supported Video Formats Video Conversion Fails Network Bandwidth 116 Chapter 6. Media Streaming About Streaming Media In-home Streaming Media In-home Streaming Web/iPhone Streaming 121 TwonkyMedia for Media Sharing About TwonkyMedia for Streaming Media Troubleshooting and FAQs Server for iTunes Server for iTunes Setting for iTunes Troubleshooting and FAQs HP Media Streamer HP Media Streamer HP Media Streamer Photos Page HP Media Streamer Photos Page HP Media Streamer Videos Page Troubleshooting and FAQs Streaming Media to a Device Why does the server show up twice on my DMA list? Why does the server show up twice on my DMA list? Why does the server show up twice on my DMA list? Why does the server show up twice on my DMA list? Why does the server show up twice on my DMA list? Why does the server show up twice on my DMA list? Why does the server show up twice on my DMA list? Windows Media Connect 2.0 and TwonkyMedia Comparison Chapter 7. HP Photo Publisher Log on to Photo Sharing Site Select Existing Album or Create an Album Troubleshooting HP Photo Publisher HP Photo Viewer HP Photo Viewer HP Photo Viewer Here HP Photo Viewer Here HP Photo Viewer Home Page HP Photo Viewer Home	Chapter 5. HP Video Converter	103
About Streaming Media In-home Streaming Web/iPhone Streaming Web/iPhone Streaming TwonkyMedia for Media Sharing About TwonkyMedia for Streaming Media Troubleshooting and FAQs Server for iTunes Settings for iTunes Settings for iTunes Troubleshooting and FAQs Settings for iTunes Settings for iTunes Troubleshooting and FAQs HP Media Streamer Settings for iTunes Troubleshooting and FAQs HP Media Streamer About the HP Media Streamer HP Media Streamer Music Page HP Media Streamer Photos Page HP Media Streamer Videos Page Troubleshooting and FAQs Streaming Media to a Device Why does the server show up twice on my DMA list? Media Files (Audio/Video) of Supported Format Aren't Seen by Device. My Files Do Not Show Up on My DMA Why do I see duplicate songs, pictures, or videos on my DMA list? Windows Media Connect 2.0 and TwonkyMedia Comparison Chapter 7. HP Photo Publisher About HP Photo Publisher Log on to HP Photo Publisher Log on to HP Photo Publisher Log on to HP Photo Publisher Select Existing Album or Create an Album Select Photos Server Continues Uploading Troubleshooting HP Photo Viewer HP Photo Viewer Home Page HP Photo Viewer Greate an Album Select Existing Album or Create an Album Select Existing Album or Create an Album Select Photos Troubleshooting HP Photo Viewer 195 Chapter 8. Backup, Restore, and Recover	Video Converter Status Troubleshooting and FAQs Examples of Video Converter Profiles Using Media Collector with Video Converter Converting Non-Copy Protected DVDs Giving Users Access to the Converted Videos Folder Enabling Converted Videos for TwonkyMedia Supported Video Formats Video Conversion Fails	103 109 110 110 112 112 113 114 114 115
In-home Streaming	Chapter 6. Media Streaming	117
HP Photo Publisher About HP Photo Publisher Log on to HP Photo Publisher Log on to Photo Sharing Site Select Existing Album or Create an Album Select Photos Server Continues Uploading Troubleshooting HP Photo Publisher HP Photo Viewer HP Photo Viewer Home Page HP Photo Viewer Slideshow Select Existing Album or Create an Album Select Photos Troubleshooting HP Photo Viewer 193 Chapter 8. Backup, Restore, and Recover	In-home Streaming Web/iPhone Streaming TwonkyMedia for Media Sharing About TwonkyMedia Configure TwonkyMedia for Streaming Media Troubleshooting and FAQs Server for iTunes Settings for iTunes Troubleshooting and FAQs HP Media Streamer About the HP Media Streamer HP Media Streamer Music Page HP Media Streamer Photos Page HP Media Streamer Videos Page Troubleshooting and FAQs Streaming Media to a Device Why does the server show up twice on my DMA list? Media Files (Audio/Video) of Supported Format Aren't Seen by Device. My Files Do Not Show Up on My DMA Why do I see duplicate songs, pictures, or videos on my DMA list? Windows Media Connect 2.0 and TwonkyMedia Comparison	117 118 121 125 125 128 129 130 131 132 132 133 143 143 149 154 155 155 155
About HP Photo Publisher Log on to HP Photo Publisher 164 Log on to Photo Sharing Site Select Existing Album or Create an Album 171 Select Photos 172 Server Continues Uploading Troubleshooting HP Photo Publisher 175 HP Photo Viewer 187 HP Photo Viewer Home Page 187 HP Photo Viewer Slideshow Select Existing Album or Create an Album Select Photos Troubleshooting HP Photo Viewer 193 Chapter 8. Backup, Restore, and Recover	•	163
	About HP Photo Publisher Log on to HP Photo Publisher Log on to Photo Sharing Site Select Existing Album or Create an Album Select Photos Server Continues Uploading Troubleshooting HP Photo Publisher HP Photo Viewer HP Photo Viewer Home Page HP Photo Viewer Slideshow Select Existing Album or Create an Album Select Photos Troubleshooting HP Photo Viewer	163 164 166 171 172 173 175 187 187 188 193 193
	Chapter 8. Backup, Restore, and Recover Choose a Backup Strategy	203 203

PC Backup, Restore, and Recover PC Backup and Restore Restore an Entire PC Hard Drive Mac Backup and Recover Mac Time Machine Backup Recover an Entire Mac Hard Drive Server Backup, Recover, and Reset Back up Server to a Device Server Recovery and Factory Reset	204 204 205 205 205 209 211 211 213
Chapter 9. Server Storage	219
Expand Server Storage Internal SATA Drives Add an Internal SATA Drive Remove an Internal SATA Drive USB Drives, eSATA Drives, and Port Multipliers Add and Remove an External USB Drive, eSATA Drive, or SATA Port Multiplier Detach and Reattach a USB Drive A USB Drive Accidentally Detaches from the Server Add and Remove Drives from Server Storage Replace the System Drive	219 219 219 221 224 225 227 229 230
Chapter 10. Network and Firewall	235
Network Connection Issues Network Health Check that the Router is Correctly Configured for DHCP Check the Network is Set Up Properly for TCP/IP Check the Network NetBIOS Properties Network Frequently Asked Questions What are Optimum Data Throughput Speeds for Different Network Interfaces? The First Backup is Taking a Long Time Uninterruptible Power Supply is not Supported The Firewall is Blocking the Connection Update Your Firewall's Trusted Program List	235 239 240 241 242 243 243 244 244
Chapter 11. Errors and Lights	257
Server is Unresponsive Power Indicator is Off Light-Bar Breathing Aqua White Health Light is Red Light-Bar is Red Hardware Warning Messages File Transfer Failure Health Indicator Codes Network Connection Light is Off Network Connection Light Blinking Aqua White Server Not Showing Up on Your DMR Windows Home Server Frequently Asked Questions Hubs and Network Health Light	257 258 258 258 259 261 261 262 263 263 264
Chapter 12. Product Information	267
Product Specifications Regulatory Statements WM-DRM 10 Licensed Technology Limited Warranty and Technical Support Statement HP Data Vault 3.0 Update Read me	267 271 275 275 279

Chapter 13. Licenses, Copyrights and Notices for Open Source	
Components	283
Copyrights	283
Firefly: GPL License	283
ImageMagick: Compatible with GPL	288
MiscUtil.dll: MiscUtil	291
Sample Code: WPF Calculator	292
Libsmbclient.dylib From SAMBA 3.0.38 GPLv2	292
Sqlite-dotnet2: Public Domain License	297
Tftpd32 Artistic License	298
PacketVideo	299
Yahoo ASTRA Components for Flash: BSD License	299
PureMVC Framework: Creative Commons Attribution License 3.0	307
ScaleFilter: Software License Agreement (BSD License)	308
Glossary	313
Index	317

Chapter 1. Welcome to the HP Data Vault

The HP Data Vault protects and shares digital content—providing an easy-to-use, central repository for digital photos, music, videos, and documents. The HP Data Vault supports computers running Microsoft® Windows® and Apple® Mac® OS X, enabling a more protected and reliable way of managing media and files.

The HP Data Vault Provides

• Mac and Windows Supported Operating Systems

Support for networks that have a mix of Microsoft Windows and Mac OS X 10.5 or later computers.

• HP Photo Viewer and HP Photo Publisher

A simple photo management and sharing tool that lets you share photos directly from the server or through popular photo sharing web sites like snapfish, facebook, flickr, and Picasa Web Albums.

Photo web site services are subject to change without notice and some services may not be available at the time of product purchase. The available service providers may vary in your country/region.

Media Collector

Media Collector automatically collects photos, music, and video files from computers on the network and organizes them on the server.

Media Streaming and Remote Media Streaming

Photos, videos, and music can be streamed to PCs or TVs on the network. Furthermore, you can enjoy your photos, music, and videos—while on the network or away—with remote media streaming to any Internet-connected computer.

PC Backup and Mac Backup

An automatic backup process for Windows PCs and Apple Macs on your home network.

Automatic backup of computers running Microsoft Windows® Vista (32 & 64 bit), XP Home (SP2), XP Professional (SP2), Media Center Edition 2004 (SP2) or later, and Macs running Time Machine.

Remote Computer Access

Remote access to media and files with an easy-to-use, browser-based interface. With proper authorization, a remote user can log into their network and perform functions as if they were sitting at their networked computer.

• iTunes Music Server

Any computer on the network that runs iTunes can access music on the server as an iTunes shared library.

Disk Duplication and Storage Expansion

A way to transparently duplicate selected folders on separate disk drives to help protect against a hard disk failure. Plus, it's easy to add storage as needs grow.

Folder duplication requires at least two hard disks.


Chapter 2. Set up and Installation

WHAT'S IN THE BOX?

In the box you will find:

- HP Data Vault
- Power cord
- Ethernet (RJ-45) cable
- Software and Documentation

For warranty and support information, see the Warranty and Support Guide on the Software Installation Disc.

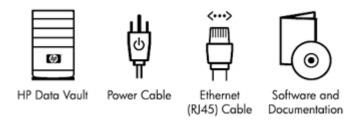

THE SERVER AT A GLANCE

The following lights and symbols are found on the front and back of the HP Data Vault.





The Front of the Server

Light Bar. There is one light bar for each internal **SATA** disk in the HP Data Vault. The server can hold up to four disks.

Power Light. The power light is solid aqua white when the server is turned on.

Network Connection Light. The network connection light is solid aqua white when the server is connected to the network via a **router** or switch.

Health Light. The health light is solid aqua white when the server is operating correctly.

USB Port. Plug up to four USB 2.0 or later disk drives into the USB ports to expand your storage space. There is one USB port on the front and three on the back of the server.

The Back of the Server

USB Port. Plug up to four USB 2.0 or later disk drives into the USB ports to expand your storage space. There is one USB port on the front and three on the back of the server.

eSATA Port. Plug an eSATA (external SATA) hard drive into the eSATA port to expand your storage space.

Ethernet Port. Connect the HP Data Vault to your network using an Ethernet cable.

Power Switch. Press to turn the HP Data Vault on.

Power Port. Plug the included AC power cord into the HP Data Vault.

Related Topics

HP Data Vault User's Guide

- Health Indicator Codes
- Health Light is Red
- Hubs and Network Health Light

4

- Light-bar is Pulsating Aqua White
- <u>Light-bar is Red</u>
- Network Connection Light Blinking
- Network Connection Light off
- Power Indicator is Off

FIND A HOME FOR YOUR SERVER

Server Location

Find a suitable place to locate your HP Data Vault before you install the software on your computers. The location you choose must have either an available wired network connection to your broadband router or a switch connected to your broadband router.

The server also requires adequate ventilation to ensure it does not get too hot:

- Do not locate the server in an unventilated space.
- Make sure that the server's front and back panels are not blocked.
- Check that the location of the server is not too hot. Maximum environmental temperature for operating the server is 35 °C (95 °F).

Network Requirements

To successfully use the HP Data Vault, your network must meet the following requirements:

Network Requirements			
Requirement	Recommended		
Server connection	100 Mbps to 1000 Mbps (Gigabit Ethernet) wired connection		
Home computers	One or more computers running a supported operating system with a wired or wireless network connection. For a list of supported operating systems, see Supported Operating Systems . The first installation must be on a Windows computer. Subsequent installations can be on a Windows or Mac computer.		
Internet connection	Broadband connection, such as DSL or cable, required for remote access functionality.		

Network Requirements		
Requirement Recommended		
Internet browser	An Internet browser is required to run the HP Data Vault software. Choose one from the following options. Download Internet Explorer from http://www.microsoft.com/downloads . Download Firefox from http://www.firefoxdownload.com/ . Download Safari from http://www.apple.com/safari/download/ .	
Router	An external Internet broadband router with 100 Mbps (or faster) Ethernet connection to the server for remote access functionality and wired or wireless connections to the computers on the network. Additionally, your router must have DHCP enabled to provide an automatic IP address to the server.	

Supported Operating Systems

The following operating systems are supported to work with the HP Data Vault.

Supported Operating Systems			
Operating System	Automatic Backup of Computers Running	File Sharing for Computers Running	Remote Access to Computers Running
Linux		X	
Mac OS X 10.5 or later	X	X	
Windows Vista Business 32-bit or 64-bit SP2	X	X	X
Windows Vista Business N 32-bit or 64- bit (European Union Only)	X	X	X
Windows Vista Enterprise 32-bit or 64-bit SP2	X	X	X
Windows Vista Home Basic 32-bit or 64-bit SP2	X	X	
Windows Vista Home N 32-bit or 64-bit (European Union Only)	X	X	

Supported Operating Systems			
Operating System	Automatic Backup of Computers Running	File Sharing for Computers Running	Remote Access to Computers Running
Windows Vista Home Premium 32-bit or 64-bit SP2	X	X	
Windows Vista Ultimate 32-bit or 64-bit SP2	X	X	X
Windows XP Home SP3	X	X	
Windows XP Professional SP3	X	X	X
Windows XP Media Center Edition 2005 with SP2 and Rollup 2	X	X	

Wireless Support

You must connect the HP Data Vault to your router (or switch) with an Ethernet cable. The server does not support wireless connection to your router. However, computers connected wirelessly to a wireless access point or router are supported.

Turn on the Server

In this article...

- Unit The Server in Your Network
- Check the Server Lights

The Server in Your Network

How you connect the HP Data Vault to your network depends on the network configuration.

This example shows a broadband router connecting the following:

- HP Data Vault (Requires wired connection to a router, and remote features require a broadband Internet connection.)
- Wired and wireless network devices such as notebooks, desk computers, TVs and gaming consoles
- Remote devices such as notebooks and iPhones


The server requires a DHCP-enabled router to get its IP address. By default, most routers include a DHCP server. For more information, check your router documentation.



Caution

If you have wireless functionality on your network, be sure to enable your router's security

settings, such as WPA or WEP, to protect your network. See the documentation that came with your router.

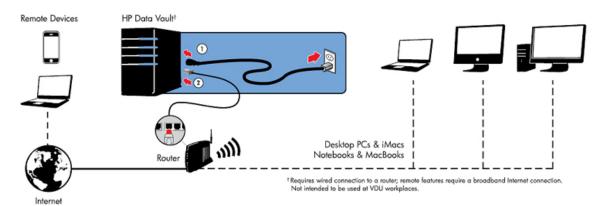

Turn on the Server

- 1. **Plug in.** Plug one end of the power cord into the server's power receptacle and the other end into an electrical outlet.
- 2. **Connect.** Connect one end of the Ethernet cable to the server and the other end to an available Ethernet port on your router or to a switch that is connected to your router.
- 3. **Power on.** Press the Power button on the back of the server.

 The server takes approximately 60 seconds to start up. The indicator lights blink and change color throughout the startup process. Wait for all of the server lights to be pulsing before proceeding with the software installation.

Important

Do not attach USB devices to the HP Data Vault during initial setup. For additional information, see <u>Add and Remove an External USB Drive</u>, eSATA Drive, or SATA Port <u>Multiplier</u>.

Check the Server Lights

The lights on the front of the HP Data Vault indicate the status of the server. After the HP Data Vault startup completes but prior to the first software installation, the indicator lights show:

- Hard drives—breathing aqua white
- Power—breathing aqua white
- Network—breathing aqua white
- Health—breathing aqua white

After you complete the software installation, all lights should be solid aqua white.

Related Topics

HP Data Vault User's Guide

- **Health Indicator Codes**
- Health Light is Red
- **Hubs and Network Health Light**
- Light-bar is Pulsating Aqua White
- Light-bar is Red
- **Network Connection Light Blinking**
- Network Connection Light off
- Power Indicator is Off

INSTALL THE SOFTWARE

Update Your Firewall's Trusted Program List

The Software Installation Disc installs several programs that enable your computer to communicate with the HP Data Vault over your network. Software firewalls installed on your computer can block this communication and prevent the computer from locating the HP Data Vault on your network.



If Media Collector is not collecting music, photos, or videos and you use a third party firewall, add a firewall exception for port 21 TCP/outbound within the local subnet. Consult your software's documentation for details on how to do this.

In this article...

- Set Your Firewall or Anti-Virus Programs to Automatically "Learn" New Programs
- Manually Add Programs to Your Firewall or Anti-Virus Program's Trusted List

Set Your Firewall or Anti-Virus Programs to Automatically "Learn" New Programs

It is recommended that you set your firewall and anti-virus programs to "Learn" new programs before installing the HP Data Vault software. After the HP Data Vault software is installed, the firewall should prompt you to allow the installed programs to communicate with the server.

Allow the following HP Data Vault programs to communicate through your firewall or anti-virus program:

C:\Program Files\Windows Home Server\

- MountBackup.exe
- RestoreOffProc.exe
- WHSTrayApp.exe
- WHSConsoleClient.exe
- WHSConnector.exe
- BackupEngine.exe
- WHSOOBE.exe

C:\Program Files\Hewlett-Packard\HP MediaSmart Server\

- MediaCollectorClient.exe
- MSSConnectorService.exe
- ControlCenter.exe

C:\Program Files\HP\HP Software Update\

HPWUCli.exe


Manually Add Programs to Your Firewall or Anti-Virus Program's Trusted List

Some firewall or anti-virus programs may not automatically update their trusted programs list. Instructions for manually updating several common firewall and anti-virus programs are listed below. If your firewall or anti-virus program is not listed, please contact the vendor to find out how to manually add programs to the trusted programs list. Additionally, see the documentation that came with your firewall or anti-virus program for the latest information.

Click the vendor to expand and view the instructions on updating their trusted programs list. Click again to hide the instructions.

AVG

Open the AVG Anti-Virus plus Firewall. Double-click the Firewall button to configure the Firewall. Add the programs listed at the of this page.

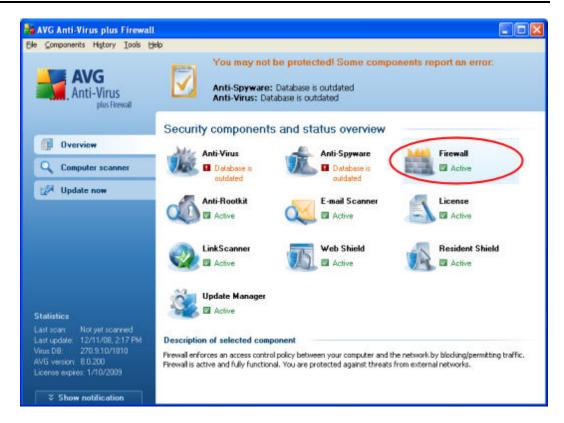


McAfee

Open your McAfee Security Center, click Internet and Network, and then click the Advanced button in the firewall section. Click Program Permissions, then click Add Allowed Program. Add the programs listed at the of this page.



Note


McAfee's firewall automatically disables Windows Firewall and sets itself as your default firewall.

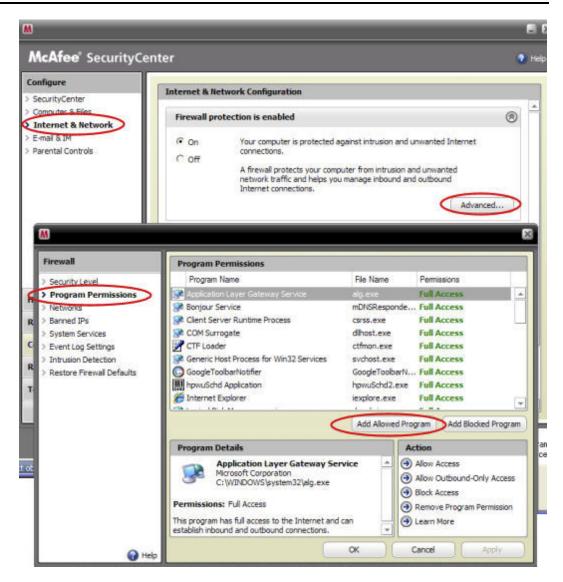


Microsoft Windows Vista


To add exceptions to your firewall using Windows Vista, preform the following steps:

1. Click Start, Control Panel, and then Security Center.

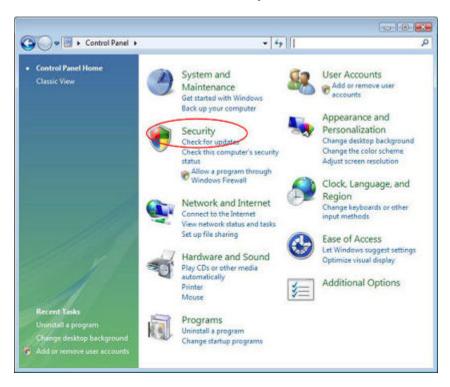

2. Click Allow a program through Windows Firewall.

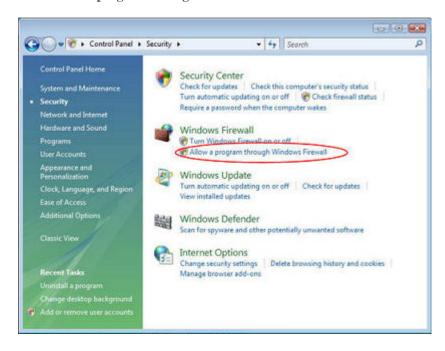

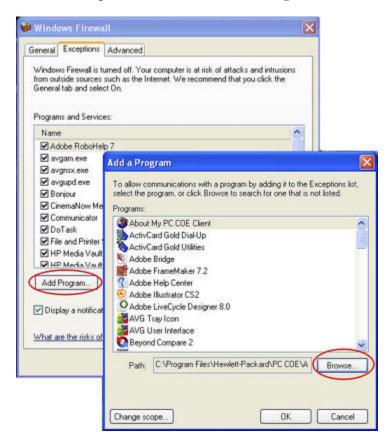


3. Select the **Exceptions** tab and then click **Add Program**.

- 4. In the **Add a Program** dialog box, click **Browse**. Add the programs listed at the of this page.
- 5. Click **OK**.
- Microsoft Windows XP

To add exceptions to your firewall using Windows XP, preform the following steps:


1. Click Start, Control Panel, and then Security Center.

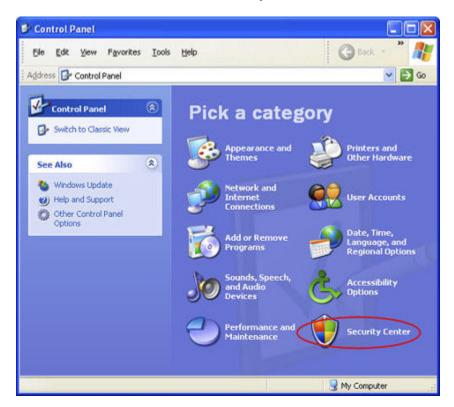

2. Click Windows Firewall.



- 3. Select the **Exceptions** tab and then click **Add Program**.
- 4. In the **Add a Program** dialog box, click **Browse**. Add the programs listed at the of this page.

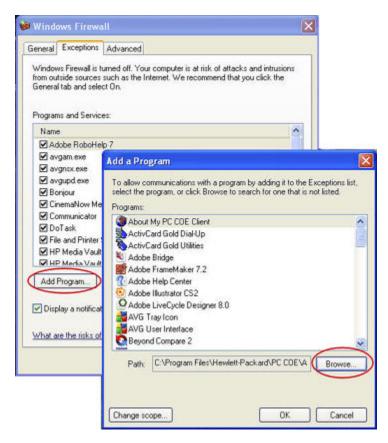

5. Click OK.


Norton

Click **Options** in Norton to change the firewall settings. Add the programs listed at the of this page.



• Symantec

Open Symantec Endpoint Protection, click **Change Settings**, and then click **Configure Settings** for Network Threat Protection. Add the programs listed at the of this page.

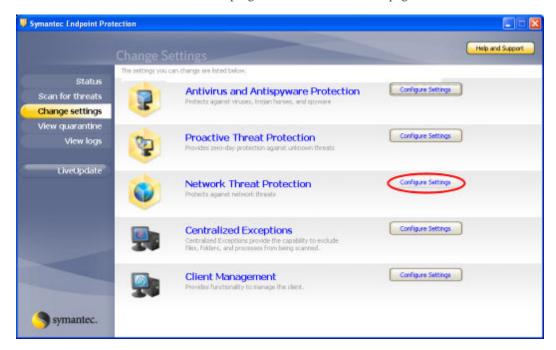


• Trend Micro


1. Open the Trend Micro Main Console, select the Personal Network and Firewall Controls tab, and then click Settings.




2. On the **Personal Firewall** page, click **Add**.

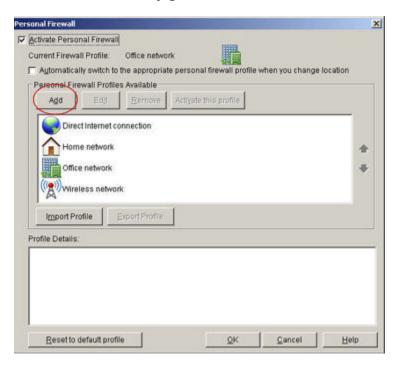

3. Select the **Program Control** tab and then click **Add**.

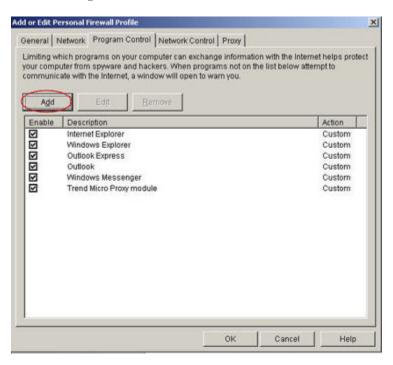


4. Click **Browse** and add the programs listed at the of this page.

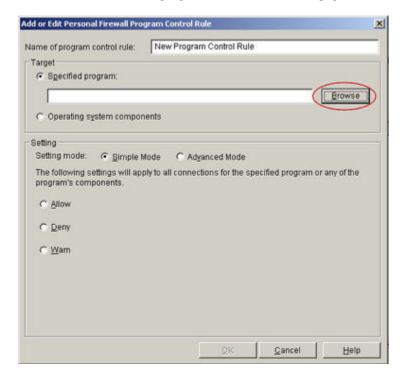

- 5. Click OK.
- ZoneAlarm

- 1. Open ZoneAlarm Security.
- 2. Click **Program Control**, **Programs**, and then **Add**.

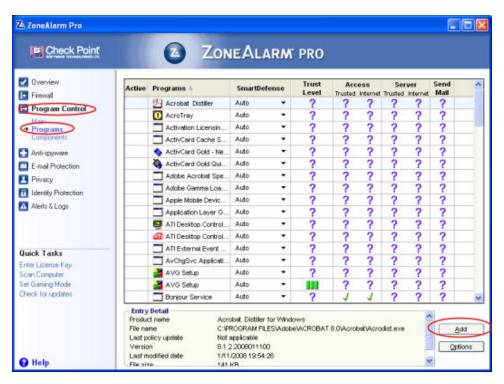

3. Add the programs listed at the of this page.

Install Software on the First PC

The following steps outline the key decision points during the software installation. Click each step to expand it and see additional information.



To ensure a smooth software installation,

- The first installation must be on a Windows computer. Subsequent installations can be on a Windows or Mac computer.
- Update Your Firewall's Trusted Program List
- Verify that you have administrator privileges on the computer where you are doing the install (step 1 below).
- Write down your server name (step 6 below).
- Write down your server password (step 7 below).

1. Check for Administrator Privileges.

You must have administrative privileges on your computer to install the software. Complete the following steps to view or change user account settings.

- On Windows Vista,
 Click Start, Control Panel, and then User Accounts and Family Safety
- On Windows XP,
 Click Start, Control Panel, and then double-click User Accounts
- On Mac OS X 10.5 or Later, Click System Preferences, Accounts, and check Allow user to administer this computer
- 2. Insert the Software Installation Disc into a network PC.
- 3. Click Next to progress through the Install Wizard and install the HP Data Vault client software.

The HP Data Vault software installs first. This software is used to

- Provide a single point of access for all of the server's features,
- Share photos and videos easily over the Internet using HP Photo Publisher and HP Photo Viewer
- Centralize your photo, video, and music libraries using HP Media Collector



4. The Windows Home Server Connector installs next.

The Windows Home Server Connector:

- Connects your computer to the server
- Automatically backs up your computer every night
- Monitors the health of the network and computers running Windows Vista
- Enables configuration of the server from your computer


The Windows Home Server software installation runs only once—on the first computer where you run the Software Installation Disc.



5. Select to wake up this computer if it is in sleep or hibernate mode to run a scheduled backup.

If you do not turn on this option now, you can enable it later.

- a. At the computer, right-click the Windows Home Server icon in the system tray.
- b. Check Wake this Computer for Backup in the shortcut menu.

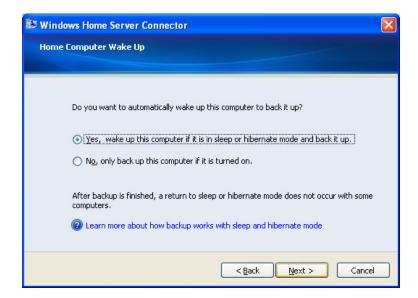


6. Name the HP Data Vault.

Type a name for your server. Server names can be:

- 15 characters maximum with no spaces
- Letters (at least one), numbers and hyphens

Important

This is the only time you can name your server. It cannot be changed later. Write down your server name. The default name is **hpstorage**.

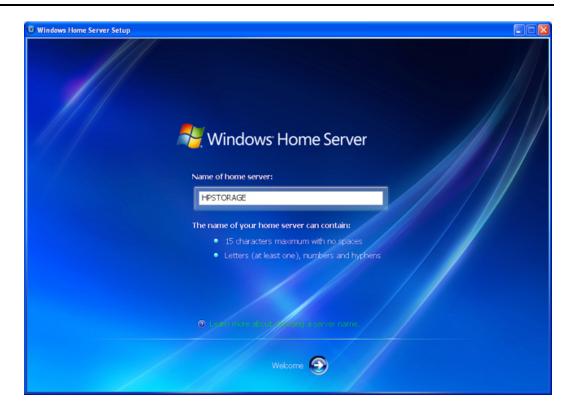

7. Set the server password.

Create a **strong password**. A strong password must be at least 7 characters long and must fulfill three of the following requirements:

- Uppercase characters
- Lowercase characters
- Numbers
- Symbols (such as !, @, and #)



Note

The password hint can be seen by anyone who clicks the Password hint button on the Windows Home Server Connector logon window.

4

Important

This is the only opportunity you will have to set the server password.

The server password is not the same as a user password. User accounts and passwords are setup in the Windows Home Server Console.




8. The install checks for Windows Home Server Updates.


The Windows Home Server installation checks for any relevant important updates. This may take some time to complete, but does not require additional information from you.



Do not restart or turn off your home server during the update process.

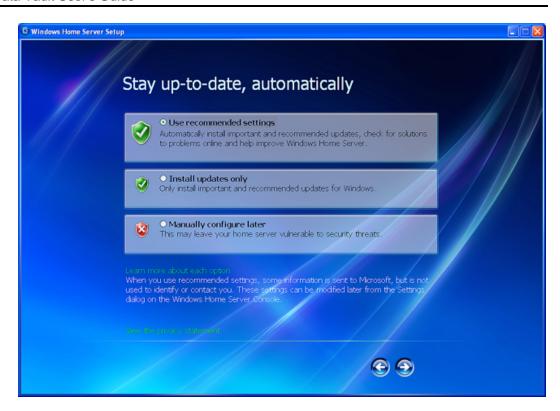

9. Type the password you created above and log on to the Windows Home Server.

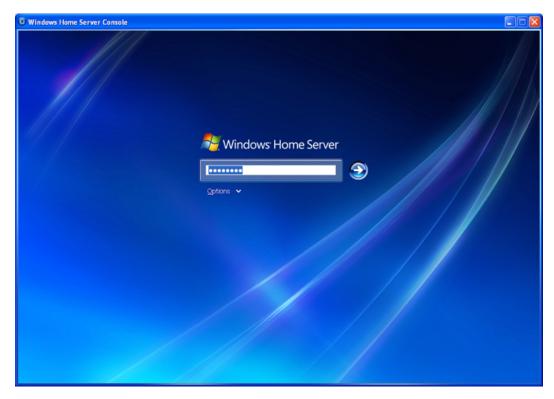

10. The install checks for HP Data Vault updates.

The HP Data Vault installation checks for any updates. Installing updates ensures that you experience the full functionality and optimal performance of the HP Data Vault.



This check only occurs the first time you run the Software Installation Disc. If you want to check for updates at a later time, see **Updating and Rolling Back the Server**.




11. *Install server updates if they are available.*

If there is an update, select it and complete the instructions on the screen to install it.



Important

Do not restart or turn off your home server during the update process.

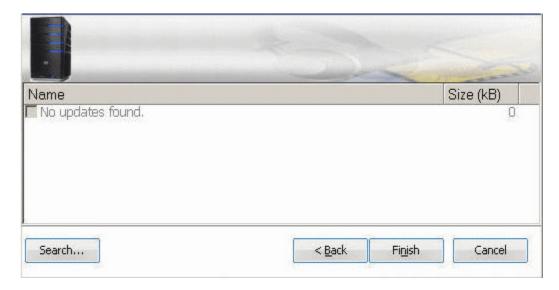

12. The Windows Home Server Console opens.

The Windows Home Server console opens. Use the console to set up user accounts and configure HP Data Vault features. Click **Help** in the upper right corner of the Console to get additional assistance.



Install Software on Additional PCs

You can install the client software through a web browser or you can use the Software Installation Disc to install the HP Data Vault client software and Windows Home Server Connector on the other computers on the network. Install the software on one computer at time.



If you misplaced or damaged your Software Installation Disc, you can also install the client software directly from the server. For more information, see To install from the server using Windows XP or Windows Vista below.

In this article...

- Install from the Software Installation Disc
- Install from the Server using Windows XP or Windows Vista

- Install from the Server using a Browser Window
- <u>Set up Additional Computers</u>

Install from the Software Installation Disc

- Insert the Software Installation Disc into a computer connected to the network.
 You must have administrative privileges to install. For additional information, see <u>Installing the Software on the First Computer</u>.
- 2. Follow the instructions on the installation wizard.

 The installation process is identical to installing on the first computer except for the following:
 - The Windows Home Server Setup does not run.
 - Your server password is required to install, as shown in the following figure:



Install the from the Server using Windows XP or Windows Vista

1. At the computer, click **Start**, and then **Run**.

Type the following (UNC) network address: \hpstorage\Software\Home Server Connector Software\setup.exe

The network address will be different if you renamed your server. In this case type, \\<server name>\Software\Home Server Connector Software\setup.exe

2. Click OK.

Install from the Server using a Browser Window


1. Open a web browser and type the following address http://hpstorage:55000. The address will be different if you renamed your server. In this case, type <a href="http://<server name">http://<server name>:55000. The Windows Home Server Connector Setup window opens.

2. Click Download Now.



Note

You can come back later to get the toolkit or contact information. Type the address, http://<server name>:55000, in a browser window.

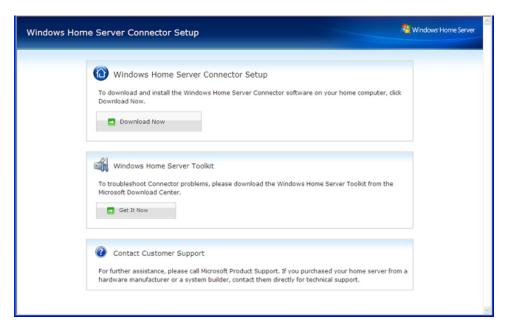

- 3. A file download security warning and a Internet Explorer dialog box may pop up. Click **Run**.
- 4. A dialog box opens stating that software is being downloaded from your server. Click Next, when the download is complete.
- 5. The **Install Wizard** opens and gives you the rest of the installation instructions.

Set up Additional Computers

After installing the software on the Software Installation Disc, there are a few setup options for you to consider.

- The computer is automatically set up to be backed up each night. If you want to customize back up settings for this computer, see **Computer Backups**.
- If you created individual user accounts in Windows Home Server for one or more network members that use this computer, you also need to set up computer user accounts for them if you want them to be able to access features on the server without logging on. For additional information, see User Accounts in the Windows Home Server help.
- If there are photos, music, or videos on this computer that you want collected on the server, set up media collection for this computer. For additional information, see Configuring Media Collector General Settings.

Install the Software on a Mac

In this article...

- <u>Install using the Software Installation Disc</u>
- Install from the Server

Install using the Software Installation Disc

The first client installation must be on a PC. Subsequent installations can be on a Mac or PC.



You must have administrative privileges on your computer to install the software. Click System Preferences, Accounts, and check Allow user to administer this computer.

- 1. Insert the Software Installation Disc.
- 2. Double-click Install HP Data Vault Software.pkg.



- 3. Click **Continue** on the Welcome to the HP Data Vault Software page.
- 4. Click **Continue** and **Agree** on the End User License Agreement.
- 5. Choose a location to install the client software or click **Install** to continue with the default

You may be asked to type your Mac computer administrator password.

- 6. The summary screen notifies you that the software installed successfully. Click **Close**. The Server Preferences dialog opens.
- 7. Type your server name and password. Your server name will be hpstorage unless you changed it during the first PC client installation.

8. Once your credentials have been authenticated, click **Apply**.





Note

Server Name and Password have to be authenticated prior to using the HP Home Page, or entering preferences for BackUp.

Install from the Server

- 1. At the Mac computer, open a Finder window.
- 2. Click **hpstorage** in the Shared category of the left Sidebar. If you renamed the HP Data Vault during the first installation, select that name in the Shared category. You are connected to the server. If you experience problems connecting to the server see, Troubleshooting a Mac Connection to the Server.
- 3. Open the **Software** folder.
- 4. Open the **Mac** folder.
- 5. Double-click **HP MSS Client.dmg**.
- 6. Double-click **Install HP Data Vault Software.pkg** and follow the instructions on the screen.

Troubleshooting a Mac Connection to the Server

File sharing is a key advantage of having a server. The HP Data Vault enables you to place documents, music, photos, or videos on the server and share them with all of the Macs and PCs on your network. This document explains how to connect your Mac to the server so you can access shared folder contents.

In this article...

- **Before Connecting to the Server**
- Connection Method A: Using the Finder
- Connection Method B: Using Connect to Server and the Server Name
- Connection Method C: Using Connect to Server and the Server's IP Address
- Pinging the Server

Before Connecting to the Server

Some set up and decisions are required before connecting your Mac computer to the server and accessing shared folders.

- The client software is installed on one PC.
- The client software is installed on the Mac you are trying to connect to the server.
- Decide how you will connect the Mac to the server—administrator account, user account, or guest account.

Types of Accounts		
Type of Account	Description	Server Account Creation
Guest Account	The guest account is useful when people are visiting your and need temporary access to	1. From the Server menu , select Launch Home Server Console.
	your server. In these cases, it probably does not make sense	2. Select the User Accounts tab.
	to create a user account for each person. Instead, you can create a single guest account that all visitors use. The guest account	3. Double-click the Guest account and click Enable Account on the Properties dialog.
	may or may not have a password.	You have the option to create a password for the guest account or leave it blank.
		Click the Shared Folder tab to define folder access.

Types of Accounts			
Type of Account	Description	Server Account Creation	
User Account	The server pairs user accounts on the server with those on a computer to identify who is connecting to the server and to maintain security. Each server user account has a unique user name and password that should match their computer log on name and password. Each user account on the server can have their own shared folder access levels.	 From the Server menu , select Launch Home Server Console. Select the User Accounts tab. Click Add from the Windows Home Server Console User Accounts tab. Complete the information in the Add User Account wizard. 	
Administrator Account	Connecting as the server administrator gives you access to all shared folders on the server. The administrator account's user name is always Administrator.	The server administrator account is created the first time you install the client software on a PC. You enter a password during the installation. See Installing Software on the First PC .	


• If you created a User Account on the server, create a matching User Account on the Mac (if it does not already exist). The Mac user account should have the same user name and password as the server user account.

On the Mac computer, choose **Apple menu** > **System Preferences** > **Accounts**. On the Accounts dialog, verify the dialog features are unlocked and click "+" to add a user account. Complete the information on the Accounts dialog.

Connection Method A: Using the Finder

Connecting to the HP Data Vault using the Finder is quick and easy. The Finder can also remember your server logon settings so subsequent connections are effortless.

- 1. At the Mac computer, choose **File** > **New Finder Window**.
- 2. Click **hpstorage** in the Shared category of the left Sidebar. If you renamed the HP Data Vault during the first installation, select that name in the Shared category.

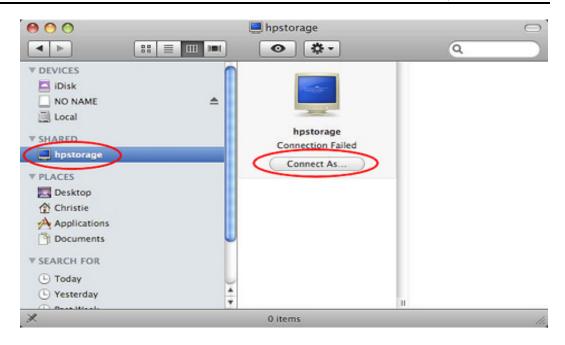

Note

The same Sidebar shows up in Save and Open dialog boxes of your programs too, making your server available to you for opening and saving files.

If you don't see the server in the Finder window's Shared category,

- The server may not be connected to the network,
- The Mac computer may not be connected to the network,
- Or maybe the check box is turned off for Connected Servers and Bonjour Computers in Finder > Preferences... > Sidebar.
- 3. If you are not automatically connected to the server, click Connect As...

Precisely how you connect to the server depends on what kind of server account you are using: Guest, User Account, or Administrator.

- **Guest account with no password**—You are automatically connected to the server when you click the server name in the Finder.
- Guest account with a password—In the dialog that opens, select Registered User, type
 the server's Guest account Password, and click Connect. You do not need to change the
 Name. Check Remember this password in my keychain to remember your settings and
 automatically connect to the server in the future.



- User account If you have a User Account on the server, select Registered User, type
 the Name and Password that was created in the server's user account in the Windows
 Home Server Console, and click Connect. Check Remember this password in my
 keychain to remember your settings and automatically connect to the server in the future.
- Administrator account—Alternately, you can connect to the server using the server's administrator account. Select **Registered User**, type Administrator for the **Name**, and type the server's **Password**. The server's password was created the first time you installed the server software on a PC.
- 4. Navigate to the folder you want on the server.

The folders that display depend on the **Shared Folder Access** settings for the guest account or user account that you used to connect to the server. To change **Shared Folder Access** settings, select **Launch Home Server Console** from the **Server** menu . Click the **User Accounts** tab and double-click the guest account or user account. Select the **Shared Folder Access** tab to change settings. Click **OK** to accept the changes.

If you connected to the server using the Administrator account, you will see all of the server's shared folders.

<u>Connection Method B: Using Connect to Server and the Server Name</u>

Follow these steps to connect to Windows File Sharing (SMB) from Mac OS X 10.5 or later. SMB is the native sharing protocol for Microsoft Windows operating systems.

- 1. At the Mac computer, choose **Go** > **Connect to Server...** on the Apple menu bar.
- 2. Type the following **Server Address**:

smb://ServerName/ShareName

For example, type the following server address to connect to the music shared folder:

smb://hpstorage/music




If you renamed your server during the first software installation, remember to use that server name instead of hpstorage. A shared folder name is required. The shared folder name cannot contain spaces; type %20 instead of spaces. Additionally, you cannot connect to a shared folder name that contains a hyphen.

Connection Method C: Using Connect to Server and the Server's IP Address

The Mac computer may not recognize the server's name in some cases. If that happens, connect to the server using its IP address instead of the server name. If you are unsure of your server's IP address, you can log on to your router to see a list of IP addresses for all network connected devices.

To log on to your router, open an Internet browser window, type the router's IP address in the address bar and press Enter. The router's IP address will be one of the following,


- **1**92.168.1.1,
- 192.168.0.1, or
- Obtain your router's IP address from a Mac by selecting Apple menu > System
 Preferences > Network. Select Built-in Ethernet on the left menu. The router IP address is on the right side of the Network dialog.

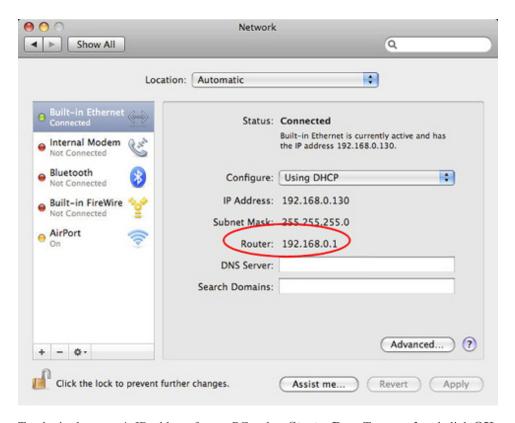

- To obtain the router's IP address from a PC, select Start > Run. Type cmd and click OK. In the DOS window, type ipconfig and press Enter. Use the Default Gateway IP address to log on to your router.
- 2. Once logged in to the router, look for a list of connected devices. Each router is different. See your router's documentation if you do not find the server's IP address right away.
- Once you find your server's IP address, choose Go > Connect to Server... on the Apple menu bar
- 4. Type the **Server Address.**

Your address will be different but will look similar to the following,

smb://192.168.0.180/music

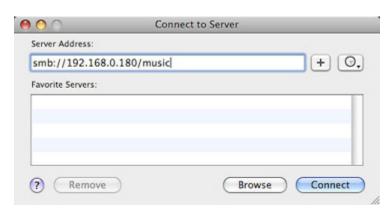



Click "+" to add the server address to your list of favorites.

- 5. Click Connect.
- 6. Log on to the server using either a guest account, user account, or administrator account.

Pinging the Server

To troubleshoot a connection failure, you can ping the server.

- 1. Open a Finder window and choose **Applications** > **Utilities** > **Network Utility**.
- 2. Select the **Ping** tab.
- 3. Type the server's IP address.
- 4. Click **Ping**.

A successful ping verifies a connection between the Mac computer and the server.

If you are unable to ping the server, check that the server is on and that all network cables are securely connected. You may also need to reset your router.

UNINSTALL THE SOFTWARE

Uninstall the PC Client Software

- 1. Click the **Start** menu, **Control Panel**, and **Add or Remove Programs**.
- 2. Select **HP Data Vault** and click **Remove**.
- 3. Select Windows Home Server Connector and click Remove.
- 4. Close Add or Remove Programs.

Uninstall the Mac Client Software

In this article...

- Uninstall using the Software Installation Disc
- Uninstall from the Server

Uninstall using the Software Installation Disc

1. Insert the Software Installation Disc.

2. Double-click Uninstall HP Data Vault Software.



3. Follow the instructions on the screen.

Uninstall from the Server

- 1. At the Mac computer, open a Finder window.
- 2. Click **hpstorage** in the Shared category of the left Sidebar. If you renamed the HP Data Vault during the first installation, select that name in the Shared category. You are connected to the server. If you experience problems connecting to the server see, <u>Troubleshooting a Mac Connection to the Server</u>.
- 3. Open the **Software** folder.
- 4. Open the **Mac** folder.
- 5. Double-click **HP MSS Client.dmg**.
- 6. Double-click **Uninstall HP Data Vault Software** and follow the instructions on the screen.

HP SOFTWARE UPDATES

HP Update Settings

Use the HP Data Vault software update to keep your server and networked computers current with the latest HP software, online help, and new features.

HP Data Vault software update does not update the Microsoft Windows Home Server operating system. For information about updating Windows Home Server, see Configuring Windows Update in the Windows Home Server Console Help.


In this article...

- Configure HP Update
- Version Information

Configure HP Update

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, Select Launch Home Server Console from the Server menu.
- 2. Click **Settings** in the upper right of the Console.

3. Select **HP Data Vault** in the left menu and click the **HP Update** tab.

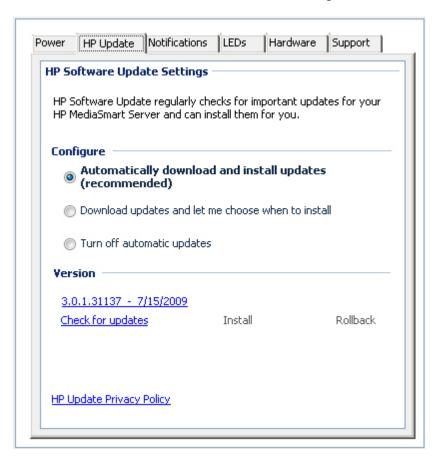

4. The following choices are available in the **Configure** section. HP recommends that you select **Automatically download and install updates**.

Configure HP Software Update Options		
Option	Additional information	
Automatically download and install updates (recommended)	Requires no user action. Downloads and installs updates on the server in the background. If necessary the server will automatically reboot.	
Download updates and let me choose when to install	Requires user action. Your computer notifies you that an update has been downloaded and is ready to install on the server. Additionally, the Install link turns blue under HP Data Vault software updates. To update the server after an update is downloaded, click Install under HP Data Vault software updates in the Windows Home Server Console	

Configure HP Software Update Options		
Option	Additional information	
Turn off automatic updates	Not recommended.	
	To get updates with this choice you will have to click Check for updates located in the Version section.	

5. Click OK.

Version Information

The following information and options are in the **Version** section of the HP Update dialog.

- The server software version number and date are shown.
- Click **Check for updates** to immediately check for available software updates, regardless of the configuration settings you selected above.
- The **Install** link becomes active when an update has been downloaded, but not installed. Click **Install** to run the server update.
- The **Rollback** link becomes active when a software update has been installed. Use this link to uninstall the update on the server and revert to the previous server software version.



Important

Clicking **Install** or **Rollback** only makes changes to the server software. Each networked computer still needs to be updated or rolled back so that the server and client computers are running the same version of software. See <u>Updating and Rolling Back Client PCs</u> or <u>Updating and Rolling Back Mac Clients</u> for more information.

Update and Roll Back the Server

Use HP Update to keep your server and networked computers current with the latest HP software, online help, and new features.



Important

The server must be updated before client PCs and Macs are updated. The server and the client computers must be running the same version of the HP Data Vault software.

In this article...

- Update the Server

Update the Server

The method you use to update the server depends on how you configured HP Update. Click on a bullet to see additional information.

To automatically check for updates


If you selected Automatically download and install updates when you configured HP Update, then you do not need to take further action. The server will install updates in the background as they are available.

To manually check for updates




If you have never restarted your HP Data Vault, you may need to turn it off and back on before you check for updates.

- 1. At the computer, double-click the Windows Home Server icon with in the system tray and log on.
- Click **Settings** in the upper right of the Console.
- Select **HP Data Vault** in the left menu and click the **HP Update** tab.
- 4. Click the **Check for updates** link.
- 5. If an update is found it will be listed as below. Click **Next** to start the install process and follow default choices to complete the software install.

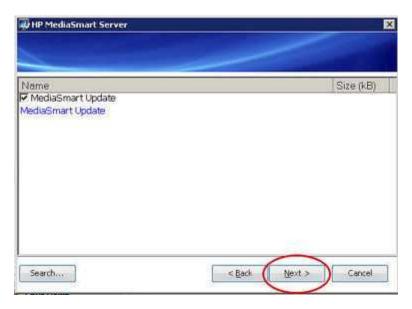


- To manually install an update copied to the server
 - 1. If you downloaded a software update from the www.hp.com site, you can manually install it by copying the software update package to your server. Once the update is on the server, complete the following steps.

- 2. At the computer, double-click the Windows Home Server icon in the system tray and log on.
- 3. Click **Settings** in the upper right of the Console.
- 4. Select **HP Data Vault** in the left menu and click the **HP Update** tab.
- 5. Click the **Check for updates** link. After the install wizard checks for pending updates on your server, you will see the select package page where you can select the **Search** button.

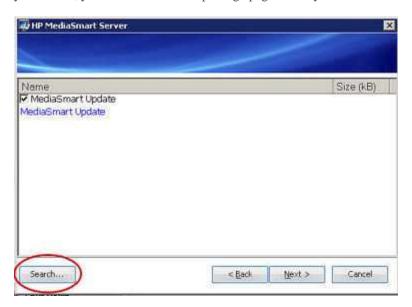

- 6. Click Select file.
- 7. Type the full path to the file that you copied to the server or select the **Browse** button navigate to the file and select **OK**.

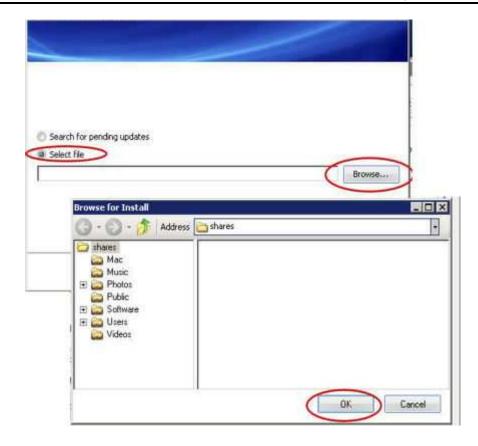

8. Click **Finish** to start the install process and follow the default choices to complete the server software install.


Roll Back the Server

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select Launch Home Server Console from the Server menu
- 2. Click **Settings** in the upper right of the Console.
- 3. Select **HP Data Vault** in the left menu and click the **HP Update** tab.
- 4. Click **Rollback** and then click **Yes** in the confirmation screen.



Note

If you updated the client software, it must also be uninstalled so that the server and the client are running the same version of the HP Data Vault software.

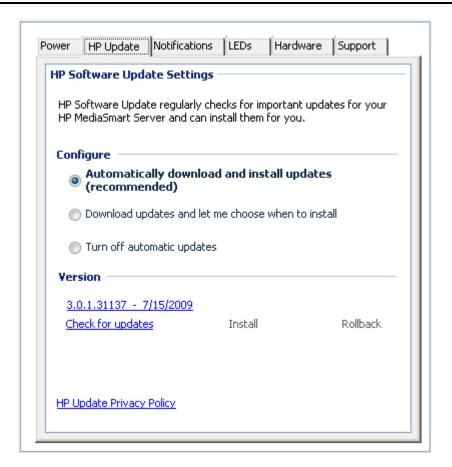



HP Update does not update the Microsoft Windows Home Server operating system. For information about updating Windows Home Server, see Configuring Windows Update in the Windows Home Server Console Help.

Update and Roll Back Client PCs

Note

Update the server software prior to updating the client software. If your server does not have the correct software version, you will get an error message when you try to install the client software. See Updating and Rolling Back the Server for more information.

In this article...

Update Client PCs

Roll Back Client PCs

Check the Client PC Version Number

Check the Server Version Number

Update Client PCs

There are multiple ways of updating your client PCs. Once the server is updated, the client PC software update file is on the server and can be run from the software folder. The client PC update can also be downloaded and run from HP Update. The following sections describe various methods for installing the client PC update. Click an option to expand and view the instructions for updating your client. Click again to hide the instructions.

- To Update Client PCs Using Run Programs
 - 1. At the computer, click **Start**, and then **Run**.

Type the following (UNC) network address. \hpstorage\Software\Home Server Connector Software\setup.exe

If you renamed your server during the initial software installation the path will be \\< server name>\Software\Home Server Connector Software\setup.exe.

- 2. Follow the instructions on your computer for installing the update.
- To Update Client PCs Using HP Update
 - 1. Click the **Start** menu, **HP**, and **HP Update**.
 - 2. Click **Settings** to configure HP Update.
 - 3. Click **Next** to immediately check for a client PC update.
 - 4. Follow the instructions on your computer for installing the update.
- To Update Client PCs Using the Software Installation Disc

The Software Installation Disc runs an executable file that is on your server. When the server software is updated, the new client executable file is placed on the server but not installed. As long as you run the Software Installation Disc after you update the server, the CD will find the new client executable file on the server and install it.

- To Update Client PCs Using a Browser
 - Open a Web Browser and type the following address http://hpstorage:55000.
 If you renamed your server during the initial installation the URL will be http://<server name>:55000.

The Windows Home Server Connector Setup window opens.

2. Click **Download Now**.

Roll Back Client PCs



Important

You must roll back your server prior to rolling back the client PC. See <u>Updating and Rolling Back</u> the Server.

- 1. Click the Start menu, Control Panel, and Add or Remove Programs.
- 2. Select **HP Data Vault** and click **Remove**.
- 3. Select Windows Home Server Connector and click Remove.
- 4. Close Add or Remove Programs.
- 5. At the computer, click **Start**, and then **Run**.

Type the following (UNC) network address. \hpstorage\Software\Home Server Connector Software\setup.exe

The network address will be different if you renamed your server. In this case type, \\<server name>\Software\Home Server Connector Software\setup.exe

6. Click OK.


Install the software on one computer at a time.

Check the Client PC Version Number

It is important for the server software and the PC client software to be on the same version in order for them to work together properly. Complete the following steps to confirm that the server and the client are on the same version.


On Windows XP

- 1. To check the PC client software version number on Windows XP, click Start and Control Panel.
- 2. Click Add or Remove Programs.
- 3. Select **HP Data Vault** and then **Click here for information support**. The About dialog opens.

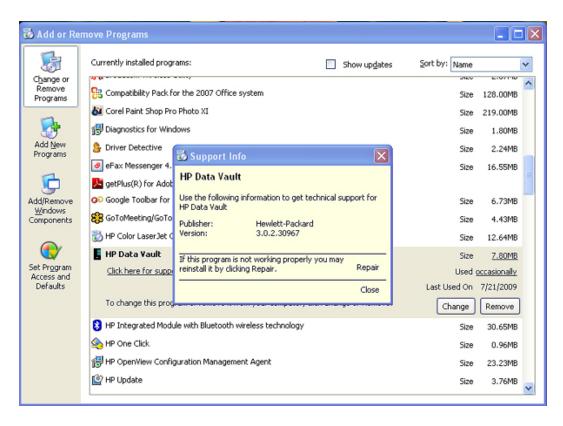


On Windows Vista

- 1. To check the client software version number on Windows Vista, click Start and Control Panel.
- 2. Select **Programs** and then **Programs and Features**.
- 3. If the details are not displayed, from the Organize menu select Layout and Details Pane.
- 4. Select HP Data Vault to see the version number.

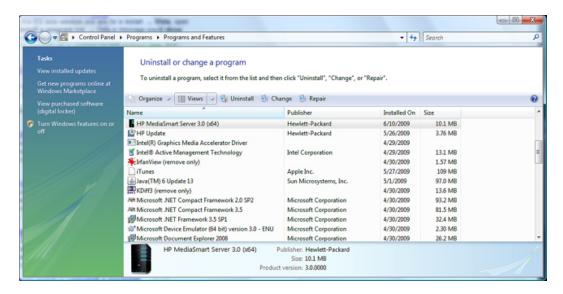

Check the Server Version Number

- 1. To check the server software version number on a PC, double-click the Windows Home Server icon in the system tray and log on.
 - At the Mac, select Launch Home Server Console from the Server menu
- 2. Click **Settings** in the upper right of the Console.
- 3. Select **HP Data Vault** in the left menu and click the **HP Update** tab. The version number is at the bottom of the HP Update tab.

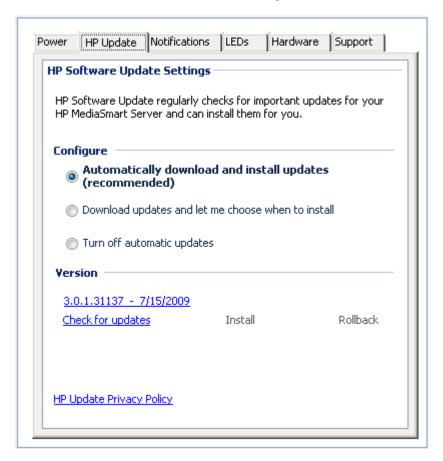

The server and client software should have compatible version numbers. The following table lists the version numbers that work together.

Compatible Software Version Numbers		
Server Version	PC Client Version	Mac Client Version
1.3.6.21622	1.2.1.18999, 1.3.6.21622	N/A
1.3.8.25155	1.2.1.18999, 1.3.6.21622, 1.3.8.25155	N/A
2.1.7.24261	2.1.7.24261	1.0.0b20

Compatible Software Version Numbers			
Server Version	PC Client Version	Mac Client Version	
2.5.10.26972, 2.5.10.27366	2.5.10.26972	2.5.0b51	
3.0	3.0	3.0	

Update and Roll Back Mac Clients

This article describes how to manually check for a Mac client update or roll back. Mac computers connected to the network automatically check for changes to the HP MSS Client.dmg file once a day and notify you if it has changed.

In this article...

- **Update Mac Clients**
- Roll Back Mac Clients
- Check the Mac Client Version Number
- Check the Server Version Number

Update Mac Clients



Important

Update the server software prior to updating the client software. The server update and the Mac client update are downloaded at the same time through the HP Update mechanism in the Windows Home Server Console. Updating the server ensures that the most recent copy of the HP MSS Client.dmg is on your server and ready to install. See Updating and Rolling Back the Server for more information.

- 1. From the HP Data Vault menu, choose **Open Preferences**.
- 2. Click the **Software Update** tab.
- Click Check Now.

If the **HP MSS Client.dmg** file on the server has changed, you will be prompted to install the file. The HP MSS Client.dmg may have changed because an update was downloaded from HP or because the server administrator rolled back the server software.

4. Follow the instructions on the screen for installing the file.

Roll Back Mac Clients

1. First, roll back the server software.

When the server is rolled back using the HP Update mechanism in the Windows Home Server Console, it also rolls back the **HP MSS Client.dmg** file that is located on the server. See <u>Updating and Rolling Back the Server</u> for more information.

- 2. On the Mac, choose **Open Preferences** from the HP Data Vault menu.
- 3. Click the **Software Update** tab.
- 4. Click Check Now.

If the server roll back completed successfully, the HP MSS Client.dmg file on the server will have changed and you will be prompted to install the file.

5. Follow the instructions on the screen for installing the file.

Check the Mac Client Version Number

It is important for the Server software and the Mac client software to be on the same version in order for them to work together properly. Complete the following steps to confirm that the server and the client are on the same version.

1. To check the Mac client software version number, go to the HP Data Vault menu and select

The Mac client version number is displayed in the About dialog.



Check the Server Version Number

1. To check the server software version number on a PC, double-click the Windows Home Server icon in the system tray and log on.


At the Mac, select Launch Home Server Console from the Server menu .



- 2. Click **Settings** in the upper right of the Console.
- 3. Select **HP Data Vault** in the left menu and click the **HP Update** tab. The version number is at the bottom of the HP Update tab.



Server version 2.1.7.24261 and Mac client version 1.0.0b20 work together. Starting with version 2.5, the server and the client version numbers will have the same first two numbers.

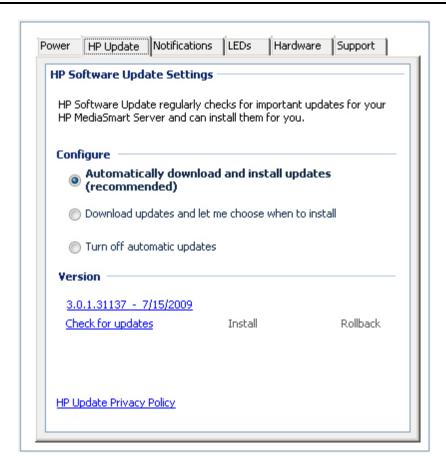

The server and client software should have compatible version numbers. The following table lists the version numbers that work together.

Compatible Software Version Numbers			
Server Version	PC Client Version	Mac Client Version	
1.3.6.21622	1.2.1.18999, 1.3.6.21622	N/A	
1.3.8.25155	1.2.1.18999, 1.3.6.21622, 1.3.8.25155	N/A	
2.1.7.24261	2.1.7.24261	1.0.0b20	
2.5.10.26972, 2.5.10.27366	2.5.10.26972	2.50b51	
3.0	3.0	3.0	

Chapter 3. Start Using Your Server

GUIDED TOUR

HP Home Page

The HP Home Page is the starting point for accessing the features of the HP Data Vault.

In this article...

- Open the HP Home Page on a PC
- **Open the HP Home Page on a Mac**

Open the HP Home Page on a PC

The HP Home Page can be accessed from the following:



Windows Start menu—At the computer, click Start, All Programs, and then select HP Data Vault.



Desk icon—At the computer, double-click the **HP Data Vault** icon on the desk.

Open the HP Home Page on a Mac

The HP Home Page can be accessed from the following:



Using the Finder—At the Mac, click Finder, Applications, and then select HP Data Vault Home.



Server Menu—Select **Open Home Page** from the **HP Data Vault** menu at the of the screen.

If the **Server** menu is hidden, open **System Preferences** from the **Apple** menu, and then select **HP Data Vault**. Check **Show HP Data Vault in the menu bar**.

The HP Home Page Icons



Media Streamer—Opens a web application for streaming music, videos, and photos in your home. For more information, see <u>About Media</u> Streamer.



HP Photo Publisher—Publish photos from your Server to your favorite photo-sharing site. Friends and family can see your photos on the Internet. For more information, see <u>About HP Photo Publisher</u>.



HP Photo Viewer—View the photo albums that are shared from this server. For more information, see <u>HP Photo Viewer Home</u>.



Access Files on Server—Browse the folders and files on your server. This feature is optimized for remote browsing and is enabled when you open the HP Home Page from a remote location.



Computer Access—Remotely connect to your server or a computer on your home network. This feature is enabled when you open the HP Home Page from a remote location.



Server—Opens a folder that displays a list of all your shared folders.



Music—Opens a folder that displays a list of music and music subfolders.



Photos—Opens a folder that displays a list of photos and photo subfolders.



Video—Opens a folder that displays a list of videos and video subfolders.



Backup Now (PC) or **Time Machine** (Mac)—Backup your computer to the server.



User's Guide—Contains installation information, setup instructions, how to use the server, tutorials, and other important information.



Online support—Go to the HP Support web site, where you can get more information about the HP Data Vault.



Registration—Click to go to https://register.hp.com and register your HP Data Vault. Registering your Server ensures that your information is on file with HP if you should need technical support services.



Shop HP—Get accessories for your server and shop HP Home & Home Office.

Windows Home Server Console

OPEN THE WINDOWS HOME SERVER CONSOLE

The Windows Home Server Console is where you manage and configure the HP Data Vault. You can access the Windows Home Server Console from a PC in the following ways. The Windows Home Server Console cannot be opened on a Mac.

In this article...

- Open the WHS Console from the Start Menu
- Open the WHS Console from the HP Data Vault Desk Icon
- Open the WHS Console from the System Tray
- Open the WHS Console from a Mac

Open the WHS Console from the Start Menu

- 1. At the computer, click **Start**, **All Programs**, and then select **Windows Home Server Console**.
- 2. Log on to the Windows Home Server Console.

Open the WHS Console from the HP Data Vault Desk Icon

1. From the computer desk, double-click HP Data Vault icon.



- 2. In the HP Home Page, click the **Tools** tab.
- 3. Click Home Server Console.
- 4. Log on to the Windows Home Server Console.

Open the WHS Console from the System Tray

- 1. At the computer, double-click the Windows Home Server icon with in the system tray.
- 2. Log on to the Windows Home Server Console.

Open t he WHS Console from a Mac

1. At the Mac, Select Launch Home Server Console from the Server menu

THE SERVER TOUR

1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.

2. Click **Overview** and then **Tour** in the left menu. The following features are illustrated.

The HP Data Vault includes many features and applications designed to help you secure, store and share your information.

HP Data Vault Features		
Feature	Description	
Storage	Use the Server Storage tab on the Windows Home Server Console to view status, capacity, available space, add, repair, and remove hard drives. Easily add drives, even while your system is powered on.	
Shared Folders	Shared folders are locations to organize and store files on your home server to make available to others on your network. Shared folders can be seen by other supported devices on the network.	
Remote Access	Access files on your server and supported computers plus stream photos, music and videos while away from home.	
Backup	Automatically backs up multiple Windows PCs and Macs on your home network. Sophisticated PC backup software provides efficient and compact backups to help save time and disk space on the server.	
User Accounts	To access information on your HP Data Vault or PCs on home networks from remote locations, user accounts are required.	
Access PCs and Files	Access files on your server and supported computers plus stream photos, music and videos while away from home.	
Online Backup (optional)	Save important files to an Amazon S3 account on the Internet.	
Shop Online	Visit the HP Applications store to shop for additional software for your server and computer.	

THE WINDOWS HOME SERVER TABS

The Windows Home Server enables you to share, store, access, and automatically protect your pictures, videos, music, and files. It contains the following tabs:

- **HP Data Vault**—Access HP features and functionality.
- Computers & Backups—View and customize backups. Also, view the status of your home computers. For more information, see Computers & Backup in the Windows Home Server Console Help.
- **User Accounts**—Add, remove, and modify user accounts. For more information, see **User Accounts** in the Windows Home Server Console Help.

Shared Folders—Add, open, remove, and view the properties of the shared folders on your server. For more information, see **Shared Folders** in the Windows Home Server Console Help.

- **Server Storage**—View, add, repair, and remove hard drives from server storage. For more information, see **Server Storage** in the Windows Home Server Console Help.
- **Network**—Displays health notifications from your server and your home computers. For more information, see **Network Health** in the Windows Home Server Console Help.
- Settings—Configure general settings, such as date and time, backups, passwords, media sharing, remote access, add-ins, resources, and more. For more information, see Server Settings in the Windows Home Server Console Help.
- **Help**—Access the Windows Home Server Console Help.

FIRST STEPS

PC Backup and Restore

After running the Software Installation Disc on a computer it is automatically added to the list of computers that are backed up by the HP Data Vault each night. The entire computer is backed up by default.

Complete the following steps to customize the hard drive volumes to back up, or to exclude folders from the backup.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click the **Computers & Backups** tab.
- 3. Select a computer and click **Configure Backup**. Follow the instructions in the **Backup Configuration Wizard**.

Related Topics

Windows Home Server Console Help

- Computers & Backup
- How does backup work?
- Managing and Configuring Backups
- Restoring Computer Backups
- Removing a Computer
- Troubleshooting Computers & Backup

Mac Time Machine Backup


In this article...

- Determine Used Space on Your Local Disk
- Configure Time Machine Backups
- Change the Backup Disk Size
- Delete a Backup Disk

Determine Used Space on Your Local Disk

Begin by finding out how much space your data currently occupies on your Local disk. When you set up Time Machine, the minimum backup disk size is automatically calculated for you. However, you may want to increase the backup disk size depending on how often you create or change files on your Mac.

- 1. Open a Finder window and select the Local disk.
- 2. On the Apple menu bar, choose **File** > **Get Info**.
- 3. In the Local Info window, look in the General section next to find the Used disk space.

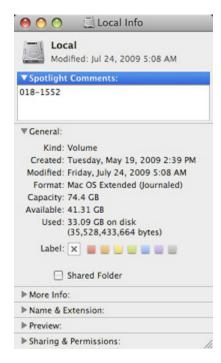

Multiply the used disk space by 1.5. The result is the minimum amount of disk space Time Machine can work with (That's because Time Machine needs space for all of your files plus some extra room to enable it to store new data and multiple copies of files that change.). However, more space is always better, because it enables Time Machine to retain backups that go further into the past. A backup disk with at least 1.5 times as much free space as the amount occupied on your local disk is recommended, and more if possible.

Configure Time Machine Backups

Before you begin,

- The HP Data Vault software has to be installed on your Mac. See <u>Installing and Uninstalling Mac</u>
 Software.
- You must be logged on to the Mac with an account that has administrator privileges.

To configure the HP Data Vault as a valid Time Machine backup device,

- 1. From the HP Data Vault menu, select **Open Preferences**.
- On the Server tab, verify that the server name and the server's administrator password are authenticated.

This information is used by Time Machine to set up the backup destination, as well as the links to the shares on the server. This information may have been entered at the end of the Mac software install. If so, you will be authenticated automatically.



3. Select the **Backup** tab and type a **Backup Disk Size**.

The suggested minimum disk space size displays in the dialog based on approximately 1.5 times the size of your used disk space. However, HP recommends creating a backup disk that is at least as large as your total local disc capacity, or larger if possible. When choosing a backup disk size, you may want to consider how much you use your Mac and how much disk space you have available on your server. The backup disk size cannot exceed the amount of free space that you have available on one server disk.



Important

You can resize your backup disk later if you need more room. Resizing the backup disk overwrites the current backup disk and causes all data to be lost. See Change the Backup Disk Size.



7

Note

The location for the backup is on the server at \hpstorage\Mac\Backup. If the Mac shared folder has been deleted from the server, you must create it. At a PC, double-click the Windows Home Server icon in the system tray and log on. Or at a Mac, select **Launch Home Server Console** from the **Server** menu. Click the **Shared Folders** tab and **Add** a shared folder named **Mac**.

4. Click **Apply**.

This process can take quite some time based on the size of the backup disk and server activity. Once the formatting process is complete, the Backup Disk Status changes to **Started**.



The backup file will be located at \\<server name>\Mac\Backup. The file name is based on the serial number of the Mac system, and cannot be changed. Do not manually delete or rename this file.

 Click Open Time Machine Preferences, click Choose Backup Disk and select Backup to HP Data Vault as the backup disk.

Backup to HP Data Vault may already be selected. You may have to change the backup location to the HP Data Vault if you had a previous Time Machine backup that pointed to a different location.

Change the Backup Disk Size

- 1. From the HP Data Vault menu, select **Open Preferences**.
- 2. Click the **Backup** tab.

3. In the Backup Disk Status, click S.

The Backup Disk Status changes to Sped and the virtual disk icon on the desk goes away after the backup disk ss.



You may have to wait several minutes for the backup disk to s. Please be patient. If the backup disk does not s and it appears to hang, it could be because an application or other process is accessing the backup disk in the background. If this is the case, attempt to eject the disk using Finder.

- 4. Enter a new value in the **Backup Disk Size** and select **Resize** from the action menu. You cannot select **Resize** until the disk is sped and the disk size is changed.
- 5. Click Apply.
- 6. A pop up warning appears informing you the file already exists and that continuing will erase the existing backup data and start over. To continue with the new size click **Delete and Continue**.

Delete a Backup Disk

You may want to delete a backup disk if you need to free up space on your server for other things or if you are no longer using your Mac.

- 1. From the HP Data Vault menu, select **Open Preferences**.
- 2. Click the **Backup** tab.
- 3. In the **Backup Disk Status**, click **S**.

The Backup Disk Status changes to Sped and the virtual disk icon on the desk goes away after the backup disk is sped.



Note

You may have to wait several minutes for the backup disk to s. Please be patient. If the backup disk does not s and it appears to hang, it could be because an application or other process is accessing the backup disk in the background. If this is the case, attempt to eject the disk using

4. Select **Delete** from the action menu next to the **Backup Disk Size**.

Using Shared Folders

Shared folders are places for you to organize and store files on your server so that you can share them with other people on your network. Start copying digital assets from your computer to shared folders on the HP Data Vault.



Important

Do not delete the shared folders that come with the HP Data Vault: Converted Videos, Mac, Music, Photos, Public, Recorded TV, Software, Users, Videos.

In this article...

- Copy Files to Shared Folders
- Access Shared Folders from the Run Dialog
- Access Shared Folders from the HP Home Page
- Access Shared Folders from the Desk Shortcut
- Access Shared Folders from the System Tray
- Access Shared Folders from My Network Places in Windows XP
- Access Shared Folders from Network in Windows Vista
- Access Shared Folders using the Finder

Copy Files to Shared Folders

- 1. Use one of the methods listed below to open shared folders.
- 2. Copy files to the appropriate shared folder or create shared folders for other digital content.



Note

From the **Media Sharing** page on the Windows Home Server **Settings** tab, you can turn on digital **media streaming** for the Photos, Music, or Videos shared folders. Click **On** for each folder that you want to stream from.

Access Shared Folders from the Run Dialog

At the computer, click **Start** and **Run**. Type \\hpstorage or the name of your server and click **OK**.

Access Shared Folders from the HP Home Page

- 1. At the computer, click **Start**, **All Programs**, and then select **HP Data Vault**.
- 2. Click one of the following:
 - Server—opens a folder that contains all your shared folders.
 - Photos—opens a folder for sharing photos.
 - Music—opens a folder for sharing music.
 - Videos—opens a folder for sharing videos.

Access Shared Folders from the Desk Shortcut

1. At the computer, go to the desk, and then double-click the Shared Folders on Server shortcut



2. Double-click the shared folder you want to open.

Access Shared Folders from the System Tray

- 1. Right-click the Windows Home Server icon and log on.
- 2. Click Shared Folders.
- 3. Double-click the shared folder you want to open.

Access Shared Folders from My Network Places in Windows XP

- 1. At the computer, click **Start**, and then click **My Network Places**.
- 2. Double-click the shared folder you want to open.
- 3. If the shared folders are not in My Network places, you can add them manually.

Access Shared Folders from Network in Windows Vista

- 1. At the computer, click **Start**, and then **Network**.
- In Network, double-click the computer icon next to SERVER.
 If you changed the default name of the server, that name appears next to the computer icon instead.
- 3. Double-click the shared folder you want to open.

Access Shared Folder using the Finder

- 1. At the Mac computer, choose **File** > **New Finder Window**.
- 2. Click **hpstorage** in the Shared category of the left Sidebar. If you renamed the HP Data Vault during the first installation, select that name in the Shared category.
- 3. If you are not automatically connected to the server, click **Connect As...** and log on.
- 4. Double-click the shared folder you want to open.

Related Topics

HP Data Vault User's Guide

Troubleshooting a Mac Connection to the Server

Windows Home Server Console Help

- Shared Folder
- Adding a shared folder
- Viewing shared folder properties
- Opening a shared folder
- Removing a shared folder
- Viewing shared folder history

What is Folder Duplication?

Enable Guest Account or Set up User Accounts

In this article...

- **Enable the Guest Account**
- Create PC and Mac User Accounts
- **Create Matching Server Accounts**

Enable the Guest Account

If you want everyone to use the same logon account to access the HP Data Vault, enable the guest account. If the Guest account is enabled with no password, network users are not required to logon to the server when they use networked computers. Additionally, all network users can be set up to have Full access to all shared folders through the Guest account.



Important

If you enable the Guest account, everyone that connects to the network has the same privileges. That may mean that they all have full access to shared folders and other resources on your server. To protect your network from unwanted connections, see Securing your server from intruders.



Notes

The Guest account cannot be used to access the server using remote access.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- Click the User Accounts tab.
- 3. Click Enable Guest on the User Accounts Setup dialog or on the Properties for Guest dialog.

Create PC and Mac User Accounts

If network users want to access information on your network from an Internet café, coffee shop, or other location outside of your network, they need individual user accounts with strong passwords on their computer or lap and on the server.

•

Important

When you create user accounts on the server, use logon names and passwords that match the logon names and passwords of existing user accounts on your networked computers. Creating matching user accounts enables network members to automatically log on to the server when they log on to their computer.

If the user accounts and passwords do not match, you will be prompted to type a user name and password when you open the server's shared folders.

If your computer does not have a password or if the computer uses a factory default user name, you can change these parameters to eliminate the need to enter your user name and password when you access a shared folder.

Create a User Account for a PC Running Windows XP

- 1. At the computer, click **Start**, **Control Panel**, and then **User Accounts**.
- 2. Click **Add** to create a user account.

-or-

Click Change an Account to change a logon name or password for an existing account.

A strong password is suggested to ensure security and is required to use remote access. A strong password must be at least 7 characters long and must fulfill three of the following four character criteria:

- Uppercase characters
- Lowercase characters
- Numbers
- Symbols (such as !, @, #, and so on.)

A password hint helps you remember your password. The password hint can be seen by anybody who clicks the link to display it.

Create a User Account for a PC Running Windows Vista

1. At the computer, click **Start** and then **Control Panel**.

- 2. Under User Accounts and Family Safety, select Add or remove user accounts.
- 3. Add user accounts or make changes to existing user accounts.

A strong password is suggested to ensure security and is required to use remote access. A strong password must be at least 7 characters long and must fulfill three of the following four character criteria:

- Uppercase characters
- Lowercase characters
- Numbers
- Symbols (such as !, @, #, and so on.)

A password hint helps you remember your password. The password hint can be seen by anybody who clicks the link to display it.

Create a Mac User Account

- 1. On the **Apple** menu, click **System Preferences.**
- 2. Click Accounts.
- 3. If the accounts page is locked, click the lock and enter you credentials to unlock the page.
- 4. Click + to open the new account page.

Enter the user information.

A strong password is suggested to ensure security and is required to use remote access. A strong password should be at least 7 characters long and fulfill three of the following four character criteria:

- Uppercase characters
- Lowercase characters
- Numbers
- Symbols (such as !, @, #, and so on.)

A password hint helps you remember your password.

5. Click Create Account.

Create a Matching User Account on the Server

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select Launch Home Server Console from the Server menu.
- Click the User Accounts tab at the of the page. If the User Accounts Setup dialog displays click OK.

- Click Add, this will open the Add User Account screen. enter user information. Check the
 Enable Remote Access for this user check box. Make an appropriate choice concerning allowing
 access to computer and folders.
- 4. Click Next.
- 5. Enter and confirm a strong **password**. A strong password is suggested to ensure security and is required to use remote access. A strong password must be at least 7 characters long and must fulfill three of the following four character criteria:
 - Uppercase characters
 - Lowercase characters
 - Numbers
 - Symbols (such as !, @, #, and so on.)
- 7. Click Next.
- 8. Select access to shared folders
- 9. Click Finish.
- 10. Click Done.

Repeat for each user account that you want to add.

Related Topics

Windows Home Server Console Help

User Accounts

Configure Remote Access

To easily access your server files and network PCs from a computer that is not attached to the network, you must configure remote access.

In this article...

- Configure Remote Access
- About TZO.COM Custom Domain Names
- About Windows Live Personalized Domain Name
- What Value does TZO Domain Names Provide Beyond the Microsoft Live Option

Configure Remote Access

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right of the Console.
- 3. Click **Remote Access** in the left menu.

Click to **Turn on** remote access.

The Remote Access wizard starts and attempts to configure your router. If you encounter problems, see **Configuring your broadband router** in the Windows Home Server Console help.

4. The wizard then prompts you to select a **Domain Name Provider** and create a domain name. A domain name is a web address. It allows you to access your HP Data Vault from the Internet. For instance, if you registered MyFamily.hpshare.net for your HP Data Vault, you would use this address to connect to your server using remote access. Additionally, this address is part of the URL for accessing an album on the HP Photo Viewer.

The HP Data Vault provides three alternatives for setting up a domain name:

- HP Personal Domain Name by TZO.COM
- TZO.COM Custom Domain Name
- Windows Live Custom Domains

When choosing which service to use, consider the following:

TZO domains names allow easy remote access, even if your broadband ISP blocks port 80. Blocking port 80 prevents a Web browser from reaching the server.

• With the TZO.COM Custom Domain Name option, you can create a domain name with any name that is not already registered.

See additional information on domain names below.

- 6. Once the wizard is complete, customize **Web site settings** as desired.
- 7. Click OK.

About HP Personal Domain Name by TZO.COM

HP Personal domain name is free for the first year. After the first year, there is a charge.

An HP personal domain name has two parts:

- Personalized name—enter a name of your choice. TZO.COM will check your choice against existing names. If the name you picked already exists, TZO provides a list of alternatives.
- Second part of the name—choose from an assortment of domain names such as hphomeserver.com or hpshare.net.

Each part is combined so the Domain Name looks like MyFamily.hphomeserver.com.

About TZO.COM Custom Domain Names

With this option, you can create a domain name with any name you want, like MyName.com, as long as that name is not already registered.

A domain name has several components:

- -level or first-level domain names—all domain names end in a small list of generic names, such as .com or .net, or in a country code, such as .es or .fr.
- Second-level domain names—the part or parts of the domain name located to the left of the -level domain name. For example, "MyName" in MyName.com.

About Windows Live Personalized Domain Name

Microsoft also offers a service to get a personalized domain name for your server.

What Value does TZO Domain Names Provide Beyond the Microsoft Live Option

- Some broadband ISPs block Port 80 which is required for easy remote access. The TZO service allows you to obtain easy remote access even if Port 80 is blocked.
- With the Microsoft domain name, if you don't already have a Microsoft Live account, you'll have to set that up.
- With TZO custom domain name option, you can get your own domain name (e.g., smithfamily.com).
- TZO customer support and troubleshooting

Related Topics

Windows Home Server Console Help

Remote Access

Secure your Server from Intruders

The HP Data Vault is designed as a device that is always on, which comes in handy for accessing files any time your network users need or want them. Additionally, remote access network users to view, add, and delete files on the server from remote locations. If not properly secured, these features present security risks, so you'll want to ensure that unauthorized users can't access your server and the files stored on it.

In this article...

- Wireless Security
- Anti-virus Software
- User Name and Password Protection
- Remote Access Security

Firewall Protection

A firewall is a hardware device or software program that protects your network from unauthorized access. It protects your system from hackers running programs, sending email, and gaining access to your private information. The following types of firewalls protect your network and computers:

Broadband Router Firewall

- Windows Home Server Firewall
- Personal Firewall
- Firewall Ports

Broadband Router Firewall

The HP Data Vault requires a broadband router. Broadband routers allow multiple computers and devices to share an Internet connection using NAT (Network Address Translation) technology. NAT allows all the computers and devices on your network to use a single Internet connection (IP address). NAT acts as a firewall by masking the real IP addresses of your network components—including the HP Data Vault—which keeps them from being seen outside the network.

Some broadband routers implement Stateful Packet Inspection (SPI), which adds enhanced security by examining each packet of information before allowing it into the network. SPI can prevent advanced forms of incursions like Denial of Service attacks.

Windows Home Server Firewall

Windows Home Server includes Windows Firewall, which protects communications between the server and the computers on your network. This firewall is configured to allow remote access. It is not configurable by the user.

Personal Firewall

A personal firewall is a software application that protects an individual computer. Because a personal firewall is behind the broadband firewall, it protects the computer on which it is installed from attacks from other computers within the network.

Firewall Ports

The following table lists the ports used by the server.

Ports used by the server			
Туре	Port numbers	Description	
TCP	80, 443	Standard Web site	
TCP	55000, 56000	internal (subnet only) Web site for Windows Home Server Web services	
TCP	1138	Transport	
TCP	8912	Backup and beacon	
UDP	8912	Backup and beacon	
TCP	2869	UPnP (Universal Plug and Play)	
UDP	1900	UPnP	
TCP	3389	Remote desk	
TCP	4125	Remote access (when enabled)	
TCP	139, 445	File and print sharing	
UDP	137, 138	File and print sharing	
UDP	10284, 10283, 10282, 10281, 10280, 10243	Media connection	

Wireless Security

If your router comes with wireless capability, it has a piece of equipment called a Wireless Access Point (WAP). A WAP can come within an all-in-one-gateway, router, or as a standalone unit. In many cases, WAP's security settings are toggled off by default and you must manually turn on the security settings. If the security settings are toggled off, anyone can access your network and may be able to get into the server and any computer or other device on your network. Firewalls and anti-virus software do not keep intruders out of wireless networks.

Most wireless networking equipment supports two forms of data encryption as security features:

Wired Equivalent Privacy (WEP)

Wi-Fi Protected Access (WPA)

For more information on how to configure the security for your wireless network, see the user's guide that came with your networking equipment.

Anti-virus Software

You should install anti-virus software on all the computers on your network, and configure the software from one of the computers to scan all the shared folders on the server. You might be required to assign (map) drive letters to all your shared folders to enable the anti-virus software to scan the server.



Important

Remember to keep your anti-virus definitions up-to-date.

User Name and Password Protection

User names and passwords help secure the server by requiring authentication for managing the server, accessing shared files, and using remote access.

Server password - during the first install of the HP Data Vault, you are asked to create a **strong password** to allow access for managing your server from the Windows Home Server Console. This password protects the server from unwanted changes.

- **User account passwords** it is recommended that each person who uses your network has a user account so they can access shared folders on the server or, if configured, use remote access.
- Computer passwords by using the same user name and password for logging onto a computer
 as for the server user account, you can avoid having to enter the user name and password when
 accessing a shared folder. Requiring logon to each computer on your network adds a level of
 security.

Remote Access Security

By default Remote Access is turned off.

Using a computer to remotely access the files on your server is protected in several ways:

Security certificate

HTTPS (encrypted Secure Sockets Layer (SSL) protocol)

User account with strong password

Security Certificate

When you install the HP Data Vault software on your network computers, the Windows Home Server Connector software adds the Windows Home Server security certificate to the computer's trusted certificate list. This security certificate helps secure the information that is exchanged between the server and your computer's **Web browser**. The best way to access the files on the server from a computer that is not attached to the network is using a browser with Internet access.

Using remote access to access your server from public or other untrusted computers is not recommended. Doing so can potentially expose your server to malicious software and viruses.

HTTPS

Remote Access is secure because the connection between the remote computer and the server is done over HTTPS. HTTPS uses the encrypted Secure Sockets Layer (SSL) protocol, the same protocol used for banking transactions and retail commerce.

User Account with Strong Password

Remote access does not allow logging on from the Guest or Administrator account. Moreover, user accounts must be enabled for remote access, which requires a strong password to ensure that authentication is as secure as possible.



If you have configured a Domain name to your server, any photos that are placed into the HP Photo Viewer are viewable by any one that finds your domain. The Photos that are found and seen in this manner cannot be deleted or modified. Deleting photos can only be done by users that have successfully logged into the server with a user account and password.

Related Topics

Windows Home Server Console Help

- Configuring your broadband router
- Why can't I connect to some computers?
- Learn more about router configuration
- User Accounts
- Setting User Accounts Password Policy
- Why should logon names match?

Add Shared Folders to Network Places

In this article...

- Add Shared Folders to My Network Places in Windows XP
- Add a Network Place in Windows Vista

Add Shared Folders to My Network Places in Windows XP

1. At the computer, click **Start** and then click **My Computer**.



Note

If you use the classic start menu, click **My Computer** on the desk.

- 2. Under Other Places, click My Network Places.
- 3. Under Network Tasks, click Add a network place.

- 4. In the Add Network Place Wizard, click Next.
- 5. Highlight Choose another network location, and then click Next.
- 6. To add the network place, you have two options:

In the Internet or network address box, enter the path to the shared folder you want to map, and then click Next.

For example, enter \hpstorage\Music

Where **hpstorage** is the default name. If you changed the name of the server, use that name. Music is the shared folder's name.

- Click **Browse** and then use Windows Explorer to locate the network place. The path is usually: Entire Network, Microsoft Windows Network, Workgroup, <Name of Server>.
- 7. After locating the shared folder, click to highlight it, and then click **OK**. The location appears in the **Folder** box.
- 8. Specify whether you want to reconnect every time that you log on to your computer, and then click Finish.

Once you create a network place for one of the shared folders, the other shared folders on the server will be available on My Network Places.

Add a Network Place in Windows Vista



Network discovery must be turned on to add a shared folder to Network places in Windows Vista.

- 1. At the computer, click **Start**, and then click **Network**.
- 2. Under Network Tasks, click Add a network place.
- 3. In the Network Place Wizard, click Next.
- 4. Highlight Choose another network location and then click **Next**.
- 5. To add the network place, you have two options:
 - In the Internet or network address box, enter the path to the shared folder you want to map and then click Next.

For example, enter \hpstorage\Software

Where **hpstorage** is the default name. If you changed the name of the server, use that name. **Software** is shared folder's name.

- Click **Browse** and then use Windows Explorer to locate the network place. The path is usually: Entire Network, Microsoft Windows Network, Workgroup, <Name of Server>.
 - After locating the shared folder, click to highlight it, and then click OK. The location will appear in the Internet or network address box.
- To create a name for the network place, enter a name in the **Type a name for this** network place box, and then click Next.

7. Specify whether you want to reconnect every time that you log on to your computer, and then click **Finish**.

Install HP Add-ins for Windows Home Server

HP add-ins are software programs that extend the functionality of Windows Home Server. The McAfee add-in delivers server side anti-virus protection.

In this article...

- McAffe Anti-virus Protection

McAfee Anti-virus Protection

To receive McAfee Anti-virus protection, you must activate the service. The McAfee anti-virus add-in with Total Protection Service is a comprehensive security management solution that:

- Checks for viruses, spyware, unwanted programs, and other potential threats. Every time a file is
 accessed on your Windows Home Server, Total Protection Service scans the file to make sure it is
 free of viruses and spyware.
- Sends security status information for your server to an administrative web site that is unique to your account, known as the McAfee SecurityCenter. You can visit the SecurityCenter to check detection reports or to set up security rules, known as policies, to define the types of programs that do not pose a security threat.
- Updates itself automatically at regular intervals with the latest versions of components and detection definition (dat) files. This ensures that Total Protection Service is always able to protect you against the latest threats.

Total Protection Service typically operates in the background without any interaction on your part.

To learn more about the McAfee anti-virus add-in, see their online documentation in one of the following languages:

- English—http://us.mcafee.com/root/campaign.asp?cid=39906&l=enu&action=whshelp
- French—http://us.mcafee.com/root/campaign.asp?cid=39906&l=fra&action=whshelp
- **German**—http://us.mcafee.com/root/campaign.asp?cid=39906&l=deu&action=whshelp
- Spanish—http://us.mcafee.com/root/campaign.asp?cid=39906&l=esp&action=whshelp

After you activate McAfee antivirus protection, you receive a 90-day trial period. Internet access is required to receive updates. Subscription is required for updates after seven months.

Install Add-ins

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **Add-ins** in the left menu.
- 4. Click the **Available** tab.
- 5. Click **Install** to install an add-in.
- 6. Click **OK** on the Installation succeeded dialog box to restart the console.

For additional information, see Add-ins in the Windows Home Server help.

Register Your Server

- 1. On a PC, click **Start**, **All Programs**, and then select **HP Data Vault**. On a Mac, click **Open Home Page** on the HP Data Vault menu.
- 2. Click **Registration** to go to https://register.hp.com and register your HP Data Vault. Registering your server ensures that your information is on file with HP if you should need technical support services.


Configure Server Settings

POWER SETTINGS

The Power Management screen allows you to put the Server into a sleep mode to save power.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **HP Data Vault** in the left menu.

4. Click the **Power** tab.

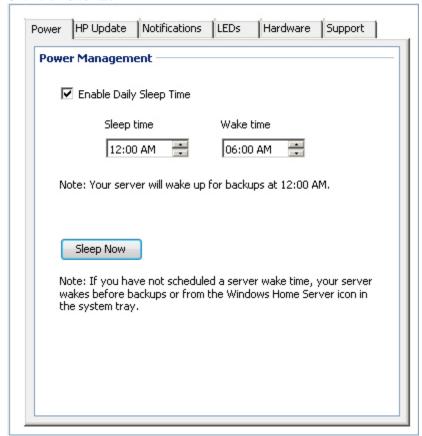

5. Select options.

- Enable Daily Sleep Time—The Enable Daily Sleep Time checkbox allows the Server to be put into a sleep mode and wake up based on times entered into the Sleep time and Wake time fields. The server will wake up for a scheduled backup.
- Sleep Now— Clicking the Sleep Now button puts the Server into sleep mode. The server will wake up for a backup, input from the HP Home Page, or pressing the power button on the Server.
- 6. Click OK.

HP UPDATE SETTINGS

Use the HP Data Vault software update to keep your server and networked computers current with the latest HP software, online help, and new features.


HP Data Vault software update does not update the Microsoft Windows Home Server operating system. For information about updating Windows Home Server, see Configuring Windows Update in the Windows Home Server Console Help.

In this article...

- Configure HP Update
- Version Information

Configure HP Update

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, Select Launch Home Server Console from the Server menu.
- 2. Click **Settings** in the upper right of the Console.
- 3. Select **HP Data Vault** in the left menu and click the **HP Update** tab.

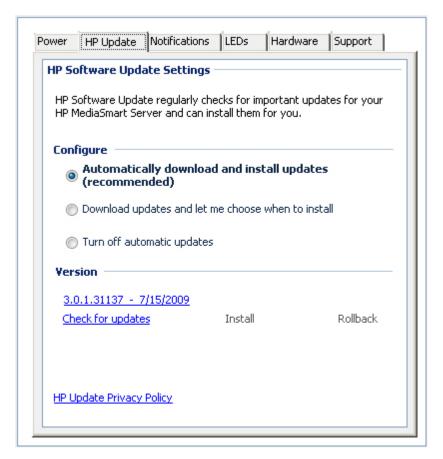

4. The following choices are available in the **Configure** section. HP recommends that you select **Automatically download and install updates**.

Configure HP Software Update Options			
Option	Additional information		
Automatically download and install updates (recommended)	Requires no user action. Downloads and installs updates on the server in the background. If necessary the server will automatically reboot.		
Download updates and let me choose when to install	Requires user action. Your computer notifies you that an update has been downloaded and is ready to install on the server.		

	Additionally, the Install link turns blue under HP Data Vault software updates.
	To update the server after an update is downloaded, click Install under HP Data Vault software updates in the Windows Home Server Console
Turn off automatic updates	Not recommended.
	To get updates with this choice you will have to click Check for updates located in the Version section.

5. Click OK.

Version Information

The following information and options are in the **Version** section of the HP Update dialog.

- The server software version number and date are shown.
- Click **Check for updates** to immediately check for available software updates, regardless of the configuration settings you selected above.
- The **Install** link becomes active when an update has been downloaded, but not installed. Click **Install** to run the server update.
- The **Rollback** link becomes active when a software update has been installed. Use this link to uninstall the update on the server and revert to the previous server software version.



Important


Clicking **Install** or **Rollback** only makes changes to the server software. Each networked computer still needs to be updated or rolled back so that the server and client computers are running the same version of software. See <u>Updating and Rolling Back Client PCs</u> or <u>Updating and Rolling Back Mac Clients</u> for more information.

NOTIFICATION SETTINGS

The Notifications screen gives you control of which notifications will show up as messages in your system tray.

- 1. At the computer, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **HP Data Vault** in the left menu.

4. Click the **Notifications** tab.

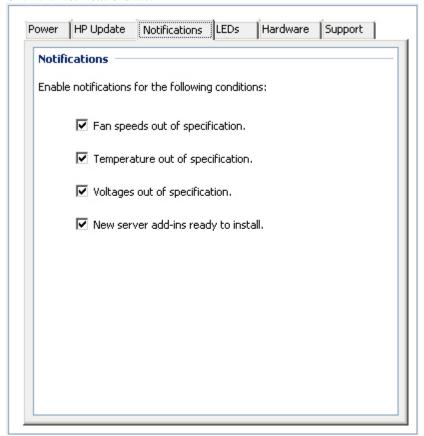

5. Select options.

The following is an example of a notification message.




6. Click OK.

LED SETTINGS

The LED screen gives you control of two different LED behaviors.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select Launch Home Server Console from the Server menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **HP Data Vault** in the left menu.


4. Click the **LEDs** tab.

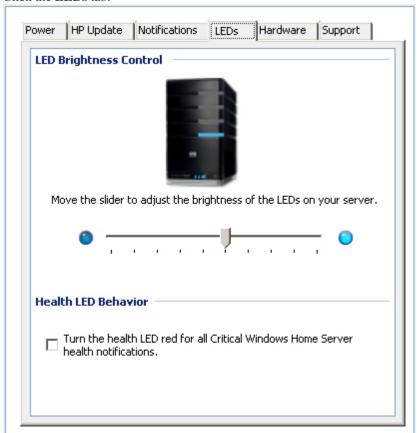

- 5. Select options.
 - **LED brightness control**—The LED brightness control allows you to adjust the brightness of all LEDs on the front panel of the Server. Grab the slider and move for a brighter or dimmer LED.
 - **Health LED Behavior**—The **Health LED Behavior** checkbox allows for the Server's health LED to show red you for any Critical Windows Home Server health notifications.
- 6. Click OK.

HARDWARE INFORMATION

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **HP Data Vault** in the left menu.
- 4. Click the **Hardware** tab.
 Information presented on this screen is gathered from various sensors within the Server Solution.

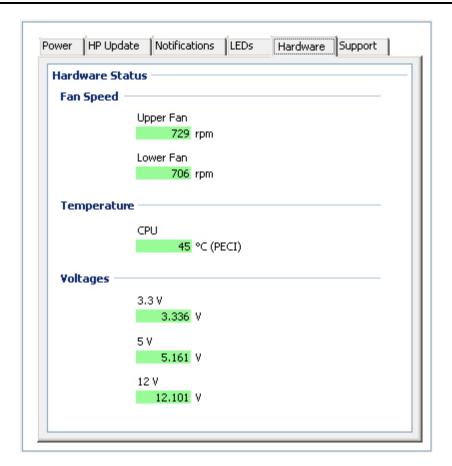


Hardware Status Levels					
	Green	Yellow	Red		
Fan Speed	Greater than or equal to 800 rpm	Between 600 rmp and 800 rpm	Less than 600 rpm		
Temperature (PECI)	Less than 85	Between 85 and 100	Greater than or equal to 100		
3.3V	Between 3.069V and 3.531V	7-10% greater or lesser than 3.3V	More than 10% greater or lesser than 3.3V		
5.0V	Between 4.650V and 5.350V	7-10% greater or lesser than 5.0V	More than 10% greater or lesser than 5.0V		
12.0V	Between 10.200V and 13.800V	15-20% greater or lesser than 12.0 V	More than 20% greater or lesser than 12.0V		

5. Click **OK**.

SUPPORT INFORMATION

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **HP Data Vault** in the left menu.
- 4. Click the **Support** tab.

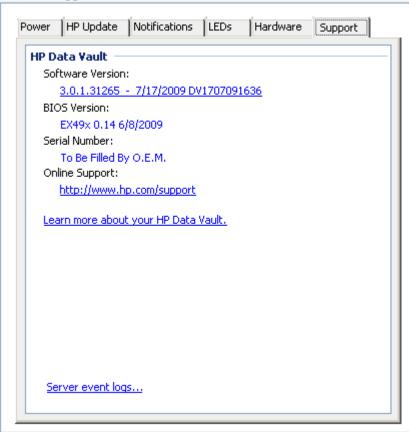

5. Click OK.

GETTING HELP FOR USING YOUR SERVER

The HP Data Vault enables multiple computers on a network to enjoy their digital experiences when and where they want. The HP Data Vault includes remote access to files, automatic computer backups, virtually unlimited storage expandability, and media streaming to the entertainment center.


Help is available from most windows on the HP Data Vault.

In this article...

- Windows Home Server Console Help

HP Server Help

HP Server Help includes the types of help shown in the following table. Additionally, the online User's Guide includes references to ics in the Windows Home Server Help.

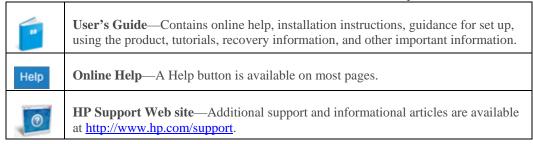

Windows Home Server Console Help

Some tasks, such as creating users and using shared folders, are done through the Windows Home Server Console.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Help** in the upper right corner when you are not on the HP Data Vault tab. The help button is indicated by a icon. Or click **Help** buttons on Microsoft dialog boxes in the Console.

Windows Home Server Console Help			
Main Topics	Description		
Welcome to the Windows Home Server Console	Learn what the Windows Home Server tray icon colors mean. This ic also provides an overview of adding user accounts, organizing files, configuring backups, and customizing server settings.		
Computers & Backup	Explains how backups work and how to configure, restore, and troubleshoot backups.		
User Accounts	How to add users to your server.		
Shared Folders	Adding, opening, removing, viewing the history of shared folders, and using folder duplication .		
Server Storage	View, add, repair, and remove hard drives from total storage.		
Network Health	What health notifications mean and what to do about them.		
Windows Home Server Settings	How to configure backups, passwords, media sharing, remote access, add-ins, resources, and more.		

Windows Home Server Console Help			
Main Topics	Description		
Remote Access	How to set up the server to easily access your files on your server using an Internet connection from a remote location.		

Chapter 4. HP Media Collector

ABOUT HP MEDIA COLLECTOR

The HP Media Collector takes media files from the computers on your network and copies them to your HP Data Vault. This allows you to maintain a comprehensive library of music, photos, and videos in one location in your home. You can stream media to your television and stereo. You can share music with iTunes applications on other computers in your network. You can even stream media to the Internet where any computer with a **Web browser** can play it.



Note

Media Collector copies only media files. It does not collect other file types, such as Microsoft Office documents.

In this article...

- **HP Media Collector Default Settings**
- Organization Options and Defaults
- Ignored Directories and Skipped Files
- Supported File Formats
- Media File Duplication

Media Collection

HP Media Collector scans your network computers for music, image, and video files and it copies them to the server. You can choose how, where, and when Media Collector gathers your media. For example:

- You can tell Media Collector to look for videos in all folders or only in your My Videos folders.
- You can tell Media Collector to look for music and not to look for photos and video.
- You can tell Media Collector to gather photos from your computer and not from your children's computers.

Schedule

Media Collector scans the computers in your network on an automatic schedule that you choose. After you enable media collection and set the schedule, Media Collector collects new media files when you add them to your computers.

Media Collection Order

When all media types are enabled for collection, Media Collector collects photo files first; then music files, and it takes video files last.

HP Media Collector Default Settings

Media Collector is disabled by default. Before Media Collector can begin to copy media to your HP Data Vault, you must enable the media types you want to collect.

Media Collector copies media files only from computers that are installed as clients on your Windows Home Server network. For example, if you have a computer that you use only for gaming and you have not made it part of your Windows Home Server network, this computer is not available for Media Collection.

Organization Options and Defaults

You can tell HP Media Collector how you want to organize your media on your HP Data Vault. For example, you can organize media in these ways:

Photos

- By date taken, or existing file structure
- Default is existing file structure

Music

- By Artist/Album or existing file structure
- Default is Artist/Album

Videos

• By existing file structure

Ignored Directories and Skipped Files

HP Media Collector skips picture files that are less than 45 K in size. Media Collector ignores some directories for each media. See the list below:

Photos

temporary Internet files, My Music folder, windows system directories

Music

temporary Internet files, windows system directories

Videos

temporary Internet files, windows system directories, mov files located under My Pictures, Pictures

Supported File Formats

The files and types listed below are compatible for Media Collection:

jpg, gif, tif, pct, mov files located under My Pictures, Pictures

Music

mp3, wma, m4a, aac, wav, playlists (m3u, wpl), album art

Videos

AVI, MOV, m4v, MPEG, MP2, WMV, FLV, DIVX, DVR-MS, M2TS, VOB file collections

Media File Duplication



When HP Media Collector copies media files from all your computers and users, it attempts to reduce duplicates. For example, if two users have the same media file, Media Collector copies only one file to the Server.

CONFIGURING MEDIA COLLECTOR

Configuring Media Collector General Settings

- 1. At the PC, double-click the Windows Home Server icon with in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu
- 2. Click **Media** and then **HP Media Collector** in the left menu.
- 3. Click Configuration. The HP Media Collector General Settings panel opens.
- 4. On General Settings, move available computers to enabled for collection. When enabled, Media Collector automatically scans the enabled for collection computers for media. Media Collector does not scan computers in the available computers box. Move a computer out of the enabled for collection box and into available computers if you want to disable media collection for that computer.

Configuring Media Collector for Photos

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select Launch Home Server Console from the Server menu
- 2. Click **Media** and then **HP Media Collector** in the left menu.

3. Click **Configuration**.

The HP Media Collector General Settings panel opens.

4. Click **Photo Settings** in the left menu.


You can configure these settings in this tab:

- Photo Collection Status—Enable or Disable photo collection
- Photo Organization—Organize by date or by PC folder structure
- Photo Source—Double-click a computer name to select either My Pictures folders or All Folders as the source.



Note


If you select **All folders**, Media Collector may collect graphics and images from your computer that are not a part of your photo collection, such as graphics associated with software applications.

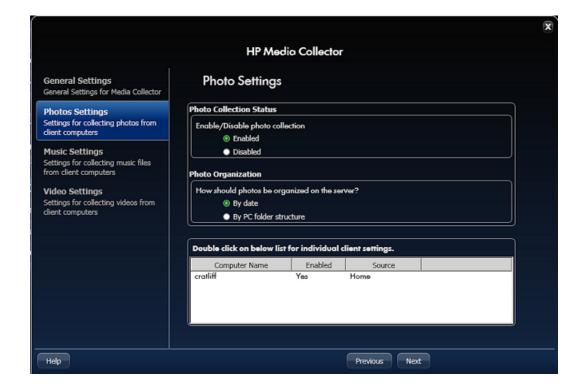

Example of Photos Collected by Date and by PC Folder Structure

First of all, it's helpful to understand the underlying data used to build the two examples below. In this case, the files that are being shown are based on two groups of photos. One group is located under user Susan's home Pictures folder, with a number of uploaded photos and a single named photo (Beach_sunrise.jpg). This group of photos could be on any particular computer in the network (or even split across two computers). The second group of photos is on a particular computer (LapDad), but not under a user's home Pictures folder. In this case, it's under D:\Photo Collection\... Also, note that all of the photos on LapDad are organized and named with meaningful names, including a copy of the Beach_sunrise.jpg file that also exists on Susan's group of files.

The photo example shows two panes with different file/folder organizations for the same group of sample photos.

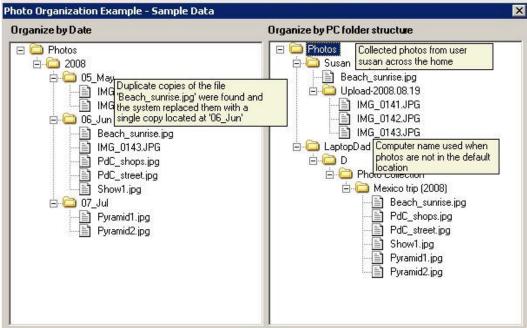

Things to Consider			
Organize by Date	Organize by PC Folder Structure		
Uses Date Picture Taken tag or Modified Date to organize files	Sorts files by user or source computer		
Good for organizing large groups of unsorted image files	Good for maintaining original photo sorting		
Reduces duplication of photos			

On the left, the files are organized by date

There are two things of interest

- 1. The photos from the two groups are now grouped together based on date, and
- 2. The one photo that was duplicated between the two groups is only present once.

The single grouping is what the **Organize by Date** option accomplishes – it uses the **Date Picture Taken** tag within the file to place the photos by date. If this is not set, the system will use the file property **Modified Date** to place the photo. Be aware that this model ignores your folder structure, so it's most useful in the case where you don't have a meaningful folder structure (e.g. unsorted groups of folders or groups based on the camera software's defaults). Regarding the duplicate file, only one copy is kept as shown in the example. If two duplicate files are different, the newest one is retained on the server.

In contrast, the right pane is organized by PC folder structure

If photos are found under a user's home Pictures folder, then they will be grouped just under the user's name with the underlying folder organization. This still may include some simplification in that photos for user Susan on computer1 and user Susan on computer2 will be coalesced into a single group. This may result in some duplicate photos being represented once.

On the other hand, if the photos were found on a computer in a folder other than a user's home Pictures folder, they will be grouped under the computer name, with a path showing their placement on the computer. In general, the "by folder" organization is most helpful if you have already organized your photos and don't want to lose your folder structure.

Configuring Media Collector for Music


To Configure Media Collector for Music, follow the steps below:

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **HP Media Collector** in the left menu.
- 3. Click **Configuration**.
 The HP Media Collector General Settings panel opens.
- 4. Click **Music Settings** in the left menu. You can configure these settings in this tab:
 - Music Collection Status—Enable or Disable music collection
 - Music Organization—Organize by Artist/Album or by PC folder structure
 - Music Source—Double-click a computer name to select either My Music folders, iTunes libraries, Windows Media Player libraries, or All Folders as the source.



Note


If you select **All folders**, Media Collector may collect sound files from your computer that are not a part of your music collection, such as sound files that are associated with software applications.

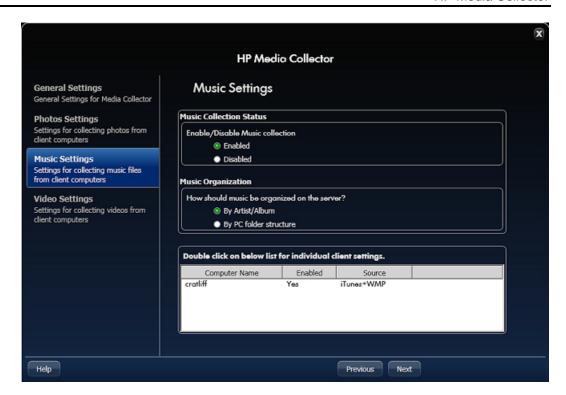

Example of Music Collected by Artist/Album and by PC Folder Structure

We'll start by looking at the underlying data used to build the two examples below. The files that are shown are based on two music collections. One group is located under user Susan's home Music folder, with some songs organized by album as well as some that are included within her iTunes library. This music could be on any particular computer in the network, or even split across two computers. The second group of music files is on a particular computer (LapDad), but not under a user's home Music folder. In this case, it's under D:\Misc Music\... Notice that these files are not organized by album name and they include a duplicate song (U2's Bullet the Blue Sky).

The music example shows two panes with different file/folder organizations for the same group of music files.

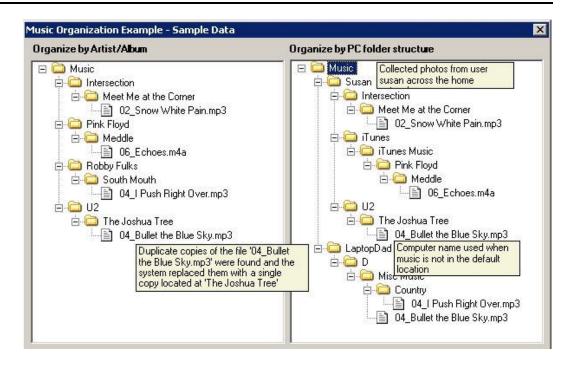

Things to Consider			
Organize by Artist/Album	Organize by PC Folder Structure		
Uses music file tags to organize files	Sorts files by user or source computer		
Reduces duplication of files on the server	Good for maintaining original music sorting		

On the left, the files are organized by Artist/Album

There are two things of interest

- 1. The two groups of music files are now organized uniformly, and
- 2. The one song that was duplicated between the two groups is only present once.

The uniform organization is what the **Organize by Artist/Album** option accomplishes – it uses the **Album** and **Artist** tags within the file to place the files. If a music file doesn't have both of these tags set, it will be placed based on its location on the user's computer. This organizational approach is useful for organizing multiple music collections into a single collection and reducing file duplication. This means that browsing the server music share for music streaming will be more streamlined without duplicate file entries. The example illustrates duplicate file handling by pointing out the single file entry on the left pane that was duplicated on the right. If the two duplicate files are different, the newest one is retained on the server.

In contrast, the right pane is organized by PC folder structure

If music is found under a user's home Music folder, it will be grouped under the user's name with the underlying folder organization. This still may include some simplification in that music for user Susan on computer1 and user Susan on computer2 will be coalesced into a single group. This may result in some duplicate songs being represented once.

On the other hand, if the music was found on a computer in a folder other than your home Music folder, it will be grouped under the computer name, with a path showing their placement on the computer. This type of organization is most helpful if you have organized your music in a special way and doesn't want to lose this folder structure or if multiple users have different quality versions of the music and you want to maintain the multiple copies of songs.

Configure Media Collector for Videos


To configure Media Collector for Videos, follow the steps below:

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **HP Media Collector** in the left menu.
- 3. Click **Configuration**.
 The HP Media Collector General Settings panel opens.
- 4. Click **Video Settings** in the left menu. You can configure these settings in this tab:
 - Video Collection Status—Enable or Disable photo collection
 - Video Source—Double-click a computer name to select either My Pictures folders or All Folders as the source.



Note

If you select **All folders**, Media Collector may collect video files from your computer that are not a part of your video collection, such as videos that are associated with software applications.

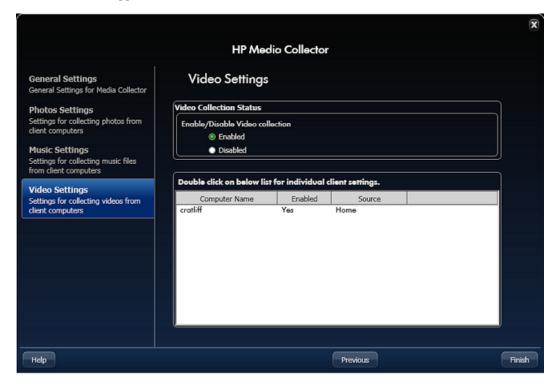

MEDIA COLLECTOR STATUS

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **HP Media Collector** in the left menu.
- 3. View the following information.
 - Client Name—The name of the computer where media is being collected.
 - Connection Status—The status will be Connected if the server can find the computer on the network.
 - Files Copied—The number of files that have been copied to the server. Click Files Copied to view details. Media Collector keeps track of all of the files that have been copied to the server. Click the Close button in the upper right corner to return to the status page.
 - **Files Pending**—The number of files that are waiting to be copied to the server.
 - **Files Not Needed**—The number of files that were ignored by Media Collector and not copied to the server. Click **Files Not Needed** to view details. Select a file in the list to view the reason it was not copied to the server. Click the **Close** button in the upper right corner to return to the status page.
- 4. Click Reset Database to clear the counts and history for **Files Copied**, **Files Pending**, and **Files Not Needed** and restart at zero.

HP Media Collector Troubleshooting

HP Media Collector is used by the HP Data Vault to copy music, photos, and videos of users that have accounts on the HP Data Vault.

There are some common causes for the HP Media Collector to appear not to work.

In this article...

- No Music, Photos, or Videos are Being Collected
- The Server may not have refreshed yet
- Media Type is not Enabled for Collection
- Use Home Computer is not Included as a Scanned Computer

No Music, Photos, or Videos are Being Collected

- The aggregation application may not be accessing the desired media files on the client computer
- The server may be down or unreachable
- Services may not be running on the client computer

A Firewall may be Blocking Applications or Port 21 TCP/Outbound

The aggregation application may not be accessing the desired media files on the client computer

Media Collector runs with the permissions of the logged on user, if the material to be aggregated is in a folder that the user doesn't have permission to access, then that folder's contents can't be collected when this user is logged in.

The server may be down or unreachable

The client computer cannot access the shares or server console. The server may be down, so aggregation cannot occur. Restart the server.

Services may not be running on the client computer

Reboot the client computer.

A Firewall may be Blocking Applications or Port 21 TCP/Outbound

If Media Collector is not collecting music, photos, or videos and you use a third party firewall, add a firewall exception for port 21 TCP/outbound within the local subnet. Consult your software's documentation for details on how to do this. For additional information, see <u>Update Your Firewall's Trusted Program List</u>.

The Server may not have refreshed yet


Click the **HP Data Vault** tab on the Windows Home Server Console and your media files should now be listed on the Media Collector status page.

Media Type is not Enabled for Collection

The HP Data Vault may not be set up to scan for photos, music, or videos. Check your HP Media Collector settings to make sure the media type is configured for collection.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click Settings.
- 3. Click **Media Collector** in the left menu of the Windows Home Server Settings dialog.

4. Click the **Photos**, **Music**, or **Videos** tab.

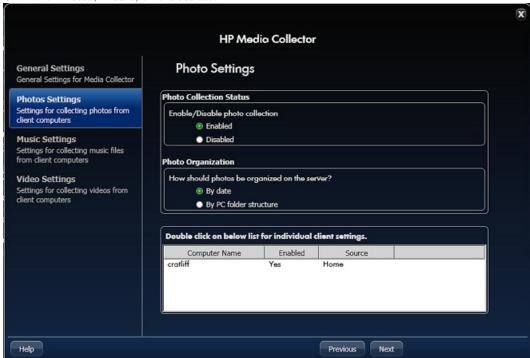


- 5. Check that the media collection status is set to **Enabled**.
- 6. Click OK.

Home Computer is not Included as a Scanned Computer

The HP Data Vault may not be set up to scan one of your network computers. Check your HP Media Collector settings to make sure all of your home computers are included.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings**.
- 3. Click **Media Collector** in the left menu of the Windows Home Server Settings dialog.

4. On the **General Settings** tab, check that all of the necessary computers are **Included** in the **Scanned Computers** list.

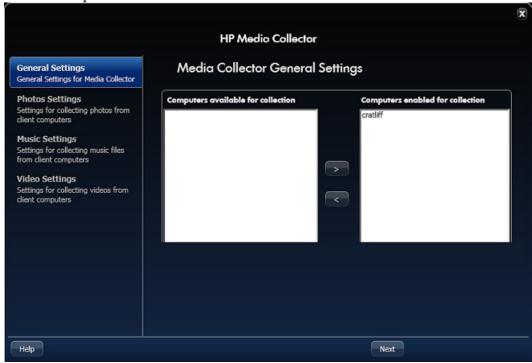

5. Click **OK**.

Chapter 5. HP Video Converter

CONFIGURE VIDEO CONVERTER

The HP Video Converter converts most popular video formats into a file format that can be played on a variety of devices like notebook PCs, xBox, Playstation, and iPhone. In some cases, you will want to convert videos because the original video format cannot be played by the video player or device you are trying to use. In other cases, video conversion can be used to reduce the resolution and file size so you experience improved performance during video streaming.

In this article...

- About Video Converter
- Configure Video Converter
- Select Video Converter Profile

- Enable Video Converter

About Video Converter

The Video Converter monitors selected **shared folders** and attempts to perform video conversion (also known as transcoding) on files with common video file formats. The video converter also supports DVD file system conversion, for DVD files that are commonly used in camcorders.

Videos are converted to a single file format: an MPEG-4 video file using an H.264 video codec and AAC stereo audio codec. Check the video player documentation for support of this video format. At the time of this writing, some devices supporting this format included:

- Microsoft xBox 360
- Sony PlayStation 3
- Sony PlayStation Portable
- Apple iPod (newer iPods with video support)
- Apple iPhone
- Microsoft Zune



Note

The Video Converter will not transcode copy protected DVDs or electronic videos with **Digital** Rights Management (DRM) protection.

Configure Video Converter

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **Video Converter** in the left menu.
- 3. Click Configure.

The HP Video Converter Settings panel opens.

Select Video Converter Profile


Perform one of the following options.

- **Edit**—Select a profile to edit and click **Next**.
- Create—Click Create to add a new profile to the list. Name the profile and select settings to use
 as a basis for the profile depending on how the converted video files will be used.
- **Delete**—Select a profile and click **Delete** to remove it from the list.

There are two default profiles.

• **Full**—Full resolution keeps the source video's screen resolution, and basically creates an output file with the new format for the provided input. Video and audio quality should be very similar to the source material for Full resolution videos. You may notice some differences between the original and Full resolution output, but these differences are minimal in most situations.


Mobile—The Mobile resolution creates a video that is suitable for mobile devices and remote video streaming (the video will be no larger than QVGA: 320w x 240h). This is to make support of mobile devices easier and to provide videos suitable for remote media streaming.

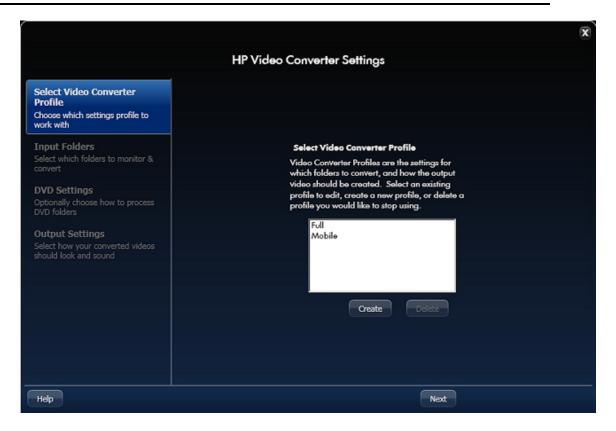

Input Folders

Select a shared folder where you will place the original videos that you want to convert. The HP Video Converter monitors this folder for changes and automatically converts videos that are placed there. After the video is converted, it is put in the **Converted Videos** folder.


You can select any number of folders or subfolders to monitor. If you select a folder that has subfolders, all of the folders within the selected folder will be monitored. For example, if you select the Videos shared folder and Videos has a subfolder named FamilyMovies, then the Videos and FamilyMovies folders will be monitored. If you only want the FamilyMovies folder to be monitored, select that folder and do not select Videos.

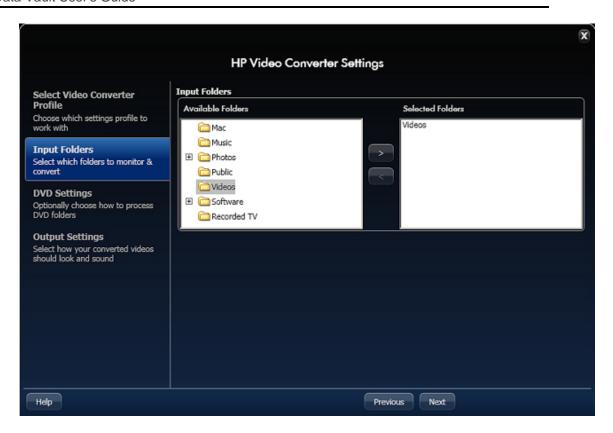

DVD Settings

The DVD Settings sections applies to DVD folders, which must be named VIDEO_TS. This settings allows you to customize how titles within your DVDs should be treated. All DVDs contain one or more titles, with each title being made up of one or more chapters. Each DVD can be authored slightly differently, and you may want to consult your DVD creation program or camcorder documentation for more information on how titles are created and structured. As explained within the DVD Settings screen, these settings allow you to change how your DVD is read during conversion.

- Break apart each title (RECOMMENDED) This setting takes each title within your DVD, and creates a new output file. This option is recommended because it provides a good balance between making sure all of your DVD content is converted but also breaking up the content into smaller files.
- Use the single longest title This setting finds the longest duration title within the DVD and ONLY convert this title. The title number will still be used for the output file name, so if the 3rd title is the longest duration title your output file might be "My DVD Title 3.mp4". This setting works well when you are comfortable that you only want the longest title 100% of the time. This assumption can be problematic, however, as frequently you may find DVDs with a couple of longer titles of similar length and this setting prevents you from getting these other longer titles.
- Append all titles This setting is for when you are comfortable that you want the entire DVD appended into a single output file. If you have DVDs with a relatively small amount of content or your DVD creation process creates many shorter titles (like some camcorders sometimes may), then this approach can be the best option.

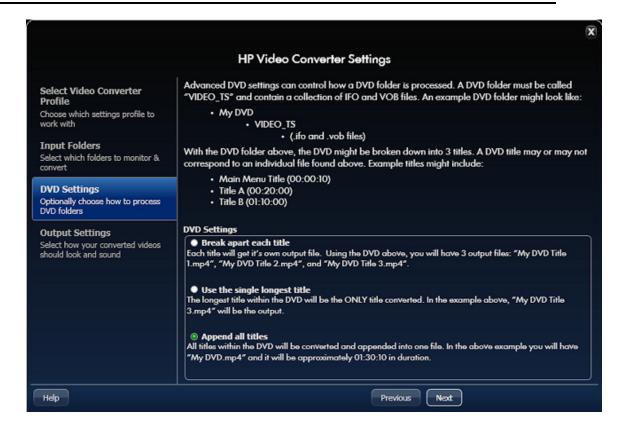

Output Settings

- Select Output Preset Settings—Some common uses for converted videos have been anticipated and are listed here. When you select one of the presets, the rest of the output settings are selected for you. You may choose to accept these settings as they are or change them to suite your individual needs. If you do not like the changes you made, you can always return to a preset setting by clicking one of these options.
- Output Resolution View—This area displays your selected video dimensions on of some
 common video resolutions as a reference point. As you change your video dimensions in the
 advanced settings, the Output Resolution View dynamically updates to reflect your changes.
- **Required Bandwidth**—This gauge estimates the network speed required to view the video after it is converted. It is calculated by taking the total bit rate (audio + video), and then approximating the type of network needed to view the converted video.

Why is my total bit rate placed in such a high category?

You may notice that your total bit rate may be low in comparison to the network speed. For example, a 6 mb/s video will likely be on the upper edge of a WiFi G network (which should support 54 mb/s). This is due to a couple of different factors:

• The total bit rate is an average, but the maximum bit rate can be up to 3 or 4 times the average bit rate. This gauge tries to provide extra room in its estimates for this variation.

• Network speeds seldom work 100% efficiently. For example, a WiFi G network under good conditions can frequently max throughput out at around 20-30 mb/s even if the reported connected speed is 54 mb/s.


Advanced Output Controls

• Screen Size—The video width and height control the size of the video. If you place "0" values for both height and width, the source video's dimensions will be used for the output file. If you choose a specific resolution, you should not feel obligated to create output videos that exactly match your desired viewing device. For example, if you have a TV that supports 1080p there is no strict rule that states you should convert videos to match this resolution.

Videos are upscaled when the output resolution is greater than the source material; however, the quality of this upscaled copy varies a great deal depending upon the source material. That is to say, a source video that is of poor quality or is very small in display resolution seldom looks pleasant when upscaled to a 1080p screen size. As rule of thumb, if the source material is of good quality, you should be able to nearly double the display resolution and only see minor issues.

Also of note is that some smaller devices only support a limited display resolution. You might need to check device documentation for supported video resolutions.

- Video Frame Rate—The video frame rate effects how smooth a video plays and how good the video quality is within each frame. Choosing a higher frame rate will create a smoother video, but may increase the need for a higher video bit rate. Conversely, a lower frame rate can create a more jumpy video, but each frame may look more crisp and you might be able to use a lower video bit rate setting.
- Video Bit Rate—The video bit rate controls the average amount of storage dedicated for a video as it plays. A higher bit rate can cause network problems, but a low bit rate can create low quality videos. Staying within the recommended green area may help you determine the best video bit rate to use. The green area is based on the size of your output video.

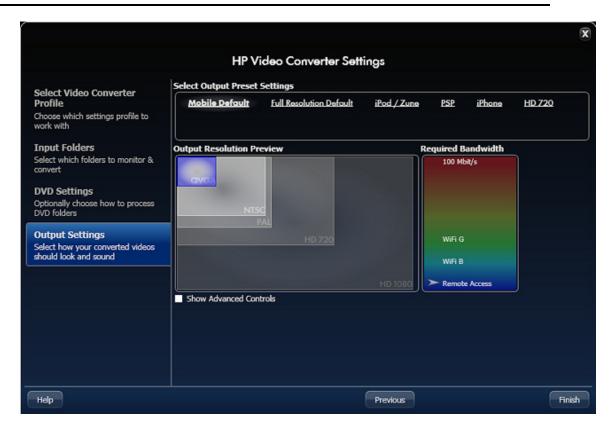

Enable Video Converter

After you click **Finish** on the HP Video Converter Settings, you are returned to the Converter Status page. Click **Enable Video Converter** to begin converting videos.

VIDEO CONVERTER STATUS

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **Video Converter** in the left menu.
- 3. Select options on the Video Converter Status page.
 - Enable Video Converter—Check to turn Video Converter on. Clear to turn it off. If you turn Video Converter off after it has been in use, it will remember videos that have already been converted or canceled. Videos that were in progress or waiting to be converted will be removed from the queue.
 - Sort by—Choose an option from the list to sort converted videos.
 - Show All Converted Videos—Check this box to display your entire video converter
 history. Clear this check box to list videos that are coping to your source folder, currently
 being converted, or are in the queue to be converted.

The buttons at the bottom of the page only apply to selected videos on the status page. To select multiple continuous videos, click the video and **Shift+Click** the bottom one. To select random videos, hold down the **Ctrl** key and click each video individually. Buttons are active when they can be applied to the entire selection.

- **Re-convert**—If the video conversion fails or is interrupted, select the video in the status list and click **Re-convert** to attempt the conversion again.
- Cancel—Click Cancel to remove a video from the queue to be converted. If you later decide to convert a canceled video, you can see it by checking Show All Converted Videos. Then, select the canceled video and click Re-convert.
- **Resume**—Once the Video Converter is paused, you can restart it by clicking **Resume**. The Video Converter will continue converting the video that it was last working on.
- Pause—You can pause the Video Converter when you select a video that is in progress and click Pause. Use this option when you want to temporarily s Video Converter but plan to resume it later.

TROUBLESHOOTING AND FAQS

Examples of Video Converter Profiles

This page gives a couple of examples of Video Converter profiles and their particular uses.

In this article...

- ❖ Create a Profile to Use When You Want to Stream Videos to an iPhone using iStream
- & Create a Profile to Use When You Want to Copy Converted Videod to a Mobile Device

<u>Create a Profile to Use When You Want to Stream Videos to an</u> iPhone using iStream

The HP MediaSmart Server iStream is an application that allows you to stream photos, music, and videos stored on your HP Data Vault to your iPhone or iPod touch from anywhere that you have an Internet connection. iStream can be downloaded for free from the Apple App Store.

When using iStream, the video is on your server and it is streamed to your iPhone over an Internet connection. The quality of the Internet connection can effect playback of the video. iStream works best on high speed connections like 3G and WiFi. So, you want to create a profile that creates a converted video with a high enough resolution that the video is enjoyable to watch and a small enough file size so that the streams smoothly to your iPhone.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Select the **HP Data Vault** tab.
- 3. Click **Media** and then **Video Converter** in the left menu.
- 4. Click **Configure**.

- 5. On the **Select Video Converter Profile** page, click **Mobile** and then **Next**.
- 6. On the **Input Folders** page, select **Videos** and click **Next**.

 This assumes you will place all of your original videos that you want to convert in the videos folder or a subfolder within Videos, and that you want to convert all of your videos using the mobile profile.

If you want to convert a some of your videos for mobile streaming but not all of them, you could create a subfolder within Videos called Mobile (\\Videos\Mobile) and select Mobile as your input folder instead of Videos.

- 7. On the DVD Settings page, select Break apart each title and click Next. This setting takes each title within your DVD, and creates a new output file. This option is recommended because it converts all of your DVD content and it breaks up the content into smaller files based on the DVD titles. When you watch the video using iStream, you will stream only the converted video title that contains the movie, and not other artifacts like menus or movie previews.
- 8. On the **Output Settings** page, verify that **Mobile Default** is selected and click **Finish**. The HP Video Converter will monitor the Videos input folder, or other folder that you selected, for new videos and convert them using the mobile settings. The final videos are placed in the Converted Videos shared folder and are ready to be streamed using iStream. These settings are also suggested for streaming videos to a Mac or PC using the HP Media Streamer.

<u>Create a Profile to Use When You Want to Copy Converted Videos</u> to a Mobile Device

You will have different considerations if you want to copy a video to a mobile device such as a Microsoft Zune or iPod Touch. In this case, the video will be on your mobile device so you do not have to worry about Internet connection speeds that you have when streaming videos. This often means that the video resolution can be higher than it is when streaming videos. However, you will still want to keep the file size relatively small so the video does not consume all of the space on your mobile device.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Select the **HP Data Vault** tab.
- 3. Click **Media** and then **Video Converter** in the left menu.
- 4. Click **Configure**.
- 5. On the **Select Video Converter Profile** page, click **Create**. A dialog box opens.
- 6. Give the profile a Name, such as My iPod, and select iPod/Zune from the drop down list.
- 7. Click **Create** to return to the **Select Video Converter Profile** page.
- 8. Select the profile you just created from the list and click **Next**.
- 9. On the **Input Folders** page, select **Videos** and click **Next**.

 Assuming you will place all of your original videos that you want to convert in the videos folder

or a subfolder within Videos, and that you want to convert all of your videos using this profile.

If you want to convert a some of your videos using this profile but not all of them, you could create a subfolder within Videos called My iPod (\\Videos\My iPod) and select My iPod as your input folder instead of Videos.

- 10. On the **DVD Settings** page, select **Break apart each title** and click **Next**. Since this setting converts each title on your DVD as a separate output file, you will only need to copy the converted video file to your mobile device that contains the movie and not other content like menus or movie previews.
- 11. On the **Output Settings** page, verify that **iPod/Zune** is selected and click **Finish**. The HP Video Converter will monitor the Videos input folder, or other folder that you selected, for new videos and convert them using the iPod/Zune settings. The final videos are placed in the Converted Videos shared folder and are ready to be copied to your mobile device.

Using Media Collector with Video Converter

If you have videos on multiple network computers and you want to convert them using Video Converter, it may save you time to move the videos to the server using Media Collector. You may find this scenario ideal if you have little to moderate video content on your network computers. If you have a lot of video content on your network computers, you may want to consider the Video Converter profile settings you are using and how much time will be required to convert the videos and how much disk space will they take up on the server.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- If you have not already, create user accounts on your server.
 User accounts give network computers a way to authenticate with the server during media collection. See Enable Guest Account and Set up User Accounts.
- Configure Media Collector to copy all videos on your network computers to the videos shared folder.
 See Configuring Media Collector General Settings and Configuring Media Collector for Videos.
- 4. Click **Media** and then **Video Converter** in the left menu.
- 5. Click **Configure** and create a Video Converter profile.
- 6. While creating the profile, select the **Videos** shared folder as your input folder since that is where Media Collector places videos.

For more information on creating profiles, see Configure Video Converter.

Depending on the number of videos you are converting and their size, the HP Video Converter may take a very long time to convert files.

Converting Non-Copy Protected DVDs

Video content is becoming more and more popular, whether you're recording your last vacation or creating a YouTube video. If you used software to create a DVD, you can use the HP Video

Converter to transcode the DVD into a format suitable to streaming to many devices on your network, in your home, or mobile devices.

- 1. Insert the DVD in your computer's DVD-ROM drive.
- 2. Navigate to a folder on your server that is enabled for video conversion.

 This is typically your videos shared folder at \hpstorage\videos. If you changed the name of your server during the installation, the path will be different. Navigate to \\< server name>\videos.
- 3. Create a folder for the DVD content.
- 4. Navigate to the DVD-ROM in Windows Explorer and copy the **Video_TS** folder to the folder you created on your server.

In the example, the full path on the server is \hpstorage\videos\MyDVD\Video_TS.



5. When the HP Video Converter scans the Videos shared folder it will transcode the DVD content and put it in a subfolder within \hpstorage\converted videos.

Giving Users Access to the Converted Videos Folder

You may want to give users on your network access to the Converted Videos folder so they can see what is in the folder or so they can add, delete, or change videos from the folder. By default, users have no access to the Converted Videos folder. Users that do not have access to the Converted Videos folder are still able to stream content from the folder.

Complete the following steps to change user permissions.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- Click the User Accounts tab at the of the page. If the User Accounts Setup dialog displays click OK.
- 3. Double-click a user account to open the **Properties** dialog.
- 4. Select the **Shared Folder Access** tab.
- 5. Select an access level for the user—Full, Read, or None.
 - Full—The user will be able to create, change, or delete any files in the folder.
 - **Read**—The user will only be able to read files in the folder. They cannot create, change, or delete files in the folder.
 - None—The user will not be able to access any files in the folder.
- 6. Click **OK**.

Enabling Converted Videos for TwonkyMedia

The Converted Videos folder is enabled for TwonkyMedia by default. If the Converted Videos folder is disabled, your mobile devices and in-house media streaming will not see the converted videos. Complete the following steps to enable the Converted Videos folder for TwonkyMedia.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right of the Console.
- 3. Click **TwonkyMedia** in the left menu of the Settings dialog.

 The right pane shows current TwonkyMedia status for Media Sharing Folders, Media Receivers, and Maintenance.
- 4. If Converted Videos is not listed under Media Sharing Folders, click Add.
- 5. Select the **Converted Videos** folder and click **Videos** for the Content Type.
- 6. Click **OK** to return to the Settings dialog.
 Converted Videos should be listed in the Settings dialog with a green light next to it. If the light is not green, double-click Converted Videos.
- 7. Click **OK** to close the Setting dialog.

Supported Video Formats

The following table lists several popular video formats supported by the Video Converter. This list is not comprehensive. For a comprehensive list, see http://www.hp.com/support. A list of unsupported formats is also included.

Supported Video Formats		
Container	Video	Audio
AVI	DivX (4,5,6)	mp3
AVI	DivX (4,5,6)	aac
AVI	XviD	mp3
AVI	XviD	aac
WMV	WMV, VC1	WMA
MPG	MPEG-1, MPEG-2	mp2, PCM, AC3
AVI	MJPEG	ADPCM, PCM
VOB	MPEG-2	AC3, ADPCM, PCM
MOV	MJPEG-A , B	PCM

MP4,M4V	AVC (h264)	AAC
MP4, M4V	MPEG-4	AAC
DVR-MS	MPEG-2	AC3

Unsupported Video Formats			
Container	Video	Audio	
WTV	MPEG-1, 2, 4; WMV, VC1		
MOV	AVC (h264)	AAC and others	
Multiple other containers	AVC (h264)		
MKV	AVC (h264)		
MTS	AVC (h264)		
No Support for ISO			

To determine if your video is compatible with Video Converter, check the following

- Check to see if the video file extension matches one of those listed in the Containers column. If it matches, it is likely that the video is compatible with Video Converter. However, if the embedded video or audio is an unsupported format, the file will not convert.
- See the documentation that came with the software or device that you used to create the video.
- Try converting a single test video using Video Converter.

Video Conversion Fails

1. To view the status of video conversion at the PC, double-click the Windows Home Server icon in the system tray and log on.



- 2. Click **Media** and then **Video Converter** on the left side of the Console.
- 3. Check Show All Converted Videos.
- 4. Click the **Status** column header to sort and group all Failed videos conversions together.
- 5. Examine the failed video conversions to determine the reason they failed.
 - Copy protected DVD—The HP Video Converter will not transcode copy protected DVDs.

DRM protected content—The HP Video Converter will not transcode electronic videos with Digital Rights Management (DRM) protection.

- Unsupported video format—The original video format is unsupported by the HP Video Converter.
- Media Collector files—If you copy videos to the server using Media Collector, the HP Video Converter may start transcoding videos before they are completely copied to the server. If this happens, the video conversion will fail. Select the video in the Converter Status list and click Re-Convert to attempt to transcode the video again. See Automating Video Conversion for more information on using Media Collector to copy videos to the server.

Network Bandwidth

One benefit of using the Full resolution output settings is that older video formats like MPEG-2 videos are often much larger in size than the format used by the video converter. The output of a Full resolution video conversion can be approximately 25% of the file size of an original DVD (MPEG-2). This significant reduction in size can make streaming via 802.11G less problematic (although many factors impact streaming videos wirelessly and results may vary widely).

When considering remotely streamed video content (using a Windows Home Server with Remote Access Enabled), Full resolution videos will be difficult to stream remotely on many broadband connections. HP recommends using the Mobile resolution videos when streaming remotely for more success. These videos are very limited in resolution and visual fidelity, to provide a better chance for successfully accessing videos remotely. The Mobile resolution setting produces a video that is commonly supported for the mobile devices listed above. The Mobile resolution is also ideal for streaming playback on Internet connected PCs using the HP Media Streamer or the HP MediaSmart Server iStream application for iPhone or iPod touch.

Chapter 6. Media Streaming

ABOUT STREAMING MEDIA

Streaming media allows you to enjoy your videos, music, and photos in any room of your home and outside your home. Even when you are away from home, you can enjoy your media on any computer that has a Web browser.

In this article...

- <u>Streaming Media Requirements</u>
- <u>Streaming Media Types</u>
- Putting Media on the Server
- Streaming to your Television, Stereo, and Home PC
- Streaming to Xbox
- Streaming to PlayStation3
- Streaming to a Remote Computer

Streaming Media Requirements

Before Streaming Media can work, you must:

- Store media on the HP Data Vault
- Set up and enable Remote Access
- Set up Digital Media Receivers in your home

Streaming Media Types

Your HP Data Vault can only stream media files such as music, photos, and videos. Non-media files are not available for streaming (Microsoft Word files, Spreadsheet files, etc).

Putting Media on the Server

You can put media on your HP Data Vault in two ways:

- Drag and drop media files to the folders on your Server
- Configure Media Collector to copy files to your Server

Media Collector scans the computers in your home network and copies media to the server. You can choose how often Media Collector copies files; and you can choose what Media Collector copies and how to organize media on the server.

Streaming to your Television, Stereo, and Home PC

Your HP Data Vault uses Digital Media Servers to stream media from the Server to a Digital Media Receiver that is attached to your television and stereo.

Streaming to Xbox

- 1. Open Xbox and navigate to My Xbox.
- 2. Select either Music Library, Picture Library, or Video Library.
- 3. Select **hpstorage** from the list of sources. If you renamed your server during the initial software installation, that name will be listed.
- 4. Navigate to the file you want to view or play.

Streaming to PlayStation3

- 1. Open PlayStaion3 and navigate to **Photo**, **Music**, or **Video**.
- 2. Select **hpstorage** from the list of sources. If you renamed your server during the initial software installation, that name will be listed.
- 3. Navigate to the file you want to view or play.

Streaming to a Remote Computer

You can stream from the Internet using the HP Web Streamer application. When you are traveling, you can stream media from your HP Data Vault to any computer that has a Web browser.

Your Server has a Digital Media Server called TwonkyMedia and a Web server. TwonkyMedia prepares your media for streaming and the Web server streams media to the Internet where your computer can play it on a Web browser.

Streaming to iTunes

You can listen to the music files from your HP Data Vault using iTunes. You cannot stream photos or videos to iTunes, only music files. iTunes can stream DRM-protected media.

IN-HOME STREAMING

In this article...

- Verify Media Server is Enabled
- Configure TwonkyMedia to Stream Photos, Music, and Videos
- Configure Server for iTunes

- Enable and Configure HP Media Collector

Verify Media Server is Enabled

Before you can stream photos, music, and videos in the home, Media Server must be enabled. Media Server is enabled out-of-the-box. To verify that Media Server is enabled, perform the following steps.



- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **In-home Streaming** in the left menu.
- 3. Verify the button at the of the page says **S Sharing**. If the button says **Start Sharing**, click it to enable media sharing.

Configure TwonkyMedia to Stream Photos, Music, and Videos

TwonkyMedia is enabled by default in your **HP Data Vault**. To configure or change TwonkyMedia settings, follow these steps:

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **TwonkyMedia** in the left menu.

You can change settings here by using these tabs:

- Media Sharing Folders—Add, Edit, or Remove.
- **Media Receivers**—Add, Edit, or Remove. Check Automatic Sharing here to enable sharing for new media receivers automatically.
- Maintenance—Rebuild the database, and Reset to Default all media server settings.
 Create and View Log Files for debugging purposes. And you can change the default Web server port.
- 5. Click **OK** to finish.

Configure Server for iTunes

You can centralize your iTunes library for playback on any computer on your home network that runs iTunes.

Your Server is enabled for iTunes by default. To set up your Server for iTunes follow these steps:

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Select **Media** and then **Server for iTunes** in the left menu.
- 3. Click **Configuration**. Here you can set up the following:
- **Status**—enable or disable.
- **Shared name**—specify the shared name you want to display in iTunes.
- Require password—check to require password. The default setting here is no password. If you
 assign a password, then only users who provide the correct password can play music from your
 Server's shared library.
- Check interval—how often to check for music that has been added to the shared Music folder on the server. By default this is set to check every 5 minutes.
- 5. Click **OK** to finish.

Enable and Configure HP Media Collector

1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.

- 2. Click **Media** and then **HP Media Collector** in the left menu.
- 3. Click Configuration.

The HP Media Collector General Settings panel opens.

4. Complete the steps in the wizard.

For additional information, see the following help ics.

Configuring Media Collector General Settings

Configuring Media Collector for Photos

Configuring Media Collector for Music

Configuring Media Collector for Videos

Enable and Configure HP Video Converter

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **Video Converter** in the left menu.
- 3. Click Configure.

The HP Video Converter Settings panel opens.

4. Complete the steps in the wizard.

For additional information, see **Configure Video Converter**.

WEB/IPHONE STREAMING

In this article...

- Configure Remote Access
- Verify Media Server is Enabled
- Configure TwonkyMedia to Stream Photos, Music, and Videos



Configure Remote Access

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right of the Console.
- 3. Click **Remote Access** in the left menu.
- 4. Click to **Turn on** remote access.
- 5. The wizard then prompts you to select a **Domain Name Provider** and create a domain name.
- 6. Once the wizard is complete, customize **Web site settings** as desired.
- 7. Click OK.

For additional information, see Configure Remote Access.

Create User Account with Remote Access Enabled

1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.

- Click the User Accounts tab at the of the page. If the User Accounts Setup dialog displays click OK.
- 3. Click **Add**, this will open the **Add User Account** screen. enter user information. Check the **Enable Remote Access for this user** check box. Make an appropriate choice concerning allowing access to computer and folders.
- 4. Click Next.
- 5. Enter and confirm a strong **password**. A strong password is suggested to ensure security and is required to use remote access. A strong password must be at least 7 characters long and must fulfill three of the following four character criteria:
 - Uppercase characters
 - Lowercase characters
 - Numbers
 - Symbols (such as !, @, #, and so on.)
- 7. Click Next.
- 8. Select access to shared folders
- 9. Click Finish.
- 10. Click Done.

For additional information, see Enable Guest Account or Set up User Accounts.

Verify Media Server is Enabled

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **In-home Streaming** in the left menu.
- 3. Verify the button at the of the page says **S Sharing**. If the button says **Start Sharing**, click it to enable media sharing.

Configure TwonkyMedia to Stream Photos, Music, and Videos

TwonkyMedia is enabled by default in your **HP Data Vault**. To configure or change TwonkyMedia settings, follow these steps:

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.

3. Click **TwonkyMedia** in the left menu.

You can change settings here by using these tabs:

- Media Sharing Folders—Add, Edit, or Remove.
- **Media Receivers**—Add, Edit, or Remove. Check Automatic Sharing here to enable sharing for new media receivers automatically.
- Maintenance—Rebuild the database, and Reset to Default all media server settings.
 Create and View Log Files for debugging purposes. And you can change the default Web server port.
- 5. Click **OK** to finish.

Enable and Configure HP Media Collector

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **HP Media Collector** in the left menu.
- 3. Click Configuration.

The HP Media Collector General Settings panel opens.

4. Complete the steps in the wizard.

For additional information, see the following help ics.

Configuring Media Collector General Settings

Configuring Media Collector for Photos

Configuring Media Collector for Music

Configuring Media Collector for Videos

Enable and Configure HP Video Converter

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Media** and then **Video Converter** in the left menu.
- 3. Click **Configure**.

The HP Video Converter Settings panel opens.

4. Complete the steps in the wizard.

For additional information, see Configure Video Converter.

TWONKY MEDIA FOR MEDIA SHARING

About TwonkyMedia

We strongly recommend that you use TwonkyMedia as your Digital Media Server. TwonkyMedia is enabled by default in your HP Data Vault. TwonkyMedia includes these features:

Allows your digital media receiver (DMR) to see photo thumbnails for pictures and album artwork for music

Supports remote media streaming

• Supports more media formats than Windows Media Connect

Complies with the Digital Living Network Alliance (DLNA) protocol which allows support for more DMRs

In this article...

- TwonkyMedia Default Settings
- TwonkyMedia and Remote Streaming

File Compatibility for Local Streaming

The table below compares local streaming file compatibility between TwonkyMedia and Windows Media Connect.

TwonkyMedia and Windows Media Connect File Compatibility		
File Types	TwonkyMedia	Windows Media Connect
Music Formats		
3gp	Yes	
ac3	Yes	
aiff	Yes	
asf	Yes	Yes
FLAC	Yes	
LPCM	Yes	
m4a	Yes	

TwonkyMedia and Windows Media Connect File Compatibility		
File Types	TwonkyMedia	Windows Media Connect
mp1	Yes	
mp2	Yes	
mp3	Yes	
mp4	Yes	
mpa	Yes	
ogg	Yes	
wav	Yes	Yes
wma	Yes	Yes
	Picture Formats	
bmp	Yes	Yes
gif	Yes	Yes
jpg	Yes	Yes
png	Yes	Yes
tif, tiff	Yes	Yes
	Video Formats	
3gp	Yes	
asf	Yes	
avi	Yes	Yes
DivX	Yes	
dvr-ms	Yes	Yes
m1v	Yes	
m4v	Yes	
mpe	Yes	
mpg/mpeg	Yes	Yes

TwonkyMedia and Windows Media Connect File Compatibility		
File Types	TwonkyMedia	Windows Media Connect
MPEG-1	Yes	Yes
MPEG-2	Yes	
MPEG-2- T-S	Yes	
MPEG-4	Yes	
vdr	Yes	
vob	Yes	
wmv	Yes	Yes
Xvid	Yes	
Playlist Formats		
m3u	Yes	Yes
pla	Yes	
wpl	Yes	Yes

TwonkyMedia Default Settings

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **TwonkyMedia** in the left menu. TwonkyMedia has these default settings in your HP Data Vault:

Enables three folders for media streaming (You can add more.):

- Music—music only (album art is displayed but is not shared as a picture)
- Photos—music, photos, and videos
- Videos—videos only
- Gives all newly-detected DMRs access to your media

UPnP A/V and DLNA

Universal Plug and Play Audio Video (UPnP A/V) and Digital Living Network Alliance (DLNA) define standard network protocols for streaming media.

- UPnP A/V is a set of network protocols that allow networked devices to communicate seamlessly
 in a home networking environment. The Digital Media Servers on your HP Data Vault,
 TwonkyMedia and Windows Media Connect, use UPnP/AV.
- **DLNA** is a set of standards (that includes UPnP A/V) for sharing media between devices. TwonkyMedia is DLNA compliant. Windows Media Connect is not. This compliance allows TwonkyMedia to work with more DMRs.

TwonkyMedia and Remote Streaming

You can stream media to your lap in the hotel room or to your friend's computer in London. TwonkyMedia takes media from the folders on your disk and streams this to the Web server. The Web server streams your media files to the Internet where you can access them from any computer that has an Internet browser.

Configure TwonkyMedia for Streaming Media

TwonkyMedia is enabled by default in your **HP Data Vault**. To configure or change TwonkyMedia settings, follow these steps:


- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **TwonkyMedia** in the left menu. You can change settings here by using these tabs:
 - Media Sharing Folders—Add, Edit, or Remove.
 - **Media Receivers**—Add, Edit, or Remove. Check Automatic Sharing here to enable sharing for new media receivers automatically.
 - Maintenance—Rebuild the database, and Reset to Default all media server settings.
 Create and View Log Files for debugging purposes. And you can change the default Web server port.
- 5. Click **OK** to finish.

Troubleshooting and FAQs

TWONKYMEDIA: DISABLING MEDIA SHARING FOLDERS STILL STREAMS TO DMA

Symptom

TwonkyMedia was connected to a DMA and now I want to Disable Media Sharing. I go to the TwonkyMedia, click Media server settings and click the Media Sharing Folders tab. I double click on each of the folders to disable sharing.

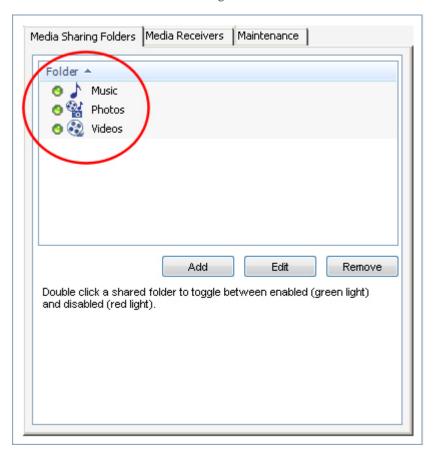


TwonkyMedia is still streaming media.

Workaround

Disabling the media sharing does not halt the media sharing. This has to be accomplished through the TwonkyMedia pane of the Windows Home Server Console.

Solution

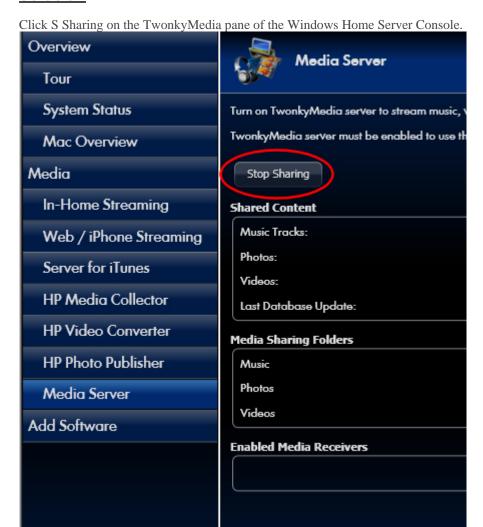

SERVER FOR ITUNES

Settings for iTunes

You can centralize your iTunes library for playback on any computer on your home network that runs iTunes.

Your Server is enabled for iTunes by default. To set up your Server for iTunes follow these steps:

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Select **Media** and then **Server for iTunes** in the left menu.
- 3. Click **Configuration**. Here you can set up the following:

- Status—enable or disable.
- **Shared name**—specify the shared name you want to display in iTunes.
- Require password—check to require password. The default setting here is no password. If you
 assign a password, then only users who provide the correct password can play music from your
 Server's shared library.
- Check interval—how often to check for music that has been added to the shared Music folder on the server. By default this is set to check every 5 minutes.
- Click **OK** to finish.

Troubleshooting and FAQs

ITUNES FREQUENTLY ASKED QUESTIONS

Song Selection from the Server is not Updating with New Additions.

Server has not refreshed yet.

- Wait for the Server to synchronize.
- Click on eject button on the Server bar.

Podcasts not Showing in Playlist.

Podcasts copied over will not show in playlist for server.

WHY CAN I PLAY AND STREAM DRM CONTENT MY HOME COMPUTER BUT NOT STREAM IT FROM MY SERVER?

The HP Data Vault includes a media server for streaming iTunes music to PCs running iTunes through the house. See the section in the User's Guide on iTunes.

For Windows Media DRM (WMDRM) content (protected .wma music and .wmv videos), the HP Data Vault does not support streaming of this content to DMAs at this time. Playing (and streaming) of WMDRM protected content requires that the device that is playing the content have a license for the content. When you downloaded the content to your PC, you also received a license to play the content on that PC. If you copy the files to the HP Data Vault, you cannot copy or transfer the license to the server. The server must obtain its own license, and we do not provide for this feature in the current product.

What you can do however, is store your protected content on the HP Data Vault. This allows all of the PCs in the home that have a license for the content to play it from the HP Data Vault by accessing it through the network. For example, to add all of the music on your Server to the Windows Media Player library on your PC:

1. Open Windows Media Player on your PC.

- 2. Select File, then Add to Media Library, and click Add Folder....
- 3. In the Add Folder dialog, type \\<YourServerName>\Music and click **OK**.

This will add all of the music files in your Music shared folder on the HP Data Vault to your Windows Media Player library. You will then be able to play all of the protected content for which this PC has a license.

HP Media Streamer

About the HP Media Streamer

The HP Media Streamer allows you to store music, videos, and photos on your server and stream them to computers on your network or logged in remotely over the Internet for viewing and listening.

In this article...

- Open Media Streamer from the HP Home Page
- Open Media Streamer using a Web Browser
- File Formats Supported by the HP Media Streamer

Open Media Streamer from the HP Home Page

You can open the Media Streamer from the HP Home Page while your computer is connected to the network or logged in remotely over the Internet.

- 1. At the PC, double-click the HP Data Vault desk icon.
 At the Mac, select **Open Home Page** from the **Server** menu
- 2. Click Media Streamer.

Open Media Streamer using a Web Browser

Media Streamer is a Web application that can be opened using a web browser such as Internet Explorer, Firefox, or Safari, and a personal URL. When you open Media Streamer this way, it assumes you are opening it through a remote Internet connection and you must log on using a server user account.

- 1. Open a Web browser and type your personal URL address in the address bar. An example URL is: smithfamily.HPhome.com. If you have not created a URL for your server, see Configure Remote Access. The browser opens the Windows Homer Server home page.
- 2. Click Media Streamer.
- Enter your HP Data Vault User Name and Password.
 If you have not created a user account, see <u>Enable Guest Account or Set up User Accounts</u>.

File Formats Supported by the HP Media Streamer

The files and types listed below are compatible for Media Streaming:

Audio Formats

MP3, AAC-LC, PCM

Compatibility for Audio

.wma, .mp3, .m4a, .mp4, .aac, .wav

Compatibility for Photo

.jpg, .tif, .tiff, .png, .gif, .bmp

Before You Begin Using the HP Media Streamer

Before you can run Media Streamer you must:

- Install Flash 9 plugin for the Web browser on your computer
- <u>Configure TwonkyMedia for Streaming Media</u> on your HP Data Vault
- Configure Remote Access on your Server (required for remote access only)

Create a <u>User Account</u> with a strong password (required for remote access only)

HP Media Streamer Music Page

In this article...


- Album View
- Artists View
- Playlists View
- Media Player
- Tracks Panel

Album View

The Album view on the Music page has two selection panels (Album and Tracks) and a media Player. The blue background shows the item selected in each panel.

The **Album** panel shows a list of the albums available on the server sorted alphabetically by album title. When you select an album, the tracks for that album appear in the tracks panel. You can jump to a different album in the list by typing the first letter of an album.

In the **Tracks** panel, the tracks sort by track order. Again, you can jump to a different section of each column by typing the first letter of any Title, Artist, or Album.

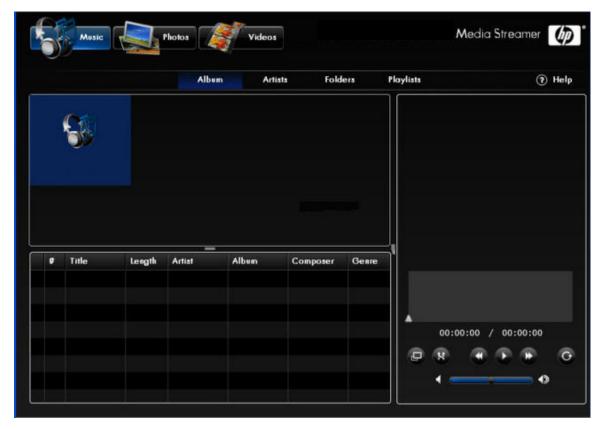

Artists View


The Artists view on the Music page has three selection panels (Artists, Albums, Tracks) and a media Player. The blue bar shows the item selected in each panel.

In the **Artists** and **Albums** panels, names sort alphabetically. When you select an artist, the albums for that artist appear in the Albums panel. When you select a single album, the tracks for the selected album appear in the tracks panel sorted by song title.

The Artists and Albums panels have an -All – item at the . This allows you to select all artists or albums and this option always stays on screen.

- Selecting **All** in the **Artists** panel will list all albums in the albums panel.
- Selecting –All in the Albums panel will list the tracks from all albums by that artist in the tracks panel.

The Albums column in the **Artist** panel shows the number of albums for -All - and for each artist. The Tracks column in the **Albums** panel shows the number of tracks for -All - and for each artist.

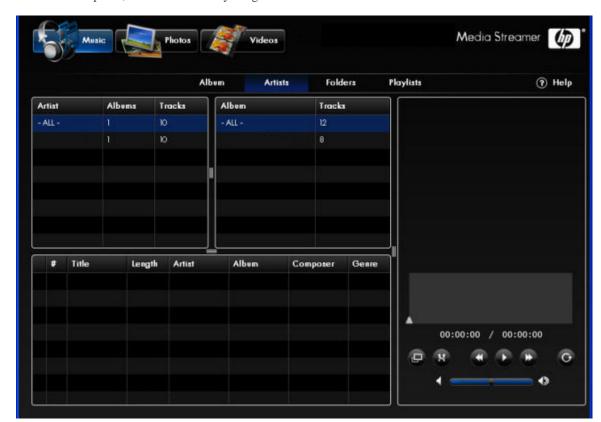

In the **Tracks** panel, the Tracks sorts by song title.

Folders View

The Folders View of the Music page has two selection panels and a media player.

The selection panel shows folders in a typical file browser view sorted in alphabetical order.

Tracks Panel

The tracks panel shows tracks sorted by track number.




Note

Music tracks in sub folders are not included in the Tracks panel list.

Selection Bar

This blue bar shows the item selected in each panel.

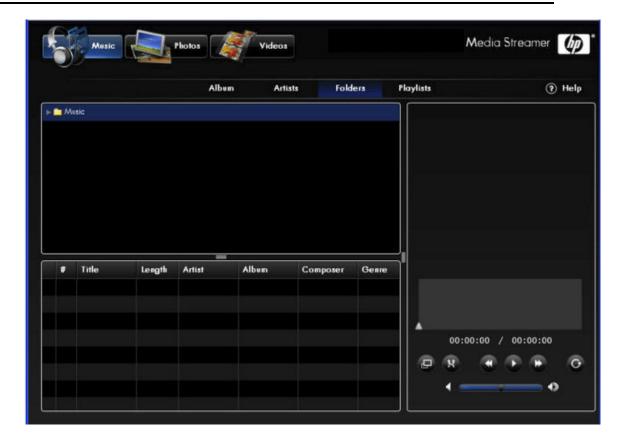

Playlists View

The Playlists View has two selection panels and a media player.

There are three pre-defined playlists: -Last played-, -Most played-, and Recently added. And the user's personal playlists are listed below.


Tracks from the selected playlist display in the Tracks panel. Playlist tracks sort in playlist order.



Playlists display up to 500 songs.

Selection Bar

This blue bar shows the item selected in each panel. When you open Media Streamer the Selection Bar highlights what you last selected.

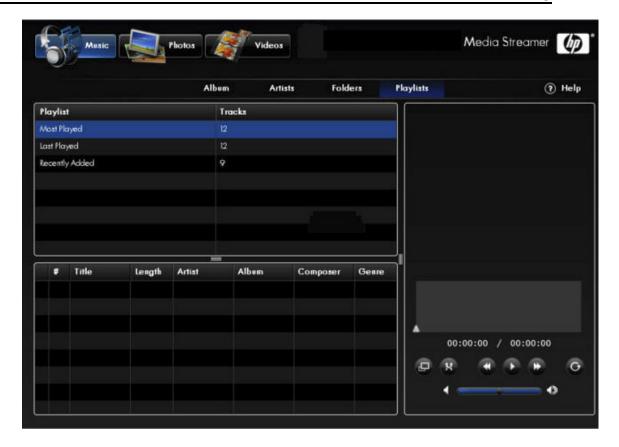

Media Player

From the down, the Player shows these features:

- Player window shows album art (if available)
- Blue Display area shows artist on line, album in the middle line, track name on the bottom line. Below the Text the progress bar shows the amount of time played. Names that are too wide to fully display in the player can be read in a tool tip by hovering the mouse over desired name.
- Progress Bar –Click the progress bar at the place you want to play or slide the arrow to the desired time.
- Song progress text shows the current position in time for the song and total song duration.
- Player Controls are in left to right order:
 - Full Screen Toggle
 - Shuffle Toggle blue circle outline indicated shuffle is turned on
 - Previous Track
 - Play/Pause toggle
 - Next track
 - Repeat Toggle -- blue circle outline indicates repeat is turned on
- Below the player controls is the volume control slider bar. You can grab and move this to left and right or click the desired position on the slider bar.



Tracks Panel

The columns: Length, Artist, Album, Composer, and Genre give information about each track and are sort-able by clicking the column header. Once the column is sorted, type the first letter of the value you are looking for, and the first track with a value in that column that matches will be selected, but not played. Repeating the key press will move the selection to the next value beginning with the letter typed.

Click the desired track with mouse and it will begin to play.

HP Media Streamer Photos Page

In this article...

- Date View
- Playlist View

Date View

The Photo Page, Date View has three selection panels and one media player.

The Year panel has a column showing years and a column showing the number of photos in that year.

The Month panel has a month column that shows the number of the month, only the months that have photos show up and a column showing the number of photos in that month and year.

The Photos panel displays thumbnails, if you hover over a thumbnail a tool tip will display the filename.

Selection Bar

This blue bar shows the item selected in each panel.


- All The Year and Month panels have an All item.
- Selecting All in the year panel will list all months in the month panel, each month entry includes the photos from that month for all years combined.
- Selecting All in the month panel will show all photos for the selected year in the photos panel.

Selecting a particular year in the year panel will load all months that contain images from that year.

Selecting on a particular month will load the thumbnails of all images for that month in the photos panel.

Selecting a photo thumbnail in the photos panel will load the image in the media player.

The figure below shows the Photos Page—Date View

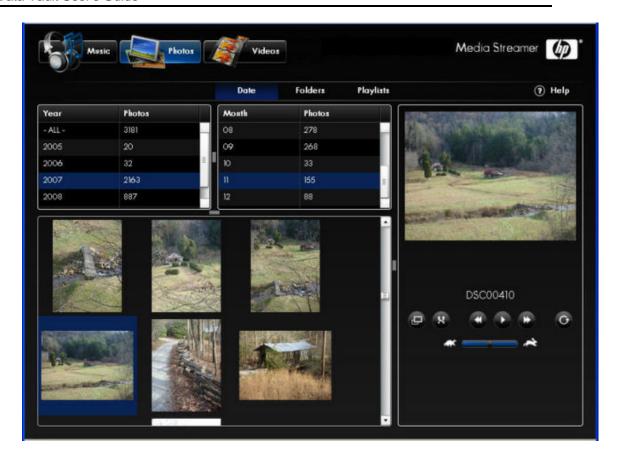

Folder View

The Photos Page, Folder View has two selection panels and one media player

The selection panel shows folders in a typical file browser view.

In the photos panel thumbnails of the images in the folder selected in the file browser view are displayed. Images in sub folders are not shown in the photo panel.


Selecting a photo thumbnail in the photos panel will load the image in the media player.

Selection Bar

This blue bar shows the item selected in each panel.

The figure below shows the Photos Page—Folder View

Media Streaming

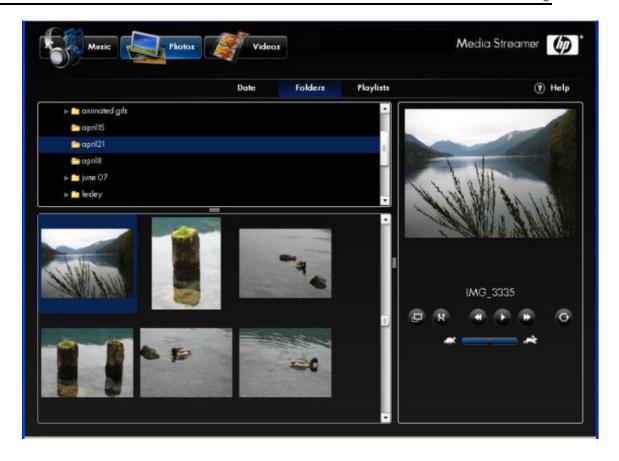

Playlist View

The Playlists View has two selection panels and a media player.

There are three pre-defined playlists: -Most played-, -Last played-, and -Recently Added-.

Photo thumbnails from the selected playlist display in the photos panel. Playlist photos sort in playlist order.




Playlists display up to 500 photos.

Selection Bar

This blue bar shows the item selected in each panel.

The figure below shows the Photos Page—Playlist View

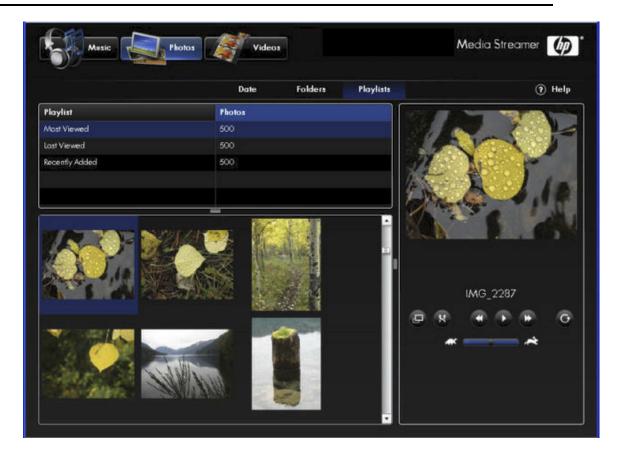

Full Screen View

This view shows the picture in the full browser window. The player controls appear in a semi-transparent gray bar in the bottom center of the picture. The controls will fade out after 3 seconds. Moving the mouse in the photo viewer window will make the controls appear again.

The figure below shows the Photos Page—Full Screen View

Media Streaming



HP Media Streamer Videos Page



To ensure that your videos can be streamed, videos should be processed through the HP Video Converter, for more information see About HP Video Converter.

In this article...

- All View
- Folders View
- Playlists View
- Video Quality Filter
- Status Link
- Videos Panel
- <u>Player</u>


All View

The All view of the Videos page has one selection panel and the media player.

In the Videos panel, videos available for streaming are presented. Selection Bar

This blue bar shows the item selected in each panel.

Selecting a video in the Videos Panel will start loading the video in the video player. You must then click the play button to start the video.

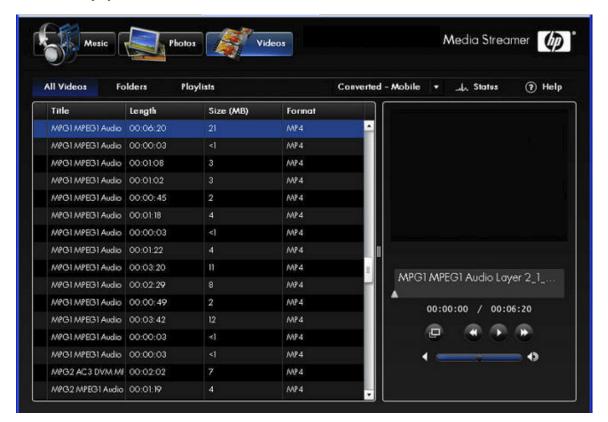

Folders View

The Folders view of the Videos page has two selection panels.

The selection panel shows folders in a typical file browser view. The lower panel lists videos for the selected folder.

Selection Bar


This blue bar shows the item selected in each panel.

Selecting a video in the Folder Panel lists the videos in that folder in the Videos Panel.

Selecting a video in the Videos Panel will start loading the video in the video player. You must then click the play button to start the video.

The figure below shows the Videos Page – Folders View

Media Streaming

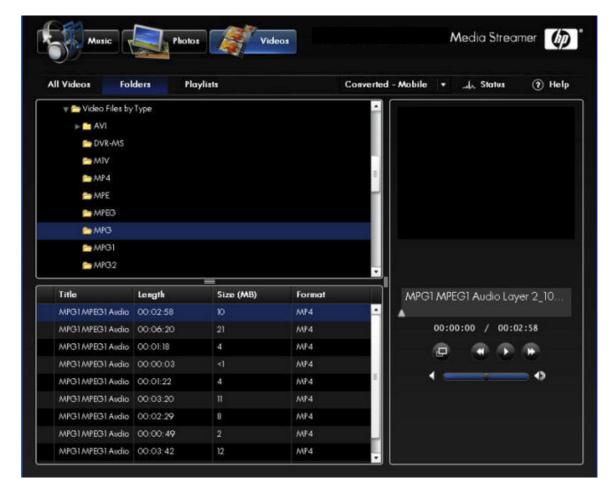

Playlists View

The Playlists View has two selection panels and a media player.

There are three pre-defined playlists: - Most played-, -Last played-, and -Recently Added-which are displayed in the Playlist panel. The playlist panel also lists the number of videos in each playlist.


Videos from the selected playlist display in the videos panel. Playlist videos sort in playlist order.

Selecting a video in the Videos Panel will start loading the video in the video player. You must then click the play button to start the video.




Note

Playlists display up to 500 videos.

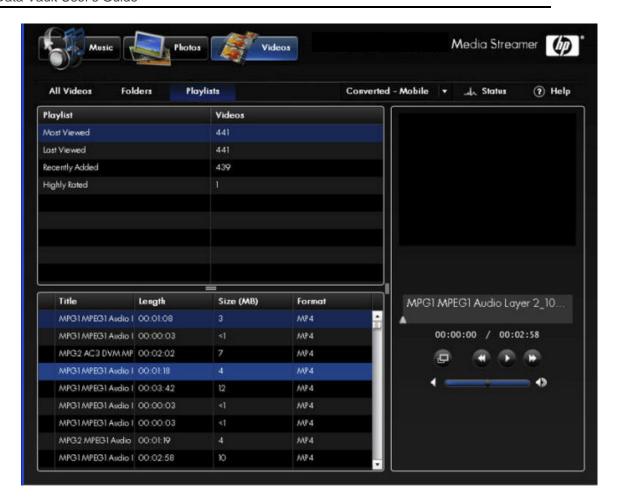

Video Quality Filter

By default the Video page will open with Converted Mobile videos.

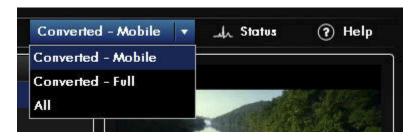

You have three choices for Video Quality

Converted – Mobile These Videos are suitable for mobile devices and remote video streaming (the video will be no larger than QVGA: 320w x 240h). This is to make support of mobile devices easier, and to provide videos suitable for remote media streaming.

• Converted – Full. Full resolution keeps the source video's screen resolution, and basically just creates an output file with the new format for the provided input. Video and audio quality should be very similar to the source material for Full resolution videos. You may notice some differences

between the original and Full resolution output, but these differences are minimal in most situations.

• All. Displays all videos in the shared folder.

Status link

Clicking the Status link will bring up a report that can tell you the status of your video conversions. For more information see <u>Automating Video Conversion</u>.

Clicking a file will give a more detailed explanation of its status. If the explanations disappear too soon, remove the check from the Auto-Fresh box.




Should the Converter Status be red (off), go to the Video Converter settings as detailed in Automating Video Conversion.



Videos Panel

In the videos panel, videos sort alphabetically by name. There are three other columns. The Length columns shows length in minutes, the Size in mega-bytes, and the Format column shows video file formats, such as .mp4.

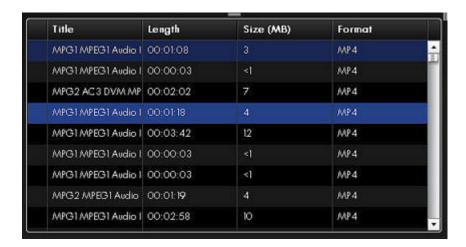

<u>Player</u>

Player window

- Blue Display area shows video title.
 Behind the text the progress bar shows
 the amount of time played. Names that
 are too wide to fully display in the player
 can be read in a tool tip by hovering the
 mouse over desired name.
- Progress Bar –Click the progress bar at the place you want to play or slide the arrow to the desired time.
- Video progress text shows the current position in time for the song and total song duration.
- Player Controls are in left to right order:
 - Full Screen Toggle
 - Previous Video
 - Play/Pause toggle
 - Next Video
- Below the player controls is the volume control slider bar. You can grab and move this to left and right or click the desired position on the slider bar.
- If you choose full screen you can return to the player view by pressing the Escape key.



Troubleshooting and FAQs

MEDIA STREAMER, DOES NOT LOAD

Symptom

Navigate to Media Streamer:

- Page loads as blank page or
- You are requested to Open, Save, or Cancel the file scalable_ui.swf. Click Cancel.



Cause

Adobe Flash Player 9.0.115.0 or later is required.

Solution

Go to www.adobe.com and click Get Adobe Flash Player. Install Adobe Flash Player version 9.0.115.0 or higher.

MEDIA STREAMER, HOW TO USE THE BUTTONS IN THE PLAYER PANE

What is the Player Pane

The Player Pane is where you control the streaming music or the selected photo, see the examples below.



Media Streaming



Music Player Pane Buttons

The list below describes the music player pane button functionality:

Shuffle Songs button, when this button is selected it will have a blue ring



- Previous Song button
- Play/Pause button
- Next Song button




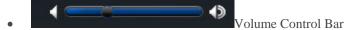



Photo Player Pane Buttons

The list below describes the photo player pane button functionality:

- Enlarge Slide Show button, when this button is selected the slide show will fill the browser
- Shuffle Songs button, when this button is selected it will have a blue ring
- Previous Song button
- Play/Pause button
- Next Song button
- Repeat all Songs button, when this button is selected it will have a blue ring
- Slide Show Speed Control Bar
- Shrink Slide Show button, when this button is selected the slide show will shrink to fit the player pane

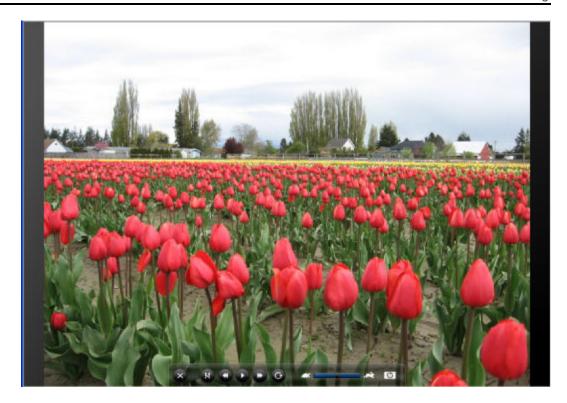

No Music To Stream

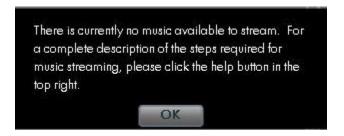

This dialog box will appear when you open Media Streaming and you click the Music button and you:

• Do not have <u>music on your Server</u>

or

• You have not configured the server for streaming media.

No music on your Server

Place music on your server in the following location "<name of server>/Music" and then configure your server for streaming media.

STARTING MULTIPLE M4A FILES SS MUSIC AND ADDITIONAL FILES DO NOT TRANSCODE

Symptom

Go to a folder with m4a files. Start playing the first track, when music starts click next a few times. The music will s after a few seconds.

Cause

The server is transcoding multiple files and this can cause gaps in the playing of music.

Solution

Do not click next as rapidly, give the Server some time to do it's transcoding

REMOTE MEDIA STREAMING, ANIMATED GIF FILES DO NOT DISPLAY UNTIL THE FILE IS SELECTED

In Web Media Remote Streamer, looking at a folder with animated gif files; the thumbnail preview and the display pane do not show an image.

REMOTE MEDIA STREAMING, AUDIO FILES ARE TRUNCATED ON A SLOW CONNECTION

Symptom

Audio file playback is truncated on a slow uplink connection.

The files play about 3/4 of the way through and then playback ss and the next song starts. This happens on connections below approximately 400Kbits.

Cause

Uplink Connection is slow.

STREAMING MEDIA TO A DEVICE

Why does the server show up twice on my DMA list?

If you are running both Windows Media Connect and TwonkyMedia, they will both show up when you view menus on your digital media adaptor.

Once you turn on media sharing using Windows Media Connect, this program will always display the HP Data Vault in your digital media adaptor list. However, you can disable media sharing for the folders under the HP Data Vault. See Why do I see duplicate songs, pictures, or videos on my DMA list? for information on disabling media sharing for shared folders.

Alternately, you can turn off TwonkyMedia media sharing and remove the duplicate HP Data Vault from your digital media adaptor list.

For additional information on these programs, see Windows Media Connect 2.0 and TwonkyMedia Comparison.

To turn off TwonkyMedia media sharing

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **TwonkyMedia** in the left menu.
- 4. Click S Sharing.

Media Files (Audio/Video) of Supported Format Aren't Seen by Device.

Possible naming convention issues.

Double-check names on server, make sure they start with a letter, and not a number or symbol.

My Files Do Not Show Up on My DMA

In this article...

- Once WMC has been enabled to share a shared folder, it continually monitors the folder for new files.
- ❖ If your DMA does not display WMC from the HP Data Vault, or none of your files are found. by the DMA.
- If some of your files (e.g., files newly copied to the server) are not found by the DMA.

Digital Media Adapters (DMA, or Digital Media Receivers - DMR) use the Universal Plug 'n Play (UPnP) protocol to automatically discover Digital Media Servers (DMS). The HP Data Vault uses Windows Media Connect 2.0 (WMC) as its DMS. In order for a DMA to discover the HP Data Vault and access its content, WMC must be enabled. WMC defaults to being disabled; it is automatically enabled for all DMAs when the server administrator selects one or more of the three media shared folders (Music, Photos and Videos) for media sharing. On your DMA, you should then see the HP Data Vault listed as:

< Your Server Name >: 1 : Windows Media Connect



Note

Some DMAs aggregate the content from all DMSs into a single view; in such a case you may not be able to identify each DMS individually. Further troubleshooting steps form DMA follow:

Once WMC has been enabled to share a shared folder, it continually monitors the folder for new files.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **Media Sharing** in the left menu.
- 4. Select at least one of the shared folders for sharing by selecting the **On** radio button.
- 5. Click Apply.

This will automatically start WMC, which will then share all of the files in the selected shared folders.

If your DMA does not display WMC from the HP Data Vault, or none of your files are found by the DMA.

1. Check that WMC is enabled (use the above steps to get to the Media Sharing settings, and verify that at least one of the shared folders is On).

Check that the HP Data Vault and DMA are both connected to the same home network (a **router** or firewall between them could interfere with the discovery and content sharing protocols).

- 2. Restart the DMA.
- 3. Restart the HP Data Vault.

If some of your files (e.g., files newly copied to the server) are not found by the DMA.

- 1. Check that the files were copied to the correct location. Only the Music, Photos and Videos shared folders may be enabled for media sharing. Note that if one of these folders is enabled for media sharing; then all folders below that are also enabled for media sharing.
- 2. Re-enable the shared folder for media sharing.
 - Go to the Media Sharing Settings panel (see the instructions above for how to get here).
 - Turn sharing Off for the shared folder with the missing files and select **Apply**.
 - Turn sharing back On for the shared folder and select **Apply**.
- 3. Restart the DMA.
- 4. Restart the HP Data Vault.

Why do I see duplicate songs, pictures, or videos on my DMA list?

If you are streaming content from shared folders using both Windows Media Connect and TwonkyMedia, you may see duplicate entries of your songs, pictures, or videos on your digital media adaptor. To eliminate this problem, disable media sharing for one of the shared folders.

For additional information on these programs, see <u>Windows Media Connect 2.0 and TwonkyMedia Comparison</u>.

To disable a shared folder in Windows Media Connect 2.0

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **Media Sharing** in the left menu.




- 4. On the right side under **Media Sharing Library**, click **Off** for the shared folders that you do not want to use for streaming content using Windows Media Connect.
- 5. Click OK.

For additional information on using Windows Media Connect, see Media Sharing in the Windows Home Server help.

To disable a shared folder in TwonkyMedia

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select Launch Home Server Console from the Server menu.
- 2. Click **Settings** in the upper right corner of the Console.
- 3. Click **TwonkyMedia** in the left menu.

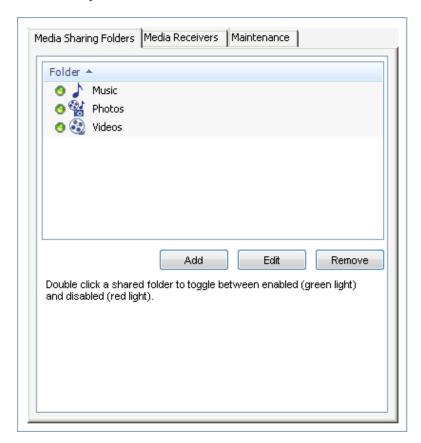

- 4. On the **Media Sharing Folders** tab, select a shared folder and click **Remove** for each folder that you do not want to use for streaming content using TwonkyMedia.
- 5. Click OK.

For additional information on using TwonkyMedia, click **Help** while on the TwonkyMedia tab of the Windows Home Server Console or click **Help** on any of the TwonkyMedia dialog boxes.

Windows Media Connect 2.0 and TwonkyMedia Comparison

The following tables provide a detailed comparison of Windows Media Connect 2.0 and TwonkyMedia features.

At a high level, TwonkyMedia

- Allows your digital media adaptor or digital media receiver to see photo thumbnails for pictures and album artwork for music
- Supports a lot more media formats

In this article...

General Features

Comparison of General Windows Media Connect and TwonkyMedia Features			
Feature	Windows Media Connect 2.0	TwonkyMedia	
DLNA Support	Some Capability	1.0 compliant	
Number of Shared Folders	Music Photos Videos	1.5 reference User Controlled	
Shared Folders/Media Types	Music/all media types Photos/all media types Videos/all media types	Music/music media types Photos/all media types Videos/video media types User selectable folders/media types	
Album Art/Thumbnail Support		Music album art Photo thumbnails	
Picture Scaling	Limited	JPG_MED support	
Video Trick Modes	No	Yes	
Server Side Shuffle	No	Yes	
Status/Summary User Interface	No	Yes	
Folder Monitoring	Yes	Yes	
DMR Exclusion	No	Yes	

<u>Views</u>

Comparison of Windows Media Connect and TwonkyMedia Views			
Views	Windows Media Connect 2.0	TwonkyMedia	
Music Views			
Album	X	X	
All Tracks	X	X	
Artist	X	X	
Artist Index		X	
Artist/Folder		X	
Folder	X	X	
Genre	X	X	
Genre Index		X	
Genre/Artist		X	
Playlist	X	X	
Year/Artist		X	
Picture Views			
Album	X		
All Photos	X	X	
Date	X (flat)	X (hierarchal)	
Folder	X	X	
Playlist	X		
Video Views			
Actor	X		
Album	X		
All Videos	X		
Folder	X		
Genre	X		
Playlist	X		

File Formats

Comparison of Windows Media Connect and TwonkyMedia File Formats			
File Formats	Windows Media Connect 2.0	TwonkyMedia	
Music Formats			
3gp		X	
ac3		X	
aiff		X	
asf	X	X	
FLAC		X	
LPCM		X	
m4a		X	
mp1		X	
mp2		X	
mp3	X	X	
mp4		X	
mpa		X	
ogg		X	
wav	X	X	
wma	X	X	
Picture Formats			
bmp	X	X	
gif	X	X	
jpg/jpeg	X	X	
png	X	X	
tif/tiff	X	X	
Video Formats			
3gp		X	

Comparison of Windows Media Connect and TwonkyMedia File Formats			
File Formats	Windows Media Connect 2.0	TwonkyMedia	
asf		X	
avi	X	X	
DivX		X	
dvr-ms	X	X	
m1v		X	
m4v		X	
mpe		X	
mpg/mpeg	X	X	
MPEG-1	X	X	
MPEG-2	X	X	
MPEG2-TS		X	
MPEG-4		X	
vdr		X	
vob		X	
wmv	X	X	
Xvid		X	
Playlist Formats			
m3u	X	X	
pls		X	
wpl	X	X	

Chapter 7. HP Photo Publisher and HP Photo Viewer

HP PHOTO PUBLISHER


About HP Photo Publisher

In this article...

- **Before you use HP Photo Publisher**
- **File Compatibility**

The HP Photo Publisher Home Page

Publish photos from your server to your favorite photo sharing site or share photos directly from your server using HP Photo Viewer. People outside of your network can see your photos using the Internet.

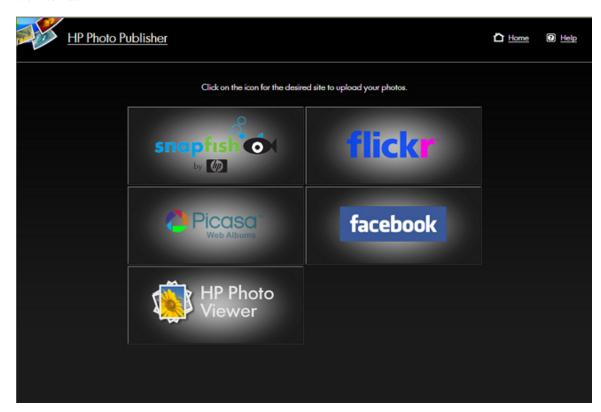

Before you use HP Photo Publisher

You must have a user name and password to log on to HP Photo Publisher. User names and passwords are set up in the Windows Home Server Console.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click the **User Accounts** tab.
- 3. Click **Add** and follow the instructions in the **Add user account** wizard.
- 4. Enable remote access for the user account.

File Compatibility

The table below tells what file types are accepted at the various photo sharing and social networking sites:

	*.jpg, *.jpeg	*.gif	*.png	*.bmp
Picasa	X	X	X	X
Snapfish	X			
facebook	X	X	X	X
flickr	X	X		
HP Photo Viewer	X	X	X	

Some limitations, by site, for the free account:

- At time of writing; flickr only allows for 3 photo sets, and a limit of 100MB worth of photo uploads each calendar month.
- At time of writing; facebook allows only 60 photos for album, but you can have an unlimited number of albums
- At time of writing; Picasa has a storage limit of 250mb
- At time of writing; Snapfish does not have any restriction to number of photos uploaded.

Log on to HP Photo Publisher

- 1. At the PC, double-click the HP Data Vault desk icon.
 At the Mac, select **Open Home Page** from the **Server** menu
- 2. Double-click **HP Photo Publisher**.

- 3. Type your **Username** and **Password** and click the **Log On** button. If you do not have a user name and password, select the **User Accounts** tab in the Windows Home Server Console and add an account. Then, return to the HP Photo Publisher logon page and enter your credentials.
- 4. The **HP Photo Publisher** home page opens.
- 5. If you entered incorrect credentials then you be brought to the Remote Access page. Click the HP Photo Publisher and you will be brought to the **HP Photo Publisher home page.**





Note

You can also open HP Photo Publisher by clicking **Start**, **All Programs**, and **HP Data Vault**. The HP Home Page opens. Click **HP Photo Publisher**.

Log on to Photo Sharing Site

FACEBOOK LOGON



To log into your facebook account click the **Log on** link.

You will be taken to a page to enter your credentials for that site.




This takes you to the facebook confirmation page. Close this page.

facebook


You may now close this window and return to the application.

At the Photo Publisher login screen click **Next**. You are then taken to a page where you can create or add to an existing album.

FLICKR LOG ON PAGE

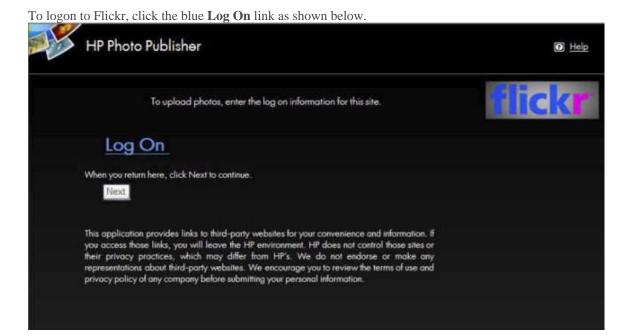


This takes you to the Flickr sign in page. Enter your credentials and return to the HP Photo Publisher page.

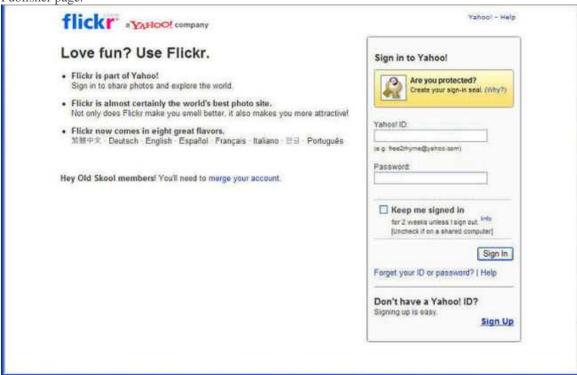


Flickr then asks you to allow HP Data Vault to link to your account.

Click OK, I'LL ALLOW IT

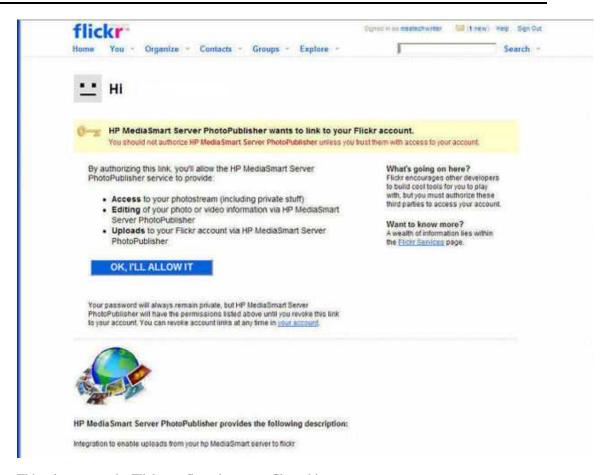

This takes you to the Flickr confirmation page. Close this page.

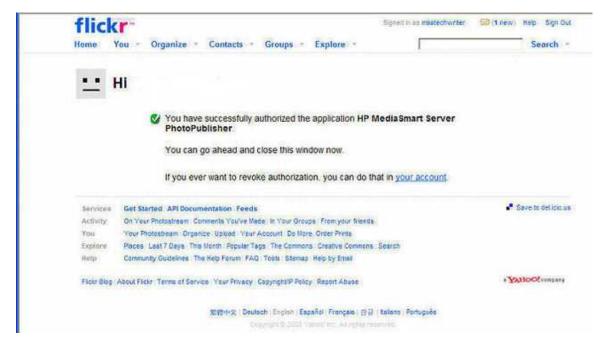

Click Next.


This takes you to the HP Photo Publisher Albums page.

You can now create or add to albums.

PICASA LOGON

To logon to Picasa, enter your credentials as shown in the figure below. Click Next.


After your credentials are accepted, this takes you to a page where you can upload photos and create albums.

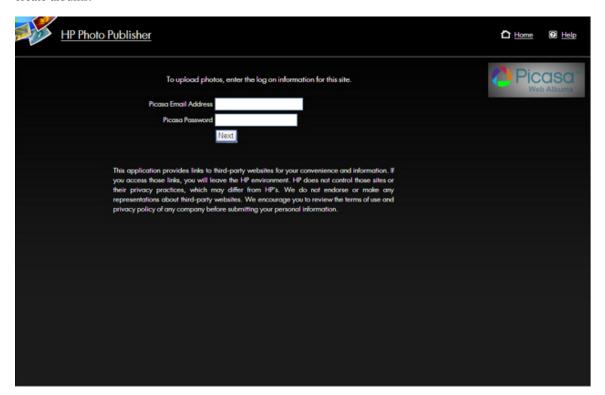

SNAPFISH LOGON

To login to Snapfish, enter your credentials. Click Next.

After your credentials are accepted, this takes you to a page where you can create or add to albums.

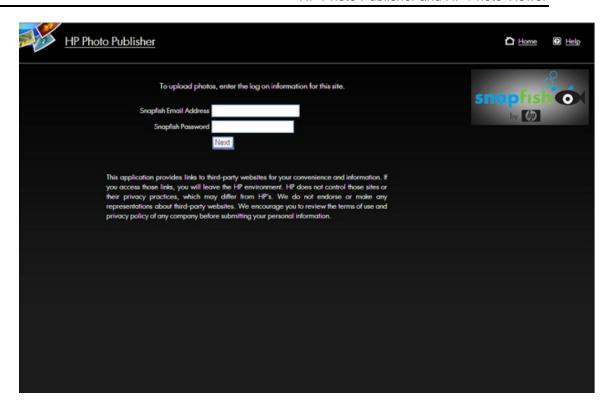

Select Existing Album or Create an Album

- Select Upload to an existing album and select the album from the drop down list.
 or,
 Select to a part of the album and select the album from the drop down list.
- Select to create a new album or set. Type the name of the album.
- 2. Click Next.




Flickr uses the term **set** instead of **album**. Another term that Flickr uses is **photo stream**. The **photo stream** is the default presentation mode for Flickr and uses no sets.



Select Photos

The HP Photo Publisher queries the server and displays a list of folders and photos available to the current user.

- 1. Click the **Arrow** to see an expanded view of folders.
- 2. Select photos to publish.
 - Select an entire folder by putting a check in the checkbox by the folder.
 - Select individual files using the checkboxes beside individual files.
- 3. Once you have finished your selections click **Finish**. The photos selected will now upload to the photo sharing site you are logged onto.

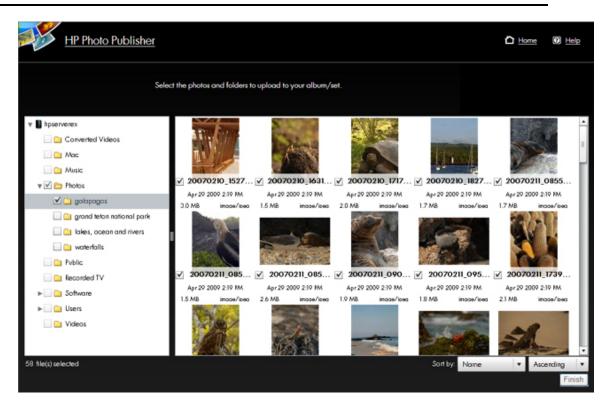

Only file types that are supported by the photo sharing site are available to upload.


The table below tells what file types are accepted at the various photo sharing and social networking sites.

	*.jpg, *.jpeg	*.gif	*.png	*.bmp
Picasa	X	X	X	X
Snapfish	X			
facebook	X	X	X	X
flickr	X	X		
HP Photo Viewer	X	X	X	

Server Continues Uploading

This page gives a status concerning the uploading of the photos.

If the browser ss responding, you can close the browser, or you can visit another Web site; your HP Data Vault will continue the upload.

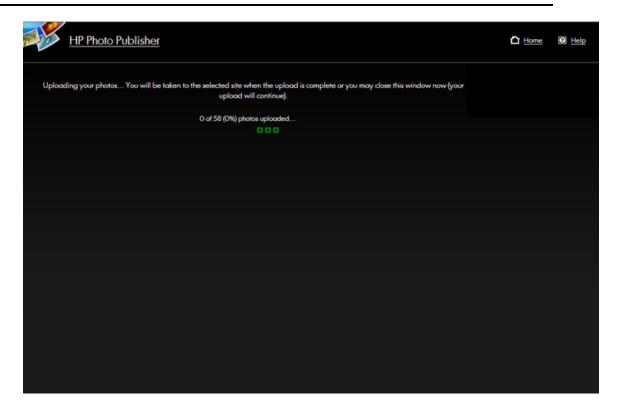


Troubleshooting HP Photo Publisher

PHOTO PUBLISHER, FLICKR "FROB" ERROR

Symptom

While logged into flickr, I open a second Firefox browser session and try to log into flickr. I get the following error.

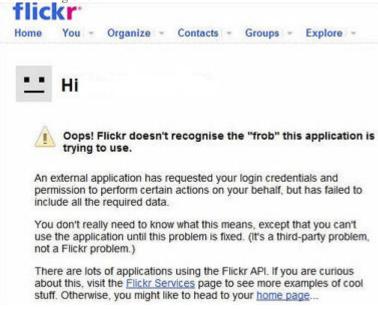


Solution

Close all Firefox browsers that are logged into flickr. You will be able to log back into flickr.

PHOTO PUBLISHER, FLICKR PHOTO UPLOAD FAILS

Symptom

Trying to upload photos to my flickr account, and I get an error saying that I've exceeded a monthly limit.

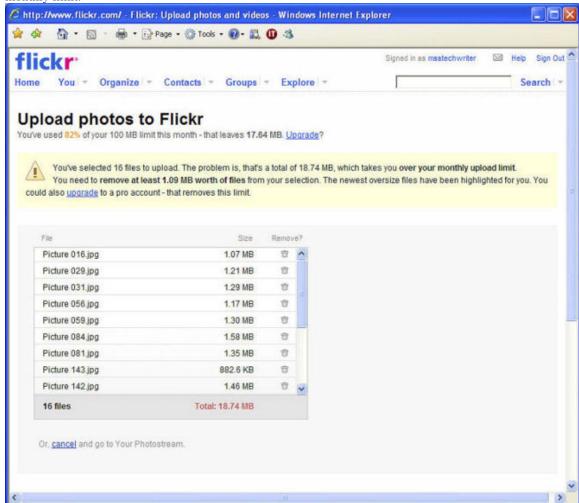


Cause


At the time of writing, flickr only allows the free accounts to upload 100MB per month.

Solution

Wait until the following month to upload to your free account; or follow the upgrade link to purchase flickr pro account.

PHOTO PUBLISHER, HOW TO ADD ADDITIONAL PHOTOS TO AN ALBUM

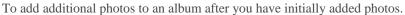

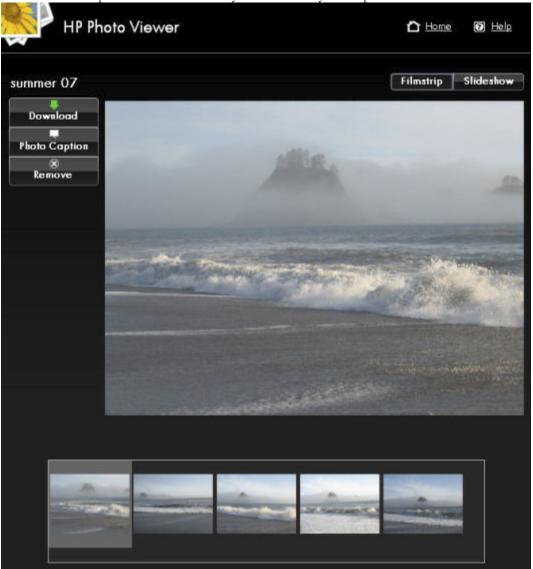

- <u>Use the HP Home Page to access the Photo Publisher logon page</u> or
- Use the browsers back button

Use the HP Home Page to access the Photo Publisher logon page


HP recommends that you use the HP Home Page to re-access the Photo Publisher to add photos to an existing photo album.

- 1. At the PC, close your browser and double-click the HP Data Vault desk icon. At the Mac, close you browser and select **Open Home Page** from the **Server** menu .
- 2. Double-click **HP Photo Publisher**.
- 3. Log into HP Photo Publisher. Enter your Username, Password and click the Log On button.






4. You will be brought the **HP Photo Publisher** home page.

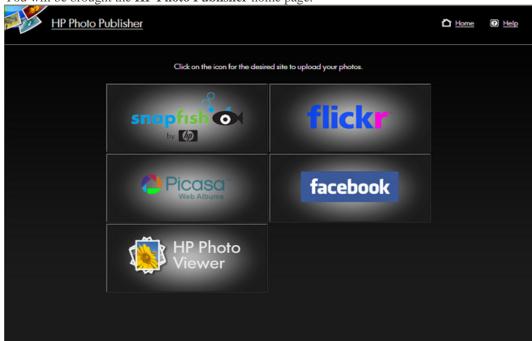


5. Click the site and login.


6. Choose the album to add photos to.

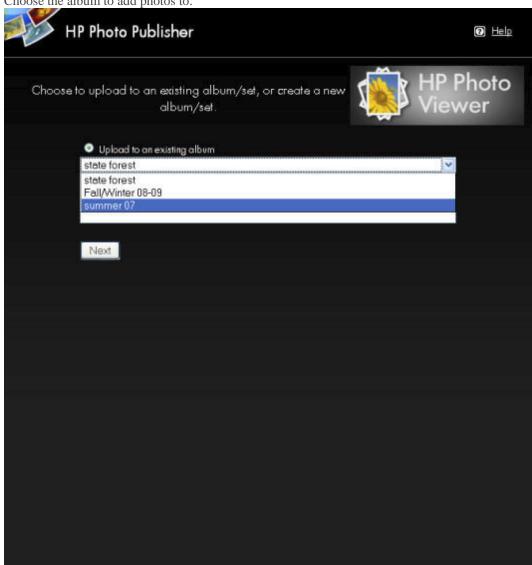

7. Select photos and click **Finish**.

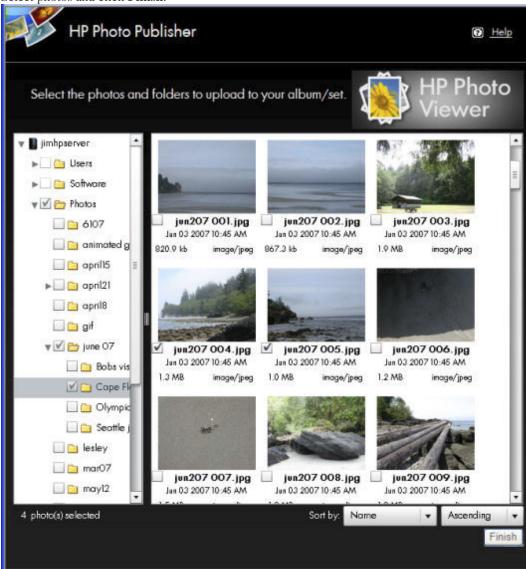

8. Select the photo album to view.

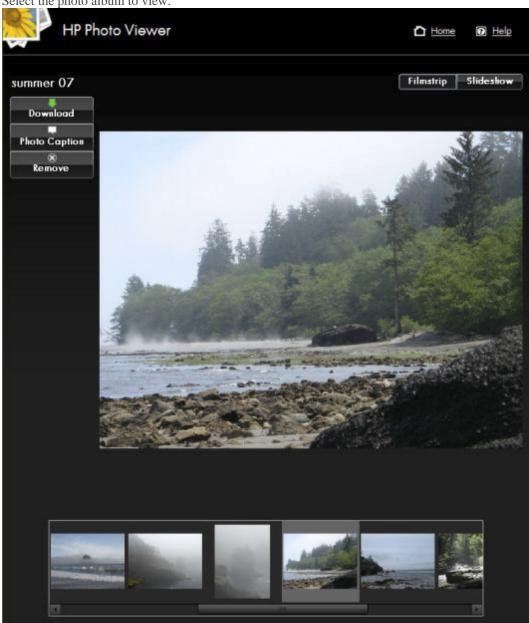

Using the back button to access the add photos page

1. Click the back button until you arrive at the Select Photos page. Click **Photo Publisher**.




2. Click the site and login.

3. Choose the album to add photos to.



4. Select photos and click **Finish**.

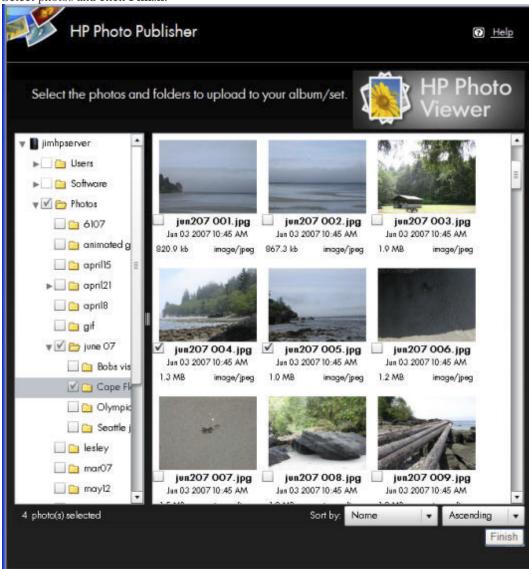

HP Photo Viewer Home Help Filmstrip summer 07 Download Photo Caption Remove

5. Select the photo album to view.

NOTE:

You might need to close your browser and reopen or clear out your internet cache.

PHOTO PUBLISHER, UPLOAD ERROR MESSAGE "FORBIDDEN" IN PICASA


Symptom

Trying to upload photos to my Picasa account, I get an error saying "forbidden".

Cause

At the time of writing; the "Forbidden Error Message" can be caused by exceeding one or both of the following conditions:

- Picasa allows 500 photos in an album on their free accounts.
- Picasa allows for 1GB of storage on there free accounts.

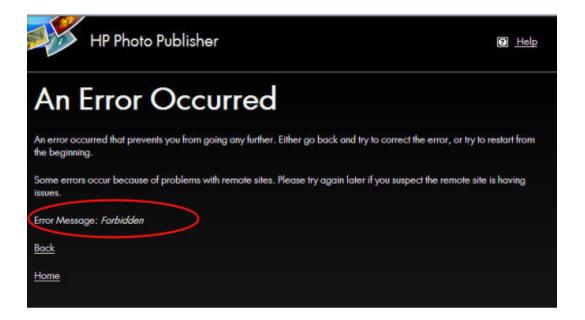

Solution

Consider either:

- Breaking your large album into smaller albums
- Clearing off some of your existing photos to make room for the photos you want to load
- Going to the Picasa web site and purchasing more storage space.

PHOTO PUBLISHER, USING BACK BUTTON UNABLE TO SELECT PHOTOS

Symptom

I want to add more photos to my photo album, but i have passed the photo select page. Clicking the browsers back button, I get back to the photo select page where I select photos. When I click finish my browser does not read the albums properly.

Cause

Sometimes the browser will display cached album information.

Solution

- 1. At the PC, close your browser and double-click the HP Data Vault desk icon.
 At the Mac, close you browser and select **Open Home Page** from the **Server** menu
- 2. Double-click **HP Photo Publisher**.
- 3. Enter your **Username**, **Password** and click the **Log On** button.






4. You will be brought the **HP Photo Publisher** home page.

HP PHOTO VIEWER

HP Photo Viewer Home Page

The Photo Viewer Home Page gives you the opportunity to View, Rename, Delete an album Photo Viewer lets you make an album Public or Private.

The Public/Private choice is designed for additional privacy for Server owners that have set up their servers for remote access. This feature allows the administrator to make an album private, while allowing access to friends and family that know the URL of the album.

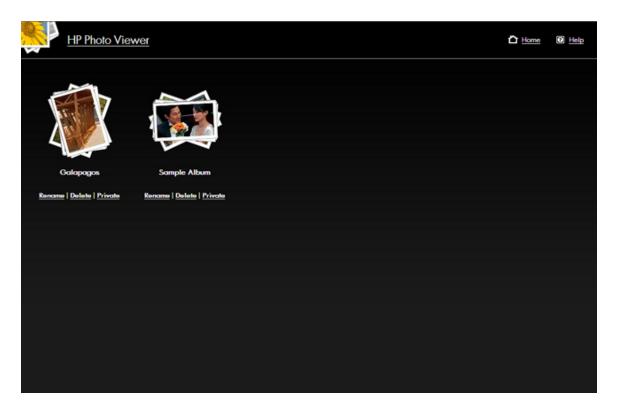

To share a Private album:

- 1. Open the Album
- 2. Either
 - Use your browser's menu to send the URL, click **File**, **Send**, **Link by E-mail** to start sending an email to outside users
 - Copy the URL http://myserver.homeserver.com/PhotoViewer/album633689042886093750/index.xml to paste into your email.

NOTE: Make sure you use the URL that has been set up for Internet/Remote Access. Using local address for your album such as:

 $http://hpstorage/PhotoViewer/album 633689042886093750/index.xml\ will\ not\ work\ for\ remote\ users.$

3. Send the URL to your friend or family member, and they can now gain access to the Album.

HP Photo Viewer Slideshow

You have two choices:

- Filmstrip View
- Slideshow View

Filmstrip View

Viewing the album in **Filmstrip** view, you will see a page similar to below. As long as you are logged into the server you will see three buttons on the left: **Download**, **Photo Caption**, and **Remove**.

If you have been logged off the server due to inactivity you will only see the **Download** button. Click the **Login** link in the upper right part of the screen and provide credentials to log back on.



The Download Button allows visitors to download the photo to there Computer.


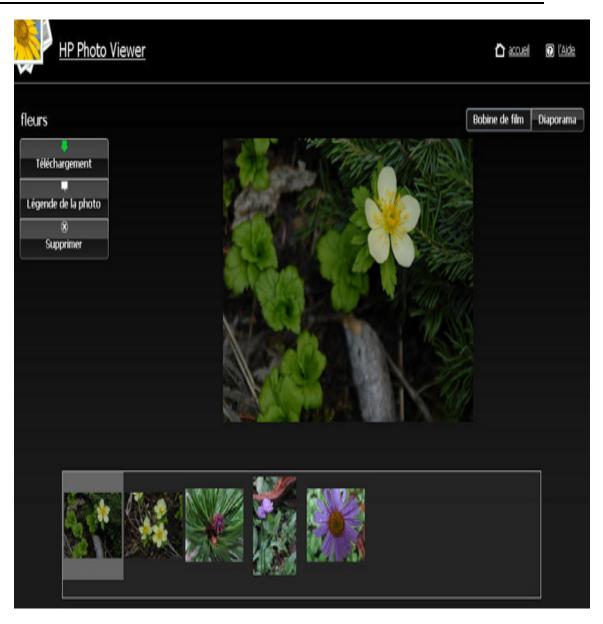


Photo Caption allows you to add a caption for the photo. Enter text in the field that appears below the photo as shown in the example below. Click the **Save** button to keep the Caption




Remove lets you remove the photo from the album, please note that the photo still remains on the Server. Click **Yes** or **No** to confirm the removal.

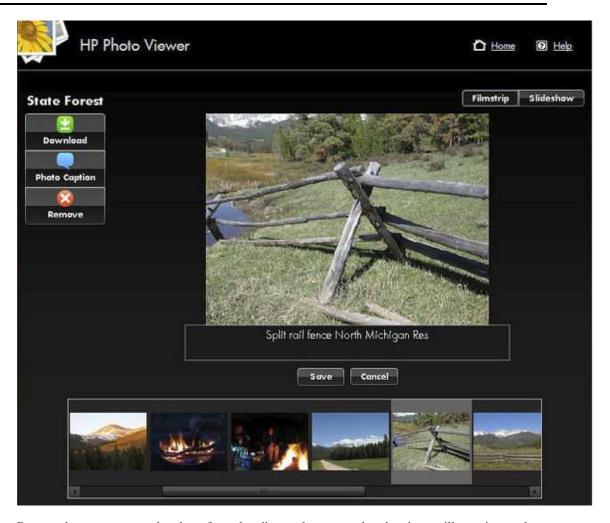

Slideshow View

Viewing the album in Slideshow will give you larger views of the photos. If the photo has a caption, it will show as in the example below.

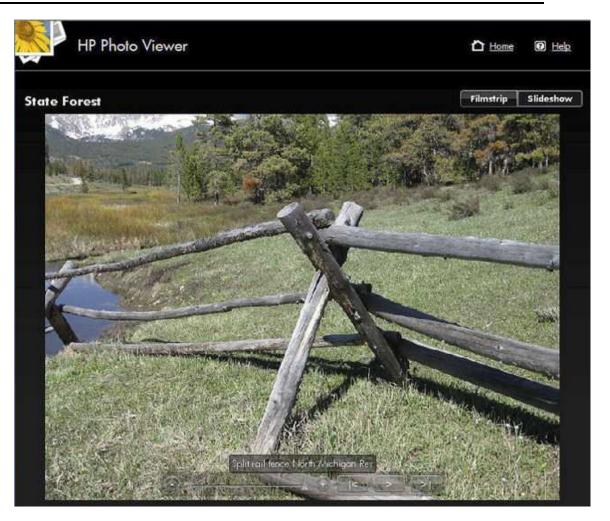

The Control Bar for the slideshow will appear towards the bottom of the screen.



photo will show. The button will bring up the previous photo in the slideshow, the

button will bring up the next photo in the slideshow, and the switch; playing or pausing the slideshow.


Select Existing Album or Create an Album

- Select Upload to an existing album and select the album from the drop down list.
 or.
 - Select to create a new album or set. Type the name of the album.
- 2. Click Next.



Note


Flickr uses the term **set** instead of **album**. Another term that Flickr uses is **photo stream**. The **photo stream** is the default presentation mode for Flickr and uses no sets.

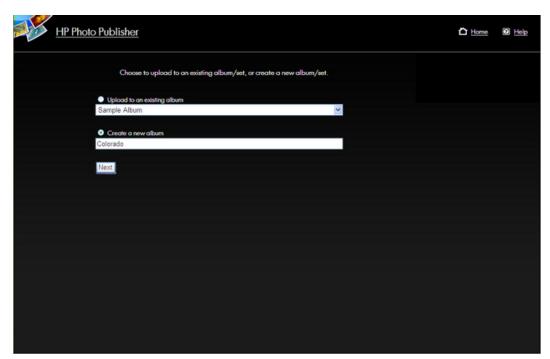

Select Photos

The HP Photo Publisher queries the server and displays a list of folders and photos available to the current user.

- 1. Click the **Arrow** to see an expanded view of folders.
- 2. Select photos to publish.
 - Select an entire folder by putting a check in the checkbox by the folder.
 - Select individual files using the checkboxes beside individual files.
- 3. Once you have finished your selections click **Finish**. The photos selected will now upload to the photo sharing site you are logged onto.

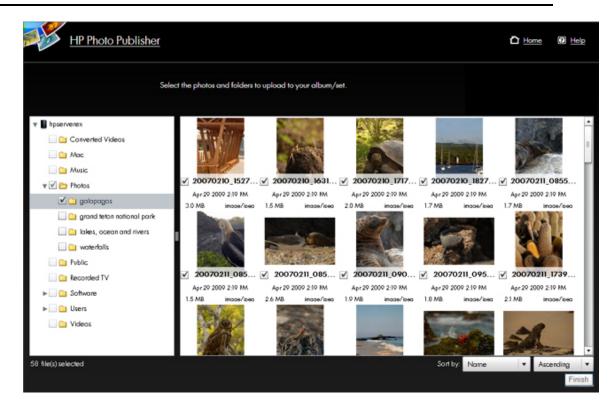

Only file types that are supported by the photo sharing site are available to upload.

The table below tells what file types are accepted at the various photo sharing and social networking sites.

	*.jpg, *.jpeg	*.gif	*.png	*.bmp
Picasa	X	X	X	X
Snapfish	X			
facebook	X	X	X	X
flickr	X	X		
HP Photo	X	X	X	
Viewer				

Troubleshooting HP Photo Viewer

FIREFOX CERTIFICATION NEEDED TO ACCESS HP PHOTO VIEWER

Symptom


When trying to enter HP Photo Viewer, Firefox gives an untrusted connection message.

Cause


A signed SSL certificate is required to access this Server. This certificate is created when you first visit the server from each computer.

Workaround


1. Click I Understand the Risks.

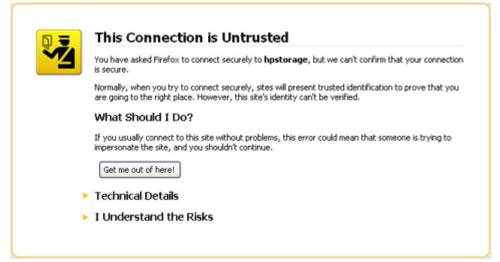

2. Click Add Exception.

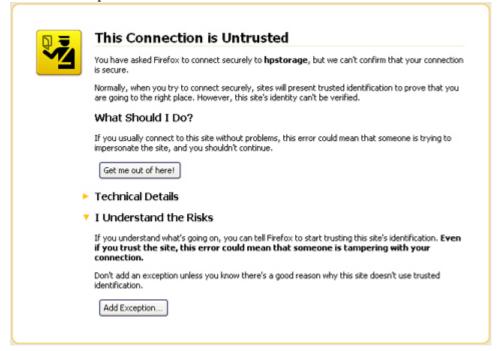

3. The location will populate automatically, click **Get Certificate**.

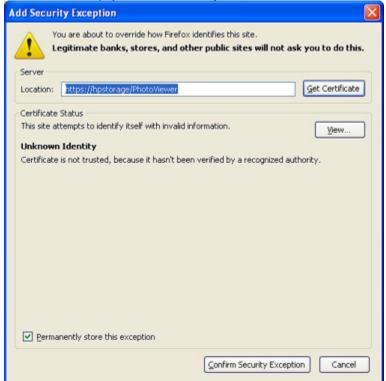

4. Click Confirm Security Exception.


LAUNCHING HP PHOTO VIEWER IN FIREFOX AFTER BROWSER CRASH GIVES ERROR MESSAGE

Symptom

Closed a Firefox browser using CTRL+ALT+DEL.

Open the Windows Home Server Console, click on the HP Data Vault tab, click **HP Photo Publisher**, click the **Launch Photo Viewer**.

Firefox displays an error message.

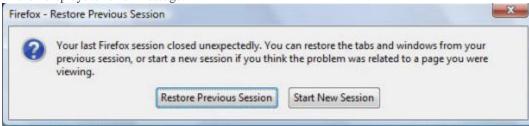

Cause

Clicking on a link in the admin console, which starts a local browser session. The user's firefox browser does not start immediately due to a previous firefox crash.

The admin console incorrectly thinks this is an error.


Solution


Open Firefox and click either restore session or start new session, then click photo viewer link.

PHOTO VIEWER SLIDESHOW CAPTION TOOL TIP DOES NOT REFRESH

Symptom

While running a slideshow a tool tip displaying the photo caption will appear over a picture and not go away.

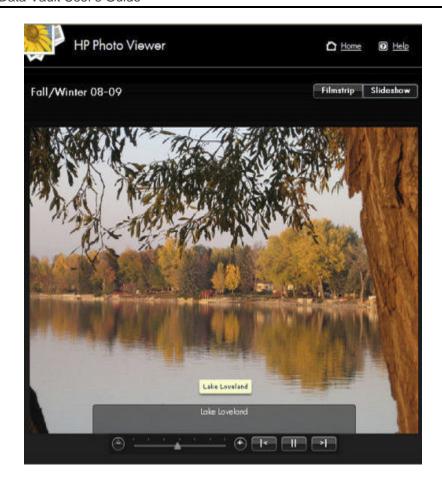

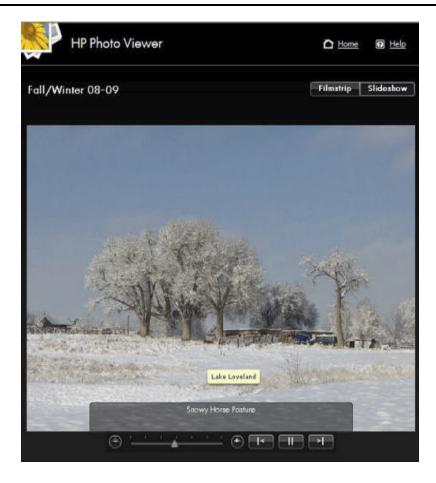

Cause

The tool tip does not refresh if the mouse is stationary.


Solution

Move the Mouse and the photo caption will disappear. The best practice for viewing a slideshow would be to position the mouse out of the slideshow viewing area.

HP PHOTO VIEWER ALBUM MISSING PHOTOS


When viewing an album I have missing photos.

This occurs when photos that have been added to an album have been moved from the location that they were originally located when the photos were added to the album. The photos may still reside on the server, just in a different location. A Photo Album is very much like a play list – it contains a reference to photos on your server, but does not contain its own copy of these photos.

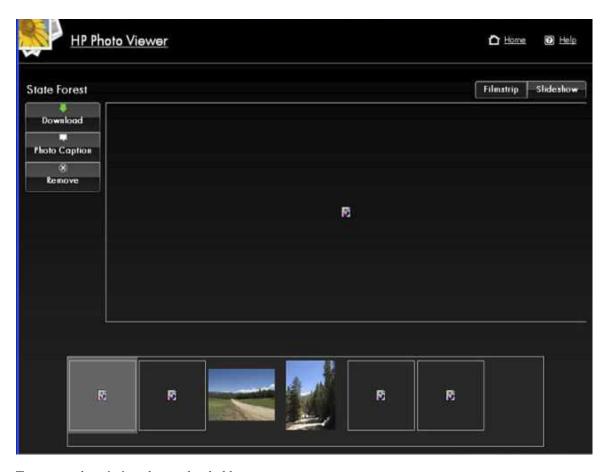

To remove the missing photos placeholders:

- 1. Log into Photo Viewer as the administrator
- 2. Open the album.
- 3. Click the Yes button in the Remove Photos dialog.

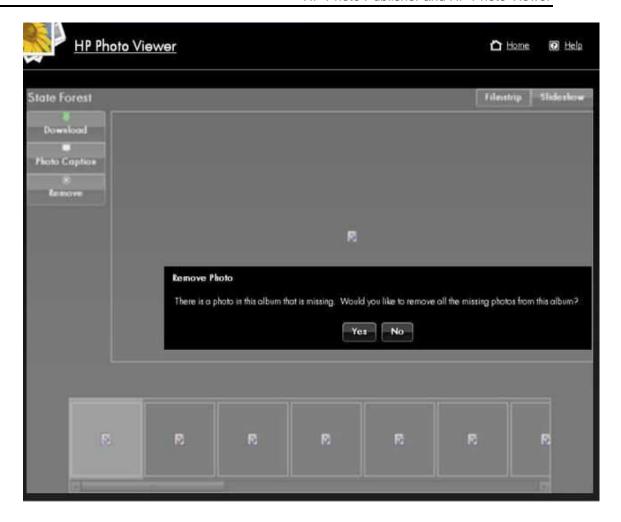

Chapter 8. Backup, Restore, and Recover

CHOOSE A BACKUP STRATEGY

The following table describes the different backup options that are available with the HP Data Vault and when to use them.

Backup Options					
Backup Option	Description	When to use	Setting it up		
Windows Home Server Backup for PCs	Backs up your entire PC. If a PC drive dies, replace the drive, run the PC restore disk and the PC is restored to the last backup. You can configure Windows Home Server Backup to exclude specific volumes or folders.	Choose this option if you want to be able to recover your entire PC, including the operating system, software and all files, in the case of a hard drive failure. Also, choose this option if your original working copies of files are on your PC and you want the security of knowing that there are copies on the server.	Run the Software Installation Disc on your PC. No additional configuration is required. Your entire PC will be backed up automatically. See PC Backup and Restore to learn how to exclude volumes or folders from the backup.		
Time Machine Backup for Macs	Creates a Time Machine backup of your Mac and stores it on the server.	Choose this option if you want to be able to recover your entire Mac, including the operating system, software and all files, in the case of a hard drive failure. Also, choose this option if you store original working copies of files on your Mac and you want them backed up to the server.	Run the Software Installation Disc on your Mac. Configure Mac Backup.		
Server Shared Folder Duplication	Creates two copies of any shared folder on the server that has duplication enabled. If a server drive fails, other than the system drive, simply remove it and replace. This is similar to a RAID 1 array for shared folders.	Choose this option if you keep your original working copies of files in the shared folders on your server and you want a copy of them. Storing original files on your server reduces the number of copies on your network and makes it possible for everyone to share the same files.	Windows Home Server requires that two or more drives are added to server storage. See Shared Folders in the Windows Home Server help.		

Backup Options						
Backup Option	Description	When to use	Setting it up			
Back up Server to a Device	Uses Windows Home Server Backup Now to backup server shared folders to a device that can be stored off site.	Choose this option if you want to back up shared folders on the server to a SATA, eSATA, or USB drive and store it off site. This option protects you against total disasters, such as a fire or flood.	Run the Software Installation Disc on your PC. Attach an eSATA or USB drive to your server, or add a SATA drive to an empty bay in your server using the backup drive option. See Back up Server to a Device.			

PC BACKUP, RESTORE, AND RECOVER

PC Backup and Restore

After running the Software Installation Disc on a computer it is automatically added to the list of computers that are backed up by the HP Data Vault each night. The entire computer is backed up by default.

Complete the following steps to customize the hard drive volumes to back up, or to exclude folders from the backup.

- 1. At the PC, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click the **Computers & Backups** tab.
- Select a computer and click Configure Backup.
 Follow the instructions in the Backup Configuration Wizard.

Related Topics Windows Home Server Console Help Computers & Backup How does backup work? Managing and Configuring Backups Restoring Computer Backups Removing a Computer Troubleshooting Computers & Backup

Restore an Entire PC Hard Drive

To help you recover your computer and data in the event of a hard drive failure, the HP Data Vault includes a PC Restore Disc. Use this disc to restore your computer from the HP Data Vault in the event of the following:

To restore the system drive.

- When the operating system will not start (boot).
- If you cannot use **System Restore** to restore the system files.



Caution

To ensure that you have the latest version of the PC Restore Disc, contact HP support at http://www.hp.com/support.

The Microsoft Windows Preinstallation Environment software included with this computer or software may be used for boot, diagnostic, setup, restoration, installation, configuration, test or disaster recovery purposes only.



Note

THIS SOFTWARE CONTAINS A SECURITY FEATURE THAT WILL CAUSE THE END USER CUSTOMER'S SYSTEM TO REBOOT WITHOUT PRIOR NOTIFICATION TO THE END USER CUSTOMER AFTER 24 HOURS OF CONTINUOUS USE.

Recover Your Computer

- 1. Insert the **PC Restore Disc** into a CD/DVD drive in the computer you want to restore.
- 2. Restart the computer, and boot from the CD.
- 3. Follow the instructions in the **Restore Wizard**.

For additional information about restoring computer backups, see Restoring Computer Backups in the Windows Home Server Console Help.

MAC BACKUP AND RECOVER

Mac Time Machine Backup

In this article...

- Determine Used Space on Your Local Disk
- Configure Time Machine Backups
- Change the Backup Disk Size
- Delete a Backup Disk

Determine Used Space on Your Local Disk

Begin by finding out how much space your data currently occupies on your Local disk. When you set up Time Machine, the minimum backup disk size is automatically calculated for you. However, you may want to increase the backup disk size depending on how often you create or change files on your Mac.

- 1. Open a Finder window and select the Local disk.
- 2. On the Apple menu bar, choose **File** > **Get Info**.
- 3. In the Local Info window, look in the **General** section next to find the **Used** disk space.



Multiply the used disk space by 1.5. The result is the minimum amount of disk space Time Machine can work with (That's because Time Machine needs space for all of your files plus some extra room to enable it to store new data and multiple copies of files that change.). However, more space is always better, because it enables Time Machine to retain backups that go further into the past. A backup disk with at least 1.5 times as much free space as the amount occupied on your local disk is recommended, and more if possible.

Configure Time Machine Backups

Before you begin,

- The HP Data Vault software has to be installed on your Mac. See <u>Installing and Uninstalling Mac Software</u>.
- You must be logged on to the Mac with an account that has administrator privileges.

To configure the HP Data Vault as a valid Time Machine backup device,

- 1. From the HP Data Vault menu, select **Open Preferences**.
- 2. On the **Server** tab, verify that the server name and the server's administrator password are authenticated.

This information is used by Time Machine to set up the backup destination, as well as the links to the shares on the server. This information may have been entered at the end of the Mac software install. If so, you will be authenticated automatically.



3. Select the **Backup** tab and type a **Backup Disk Size**.

The suggested minimum disk space size displays in the dialog based on approximately 1.5 times the size of your used disk space. However, HP recommends creating a backup disk that is at least as large as your total local disc capacity, or larger if possible. When choosing a backup disk size, you may want to consider how much you use your Mac and how much disk space you have available on your server. The backup disk size cannot exceed the amount of free space that you have available on one server disk.

Important

You can resize your backup disk later if you need more room. Resizing the backup disk overwrites the current backup disk and causes all data to be lost. See Change the Backup Disk Size.



7

Note

The location for the backup is on the server at \hpstorage\Mac\Backup. If the Mac shared folder has been deleted from the server, you must create it. At a PC, double-click the Windows Home Server icon in the system tray and log on. Or at a Mac, select **Launch Home Server Console** from the **Server** menu. Click the **Shared Folders** tab and **Add** a shared folder named **Mac**.

4. Click **Apply**.

This process can take quite some time based on the size of the backup disk and server activity. Once the formatting process is complete, the Backup Disk Status changes to **Started**.



The backup file will be located at \\<server name>\Mac\Backup. The file name is based on the serial number of the Mac system, and cannot be changed. Do not manually delete or rename this file.

 Click Open Time Machine Preferences, click Choose Backup Disk and select Backup to HP Data Vault as the backup disk.

Backup to HP Data Vault may already be selected. You may have to change the backup location to the HP Data Vault if you had a previous Time Machine backup that pointed to a different location.

Change the Backup Disk Size

- 1. From the HP Data Vault menu, select **Open Preferences**.
- 2. Click the **Backup** tab.

3. In the **Backup Disk Status**, click **S**.

The Backup Disk Status changes to Sped and the virtual disk icon on the desk goes away after the backup disk ss.



You may have to wait several minutes for the backup disk to s. Please be patient. If the backup disk does not s and it appears to hang, it could be because an application or other process is accessing the backup disk in the background. If this is the case, attempt to eject the disk using Finder.

- 4. Enter a new value in the **Backup Disk Size** and select **Resize** from the action menu. You cannot select **Resize** until the disk is sped and the disk size is changed.
- 5. Click Apply.
- 6. A pop up warning appears informing you the file already exists and that continuing will erase the existing backup data and start over. To continue with the new size click **Delete and Continue**.

Delete a Backup Disk

You may want to delete a backup disk if you need to free up space on your server for other things or if you are no longer using your Mac.

- 1. From the HP Data Vault menu, select **Open Preferences**.
- 2. Click the **Backup** tab.
- 3. In the **Backup Disk Status**, click **S**. The Backup Disk Status changes to Sped and the virtual disk icon on the desk goes away after the backup disk is sped.



Note

You may have to wait several minutes for the backup disk to s. Please be patient. If the backup disk does not s and it appears to hang, it could be because an application or other process is accessing the backup disk in the background. If this is the case, attempt to eject the disk using

4. Select **Delete** from the action menu next to the **Backup Disk Size**.

Recover an Entire Mac Hard Drive

In this article...

- Prepare the USB Flash Drive
- Recover the Mac Hard Drive Using the USB Flash Drive

Prepare the USB Flash Drive

The flash drive is prepared with software that enables the Mac OS X Installer to restore the entire Mac hard drive, including the operating system, applications, and files, from a Time Machine backup on the HP Data Vault.

The flash drive will be formatted and any files already on the drive will be lost. Save files already on the drive to a different location.

You also need to have configured the HP Data Vault backup file before you prepare the USB Flash Drive.

- 1. Insert a USB flash drive into a USB slot on the Mac computer that has the HP Data Vault Mac Client software installed.
- 2. From the HP Data Vault menu, select **Open Recovery Assistant**. The Recovery Assistant opens.
- 3. On the Welcome page, click **Continue**.
- 4. Select the USB flash drive as the destination and click **Continue**.
- 5. Type your Mac administrator name and password and click **Continue**. The USB flash drive is formatted and initialized with the recovery software.
- 6. On the Summary page, click **Close**.

Recover the Mac Hard Drive Using the USB Flash Drive

The USB flash drive contains the HP Data Vault Recovery software that enables you to restore your entire Mac hard drive from a backup on your HP Data Vault. The USB flash drive activates and mounts backup disks of your Mac computer created on the server using the HP Data Vault backup utility. The USB flash drive is used in the Mac OS X Installer environment to make the backup disks available in the Mac OS X Installer Restore assistant.



Note

Your computer must be connected to the network with an Ethernet network cable before you begin the restore. In most cases, you cannot use a wireless connection.

You also need at least one Time Machine backup on the HP Data Vault before you can recover the entire hard drive.

- 1. Insert the prepared USB flash drive into a USB slot on the computer that you want to restore.
- 2. Insert the Mac OS X Install Disc into the DVD-ROM drive.
- 3. Double-click **Install Mac OS X**, or boot from the Mac OS X Install Disc.
- 4. Select a language and click the arrow.
- 5. At the Welcome page, choose **Utilities>Terminal**.
- 6. Type the following command in the Terminal window. The command is case sensitive. /Volumes/Restore/run

- 7. A message displays that the HP Data Vault backup disk has been activated. Click **OK**.
- 8. On the Recovery Center dialog, verify that your server name and password are authenticated.
- 9. Quit the Recovery Center.
- Quit the Terminal.
 You are returned to the Welcome page.
- 11. Choose **Utilities>Restore System From Backup**.
- 12. Click Continue.
- 13. Select **Backup to HP Data Vault** and click **Continue**.
- 14. Select a Time Machine backup on the server and click **Continue**. You will probably want to select the most recent backup.
- 15. Select the **Local** disk and click **Restore**.
- 16. Follow the instructions on your screen to complete the restore.

SERVER BACKUP, RECOVER, AND RESET

Back up Server to a Device

Back up shared folders on the server to a SATA, eSATA, or USB drive and store it off site. This option protects you against total disasters, such as a fire or flood.

In this article...

- & Add the Device to the Server

Add the Device to the Server

1. Add an internal SATA drive to the server or attach an eSATA,USB drive, or SATA port multiplier.

For additional information see,

- Add an Internal SATA Drive
- Add and Remove an External USB Drive, eSATA Drive, or SATA Port Multiplier
- 2. To add the drive as a backup drive at a PC, double-click the Windows Home Server icon win the system tray and log on.
 - At the Mac, select Launch Home Server Console from the Server menu .
- 3. Click the **Server Storage** tab.

- 4. Click Add.
- 5. Click **Next** on the Add a Hard Drive Wizard.
- 6. Select Use this hard drive to back up files that are stored on your home server and click Next.
- 7. Choose whether to format the drive or not and click **Next**.
 - Formatting the drive—Any files already on the drive will be lost. Save important files already on the drive to a different location.
 - Not formatting the drive—The server will not be able to browse to files already on the
- 8. Name the drive and click **Next**.
- 9. Click Finish.
- 10. Once the device is added, click **Done**.

Back up the Server to the Device

- 1. Still in the Windows Home Server Console, click the Computers & Backup tab.
- 2. Select the HP Data Vault from the list and click **Backup Now**.
- 3. Choose the backup device as the **Destination** for each shared folder you want to back up.
- 4. Check **Remember these settings for future backups** to save the settings.
- 5. Click Backup Now.
- 6. Click **Close** once the backup is complete.

Remove the Device from the Server

- 1. In the Windows Home Server Console, click the **Server Storage** tab.
- 2. Select the device from the list and click **Remove**.
- 3. Follow the instructions in the **Remove a Hard Drive** wizard.
- 4. Detach the hard drive from the server.



If files are added to the drive while it is unattached to the server, you will not be able to browse to those files from the server when the drive is reattached. The space occupied by those files is unavailable to the server and it will not see them.

Related Topics

HP Data Vault User's Guide

- Remove an Internal SATA Drive
- Remove and Reattach a USB Drive
- A USB Drive Accidentally Detaches from the Server

Server Recovery and Factory Reset

To help recover or reset the server, the server includes a Server Recovery Disc. Using this disc requires a DVD drive.

Server Recovery attempts to recover all data and restore the folders. However, because of the state of the system prior to the recovery, not all data may be able to be recovered or integrated into the folder structure.

In this article...

- Choose Server Recovery or Factory Reset
- No Server Found
- Server Recovery Fails

Choose Server Recovery or Factory Reset

The following table will help you determine whether to choose Server Recovery or Factory Reset.



Caution

During **Server Recovery**, all system settings, such as user accounts and settings, are lost. You will need to recreate them. During **Factory Reset**, in addition to losing all system settings, the data on all drives is lost.

all utives is lost.					
Choosing Server Recovery or Factory Reset					
Choose Server Recovery if	Choose Factory Reset if				
Server operating system has been corrupted.	The partition data on the other storage drive is corrupted.				
Disk replacement - partition data on other storage drives are okay.	You are giving away or selling the server. See the caution below this table.				
If you have lost your password.					
Server's system hard drive has been replaced.					



Caution


Factory Reset does not remove data from the drives; instead, it allows the existing data to be overwritten. To insure that your data can never be accessed, use a "shredder" program that overwrites the hard drives with random numbers or meaningless data.

Recover or Reset the Server

- 1. If the Home Page is open on your computer, close it before proceeding.
- 2. Insert the **Server Recovery Disc** into a PC DVD drive. The Server Recovery program automatically starts.





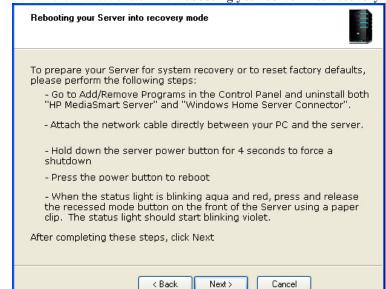

4. Follow the instructions on the **Rebooting your server into recovery mode** dialog and click **Next**.

- Uninstall the HP Data Vault and Windows Home Server Connector.
 - a. Click Start, Control Panel and select Add or Remove Programs.
 - b. Select HP Data Vault and click Remove.
 - c. Select **Windows Home Server Connector** and click **Remove**.
- Attach an network cable directly between your PC and the server.
 - a. Unplug one end of the server Ethernet cable from your router or switch.
 - b. Plug the free end of the Ethernet cable into your computer so there is a direct connection between the server and the computer.
- Prepare the server for recovery or reset.
 - a. If the server is on, hold down the **Power** button on the back of the server for at least 4 seconds to force the server to shut down. If the server is not on, skip to the next step.
 - b. On the back of the server, press the **Power** button to restart.
 - c. While the Health indicator light is blinking aqua white and red and red and red and red and red apper alice.



- d. If recovery mode is successfully initiated, the Health indicator light blinks violet
- 5. Please wait while the server enters recovery mode and click **Next**.

This may take up to 15 minutes.

During the recovery process, the following may happen:

- If the recovery program cannot find the server, see <u>No server found</u>.
- If the Server Recovery cannot recover the partition data, the progress bar will go to 100% and then back to zero and start over.
- If the recovery fails, see Recovery fails.
- 6. Select **Server Recovery** or **Factory Reset** and click **Next.**For help deciding which option to select, see <u>Choose Server Recovery or Factory Reset</u> above.
- 7. Follow the instructions on your computer to complete the server recovery or factory reset.
- 8. Click **Finish** on the **Server recovery complete** dialog box to reboot your server. Once the server reboots, the server lights will be breathing aqua white ...
- 9. Re-connect the Ethernet cable to your router.
- 10. Complete the server software installation on the computer where you performed the Server Recovery or Factory Reset and all other network computers.

No Server Found

If the recovery program cannot find the server, the most likely causes are:

- The Recovery Mode was not successfully initiated—repeat step 4 if you did not push the Status/Recovery button while the Health indicator lights was blinking red and aqua white.
- A firewall is blocking the connection configure the firewall to allow the Windows Home Server Recovery application or to allow connections over TCP port 8192 and UDP port 8192. If opening these ports, be sure to close them after the recovery has completed. For more information, see the vendor's documentation.
- The network connection is not working.

Server Recovery Fails

If the recovery fails, one of the following messages will be displayed:

- The server disks could not be reformatted.
- The partition data on the server could not be written.
- The primary volume on the server could not be written.
- The recovery image could not be loaded.

The most likely cause for these messages is a connection failure.

- 1. Make sure that you are using a wired connection to the server from the computer you are using to do the recovery.
- 2. Check network connections.
- 3. Repeat the server recovery or factory reset.

Chapter 9. Server Storage

EXPAND SERVER STORAGE

You can expand storage in the HP Data Vault in several ways:

Add one or more **SATA** hard drives to the server's internal expansion bays. (Integrated Drive Electronics (IDE) drives are not supported.)

- Add up to four USB disk drives to the server's USB ports.
- Add an external SATA (eSATA) hard drive to the server's external eSATA port.
- Add a SATA port multiplier to the server's external eSATA port.

Related Topics

HP Data Vault User's Guide

- Add an internal SATA drive
- Add and Remove a USB Drive, eSATA Drive, or SATA Port Multiplier
- Add and Remove Drives from Server Storage

INTERNAL SATA DRIVES

Add an Internal SATA Drive

How to place a hard drive into an expansion bay in the HP Data Vault.

Important

Do not remove the bottom drive. This drive contains the Windows Home Server operating system.

Important

There are two steps to adding an internal drive. First, add the drive to an expansion bay. Second, add the drive to the total server storage or set it up as a backup drive.

- 1. Determine which expansion bay to use:
 - The light bar for an empty expansion bay is off.
 - Add the new hard drive to the lowest available expansion bay.
- 2. Open the door on the front of the server.



3. On the lowest empty hard drive tray, press down the lever to unlock the handle.



4. Lift the handle all the way up.



5. Gently pull the hard drive tray from the expansion bay.



6. Fold down the flap near the back of the hard drive tray.




3


Note

This flap improves air flow through the server. If you remove a drive, be sure to fold this flap back up.

7. Insert the new drive into the left side of the hard drive tray, making sure that the pins go into the hard drive's mounting holes.

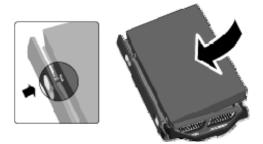

8. Flex the right side rail, and then insert the pins into the hard drive's mounting holes.

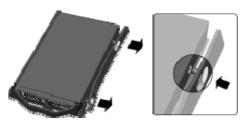

9. With the handle up, slide the hard drive tray and drive into the expansion bay.



10. Press down on the handle on the hard drive tray until it locks.



11. Close the door on the front of the server.



- 11. Notice that within a few seconds the light bar for the new hard drive blinks aqua white This indicates that the hard drive has been installed, but has not been initialized.
- 12. Add the drive to the server's total storage.

Remove an Internal SATA Drive

For information about removing the system drive, see Replace the System Drive.



Caution


Before removing a drive from an expansion bay, you must remove the drive from the server's total storage.

For information about removing a drive from total storage, see <u>Add and Remove Drives from Server Storage</u>.

- 1. Be sure that the light bar for the hard drive you want to remove is blinking aqua white ______. This indicates that the drive has been properly removed from the server's total storage.
- 2. Open the door on the front of the HP Data Vault.



3. On the drive you want to remove, press down the lever to unlock the handle.

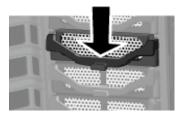

4. Lift the handle of the hard drive tray all the way up.



5. Gently pull the system drive from the drive bay.



6. Flex the back of the right side rail, and then withdraw the back pin from the hard drive by gently pulling the side rail down and away.



- 7. Flex the front of the right side rail, and then withdraw the front pin from the hard drive by gently pulling the side rail down and away.
- 8. Remove the drive from the hard drive tray.



9. Fold up the flap near the back of the hard drive tray.



Note Note

Folding up the flap improves air flow and helps keep the server cool.

10. With the handle up, slide the hard-drive tray back into the system bay.



11. Close the handle on the hard drive tray until it locks.



12. Close the door on the front of the server.



USB DRIVES, ESATA DRIVES, AND PORT MULTIPLIERS

Add and Remove an External USB Drive, eSATA Drive, or SATA Port Multiplier

You can add external USB disk drives to any of the HP Data Vault's four USB ports. You can add either an eSATA drive or SATA port multiplier to the eSATA port.



Important

There are two parts to adding external drives: connect the drive to a port and then initialize the drive so it becomes part of the total server storage.

In this article...

- Connect an External USB Disk Drive

Connect an External USB Disk Drive

If you use a USB disk drive, it is recommended that you use a drive that conforms to USB 2.0 or later.

- 1. Plug in the USB cable into one of the USB ports on the server.
- To plug in and power up your external USB drive, see the documentation that came with your USB disk drive.



Caution

The addition of multiple USB disk drives through an external USB hub is neither recommended nor supported.



3. Follow instructions to Add and Remove Drives from Server Storage.

Connect an eSATA Disk Drive or SATA Port Multiplier

- 1. Plug the eSATA cable into the eSATA port on the back of the server, as shown in the following figure.
- 2. To plug in and turn on your eSATA disk drive or SATA port multiplier, see the documentation that came with your device.



3. Follow instructions to Add and Remove Drives from Server Storage.

Detach and Reattach a USB Drive

In this article...

- Detach a USB Drive from the Server
- Reattach a USB Drive to the Server

Detach a USB Drive from the Server

USB drives may be attached to the server to either increase the server's storage capacity or to back up server files. You can detach any USB drive that is attached to the server.

To safely remove a drive, remove the drive from server storage using the Windows Home Server Console before detaching the drive from the server.

- 1. At the PC, double-click the Windows Home Server icon win the system tray and log on. At the Mac, select Launch Home Server Console from the Server menu.
- 2. Select the device from the list and click **Remove**.
- 3. Follow the instructions in the **Remove a Hard Drive** wizard.
- 4. Detach the hard drive from the server.

If a USB drive is removed can be reattached and added back to server storage.

Reattach a USB Drive to the Server

Add an internal SATA drive to the server or attach an eSATA,USB drive, or SATA port multiplier.

For additional information see,

- Add an Internal SATA Drive
- Add and Remove an External USB Drive, eSATA Drive, or SATA Port Multiplier
- 2. To add the drive as a backup drive on a PC, double-click the Windows Home Server icon win the system tray and log on.

At the Mac, select Launch Home Server Console from the Server menu



- 3. Click the **Server Storage** tab.
- 4. Click Add.
- 5. Click **Next** on the Add a Hard Drive Wizard.
- 6. Select Use this hard drive to back up files that are stored on your home server and click Next.
- 7. Choose whether to format the drive or not and click **Next**.
 - Formatting the drive—Any files already on the drive will be lost. Save important files already on the drive to a different location.
 - Not formatting the drive—The server will not be able to browse to files already on the drive.
- 8. Name the drive and click **Next**.
- 9. Click Finish.
- 10. Once the device is added, click **Done**.



If files are added to the drive while it is unattached to the server, you will not be able to browse to those files from the server when the drive is reattached. The space occupied by those files is unavailable to the server and it will not see them.

A USB Drive Accidentally Detaches from the Server

In this article...

- The USB Drive is Missing from Server Storage
- The USB Drive Detaches During a Backup


The USB Drive is Missing from Server Storage

A USB drive that has been successfully added to the Servers Backup Hard Drives or Storage Hard Drives can detach from the server. If your USB drive detaches from the server, the drive will not be listed in the Windows Home Server Console Server Storage tab.

Some of the reasons a USB drive might become detached include,


- The USB Drive loses its power supply, or
- The USB cable comes loose from the drive or server.

Verify that your USB drive has power and the cable connecting the drive to the server is firmly seated. Once the USB drive is reattached, it will be reappear on **Server Storage** tab.

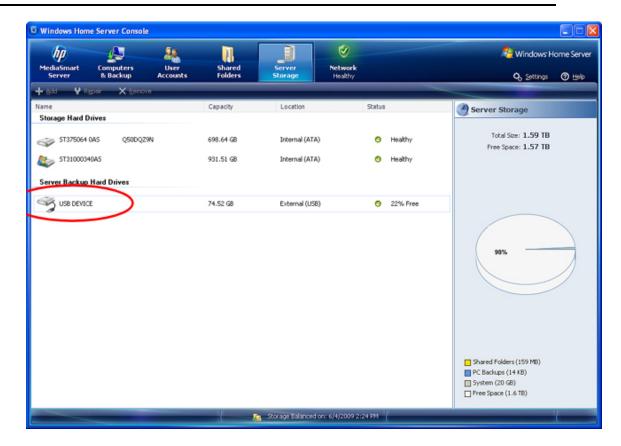

The USB Drive Detaches During a Backup

If the USB drive detaches from the server for any reason during the backup, the backup will fail. Once the USB drive is successfully seen by the server again, the next back up should work as long as the USB drive is in a healthy state.

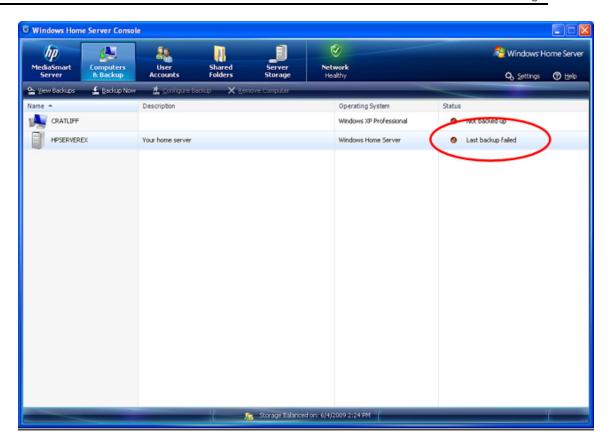

ADD AND REMOVE DRIVES FROM SERVER STORAGE

Drives added or removed from an expansion bay or port must be added or removed from total server storage.



When adding a hard drive to server storage, the hard drive is formatted. Make sure to back up any important files that are on the hard drive before adding it to server storage.

Add a Drive to the Server's Total Storage

- 1. At the computer, double-click the Windows Home Server icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click the **Server Storage** tab.
- 3. Follow the instructions in **Adding a hard drive** in the Windows Home Server Console Help.

Remove a Drive from the Server's Storage

If the server does not have enough remaining storage, and you do not first add another hard drive to server storage, either you will lose shared-folder duplication or you will lose files. This depends on how much server storage space remains after you remove a hard drive.

- 1. At the computer, double-click the Windows Home Server icon with in the system tray.
- 2. Log on to the Windows Home Server Console.
- 3. Click the Server Storage tab.
- 4. Follow the instructions in **Removing a hard drive** in the Windows Home Server Console Help.

REPLACE THE SYSTEM DRIVE

In this article...

- Remove the Old System Drive

After replacing the system drive, you must

- Reset the system drive. See <u>Server Recovery and Factory Reset</u>.
- Reinstall the software on each computer. See <u>Install the Software on Additional PCs</u>.



Important

The system drive contains the Microsoft Windows Home Server operating system. The server cannot operate while the system drive is removed and must be re-installed via the Server Recovery Disc or factory reset. See <u>Server Recovery and Factory Reset</u>.

Remove the Old System Drive

The following figure shows the location of the system hard drive.



To remove the system drive

1. Hold in the **Power** button for at least 4 seconds to force the server to shut down.


2. Open the door on the front of the server.




3. Using a coin, turn the security knob clockwise to unlock the drive.



4. On the bottom drive, press down the lever to release the handle.

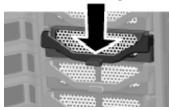

5. Lift the handle all the way up.

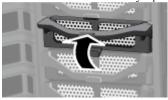

6. Gently pull the system drive from the drive bay.



7. Flex the back of the right side rail and withdraw the back pin from the hard drive by gently pulling the side rail down and away.



8. Flex the front of the right side rail and withdraw the front pin from the hard drive by gently pulling the side rail down and away.

9. Remove the drive from the hard-drive tray.




Insert the New System Drive

1. Insert the new system drive into the left side of the hard drive tray, making sure that the pins go into the hard drive's mounting holes.



2. Flex the front of the right side rail and insert the pin into the hard drive's mounting hole, and then flex the back of the right side rail and insert the pin into the other mounting hole.

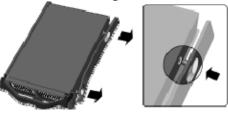

3. With the handle up, slide the hard drive tray and drive into the system bay.



Note

Don't push on the handle; the tray won't slide in.



4. Close the handle on the hard-drive tray by pressing down until it locks.



5. Using a coin, turn the security knob counterclockwise to lock system drive in its bay.



6. Close the door on the front of the server.



- 7. Power on the server.
- 8. The HP Data Vault lights will pulsate aqua white.
- 9. Perform a Factory Reset to initiate the drive. See <u>Server Recovery and Factory Reset</u>.

Chapter 10. Network and Firewall

NETWORK CONNECTION ISSUES

In this article...

- What do Firewall Blocking Messages Mean?
- Why is the Network Connection Light Off?

- Windows XP: To ensure your network is set up properly for TCP/IP
- ₩indows Vista: To ensure your network is set up properly for TCP/IP
- Windows XP: To ensure your network has the correct NetBIOS set up
- Windows Vista: To ensure your network has the correct NetBIOS set up

No Available Port on Network Router

Take the following steps:

To add more Ethernet ports, connect an Ethernet switch to the router. Refer to the switch documentation for instructions on how it connects to the router.

Connect one end of the Ethernet cable that came with the server to the switch and the other end to the HP Data Vault.

Why did URL not Work?

DNS has not updated, wait about 10 minutes for DNS to update.

What do Firewall Blocking Messages Mean?

Firewalls block certain types of communications between network devices. This helps protect your data from hackers, viruses, spyware, and Trojan horse software. The computer might have one or more firewall programs installed. For example, if the latest version of the Microsoft Windows XP operating system is installed, the computer may be using the Windows XP Firewall.

The HP Data Vault comes with software applications that must communicate over the network. Sometimes these programs are blocked by a firewall. When this happens, security alerts pop up on the computer screen.

Security alerts usually have a list of possible options. The particular messages or alerts displayed depend on the vender.

For example, the alert might offer the following options:

- Keep Blocking
- Unblock
- Defer the choice and be reminded later


If a security alert dialog box for an HP Data Vault application or the Windows Home Server is displayed by the firewall, click Unblock or Allow to permit the application to execute. It is safe to unblock the communications because no connection or communication with the Internet is enabled, only those between the server and its software applications. After unblocking an application, if any software is reinstalled, moved to a new disk location, or if the application is deleted from the exception list using the Windows XP Security Center control panel, communications between that software and the server may once again be blocked by the firewall.

Configure your firewall to allow any HP Data Vault or Windows Home Server applications.

Why is the Network Connection Light Off?

To determine why the network connection light is off:

- Make sure that all the cable connections are correctly plugged in.
- Make sure the router or switch has power.
- Restart the router or switch (or unplug and plug it back in).
- If you are using your own Ethernet cable, try using the Ethernet cable that came with the HP Data Vault.

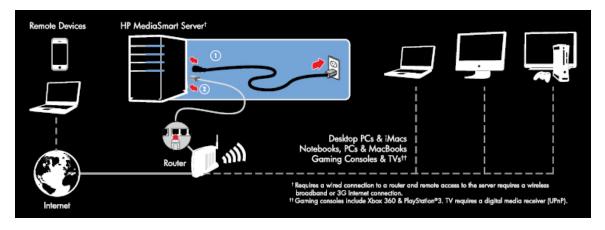

The Firewall is Blocking the Connection

If using a firewall program, configure it to allow any HP Data Vault or Windows Home Server applications.

For instructions to unblock, see the software vendor's documentation.

For information about firewall blocking alerts, see What do firewall blocking messages mean?.

Windows Vista: Check that Network Discovery is turned on

To ensure that Network Discovery is turned on

- 1. Click the **Start** menu, and then select **Control Panel**.
- 2. In the Control Panel, click **View network status and tasks**.
- 3. In the Network and Sharing Center, make sure that **Network discovery is on**.
- 4. If Network discovery is off, click the **down arrow** , then select **Turn on network discovery** and **Apply**.

Windows XP: To ensure your network is set up properly for TCP/IP

- 1. Click **Start**, and then select **Control Panel**.
- 2. Double-click Network and Internet Connections.
- 3. Double-click **Network Connections**.

If the computer is connected via Ethernet cable to the network, right-click **Local Area Connection** (LAN).

- 4. If the computer is using a wireless connection, right-click Wireless Network Connection.
- 5. Click **Properties**. In the dialog box that opens, check to ensure that TCP/IP is listed and selected.

If TCP/IP is not listed, click **Install**, **Protocol**, and then **Add**. In the dialog box that appears, select **Internet Protocol** (TCP/IP).

If TCP/IP is listed and checked, highlight it and click **Properties**, then select **Obtain IP address automatically** and **Obtain DNS server address automatically**.

6. All computers should be set identically.

Windows Vista: To ensure your network is set up properly for TCP/IP

- 1. Click **Start**, and then select **Control Panel**.
- 2. Click View network status and tasks under Network and Internet.

- 3. In the left pane, click Manage Network Connections.
- 4. If the computer is connected via Ethernet cable to the network, right-click **Local Area Connection (LAN)**.
- 5. If the computer is using a wireless connection, right-click **Wireless Network Connection**.
- 6. Click **Properties**. In the dialog box that opens, check to ensure that Internet Protocol Version 4 TCP/IPv4 is listed and selected.
 - If TCP/IP is not listed, click **Install**, **Protocol**, and then **Add**. In the dialog box that appears, select **Internet Protocol** (TCP/IPv4).
 - If TCP/IP is listed and checked, highlight it and click **Properties**, then select **Obtain IP** address automatically and **Obtain DNS server address automatically**.
- 7. All computers should be set identically.

Windows XP: To ensure your network has the correct NetBIOS set up

- 1. Click **Start**, and then select **Control Panel**.
- 2. Double-click **Network and Internet connections**.
- 3. Double-click **Network Connections**.
- 4. Double-click your default network connection.
 - Local Area Connection for wired networks.
 - Wireless for wireless connections.
- 5. Click **Properties**.
- 6. Highlight **Internet Protocol** (**TCP/IP**).
- 7. Click **Properties**.
- 8. Click Advanced.
- Click the WINS tab.
 WINS refers to Windows Internet Naming Service, which converts NetBIOS network names to IP addresses.
- 10. NetBIOS settings are found at the bottom of the dialog box. Make sure that the NetBIOS setting is **not** set to **Disable NetBIOS over TCP/IP**.

Windows Vista: To ensure your network has the correct NetBIOS set up

1. Click **Start**, and then select **Control Panel**.

- 2. Click View network status and tasks under Network and Internet.
- 3. In the left pane, click Manage Network Connections.
- 4. Right-click your default network connection.
 - Local Area Connection for wired networks.
 - Wireless for wireless connections.
- 5. Highlight Internet Protocol Version 4(TCP/IP).
- 6. Click Properties.
- 7. Click Advanced.
- Click the WINS tab.
 WINS refers to Windows Internet Naming Service, which converts NetBIOS network names to IP addresses.
- 9. NetBIOS settings are found at the bottom of the dialog box. Make sure that the NetBIOS setting is **not** set to **Disable NetBIOS over TCP/IP**.

NETWORK HEALTH

The Windows Home Server console contains a Network Health button to view the health of your network.

The Home Network Health dialog box shows health notifications from the server and the computers that are running Windows Vista.

To access the Network Health button

- 1. At the PC, double-click the **Windows Home Server icon** in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click the **Network Health** button.

Related Topics

Windows Home Server Console Help

- Network Health
- Home Server Health Notifications
- Home Computer Health Notifications

CHECK THAT THE ROUTER IS CORRECTLY CONFIGURED FOR DHCP

The HP Data Vault comes automatically set to use a DHCP server to dynamically assign IP addresses. Most router come with a built-in DHCP server.

Check that the router has the DHCP server correctly enabled. Refer to the documentation that came with the router for instructions on proper DHCP server configuration.

For information about configuring a router for remote access, see Configuring your broadband router in the Windows Home Server Console Help.

Windows Vista: Check that Network Discovery is turned on

To ensure that Network Discovery is turned on

- 1. Click the **Start** menu, and then select **Control Panel**.
- 2. In the Control Panel, click View network status and tasks.
- 3. In the Network and Sharing Center, make sure that Network discovery is on.
- 4. If Network discovery is off, click the **down arrow**, then select **Turn on network discovery** and **Apply**.

CHECK THE NETWORK IS SET UP PROPERLY FOR TCP/IP

Check the network is set up properly for TCP/IP Check that each computer on the network has TCP/IP listed and selected for the network properties with these options selected:

Obtain IP address automatically

Obtain DNS server address automatically

Windows XP: To ensure your network is set up properly for TCP/IP

- 1. Click Start, and then select Control Panel.
- 2. Double-click Network and Internet Connections.
- 3. Double-click Network Connections.

If the computer is connected via Ethernet cable to the network, right-click **Local Area Connection** (LAN).

- 4. If the computer is using a wireless connection, right-click Wireless Network Connection.
- 5. Click **Properties**. In the dialog box that opens, check to ensure that TCP/IP is listed and selected.

If TCP/IP is not listed, click **Install**, **Protocol**, and then **Add**. In the dialog box that appears, select **Internet Protocol** (TCP/IP).

- If TCP/IP is listed and checked, highlight it and click **Properties**, then select **Obtain IP** address automatically and **Obtain DNS server address automatically**.
- 6. All computers should be set identically.

Windows Vista: To ensure your network is set up properly for TCP/IP

- 1. Click **Start**, and then select **Control Panel**.
- 2. Click View network status and tasks under Network and Internet.
- 3. In the left pane, click **Manage Network Connections**.
- 4. If the computer is connected via Ethernet cable to the network, right-click **Local Area Connection (LAN)**.
- 5. If the computer is using a wireless connection, right-click Wireless Network Connection.
- Click Properties. In the dialog box that opens, check to ensure that Internet Protocol Version 4
 TCP/IPv4 is listed and selected.
 - If TCP/IP is not listed, click **Install**, **Protocol**, and then **Add**. In the dialog box that appears, select **Internet Protocol** (**TCP/IPv4**).
 - If TCP/IP is listed and checked, highlight it and click **Properties**, then select **Obtain IP** address automatically and **Obtain DNS server address automatically**.
- 7. All computers should be set identically.

CHECK THE NETWORK NETBIOS PROPERTIES

Check that each computer on the network has TCP/IP advanced network properties set to Enable NetBIOS over TCP/IP. All computers should be set identically.

Windows XP: To ensure your network has the correct NetBIOS set up

- 1. Click **Start**, and then select **Control Panel**.
- 2. Double-click Network and Internet connections.
- 3. Double-click Network Connections.
- 4. Double-click your default network connection.
 - Local Area Connection for wired networks.
 - Wireless for wireless connections.
- 5. Click **Properties**.

Highlight Internet Protocol (TCP/IP).

6. Click **Properties**.

- 7. Click Advanced.
- Click the WINS tab.
 WINS refers to Windows Internet Naming Service, which converts NetBIOS network names to IP addresses.
- 9. NetBIOS settings are found at the bottom of the dialog box. Make sure that the **NetBIOS** setting is **not** set to **Disable NetBIOS over TCP/IP**.

<u>Windows Vista: To ensure your network has the correct NetBIOS set up</u>

- 1. Click **Start**, and then select **Control Panel**.
- 2. Click View network status and tasks under Network and Internet.
- 3. In the left pane, click Manage Network Connections.
- 4. Right-click your default network connection.
 - Local Area Connection for wired networks.
 - Wireless for wireless connections.
- 5. Highlight Internet Protocol Version 4(TCP/IP).
- 6. Click **Properties**.
- 7. Click Advanced.
- 8. Click the **WINS** tab.

WINS refers to Windows Internet Naming Service, which converts NetBIOS network names to IP addresses.

9. NetBIOS settings are found at the bottom of the dialog box. Make sure that the **NetBIOS** setting is **not** set to **Disable NetBIOS over TCP/IP**.

NETWORK FREQUENTLY ASKED QUESTIONS

The following questions are answered in this document. Click the question to find the solution:

No Available Port on Network Router

• Why did URL not Work?

No Available Port on Network Router

Take the following steps:

- 1. To add more Ethernet ports, connect an Ethernet switch to the router. Refer to the switch documentation for instructions on how it connects to the router.
- 2. Connect one end of the Ethernet cable that came with the server to the switch and the other end to the HP Data Vault.

Why did URL not Work?

DNS has not updated, wait about 10 minutes for DNS to update.

WHAT ARE OPTIMUM DATA THROUGHPUT SPEEDS FOR DIFFERENT NETWORK INTERFACES?

Depending on the network interface your computer uses, you will experience different rates of data transfer to your server. Network Interfaces are described in terms of their ideal maximum speed, but many factors can affect the actual data transfer speeds you will experience. For example, your optimal wireless transfer speed will be reduced depending on the type of security and encryption you have enabled on your wireless network and by the amount of other work your computer and server are performing at the same time.

What are optimum data throughput speeds for different network interfaces?

- Gigabit Ethernet 1000mbps/125MBs
- Fast Ethernet 100mbps/12.5MBs
- Wireless N 600mbps/75MBs
- Wireless G 54mbps/6.75MBs
- Wireless A -54mbps/6.75MBs
- Wireless B 11mbps/1.375MBs

What is the ideal minimum time to transfer a 1GB file for different network interfaces?

- Gigabit Ethernet 8s
- Fast Ethernet 1min 20s
- Wireless N -13.3s
- Wireless G 2min 28s
- Wireless A 2min 28s
- Wireless B -12min 7s

THE FIRST BACKUP IS TAKING A LONG TIME

Your initial PC backup could take several hours, depending on how much data you have on your computer. Subsequent backups will go much faster since only the data that has changed is copied to the server.

UNINTERRUPTIBLE POWER SUPPLY IS NOT SUPPORTED

The HP Data Vault does not support active Uninterruptible Power Supply (UPS). Using the USB cable to allow the UPS to communicate with the HP Data Vault, can cause a wide range of false errors. Using the UPS in a passive mode (USB cable not attached) does not appear to cause any false error reporting.

THE FIREWALL IS BLOCKING THE CONNECTION

If using a firewall program, configure it to allow any HP Data Vault or Windows Home Server applications.

For instructions to unblock, see the software vendor's documentation.

What do Firewall Blocking Messages Mean?

Firewalls block certain types of communications between network devices. This helps protect your data from hackers, viruses, spyware, and Trojan horse software. The computer might have one or more firewall programs installed. For example, if the latest version of the Microsoft Windows XP operating system is installed, the computer may be using the Windows XP Firewall.

The HP Data Vault comes with software applications that must communicate over the network. Sometimes these programs are blocked by a firewall. When this happens, security alerts pop up on the computer screen.

Security alerts usually have a list of possible options. The particular messages or alerts displayed depend on the vender.

For example, the alert might offer the following options:

- Keep Blocking
- Unblock
- Defer the choice and be reminded later

If a security alert dialog box for an HP Data Vault application or the Windows Home Server is displayed by the firewall, click Unblock or Allow to permit the application to execute. It is safe to unblock the communications because no connection or communication with the Internet is enabled, only those between the server and its software applications. After unblocking an application, if any software is reinstalled, moved to a new disk location, or if the application is deleted from the exception list using the Windows XP Security Center control panel, communications between that software and the server may once again be blocked by the firewall.

Configure your firewall to allow any HP Data Vault or Windows Home Server applications.

UPDATE YOUR FIREWALL'S TRUSTED PROGRAM LIST

The Software Installation Disc installs several programs that enable your computer to communicate with the HP Data Vault over your network. Software firewalls installed on your

computer can block this communication and prevent the computer from locating the HP Data Vault on your network.



If Media Collector is not collecting music, photos, or videos and you use a third party firewall, add a firewall exception for port 21 TCP/outbound within the local subnet. Consult your software's documentation for details on how to do this.

In this article...

- Set Your Firewall or Anti-Virus Programs to Automatically "Learn" New Programs
- Manually Add Programs to Your Firewall or Anti-Virus Program's Trusted List

Set Your Firewall or Anti-Virus Programs to Automatically "Learn" New Programs

It is recommended that you set your firewall and anti-virus programs to "Learn" new programs before installing the HP Data Vault software. After the HP Data Vault software is installed, the firewall should prompt you to allow the installed programs to communicate with the server.

Allow the following HP Data Vault programs to communicate through your firewall or anti-virus program:

C:\Program Files\Windows Home Server\

- MountBackup.exe
- RestoreOffProc.exe
- WHSTrayApp.exe
- WHSConsoleClient.exe
- WHSConnector.exe
- BackupEngine.exe
- WHSOOBE.exe

C:\Program Files\Hewlett-Packard\HP MediaSmart Server\

- MediaCollectorClient.exe
- MSSConnectorService.exe
- ControlCenter.exe

C:\Program Files\HP\HP Software Update\

HPWUCli.exe

Manually Add Programs to Your Firewall or Anti-Virus Program's Trusted List

Some firewall or anti-virus programs may not automatically update their trusted programs list. Instructions for manually updating several common firewall and anti-virus programs are listed below. If your firewall or anti-virus program is not listed, please contact the vendor to find out how to manually add programs to the trusted programs list. Additionally, see the documentation that came with your firewall or anti-virus program for the latest information.

Click the vendor to expand and view the instructions on updating their trusted programs list. Click again to hide the instructions.

AVG

Open the AVG Anti-Virus plus Firewall. Double-click the Firewall button to configure the Firewall. Add the programs listed at the of this page.




McAfee

Open your McAfee Security Center, click **Internet and Network**, and then click the **Advanced** button in the firewall section. Click **Program Permissions**, then click **Add Allowed Program**. Add the programs listed at the of this page.



Note

McAfee's firewall automatically disables Windows Firewall and sets itself as your default firewall.

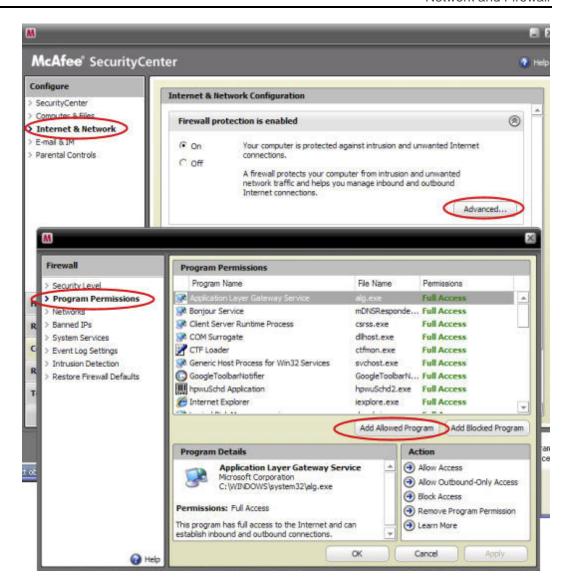


• Microsoft Windows Vista

To add exceptions to your firewall using Windows Vista, preform the following steps:

1. Click Start, Control Panel, and then Security Center.



2. Click Allow a program through Windows Firewall.

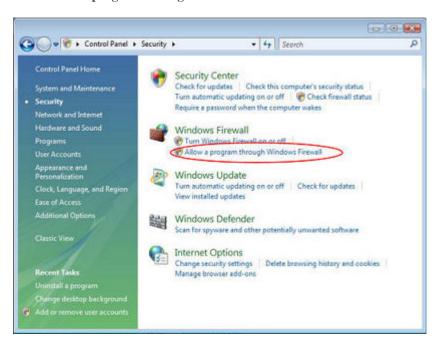




3. Select the **Exceptions** tab and then click **Add Program**.

- 4. In the **Add a Program** dialog box, click **Browse**. Add the programs listed at the of this page.
- 5. Click **OK**.
- Microsoft Windows XP

To add exceptions to your firewall using Windows XP, preform the following steps:


1. Click Start, Control Panel, and then Security Center.

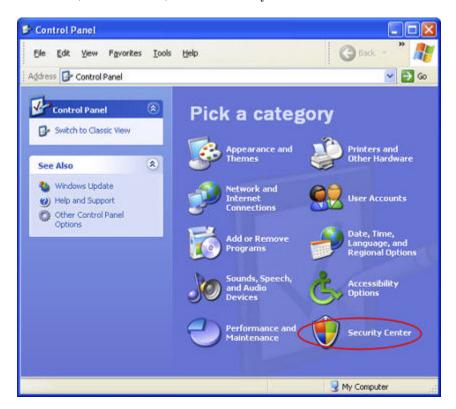

2. Click Windows Firewall.



- 3. Select the **Exceptions** tab and then click **Add Program**.
- 4. In the **Add a Program** dialog box, click **Browse**. Add the programs listed at the of this page.

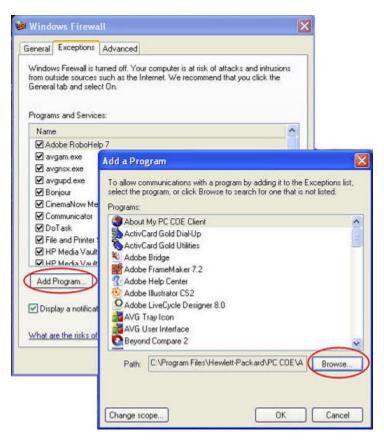

5. Click OK.


Norton

Click **Options** in Norton to change the firewall settings. Add the programs listed at the of this page.



• Symantec

Open Symantec Endpoint Protection, click **Change Settings**, and then click **Configure Settings** for Network Threat Protection. Add the programs listed at the of this page.

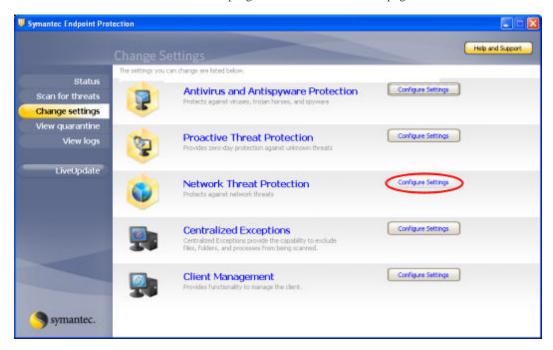


• Trend Micro


1. Open the Trend Micro Main Console, select the Personal Network and Firewall Controls tab, and then click Settings.




2. On the **Personal Firewall** page, click **Add**.

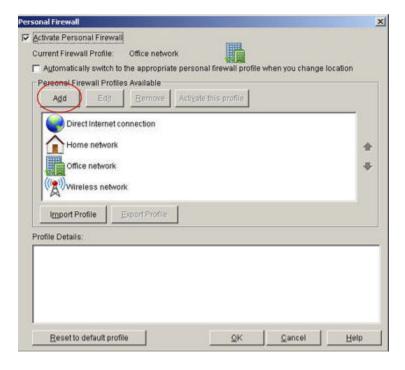

3. Select the **Program Control** tab and then click **Add**.

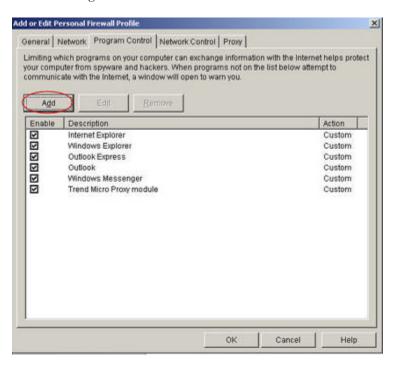


4. Click **Browse** and add the programs listed at the of this page.

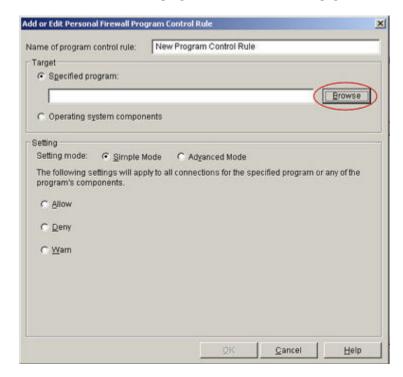

- 5. Click OK.
- ZoneAlarm

- 1. Open ZoneAlarm Security.
- 2. Click **Program Control**, **Programs**, and then **Add**.

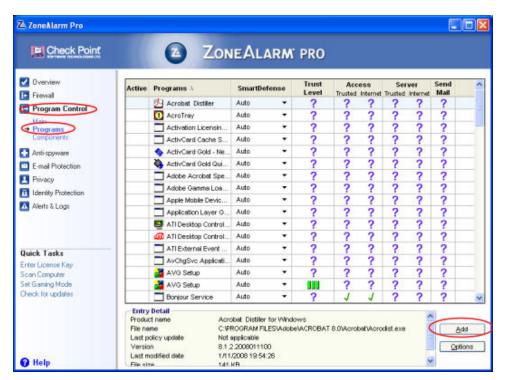

3. Add the programs listed at the of this page.

Chapter 11. Errors and Lights

SERVER IS UNRESPONSIVE

If the server appears to be unresponsive, do either of the following:

- Reset the server console
- Shutdown and restart the server manually

Reset the server console

How to reset the server from the Windows Home Server Console.

To reset the server

- If the Windows Home Server Console is open, click the Close button in the upper-left corner of the console.
- 2. Double-click the **Windows Home Server** icon with in the task tray.
- 3. On the Windows Home Server Console startup page, click **Options**.
- 4. From the drop-down menu, select **Reset the Windows Home Server Console**.
- 5. Click **OK** to verify that you want to reset the console.

Shutdown and restart the server manually

How to force the server to turn off and restart.

To perform a soft shut down and restart

- 1. On the back of the server, press the **Power** button.
- 2. The health light should begin blinking.
 The shutdown process may take up to two minutes to complete.
- 3. After the server is completely off, press the **Power** button to restart.

To force a shutdown and restart


- 1. On the back of the server, hold in the **Power** button for at least 4 seconds to force the server to shutdown.
- 2. After the server is completely off, press the **Power** button to restart.

POWER INDICATOR IS OFF

The server is not powered on.

To power on the server

1. Make sure the power cord is fully plugged into the server and a powered electrical outlet.

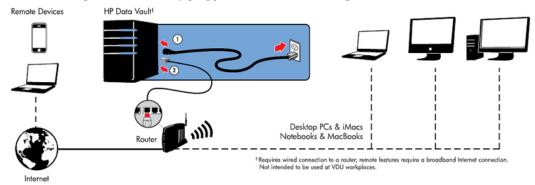

2. If plugged into a surge protector or power strip, make sure the device is switched on.

LIGHT-BAR BREATHING AQUA WHITE

A breathing or blinking aqua white light bar indicates that a hard drive has been installed, but has not been initialized. It occurs in the following conditions:

- When setting up the server for first time—the light-bar is breathing aqua white until the set up on the first computer is complete.
- The drive has been removed from total storage and the light bar is blinking—for example, when removing a drive from the drive bay. See <u>Add and Remove Drives from Server Storage</u>.
- When adding a new drive the light bar blinks aqua white, before it has been added to server storage.



HEALTH LIGHT IS RED

A red Health indicator light has the following states:

• Solid red - operating system failure.

Blinking red - power on test has failed or BIOS failed.

Additionally, on your computers the Windows Home Server icon is grey on the task tray, which indicates the computer cannot contact Windows Home Server.

To get more information about the failure, the HP Data Vault provides additional error codes.

To get the specific error code causing the failure

Use a paper clip to press and release the recessed Status/Recovery button on the front of the server.



LIGHT-BAR IS RED

A red light-bar indicates the following:

- That a hard drive has failed and must be replaced. Additionally, the connected computers show the following:
- The drive was removed from the drive bay before removing it from total storage. See Removing a hard drive in the Windows Home Server Console Help.
- Red icon a on the task tray.
- Red indicator on the Windows Home Server Console Network Health tab.

HARDWARE WARNING MESSAGES

Warning messages indicate Critical issues or At Risk issues.

- **Critical issues** address immediately; otherwise, the server may be damaged.
- At Risk issues address as soon as possible.

The HP Data Vault monitors the temperature of the microprocessor (CPU), fan speed, and voltages. It displays the following messages:

- <u>Temperature warnings</u>
- Fan speed warnings
- Voltages warnings

Temperature warnings

Temperature warning messages indicate that some server components are too hot.

To lower the temperature of the server

- 1. Check the ventilation surrounding the server:
 - If the server is located in a small unventilated space, move the server to a more ventilated location.
 - Check that the server's front and back panels are not blocked.
 - Check that the location of the server is not too hot. Maximum environmental temperature for operating the server is 35° C (95° F).
- 2. Remove any accumulated dust on the back and front of the server.

Fold up the flap on any empty system drive trays. For more information, see <u>Adding an internal SATA drive</u>.

- 3. If none of the previous steps return the temperature to normal:
 - Write down the temperatures of the CPU.
 - Turn off the server.
 - Contact HP Support at http://www.hp.com/support.

Fan speed warnings

The fans cool the disk drives and other electronics. If they are not cooling the server sufficiently, the hard drives and server may be damaged.

For fan speed out of specification

- 1. Write down the speeds of the upper and lower fans.
- 2. Turn off the server.
- 3. Contact HP Support at http://www.hp.com/support.

Voltages warnings

The voltages indicate the health of the server's power supply.

For voltages out of specification

- 1. Write down the voltages.
- 2. Turn off the server.
- 3. Contact HP Support at http://www.hp.com/support.

FILE TRANSFER FAILURE

What to do about a failure when transferring files to the HP Data Vault from your computer.

To correct a file transfer failure

- 1. Compare files that you were transferring with the files on the shared folder and try transferring the missing files again.
- 2. If the transfer fails again, check that you can access the Windows Home Server.
- 3. If you cannot access the Windows Home Server, check the network connections:
 - Make sure that all the cable connections are correctly plugged in.
 - Make sure the HP Data Vault has power and the Network indicator light is aqua white

Make sure the router (or switch) has power.

- Restart the router or switch (or unplug and plug it back in).
- Restart all the devices on the network, including the computers and the server.

Make sure your server and computers are on the same logical network (subnet). See What is an advanced network configuration? in the Windows Home Server Console Help.

- 4. If the computer that you transferring files from is connected wirelessly to the network, try connecting it with an ethernet cable.
- 5. Check the Event Viewer to see if the System logs show a disconnect:
 - In Windows XP, click Start, Control Panel, Performance and Maintenance, Administrative Tools, and then select Event Viewer.
 - In Windows Vista, click Start, Control Panel, System and Maintenance, Administrative Tools, and then select Event Viewer.

HEALTH INDICATOR CODES

The Tables below are a breakdown of the Health indicator displays. To see this code, using a paper clip, press and release the recessed Status/Recovery button on the front of the server.



Health indicator codes when the indicator starts as solid red					
Code	Description	Action			
Solid red—no code	Operating system or application error.	See Windows Home Server Console for error condition.			
1 aqua white, 2 red	System drive failed to boot.	If the light-bar for the system drive (the lowest light-bar) is also red, you need to replace the system hard drive.			
1 aqua white, 3 red	Operating system USB boot failed.	Check that lowest USB port on back of server has boot source.			
1 aqua white, 4 red	Recovery mode failed.	Contact HP Support at http://www.hp.com/support .			
1 aqua white, 5 red	Multiple boot failure.	Contact HP Support at http://www.hp.com/support .			
1 aqua white, 6 red	Service code.	Do not hold state button longer that 3 seconds. Shut down and repeat.			


Codes when the indicator starts as blinking red				
Code	Description	Action		
2 aqua white, 1 red	BIOS corrupted.	Repeat power-on to validate. If repeats Contact HP Support at http://www.hp.com/support .		
2 aqua white, 2 red	Memory failure.	Contact HP Support at http://www.hp.com/support .		
2 aqua white, 3 red	BIOS recovery source not present.	Contact HP Support at http://www.hp.com/support .		

NETWORK CONNECTION LIGHT IS OFF

To determine why the network connection light is off:

- Make sure that all the cable connections are correctly plugged in.
 Make sure the router or switch has power.
- Restart the router or switch (or unplug and plug it back in).

• If you are using your own Ethernet cable, try using the Ethernet cable that came with the HP Data Vault.

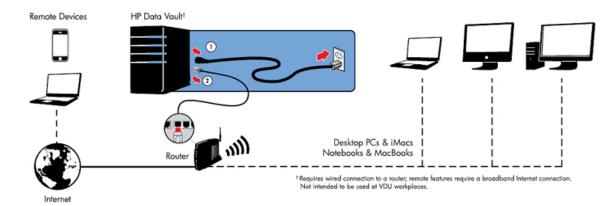

NETWORK CONNECTION LIGHT BLINKING AQUA WHITE

The server is intermittently connected to the network.

Check the cable connection between the server and the router/switch.

SERVER NOT SHOWING UP ON YOUR DMR

Issue:

The HP Data Vault is not listed on your DMR or DMA.

Solution:


You can either:

- Turn on Windows Home Server Media Sharing
- Turn on TwonkyMedia

Turn on Windows Home Server Media Sharing

- 1. At the PC, double-click the **Windows Home Server** icon with in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- 2. Click **Settings** in the upper right corner.
- 3. Click the **Media Sharing** link in the left navigation bar.

4. Click the **On** radio button for at least one of the folders.

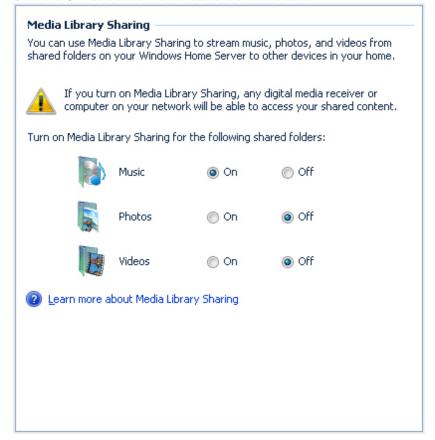

Turn on TwonkyMedia

- 1. At the PC, double-click the **Windows Home Server** icon in the system tray and log on. At the Mac, select **Launch Home Server Console** from the **Server** menu.
- Click TwonkyMedia in the left navigation.
 If you do not see TwonkyMedia in the left navigation, the add-in is not installed. Click Settings in the upper right corner. Click Add-ins in the left navigation of the Windows Home Server Settings dialog. On the Available tab, install the TwonkyMedia Server for HP Data Vault.
- 3. In the right pane, click **Start Sharing** and then click **Media Server Settings**.

WINDOWS HOME SERVER FREQUENTLY ASKED QUESTIONS

Server Low on Space.

Clean out unused files.

Earmark backups for deletion and 'clean up now', delete unused docs from Shared Folders.

Cannot Connect to Server Shares.

- A duplicate device exists on the network.
 Verify that there is no device on the network named hpstorage.
- User names and passwords do not match.
 Create a user on the server whose name and password match the user on the PC or enable the Guest account.

HUBS AND NETWORK HEALTH LIGHT

Some network hubs, as opposed to switches or routers, may reduce performance between your computer and the HP Data Vault, or the hub may prevent your computer from communicating with the server. If this is a problem, the network health indicator light on the front of the server will be off. Replacing the hub with a switch may improve the network performance or restore connectivity.

Chapter 12. Product Information

PRODUCT SPECIFICATIONS

The product specifications contain information about the HP Data Vault, its requirements, and standards.

- Minimum Client-computer Requirements
- <u>Server Specifications</u>
- Network Information
- Environmental
- Electrical and Power

Minimum Client-computer Requirements

One or more computers that meet or exceed these requirements:

Computer Requirements

Any computer capable of running the supported operating systems listed in the following table.

Operating Systems

Supported Operating Systems					
Operating System	Automatic Backup of Computers Running	File Sharing for Computers Running	Remote Access to Computers Running		
Linux		X			
Mac OS X 10.5 or later	X	X			
Windows Vista Business 32-bit or 64-bit SP2	X	X	X		
Windows Vista Business N 32-bit or 64- bit (European Union Only)	X	X	X		
Windows Vista Enterprise 32-bit or 64-bit SP2	X	X	X		
Windows Vista Home Basic 32-bit or 64-bit SP2	X	X			
Windows Vista Home N 32-bit or 64-bit (European Union Only)	X	X			

Supported Operating Systems					
Operating System	Automatic Backup of Computers Running	File Sharing for Computers Running	Remote Access to Computers Running		
Windows Vista Home Premium 32-bit or 64-bit SP2	X	X			
Windows Vista Ultimate 32-bit or 64-bit SP2	X	X	X		
Windows XP Home SP3	X	X			
Windows XP Professional SP3	X	X	X		
Windows XP Media Center Edition 2005 with SP2 and Rollup 2	X	X			

Client-computer Hard Drive

25 MB free for software installation on client computers

Other Client-computer Requirements

CD-ROM drive for client-computer installation

DVD-ROM drive for Server Recovery

Server Specifications

Server Specifications						
Specifications	HP Data Vault 1.0TB	HP Data Vault 2.0TB	HP Data Vault 3.0TB			
Internal Drive Storage	1.0 TB	2.0 TB	3.0 TB			
Processor	Intel Pentium Dual- Core E5200 Processor	Intel Pentium Dual- Core E5200 Processor	Intel Pentium Dual- Core E5200 Processor			
Drive Expandability	3 Serial ATA expansion bays	2 Serial ATA expansion bays	2 Serial ATA expansion bays			
	4 USB 2.0 ports	4 USB 2.0 ports	4 USB 2.0 ports			
	1 eSATA port	1 eSATA port	1 eSATA port			
	Maximum storage space: unlimited	Maximum storage space: unlimited	Maximum storage space: unlimited			

Product Information

Server Specifications					
Specifications	HP Data Vault 1.0TB	HP Data Vault 2.0TB	HP Data Vault 3.0TB		
Dimensions	Width: 14cm (5.5")	Width: 14cm (5.5")	Width: 14cm (5.5")		
	Height: 25cm (9.8")	Height: 25cm (9.8")	Height: 25cm (9.8")		
	Depth: 23cm (base)- 25cm () (9.2"-9.5")	Depth: 23cm (base)- 25cm () (9.2"-9.5")	Depth: 23cm (base)- 25cm () (9.2"-9.5")		
Weight	5.00 kg (11.02 lb.)	5.61 kg (12.36 lb.)	5.79 kg (12.76 .lb)		

Network Information

Default Network Name

hpstorage

Network Requirements

Network Requirements				
Requirement	Recommended			
Server connection	100 Mbps to 1000 Mbps (Gigabit Ethernet) wired connection.			
Home computers	One or more computers running a supported operating system with a wired or wireless network connection.			
Internet Connection	Broadband connection, such as DSL or cable, required for remote access functionality.			
Router	An external Internet broadband router with 100 Mbps (or faster) Ethernet connection to the server for remote access functionality and wired or wireless connections to the computers on the network. Additionally, your router must have DHCP enabled to provide automatic IP address to the server.			

Connector types

Ethernet: RJ45

eSATA: I-Type

Maximum transmission distances

Ethernet: 100 meters

eSATA: 2 meters

USB: 5 meters

Browser

Internet Explorer 6.0 or greater

Netscape 8.0 or greater

Firefox 2.0 or greater

Safari 3.0 and greater (Mac only)

Environmental

Temperature

Operating: 5 to 35 °C (4 to 95 °F)

Nonoperating: -30 to 65 °C (-22 to 149 °F)

Humidity (no condensation allowed)

Operating: 15% to 90% RH

Nonoperating: 5% to 95% RH

Shock

Nonoperating: 85 G

Vibration

Operating: 0.2 Grms

Nonoperating: 2.1 Grms

Electrical and Power

Electrical Ratings

100-240Vac, 5.0A, 50-60Hz

Power Consumption

HP Data Vautl 1.0TB

Sleep: 1W

Idle: 41W

Active Load: 43W

Extreme Load: 62W

HP Data Vautl 2.0TB

Sleep: 1W

Idle: 48W

Active Load: 54W

Extreme Load: 69W

HP Data Vautl 3.0TB

Sleep: 1W

Idle: 52W

Active Load: 56W

Extreme Load: 80W

Safety

IEC 950-compliant

USA – UL, CDRH Radiation Control Standards 21

CFR 1010 and 1020-1 0.50

Canada – CSA or CUL

Europe - LVD 73/23/EEC 93/68/EC

IEC 60950-1 plus amendments

EN60825 plus amendments

REGULATORY STATEMENTS

The HP Data Vault complies to the following:

- Federal Communications Commission Notice
- Modifications
- Cables
- Declaration of Conformity for Products Marked with the FCC Logo (United States only)
- California Perchlorate Material Notice

- Canadian Notice
- Avis Canadien
- WEEE Declaration
- REACH Statement
- European Union Regulatory Notice
- Japanese Notice

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

<u>Declaration of Conformity for Products Marked with the FCC Logo</u> (<u>United States only</u>)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

For questions regarding the product, contact:

Hewlett-Packard Company

P. O. Box 692000, Mail S 530113

Houston, Texas 77269-2000

Or, call 1-800-HP-INVENT (1-800-474-6836).

For questions regarding this FCC declaration, contact:

Hewlett-Packard Company

P. O. Box 692000, Mail S 510101

Houston, Texas 77269-2000

Or, call (281) 514-3333.

To identify this product, refer to the part, series, or model number found on the product.

California Perchlorate Material Notice

Perchlorate material - special handling may apply See http://www.dtsc.ca.gov/hazardouswaste/perchlorate/

This product's real-time clock battery or coin cell battery may contain perchlorate and may require special handling when recycled or disposed of in California.

Canadian Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Avis Canadien

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

REACH Statement

Chemical Substances

HP is committed to providing our customers with information about the chemical substances in our products as needed to comply with legal requirements such as REACH (Regulation EC No 1907/2006 of the European Parliament and the Council). A chemical information report for this product can be found at: http://www.hp.com/go/reach

European Union Regulatory Notice

This product complies with the following EU Directives:

- Low Voltage Directive 2006/95/EC
- EMC Directive 2004/108/EC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family.

This compliance is indicated by the following conformity marking placed on the product:



Hewlett-Packard GmbH, HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, Germany

Japanese Notice

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

WM-DRM 10 LICENSED TECHNOLOGY

Content providers are using the digital rights management technology for Windows Media contained in this device ("WM-DRM") to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM Software to play Secure Content ("WM-DRM Software"). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content ("Secure Content Owners") may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocations lists onto your device on behalf of Secure Content Owners.

LIMITED WARRANTY AND TECHNICAL SUPPORT STATEMENT

HP Data Vault Limited Warranty

Duration

Hardware: 1 year Limited Warranty

Software: 1 year Technical Support

General Terms

This HP Hardware Limited Warranty gives you, the customer, express limited warranty rights from HP, the manufacturer. Please refer to HP's Web site for an extensive description of your limited warranty entitlements. In addition, you may also have other legal rights under applicable local law or special written agreement with HP.

HP MAKES NO OTHER EXPRESS WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, AND HP EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. TO THE EXTENT ALLOWED BY THE LOCAL LAW OF JURISDICTIONS OUTSIDE THE UNITED STATES, HP DISCLAIMS ALL IMPLIED WARRANTIES OR CONDITIONS, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FOR ALL TRANSACTIONS OCCURRING IN THE UNITED STATES, ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THE EXPRESS

WARRANTY SET FORTH ABOVE. SOME STATES OR COUNTRIES/REGIONS DO NOT ALLOW A LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS. IN SUCH STATES OR COUNTRIES/REGIONS, SOME EXCLUSIONS OR LIMITATIONS OF THIS LIMITED WARRANTY MAY NOT APPLY TO YOU.

THE LIMITED WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT, OR MODIFY BUT ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

This Limited Warranty is applicable in all countries/regions and may be enforced in any country/region where HP or its authorized service providers offer warranty service for the same product model number subject to the terms and conditions set forth in this Limited Warranty.

Under the HP Global Limited Warranty program, products purchased in one country/region may be transferred to another country/region, where HP or its authorized service providers offer warranty service for the same product model number, without voiding the warranty. Warranty terms, service availability, and service response times may vary from country/region to country/region. Standard warranty service response time is subject to change due to local parts availability. If so, your HP authorized service provider can provide you with details.

HP is not responsible for any tariffs or duties that may be incurred in transferring the products. Transfer of the products may be covered by export controls issued by the United States or other governments.

This Limited Warranty applies only to HP-branded and Compaq-branded hardware products (collectively referred to in this Limited Warranty as "HP Hardware Products") sold by or leased from Hewlett-Packard Company, its worldwide subsidiaries, affiliates, authorized resellers, or country/region distributors (collectively referred to in this Limited Warranty as "HP") with this Limited Warranty. The term "HP Hardware Product" is limited to the hardware components and required firmware. The term "HP Hardware Product" DOES NOT include any software applications or programs; non-HP products or non-HP branded peripherals. All non-HP products or non-HP branded peripherals external to the HP Hardware Product — such as external storage subsystems, displays, printers, and other peripherals — are provided "AS IS" without HP warranty. However, non-HP manufacturers and suppliers, or publishers may provide their own warranties directly to you.

HP warrants that the HP Hardware Products that you have purchased or leased from HP are free from defects in materials or workmanship under normal use during the Limited Warranty Period. The Limited Warranty Period starts on the date of purchase or lease from HP or from the date HP completes installation. Your dated sales or delivery receipt, showing the date of purchase or lease of the product, is your proof of the purchase or lease date. You may be required to provide proof of purchase or lease as a condition of receiving warranty service. You are entitled to hardware warranty service according to the terms and conditions of this document if a repair to your HP Hardware Product is required within the Limited Warranty Period.

Unless otherwise stated, and to the extent permitted by local law, new HP Hardware Products may be manufactured using new materials or new and used materials equivalent to new in performance and reliability. HP may repair or replace HP Hardware Products (a) with new or previously used products or parts equivalent to new in performance and reliability or (b) with equivalent products to an original product that has been discontinued. Replacement parts are warranted to be free from defects in material or workmanship for ninety (90) days or, for the remainder of the Limited Warranty Period of the HP Hardware Product they are replacing or in which they are installed, whichever is longer.

During the Limited Warranty Period, HP will, at its discretion, repair or replace any defective component. All component parts or hardware products removed under this Limited Warranty become the property of HP. In the unlikely event that your HP Hardware Product has recurring failures, HP, at its sole discretion, may elect to provide you with (a) a replacement unit of HP's choosing that is the same or equivalent to your HP Hardware Product in performance or (b) to give you a refund of your purchase price or lease payments (less interest) instead of a replacement. This is your exclusive remedy for defective products.

Exclusions

HP does not warrant that the operation of this product will be uninterrupted or error-free. HP is not responsible for damage that occurs as a result of your failure to follow the instructions intended for the HP Hardware Product.

This Limited Warranty does not apply to expendable or consumable parts and does not extend to any product from which the serial number has been removed or that has been damaged or rendered defective (a) as a result of accident, misuse, abuse, contamination, improper or inadequate maintenance or calibration, or other external causes; (b) by operation outside the usage parameters stated in the user documentation that shipped with the product (c) by software, interfacing, parts, or supplies not supplied by HP; (d) by improper site preparation or maintenance; (e) by virus infection; (f) from loss or damage in transit; (g) by modification or service by anyone other than (i) HP, (ii) an HP authorized service provider, or (iii) your own installation of end-user-replaceable HP or HP-approved parts if available for your product in the servicing country/region.

YOU SHOULD MAKE PERIODIC BACKUP COPIES OF THE DATA STORED ON YOUR HARD DRIVE OR OTHER STORAGE DEVICES AS A PRECAUTION AGAINST POSSIBLE FAILURES, ALTERATION, OR LOSS OF THE DATA. BEFORE RETURNING ANY UNIT FOR SERVICE, BE SURE TO BACK UP DATA AND REMOVE ANY CONFIDENTIAL, PROPRIETARY, OR PERSONAL INFORMATION. HP IS NOT RESPONSIBLE FOR DAMAGE TO OR LOSS OF ANY PROGRAMS, DATA, OR REMOVABLE STORAGE MEDIA. HP IS NOT RESPONSIBLE FOR THE RESTORATION OR REINSTALLATION OF ANY PROGRAMS OR DATA OTHER THAN SOFTWARE INSTALLED BY HP WHEN THE PRODUCT IS MANUFACTURED. UNITS SENT IN FOR SERVICE MAY HAVE THE DATA ERASED FROM THE HARD DRIVE AND THE PROGRAMS RESTORED TO THEIR ORIGINAL STATE.

Exclusive Remedy

TO THE EXTENT ALLOWED BY APPLICABLE LOCAL LAW, THESE TERMS AND CONDITIONS CONSTITUTE THE COMPLETE AND EXCLUSIVE WARRANTY AGREEMENT BETWEEN YOU AND HP REGARDING THE HP HARDWARE PRODUCT YOU HAVE PURCHASED OR LEASED. THESE TERMS AND CONDITIONS SUPERSEDE ANY PRIOR AGREEMENTS OR REPRESENTATIONS — INCLUDING REPRESENTATIONS MADE IN HP SALES LITERATURE OR ADVICE GIVEN TO YOU BY HP OR AN AGENT OR EMPLOYEE OF HP — THAT MAY HAVE BEEN MADE IN CONNECTION WITH YOUR PURCHASE OR LEASE OF THE HP HARDWARE PRODUCT. No change to the conditions of this Limited Warranty is valid unless it is made in writing and signed by an authorized representative of HP.

Limitation of Liability

IF YOUR HP HARDWARE PRODUCT FAILS TO WORK AS WARRANTED ABOVE, HP'S MAXIMUM LIABILITY UNDER THIS LIMITED WARRANTY IS EXPRESSLY LIMITED TO THE LESSER OF THE PRICE YOU HAVE PAID FOR THE PRODUCT OR THE COST OF REPAIR OR REPLACEMENT OF ANY HARDWARE COMPONENTS THAT MALFUNCTION IN CONDITIONS OF NORMAL USE.

EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP BE LIABLE FOR ANY DAMAGES CAUSED BY THE PRODUCT OR THE FAILURE OF THE PRODUCT TO PERFORM, INCLUDING ANY LOST PROFITS OR SAVINGS OR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. HP IS NOT LIABLE FOR ANY CLAIM MADE BY A THIRD PARTY OR MADE BY YOU FOR A THIRD PARTY.

THIS LIMITATION OF LIABILITY APPLIES WHETHER DAMAGES ARE SOUGHT, OR A CLAIM MADE, UNDER THIS LIMITED WARRANTY OR AS A TORT CLAIM (INCLUDING NEGLIGENCE AND STRICT PRODUCT LIABILITY), A CONTRACT CLAIM, OR ANY OTHER CLAIM. THIS LIMITATION OF LIABILITY CANNOT BE WAIVED OR AMENDED BY ANY PERSON. THIS LIMITATION OF LIABILITY WILL BE EFFECTIVE EVEN IF YOU HAVE ADVISED HP OR AN AUTHORIZED REPRESENTATIVE OF HP OF THE POSSIBILITY OF ANY SUCH DAMAGES. THIS LIMITATION OF LIABILITY, HOWEVER, WILL NOT APPLY TO CLAIMS FOR PERSONAL INJURY.

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE OR FROM COUNTRY/REGION TO COUNTRY/REGION. YOU ARE ADVISED TO CONSULT APPLICABLE STATE OR COUNTRY/REGION LAWS FOR A FULL DETERMINATION OF YOUR RIGHTS.

Limited Warranty Period

The Limited Warranty Period for an HP Hardware Product is a specified, fixed period commencing on the date of purchase. The date on your sales receipt is the date of purchase unless HP or your reseller informs you otherwise in writing.

Types of Warranty Service

To enable HP to provide the best possible support and service during the Limited Warranty Period, you may be directed by HP to verify configurations, load most recent firmware, patches, run HP diagnostics tests, or use HP remote support solutions where applicable.

HP strongly encourages you to accept the use of or to employ available support technologies provided by HP. If you choose not to deploy available remote support capabilities, you may incur additional costs due to increased support resource requirements. Listed below are the types of warranty support service that may be applicable to the HP Hardware Product you have purchased.

Customer Self Repair Warranty Service

In countries/regions where it is available, your HP Limited Warranty may include a customer self repair warranty service. If applicable, HP will determine in its sole discretion that customer self repair is the appropriate method of warranty service. If so, HP will ship approved replacement parts directly to you to fulfill your HP Hardware Product warranty service. This will save considerable repair time. After you contact the HP Technical Support Center and the fault diagnosis identifies that the problem can be fixed using one of these parts, a replaceable part can be sent directly to you. Once the part arrives, replace the defective part pursuant to the provided instructions and documentation. If further assistance is required, call the HP Technical Support Center, and a technician will assist you over the phone. In cases where the replacement part must be returned to HP, you must ship the defective part back to HP within a defined period of time, normally thirty (30) days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective product may result in HP billing you for the replacement.

Product Information

With a customer self repair, HP will pay all shipping and part return costs and determine the courier/carrier to be used. If customer self repair applies to you, please refer to your specific HP Hardware Product announcement. You can also obtain information on this warranty service on the HP Web site at:

http://www.hp.com/support

Pickup and Return Warranty Service

Your HP Limited Warranty may include a pickup and return warranty service. Under the terms of pickup and return service, HP will pick up the defective unit from your location, repair it, and return it back to your location. HP will incur all repair, logistics, and insurance costs in this process.

Carry-in Warranty Service

Under the terms of carry-in service, you will be required to deliver your HP Hardware Product to an authorized service location for warranty repair. You must prepay any shipping charges, taxes, or duties associated with transportation of the product to and from the service location. In addition, you are responsible for insuring any product shipped or returned to an authorized service location and assume risk of loss during shipping.

Service Upgrades

HP has a range of additional support and service coverage for your product that can be purchased locally. However, some support and related products may not be available in all countries/regions. For information on availability of service upgrades and the cost for these service upgrades, refer to the HP Web site at:

http://www.hp.com/support

Options Limited Warranty, Software and Digital Content

Your Options Limited Warranty is a one (1) year (HP Options Limited Warranty Period) parts replacement warranty on any HP branded or Compaq-branded options (HP Options). If your HP Options are installed in an HP Hardware Product, HP may provide warranty service either for the HP Options Limited Warranty Period or the remaining Limited Warranty Period of the HP Hardware Product in which the HP Options are being installed, whichever period is the longer but not to exceed three (3) years from the date you purchased the HP Options. The HP Options Limited Warranty Period starts on your date of purchase. Your dated sales or delivery receipt, showing the date of purchase, is your start date. Non-HP options are provided "AS IS". Non-HP manufacturers and suppliers may provide warranties directly to you. EXCEPT AS PROVIDED IN ANY SOFTWARE END-USER LICENSE OR PROGRAM LICENSE AGREEMENT, OR IF OTHERWISE REQUIRED BY LOCAL LAW, SOFTWARE AND THIRD PARTY DIGITAL CONTENT, INCLUDING THE OPERATING SYSTEM OR ANY SOFTWARE OR THIRD PARTY DIGITAL CONTENT PREINSTALLED BY HP ARE PROVIDED "AS IS". EXCEPT AS SPECIFICALLY PROVIDED IN THIS LIMITED WARRANTY, IN NO EVENT WILL HP BE LIABLE FOR ANY DAMAGES CAUSED BY OR ARISING FROM ANY THIRD PARTY DIGITAL CONTENT PREINSTALLED ON YOUR HP HARDWARE PRODUCT.

HP DATA VAULT 3.0 UPDATE READ ME

In this article...

& Easy, automatic backup of your digital memories

- Enjoy your digital media experiences

Easy, automatic backup of your digital memories

- Set it and forget it! Your home server automatically manages many important activities (daily backup, media collection, and power management) for you behind the scenes.
- The HP Data Vault will automatically backup multiple computers in your home including both Windows PCs (Microsoft's Windows Home Server Backup) and Macs (Apple's Time Machine) and allows you to easily retrieve your digital media—music, photos, and videos—so they are never lost.
- Easy internal expandability with tool-free expansion bays allowing you to add additional internal SATA disk drives. Or expand your storage capacity externally using the 4 USB ports and the fast eSATA port.
- Automated PC backup software provides efficient backups to help save disk space and time.

Enjoy your digital media experiences

- Extend your digital media experiences by conveniently streaming photos, music and videos to your TVs, through gaming consoles such as Xbox 360 or PLAYSTATION3, and computer's within your home.
- Eliminate the frustration of trying to play your videos on different devices! The HP Video Converter automatically converts your library of videos (including unprotected DVDs) into a video format that can be played in your home and remotely on PCs and/or Macs and streamed to popular media devices such as xBox 360s and PS3s. Plus, you control how your videos are converted by selecting the device your video will be played on or specify the video settings yourself.
- Take your videos with you... The HP Data Vault creates a mobile version of your videos that you
 can download and play on your iPod, iPhone, PlayStation Portable (PSP), Zune and other popular
 mobile devices.
- The HP Data Vault supports iTunes and Windows Media Player devices so you can enjoy your music libraries throughout your home.

Centralize your digital life for sharing with friends and family

- The HP Data Vault will automatically centralize your digital media for sharing with family and friends, and enable you to enjoy your digital media while at home or away.
- Stream music, photos and video from your server to any Internet-connected computer. Now, all of your media is just a fingertip away! The MediaSmart Server iPhone app lets you stream all your media to your iPod touch or iPhone!

- HP Media Collector automatically collects, organizes and centralizes your media files from multiple Windows PCs and Macs (including iPhoto, iTunes, and iMovie libraries) to the server so you can easily find, share and stream your media.
- Using an Internet connected PC, you can quickly publish the photos on your server and/or directly to popular web sites such as Snapfish, Flickr, Picasa Web Albums, and even Facebook.
- The HP Photo Viewer allows you to create photo albums for sharing with family and friends.

Chapter 13. Licenses, Copyrights and Notices for Open Source Components

COPYRIGHTS

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Hewlett-Packard Company P.O. Box 4010 Cupertino, CA 95015-4010 USA

Copyright © 2009 Hewlett-Packard Development Company, L.P.

Apple, Mac, Macintosh, Mac OS, iMac, Mac mini, MacBook, iPhone, iPod and Time Machine are either registered trademarks or trademarks of Apple Inc. in the U.S. and/or other countries. Microsoft, Windows, Windows Vista, Windows NT, Zune, and Xbox are either registered trademarks or trademarks of Microsoft Corporation in the U.S. and/or other countries. Celeron and Pentium are registered trademarks of Intel Corporation in the U.S. and other countries. PlayStation3 and PSP3 are trademarks of Sony Corporation, registered in the U.S. and/or other countries. Amazon, AmazonS3, and other Amazon.com graphics, logos, page headers, button icons, scripts, and service names are trademarks, registered trademarks or trade dress of Amazon in the U.S. and/or other countries. Flickr is a trademark of Yahoo! Inc. registered in the U.S. and/or other countries. PicasaTM is a trademark of Google Inc. TwonkyMedia is a trademark of PacketVideo, registered in the U.S. and/or other countries. iStream is a trademark of Hewlett-Packard Company, registered in the U.S. and/or other countries. All other trademarks are the property of their respective owners.

HP supports lawful use of technology and does not endorse or encourage the use of its products for purposes other than those permitted by copyright law.

The information in this document is subject to change without notice.

FIREFLY: GPL LICENSE

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.,

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

1. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

- 3. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a. You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b. You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c. If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole

which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

- 3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - a. Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - b. Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - c. Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

- 6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
- 7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

- 8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
- 9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.
 - Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.
- 10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

- 11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
- 12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

IMAGEMAGICK: COMPATIBLE WITH GPL

Before we get to the text of the license lets just review what the license says in simple terms:

It allows you to:

- freely download and use ImageMagick software, in whole or in part, for personal, company internal, or commercial purposes;
- use ImageMagick software in packages or distributions that you create.

It forbids you to:

- redistribute any piece of ImageMagick-originated software without proper attribution;
- use any marks owned by ImageMagick Studio LLC in any way that might state or imply that ImageMagick Studio LLC endorses your distribution;
- use any marks owned by ImageMagick Studio LLC in any way that might state or imply that you created the ImageMagick software in question.

It requires you to:

- include a copy of the license in any redistribution you may make that includes ImageMagick software:
- provide clear attribution to ImageMagick Studio LLC for any distributions that include ImageMagick software.

It does not require you to:

- include the source of the ImageMagick software itself, or of any modifications you may have made to it, in any redistribution you may assemble that includes it;
- submit changes that you make to the software back to the ImageMagick Studio LLC (though such feedback is encouraged).

A few other clarifications include:

- ImageMagick is freely available without charge; you may include ImageMagick on a DVD as long
 as you comply with the terms of the license;
- you can give modified code away for free or sell it under the terms of the ImageMagick license or distribute the result under a different license, but you need to acknowledge the use of the ImageMagick software;
- the license is compatible with the GPL.

The legally binding and authoritative terms and conditions for use, reproduction, and distribution of ImageMagick follow:

Copyright 1999-2007 ImageMagick Studio LLC, a non-profit organization dedicated to making software imaging solutions freely available.

1. **Definitions.**

License shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

Licensor shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

Legal Entity shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, control means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

You (or Your) shall mean an individual or Legal Entity exercising permissions granted by this License.

Source form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

Object form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

Work shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

Derivative Works shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

Contribution shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, *submitted* means any form of electronic, verbal, or written communication intentionally sent to the Licensor by its copyright holder or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as *Not a Contribution*.

Contributor shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

- 2. Grant of Copyright License. Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.
- 3. **Grant of Patent License.** Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted.
- 4. **Redistribution.** You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:
 - You must give any other recipients of the Work or Derivative Works a copy of this License; and
 - You must cause any modified files to carry prominent notices stating that You changed the files; and
 - c. You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
 - d. If the Work includes a NOTICE text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

- 5. **Submission of Contributions.** Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.
- 6. **Trademarks.** This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.
- 7. Disclaimer of Warranty. Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an AS IS BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.
- 8. **Limitation of Liability**. In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work spage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.
- 9. **Accepting Warranty or Additional Liability.** While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License.

MISCUTIL.DLL: MISCUTIL

"Miscellaneous Utility Library" Software License

Version 1.0

Copyright (c) 2004-2006 Jon Skeet. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The end-user documentation included with the redistribution, if any, must include the following acknowledgment:

"This product includes software developed by Jon Skeet (skeet@pobox.com, http://www.pobox.com/~skeet/)."

Alternately, this acknowledgment may appear in the software itself, if and wherever such third-party acknowledgments normally appear.

- 4. The name "Miscellaneous Utility Library" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact skeet@pobox.com.
- 5. Products derived from this software may not be called "Miscellaneous Utility Library", nor may "Miscellaneous Utility Library" appear in their name, without prior written permission of Jon Skeet.

THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL JON SKEET BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

SAMPLE CODE: WPF CALCULATOR

http://clraddins.codeplex.com/Release/ProjectReleases.aspx?ReleaseId=9454

Release Notes

This sample demonstrates how AppDomain isolated add-ins can contribute directly to the host's UI using WPF. This sample was originally posted on our team blog (http://blogs.msdn.com/clraddins/archive/2007/08/06/appdomain-isolated-wpf-add-ins-jesse-kaplan.aspx) and has been updated to work on v3.5 RTM.

Released: Jan 10 2008

Updated: Jan 10 2008 by Jesse Kaplan

(http://www.codeplex.com/site/users/view/JesseKaplan)

Dev status: -not yet defined by owner-

Rated: No ratings yet for this release

Reviewed: 0 reviews

Downloaded: 2331 downloads

Wiki link: [release:9454]

LIBSMBCLIENT.DYLIB FROM SAMBA 3.0.38 GPLv2

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

1. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

2. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

- 3. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - a. You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - b. You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - c. If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

4. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a. Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b. Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c. Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

- 5. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 6. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
- 7. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
- 8. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

- 9. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
- 10. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.
 - Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.
- 11. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

- 11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.
- 12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE

PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SQLITE-DOTNET2: PUBLIC DOMAIN LICENSE

The Artistic License

Preamble

The intent of this document is to state the conditions under which a Package may be copied, such that the Copyright Holder maintains some semblance of artistic control over the development of the package, while giving the users of the package the right to use and distribute the Package in a more-or-less customary fashion, plus the right to make reasonable modifications.

Definitions:

- "Package" refers to the collection of files distributed by the Copyright Holder, and derivatives of that collection of files created through textual modification.
- "Standard Version" refers to such a Package if it has not been modified, or has been modified in accordance with the wishes of the Copyright Holder.
- "Copyright Holder" is whoever is named in the copyright or copyrights for the package.
- "You" is you, if you're thinking about copying or distributing this Package.
- "Reasonable copying fee" is whatever you can justify on the basis of media cost, duplication charges, time of people involved, and so on. (You will not be required to justify it to the Copyright Holder, but only to the computing community at large as a market that must bear the fee.)
- "Freely Available" means that no fee is charged for the item itself, though there may be fees involved in handling the item. It also means that recipients of the item may redistribute it under the same conditions they received it.
- You may make and give away verbatim copies of the source form of the Standard Version of this Package without restriction, provided that you duplicate all of the original copyright notices and associated disclaimers.
- 2. You may apply bug fixes, portability fixes and other modifications derived from the Public Domain or from the Copyright Holder. A Package modified in such a way shall still be considered the Standard Version.
- 3. You may otherwise modify your copy of this Package in any way, provided that you insert a prominent notice in each changed file stating how and when you changed that file, and provided that you do at least ONE of the following:
 - a. place your modifications in the Public Domain or otherwise make them Freely Available, such as by posting said modifications to Usenet or an equivalent medium, or placing the modifications on a major archive site such as ftp.uu.net, or by allowing the Copyright Holder to include your modifications in the Standard Version of the Package.
 - b. use the modified Package only within your corporation or organization.

- c. rename any non-standard executables so the names do not conflict with standard executables, which must also be provided, and provide a separate manual page for each non-standard executable that clearly documents how it differs from the Standard Version.
- d. make other distribution arrangements with the Copyright Holder.
- 4. You may distribute the programs of this Package in object code or executable form, provided that you do at least ONE of the following:
 - a. distribute a Standard Version of the executables and library files, together with instructions (in the manual page or equivalent) on where to get the Standard Version.
 - accompany the distribution with the machine-readable source of the Package with your modifications.

TFTPD32 ARTISTIC LICENSE



SQLite is in the public domain. (http://en.wikipedia.org/wiki/Public Domain)

All of the deliverable code in SQLite has been dedicated to the public domain by the authors. All code authors, and representatives of the companies they work for, have signed affidavits dedicating their contributions to the public domain (http://en.wikipedia.org/wiki/Public Domain) and originals of those signed affidavits are stored in a firesafe at the main offices of Hwaci (http://www.hwaci.com/). Anyone is free to copy, modify, publish, use, compile, sell, or distribute the original SQLite code, either in source code form or as a compiled binary, for any purpose, commercial or non-commercial, and by any means.

The previous paragraph applies to the deliverable code in SQLite - those parts of the SQLite library that you actually bundle and ship with a larger application. Portions of the documentation and some code used as part of the build process might fall under other licenses. The details here are unclear. We do not worry about the licensing of the documentation and build code so much because none of these things are part of the core deliverable SQLite library.

All of the deliverable code in SQLite has been written from scratch. No code has been taken from other projects or from the open internet. Every line of code can be traced back to its original author, and all of those authors have public domain dedications on file. So the SQLite code base is clean and is uncontaminated with licensed code from other projects.

PACKET VIDEO

Yahoo ASTRA Components for Flash: BSD License

Software License Agreement

The copyrights to the software code or designs (i.e., excluding any logos or trademarks or service marks of Yahoo! Inc.) written by Yahoo! are licensed under the following terms:

Copyright (c) 2008, Yahoo! Inc. All rights reserved.

Redistribution and use of this software in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions
 and the following disclaimer in the documentation and/or other materials provided with the
 distribution.
- Neither the name of Yahoo! Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission of Yahoo! Inc.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This also code contains software from the following sources, and licensed under the following terms:

In Charts:

DynamicRegistration. Copyright (c) 2003 Darron Schall (according to author, based on Robert Penner's (www.robertpenner.com) ActionScript 1 implementation); modified by Yahoo! Inc. for ActionScript 3 implementation)

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

In Charts:

Modified version of mc.drawWedge prototype by Ric Ewing (ric@formequalsfunction.com) - version 1.3 - 6.12.2002

- Thanks to: Robert Penner, Eric Mueller and Michael Hurwicz for their contributions.
- Source: http://www.adobe.com/devnet/flash/articles/adv_draw_methods.html (code is "free to use as you see fit. They are free of charge or obligation. I have endeavored to make these methods robust and useful, however I can make no guarantees about their suitability to your specific needs. I similarly make no guarantees that they are bug or problem free: caveat emptor.")

In Layout Utility and Layout Containers:

PercentageSizeUtil

The Initial Developer of the Original Code is Adobe Systems Incorporated (see original files for appropriate copyright notices)

Contributor(s): Yahoo! Inc.

Mozilla Public License Version 1.1

1. Definitions.

1.0.1. "Commercial Use"

means distribution or otherwise making the Covered Code available to a third party.

1.1. "Contributor"

means each entity that creates or contributes to the creation of Modifications.

1.2. "Contributor Version"

means the combination of the Original Code, prior Modifications used by a Contributor, and the Modifications made by that particular Contributor.

1.3. "Covered Code"

means the Original Code or Modifications or the combination of the Original Code and Modifications, in each case including portions thereof.

1.4. "Electronic Distribution Mechanism"

means a mechanism generally accepted in the software development community for the electronic transfer of data.

1.5. "Executable"

means Covered Code in any form other than Source Code.

1.6. "Initial Developer"

means the individual or entity identified as the Initial Developer in the Source Code notice required by Exhibit A.

1.7. "Larger Work"

means a work which combines Covered Code or portions thereof with code not governed by the terms of this License.

1.8. "License"

means this document.

1.8.1. "Licensable"

means having the right to grant, to the maximum extent possible, whether at the time of the initial grant or subsequently acquired, any and all of the rights conveyed herein.

1.9. "Modifications"

means any addition to or deletion from the substance or structure of either the Original Code or any previous Modifications. When Covered Code is released as a series of files, a Modification is:

Any addition to or deletion from the contents of a file containing Original Code or previous Modifications.

Any new file that contains any part of the Original Code or previous Modifications.

1.10. "Original Code"

means Source Code of computer software code which is described in the Source Code notice required by Exhibit A as Original Code, and which, at the time of its release under this License is not already Covered Code governed by this License.

1.10.1. "Patent Claims"

means any patent claim(s), now owned or hereafter acquired, including without limitation, method, process, and apparatus claims, in any patent Licensable by grantor.

1.11. "Source Code"

means the preferred form of the Covered Code for making modifications to it, including all modules it contains, plus any associated interface definition files, scripts used to control compilation and installation of an Executable, or source code differential comparisons against either the Original Code or another well known, available Covered Code of the Contributor's choice. The Source Code can be in a compressed or archival form, provided the appropriate decompression or de-archiving software is widely available for no charge.

1.12. "You" (or "Your")

means an individual or a legal entity exercising rights under, and complying with all of the terms of, this License or a future version of this License issued under Section 6.1. For legal entities, "You" includes any entity which controls, is controlled by, or is under common control with You. For purposes of this definition, "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of more than fifty percent (50%) of the outstanding shares or beneficial ownership of such entity.

2. Source Code License.

2.1. The Initial Developer Grant.

The Initial Developer hereby grants You a world-wide, royalty-free, non-exclusive license, subject to third party intellectual property claims:

- a. under intellectual property rights (other than patent or trademark) Licensable by Initial Developer to use, reproduce, modify, display, perform, sublicense and distribute the Original Code (or portions thereof) with or without Modifications, and/or as part of a Larger Work; and
- under Patents Claims infringed by the making, using or selling of Original Code, to make, have made, use, practice, sell, and offer for sale, and/or otherwise dispose of the Original Code (or portions thereof).
- c. the licenses granted in this Section 2.1 (a) and (b) are effective on the date Initial Developer first distributes Original Code under the terms of this License.
- d. Notwithstanding Section 2.1 (b) above, no patent license is granted: 1) for code that You delete from the Original Code; 2) separate from the Original Code; or 3) for infringements caused by: i) the modification of the Original Code or ii) the combination of the Original Code with other software or devices.

2.2. Contributor Grant.

Subject to third party intellectual property claims, each Contributor hereby grants You a worldwide, royalty-free, non-exclusive license

- under intellectual property rights (other than patent or trademark) Licensable by Contributor, to
 use, reproduce, modify, display, perform, sublicense and distribute the Modifications created by
 such Contributor (or portions thereof) either on an unmodified basis, with other Modifications, as
 Covered Code and/or as part of a Larger Work; and
- b. under Patent Claims infringed by the making, using, or selling of Modifications made by that Contributor either alone and/or in combination with its Contributor Version (or portions of such combination), to make, use, sell, offer for sale, have made, and/or otherwise dispose of: 1) Modifications made by that Contributor (or portions thereof); and 2) the combination of Modifications made by that Contributor with its Contributor Version (or portions of such combination).

- c. the licenses granted in Sections 2.2 (a) and 2.2 (b) are effective on the date Contributor first makes Commercial Use of the Covered Code.
- d. Notwithstanding Section 2.2 (b) above, no patent license is granted: 1) for any code that Contributor has deleted from the Contributor Version; 2) separate from the Contributor Version; 3) for infringements caused by: i) third party modifications of Contributor Version or ii) the combination of Modifications made by that Contributor with other software (except as part of the Contributor Version) or other devices; or 4) under Patent Claims infringed by Covered Code in the absence of Modifications made by that Contributor.

3. Distribution Obligations.

3.1. Application of License.

The Modifications which You create or to which You contribute are governed by the terms of this License, including without limitation Section 2.2. The Source Code version of Covered Code may be distributed only under the terms of this License or a future version of this License released under Section 6.1, and You must include a copy of this License with every copy of the Source Code You distribute. You may not offer or impose any terms on any Source Code version that alters or restricts the applicable version of this License or the recipients' rights hereunder. However, You may include an additional document offering the additional rights described in Section 3.5.

3.2. Availability of Source Code.

Any Modification which You create or to which You contribute must be made available in Source Code form under the terms of this License either on the same media as an Executable version or via an accepted Electronic Distribution Mechanism to anyone to whom you made an Executable version available; and if made available via Electronic Distribution Mechanism, must remain available for at least twelve (12) months after the date it initially became available, or at least six (6) months after a subsequent version of that particular Modification has been made available to such recipients. You are responsible for ensuring that the Source Code version remains available even if the Electronic Distribution Mechanism is maintained by a third party.

3.3. Description of Modifications.

You must cause all Covered Code to which You contribute to contain a file documenting the changes You made to create that Covered Code and the date of any change. You must include a prominent statement that the Modification is derived, directly or indirectly, from Original Code provided by the Initial Developer and including the name of the Initial Developer in (a) the Source Code, and (b) in any notice in an Executable version or related documentation in which You describe the origin or ownership of the Covered Code.

3.4. Intellectual Property Matters

(a) Third Party Claims

If Contributor has knowledge that a license under a third party's intellectual property rights is required to exercise the rights granted by such Contributor under Sections 2.1 or 2.2, Contributor must include a text file with the Source Code distribution titled "LEGAL" which describes the claim and the party making the claim in sufficient detail that a recipient will know whom to contact. If Contributor obtains such knowledge after the Modification is made available as described in Section 3.2, Contributor shall promptly modify the LEGAL file in all copies Contributor makes available thereafter and shall take other steps (such as notifying appropriate mailing lists or newsgroups) reasonably calculated to inform those who received the Covered Code that new knowledge has been obtained.

(b) Contributor APIs

If Contributor's Modifications include an application programming interface and Contributor has knowledge of patent licenses which are reasonably necessary to implement that API, Contributor must also include this information in the legal file.

(c) Representations.

Contributor represents that, except as disclosed pursuant to Section 3.4 (a) above, Contributor believes that Contributor's Modifications are Contributor's original creation(s) and/or Contributor has sufficient rights to grant the rights conveyed by this License.

3.5. Required Notices.

You must duplicate the notice in Exhibit A in each file of the Source Code. If it is not possible to put such notice in a particular Source Code file due to its structure, then You must include such notice in a location (such as a relevant directory) where a user would be likely to look for such a notice. If You created one or more Modification(s) You may add your name as a Contributor to the notice described in Exhibit A. You must also duplicate this License in any documentation for the Source Code where You describe recipients' rights or ownership rights relating to Covered Code. You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations to one or more recipients of Covered Code. However, You may do so only on Your own behalf, and not on behalf of the Initial Developer or any Contributor. You must make it absolutely clear than any such warranty, support, indemnity or liability obligation is offered by You alone, and You hereby agree to indemnify the Initial Developer and every Contributor for any liability incurred by the Initial Developer or such Contributor as a result of warranty, support, indemnity or liability terms You offer.

3.6. Distribution of Executable Versions.

You may distribute Covered Code in Executable form only if the requirements of Sections 3.1, 3.2, 3.3, 3.4 and 3.5 have been met for that Covered Code, and if You include a notice stating that the Source Code version of the Covered Code is available under the terms of this License, including a description of how and where You have fulfilled the obligations of Section 3.2. The notice must be conspicuously included in any notice in an Executable version, related documentation or collateral in which You describe recipients' rights relating to the Covered Code. You may distribute the Executable version of Covered Code or ownership rights under a license of Your choice, which may contain terms different from this License, provided that You are in compliance with the terms of this License and that the license for the Executable version does not attempt to limit or alter the recipient's rights in the Source Code version from the rights set forth in this License. If You distribute the Executable version under a different license You must make it absolutely clear that any terms which differ from this License are offered by You alone, not by the Initial Developer or any Contributor. You hereby agree to indemnify the Initial Developer and every Contributor for any liability incurred by the Initial Developer or such Contributor as a result of any such terms You offer.

3.7. Larger Works.

You may create a Larger Work by combining Covered Code with other code not governed by the terms of this License and distribute the Larger Work as a single product. In such a case, You must make sure the requirements of this License are fulfilled for the Covered Code.

4. Inability to Comply Due to Statute or Regulation.

If it is impossible for You to comply with any of the terms of this License with respect to some or all of the Covered Code due to statute, judicial order, or regulation then You must: (a) comply with the terms of this License to the maximum extent possible; and (b) describe the limitations and

the code they affect. Such description must be included in the **legal** file described in Section <u>3.4</u> and must be included with all distributions of the Source Code. Except to the extent prohibited by statute or regulation, such description must be sufficiently detailed for a recipient of ordinary skill to be able to understand it.

5. Application of this License.

This License applies to code to which the Initial Developer has attached the notice in **Exhibit A** and to related Covered Code.

6. Versions of the License.

6.1. New Versions

Netscape Communications Corporation ("Netscape") may publish revised and/or new versions of the License from time to time. Each version will be given a distinguishing version number.

6.2. Effect of New Versions

Once Covered Code has been published under a particular version of the License, You may always continue to use it under the terms of that version. You may also choose to use such Covered Code under the terms of any subsequent version of the License published by Netscape. No one other than Netscape has the right to modify the terms applicable to Covered Code created under this License.

6.3. Derivative Works

If You create or use a modified version of this License (which you may only do in order to apply it to code which is not already Covered Code governed by this License), You must (a) rename Your license so that the phrases "Mozilla", "MOZILLAPL", "MOZPL", "Netscape", "MPL", "NPL" or any confusingly similar phrase do not appear in your license (except to note that your license differs from this License) and (b) otherwise make it clear that Your version of the license contains terms which differ from the Mozilla Public License and Netscape Public License. (Filling in the name of the Initial Developer, Original Code or Contributor in the notice described in Exhibit A shall not of themselves be deemed to be modifications of this License.)

7. Disclaimer of warranty

Covered code is provided under this license on an "as is" basis, without warranty of any kind, either expressed or implied, including, without limitation, warranties that the covered code is free of defects, merchantable, fit for a particular purpose or non-infringing. The entire risk as to the quality and performance of the covered code is with you. Should any covered code prove defective in any respect, you (not the initial developer or any other contributor) assume the cost of any necessary servicing, repair or correction. This disclaimer of warranty constitutes an essential part of this license. No use of any covered code is authorized hereunder except under this disclaimer.

8. Termination

8.1. This License and the rights granted hereunder will terminate automatically if You fail to comply with terms herein and fail to cure such breach within 30 days of becoming aware of the breach. All sublicenses to the Covered Code which are properly granted shall survive any termination of this License. Provisions which, by their nature, must remain in effect beyond the termination of this License shall survive.

- 8.2. If You initiate litigation by asserting a patent infringement claim (excluding declatory judgment actions) against Initial Developer or a Contributor (the Initial Developer or Contributor against whom You file such action is referred to as "Participant") alleging that:
- a. such Participant's Contributor Version directly or indirectly infringes any patent, then any and all rights granted by such Participant to You under Sections 2.1 and/or 2.2 of this License shall, upon 60 days notice from Participant terminate prospectively, unless if within 60 days after receipt of notice You either: (i) agree in writing to pay Participant a mutually agreeable reasonable royalty for Your past and future use of Modifications made by such Participant, or (ii) withdraw Your litigation claim with respect to the Contributor Version against such Participant. If within 60 days of notice, a reasonable royalty and payment arrangement are not mutually agreed upon in writing by the parties or the litigation claim is not withdrawn, the rights granted by Participant to You under Sections 2.1 and/or 2.2 automatically terminate at the expiration of the 60 day notice period specified above.
- any software, hardware, or device, other than such Participant's Contributor Version, directly or indirectly infringes any patent, then any rights granted to You by such Participant under Sections 2.1(b) and 2.2(b) are revoked effective as of the date You first made, used, sold, distributed, or had made, Modifications made by that Participant.
 - 8.3. If You assert a patent infringement claim against Participant alleging that such Participant's Contributor Version directly or indirectly infringes any patent where such claim is resolved (such as by license or settlement) prior to the initiation of patent infringement litigation, then the reasonable value of the licenses granted by such Participant under Sections 2.1 or 2.2 shall be taken into account in determining the amount or value of any payment or license.
 - 8.4. In the event of termination under Sections <u>8.1</u> or <u>8.2</u> above, all end user license agreements (excluding distributors and resellers) which have been validly granted by You or any distributor hereunder prior to termination shall survive termination.

Limitation of liability

Under no circumstances and under no legal theory, whether tort (including negligence), contract, or otherwise, shall you, the initial developer, any other contributor, or any distributor of covered code, or any supplier of any of such parties, be liable to any person for any indirect, special, incidental, or consequential damages of any character including, without limitation, damages for loss of goodwill, work spage, computer failure or malfunction, or any and all other commercial damages or losses, even if such party shall have been informed of the possibility of such damages. This limitation of liability shall not apply to liability for death or personal injury resulting from such party's negligence to the extent applicable law prohibits such limitation. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion and limitation may not apply to you.

10. U.S. government end users

The Covered Code is a "commercial item," as that term is defined in 48 C.F.R. 2.101 (Oct. 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212 (Sept. 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4 (June 1995), all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

11. Miscellaneous

This License represents the complete agreement concerning subject matter hereof. If any provision of this License is held to be unenforceable, such provision shall be reformed only to the extent necessary to make it enforceable. This License shall be governed by California law provisions (except to the extent applicable law, if any, provides otherwise), excluding its conflict-of-law

provisions. With respect to disputes in which at least one party is a citizen of, or an entity chartered or registered to do business in the United States of America, any litigation relating to this License shall be subject to the jurisdiction of the Federal Courts of the Northern District of California, with venue lying in Santa Clara County, California, with the losing party responsible for costs, including without limitation, court costs and reasonable attorneys' fees and expenses. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded. Any law or regulation which provides that the language of a contract shall be construed against the drafter shall not apply to this License.

12. Responsibility for claims

As between Initial Developer and the Contributors, each party is responsible for claims and damages arising, directly or indirectly, out of its utilization of rights under this License and You agree to work with Initial Developer and Contributors to distribute such responsibility on an equitable basis. Nothing herein is intended or shall be deemed to constitute any admission of liability.

13. Multiple-licensed code

Initial Developer may designate portions of the Covered Code as "Multiple-Licensed". "Multiple-Licensed" means that the Initial Developer permits you to utilize portions of the Covered Code under Your choice of the MPL or the alternative licenses, if any, specified by the Initial Developer in the file described in Exhibit A.

Exhibit A - Mozilla Public License.

"The contents of this file are s	subject to the Mozilla	Public License Vei	rsion I.I (the "Lic	cense");
you may not use this file exce	ept in compliance with	the License. You	may obtain a cop	y of the
License at http://www.mozilla	a.org/MPL/ Software	distributed under th	ne License is distr	ributed on
an "AS IS" basis, WITHOUT	WARRANTY OF A	NY KIND, either e	xpress or implied	l. See the
License for the specific langu	age governing rights a	and limitations und	er the License. The	he Original
Code is		The Initial D	eveloper of the O	riginal
Code is	Portions cre	eated by		are
Copyright (C)		. All Rights Reserv		
	Al	ternatively, the cor	itents of this file i	may be
used under the terms of the _	license (the "[] License"), in wl	hich case the prov	visions of
[] License are applical	ole instead of those ab	ove. If you wish to	allow use of you	ır version of
this file only under the terms	of the [] License	and not to allow of	thers to use your	version of
this file under the MPL, indic	ate your decision by d	leleting the provision	ons above and rep	place them
with the notice and other prov	visions required by the	[] License. If	you do not delete	the
provisions above, a recipient	may use your version	of this file under e	ither the MPL or	the []
License."NOTE: The text of t	his Exhibit A may dif	fer slightly from th	e text of the notice	ces in the
Source Code files of the Orig	inal Code. You should	d use the text of this	s Exhibit A rather	r than the
text found in the Original Coo	de Source Code for Yo	our Modifications.		

PureMVC Framework: Creative Commons Attribution License 3.0

To view the Creative Commons Attribution License terms please see http://creativecommons.org/licenses/by/3.0/us/.

ScaleFilter: Software License Agreement (BSD License)

Copyright (c) 2008, Meraka Institute

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions
 and the following disclaimer in the documentation and/or other materials provided with the
 distribution.
- Neither the name of the Meraka Institute nor the names of its contributors may be used to endorse
 or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Real-Time Video Coding

Contents

- 1 Background
- 2 Contact Details
- 3 Seminars
- 4 Papers
- 5 Downloads
- 5.1 DirectShow Filter Downloads
- 5.2 Source Downloads
 - 6 Links
 - 7 Media

Background

The objective of the Real-Time Video Coding group is to research and develop intelligent multimedia software components and delivery systems that adapt to congested and low

infrastructure network environments. The emphasis is on jointly-optimised or co-operative behaviour between the delivery context, as in real-time network conditions, and the video/audio encoder rate control mechanisms. Innovative solutions are sought to enhance the Internet video experience in a developing world context where bandwidth is a scarce resource.

Current research within the group is concentrating on optimal and weighted context-based bit allocation techniques and implementations within international standard video codecs. A scalable and bandwidth adaptive multimedia broadcasting platform is under development to encompass the novelty of the bit allocation research.

Contact Details

Contact Person: Dr Keith Ferguson

Tel: +27(0)12 841 4433

Fax: +27(0)12 841 4720

Email: kferguson[at]csir.co.za

Seminars

30 September 2007 - IEEE students seminar at UCT

13 March 2008 - Seminar at UKZN

14 May 2008 - Guest lecture on Video Coding at University of Pretoria

Papers

Papers will be available here once complete.

Downloads

A part of the objective of the Real-Time Video Coding group is to utilise open source frameworks and to contribute to the open source community as well as to provide source code that is available for general usage. Please send comments, feedback, suggestions to rtvc[at]meraka.org.za.

DirectShow Filter Downloads

The following DirectShow filters are available for download as DLLs. These need to be registered using the regsvr32 command. Download the documentation below for more information about the filters.

Filter	Version	Description
ScaleFilter ScaleFilter	v1.1	The ScaleFilter is a DirectShow filter that can scale RGB24 media to specified target dimensions.
<u>CropFilter</u>	v1.3	The CropFilter is a DirectShow filter that can crop RGB24 and RGB32 media.

Filter	Version	Description
RGBtoYUV420Filter	v1.0	This filter converts RGB24 or RGB32 media to a YUV4:2:0 Planar format whilst retaining the original VideoInfoHeader of the media.
YUV420toRGBFilter	v1.0	This filter converts the custom packed YUV420 planar format back to RGB24.

Source Downloads

- Base classes and interfaces DirectShow base classes and interfaces have been written which simplify the creation of a transform filter. The CCustomBaseFilter class provides a base class for filters with a single input and output pin. The MultiIOBaseFilter project provides support for writing DirectShow transform filters with multiple input and output pins such as multiplexers and demultiplexers. All Meraka RTVC filters inherit these base classes, which are available in the download. The base class have been compiled into a static library which the user can reference in the project.
- **Filter Source Code** The download also contains the source code for the above-mentioned scaling, cropping and color conversion filters.
- Image Utilities The ImageUtils folder contains source code for various image processing such as cropping, scaling, etc. These files have been compiled into a static library which is also referenced by filters that require such functionality.
- **DirectShow LiveMedia RTSP Live Audio Streaming Server** This project provides an example as to how the DirectShow framework can be integrated with a RTP/RTCP/RTSP streaming library in order to stream live audio.



Links

DirectShow related

- <u>Blog containing free DirectShow filters and GraphStudio</u>, which offers some improved functionality over GraphEdit
- <u>DirectShow training</u>

• RTP/RTCP/RTSP related

• Open source RTP/RTCP/RTSP library that covers framing, sending of many media formats with a high level of importance based on standards. Main support via mailing list.

Media

- <u>CSIR researcher profile series</u>: Streamlining delivery of internet video broadcasting
- DST-Innovation Fund investment boosts collaborative research on real-time video broadcasting project
- Innovation Fund investment boosts collaborative research on real-time video broadcasting project

Glossary

A

- **all-in-one-gateway:** A device that provides multiple network features such as a router, modem, local area network (LAN) switch, firewall, and/or a wireless access point. Also see LAN.
- anti-virus software: Software that checks a hard drive for viruses (harmful computer code) that may infect a computer.

B

- **BIOS:** Basic Input/Output Services—the firmware code run by the server when first powered on. The BIOS prepares the server for operation and allows the server software to load, execute, and assume control of the server. This process is also known as booting up.
- **Browser window:** A browser window is used to display web pages either on a web site or stored locally such as the server's User's Guide.

\mathbf{C}

client computers: A client computer is a computer that accesses the server by the home network. This term also applies to computers using remote access to the server.

D

- **DHCP:** Dynamic Host Configuration Protocol—the protocol used to assign IP addresses to network devices, such as computers. DHCP automatically assigns IP addresses to network devices; the assigned address can change over time. Also see IP address, Protocol, and Static IP Address.
- **Digital Living Network Alliance:** A set of standards (that includes UPnP A/V) for sharing media between devices. PVConnect is DLNA compliant. Windows Media Connect is not. This compliance allows PVConnect to work with more DMRs.
- **digital rights management:** Technology built into digital media, such as music and movies, that allows companies in charge of their copyrights to decide how and where media can be used.
- **DMR:** Digital Media Receiver (DMR), Digital Media Adapter (DMA), Digital Media Player (DMP)—a consumer electronic device that communicates with the server and brings digital media streams—such as photos, music, or video—to your entertainment center.
- **DNS:** Domain Name System—a server that associates network names with IP addresses. Also see IP address.

F

folder duplication: Folder duplication duplicates folders and files across multiple hard drives. If you enable folder duplication and one hard drive fails, you will not lose any files stored in a shared folder. Any folder that has folder duplication enabled uses twice the amount of server storage.

HTTPS: A secure HTTP connection. HTTP (HyperText Transfer Protocol) is the format used to transfer and send web page information across networks, on the Internet, and in help systems. HTTPS is an HTTP connection over encrypted Secure Sockets Layer (SSL) transport mechanism. Also see Protocol.

I

IP address: An IP (Internet Protocol) address is a number that uniquely identifies devices, such as computers, on a network.

L

LAN: Local area network—a small number of computers that are connected together in a small area, usually in the same building.

logical: A device, such as a partition named by the logic of a software system, regardless of its physical relationship to the system. For example, a computer with a single physical hard disk that contains two logical drives, C: and D:.

M

Map: Assigning a drive letter to the connection on a computer to access a shared folder on the server.

Mbps: Megabits per second.

Media streaming: Media streaming sends media—music, photos and video files—from the server to other devices that can play the media. The server includes functionality that allows media to stream to a Digital Media Adapter (DMA). Also see DMR.

N

NAT: Network Address Translation—Broadband routers use NAT technology to allow network components to share Internet access over a single IP address. Additionally, NAT acts like a firewall because the computers and other devices—including the server—on the network are given IP address that are non-routable (non-internet addresses). This masks the real IP addresses of your network components and keeps them from being seen outside the home. Also see IP address.

P

partition: A logical division of a physical hard disk. Partition data refers to the information contained within the divisions on the drive. For example, some computers are formatted with a C: and D: drive, both of which use the same physical hard drive.

password hint: A password hint helps you remember your password. The password hint can be seen by anybody who clicks the link to display it.

PECI: Platform Environment Control Interface, abbreviated as PECI, is a recent (introduced in 2006) technology used for thermal management in the Intel Core 2 Duo microprocessors. While previous thermal management technologies have made use of thermal diodes, PECI instead uses on-die digital thermal sensors (DTS). These sensors, after being calibrated at the factory, are able to provide digital data concerning processor temperature information. The PECI bus, allowing access to this data from chipset components, is a proprietary single-wire interface with a variable data transfer speed (from 2 kbit/s to 2 Mbit/s).

physical hard disk: The actual hard disk (hard drive) located in a device that stores files and data.

port 80: Usually, an HTTP client, such as a Web browser, initiates contact to a server through port 80. After contacting the server, the server sends back a response, such as a Photo Publisher page.

Privilege level: A level assigned by the user that decides what access levels are available to other users.

Protocol: The standard(s) of how computers communicate data with each other.

R

router: A device connected to your computer that joins two or more networks. For example, a router connects your local network to the Internet.

S

SATA: Serial Advanced Technology Attachment (or Serial ATA) is an interface standard that moves information to and from a storage device, such as a hard drive.

shared folders: A "share folder" means the same as a "share," and you can use these terms interchangeably: A shared folder is a -level folder that is shared on the network and stores other folders within it. For example, the Music shared folder can store other folders (called sub-folders). A subfolder might be named for a musician, such as Mark Knopfler.

SMTP: Simple Mail Transfer Protocol—The main protocol used to send email on the Internet, consisting of rules for how programs sending mail should interact with programs receiving mail.

Static IP Address: A number assigned to a device, such as a computer, on a network to be its permanent IP address. Also see IP address and DHCP.

strong password: A strong password must be at least 7 characters long and must fulfill three of the following four character criteria: uppercase characters, lowercase characters, numbers, and symbols (such as !, @, #, and so on.) Also see password hint.

Sub-folders: A folder within a folder or a shared folder.

Subnet Mask: Identifies the portion of the network IP address that can be used for subnetworks. Also see IP address.

System drive: The hard drive (or drive partition) containing the operating system.

T

TB: Terabyte—refers to a data storage capacity equal to approximately 1000 gigabytes.

TCP/IP: Transmission Control Protocol/Internet Protocol. A set of communications protocols used to transmit data over networks. TCP provides for the establishment of connections and exchanges streams of data. IP specifies the format of the data. Also see IP address.

TCP/IPv4: TCP/IPv4 is the standard TCP/IP protocol in use today.

TCP/IPv6: TCP/IPv6 is the standard TCP/IP protocol used by Windows Vista. IPv6 main advantage is the increase in number of available addresses.

U

UNC: Uniform Naming Convention—identifies shared network devices, such as the server. It is a format for specifying the location of resources on a local-area network (LAN). It identifies each shared resource with a unique address in the following format: \server-name\sharedfolder-name. For example, \\SERVER\software. Also see LAN.

UPnP: Universal Plug and Play—a networking protocol that allows for many different types of devices to interact with one another. UPnP is the protocol used by media streaming.

W

- **WAP:** Wireless Access Point—a device, such as a wireless router, that connects wireless communication devices together to form a wireless network. A WAP often connects to a wired network, and can relay data between wireless devices and wired devices.
- **Web browser:** An application used to access information on networks, on the internet, and in help systems. Common web browsers include Internet Explorer, Netscape, and Firefox.
- WEP: Wired Equivalent Privacy—a protocol that encrypts data on a wireless system for security.
- WPA: Wi-Fi Protected Access—a technology that allows for increased security with wireless networks.

Index

3		В	
3gp	125	Backup	60, 205
Α		HP MediaSmart Server	60, 205
Aac	89, 132	Performing	60, 205
About Hardware Warning Me	ssages 259	Backup Disk Size	60, 205
About HP Add-ins	77	Backup Disk Status	60, 205
Ac3	125	Bar Pulsating Aqua White	258
Accesses	40, 79	Before Media Collector	89
HP MediaSmart Server	40, 79	BIOS	85
Add	219	Bmp	125, 132, 172, 193
Internal SATA Drive	219	Bonjour Computers	32
Additional Computers	28	Browse button	40, 79
Installing	28	select	40, 79
Administrative Privileges	20	BSD License	308
Aiff	125	С	
Album	89, 171, 193	Check	40, 79
Create	171, 193	Updates	40, 79
Album Missing Photos	199	Checkboxes	172, 193
Allow	244	using	172, 193
UPS	244	Choose Backup Disk	60, 205
Asf	125	Client computer	40, 79
Audio	132	Computer Recovery	205
Audio Formats	132	Computer Requirements	267
Automatic Windows Updates	20	Computers & Backup	59, 85, 204
Available Port	242	Restoring	59, 204
AVI	89, 125, 132, 143	Configure	40, 60, 79, 205

Time Machine	60, 205	DIVX	89, 112, 125
		DLNA	125
Configure HP Media Collector General Settings 91		DMA 7, 85, 114, 116, 125, 13	
Configure HP MediaSma 79	rt Software Update 40,	DMA 7, 83, 114, 116, 123, 13	125, 155, 263
Configure Mac Client	60, 205	DMR7, 77, 85, 114, 116, 125, 13	2, 153, 155, 263
Configure Media Collecte	or 91, 94, 97	Domain Name System	242
Music	94	DRM	112, 116
Photos	91	Duplicate Songs	154, 157
Videos	97	DV	132
Configure PVConnect	128, 132	DVD	112, 116
Streaming Media	128	DVR	89, 132
Configure Remote Acces	s 132	Dvr-ms	125
Configuring Windows U _I	pdate 42	Dynamic Host Configuration Pro	otocol 7
Connect As	32	E	
Contact	9, 244	Electrical Ratings	267
firewall	9, 244	ESATA	219, 267
Control Center applicatio	on 60, 205	Ethernet	7
Converted Videos Folder	113, 114	Ethernet switch	242
Copied	40, 79	External USB Drive	224
Server	40, 79	F	
Copyright	283	Facebook	172, 193
Create	60, 205	Facebook Logon	166
Mac Folder	60, 205	Firefly License	283
D		Firefox	175, 195, 197
Defaults	89	Firefox 2.0	267
Digital Media Adapter 155, 263	85, 114, 116, 125, 132,	Firefox Certification Needed	195
stream	125, 132	Firewall	9, 155, 244
Digital Media Player	125, 155, 263	contact	9, 244
Digital Media Receiver	125, 155, 158, 263	using	9, 244
Digital Media Server	125	Firewall Blocking Messages Mea	nn 244

Install Wizard

HP MediaSmart Server 5, 7, 9, 28, 40, 79, 85, 89,

125, 132, 244, 263

20

Installing	9, 20, 28, 31, 40, 79, 244	HP MediaSmart Server	9, 244
Additional Comput	ers 28	Log	132
Features	31	LPCM	125
First Computer	20	М	
HP MediaSmart Se	erver 9, 20, 28, 244	M1v	125
Mac Features	20	M2TS	89
Mac Software	31	M3u	89, 125
Windows Home Se	rver Connector 20	M4a	89, 125, 132, 154
Internal SATA Drive	221	M4v	89, 125, 132
Removing	221	Mac	32, 60, 205
Internet Explorer 6.0	267	Mac Backup	60, 205
Internet Protocol	7	Mac Client Version Number	51
IP 7		Mac Features	20
IPhone application	116	install	20
IPhones	116	Mac Folder	60, 205
IPods	116	create	60, 205
ITunes	20, 89, 94, 98, 130	Manage Network Connections	s 241
Settings	130	Manually Check	40, 79
ITunes Frequently Ask	ted Questions 131	Updates	40, 79
J		Manually Install	40, 79
Jpeg	172, 193	Update Copied	40, 79
Jpg	89, 125, 132, 172, 193	McAfee SecurityCenter	77
L		Media	77, 263
Launch Time Machine	60, 205	Media Collection	89
LC	132	Media Collection Order	89
Learn	9, 244	Media Collector	89, 94, 98, 112
Lights	3	Media Collector General	91
Link	40, 79	Media Sharing	154, 155, 263
uninstall	40, 79	Media Smart Server	244
Locating	9, 244	Media Streamer	149

-			шаск
Media streaming	114, 116, 153, 155	Music Source	94
MediaSmart Photo Viewer	172, 193	N	
MediaSmart Server	244	Naming	20
Microsoft Windows Home Ser	ver 40, 79	HP MediaSmart Server	20
update	40, 79	NET 2.0	20
MiscUtil	291	Netscape	132, 267
MJPEG	132	Network Connection Issues	235
Mobile devices	112	Network Connection Light Blinking	_
Mobile Resolution	112, 116	N. 1. C	263
Mov	89, 132	Network Connection Light Off	262
Mp1	125	Network Health	239
MP2	89, 125	Network Health Light	9, 244, 265
Mp3	89, 125, 132	Network NetBIOS Properties	241
Mp4	125, 132	Check	241
Mpa	125	Network Places	75
Mpe	125	Add Shared Folders	75
MPEG	89, 132	Network Requirements	5, 267
MPEG-1	125	Networks	132
MPEG-2	125	New Additions	131
MPEG-2-T-S	125	Next	40, 79
MPEG-4	112, 125	Notifications	81
Mpg	132	0	
Mpg/mpeg	125	Obtain DNS server address	240
MS	89, 132	Ogg	125
Music	94	Online Support	85
Configure Media Collector	94	Links	85
Music Collection Status	94	Optimum Data Throughput Speeds	243
Music Duplication	89	Organization Options	89
Music Formats	125	Output Services	85
Music Organization	94	Р	
		Password hint	20

PC Restore Disc	205	R	
PCM	132	Readme	279
Pct	89	Regulatory Statements	271
Photo Caption	188	Remote Access	85, 116
	2, 175, 176, 177, 185,	Remote Media Streaming	154
186, 193 Photo Viewer	197, 199	Remote Streaming	154
	197, 199	Remote video	112
Photo Viewer Home Page		Removing	224
Photos Unleading	77, 139	External USB Drive	224
Photos Uploading	173 195 193	Removing Drives	229
Picasa Lagar	172, 185, 193	Replacing	230
Picasa Logon	170	System Drive	230
Picture Formats	125 89	Rollback	40, 79
Pictures		HP Software Click	40, 79
Pla	125	Rolling Back Mac Clients	51
Player	143 131	Router	240, 242
Playlist Formata		S	
Playlist Formats Playlists	125 89	SATA	219
•		Add	219
Png	125, 132, 172, 193	Search button	40, 79
Podcasts	131 78	select	40, 79
Power Consumption	267	Secure Connection Failed	195
Power Consumption		SecurityCenter	77
Power Management Power-On Indicator	78 258	Select	40, 79
		Browse button	40, 79
Product Specifications	267	Search button	40, 79
Progress bar	143	Select file	40, 79
PureMVC	307	Select Photos	172, 193
PVConnect	77, 125, 128	Serial ATA	267
PVConnect File Formets	125, 158	Serial Number	85
PVConnect File Formats	158		

U		User's Guide on iTunes	131
Uninstall	40, 79	V	
link	40, 79	Vdr	125
Update	40, 79	Version	40, 79
Uninstall HP MediaSmart	Server 213	Version Numbers	51
Uninterruptible Power Sup	oply 244	Video codec	112, 116
Unresponsive	257	Video Collection Status	97
Update Client Computers	40, 79	Video Conversion	
Update Copied	40, 79	Fails	115
Manually Install	40, 79	Video Converter	112, 116
Updating	9, 40, 79, 131, 244	Video File Types	132
Check	40, 79	Video files	77
Manually Check	40, 79	Video Formats	125, 132
Microsoft Windows Ho	ome Server 40, 79	Video Resolution	116
Uninstall	40, 79	Video streaming	116
Windows Home Server	40, 79	Videos	132, 143
Your Firewall's Trusted	d Program List 9, 244	Vob	125
UPnP	125, 155	W	
UPS	244	Warranty and Support	275
allow	244	Wav	89, 125, 132
Using	244	Web	89
URL	132, 242	Web Media Streamer	132, 133, 139, 143, 149
USB	244	Selection Bar	143
Using	244	Wi-Fi Protected Access	7, 71
Use	40, 79	Windows Client	20
HP MediaSmart	40, 79	Windows Firewall	71
Used	132	Windows Home Server	40, 79, 89
access information	132	updating	40, 79
User account	32, 66, 85, 112, 113	Windows Home Server	Connector 20, 71
User's Guide	85	install	20

Windows Home Server Connector Setup window	20	Windows Server Console	89
	20	Wired Equivalent Privacy	7
		Wireless Network Connection	240, 267
Windows Home Server Console 1, 40, 57, 7 263	79,	Wireless Support	7
Opening	57	Wma	89, 125, 132
Windows Home Server Console Help 40, 79, 2	58	WM-DRM 10 Licensed Technology	275
Windows Home Server Settings window 94, 9	97	WMV	89, 125, 132
Windows Home Server Tabs	58	Wpl	89, 125
Windows Homer Server 13	32	X	
Windows Media Connect 77, 125, 154, 13	58	Xbox 360	7
Windows Media Connect File Compatibility 12	25	Xvid	112, 125
Windows Media DRM	31	Υ	
Windows Media Player	94	Yahoo ASTRA Components	299
		Your Firewall's Trusted Program Lis	st 9, 244