

# LSI Logic MegaRAID<sup>®</sup> Elite 1600

## 64-Bit 66 MHz PCI RAID Controller With Two Ultra 160M SCSI Channels



Thank you for purchasing the MegaRAID Elite 1600 PCI RAID controller. Please take a few minutes to review this quick guide before beginning the installation process. If you require a further explanation of any item covered in this guide, please refer to the complete hardware manual.

### Contents for the MegaRAID Elite 1600

You should have received: MegaRAID Elite 1600 RAID controller MegaRAID Driver and Documentation CD, which includes:

- *MegaRAID Elite 1600 Drivers and Utilities*
- *MegaRAID Elite 1600 Hardware Guide*
- *MegaRAID Configuration Software Guide*
- *MegaRAID Operating Systems Drivers Guide*
- *Software License Agreement*
- *Warranty Registration Card*

### Technical Support

If you need help installing, configuring, or running the MegaRAID SCSI 320-0 Controller, contact LSI Logic Technical Support:

**Phone Support:** 678-728-1250

**Web Site:** <http://megaraid.lsillogic.com/support/index.html>

**Mail:** [MegaRAIDsupport@lsil.com](mailto:MegaRAIDsupport@lsil.com)

### Universal Operating System Software Drivers

All MegaRAID controllers include configuration utilities and drivers for:

- *Novell<sup>®</sup> NetWare<sup>®</sup> 4.2 and 5.x*
- *Microsoft Windows NT<sup>™</sup> 4.0, 2000 and XP*
- *SCO<sup>®</sup> OpenServer 5.x*
- *SCO<sup>®</sup> Unixware 7.1.x/Open UNIX 8*
- *BSDI 4.x*
- *DOS 6.xx*
- *Linux Redhat 7.X, Caldera 3.1, Suse 7.1*
- *Solaris x86 2.6, 7 and 8*

**Note:** The DOS drivers for the MegaRAID Elite 1600 are contained in the firmware, except the DOS ASPI and CD-ROM drivers.

### Hardware Installation Requirements

You must have the following items before installing the MegaRAID Elite 1600 PCI RAID controller in a server:

- *Elite 1600 64-bit Ultra 160M RAID controller with cache memory*
- *Host computer with an available 64-bit PCI expansion slot (it will also work in a 32-bit slot and non-Ultra 160M drives)*
- *Elite 1600 installation CD*
- *Necessary SCSI cables and terminators*
- *An Uninterruptible Power Supply (UPS) for the entire system is recommended*
- *Ultra 160M SCSI hard disk drives and other SCSI devices, as desired*
- *Optional: SCSI cables that interconnect the Elite 1600 to external SCSI devices*

### Installation Steps


If you need only the basic MegaRAID features and your computer does not use other adapter cards with resource settings that may conflict with the MegaRAID Elite 1600 settings, the following steps will make your installation quick and easy. For all other configurations, please refer to the hardware manual.

Check	Step	Action
	1	Unpack the controller and inspect for damage.
	2	Turn the computer off and remove the cover.
	3	Make sure the motherboard jumper settings are correct.
	4	Install cache memory on the MegaRAID Elite 1600 controller. A minimum of 16 MB of cache is required.
	5	Check the jumper settings on the MegaRAID Elite 1600 controller. See Step 5 in the <i>MegaRAID Elite 1600 Hardware Guide</i> for more details.
	6	Set SCSI termination.
	7	Set SCSI terminator power (TermPWR).
	8	Connect the Battery Harness (optional).
	9	Install the MegaRAID Elite 1600 card.
	10	Connect the SCSI cables to the SCSI devices.
	11	Set target IDs for the SCSI devices.
	12	Replace the computer cover and turn the power on.
	13	Run MegaRAID Elite 1600 configuration utility (optional).
	14	Install software drivers for the desired operating systems.



# Quick Hardware Setup Guide

density 68-pin SCSI connectors and two external ultra high-density 68-pin SCSI connectors.

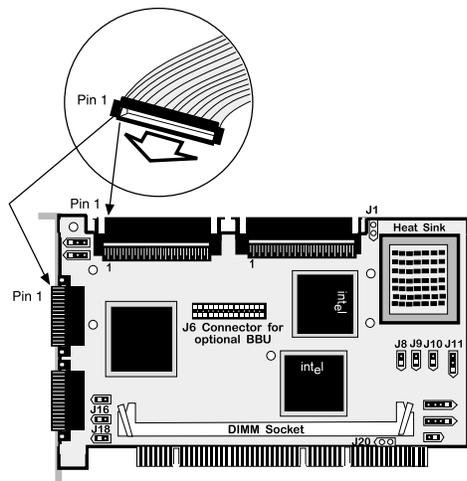

## Step 11: Set Target IDs

Set target identifiers (TIDs) on the SCSI devices. Each device in a specific SCSI channel must have a unique TID in that channel. Non-disk devices, such as CD-ROM or tape drives, should have unique SCSI IDs regardless of the channel to which they are connected.

## Step 12: Power Up

Replace the computer cover and reconnect the AC power cords. Turn power on to the host computer. Set up the power supplies so the SCSI devices are powered up at the same time as or before the host computer. If the computer is powered up before a SCSI device, the device might not be recognized.

During boot, the MegaRAID Elite 1600 BIOS message appears:

```
MegaRAID Elite 1600 Disk Array Adapter BIOS Version x.xx date  
Copyright (C) LSI Logic Corporation  
Firmware Initializing . . . [Scanning SCSI Device ...(etc)... ]
```

The firmware takes several seconds to initialize. During this time the adapter scans each SCSI channel. When it is ready, the following lines appear:


```
host Adapter-1 Firmware Version x.xx date DRAM Size 8 MB  
0 Logical Drives found on the Host Adapter  
0 Logical Drives handled by BIOS  
Press <Ctrl><M> to run MegaRAID Elite 1600 BIOS Configuration  
Utility
```

The <Ctrl> <M> prompt times out after several seconds.

The MegaRAID Elite 1600 host adapter (controller) number, firmware version and cache DRAM size are displayed in the second portion of the BIOS message. The numbering of the controllers follows the PCI slot scanning order used by the host motherboard.

## Step 13: Run MegaRAID Elite 1600 Configuration Utility

Press <Ctrl><M> or <Ctrl><H> to run the MegaRAID Elite 1600 BIOS Configuration Utility. See the *MegaRAID Configuration Software Guide* for information about running the MegaRAID Configuration Utility. A screen such as the following displays:

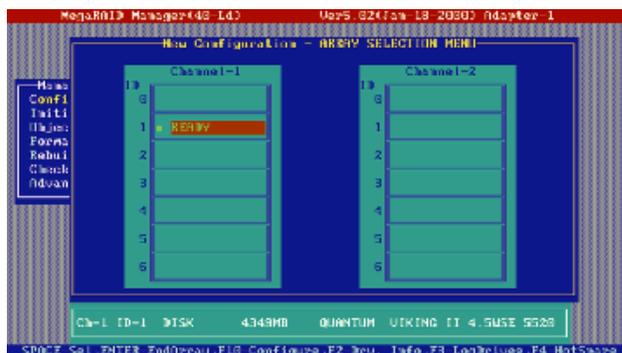

## Step 14: Installing Software Drivers for the Desired Operating Systems

For driver installation procedures, please refer to the *MegaRAID Operating Systems Drivers Guide* on the Drivers and Documentation CD.