



TRANS WORLD COMMUNICATIONS, INC.

**TW100 MICROPROCESSOR CONTROLLED
HF SSB TRANSCEIVER
OPERATORS MANUAL**

OPERATION NOTES

1. When using the TRANSCALL option, the remote control cable must be removed.
2. When using the Remote Control, the TRANSCALL must be turned off (i.e. flip the toggle switch from "TC" to "SC.")

TABLE OF CONTENTS

SECTION 1 - GENERAL INFORMATION

1.0	Introduction	1-1
1.1	Single Sideband	1-1
1.2	HF Communications	1-1
1.3	Modes of Operation	1-2
1.4	Transceiver Description	1-2
1.5	Frequency Selection	1-3
1.6	Synthesizer Description	1-3
1.7	Power Supplies	1-3
1.8	Microphones	1-4
1.9	Remote Control	1-4
1.10	Selective Calling	1-4
1.11	Antennas	1-4

SECTION 2 - TRANSCEIVER SPECIFICATIONS

2.1	General Information	2-1
-----	---------------------	-----

SECTION 3 - INSTALLATION

3.1	Introduction	3-1
3.2	Power Supply	3-1
3.3	Power Connections	3-1
3.4	Fixed Station	3-1
3.5	Marine Installation	3-1
3.6	Vehicular Installation	3-1
3.7	Mobile Noise Suppression	3-1
3.8	Tuning Adjustments	3-3
3.9	Microphone	3-3
3.10	Accessories	3-3

SECTION 4 - OPERATION

4.1	Introduction	4-1
4.2	Front Panel Controls	4-1
4.2.1	Power On/Off Switch	4-1
4.2.2	Audio Gaincontrol	4-1
4.2.3	Clarifier Control	4-1
4.2.4	Transcall On/Off Switch	4-1
4.2.5	Noise Blanker On/Off Switch	4-1
4.2.6	Speaker On/Off Switch	4-1
4.2.7	Squelch On/Off Switch	4-1
4.2.8	Receive Attenuator Control	4-1
4.2.9	Mode Switches	4-1
4.2.10	Automatic Antenna Tuner Control	4-2
4.2.11	Scan Mode Initiate Switch	4-2
4.2.12	Up/Down Tuning Switch	4-2
4.2.13	Selective Call Switches	4-2
4.2.14	Keyboard	4-2
4.3	Front Panel Indicators	4-2
4.3.1	Meter	4-2
4.3.2	Frequency Display	4-2

SECTION 4 - OPERATION (Continued)

4.3.3	Loudspeaker	4-2
4.3.4	Power On Light	4-2
4.4	Front Panel Connectors	4-2
4.4.1	CW Jack	4-2
4.4.2	Headphone Jack	4-2
4.4.3	Audio Jack	4-2
4.5	Operating Modes (Internal)	4-2
4.6	Operation -- Programming Memory Channel Frequencies In Simplex	4-3
4.7	Operation -- Programming Memory Channel Frequencies In Half-Duplex	4-3
4.8	Operation -- Memory Channel Selection	4-2
4.9	Operation -- Free Tune Channel	4-2
4.9.1	Programming The Free Tune Channel	4-2
4.9.2	Programming The Free Tune Channel For Half-Duplex Frequencies	4-3
4.9.3	Re-Calling The Free Tune Channel	4-4
4.10	Fine Tuning The Transceiver	4-4
4.11	Operation -- Scan Mode	4-4
4.12	Operation -- Selective Call	4-4
4.13	Operation -- Transcall	4-5
4.13.1	Abort/Exit From Transcall Mode	4-5
4.13.2	Transcall Scan	4-5

SECTION 5 - SERVICING

5.1	Introduction	5-1
5.2	Routine Maintenance	5-1
5.3	Access & Module Replacement	5-1
5.3.1	Cover Removal	5-1
5.3.2	Module Replacement M1-M6	5-1
5.3.3	Module Replacement M7	5-1
5.3.4	Module Replacement M8	5-1
5.3.5	Module Replacement M9	5-1
5.3.6	Module Replacement M10	5-1
5.3.7	Pin Connectors	5-1
5.3.8	Panel Components	5-2
5.3.9	Component Access Modules M1-M6	5-2
5.4	Frequency Calibration	5-2

FIGURES

1-1	Microprocessor Controlled HF SSB Transceiver	iv
2-1	Block Diagram	2-3
2-2	Module Location Diagram - Top	2-4
2-3	Module Location Diagram - Bottom	2-5
3-1	Power Transformer Connectors	3-2
3-2	Rear Panel Connectors	3-2
3-3	DC Power Cable	3-3
3-4	Microphone Connections	3-4
3-5	TW100 to TW5800 Telephone Coupler Control Cable	3-4

FIGURES (Continued)

3-6	TW100 to TW5201 Remote Control Console Control Cable	3-5
3-7	TW100 to AT100 Automatic Antenna Tuner Control Cable	3-5
3-8	TW100 to AT100 Automatic Antenna Tuner RF Cable	3-6
3-9	TW100 to TW5500 Message Terminal Control Cable	3-6
4-1	Front Panel	4-5

TABLES

2-1	Technical Specifications	2-1
5-1	Fault Location Chart	5-3
5-2	Module Fault Location Chart	5-4



FIGURE 1-1. Transworld 100 Transceiver.

SECTION 1 GENERAL INFORMATION

1.0 INTRODUCTION

This manual has been prepared for the operator of the TRANSWORLD TW100 transceiver. It has not been designed for the technician or engineer and does not cover detailed technical or installation information. The TW100-MS Technical manual gives comprehensive information on the transceiver and is essential for servicing, adjustment and installation of the transceiver.

1.1 SINGLE SIDEBAND

The transceiver provides voice communications in the single sideband mode. This mode is almost universally used for voice communications in the HF spectrum and provides a major advantage over the AM mode. The single sideband (SSB) transmitter uses special circuitry to suppress the carrier and one of the sidebands of an AM signal. This gives a great increase in efficiency as only 1/6th of the total power in an AM signal is in each sideband. The carrier carries no information and one of the sidebands is redundant meaning that the SSB signal puts all of the power into an information carrying sideband - a six hundred percent increase in efficiency. Apart from the improved power efficiency, the SSB signal occupies less than half the channel space of an AM signal and permits increased utilization of the crowded HF spectrum. The SSB signal is more intelligible at poor signal levels and is much less affected by selective fading and interference, giving an overall advantage much greater than the increase in effective power. It is necessary to use a special receiver for SSB as the transmission is unintelligible without the reinsertion of the carrier. The transceiver does have a compatible AM mode so that the transceiver can communicate with an AM station.

1.2 HF COMMUNICATIONS

The high frequency (HF) communications spectrum is primarily used for long distance communications, while the VHF and UHF spectrum is favored for local communications. If the correct frequencies and antenna systems are used, the HF spectrum will provide effective communications over almost any distance including intercontinental ranges. There are two main modes of propagation of HF signals - ground wave and sky wave. The ground wave follows the surface of the earth and provides reliable signals over short ranges. The signals are attenuated very rapidly as they pass over the surface of

the earth so that high powers and good antennas are essential for good ground wave coverage. The ground wave attenuation increases as a function of frequency and the lower frequencies below 3MHz are favored for ground wave operation. This mode may be the only effective method for local coverage in areas too mountainous for VHF and UHF operation.

Most HF communication is by sky wave where the signals bounce off the reflecting layers of the ionosphere. Long distances can be covered with little signal attenuation provided the correct frequency is chosen. The ionosphere does not stay constant; it varies with the time of day, time of year, the sun spot cycle and the activity of the sun. Solar flares can cause complete radio blackouts with little warning. HF communications are affected by static caused by lightening; sometimes from storms many hundreds or thousands of kilometers away. A clear channel can never be assured as long distance propagation may cause strong interfering signals on the frequency from great distances. It must always be understood that although long distance communications are possible with low powers and simple antennas, high reliability and freedom from interference is not possible. In spite of the problems, a surprisingly good standard of communications can be achieved, provided that care is taken to select the correct frequency, and to use good equipment with an efficient antenna system.

The correct choice of frequency is beyond the scope of this manual and in any case may be limited by the frequencies made available by the licensing authorities. If a choice of frequencies is available, the following information may give a starting point in making the choice. Remember that the final guide should be an actual test, as often only a small change in frequency may make a big difference in signal strength.

The low frequencies, below 3MHz, will normally be restricted to short ranges during the day. At night, longer ranges (3-400 kilometers) are possible, but interference and static may be major problems. Good antennas and high power are essential for anything but the shortest distances.

The medium frequencies from 3-5MHz may be a good choice for moderate distances (3-400 kilometers)

during the day. At night, considerable distances are possible, although static will be a frequent problem during summer months. The physical length of a good antenna is still quite long, and it is difficult to achieve good efficiencies with mobile antennas in this range.

The medium frequencies from 5-11MHz are the most popular for communications up to 1000 kilometers. Good ranges are possible during the day with the higher frequencies being favored for the longer distances. Communications may become more difficult at night with interfering signals from all over the world.

The higher end of the spectrum, above 12MHz is favored for long distance communications. The propagation will be severely affected by the ionosphere and expert advice is essential in choosing the correct frequencies for long distance operation. For example, frequencies as high as 30MHz may be used for worldwide communications during the peak of the sunspot cycle, while during periods of low sunspot activity, this frequency range will be completely dead. It is important to remember that at the higher frequencies there can be skip zones, and a strong signal may be received from 2000 kilometers away, while closer stations cannot be heard.

1.3 MODES OF OPERATION

As mentioned in Section 1.1, single sideband (SSB) is the premier mode for voice communications in the HF range. Most commercial operation is on the upper sideband (USB) although there are some countries where lower sideband (LSB) is specified. The transceiver will be equipped for USB operation unless LSB is specifically requested. If the licensing authorities permit USB and LSB operation, the transceiver may be equipped for operation on both sidebands. This is an advantage as sidebands may be switched to avoid interference or give an additional channel frequency.

AM has almost disappeared from the HF bands except for broadcast stations. The compatible AM mode (A3H) is available in the transceiver and is used for communicating with AM stations. Telegraphy (CW) is sometimes used for HF communications and skilled operators may achieve superior communications under difficult conditions.

Radioteletype operation has become an increasingly important form of HF communication and the transceiver has been designed for operation in this

mode (FSK). A special modem is required to convert the FSK signal for interface with the terminal unit. The RTTY modem is mounted in a special base for the transceiver which contains the modem, heavy duty power supply and cooling fans for continuous FSK operation. A completely self-contained terminal, modem and printer combination is available. See the RTTY Terminal Manual for more information.

1.4 TRANSCEIVER DESCRIPTION

The transceiver is an advanced solid state, high frequency, single sideband transceiver operating in the HF spectrum from 1.6-30MHz. Complete coverage of this range is available in 100Hz increments with no gaps or disallowed frequencies in the coverage.

A VOGAD (Voice Operated Gain Adjusting Device) amplifier maintains constant output without distortion on soft and loud voices. A meter measures received signal strength in the receive mode and relative power output in transmit. Although the transceiver is capable of complete frequency coverage, the operator using the channelized models is restricted to the programmed channel frequencies, and the transceiver meets all government restrictions on frequency control.

The transceiver has a minimum power output of 100W (PEP or average). Over much of the frequency range, the power output may be set as high as 150W PEP. The adjustable ALC circuitry may be set to limit the power output at any desired level.

The transceiver is constructed in an aluminum case with diecast front panel and heavy diecast rear heatsink fitted with recessed connectors. All external hardware is stainless steel and all parts are protected for operation in marine environments. The internal circuitry is contained in 6 diecast boxes, fitted with connectors. These modules may be simply interchanged for servicing. The Microprocessor Module and RF Filter and Switching Module are mounted under the main chassis and are easily accessible when the bottom cover is removed. The final amplifier is mounted directly on the rear heatsink. The entire transceiver construction is very rugged and suitable for use in the most severe environments.

The transceiver is fitted with a VSWR bridge. The reverse arm of the bridge is connected to the ALC circuit and automatically reduces power when

the VSWR increases. This protects the final amplifier against all conditions of mismatch. An internal connection is provided so that the front panel meter may be used to indicate relative VSWR.

The transceiver uses an up conversion system with the first IF at 7MHz and the main selectivity at 1650kHz. With this system, the main spurious products do not fall within the operating range, ensuring exceptional freedom from spurious response in both the transmitter and the receiver. The front end of the receiver uses a passive double balanced mixer with a high intercept point giving freedom from intermodulation and overload. The antenna is coupled to the transceiver through 6 high performance, 7-pole, elliptic function filters providing a high degree of harmonic attenuation and rejection of out of band signals. The receiver is equipped with a special noise immune squelch system designed for SSB operation. This is a great operator convenience as it eliminates background noise, yet opens reliably, even on weak SSB signals. The squelch circuit is pre-set and is controlled by an ON/OFF switch.

1.5 FREQUENCY SELECTION

The transceiver uses a microprocessor to control the frequency selection. The microprocessor operates in three different modes to suit the particular class of operation desired. The operational mode may be selected by an internal switch or may be permanently set by the use of a special coding circuit.

In Mode 3 the operator may select any one of the pre-programmed channel frequencies by entering the channel number on the keypad. The channel number is shown on the display.

In Mode 2 the operator can also display the channel frequency on any of the pre-programmed frequencies. If the channel is programmed for semi-duplex operation, the transmit frequency may be displayed. Channel 00 may be programmed by the operator, but it will only operate in the receive mode.

In Mode 1 the transceiver channel frequencies can be programmed by the operator. Channel 00 is designated as the free tuning channel and the frequencies may be quickly changed from the keypad and may be programmed for simplex or duplex operation.

No crystals are required for all frequency control is derived from a single temperature controlled, precision crystal oscillator. No tuning or adjustment is required for any frequency change. The channel frequencies are permanently retained in memory using a lithium battery with a life in excess of 10 years.

1.6 SYNTHESIZER DESCRIPTION

The use of advanced new integrated circuits has resulted in an extremely efficient and simple synthesizer design. Two separate loops are used. The 10kHz loop is used for the first conversion stage and covers the 1.6-30MHz range in 10kHz steps. Only three IC's are used in this loop. The 100Hz loop is used for the second conversion stage and covers a 10kHz range in 100Hz steps. The loop uses six IC's. Both loops are direct, ensuring freedom from spurious responses and the frequency control is derived from a single temperature controlled 5120kHz crystal oscillator.

The synthesizers are controlled by the microprocessor through the keypad. The use of a synthesizer is a special advantage in a multi-channel transceiver. Apart from the savings in cost and preventing delays in getting channel crystals, all frequencies are directly synthesized from a highly stable master oscillator. Provided this oscillator is on frequency, (a single adjustment), all channels are on frequency. Usually a channel is programmed to a standard frequency station such as WWV so that the calibration can be checked frequently. Older synthesizer designs suffered, not only from great complexity, but also internal spurs giving whistles in the tuning range of the receiver, which made the transceiver unusable on many frequencies. The transceiver has no spurs exceeding 0.5uV and has no unusable frequencies from 1.6-30MHz.

1.7 POWER SUPPLIES

The transceiver circuitry operates at 12V and is designed for direct operation from a 12V vehicle type battery. The final amplifier operates directly from the supply source (the transistors have a maximum collector voltage of 36V) and is protected from voltage surges by a 20V "TRANSORB". The transceiver circuitry is supplied through a special 12V regulator that maintains full output with almost no input voltage differential. If the voltage falls below 12V, the full available input voltage will be applied to the exciter,

which continues to operate down to 11V. This system provides safe operation from a 12V vehicular system even with poor regulation. An optional internal 115V/230V, 50/60Hz AC supply may be fitted for SSB operation. A separate heavy duty power supply is used for FSK operation. An optional model is available for 24-32V operation.

1.8 MICROPHONES

The microphone input is nominally 150 ohms and operates satisfactorily with a range of inputs from 100-2000 ohms. The microphone amplifier is a VOGAD providing constant output over a 60dB range of input levels. The transceiver can be used with almost any high quality dynamic, ceramic or controlled magnetic communications microphone equipped with a PTT switch.

1.9 REMOTE CONTROL (Optional)

The transceiver may be fitted with the optional remote control. The tone (AFSK) remote control

provides full control of the transceiver over a telephone line and is particularly useful when the transceiver cannot be installed at the operating site.

1.10 SELECTIVE CALLING (Optional)

The transceiver has provision for internal installation of the Selective Calling System. This system has 255 call codes and provides call indication and a sounder. A transponder gives an automatic answer from an unmanned transceiver. The system is very reliable and does not require precision control of the transceiver frequency. The Selective Calling System is operated through the keypad.

1.11 ANTENNAS

Further information on antennas is provided in Section 4 of the transceiver technical manual. The transceiver will operate correctly into any matched 50 ohm antenna.

SECTION 2

2.1 TRANSCEIVER SPECIFICATIONS

2.2 GENERAL INFORMATION

Section 2 contains technical specifications in Table 2-1, semiconductors in Table 2-2, the block diagram (Figure 2-1), and the module location diagrams (Figures 2-2 and 2-3).

TABLE 2-1. Technical Specifications.

GENERAL	<p>FREQUENCY RANGE: 1.6 - 30MHz in 100Hz synthesized steps.</p> <p>FREQUENCY ENTRY: Keypad controlled microprocessor.</p> <p>CHANNELS: 100 Simplex and Half-duplex.</p> <p>CHANNEL PROGRAMMING: Mode 1 Front Panel. Mode 2/3 Internal.</p> <p>CONTINUOUS ENTRY: Channel 00 by keypad entry. Mode 1: Transmit & Receive. Mode 2: Receive Only. Mode 3: Disabled.</p> <p>FREQUENCY DISPLAY: 6 Digit by keystroke (locked out in Mode 3).</p> <p>PROTECTION AGAINST UNAUTHORIZED FREQUENCY CHANGE: Coding device may be removed to lock transceiver in Mode 2 or Mode 3.</p> <p>TUNING: Up & Down Pushbutton Switches (receive only), 100Hz Steps.</p> <p>SCANNING: Automatic on up to 10 channels.</p> <p>ANTENNA IMPEDANCE: 50 Ohms.</p> <p>TEMPERATURE RANGE: -30° to +55°C.</p> <p>FREQUENCY CONTROL: Temperature controlled master oscillator $\pm 0.0001\%$, ± 20Hz maximum.</p> <p>MODES: Simplex and Half-duplex.</p> <p>OPERATION MODES: A3J, (USB/LSB*), A3A* (SSB reduced carrier), A3H (compatible AM), A1 (CW), F1 (teletypes).* *Optional</p> <p>SIZE: (AC & DC) Ht. 10.7cm Width 34.5cm Depth 44.5cm.</p> <p>WEIGHT: AC - 13kg, DC - 11.6kg.</p>
POWER SUPPLY	<p>13.6V DC: Receive 550mA, Transmit 12A Average SSB.</p> <p>28V DC: Receive: 350mA, Transmit 7A average SSB.</p> <p>Internal AC power supply 110/230V, 50/60Hz for SSB operation.</p> <p>External power supply 110/230V, 50/60Hz for FSK operation, complete with built-in FSK modem.</p>

TABLE 2-1. Technical Specifications, Continued.

TRANSMITTER	POWER OUTPUT: 125W PEP, 100W Average, ± 1 dB at Ambient.
	GAIN LEVELING/TEMPERATURE: 125W PEP, 100W Average $+2$, -3 dB over temperature.
	ANTENNA MISMATCH: Protected against mismatch including open and shorted antennas.
	CARRIER SUPPRESSION: Greater than -50 dB.
	UNWANTED SIDEBAND: -60 dB at 1kHz, typical.
	SPURIOUS SUPPRESSION (including harmonics): Greater than -63 dB over 97% of the frequency range, except 2nd harmonic of frequencies below 2MHz.
	AUDIO INPUT: 150 Ohms, VOGAD for constant audio level.
	AUDIO BANDWIDTH: 2.4kHz.
	INTERMODULATION DISTORTION: Greater than -32 dB over 75% of the frequency range.
	ALC: Less than 1dB increase for 20dB increase in audio input.
	METERING: Relative RF output, VSWR (internal connection).
RECEIVER	SENSITIVITY: 0.35uV for 10dB S + N/N.
	SELECTIVITY: 300 to 2700Hz -6 dB, -60 dB at 5kHz, typical.
	IMAGE REJECTION: Greater than 80dB.
	IF REJECTION: Greater than 80dB.
	CONDUCTED RADIATION: -70 dBm.
	AGC CHARACTERISTICS: Less than 6dB audio increase from 3uV to 300,000uV.
	INTERCEPT POINT: $+11$ dBm.
	INTERMODULATION: -85 dB.
	CLARIFIER: ± 125 Hz.
	SQUELCH: Audio derived, noise immune.
	AUDIO OUTPUT: 4W into 3 ohms, internal loudspeaker.
	METERING: RX signal strength.

Specifications subject to change without notice.

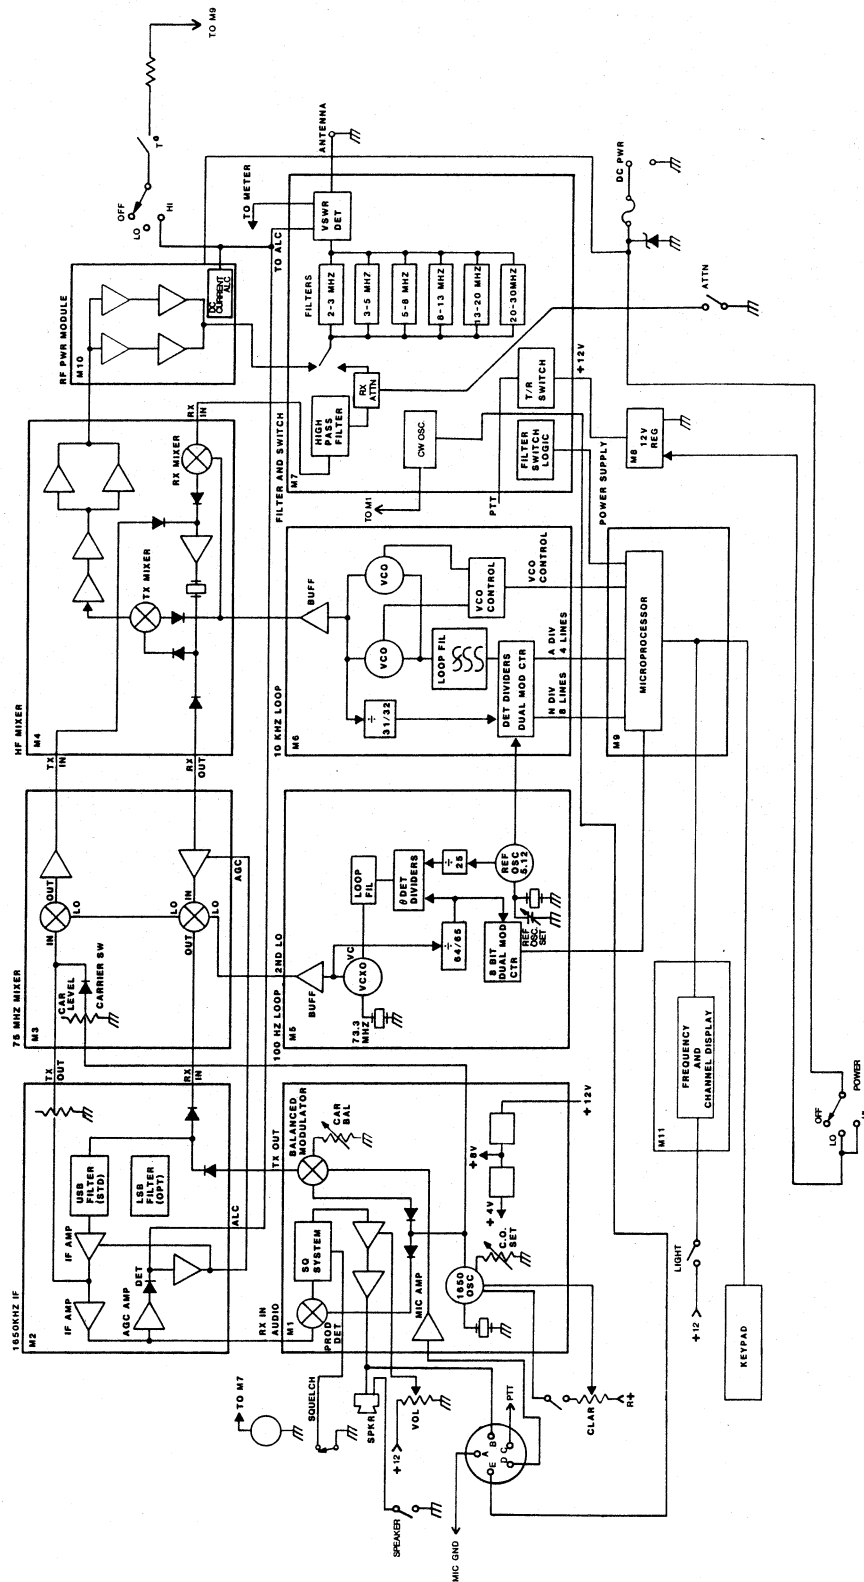


FIGURE 2-1. Block Diagram.

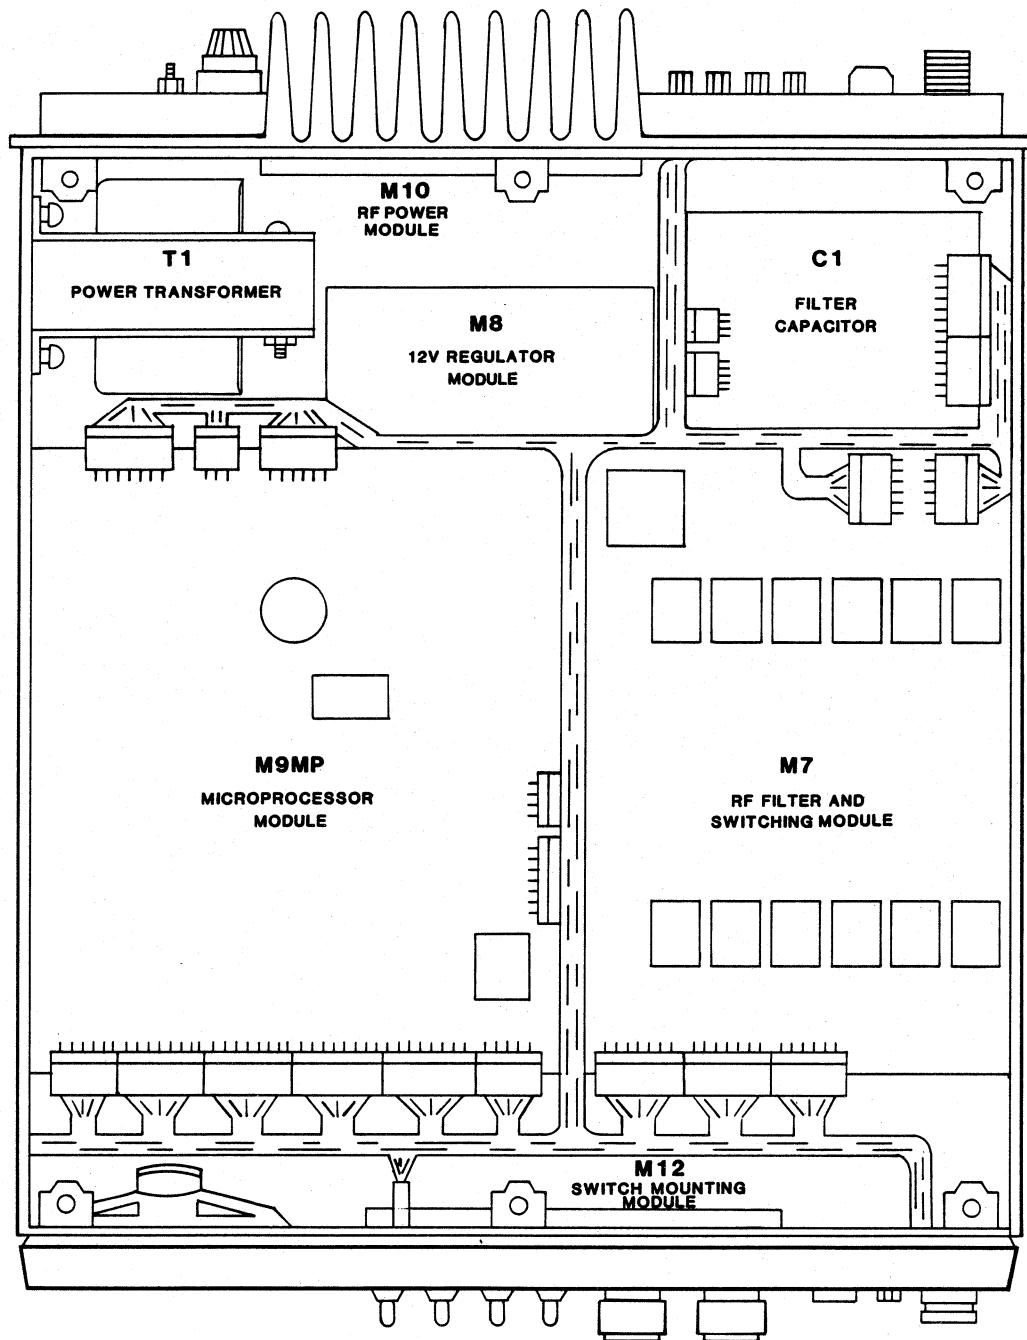


FIGURE 2-3. Module Location Diagram - Bottom.

SECTION 3 INSTALLATION

3.1 INTRODUCTION

To get the correct performance from the transceiver it is necessary to install the transceiver correctly. This is particularly important in marine and land mobile installations where mounting and power source connections can make a material difference to the transceiver performance. In every installation, the antenna system is the key to satisfactory performance and care should be taken to ensure that the best possible antenna, adjusted for low VSWR on each channel, is used. Most complaints of poor performance can be traced to an unsatisfactory antenna installation.

3.2 POWER SUPPLY

Two power connectors are installed in the rear panel casting. The AC power connection is made through the preassembled power cable fitted with a three pin connector that plugs into the connector at the rear of the transceiver. The other end of the cable is fitted with a three pin power connector. One of the following wire codes will be used.

PHASE	BLACK	BROWN
NEUTRAL	WHITE	BLUE
GROUND	GREEN	GREEN-YELLOW STRIPE

The power cable will indicate the correct voltage for the AC power supply. If the voltage is not correct, the connections for the power transformer must be changed in accordance with the instructions in the diagram in Figure 3-1. The fuse should also be changed (115V 3A, 230V 1.5A).

The transceiver is supplied with a 14AWG power cable and a two pin connector. This cable is not assembled to facilitate connections to the DC power source. Connections to the rear panel should be made as shown in diagram Figure 3-2. The power source should apply 13.6V at 20A and the connections should be made to minimize voltage drop in the cable. Do take care not to reverse the supply polarity. This will cause the DC supply fuse to blow.

CAUTION

Do not operate the transceiver on the AC supply while connected to the DC power source. This could result in overcharging the battery or charging at an excessive rate.

3.3 POWER CONNECTIONS

The power cable should be connected to the battery by the shortest possible route. It is essential that a low resistance connection is made to the battery terminals for correct operation of the transceiver. Do not use the vehicle body to make the negative ground return. Use heavy gauge cable for the wiring (#14 AWG up to 3 meters, #10 or #12 AWG for longer runs). Make sure that the cable is clear of the vehicles pedals and other moving parts. The cable can probably be routed through an existing grommet in the fire wall and should be kept as far as possible from the ignition to prevent the pick-up of noise. If a new hole is required in the fire wall, make sure that a grommet is fitted to prevent chafing of the wire. Remember that a short in the power cable could cause a fire in the vehicle. High resistance connections can cause heating, and will eventually arc causing another fire hazard as well as seriously affecting the transceiver performance. It is a good precaution to fit a 50A fuse in the positive line at the battery. Figure 3-3 is a drawing of the DC power cable showing material P/N's and pin connections.

3.4 FIXED STATION

The transceiver is shipped ready for operation on a desk top. Make sure that there is adequate space for ventilation around the heatsink. The front of the transceiver may be raised by lifting the bale under the front feet.

3.5 MARINE INSTALLATION


The transceiver is mounted in place using the mobile mounting brackets. The brackets are arranged so that they may be reversed for top or bottom mounting.

3.6 VEHICULAR INSTALLATION

The mobile mounts are used to mount the transceiver from the top to bottom. It will frequently be necessary to fabricate supplementary brackets to suit the particular vehicle. After mounting the transceiver, ensure a low resistance connection is made to the frame of the vehicle.

3.7 MOBILE NOISE SUPPRESSION

The engine can cause severe interference in the receiver if noise suppressors are not fitted. Modern vehicles are sometimes fitted with suppressors and no further attention may be required.

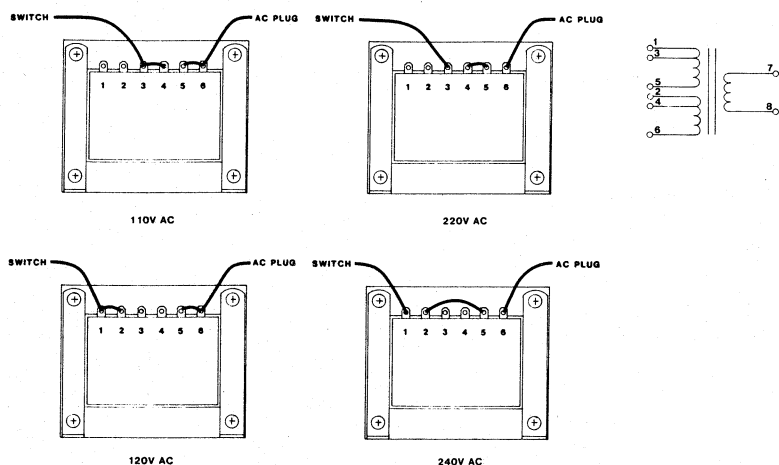

NOTE

To gain access to the power transformer connections, remove the screws from each corner of the heatsink. Remove the ground connection to the main filter capacitor. The rear panel may be tilted back to give full access to the power transformer primary.

FIGURE 3-1. Power Transformer Connectors.

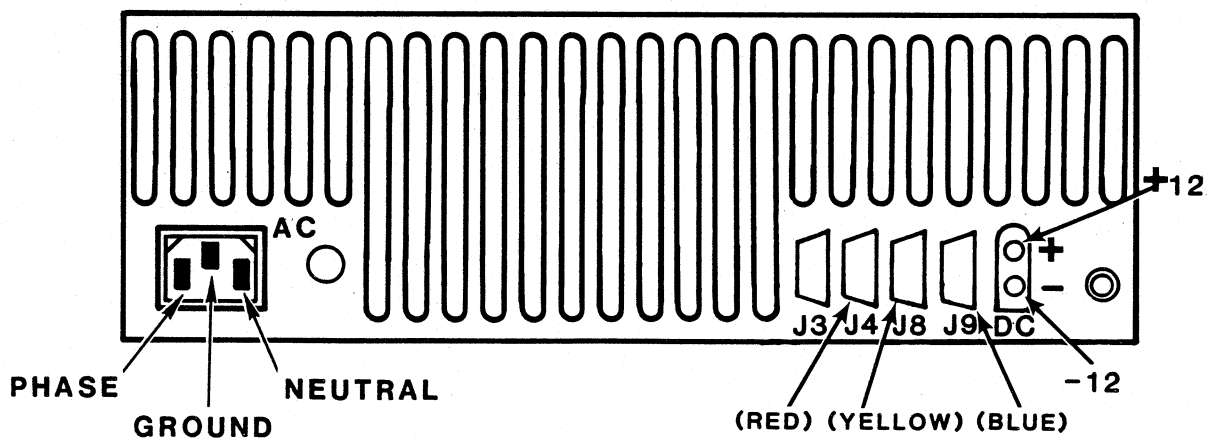


FIGURE 3-2. Rear Panel Connectors.

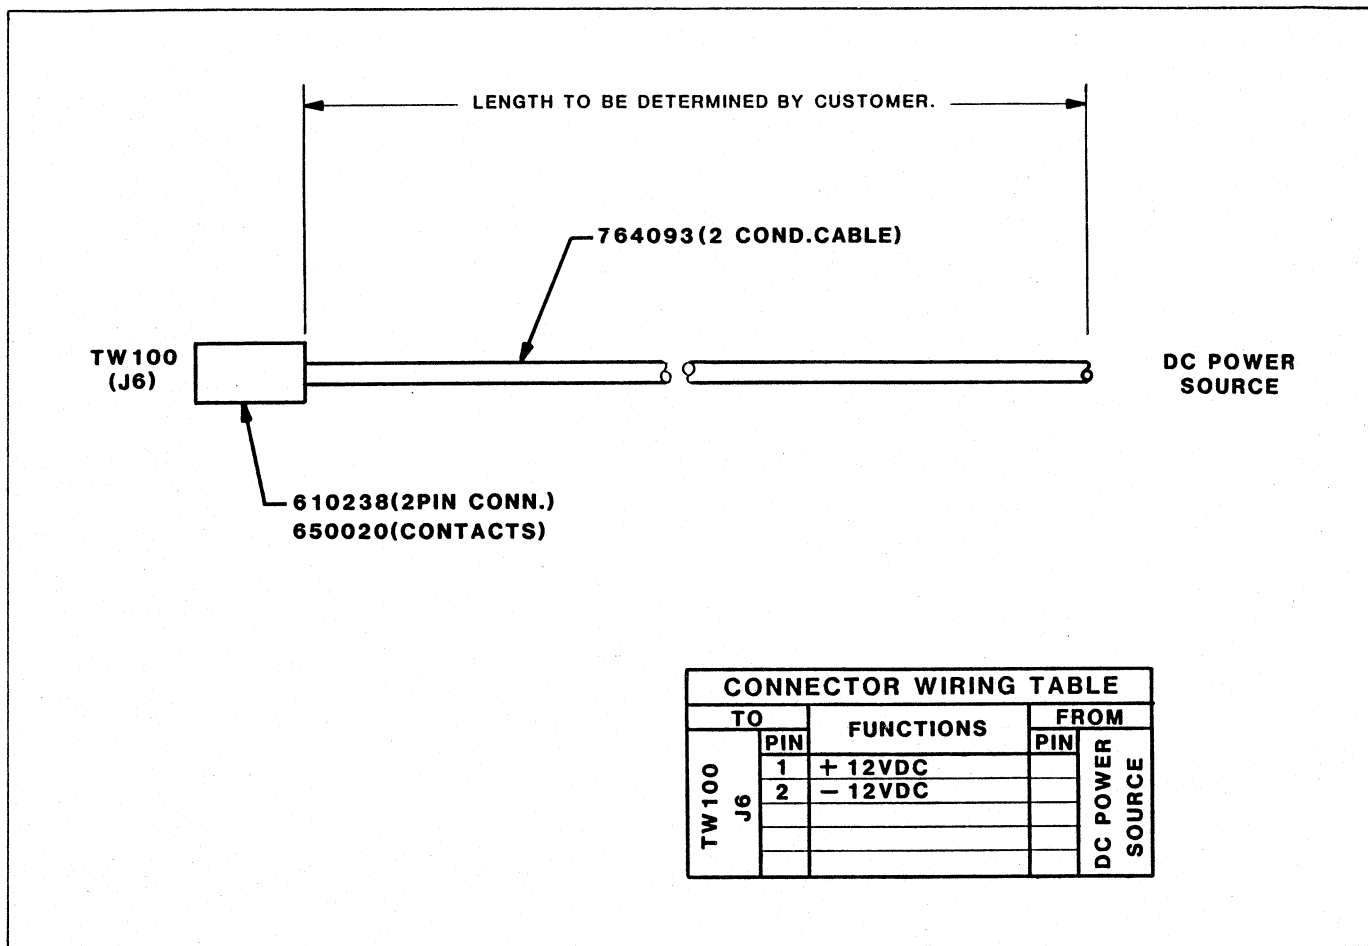


FIGURE 3-3. DC Power Cable.

The transceiver should be installed and the receiver checked for interference to determine if suppressors need to be fitted. The two main sources of interference are the ignition and the generator. The components should be fitted in accordance with the direction supplied with the kit. In some vehicles, noise may still be present even after standard noise suppression methods have been used. Further information on mobile noise suppression is beyond the scope of this manual, and it is recommended that reference be made to a textbook on mobile installation.

3.8 TUNING ADJUSTMENTS

The transceiver is completely broadband in both the receiver and transmitter. This means no re-tuning is required after installation or after changing channel frequencies. It is very important that the antenna system is correctly adjusted to provide a correct match on all channel frequencies. Refer to the transceiver technical manual for detailed information on the antenna system and method of adjustment.

3.9 MICROPHONE

If the transceiver has been ordered without a microphone, a connector will be supplied. The transceiver will operate satisfactorily with most dynamic, magnetic or ceramic microphones. The gain of the VOGAD adjusts automatically to compensate for both microphone output and voice level.

3.10 ACCESSORIES

A number of TWC accessory equipment are available for use with the TW100 transceiver. These include the TW5800 Telephone Coupler, TW5201 full function Remote Control console, AT100 Automatic Antenna Tuner, and TW5500 self-contained Message Terminal. Figures 3-5 through 3-9 are drawings of the inter-connect cables necessary between the transceiver and particular accessory equipment. TWC material part numbers and connector pin designations are also shown. Cable lengths indicated are standard and will be made up this way unless otherwise specified.



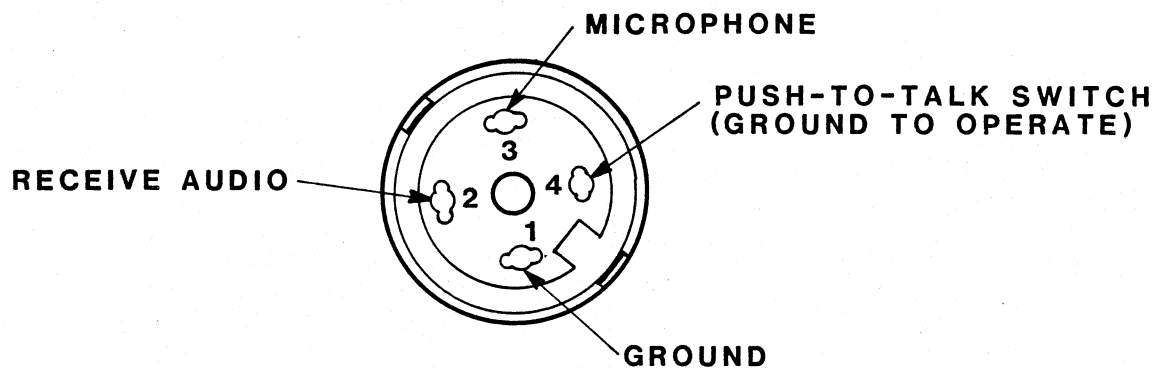


FIGURE 3-4. Microphone Connections.

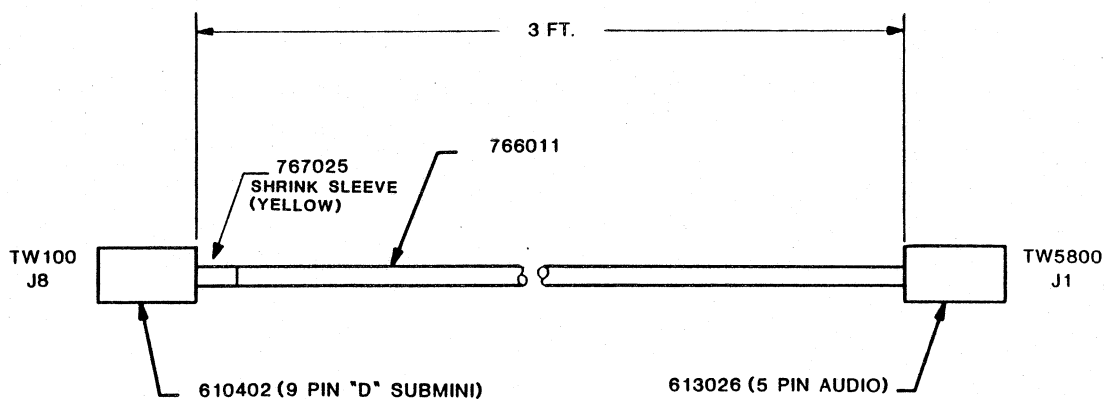


CONNECTOR WIRING TABLE				
TO		FUNCTIONS	FROM	
TW100 J8	PIN		PIN	TW5800 J1
	1	GROUND	1	
	5	Rx AUDIO	2	
	7	Tx AUDIO	3	
	3	PTT	4	
	2	+12 VDC	5	
TW100 J8				TW5800 J1

FIGURE 3-5. TW100 to TW5800 Telephone Coupler Control Cable.

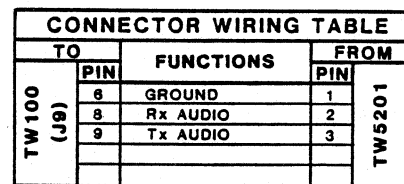


CONNECTOR WIRING TABLE				
TO		FUNCTIONS	FROM	
PIN			PIN	
TW100 J4	1	GROUND	1	AT100
	4	KEY	2	
	5	TUNE	3	
	2	+12 VDC	4	

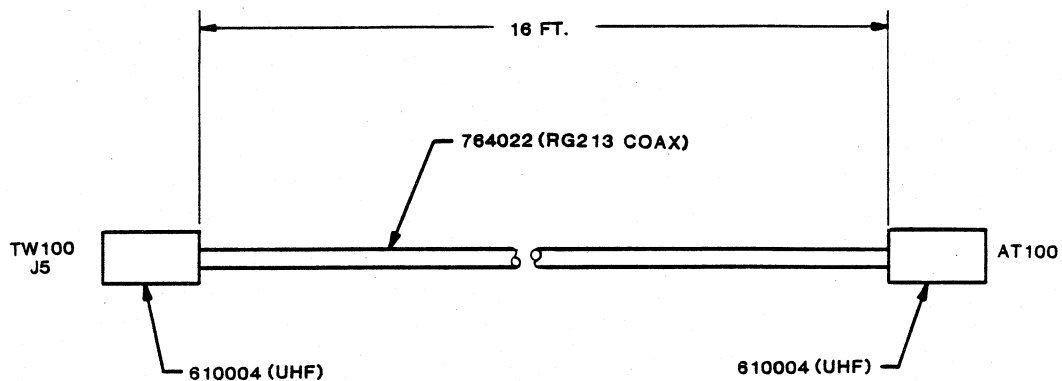

CONNECTOR WIRING TABLE				
TO		FUNCTIONS	FROM	
PIN			PIN	
TW100 RF OUTPUT				AT100 RF INPUT

FIGURE 3-8. TW100 to AT100 Automatic Antenna Tuner RF Cable.

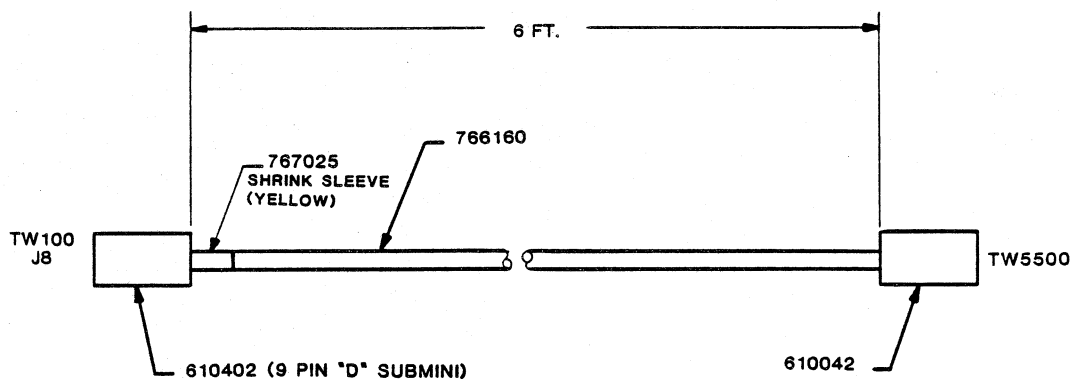

CONNECTOR WIRING TABLE				
TO		FUNCTIONS	FROM	
TW100 J8	PIN		PIN	TW5500
	3	PTT	E	
	4	GROUND	D	
	5	Rx AUDIO	C	
	6	GROUND	B	
	7	Tx AUDIO	A	
	1	GROUND	H	

NOTE: TW100-J8 JUMPER BETWEEN PINS 1,4,6

FIGURE 3-9. TW100 to TW5500 Message Terminal Control Cable.

SECTION 4 OPERATION

4.1 INTRODUCTION

The transceiver is designed for use by unskilled operators. Normal operation involves only the selection of the correct channel (or channel frequency), picking the desired mode of operation and setting the audio gain control to a comfortable listening level. Receive or transmit operation is controlled by the CW key or microphone switch.

All controls, indicators and connectors on the front panel are described in Sections 4.2, 4.3, and 4.4. They are also indicated by numerical call-outs in Figure 4-1. These call-outs are referenced in the text by numbers in parentheses following the section sub-headings. Detailed operating instructions begin in Section 4.5.

4.2 FRONT PANEL CONTROLS

Operator controls on the transceiver front panel are as follows:

4.2.1 Power On/Off Switch (POWER) (1)

Up/Down rocker switch which controls the power to the transceiver with both AC and DC power sources. Press **down** for off and **up** for on; the red indicator light is **ON** when the power is switched on.

4.2.2 Audio Gain Control (AUDIO GAIN) (2)

Adjusts the audio volume in receive mode. Full CCW position is minimum volume and full CW position is maximum volume.

4.2.3 Clarifier Control (CLARIFIER) (3)

In the **OFF** position, (full CCW), the clarifier is disconnected and the receiver operates on the same frequency as the transmitter. The clarifier allows a small change in receiver frequency and is used to correct the pitch of the voice, or to tune an FSK signal.

NOTE

This switch must be in the **OFF** position for Selective Call operation when the Selcall Option is installed.

4.2.4 Transcall/Selcall Switch (TC/SC) (4)

Used to turn the Transcall or Selcall circuits on when these options are installed.

NOTE

When the Transcall Option is installed, both Transcall and Selcall operating modes are available. Turning the Switch to **TC** allows for Transcall mode operation; turning to **SC** allows for Selcall mode operation.

When only the Selcall option is installed, turning the switch to **SC** allows for Selcall mode operation; turning to **TC** turns Selcall off.

4.2.5 Noise Blanker On/Off Switch (BLANKER) (5)

Used to turn the Noise Blanker circuits on when the Noise Blanker Option is installed.

4.2.6 Speaker On/Off Switch (SPEAKER) (6)

This switch turns the speaker audio on or off.

4.2.7 Squelch On/Off Switch (SQUELCH) (7)

This turns the Squelch circuits on. The squelch eliminates background noise and is internally set to open on weak voice signals.

4.2.8 Receive Attenuator Control (GAIN) (8)

This switches in a 12dB attenuator into the receiver front end. It is used to improve the IMD performance of the receiver and is especially effective in a strong signal environment.

4.2.9 Mode Switches (MODE) (9, 10 and 11)

The three mode switches are labeled 8, 9, and 10. They are used to select either USB or LSB operation (8), turn the AM carrier injection on (9), and turn the FSK circuitry on (10).

LSB. To select LSB operation, turn the USB/LSB switch to **LSB**, the AM switch to **OFF** and the FSK switch to **OFF**.

NOTE

LSB is usually used if there is interference on the other sideband. In many countries (including the USA) this mode is illegal and will not be fitted into the transceiver.

USB. Used for most normal SSB operation. Turn the USB/LSB switch to **USB**, the AM switch to **OFF**, and the FSK switch to **OFF**.

AM. Compatible AM (AME). This mode is used to provide a signal that is intelligible to an AM

station. It is unlikely to be required for normal communications. Turn the USB/LSB switch to **USB**, the AM switch to **AM** and the FSK switch to **OFF**.

FSK. This mode is for use with RTTY systems. Turn the USB/LSB switch to **USB**, the AM switch to **OFF**, and the FSK switch to **FSK**.

4.2.10 Automatic Antenna Tuner Control (ATU) (12)

The ATU switch is used to initiate a tune cycle of an Automatic Antenna Tuner (AT100 or RAT100). Whenever the switch is depressed, the tuner will go into a tune cycle; the tuning is automatic and a tone is present in the loudspeaker during the tune cycle.

4.2.11 Scan Mode Initiate Switch (SCAN) (13)
Used to control the transceiver scan mode. See section 4.11 for operation.

4.2.12 Up/Down Tuning Switch (UP, DN) (14, 15)
Switch 14 controls the UP tuning and 15 controls the DOWN tuning. See section 4.10 for operation.

4.2.13 Selective Call Switches (S.C., CALL) (16, 17)

Switch 16 controls the entering of the 3-digit selective call code and switch 17 controls sending of the selective call code. See section 4.12 for operation.

4.2.14 Keyboard (18)

The keyboard is used to program channel frequencies. See sections 4.6 through 4.9 for operation.

4.3 FRONT PANEL INDICATORS

Indicators on the transceiver front panel include the following:

4.3.1 Meter (19)

The meter operates in both receive and transmit:

Receive: The meter indicates the relative signal strength of the received signal. The midscale position is calibrated for a signal strength of 100 microvolts.

Transmit: The meter reads average power output and should read approximately full scale at 100W output. The meter will indicate between 3 and 4 on a normal voice transmission and should deflect to almost full scale on a whistle in the CW mode. A low meter reading usually indicates a mismatched antenna.

4.3.2 Frequency Display (20)

The display shows the selected channel and/or channel frequency; the frequency indicates the first digits. A moving decimal point indicates whether a receive or transmit frequency is displayed. For further operation, see sections 4.6 through 4.9.

4.3.3 Loudspeaker (21)

The speaker is used during receive and its audio output is controlled by the setting of the AUDIO GAIN control (4.2.2). Turning the SQUELCH switch (4.2.6) on will mute the speaker during conditions of background noise or extraneous single-tone signals.

4.3.4 Power On Lite (22)

Indicates that the power is turned on to the transceiver when lit.

4.4 FRONT PANEL CONNECTORS

4.4.1 CW Jack (23)

A receptacle for an external CW key plug. To operate on CW (Morse) plug the key into the small jack and use either USB or LSB. The transmitter automatically switches on when the key is pressed. When the key is released, there is about a one second "Hang Time" until the transceiver returns to the receive mode.

4.4.2 Headphone Jack (24)

A receptacle for an external set of headphones. Inserting the appropriate headphones will automatically mute the transceiver loudspeaker.

4.4.3 Audio Jack (25)

A four-pin receptacle for an external hand microphone, handset, or headset. The VOGAD circuit automatically adjusts the audio gain to provide full transmitter output. Speak close to the microphone in a clear voice. Shouting will not provide any increased output and may reduce intelligibility.

4.5 OPERATING MODES (INTERNAL)

The transceiver may be supplied in one of three operating modes. The choice of operating mode will usually be determined by the licensing authority for the equipment. Check the operating mode of the equipment as some features are not available in Modes 2 and 3.

Mode 1: All facilities are available in this mode including the programming of transmitting

frequencies. This mode is normally only available to trained operators.

Mode 2: In this mode the operator has no control over the transmitting frequency and must operate in the pre-programmed channel frequencies. Channel 00 is available as a free tuning receiver.

Mode 3: In this mode the transceiver operates as a channelized transceiver with permanently programmed channels. The tuneable receiver is not available and channel frequencies cannot be displayed.

4.6 OPERATION — PROGRAMMING MEMORY CHANNEL FREQUENCIES IN SIMPLEX

The memory channel frequencies are channels 01 through 99. These channel frequencies can only be changed in Mode 1. The channel frequencies are entered into permanent memory and retained by a lithium battery with a nominal shelf life of ten years. It is recommended that the battery is changed at five year intervals.

To program a frequency into any of the memory channels, the operator must do the following:

1. Enter the channel number as follows:
 - a) Press the "C" key.
 - b) Press the key corresponding to the first number of the channel.
 - c) Press the key corresponding to the second number of the channel.

Example. To enter channel 14, press "C", press "1", press "4".

Example. To enter channel 7, press "C", press "0", press "7".
2. Press the "F" key and hold it down.
3. Press the "C" key and release it.
4. Release the "F" key.

NOTE

It is important to follow this sequence ensuring that the "F" key is pressed before the "C" key and not released until after the "C" key is released. (The frequency previously stored in memory will be displayed at this time).

5. Enter the desired channel frequency.
6. Press the "F" key.

4.7 OPERATION — PROGRAMMING MEMORY CHANNEL FREQUENCIES IN HALF-DUPLEX

To program half-duplex frequencies, i.e., different receive and transmit frequencies, do the following:

1. Perform steps 1 through 6 of section 4.6; this enters the receive frequency.
2. Press the "F" key so that the decimal point is in the TX position.
3. Press the "F" key and hold it down.
4. Press the "C" key and release it.
5. Release the "F" key.
6. Enter the transmit frequency.
7. Press the "F" key.

4.8 OPERATION — MEMORY CHANNEL SELECTION

After specific memory channels have been programmed, re-calling them is a simple matter. The following procedure is used.

1. Press the "C" key.
2. Press the two-digit channel number.

NOTE

All channel numbers have two digits — 01 to 99. Channel selection is the only function available in Mode 3.

3. Press the "F" key to display the receive frequency (the moving decimal pointer on the display will be in the "receive" location).
4. Press the "F" key again to display the transmit frequency (the moving decimal pointer on the display will be in the "transmit" location).

NOTE

Continuously pressing the "F" key will cause the display to alternate between monitoring the receive and transmit frequency. The display will automatically return to the "receive" frequency after a transmit cycle is ended and the PTT is released.

4.9 OPERATION — FREE TUNE CHANNEL

Channel 00 is used for free tuning the transceiver. Both simplex and half-duplex frequencies

can be programmed into channel 00. The last entered frequency is retained in the transceiver memory.

4.9.1 PROGRAMMING THE FREE TUNE CHANNEL

1. Press the "C" key.
2. Press the "0" key twice.
3. Enter desired channel frequency.
4. Press the "F" key. (The selected frequency should now be displayed with the moving decimal pointer at the "receive" location).

4.9.2 PROGRAMMING THE FREE TUNE CHANNEL FOR HALF-DUPLEX FREQUENCIES

When one frequency is entered, the transceiver automatically assumes that it is a simplex frequency. For half-duplex operating, do the following:

1. Do steps 1 through 4 of section 4.9.1. This programs the receive frequency.
2. Press the "F" key.
3. Enter the desired transmit frequency.
4. Press the "F" key. The decimal pointer should now be in the "transmit" location.

4.9.3 RE-CALLING THE FREE TUNE CHANNEL

Since the last frequency programmed into the free tune channel is stored in memory, it is an easy matter to re-call this channel.

1. Press the "C" key.
2. Press the "0" key twice. The transceiver is now in the free tune mode and the last entered frequency is displayed.

4.10 FINE TUNING THE TRANSCEIVER

The UP and DOWN buttons in the front panel permit tuning of the transceiver frequency up or down from the original programmed frequency. The following procedures apply:

1. A single push steps the transceiver 100Hz. The frequency can be changed in 100Hz steps either up or down by pushing the appropriate button continuously (push, then release — push, release — etc.).

2. If the button is held down, the frequency steps at a rate of forty 100Hz steps per second.

3. Only the receive frequency can be changed in the above-mentioned manner. Any change entered is retained only until the channel is changed. If the channel is changed and then changed again back to the original channel, the original frequency is once again displayed; any frequency offset previously put in is forgotten.

4. On the free tune channel (CH00), it is possible to change the frequency in memory permanently by pressing the "F" key after any up/down frequency stepping.

4.11 OPERATION — SCAN MODE

The transceiver can scan between 2 and 98 channels when in the scan mode. To do this, follow this procedure:

1. Program the desired frequencies into the transceiver starting at channel 01. Use the programming procedure described in section 4.6.
2. Enter the channel which is one greater than the highest channel to be scanned.
3. Press the "F" key and hold it down.
4. Press the "C" key and release it.
5. Release the "F" key.
6. Press the "SCAN" key. The scan limit is now set and retained in memory. Channels will be scanned at the rate of one every three seconds.
7. Pressing the "SCAN" key again will initiate the scan sequence. To stop the scan sequence, press the "SCAN" key again.

It is necessary to stop the scan mode to enter new keypad functions.

NOTE

The scan mode can be initiated for a desired frequency at any time by pressing the "SCAN" key, provided a scan limit was previously set for that frequency. If a new scan limit is not set as outlined in steps 1 through 6, the transceiver will scan the channels defined by the scan limit previously set.

4.12 OPERATION — SELECTIVE CALL

The selective calling system is an optional feature. Check that it is fitted to the transceiver before using this function.

Each transceiver is assigned a selective call code (000 to 254). This code is internally programmed in the selective calling module.

Press the "S.C." key and enter the three digit code for the desired station. Press the "CALL" button, this will switch the transmitter on and will then send the selective call code.

The station called will stop scanning and send back a transpond signal. This resond signal should be monitored to ensure that the call was received.

Once the call is received, the selective call initiates a 150 second scan hold timer, displays "CALL" on the LCD display, and sounds the call buzzer.

When a call is received, turn on the loudspeaker and answer the call. Pressing the transmit switch automatically updates the scan hold timer for 150 seconds. Alternately press the "SCAN" key to stop the scan. After the call is completed, press any key on the keypad to cancel the "CALL" display. If the scan mode is in use, press the "SCAN" key again to initiate scan.

The loudspeaker may be turned off to eliminate background noise while monitoring the channel in scan mode.

4.13 OPERATION - TRANSCALL

The Transcall feature is optional. Check that it is installed before attempting to use it.

Each transceiver in the Transcall domain utilizes the three-digit Selcall code (000 to 254) for

identification. This is internally programmed in the option module. In addition, each unit in the system should be programmed to scan the same number of "Transcall" channels. This is also an adjustment in the option module (see Section 12.7 of the technical manual).

To initiate a Transcall, press the "S.C." key and enter the three-digit code for the desired station. Flip the toggle switch from "SC" to "TC", and press the "CALL" button after the scan has begun. An arming tone will sound, and the transceiver will now be under full control of the Transcall circuit. Normal operation involves scanning, along with brief transmissions on each channel. When both stations become synchronized, they will step together and seek the channel providing best communications. Following this sequence (lasting a maximum of five minutes), the transceiver will automatically switch to the best channel and sound an alarm. An "error" message will appear if the stations do not achieve sync.

4.13.1 ABORT/EXIT FROM TRANSCALL MODE

The Transcall calling sequence may be stopped in progress, provided that the two stations have not yet synchronized. To abort, the calling station must hold the "CALL" key in for two seconds.

Exiting the transcall mode (either before "CALL" is pressed, or after the best channel has been selected), is achieved by flipping the toggle switch from "TC" to "SC", then pressing "F" on the keypad. The display will clear within three seconds.

4.13.2 TRANSCALL SCAN

When scanning in the transcall mode, the receiving station will also respond to a valid selcall. The scan limit is determined by the setting internally programmed in the option module.

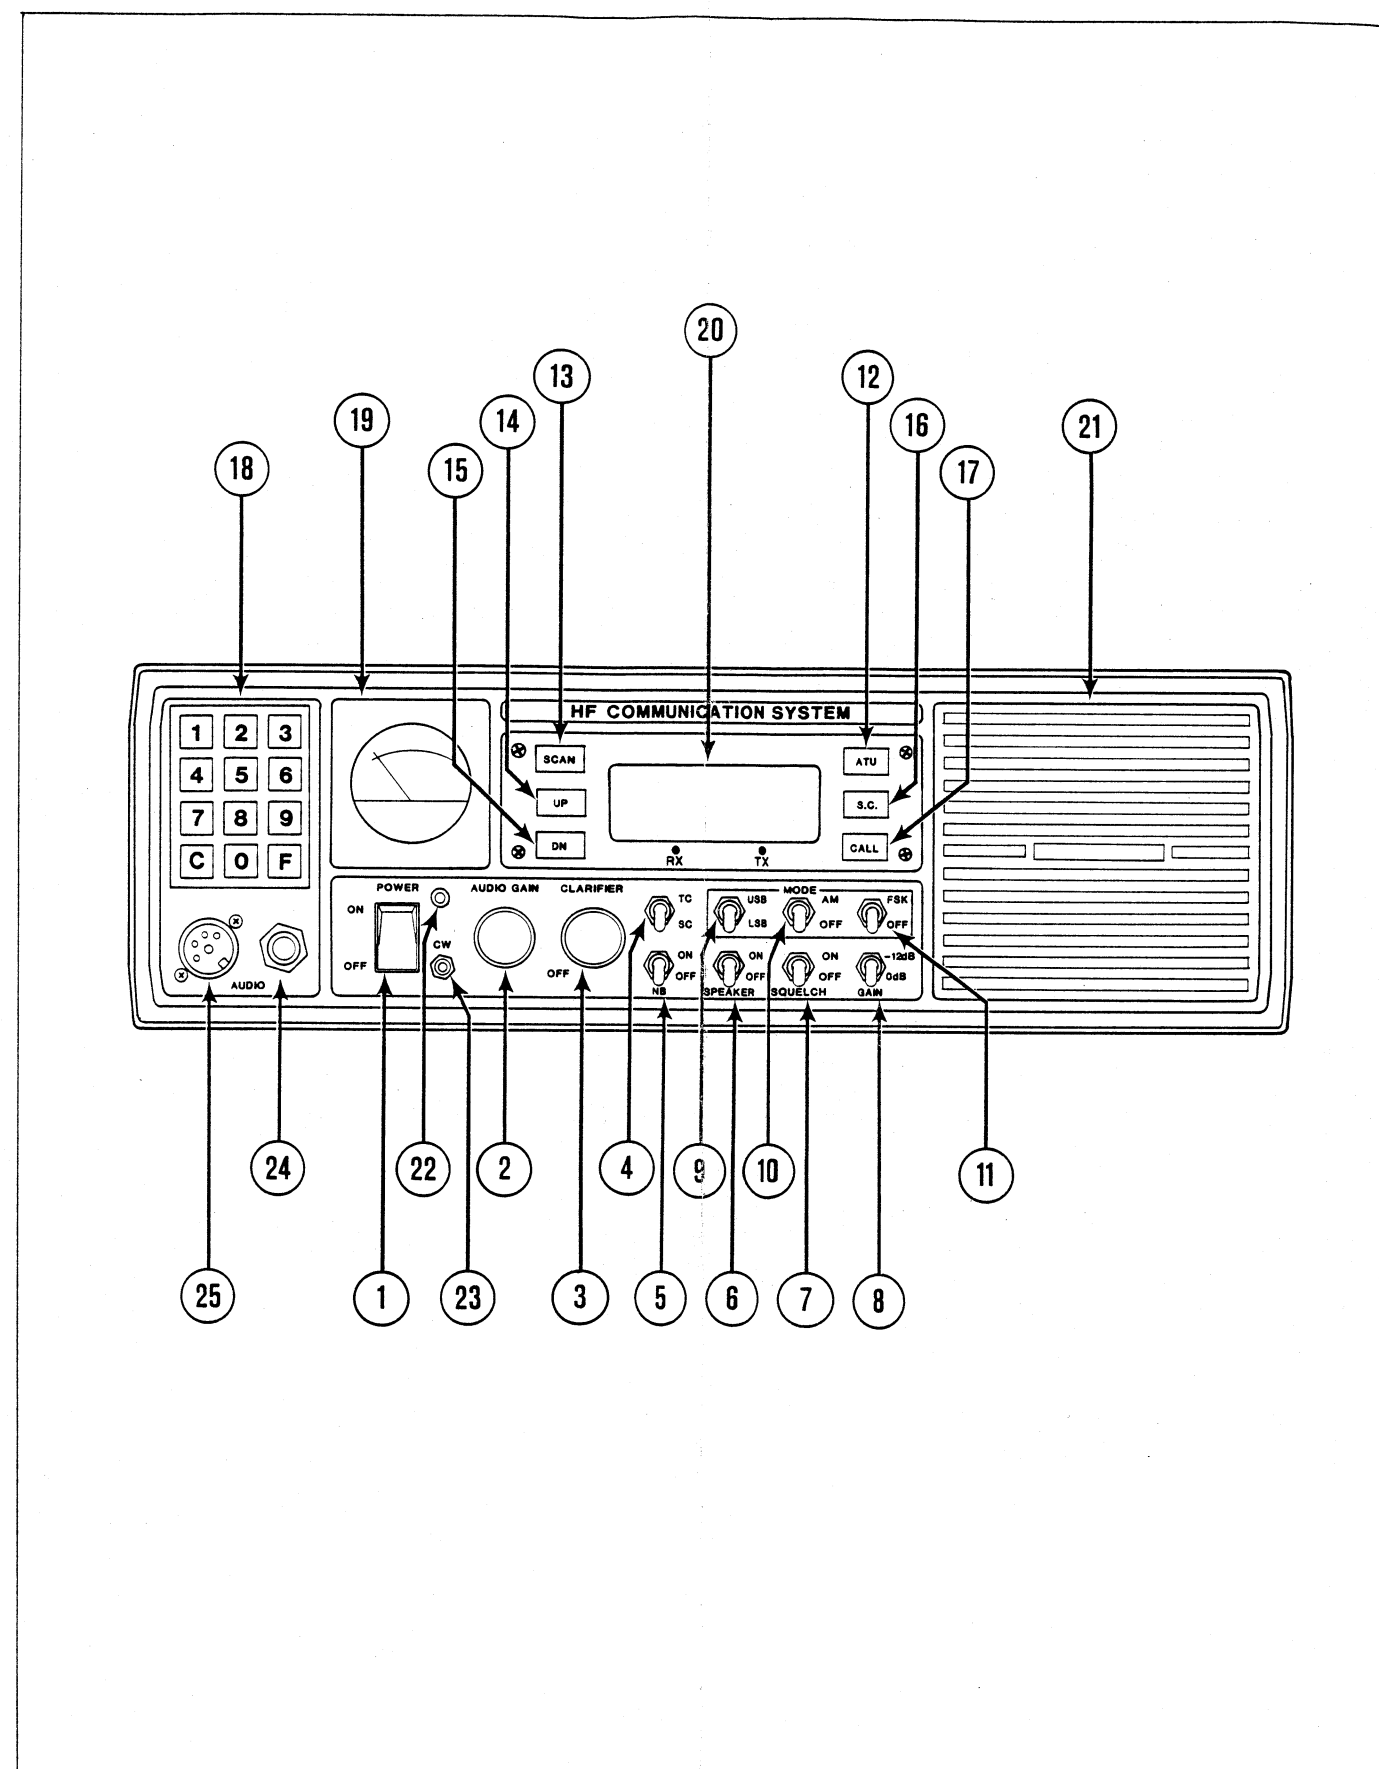


FIGURE 4-1. Front Panel Controls.

SECTION 5 SERVICING

5.1 INTRODUCTION

Detailed servicing information is beyond the scope of this manual and only experienced personnel should make adjustments or attempt any serious service work. Reference to the technical manual is essential.

The transceiver is of modular construction and if spare modules are available nontechnical personnel will be able to repair most faults in the field. Frequency calibration is a very simple procedure in the transceiver and information has been included on this adjustment. It is very strongly recommended that the nontechnical personnel receive instruction from an experienced technician in the replacement of modules.

5.2 ROUTINE MAINTENANCE

The transceiver normally requires no periodic maintenance except to check the calibration of the master oscillator. This procedure is described in Section 5.4. It is often convenient to program an unused channel to a known frequency standard such as WWV. This will enable the operator to make regular checks of the frequency calibration.

The exterior of the transceiver should be kept clean by wiping with a damp cloth and polishing with a soft dry cloth. Make sure that all knobs are secure and the connectors are tight. When the transceiver is opened, make sure the coaxial connectors are tight and the module connectors are firmly in place. If the small pin connectors are removed, it is advisable to tighten the spring contacts by squeezing with a pair of pliers before replacement. Remove any dirt or dust using compressed air.

5.3 ACCESS & MODULE REPLACEMENT

5.3.1 Cover Removal

The top and bottom covers are each retained by six screws. Remove the retaining screws and the covers can then be lifted off the transceiver.

CAUTION

If the transceiver is fitted with an AC power supply, the full main supply voltage is present at the transformer primary, input connector, fuse holder and front panel power switch. It is recommended that an external DC power supply is used when servicing the transceiver. When the trans-

mitter is operating, high RF voltages are present on the modules M7 and M10. Use caution as these RF voltages can cause unpleasant burns.

5.3.2 Module Replacement M1-M6

Modules M1-M6 are the six modules contained in the diecast boxes. The modules are retained by screws in the front left and rear right corners. Remove these screws first as this permits the modules to move forward and backward and gives more room to unscrew the coaxial connectors. These connectors and the ten pin connectors should be removed and the module can be lifted out of the transceiver. Modules M5 and M6 are stacked and the retaining screws hold both modules in place.

5.3.3 Module Replacement M7

This module is removed by disconnecting all of the connectors. Remove the five mounting screws.

5.3.4 Module Replacement M8

Remove the three pin connectors. Unscrew the four mounting screws in each corner and one screw in the center of the module. Remove the mounting hardware from the "TABPACK" transistors taking care not to lose the special shoulder washer and the insulator. When the module is replaced, take care to use thermal compound on the transistor flange. The insulator must be in place and the shoulder washer mounted so that there is no possibility of a short to the chassis. Tighten the transistor mounting screws securely so that there is a good thermal contact to the chassis.

5.3.5 Module Replacement M9

This module is removed by disconnecting all of the connectors. Unscrew the five retaining screws.

5.3.6 Module Replacement M10

It is not recommended that the RF power module is replaced by non-technical personnel. Detailed information on the replacement of this module is covered in Section 8.6.6 of the technical manual.

5.3.7 Pin Connectors

Small pin contacts are used for connecting wires to modules M7, 8 and 9 and for internal use inside the enclosed modules. These pins have an excellent locking action and will require a firm pull for removal. Always grasp the body of the pin with a pair of pliers and pull directly vertical

when removing the connectors. If the contact is moved from side to side to aid removal, it will weaken the spring tension in the contact. If this happens, squeeze the end of the contact back together using a pair of pliers. It is very important to ensure that the pins snap firmly in place when the contacts are reinstalled.

5.3.8 Panel Components

It is possible to remove and replace most panel components with front panel in place. If it is necessary to obtain greater access to the panel, remove modules M1, M5 and M6. This will give access to the four screws holding the panel in place. These screws are located on the two plates at each side of the rear of the panel. Remove the four screws and the panel can be tipped forward to give complete access to all components.

5.3.9 Component Access Modules M1-M6

The top side of the printed circuit board is accessible when the top covers of the boxes are removed by unscrewing the four screws at each corner of the box. This gives access to all test points and alignment adjustments.

The integrated circuits are installed in sockets and can be replaced without removal of the circuit boards. When a circuit board must be removed for service, disconnect the pin connectors from the coaxial connectors at each end of the box. Remove the four mounting screws at each corner of the circuit board. The multipin connector will lift out of the slot at the end of the box and the circuit board and connector can be removed together without unsoldering the leads.

NOTE

There are two additional mounting screws holding the PC board in place in the module M6. It will

also be necessary to remove the two screws holding the connector filter in this module. The screws are located at the end of the box on each side of the connector.

5.4 FREQUENCY CALIBRATION

The transceiver uses one temperature controlled master oscillator to control both synthesizers. This means that only one adjustment is required for all channel frequencies. The adjustment procedure requires the use of an accurate frequency counter.

1. Connect the frequency counter to the output of the transceiver through an attenuator.
2. Turn on the transceiver to the highest channel frequency and wait for 10 minutes so that thermal stability is reached.
3. Turn the mode switch to AM and press the PTT switch.
4. Adjust the piston trimmer C21, (accessible through the hole in the top cover of Module 5) until the counter reads the exact channel frequency.
5. This completes the calibration procedure.

In an emergency, it is possible to calibrate the transceiver by programming one of the channels to receive a frequency standard such as WWV. If there is any beat note present, the transceiver requires calibration. Turn the clarifier to "OFF". Turn up the volume and adjust C21 on Module 5 to zero beat. It will be difficult to hear the low frequency beat because the carrier frequency is suppressed by the IF filter. It is possible to hear the beat against the reference tone and as a roughness on the voice modulation. With careful adjustment, it is possible to calibrate the transceiver within at least 10Hz.

TABLE 5-1. Fault Location Chart.

(This chart gives fault symptoms that can be isolated by observation of the transceiver operation).		
SYMPTOM	POSSIBLE FAULT	ACTION
Power LED does not light.	Faulty power source. Blown fuse(s).	Measure power source. Replace fuse.
<p style="text-align: center;">NOTE</p> <p>If the fuse blows again, check the "Transorb", D1, mounted on the 20A fuse holder on the rear heatsink. The "Transorb" may fail in the shorted mode if subjected to sustained overload or a voltage transient exceeding 5KW. If the "Transorb" has blown, it is important to determine the cause, which is certain to be external to the transceiver. Repeated replacement of fuses and "Transorb" may cause severe damage to the transceiver.</p>		
No Audio Output.	Defect in M1, loudspeaker or squelch on.	Turn squelch off, and turn audio gain up. If the speaker is completely dead, the fault is probably in the module or speaker. Repair or replace.
Transceiver does operate on one frequency or group of frequencies.	Defect in M7 RF Filter Module.	Check relays and filter components for non-operating frequency(ies).
Transceiver does not operate on frequencies above/below 15MHz.	Defect in VCO Q1 (2-15MHz) or Q2 (15-30MHz).	Replace module M7 or repair.
Transmitter has no output except for carrier in AM mode.	Defective microphone. Defective audio module M1.	Replace or repair. Replace or repair
Transmitter has low output on one channel	Antenna or tuner mismatch. required.	Measure VSWR and adjust antenna or tuner as
Speech sounds garbled and/or clarifier consistently tunes at extremes of range.	Master oscillator out of calibration	Recalibrate (refer to Section 5.4).
Transmitter does not operate when PTT Switch is activated.	Defective microphone. Defective T/R Switching.	Check by shorting pin 4 On microphone socket.

TABLE 5-2. Module Fault Location Chart.

<p>PRELIMINARY Check power switching. Press PTT switch. Relay should click and receiver should mute.</p>	
<p>M1 AUDIO MODULE</p> <p>Transceiver operates in either Tx or Rx mode.</p> <p>Audio completely dead, not even slight hiss, squelch off, and maximum audio gain.</p> <p>No output from microphone. Carrier present in AM mode.</p>	<ul style="list-style-type: none"> * 1650kHz carrier oscillator is operational. * Module or loudspeaker defective. * M1 or M2 defective, also check microphone.
<p>M2 1650kHz MODULE</p> <p>Receiver operational.</p> <p>Disconnect "Rx Out" coax connector.</p>	<ul style="list-style-type: none"> * Module will also be operating in transmit mode. If noise level does not decrease, module is defective.
<p>M3 75MHz MIXERS MODULE</p> <p>Carrier output in AM mode.</p> <p>Disconnect "Rx Out" coax connector.</p>	<ul style="list-style-type: none"> * M3, M4, M5, M6, M10 operational in transmit mode. * If noise level does not decrease, module is defective.
<p>M4 HF MIXERS & DRIVER MODULE</p> <p>Carrier output in Am mode.</p> <p>Disconnect "Rx Out" coaxial connector.</p>	<ul style="list-style-type: none"> * M3, M4, M5, M6, M10 operational in transmit mode. * If noise level does not decrease, module is defective.
<p>M5 SYNTHESIZER - 10kHz LOOP</p> <p>Transceiver operates in either transmit or receive mode.</p> <p>Disconnect "OSC Out" coax connector.</p>	<ul style="list-style-type: none"> * Module is operational. * If noise level does not decrease module may be defective.

TABLE 5-2. Module Fault Location Chart, Continued.

<p>M6 SYNTHESIZER - 10kHz LOOP</p> <p>Transceiver operates in either transmit or receive mode.</p> <p>Channel Frequencies do not operate.</p> <p>Channel frequencies do not operate above 15MHz.</p>	<p>* Module is operational.</p> <p>* Defective 1.6-15MHz VCO in module.</p> <p>* Defective 15-30MHz VCO in module.</p>
<p align="center">NOTE</p> <p align="center">A failure in the master reference oscillator in the module M5 will stop M6 from operating.</p>	
<p>M7 RF FILTER MODULE</p> <p>Refer to "Preliminary" at beginning of of chart for T/R power switching.</p> <p>Relay K1.</p> <p>Signal path through filters from antenna.</p>	<p>* Check Relay Clicks when PTT operated.</p> <p>* Disconnect "Rx ANT" antenna. Coax connector from M4. Temporarily connect antenna to "Rx ANT" connector. If receiver operates, defect in M7. Filter selection or connections to antenna connector.</p>
<p>M8 POWER SUPPLY REGULATOR</p> <p>Check input voltage to module at input terminal.</p> <p>No output from M8 in both transmit and receive mode.</p>	<p>* Should be above 12V in DC model.</p> <p>* Should be approximately 18V in AC model.</p> <p>* Module defective.</p>
<p>M9 MICROPROCESSOR MODULE</p> <p>Faults in this module are indicated by incorrect channel selection.</p>	<p>* Check wires and connections.</p>
<p>M10 RF POWER AMPLIFIER</p> <p>No simple check without instruments.</p>	<p>* Voltages and connections should be carefully checked before replacement.</p>
<p>MICROPHONE</p> <p>Transmitter does not operate.</p>	<p>* Check by replacement of microphone.</p> <p>* Ground pin 4 of connector and touch pin 3 with hand. If transmitter shows RF output, microphone is faulty.</p>

