

**IPC5000
Universal Programmable
Controller**

Installation Manual

57-77-25-19

Notice

Copyright 2004 by Honeywell

Release 0 March 2004

Warranty / Remedy

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is **in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose**. Specifications may be changed without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in their application.

Industrial Measurement and Control

Honeywell Pte LTD

Honeywell Building

17 Changi Business Park Central 1

Singapore

To the Users

Thank you for purchasing IPC5000 (Universal Programmable Controller). This manual describes how to install and use IPC5000. To optimize the control solutions for furnaces, environmental chambers, ovens, reactors, cookers, freeze dryers, extruders, and other processes with similar control requirements, please read this manual carefully.

Warning




1. Keep the manual with the programmer so that a user can operate it properly.
 2. Handle this product only after you have carefully read and understand the installation manual.
 3. Honeywell does not bear responsibility for any damage inflicted by careless use of the product.
 4. This manual cannot be duplicated, re-edited or transferred in any form fully or partially without a prior consent from Honeywell. The content of this manual can be modified without prior notice.
 5. Please contact Honeywell if you have any questions or queries regarding this manual.
-

Safety Points

- **Explanation of symbols used**

Pictures and rules described below indicate potential danger that can injure the user or the product. Before reading the main text of the manual, please become familiar with the following symbols that indicate various degrees of damage.

- **Examples of symbols**

| | |
|---|--|
|  | This CAUTION symbol on the equipment refers the user to the product manual for additional information. This symbol appears next to required information in the manual. |
|  | WARNING PERSONAL INJURY: Risk of electrical shock. This symbol warns the user of a potential shock hazard where HAZARDOUS LIVE voltages greater than 30 Vrms, 42.4 Vpeak, or 60 Vdc may be accessible. Failure to comply with these instructions could result in death or serious injury. |
|  | Protective Earth (PE) terminal. Provided for connection of the protective earth (green or green/yellow) supply system conductor. |

Points to check when unpacking the product:




The **IPC5000** consists of the following items.

Please, check the following items when unpacking the product:

1. Verify the model number is correct;
2. Whether the product has been damaged;
3. Whether the container includes all the ordered items.

Points to check when installing the product:

If any of the following components are missing or if the product is damaged after you unpack it, contact Honeywell.
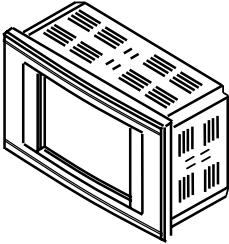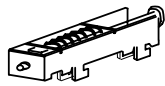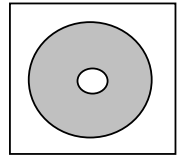
| Name | Model number | Quantity | Remarks |
|---|--------------|----------|---|
| Main frame  | IPC5000 | 1 | Refer to the Section 5(Model Number Interpretation) |
| Installation bracket  | 10-03057 | 4 | |
| CD for installation  | | 1 | PC Software(Setup program) PC Software User Manual(English) PC Software Install Manual(English) PC Software User Manual(Korean) PC Software Install Manual(Korean) IPC5000 User Manual(English) IPC5000 Install Manual(English) IPC5000 User Manual(Korean) IPC5000 Install Manual(Korean) IPC5000 Communication Manual(English) IPC5000 Communication Manual(Korean) |

Contents

| | |
|--|-----------|
| 1. Overview | 1 |
| 1.1 Introduction | 1 |
| 1.2 Feature Summary | 1 |
| 2. Installation and wiring | 2 |
| 2.1 Installation environment | 2 |
| 2.2 Installation precautions | 3 |
| 2.3 Size of panel holes | 3 |
| 2.4 Installation of fixed brackets | 5 |
| 2.5 Making Terminal Connections | 7 |
| 2.6 Wiring | 8 |
| 2.8 Rear terminal | 21 |
| 3. Configuration | 22 |
| 3.1 Screen configuration | 22 |
| 3.2 Configuration screen | 23 |
| 3.3 AI SET screen | 24 |
| 3.4 PWM set Screen | 28 |
| 3.5 AO SET screen | 30 |
| 3.6 DIO status screen | 33 |
| 3.7 RANGE SET screen | 37 |
| 3.8 OFFSET screen | 39 |
| 3.9 Compensation set screen | 40 |
| 3.10 EVENT SET | 42 |
| 3.11 MODE Event set screen | 45 |
| 3.12 ALARM EVENT SET screen | 48 |
| 3.13 CONTROL SET screen | 52 |
| 3.14 PID ZONE SET screen | 55 |
| 3.15 PID CONSTANT SET screen | 59 |
| 3.16 PID set screen | 61 |
| 3.17 SYSTEM SET screen | 63 |
| 3.18 TROUBLE SET Screen | 67 |
| 3.19 TROUBLE MESSAGE set | 69 |
| 3.20 NETWORK SET Screen | 70 |
| 3.21 INITIALIZE screen | 71 |
| 4. Specification | 73 |
| 5. Model Number Interpretation | 81 |

Tables

| | |
|---|----|
| Table 2.6.1 Instrument input range code and range | 17 |
| Table 2.6.2 The function table of External switch input (Digital input) | 18 |
| Table 3.11.1 Mode Event information | 45 |
| Table 3.11.2 DO information assigned by REGISTRATION number | 47 |
| Table 3.12.1 Alarm Event Flowchart | 50 |
| Table 3.12.2 Alarm Event On/Off Operation Algorithm | 51 |
| Table 3.21.1 Initial PID parameter list | 72 |

Figures

| | |
|--|----|
| Fig. 2.3.1 Size of panel holes | 3 |
| Fig. 2.4.1 Installation of fixed brackets | 5 |
| Fig. 2.5.1 Terminal with tube(R, 1.25 * M4) | 7 |
| Fig. 2.5.2 Terminal diagram label | 7 |
| Fig. 2.6.1 AC Line voltage | 8 |
| Fig. 2.6.2 Analog input 1 / input 2 Connections | 9 |
| Fig. 2.6.3 Control output 1 / output 2 Connections | 10 |
| Fig. 2.6.4 Digital outputs Connection | 11 |
| Fig. 2.6.5 Digital inputs Connections | 12 |
| Fig. 2.6.6 Auxiliary output 3 output 4 Connections | 13 |
| Fig. 2.6.7 RS-232C communication 9 pin Connection | 13 |
| Fig. 2.6.8 RS-232C communication 25 to 9 pin Connection | 14 |
| Fig. 2.6.9 RS422/485/Modbus Communications Option Connections (3-Wire shield) | 15 |
| Fig. 2.6.10 RS422/485/Modbus Communications Option Connections (5-Wire shield) | 16 |
| Fig. 2.8.1 Rear Terminal | 21 |
| Fig. 3.1.1 Screen switch block | 22 |
| Fig. 3.1.2 Main menu screen | 23 |
| Fig. 3.2.1 SETUP (Configuration) | 23 |
| Fig. 3.3.1 AI SET Screen | 24 |
| Fig. 3.3.2 SENSOR TYPE SELECTS | 24 |
| Fig. 3.4.1 Outputs Assigning block diagram | 27 |
| Fig. 3.4.2 PWM SET screen | 28 |
| Fig 3.4.4 Pulse control output at MV = 75% | 29 |
| Fig. 3.5.1 AO SET screen | 30 |
| Fig. 3.5.2 Combo box for selecting analog output source | 31 |
| Fig. 3.5.3 Current output scale adjustable graph | 32 |
| Fig. 3.6.1 DIO SET Screen | 33 |
| Fig. 3.6.2 Digital outputs ON/OFF status | 35 |
| Fig. 3.6.3 Digital output type selection | 36 |
| Fig. 3.6.4 DO TYPE SET screen | 36 |
| Fig. 3.6.5 Arranging PWM No. of Digital output | 36 |
| Fig. 3.7.1 RANGE SET screen | 37 |
| Fig. 3.8.1 OFFSET screen | 39 |
| Fig. 3.9.1 Compensate set screen | 40 |
| Fig. 3.10.1 The part to arrange events to digital outputs on FIX SET screen of User Manual | 43 |
| Fig. 3.10.2 The part to arrange PV and Time events to digital outputs on SEG EDIT screen | |

| | |
|---|----|
| of User Manual | 44 |
| Fig. 3.11.1 MODE EVENT SET | 45 |
| Fig. 3.12.1 ALARM SET screen | 48 |
| Fig. 3.13.1 CONTROL SET screen | 52 |
| Fig. 3.13.2 PID ZONE Set screen | 53 |
| Fig. 3.13.3 Example for setting Segment PID group | 54 |
| Fig. 3.14.1 PID ZONE SET screen | 55 |
| Fig. 3.15.1 PID Const set | 59 |
| Fig. 3.16.1 PID SET screen | 61 |
| Fig. 3.17.1 SYSTEM SET screen | 63 |
| Fig. 3.17.2 Fix Control Operation when SP Tracking On and JC = 2 | 64 |
| Fig. 3.17.3 Fix Control Operation when SP Tracking Off and JC = 2 | 64 |
| Fig. 3.18.1 Trouble and Tune Lock Setting Screen | 67 |
| Fig. 3.18.2 Trouble Message Window | 67 |
| Fig. 3.18.3 Trouble Message List | 68 |
| Fig. 3.18.4 MON SUB Screen | 68 |
| Fig. 3.19.1 Assigning the TROUBLE MESSAGE | 69 |
| Fig. 3.19.2 Keypad Switching | 69 |
| Fig. 3.20.1 Network Setting Screen | 70 |
| Fig. 3.21.1 INITIAL screen | 71 |
| Fig. 3.21.2 Confirm for initializing | 71 |

1. Overview

1.1 Introduction

The IPC5000 is a universal programmable microprocessor-based, a single loop or two-loop controller. It has a typical accuracy of ± 0.10 % of span, two analog control loops, 12 digital inputs and outputs, 32 programs and 800 segments. The IPC5000 is an ideal control solution for furnaces, dryers, environmental chambers, corrosion testing chambers, lab ovens, sterilizers and other processes with similar control requirements.

1.2 Feature Summary

- Asynchronous and synchronous mode
- Up to 2 loops, including:
 - Proportional Integral Derivative (PID),
 - ON/OFF and,
 - Heating/Cooling control
- Auto tuning for each control loop and automatic tuning for all zones (Max. 8 zones).
- Up to 32 different selection for 2 analog inputs
- 2 universal control output (Voltage pulse, Current (4~20mA), Relay)
- 12 digital inputs and 12 digital outputs
- Up to 32 programs, total 800 segments
- Easy operator interface by touch screen and graphic displays by LCD.
- Universal Power(100 to 240 VAC) or 37 VA
- Ethernet communication (Option)
- UL, CE, CSA approved and Y2K compliant.

2. Installation and wiring


2.1 Installation environment

; Panel mounted, indoor Process Control Equipment; Pollution degree 2, Installation Category II




Warning


In order to enhance the product's credibility and give full scope to IPC5000 functions, **do not install** the product in the following places.

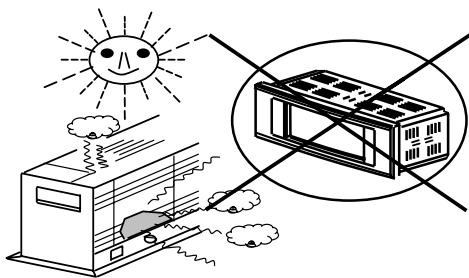


- Place where temperature exceed 50°C(122°F)
- Place exposed to direct sunlight
- Outdoors

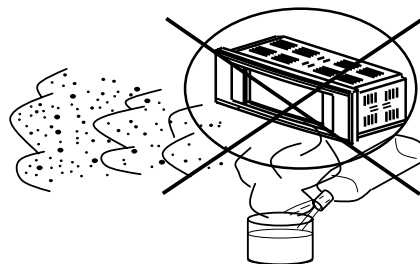


- Places exposed to corrosive or flammable gases
- Place with dust, salinity, iron powder and other conductive substances and organic solvents

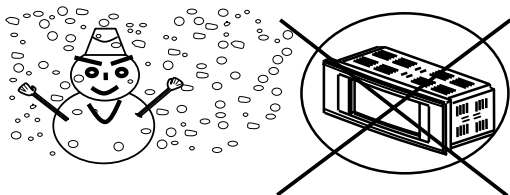


- Places with a sub-zero temperature (below 0°C)

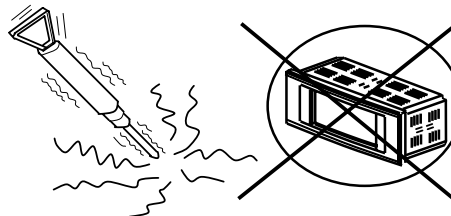

- Places susceptible to vibration and shock

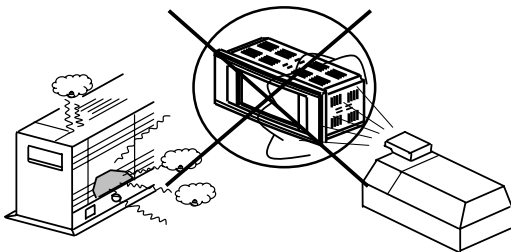

- Places with humidity of over 85%
- Places with abrupt temperature changes that cause dewdrops
- Place exposed to water, oil or chemical substances

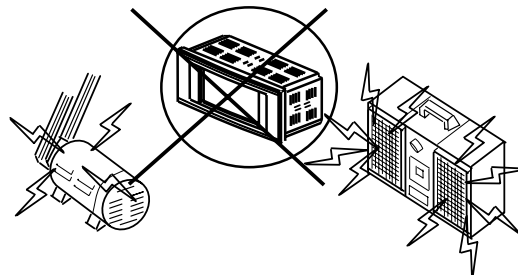

- Places exposed to strong electromagnetic fields

2.2 Installation precautions

This section describes precautions that should be taken when installing IPC5000 (Universal Programmable controller). It is essential to consider environmental stress, cracking resistance and operability.

- 1) Provide sufficient space for ventilation.
- 2) Do not install right above devices inside the panel that generate excessive heat such as (transformers, large-capacity resistors).
- 3) Install far from high-voltage devices, power devices or their cables, or install in a separate panel.
- 4) Use exclusive grounding to deal with noise. If the grounding cable is long enough to reach the grounding point, use a thick insulated wire and ground to earth ground.
- 5) Do not bind communications or data cables of IPC5000 with the cables of power devices or other cables that cause noise. When wiring in an identical duct, connect a shield cable to the FG terminal of the main frame.
- 6) Select a flat installation panel with no curves
- 7) If you want to use the product after having kept it in temperatures below 0 °C, allow it to warm up for at least 2 hours at room temperature by connecting the power supply. Otherwise, there is a risk of damaging the product.

2.3 Size of panel holes



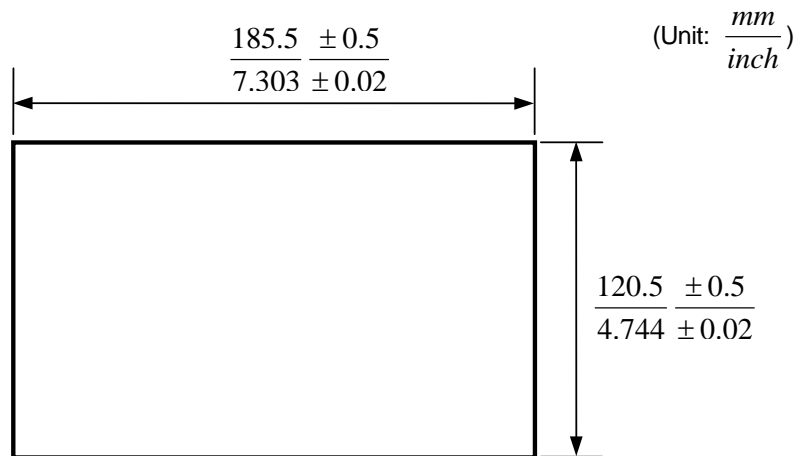


Fig. 2.3.1 Size of panel holes

- Dimensions (Unit: $\frac{mm}{inch}$)

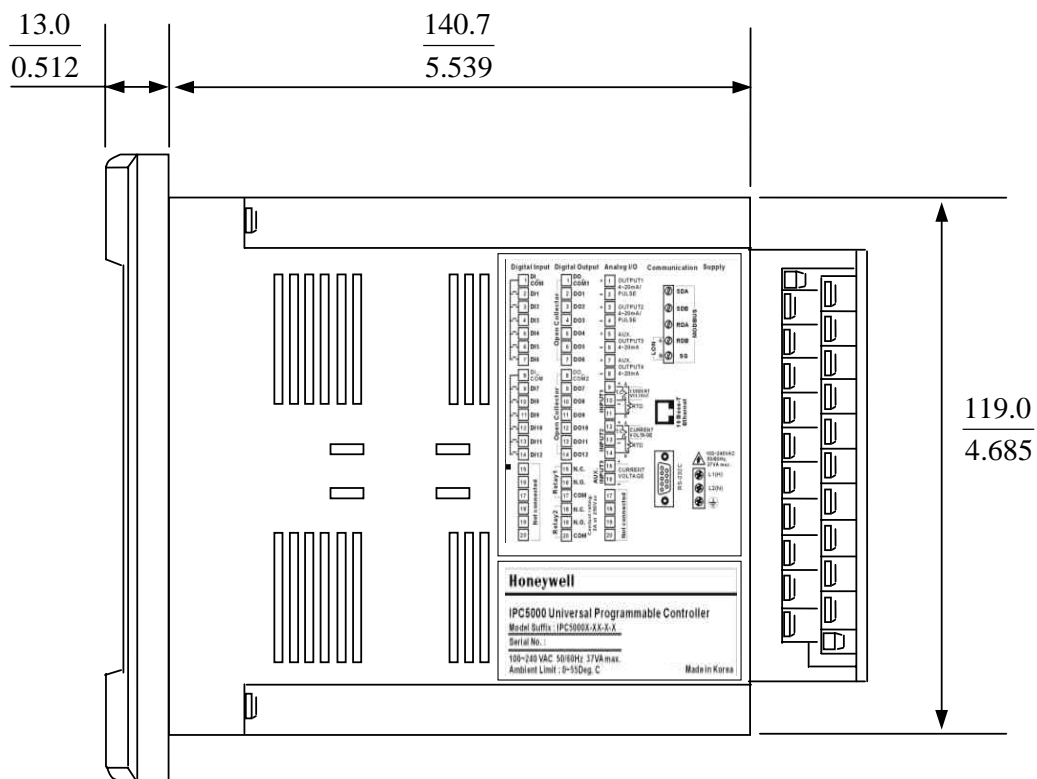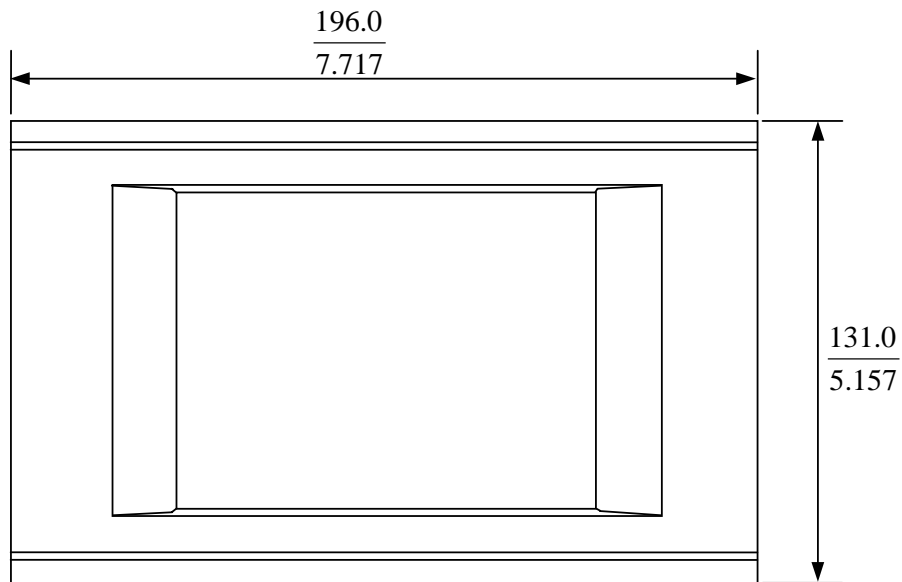

2.4 Installation of fixed brackets

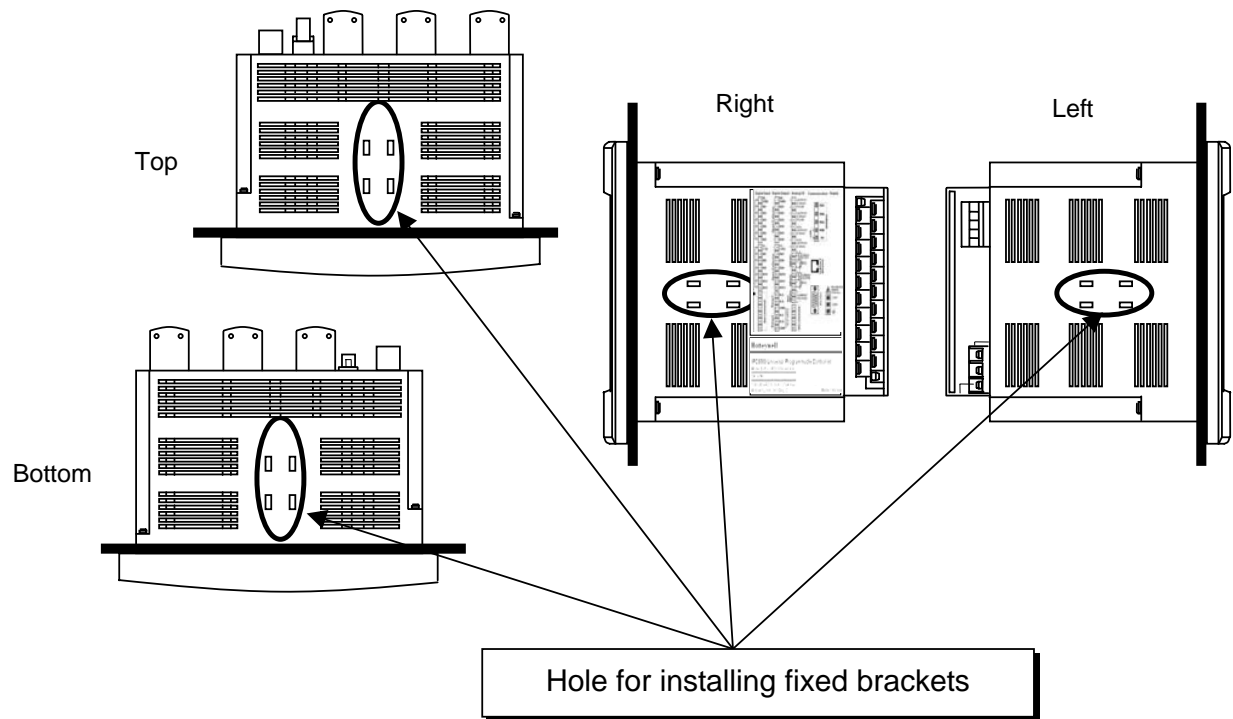



Fig. 2.4.1 Installation of fixed brackets

Mounting Method

Before mounting the controller, refer to the nameplate on the inside of the case and make a note of the model number. It will help later when selecting the proper wiring configuration.

Remove the mounting kit from the shipping container, and install the kit as follows:

- Insert the prongs of the fixed bracket into the holes
- Tighten the screw to secure the case against the panel

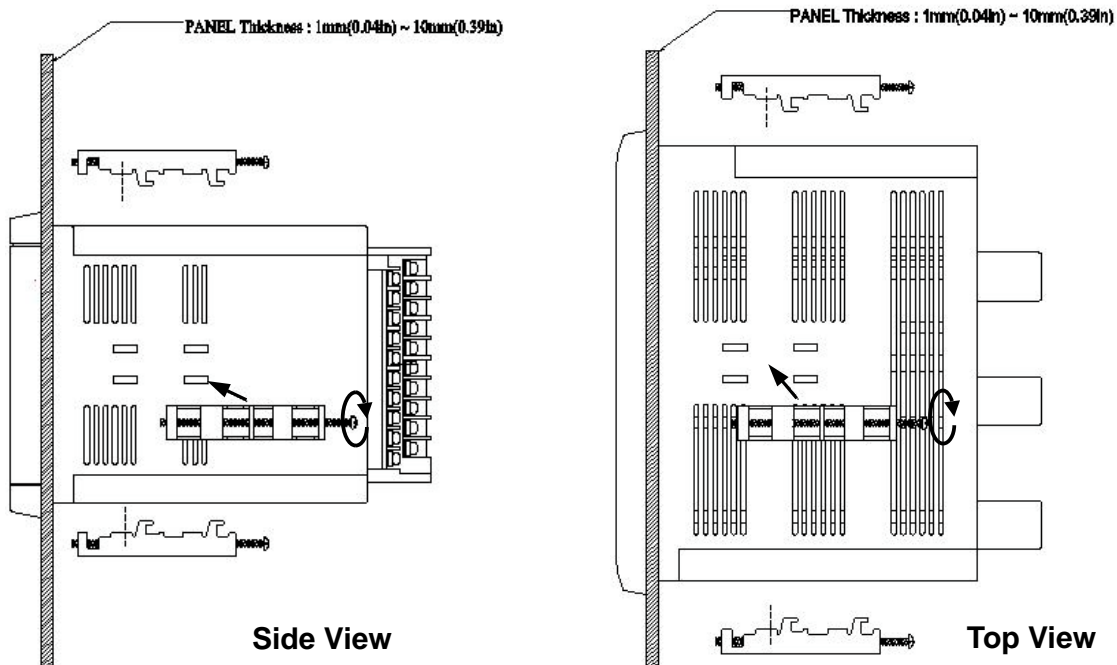

WARNING

Make sure the main power is **switched off** before mounting IPC5000. Otherwise, there is a risk of electrical shock.



You may install the **two brackets** to the right or to the left, or at the top and the bottom.

* The case must be installed with 4 fixed brackets in case IP65 level is required for the front protection. (two for the top and bottom, and two for both right and left sides)



Torque for clamping screws is **3~5 kg-cm (28 ~ 49 N-cm, 42~ 70 oz-in)**

2.5 Making Terminal Connections

1) Connection of power supply input terminal

- Type : Round
- Cable square : 1.25 mm(0.049 in)
- Diameter : 4.0 mm(0.157 in)

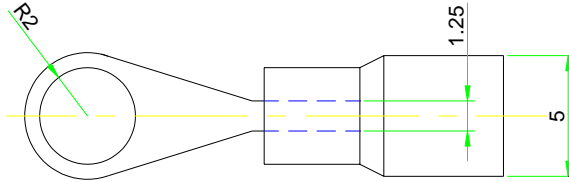


Fig. 2.5.1 Terminal with tube(R, 1.25 * M4)

2) Terminal Array

Wires are connected to the terminal base according to the layout shown below fig 2.5.2

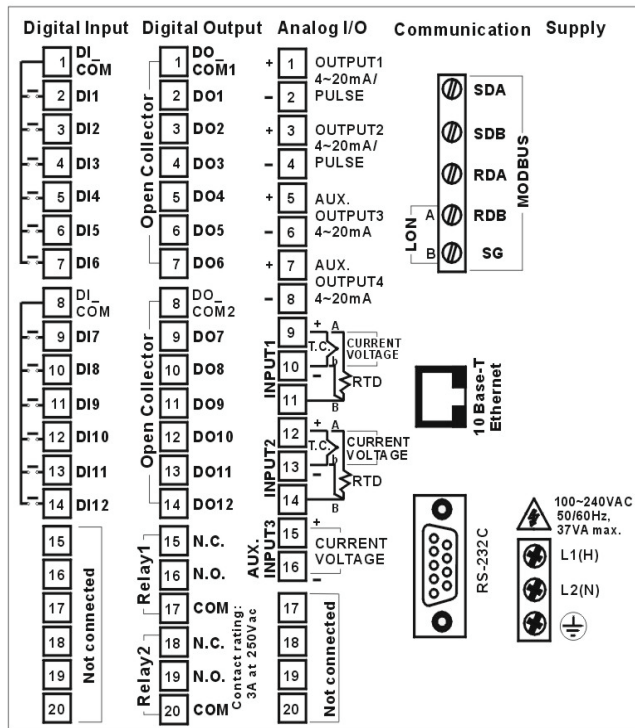


Fig. 2.5.2 Terminal diagram label

2.6 Wiring

Electrical Consideration / Precautions

The controller is considered “rack and panel mounted equipment” per EN61010-1, Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use, Part 1: General Requirements. Conformity with 72/23/EEC, the Low Voltage Directive requires the user to provide adequate protection against a shock hazard, the user shall install this controller in an enclosure that prevents OPERATOR access to the rear terminals.

Controller Grounding

PROTECTIVE BONDING (grounding) of this controller and the enclosure in which it is installed shall be in accordance with National and local electrical codes. To minimize electrical noise and transients that may adversely affect the system, supplementary bonding of the controller enclosure to a local ground, using a No.12(4 mm²) copper conductor, is recommended.

1) Connection of power supply input terminal

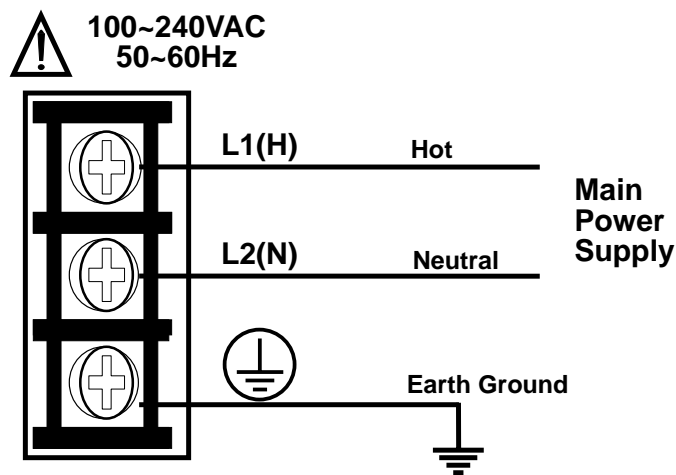


Fig. 2.6.1 AC Line voltage



Make sure to connect the Protective Earth terminal to a good earth ground



CAUTION

To prevent product damage and failure, **do not connect power supply cable to FG terminal.**

2) Connection of **Analog input** terminal

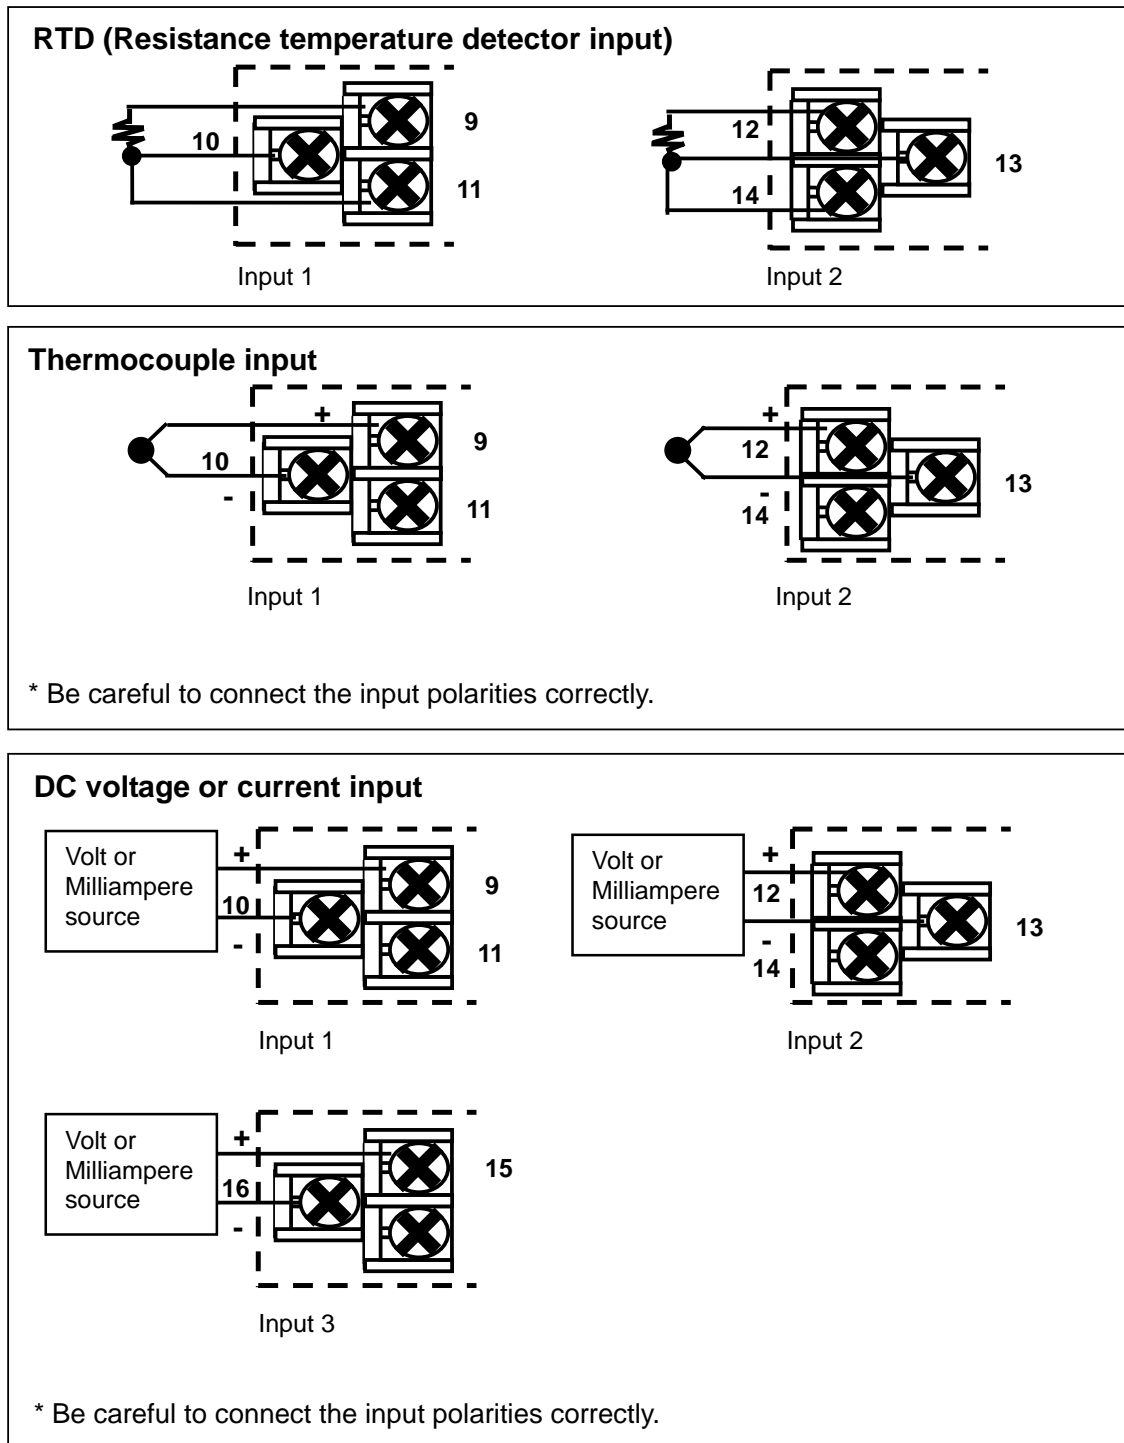


Fig. 2.6.2 Analog input 1 / input 2 Connections

3) Connection of Universal control output

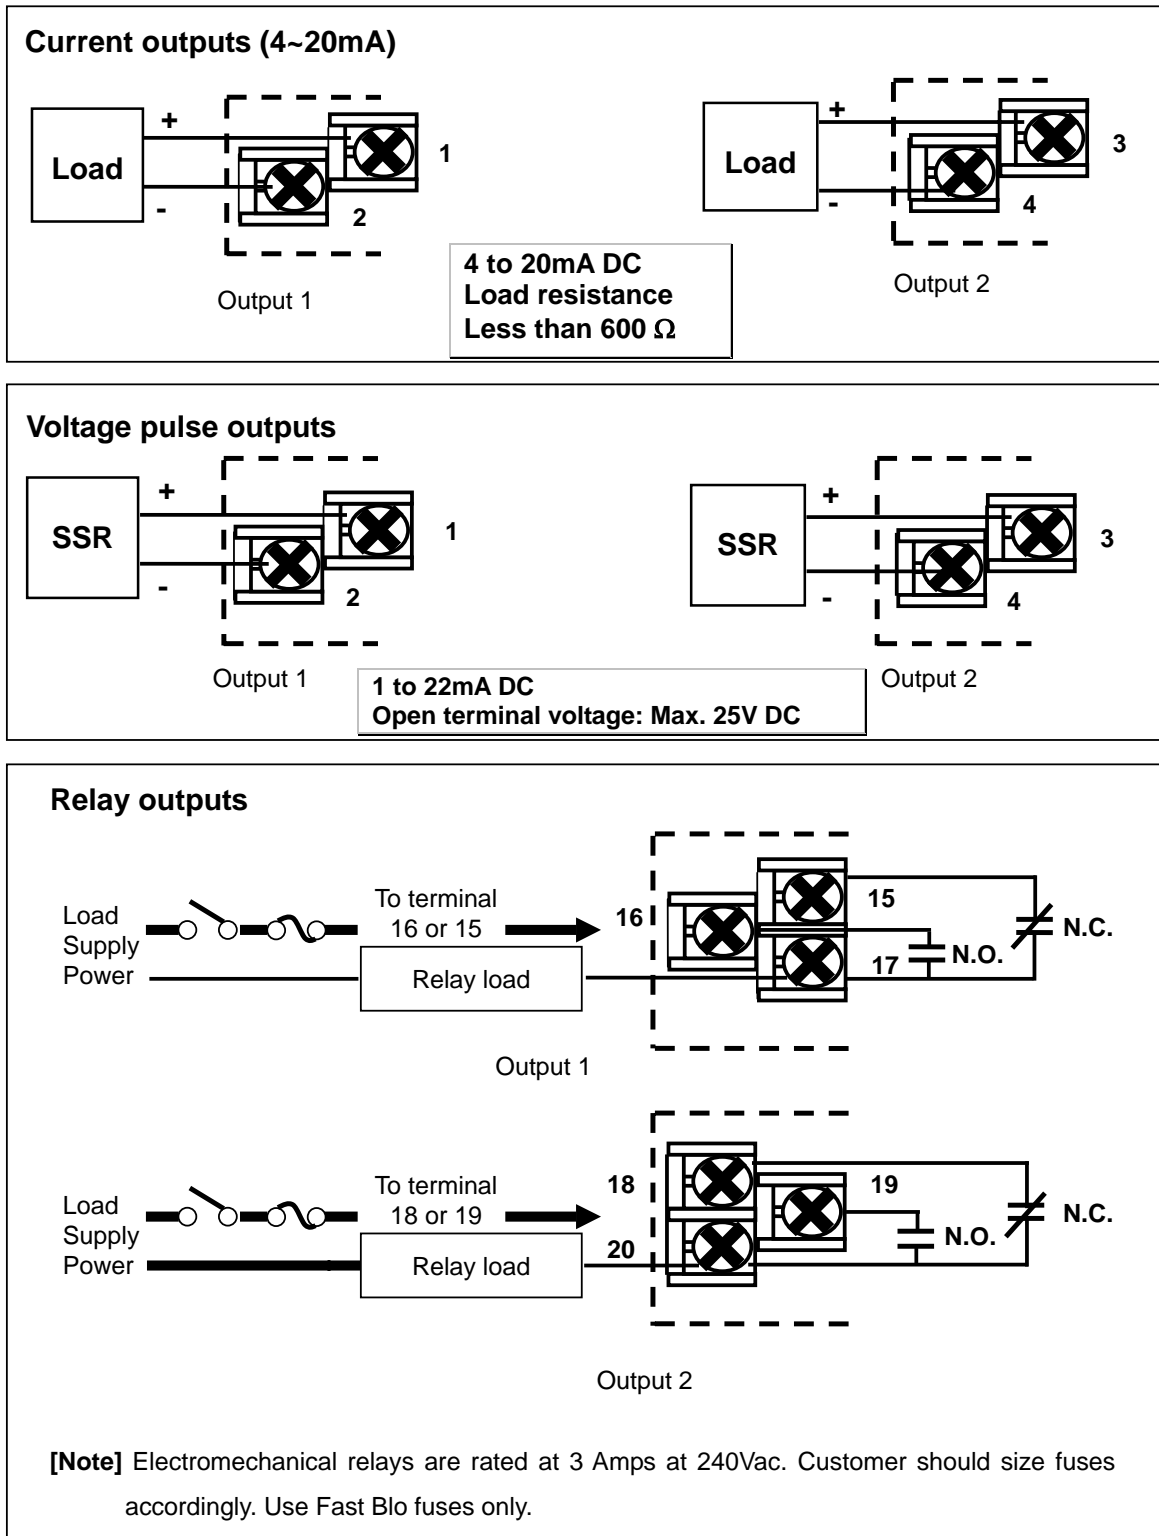


Fig. 2.6.3 Control output 1 / output 2 Connections

4) Connection of **Digital outputs**

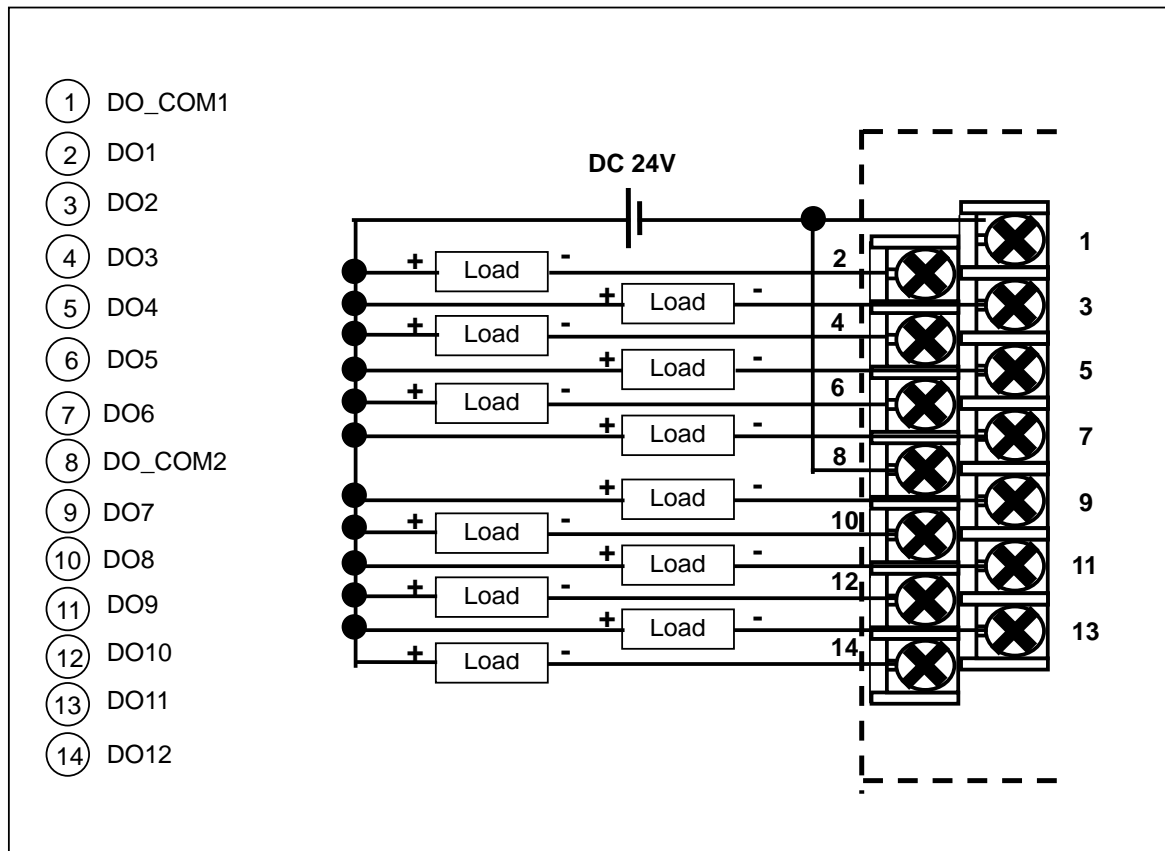


Fig. 2.6.4 Digital outputs Connection



CAUTION

Open-collector output of IPC5000 is designed for **24VDC** and less than 50mA with an internal resistance of 47 Ω . When using a relay as a load, use a relay for 24VDC. 24 volt power supply needs **supplied by user**. Supply should have a **minimum current rating of 600mA**.

5) Connection of **Digital input**

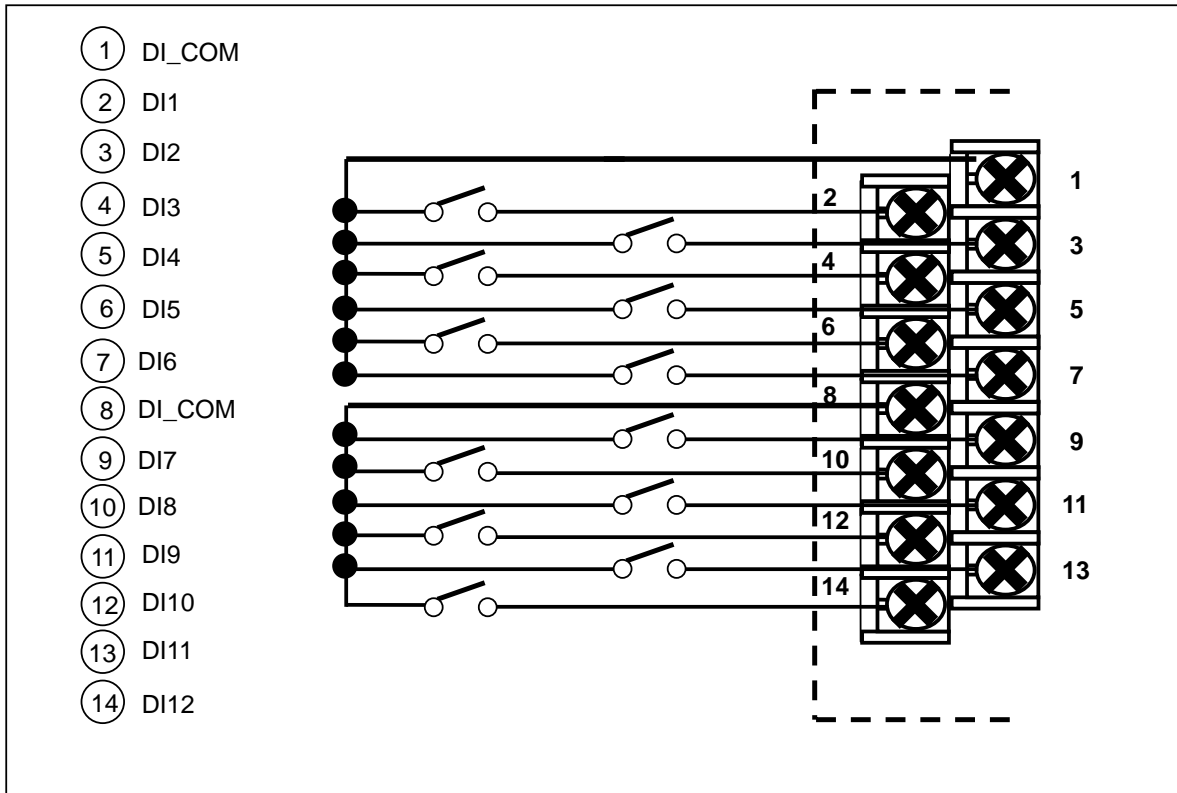


Fig. 2.6.5 Digital inputs Connections

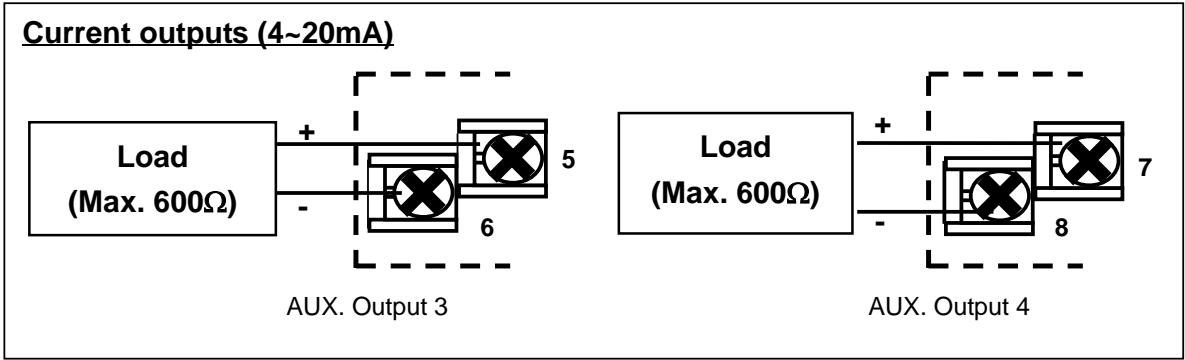


Fig. 2.6.6 Auxiliary output 3 output 4 Connections

7) Connection of **RS-232C** communication

- **9 pin to 9 pin**

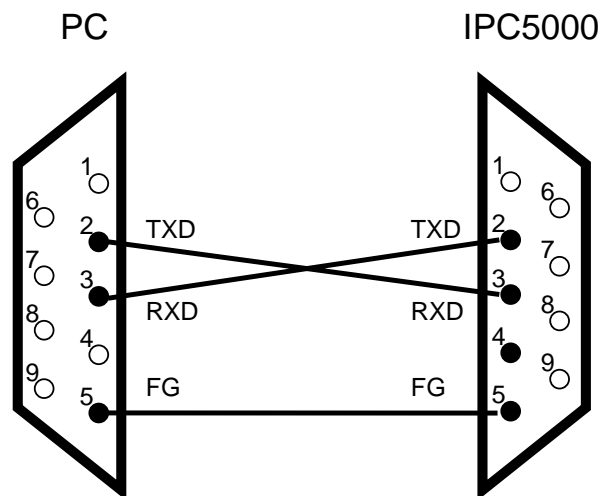


Fig. 2.6.7 RS-232C communication 9 pin Connection

In this 3-wire cable, **pin 2 and 3** should **be crossed** and pin 5 should be directly wired. The length of the communication line between PC and IPC5000 should be 15m(49.2 ft.) or less.

- 25 pin to 9 pin

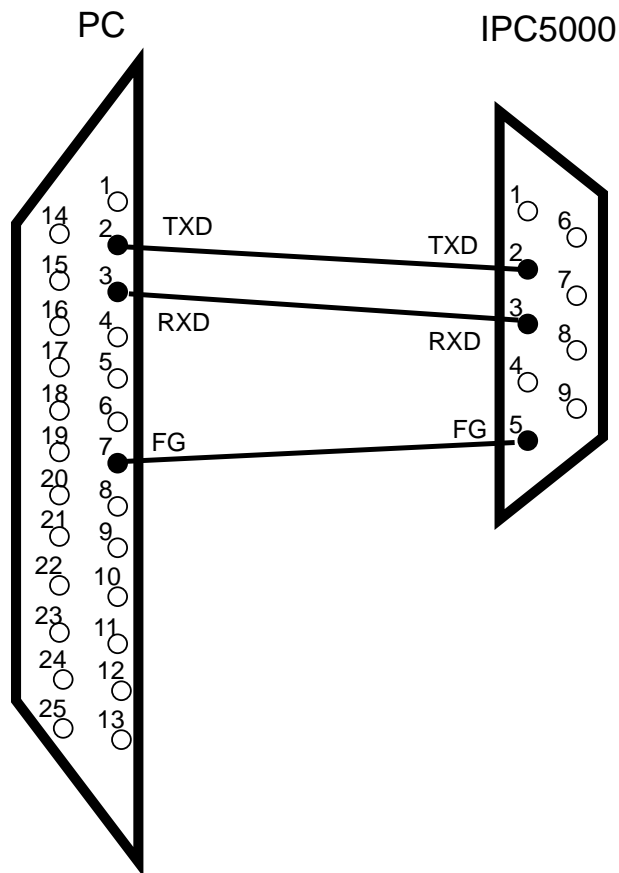


Fig. 2.6.8 RS-232C communication 25 to 9 pin Connection

In this 3-wire cable **pin 2 and 3** should **be connected directly** and pin 5 should be directly wired to pin 7. The length of the communication line between PC and IPC5000 should be 15m(49.2 ft.) or less.

8) Connection of **ModBus**

The IPC5000 with the optional communication provides an RS 485 communications ports with ModBus RTU protocol support.

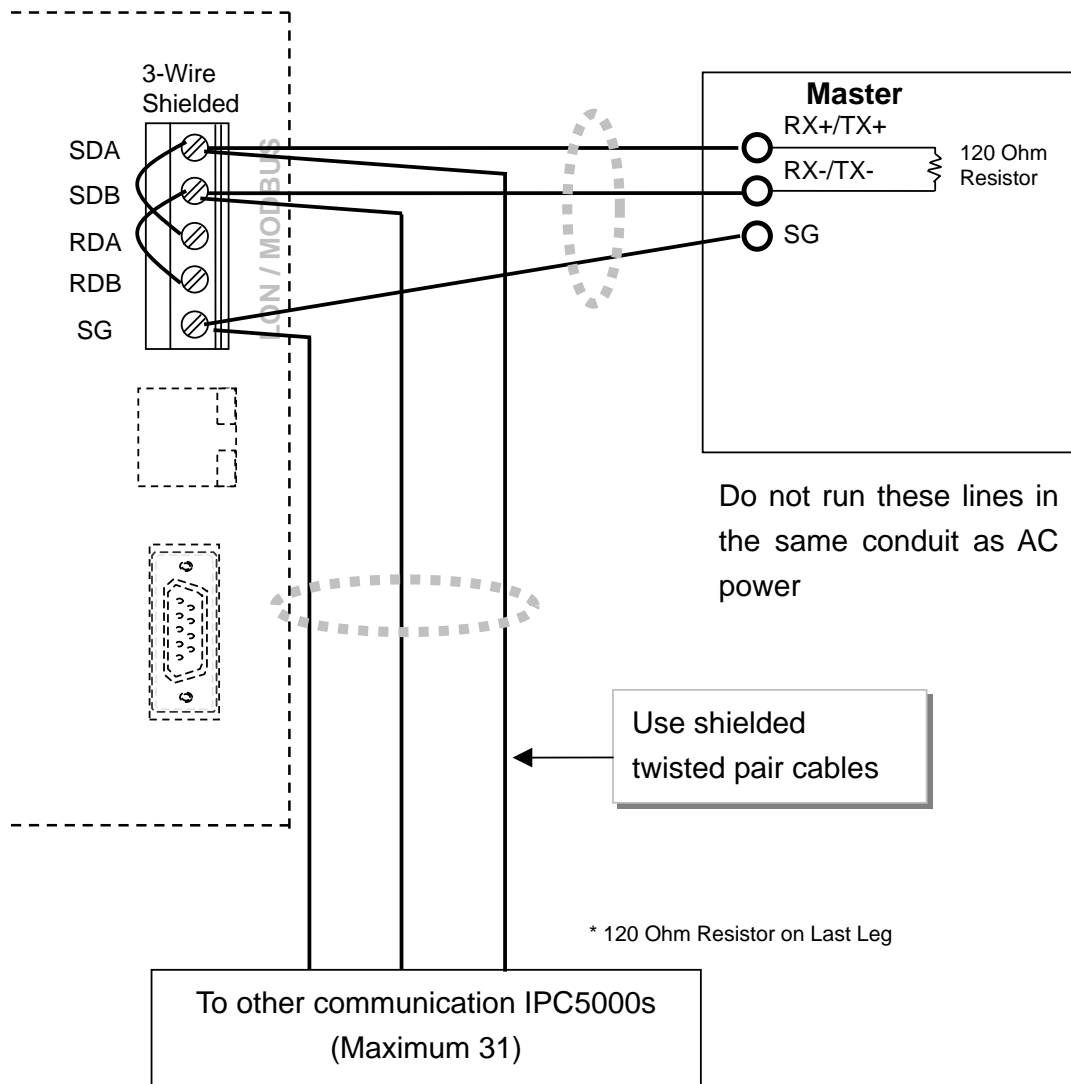


Fig. 2.6.9 RS422/485/Modbus Communications Option Connections (3-Wire shield)

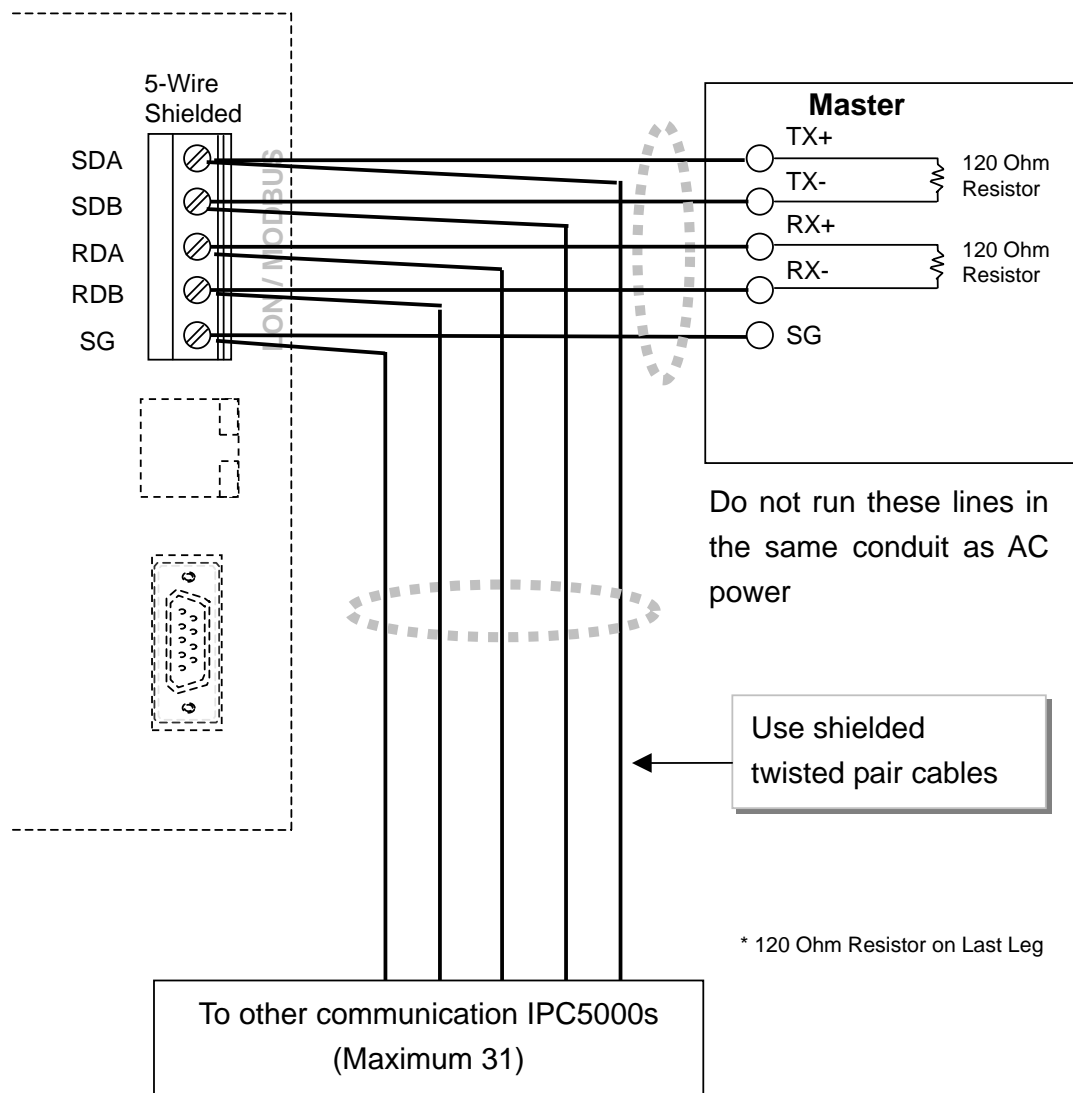


Fig. 2.6.10 RS422/485/Modbus Communications Option Connections (5-Wire shield)

Table 2.6.1 Instrument input range code and range

| Input type | | Input range code | Instrument input range | | Measurement accuracy | |
|---------------|-----------------|------------------|--|--------------|----------------------|---|
| | | | °C | °F | | |
| Thermo couple | K(CA) | K1 | -200.0~200.0 | -300.0~400.0 | +/-0.1%FS | Below 0°C : +/-0.2%FS |
| | | K2 | 0.0 ~ 1200.0 | 0~2400 | +/-0.1%FS | |
| | | K3 | 0.0~800.0 | 0~1600 | +/-0.1%FS | |
| | | K4 | 0.0~400.0 | 0~750 | +/-0.1%FS | |
| | J(IC) | J | 0.0~800.0 | 0~1600 | +/-0.1%FS | |
| | R | R | 0.0~1600.0 | 0~3100 | +/-0.1%FS | |
| | S | S | 0.0~1600.0 | 0~3100 | +/-0.1%FS | |
| Thermo couple | B | B | 0.0~1800.0 | 0~3300 | +/-0.1%FS | +/-4.0%FS at 0 to 260°C +/-0.15%FS at 260 to 800°C |
| Thermo couple | E(CRC) | E | 0.0~800.0 | 0~1600 | +/-0.1%FS | |
| | T(CC) | T | -200.0~300.0 | -300~700 | +/-0.1%FS | +/-0.3%FS at -200 to -45°C |
| | N | N | 0.0~1300.0 | 32~2372 | +/-0.1%FS | |
| RTD | Pt100 (JIS/IEC) | Pt1 | -200.0~500.0 | -300.0~900.0 | +/-0.1%FS | |
| | | Pt2 | -200.0~200.0 | -300.0~400.0 | +/-0.1%FS | |
| | | Pt3 | -100.0~150.0 | -150.0~300.0 | +/-0.1%FS | |
| | | Pt4 | -50.0~200.0 | -50.0~400.0 | +/-0.1%FS | |
| | | Pt5 | -40.0~60.0 | -40.0~140.0 | +/-0.2%FS | |
| | | Pt6 | 0.0~100.0 | 0.0~200.0 | +/-0.2%FS | |
| | | Pt7 | 0.0~300.0 | 0.0~500.0 | +/-0.1%FS | |
| | | Pt8 | 0.0~500.0 | 0.0~900.0 | +/-0.1%FS | |
| | JPt100 (JIS) | JPt1 | -200.0~500.0 | -300.0~900.0 | +/-0.1%FS | |
| | | JPt2 | -200.0~200.0 | -300.0~400.0 | +/-0.1%FS | |
| | | JPt3 | -100.0~150.0 | -150.0~300.0 | +/-0.1%FS | |
| | | JPt4 | -50.0~200.0 | -50.0~400.0 | +/-0.1%FS | |
| | | JPt5 | -40.0~60.0 | -40.0~140.0 | +/-0.2%FS | |
| | | JPt6 | 0.0~100.0 | 0.0~200.0 | +/-0.2%FS | |
| | | JPt7 | 0.0~300.0 | 0.0~500.0 | +/-0.1%FS | |
| | | JPt8 | 0.0~500.0 | 0.0~900.0 | +/-0.1%FS | |
| DC Voltage | 0~10V | DCV1 | Programmable range -19999 ~ 20000 (Decimal point position is variable) | | +/-0.1%FS | |
| | 0~5V | DCV2 | | | +/-0.1%FS | |
| | 1~5V | DCV3 | | | +/-0.1%FS | |
| DC Current | 0~20mA | MA1 | Programmable range -19999 ~ 20000 (Decimal point position is variable) | | +/-0.1%FS | |
| | 4~20mA | MA2 | | | +/-0.1%FS | |

Table 2.6.2 The function table of External switch input (Digital input)

| External switch number | Function | Detection way |
|------------------------|---------------------------------------|---------------|
| SW1 | RUN/STOP (RUN<-> STOP) | Leading edge |
| SW2 | HOLD | ON status |
| SW3 | ADV | Leading edge |
| SW4 | Trouble input 1 | |
| SW5 | Trouble input 2 | |
| SW6 | Channel selection ^[NOTE 1] | ON status |
| SW7 | | ON status |
| SW8 | Pattern selection ^[NOTE 2] | |
| SW9 | | |
| SW10 | | |
| SW11 | | |
| SW12 | | |

[NOTE 1] Channel selection

| SW6 | SW7 | Description |
|-----|-----|---------------------------------|
| OFF | OFF | Enabled both channel (CH1,CH2) |
| ON | OFF | Enabled CH1, but disabled CH2 |
| OFF | ON | Enabled CH2, but disabled CH1 |
| ON | ON | Disabled both channel (CH1,CH2) |

[NOTE 2] Pattern selection

| Pattern No. | SW8 | SW9 | SW10 | SW11 | SW12 | Detection way |
|-------------|-----|-----|------|------|------|---------------|
| 0 | OFF | OFF | OFF | OFF | OFF | |
| 1 | OFF | OFF | OFF | OFF | ON | |
| 2 | OFF | OFF | OFF | ON | OFF | |
| 3 | OFF | OFF | OFF | ON | ON | |
| 4 | OFF | OFF | ON | OFF | OFF | |
| 5 | OFF | OFF | ON | OFF | ON | |
| 6 | OFF | OFF | ON | ON | OFF | |
| 7 | OFF | OFF | ON | ON | ON | |
| 8 | OFF | ON | OFF | OFF | OFF | |
| 9 | OFF | ON | OFF | OFF | ON | |
| 10 | OFF | ON | OFF | ON | OFF | |
| 11 | OFF | ON | OFF | ON | ON | |
| 12 | OFF | ON | ON | OFF | OFF | |
| 13 | OFF | ON | ON | OFF | ON | |

| Pattern No. | SW8 | SW9 | SW10 | SW11 | SW12 | Detection way |
|-------------|-----|-----|------|------|------|---------------|
| 14 | OFF | ON | ON | ON | OFF | |
| 15 | OFF | ON | ON | ON | ON | |
| 16 | ON | OFF | OFF | OFF | OFF | |
| 17 | ON | OFF | OFF | OFF | ON | |
| 18 | ON | OFF | OFF | ON | OFF | |
| 19 | ON | OFF | OFF | ON | ON | |
| 20 | ON | OFF | ON | OFF | OFF | |
| 21 | ON | OFF | ON | OFF | ON | |
| 22 | ON | OFF | ON | ON | OFF | |
| 23 | ON | OFF | ON | ON | ON | |
| 24 | ON | ON | OFF | OFF | OFF | |
| 25 | ON | ON | OFF | OFF | ON | |
| 26 | ON | ON | OFF | ON | OFF | |
| 27 | ON | ON | OFF | ON | ON | |
| 28 | ON | ON | ON | OFF | OFF | |
| 29 | ON | ON | ON | OFF | ON | |
| 30 | ON | ON | ON | ON | OFF | |
| 31 | ON | ON | ON | ON | ON | |

2.7 Terminal Allocation

| No. | Terminal name | Function |
|-----|------------------|-----------------|
| 1 | DI_COM | |
| 2 | DI1 | Digital input1 |
| 3 | DI2 | Digital input2 |
| 4 | DI3 | Digital input3 |
| 5 | DI4 | Digital input4 |
| 6 | DI5 | Digital input5 |
| 7 | DI6 | Digital input6 |
| 8 | DI_COM | |
| 9 | DI7 | Digital input7 |
| 10 | DI8 | Digital input8 |
| 11 | DI9 | Digital input9 |
| 12 | DI10 | Digital input10 |
| 13 | DI11 | Digital input11 |
| 14 | DI12 | Digital input12 |
| 15 | Not Connected | |
| 16 | | |
| 17 | | |
| 18 | | |
| 19 | | |
| 20 | | |

| No. | Terminal name | Function |
|-----|---------------|------------------|
| 1 | DO_COM1 | |
| 2 | DO1 | Digital output1 |
| 3 | DO2 | Digital output2 |
| 4 | DO3 | Digital output3 |
| 5 | DO4 | Digital output4 |
| 6 | DO5 | Digital output5 |
| 7 | DO6 | Digital output6 |
| 8 | DO_COM2 | |
| 9 | DO7 | Digital output7 |
| 10 | DO8 | Digital output8 |
| 11 | DO9 | Digital output9 |
| 12 | DO10 | Digital output10 |
| 13 | DO11 | Digital output11 |
| 14 | DO12 | Digital output12 |
| 15 | N.C. | Relay 1 |
| 16 | N.O. | |
| 17 | COM | |
| 18 | N.C. | Relay 2 |
| 19 | N.O. | |
| 20 | COM | |

[Note] Open collector outputs are externally powered.


Two common terminals are disconnected

each other. And in case of need, connect two common terminal

(DO_COM1 and DO_COM2) by a wire.

| No. | Terminal name | Function |
|-----|------------------|------------------|
| 1 | Output1(+) | 4~20mA, |
| 2 | Output1(-) | Voltage Pulse |
| 3 | Output2(+) | 4~20mA, |
| 4 | Output2(-) | Voltage Pulse |
| 5 | Output3(+) | AUX. Output |
| 6 | Output3(-) | (4~20mA) |
| 7 | Output4(+) | AUX. Output |
| 8 | Output4(-) | (4~20mA) |
| 9 | Input1 (+) | RTD(A),mA,V,TC |
| 10 | Input1 (-) | RTD(b) |
| 11 | Input1(B) | RTD(B) |
| 12 | Input2 (+) | RTD(A),mA,V,TC |
| 13 | Input2 (-) | RTD(B) |
| 14 | Input2(B) | RTD(B) |
| 15 | Input3(+) | AUX. Input(mA,V) |
| 16 | Input3(-) | |
| 17 | Not Connected | |
| 18 | | |
| 19 | | |
| 20 | | |

| No. | Terminal name | Function |
|-------|----------------------------|----------------------|
| 9 pin | D-sub connector (9 pin) | RS232 (default) |
| 8 pin | RJ-45 connector (8 pin) | Ethernet (option) |
| 5 pin | SDA | Modbus (option) |
| | SDB | |
| | RDA | |
| | RDB | |
| | FG | |
| 2 pin | NET_A | LonWorks (option) |
| | NET_B | |

| Terminal name | | Function |
|---|--------------|-----------------------------|
| L | 100Vac to | Main Power supply |
| N | 240Vac | |
|  | Frame ground | Connect the FG to ground |

2.8 Rear terminal

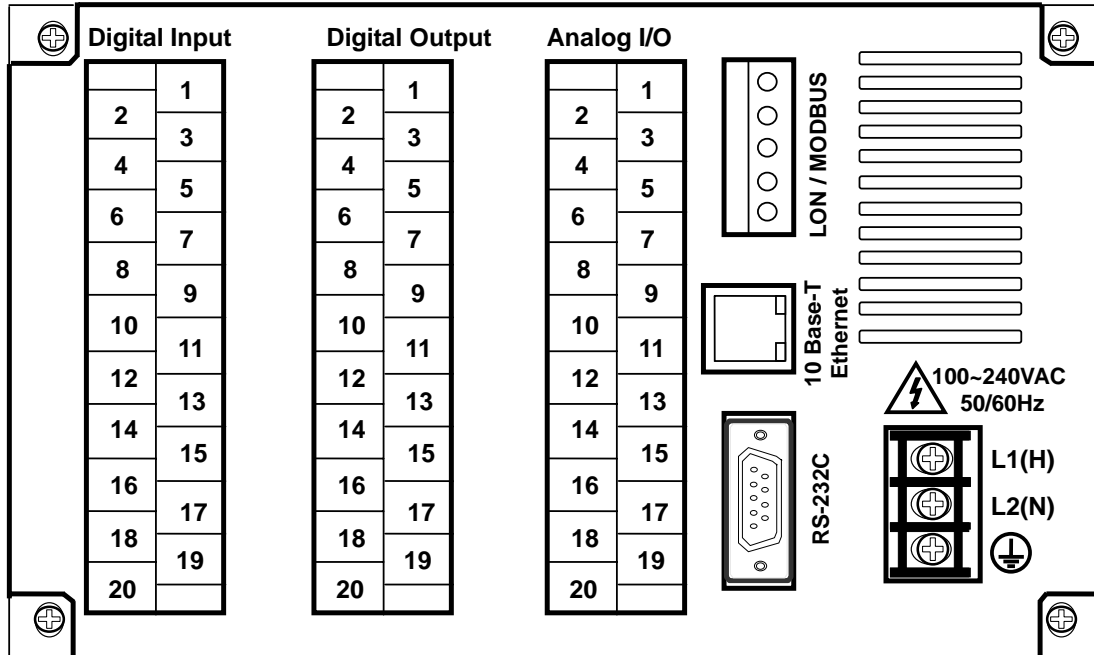


Fig. 2.8.1 Rear Terminal



1. **MODBUS** on Fig. 2.8.1 indicates the **OPTION** part. Models that do not select ModBus OPTION do not support ModBus communication.
2. **Ethernet** on Fig 2.8.1 indicates the **OPTION** part. Models that do not select Ethernet OPTION do not support Ethernet communication.

3. Configuration

This is an initial set-up that determines appropriate control performance and capacity of applied systems or devices and consists of the elements described on Fig. 3.1.1.

3.1 Screen configuration

Screen configuration consists of a screen switch selection mode (Fig. 3.1.1). To set up the initial screen configuration (Fig. 3.2.1), press the right-hand corner at the bottom of the main screen and then press the left-hand corner at the bottom of the screen(see Fig. 3.1.2).

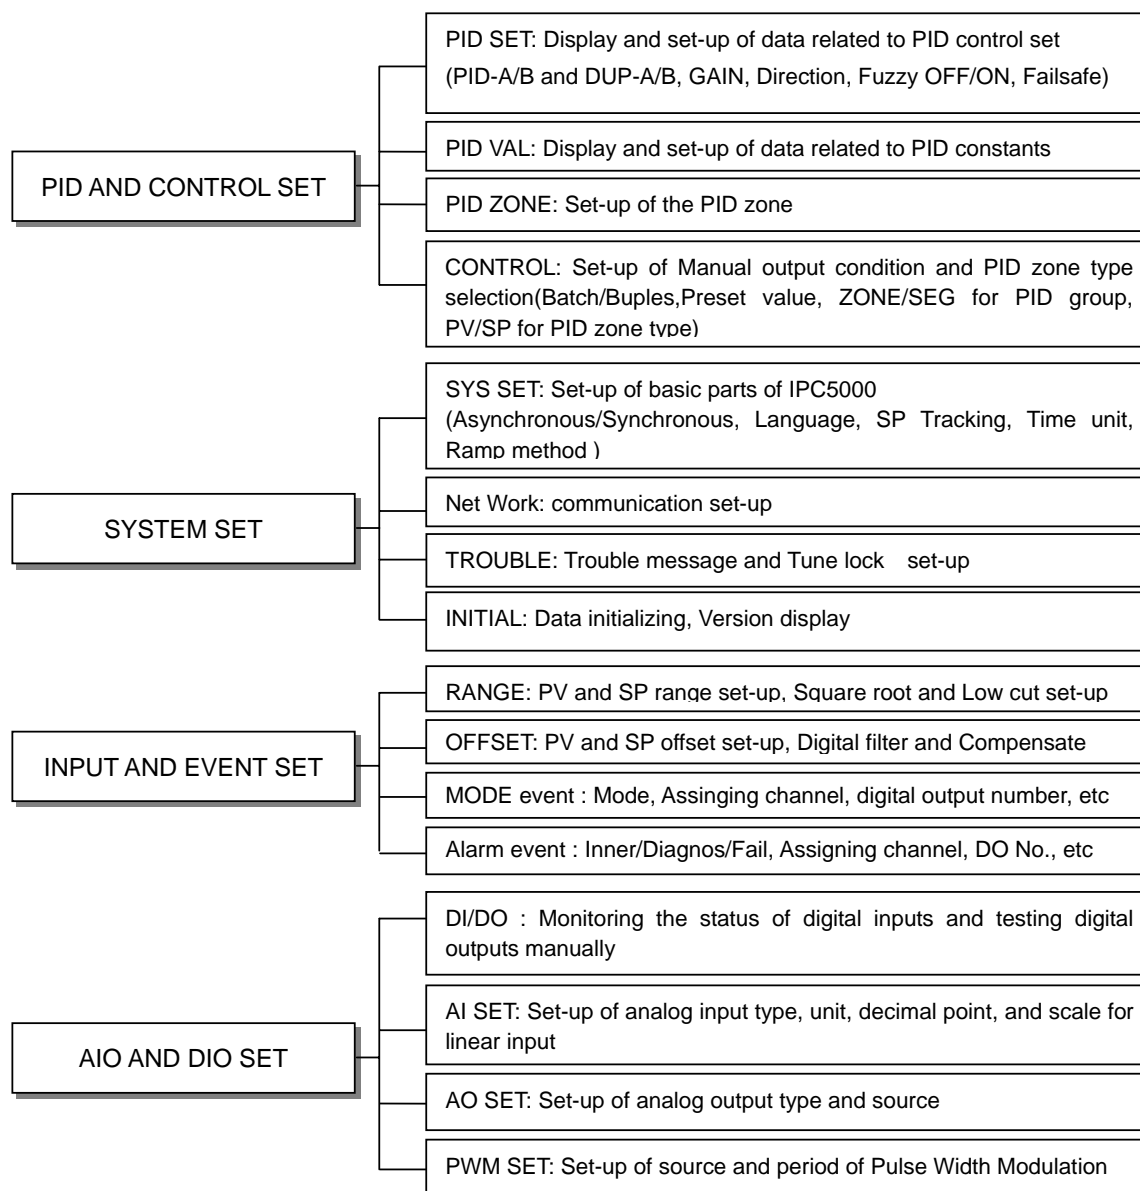


Fig. 3.1.1 Screen switch block

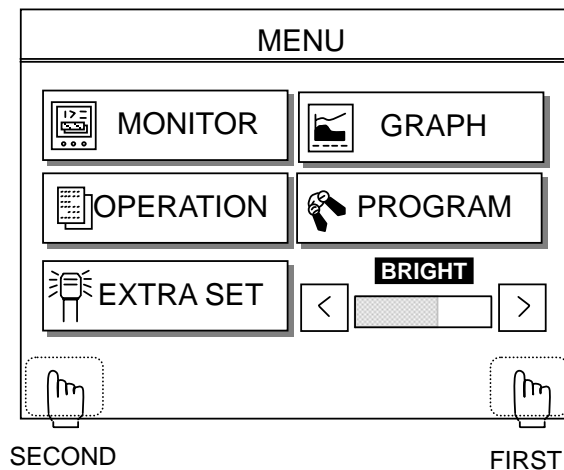


Fig. 3.1.2 Main menu screen

3.2 Configuration screen

In order to enter the screen shown on Fig. 3.2.1, press the right-hand corner at the bottom of the screen as is shown on Fig. 3.1.2 and then press the left-hand corner at the bottom within 1 second.

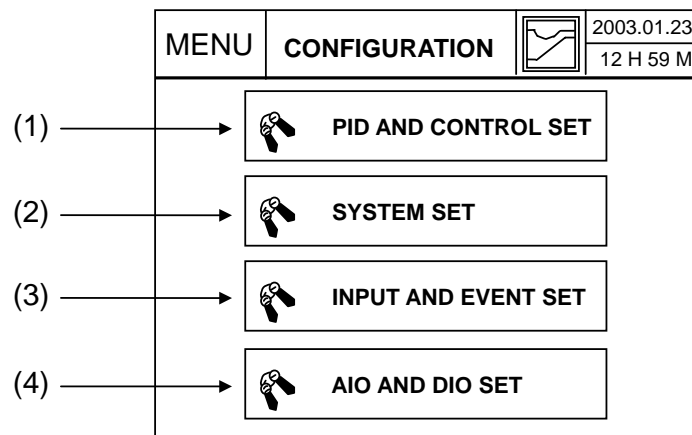


Fig. 3.2.1 SETUP (Configuration)

(1) Button 1

- Switch to **PID PARAMETER** and **CONTROL setup** screen

(2) Button 2

- Switch to **SYSTEM setup** screen

(3) Button 3

- Switch to **INPUT PARAMETER**, **EVENT setup** screen

(4) Button 4

- Switch to **AI/AO**, **Control Output** , and **DI/DO Monitor** screen

3.3 AI SET screen

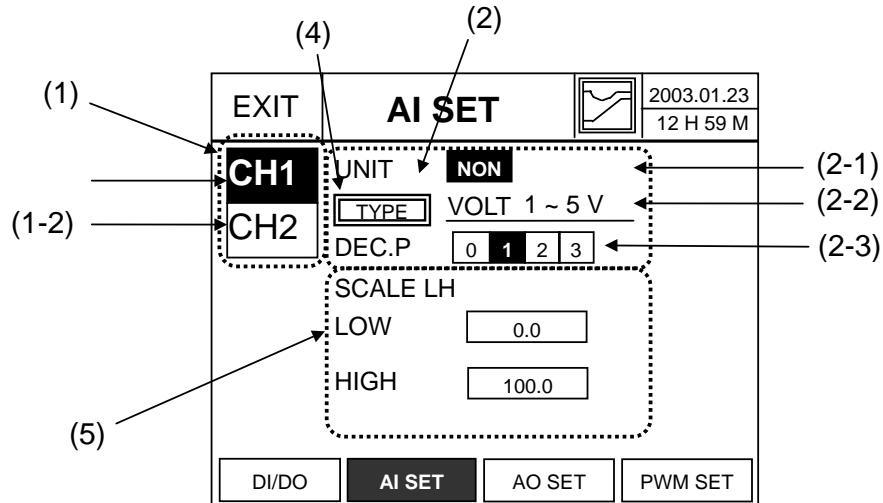


Fig. 3.3.1 AI SET Screen

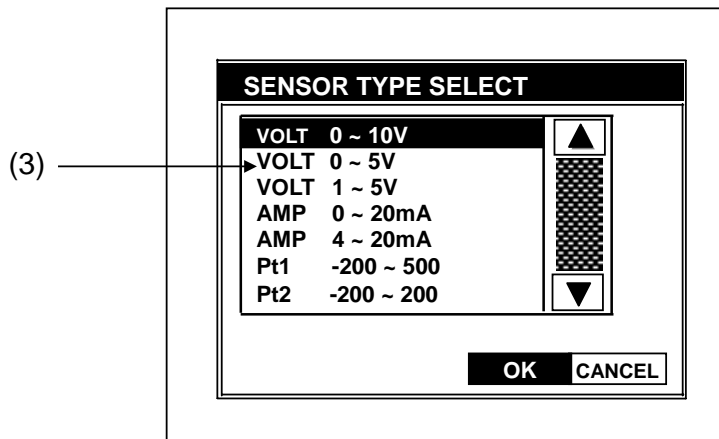


Fig. 3.3.2 SENSOR TYPE SELECTS

(1) Input Channel Setup

(1-1) CH1 **Select** & Setup button

- When button 'CH1' is pressed, it is **highlighted** and selected.

(1-2) CH2 Select & Setup button

- When button 'CH2' is pressed, it is highlighted and selected.

(2) Sensor Input Display Setup.

(2-1) UNIT: PV UNIT Setup

- Indicates unit by temperature input. Celsius: C / Fahrenheit: F / etc.: NONE

- If the unit is selected by Volt/Current(0~10V, 0~5V, 1~5V, 0~20mA, 4~20mA), the unit is fixed by NONE automatically.
- If the sensor type is selected by RTD or TC, the mean of the unit(NONE) is same with Celsius(C).

(2-2) TYPE: Code indicates ready-setup type of sensor.

Default = VOLT 0 ~ 10V

- Sensor type & Code Table (See Chart below).

| Input type | | Input range code | Instrument input range | |
|---------------|---------------------------|------------------|-------------------------|--------------|
| | | | DEG C | DEG F |
| Thermo couple | K | K1 | -200.0~200.0 | -300.0~400.0 |
| | | K2 | 0.0 ~ 1200.0 | 0~2400 |
| | | K3 | 0.0~800.0 | 0~1600 |
| | | K4 | 0.0~400.0 | 0~750 |
| | J | J | 0.0~800.0 | 0~1600 |
| | R | R | 0.0~1600.0 | 0~3100 |
| | S | S | 0.0~1600.0 | 0~3100 |
| | B | B | 0.0~1800.0 | 0~3300 |
| | E | E | 0.0~800.0 | 0~1600 |
| | T | T | -200.0~300.0 | -300~700 |
| | N | N | 0.0~1300.0 | 32~2372 |
| RTD | Pt100 (JIS/IEC .00385) | Pt1 | -200.0~500.0 | -300.0~900.0 |
| | | Pt2 | -200.0~200.0 | -300.0~400.0 |
| | | Pt3 | -100.0~150.0 | -150.0~300.0 |
| | | Pt4 | -50.0~200.0 | -50.0~400.0 |
| | | Pt5 | -40.0~60.0 | -40.0~140.0 |
| | | Pt6 | 0.0~100.0 | 0.0~200.0 |
| | | Pt7 | 0.0~300.0 | 0.0~500.0 |
| | | Pt8 | 0.0~500.0 | 0.0~900.0 |
| RTD | JPt100 (JIS) | JPt1 | -200.0~500.0 | -300.0~900.0 |
| | | JPt2 | -200.0~200.0 | -300.0~400.0 |
| | | JPt3 | -100.0~150.0 | -150.0~300.0 |
| | | JPt4 | -50.0~200.0 | -50.0~400.0 |
| | | JPt5 | -40.0~60.0 | -40.0~140.0 |
| | | JPt6 | 0.0~100.0 | 0.0~200.0 |
| | | JPt7 | 0.0~300.0 | 0.0~500.0 |
| | | JPt8 | 0.0~500.0 | 0.0~900.0 |
| Linear | DC Voltage | DCV1 | 0~10V (-19999 ~ 20000) | |
| | | DCV2 | 0~5V (-19999 ~ 20000) | |
| | | DCV3 | 1~5V (-19999 ~ 20000) | |
| | DC Current | MA1 | 0~20mA (-19999 ~ 20000) | |
| | | MA2 | 4~20mA (-19999 ~ 20000) | |

- If the button(4) is pushed, Figure 3.3.2 appears and you can select the sensor type in the screen.
- **If the sensor type is changed, the PV and SP low/high limit range is adjusted automatically according to the range of the selected sensor type.**

(2-3) Dec. P. (decimal point) setup: Places Decimal point indication

- Decimal point of Thermocouple and RTD type is 0 ~ 2, **Default = 1**
- Volt and mA type is from 0 ~ 3, **Default = 1**
- **If the sensor type is changed, the decimal point is one.**


(3) Sensor Select.

They are listed by sensor input type and setup range.

After pushing UP and DOWN arrow buttons and selecting the sensor type, if you push the “OK” button, the sensor type is set and if you push the “CANCAL” button, it is canceled.

RANGE Indication

- It indicates input range of sensor by each select. (Max. Range)



(4) SENSOR TYPE Setup Button: Screen Conversion

- Conversion to <Fig 3.3.2 >

(5) SCALE LH(Low – High)

- The high and low range of the Linear input type(Volt/Current) is set.
- This set area is displayed, if the Volt/Current(0~10V, 0~5V, 1~5V, 0~20mA, 4~20mA) is selected.
- The set range is -19999 to 20000(LOW < HIGH).
- It can be changed according to decimal point and setting the scale range like the below table.

| Decimal Point | Maximum and Minimum scale -19999 ~ 20000 | | Scale is 0 to 1000 | |
|---------------|---|--------|--------------------|-------|
| | Low | High | Low | High |
| 0 | -19999 | 20000 | 0 | 1000 |
| 1 | -1999.9 | 2000.0 | 0.0 | 100.0 |
| 2 | -199.99 | 200.00 | 0.00 | 10.00 |
| 3 | -19.999 | 20.000 | 0.000 | 1.000 |

< Analog output Assign >

Here explains about the system to assign the Analog and Digital outputs to the output terminal of IPC5000.

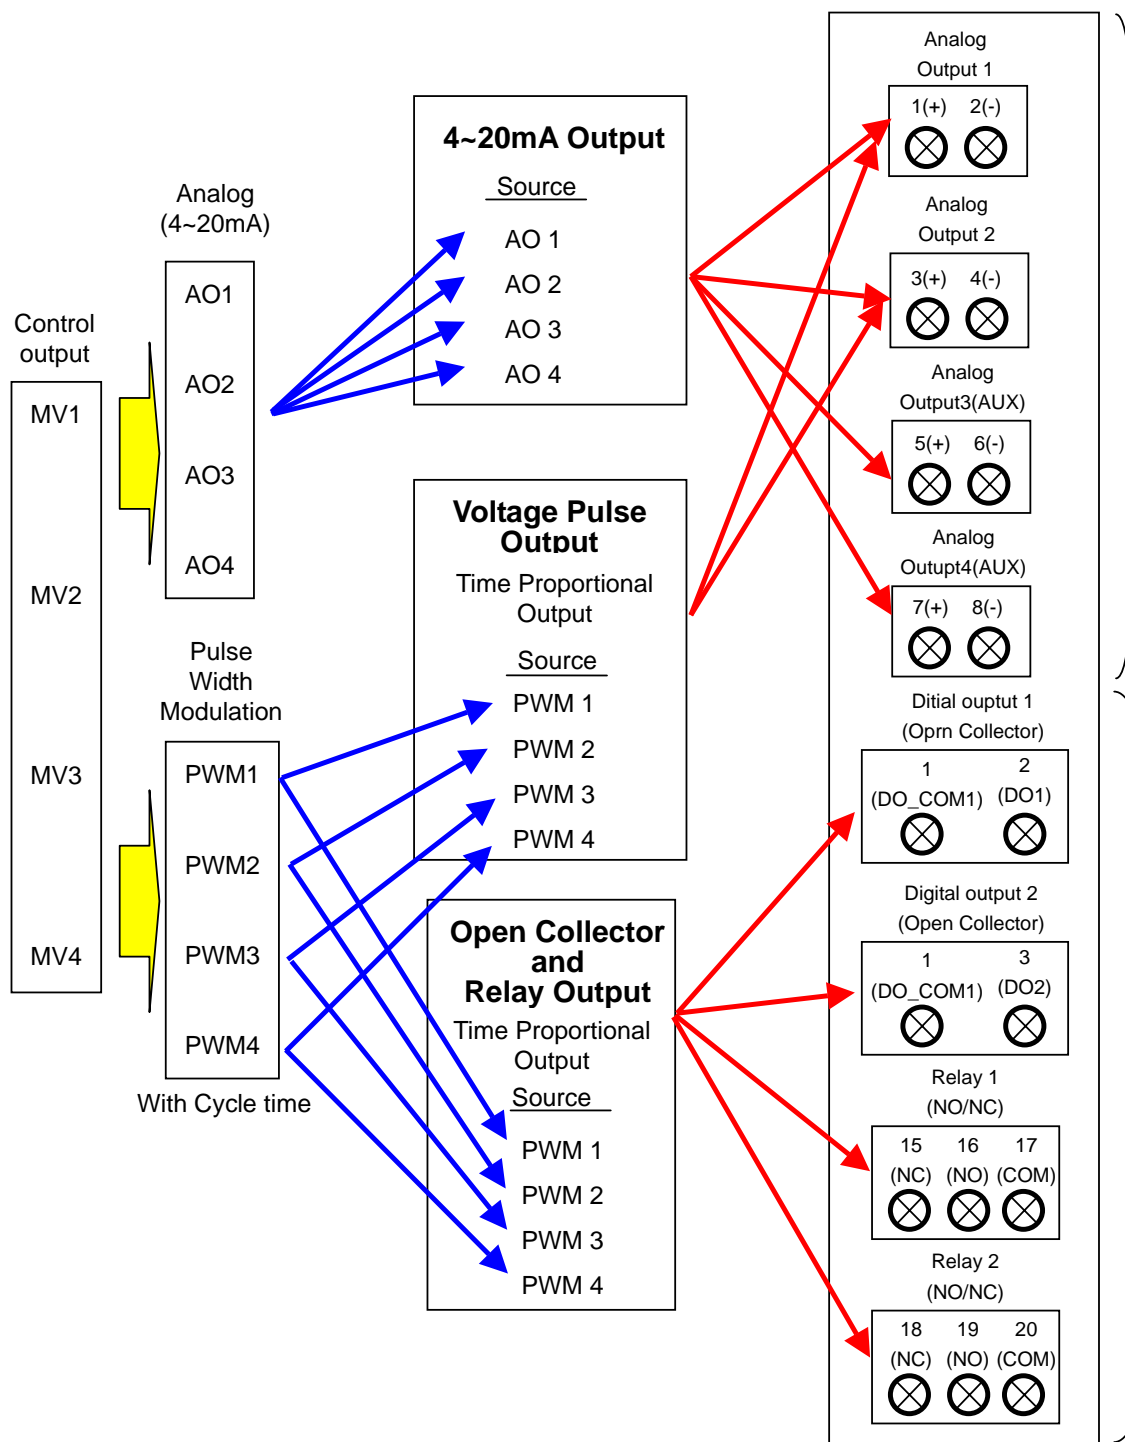


Fig. 3.4.1 Outputs Assigning block diagram

3.4 PWM set Screen

You can assign the Pulse output source of IPC5000 and set the cycle time of the pulse in this screen.

IPC5000 has four Pulse outputs(PW1,PW2,PW3,PW4) and they are used for Relay, Open Collector and Voltage Pulse output. If the MV1, MV2, MV3 and MV4 are assigned, the Pulse is operated according to the assigned MV output value. Refer to figure 3.4.1 for understanding. Assigning MVs to Pulse output is set in Figure 3.4.2.

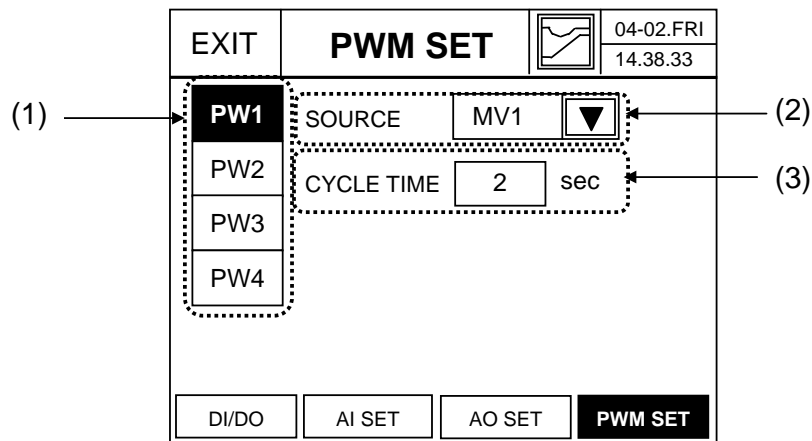


Fig. 3.4.2 PWM SET screen

(1) **PWM(Pulse Width Modulation) Channel Assign button** : it is **highlighted** and selected.

(2) **Source set** : It is combo box to assign the source(MV1,MV2,MV3 and MV4) for PWM.

If pushing the button(2), the combo box like figure 3.4.3 appears for the output selection and the output for assigning can be set.

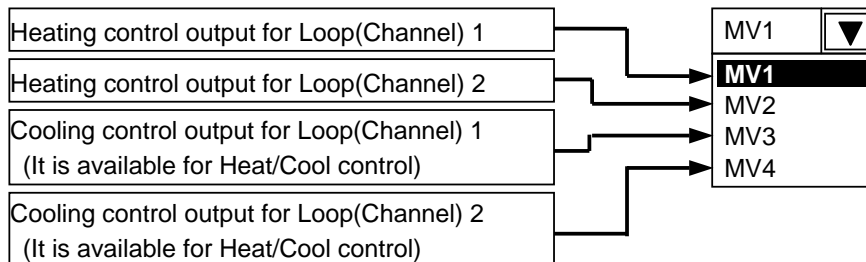


Fig. 3.4.3 MV output selection combo box

The sources for PWM are MV1, MV2, MV3 and MV4 and they mean the outputs like below.

| MV | Description | Addition Description |
|-----|--|---|
| MV1 | Heating control output for Loop(Channel) 1 | Heating control output at Heat/Cool Heating control output at normal PID |
| MV2 | Heating control output for Loop(Channel) 1 | Heating control output at Heat/Cool Heating control output at normal PID |
| MV3 | Cooling control output for Loop(Channel) 2 | Cooling control output at Heat/Cool |
| MV4 | Cooling control output for Loop(Channel) 2 | Cooling control output at Heat/Cool |

(3) **Cycle time set** : Sets the control cycle time for each pulse

- Set Range : 1 ~ 120 seconds
- The control cycle time set operates like fig 3.4.4.

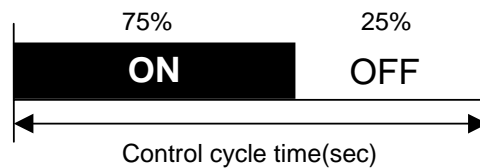


Fig 3.4.4 Pulse control output at MV = 75%

3.5 AO SET screen

This screen is for setting analog output source, output type and output scale of each channel.

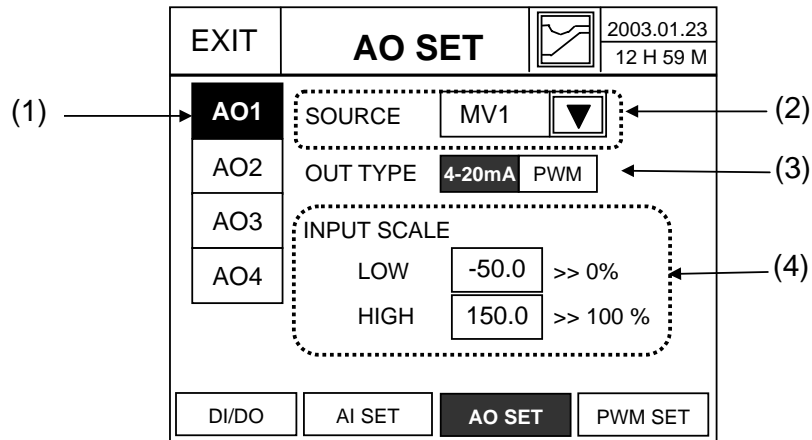


Fig. 3.5.1 AO SET screen

(1) **The selector for selecting analog output channel** : It is **highlighted** and selected.

Refer to below table for channel selection and description.


| | Analog output | Terminal number (Analog I/O Group) | Output Type | OPT : Option |
|-----|---------------|---------------------------------------|-----------------------|-----------------|
| | | | | Basic/OPT Spec. |
| AO1 | 1 | 1(+), 2(-) | 4~20mA/ Voltage Pulse | Basic |
| AO2 | 2 | 3(+), 4(-) | 4~20mA/ Voltage Pulse | Basic |
| AO3 | 3 | 5(+), 6(-) | 4~20mA | OPT |
| AO4 | 4 | 7(+), 8(-) | 4~20mA | OPT |

(2) **SOURCE set**: The Combo box for selecting analog output source

- If pushing this button, the items for selection like figure 3.5.2 appear in next page. If the OUT TYPE is 4~20mA, (A) appears and if it is PWM, (B) appears.
- If selecting one of PV1, PV2, SP1, SP2, DV1 and DV2 in figure 3.5.2, (4) item in figure 3.5.1 for setting output scale of 4~20mA is displayed.
- PWM Selection : PWM means Pulse Width Modulation and It is four pulse outputs IPC5000 supports. The MV1, MV2, MV3 and MV4 of IPC5000 can be assigned to each pulse. Refer to figure 3.4.1 and 3.4.2 for the assigning.

(3) **OUT TYPE set** : Sets the output type to analog output terminal.

- Analog output channel 1 and 2 supports 4~20mA and Voltage pulse(PWM) and Analog output channel 3 and 4 only supports 4~20mA. Analog output channel 3 and 4 is option.

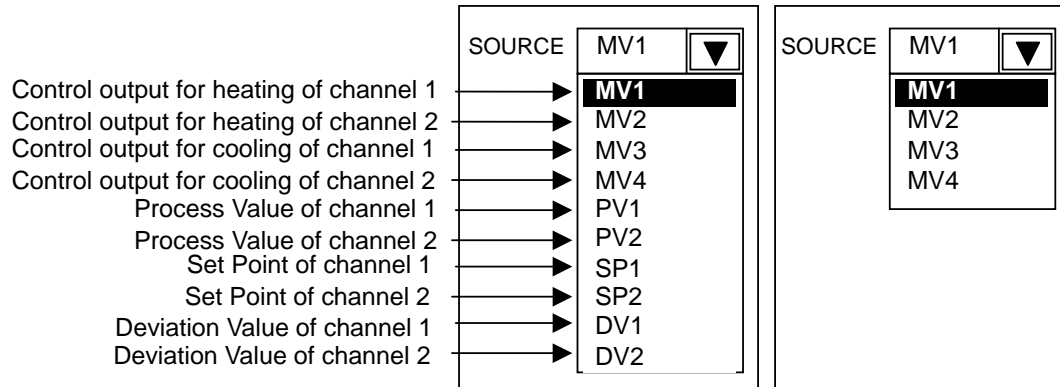

(A) OUT TYPE = 4~20mA (B) OUT TYPE = PWM

Fig. 3.5.2 Combo box for selecting analog output source

(4) **INPUT SCALE** : Sets the analog output low/high scale for PV1, PV2, SP1, SP2, DV1 and DV2.

- This item is not displayed when the source is MV1, MV2, MV3 or MV4 or output type is PWM.

- Refer to figure 3.5.3 to adjust 4~20mA by setting scale value.

Example of Figure 3.5.3 is same case with set value of figure 3.5.1.

(Note) Low < High.

Refer to next page for scale graph.

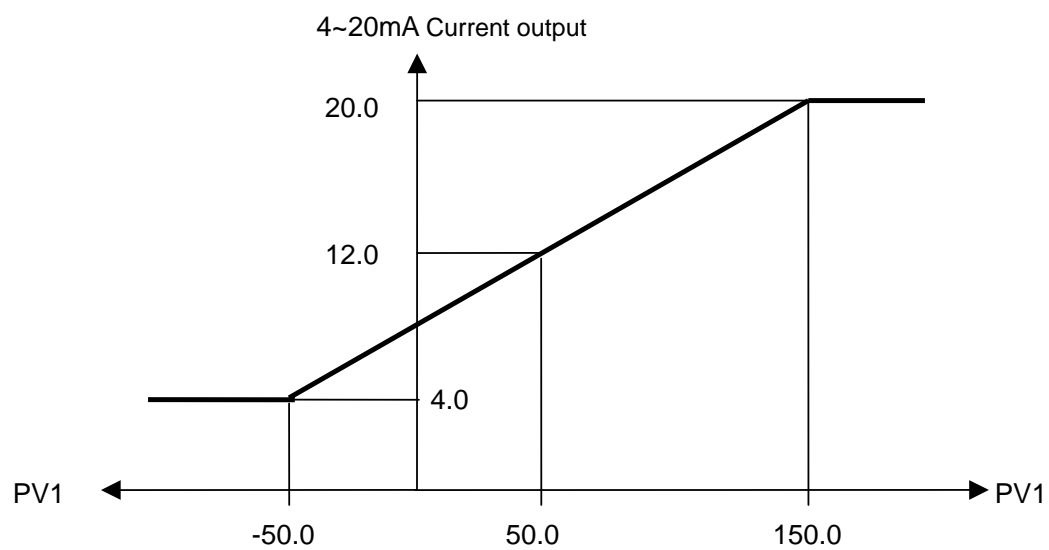


Fig. 3.5.3 Current output scale adjustable graph

3.6 DIO status screen

This display screen shows the status of external Digital input/output (Monitoring)

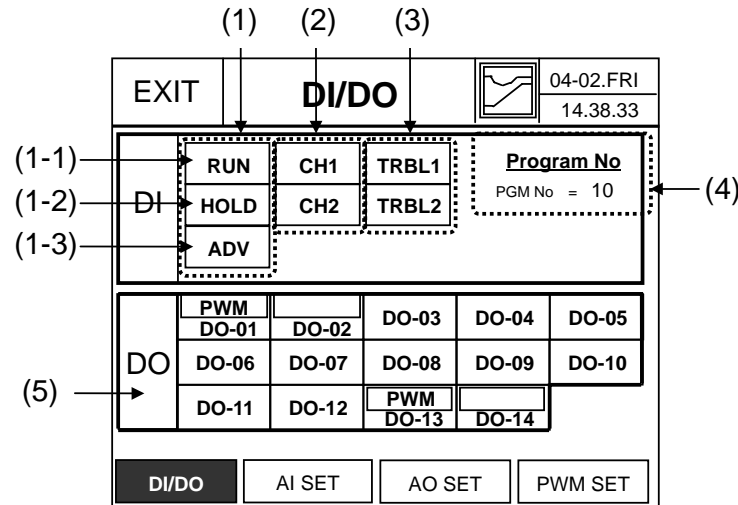


Fig. 3.6.1 DI/DO Screen

(1) **Status:** When highlighted it indicates that there is a remote input.

(1-1) RUN / STOP Input Status Indication.

Terminal number is 2(DI1) and 1(DI_COM) of Digital input group.

RUN: When the input of Digital input 1 is closed (at the rising edge), “**RUN**” status will be highlighted if previous status was "STOP", and the program that is selected will start to run.

STOP: When the input of Digital input 1 is closed (at the rising edge), “**STOP**” status will be highlighted if previous status was "RUN", and the program that is selected will stop running.

(1-2) **HOLD:** Terminal number is 3(DI2) and 1(DI_COM) of Digital input group.

When Digital input 2 is ON, it **holds the running program** and when it is OFF, it continues to run the program

(1-3) **ADV:** Terminal number is 4(DI3) and 1(DI_COM) of Digital input group.

Each time Digital input 3 is ON, it **advances the processing** of a program by one segment.

(2) **Channel Select:** Terminal number is 7(DI6), 8(DI7) and 1(DI_COM)

When Digital input 6 and/or 7 are ON, channels are selected other external remote operations.

- They are chosen by the status of DI (See chart below)

| DI6 | DI7 | Operation | Status |
|-----|-----|----------------------------------|--------------|
| ON | ON | Enabled both CHANNEL (CH1, CH2) | CH1, 2 - ON |
| ON | OFF | Enabled CH1, but disabled CH2 | CH1 ON - |
| OFF | ON | Enabled CH2, but disabled CH1 | CH2 ON - |
| OFF | OFF | Disabled both CHANNEL (CH1, CH2) | CH1, 2 - OFF |

- **Default = Disable** both channel Input (CH1, 2 is **OFF**)

(Note) When current Control mode is synchronous mode(Figure 3.17.1), if either of DI6 or DI7 is ON, the remote control of Digital inputs is available.

(3) TROUBLE Status Indication : Terminal number is 5(DI4), 6(DI5) and 1(DI_COM)

When Digital **input 4 or 5 is ON**, The **trouble message** is displayed and operation mode of the controller is changed to a trouble status. And Control output is 0.0% and all digital output is OFF except digital output for TROUBLE. You can see the arrangement about Channel 1 or 2 of Digital input 4 and 5 on Table 2.6.2.

Refer the Section 3.18 for assigning Trouble Message.

(4) Program Number Selection

- When current status is only STOP mode, the selection can be enable.
- Selection and indication are made according to the status of 'DI' below.

| 1 | 2 | 3 | 4 | 5 | Program No. selected | |
|------|------|------|-----|-----|----------------------|---------|
| DI12 | DI11 | DI10 | DI9 | DI8 | HEX | Decimal |
| OFF | OFF | OFF | OFF | OFF | 00 | 0 |
| OFF | OFF | OFF | OFF | ON | 01 | 1 |
| OFF | OFF | OFF | ON | OFF | 02 | 2 |
| OFF | OFF | OFF | ON | ON | 03 | 3 |
| OFF | OFF | ON | OFF | OFF | 04 | 4 |
| OFF | OFF | ON | OFF | ON | 05 | 5 |
| OFF | OFF | ON | ON | OFF | 06 | 6 |
| OFF | OFF | ON | ON | ON | 07 | 7 |
| OFF | ON | OFF | OFF | OFF | 08 | 8 |
| OFF | ON | OFF | OFF | ON | 09 | 9 |
| OFF | ON | OFF | ON | OFF | 0A | 10 |
| OFF | ON | OFF | ON | ON | 0B | 11 |
| OFF | ON | ON | OFF | OFF | 0C | 12 |
| OFF | ON | ON | OFF | ON | 0D | 13 |
| OFF | ON | ON | ON | OFF | 0E | 14 |
| OFF | ON | ON | ON | ON | 0F | 15 |
| ON | OFF | OFF | OFF | OFF | 10 | 16 |
| ON | OFF | OFF | OFF | ON | 11 | 17 |
| ON | OFF | OFF | ON | OFF | 12 | 18 |
| ON | OFF | OFF | ON | ON | 13 | 19 |
| ON | OFF | ON | OFF | OFF | 14 | 20 |

| 1 | 2 | 3 | 4 | 5 | Program No. selected | |
|------|------|------|-----|-----|----------------------|---------|
| DI12 | DI11 | DI10 | DI9 | DI8 | HEX | Decimal |
| ON | OFF | ON | OFF | ON | 15 | 21 |
| ON | OFF | ON | ON | OFF | 16 | 22 |
| ON | OFF | ON | ON | ON | 17 | 23 |
| ON | ON | OFF | OFF | OFF | 18 | 24 |
| ON | ON | OFF | OFF | ON | 19 | 25 |
| ON | ON | OFF | ON | OFF | 1A | 26 |
| ON | ON | OFF | ON | ON | 1B | 27 |
| ON | ON | ON | OFF | OFF | 1C | 28 |
| ON | ON | ON | OFF | ON | 1D | 29 |
| ON | ON | ON | ON | OFF | 1E | 30 |
| ON | ON | ON | ON | ON | 1F | 31 |

(5) 'DO' Monitor & Force digital outputs

- If each digital input is ON, it is highlighted and if OFF, it is not highlighted.

Example :

If you register RUN mode event to digital output 1, now operation mode of IPC5000 is RUN mode, and you set digital output 1 to Normal type, this part will be displayed like below figure 3.6.2. if it is set as PWM, it can not be used for normal digital output type.

* DO-01display means Digital Output No. '01'.

| | | | | | |
|----|--------------------------|--------------------------|--------------|--------------------------|-------|
| DO | <input type="checkbox"/> | <input type="checkbox"/> | DO-03 | DO-04 | DO-05 |
| | DO-01 | DO-02 | DO-08 | DO-09 | DO-10 |
| | DO-06 | DO-07 | PWM DO-13 | <input type="checkbox"/> | DO-14 |

Fig. 3.6.2 Digital outputs ON/OFF status

- Force digital outputs(Only for test of digital outputs)
You can force digital outputs to ON or OFF by pressing the rectangle area of the digital output number. The force digital outputs are available for this screen. But if you exit this screen, The digital output will be OFF automatically.
- Selection of PWM Control output or normal digital output.
You can set digital output 1 and 2(Open Collector output) for Solid State Relay or Relay output DO13 and DO14 to PWM output. IPC5000 has 4 PWM (Pulse Width Modulation) for Time Proportional output. DO13 and DO14 mean Relay output terminals. In order to set output type of digital output 1, 2, DO13, or DO14, like figure 3.6.3, push the small box, and figure 3.6.4 will appear. You can only set this change in STOP mode.

The button to go to screen(Fig 3.6.4) to select whether it use Control output or normal digital output, but **DO13 and DO14 don't support normal digital output.**

* DO-01display means Digital Output No. '01'.

| | | | | | |
|----|-------|-------|--------------|-------|-------|
| | DO-01 | DO-02 | DO-03 | DO-04 | DO-05 |
| DO | DO-06 | DO-07 | DO-08 | DO-09 | DO-10 |
| | DO-11 | DO-12 | PWM DO-13 | DO-14 | |

Fig. 3.6.3 Digital output type selection

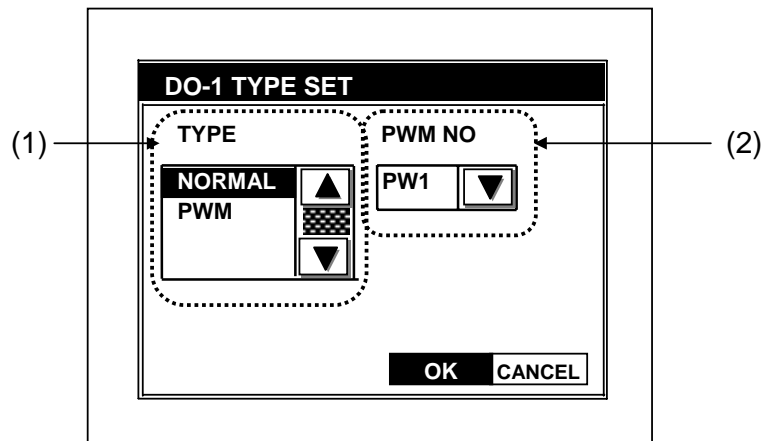


Fig. 3.6.4 DO TYPE SET screen

(1) **'DO' TYPE Setup.**

- NORMAL: Setup for the use of EVENT output of normal 'DO'.
- PWM: Setup for the use of control output operation.

(2) **PWM No. Setup.**

- Setup from PW1 through PW4.
- It is impossible to use EVENT output when it is configured.

PWM NO

| | |
|-----|---|
| PW1 | ▼ |
| PW1 | |
| PW2 | |
| PW3 | |
| PW4 | |

Fig. 3.6.5 Arranging PWM No. of Digital output

3.7 RANGE SET screen

PV/SP limit range and Square root can be set in this screen.

The screenshot shows the 'RANGE SET' screen. At the top, there is an 'EXIT' button, the title 'RANGE SET', a waveform icon, and a date/time display '01.23.MON 12.59.01'. Below this, there are two tabs: 'CH1' (selected) and 'CH2'. Callout (1) points to the 'CH1' tab. Below the tabs, the text 'Type: K1' is displayed, followed by a range '-200.0~200.0' and 'Unit : F'. Callout (2) points to this text. Below the range, there are two labels: 'LOWER' and 'UPPER'. Under 'LOWER', there are two input fields: 'PV' with '-200.0' and 'SP' with '-200.0'. Callout (3) points to the 'PV' field, and callout (4) points to the 'SP' field. Under 'UPPER', there are two input fields: 'PV' with '+200.0' and 'SP' with '+200.0'. Below these, there is a 'SQUARE ROOT' section with an 'OFF' button (selected) and an 'ON' button. Callout (5) points to the 'SQUARE ROOT' text. Below that, there is a 'LOW CUT' section with a '0.5' input field and a '%' symbol. Callout (5-1) points to the 'LOW CUT' text. At the bottom, there are four buttons: 'RANGE' (selected), 'OFFSET', 'MODE', and 'ALARM'.

Fig. 3.7.1 RANGE SET screen

(1) **Channel Selection** button

(2) **TYPE and Unit** : Displaying full range and unit of Input Sensor type.

- Displaying the type of the sensor configured in 'AI SET'.
- In case of sensor type K1 of channel 1 selected in AI SET screen, in this screen the Type displays "K1". For the other example if MA1 have been selected, the Type displays MA1

(3) **PV RANGE** Display and Setup

- PV low/high range is to limit the input from sensor and the limit range is **+/- 5%** of total PV low/high range and the out range of **+/- 5%** is displayed by OVER or UNDER.
- If the sensor type in AI SET(Section 3.3) is changed, PV low/high range also is changed to total range of the sensor type automatically.
- Low range of sensor type < PV LOWER < SP LOWER
- SP UPPER < PV UPPER < High range of sensor type

(4) **SP RANGE** Display and Setup

- Limits user's set input like Target Set Point of Fix control or Segment etc.
- If the sensor type in AI SET(Section 3.3) is changed, SP low/high range also is changed to total range of the sensor type automatically.
- PV LOWER < SP LOWER < SP UPPER, SP LOWER < SP UPPER < PV UPPER

(5) **Square Root** computation(extraction)

- Pressing function selection ON/OFF button selects/cancels square root operation.

Default = OFF

(5-1) **LOW CUT**: sets the conversion limit value to input


- Linear Value is applied when under set value, and the equation below is applied when over the set value.

range = 0.0~5.0%(of input range)

computation equation : $Y = \sqrt{\frac{X}{10}} * \text{Range (Range : PV High - PV Low)}$



Square root output

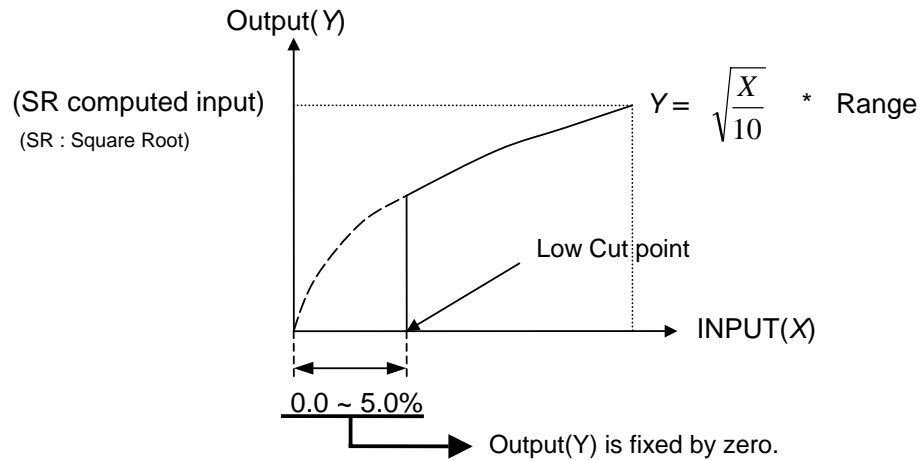

When a flowmeter of orifice or nozzle is used to measure flow, Square root computation is applied to convert differential pressure voltage signals into flow-rate signals. Low Cut value range = 0.0~5.0% (value of Ch1 < value of Ch2)

Example) Linear Voltage = 0.0 ~ 10.0, Range=0.0~1000.0,

1) Lowcut=0.1%(0.01V limit)

if input value = 1.0,

$$0.1\% : 1.0 = X : 1000.0, \therefore X = 0.01V$$

$$Y = \sqrt{\frac{X}{10}} * \text{Range} = \sqrt{\frac{0.01}{10}} * 1000.0 = 31.6 \rightarrow \text{PV input}$$

3.8 OFFSET screen

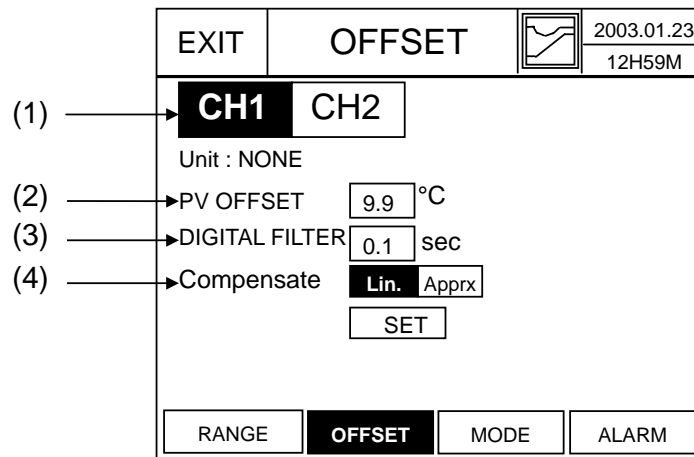


Fig. 3.8.1 OFFSET screen

(1) Channel Selection Display

- This button changes the display of the selected Channel. Any configurations after this step are limited within the selected Channel. **Default = CH1**

(2) PV Offset Display and Input : Compensate the offset value of analog input.

- $PV = \text{Analog input} + \text{OFFSET}$
- Range: -99.9 ~ +99.9

(3) Digital Filter Display and Input : The filter is used for preventing the quick change of analog input.

- Range: 0.0 to 120sec(0.0 : Filter is OFF)

(4) Compensation: compensatory input function

- LIN(Biasing) is used to correct input values affected by sensor deterioration.
- Apprx.(Approximation) is used to obtain capacity measurement signals when input signals and required measurement signals do not have a linear relationship, such as with spherical tank levels and capacities.
- When 'SET' button is pressed, screen switches to the specified method setup screen (Fig 3.9.1)

3.9 Compensation set screen

This screen comes from Fig 3.8.1


| | | | | | | | |
|---------------------|----|------------|--------|---|--|------------|--|
| EXIT | | COMPENSATE | |  | | 2003.01.23 | |
| | | | | | | 12 H 59 M | |
| Type : AMP 0 ~ 20mA | | | | ESC | | — | |
| No. CP set BIAS | | | | 0 | | 1 | |
| (1) → | 1 | 0000.0 | 0000.0 | 2 | | 3 | |
| | 2 | 0500.0 | 0000.0 | 4 | | 5 | |
| (2) → | 3 | 1000.0 | 0000.0 | 6 | | 7 | |
| | 4 | 1500.0 | 0000.0 | 8 | | 9 | |
| | 5 | 2000.0 | 0000.0 | ↑ | | . | |
| | 6 | 2500.0 | 0000.0 | ← | | → | |
| (3) → | 7 | 3000.0 | 0000.0 | ↓ | | ENT | |
| | 8 | 3500.0 | 0000.0 | | | | |
| | 9 | 4000.0 | 0000.0 | | | | |
| | 10 | 4500.0 | 0000.0 | | | | |

Fig. 3.9.1 Compensate set screen

(1) **ITEM Number** Display: displays up to 10

(2) **CP set (Correction Point)**:

- Enters Correction Point input value at the specified item position. Typing in the input value with the keypad on the left and pressing 'ENT' key changes and saves the value. 'ESC' key cancels the process. Enter value in Engineering units. Also, input value can be moved with the direction keys of the keypad on the right.

Range = -5.0% to 105.5% of PV input range

Default = 0

(3) **BIAS** (Enter value in Engineering units)

- Enters BIAS input standby status at the specified item position. Typing in the input value with the keypad on the right and pressing 'ENT' key changes and saves. 'ESC' key cancels the process. Also, the input value can be moved with the direction keys of the keypad on the right

Linearization Range = -5.0% to 105.5% of PV input range SPAN

Default = Full range*(0.0%)=0.0

Approximation Range = -5.0% to 105.5% of PV input range


Default = 0




Compensation

Selection Method: Sets 2-way temperature PV compensation.

1) **Lin. (Linearization) BIAS:** compensation of influence due to sensor deterioration

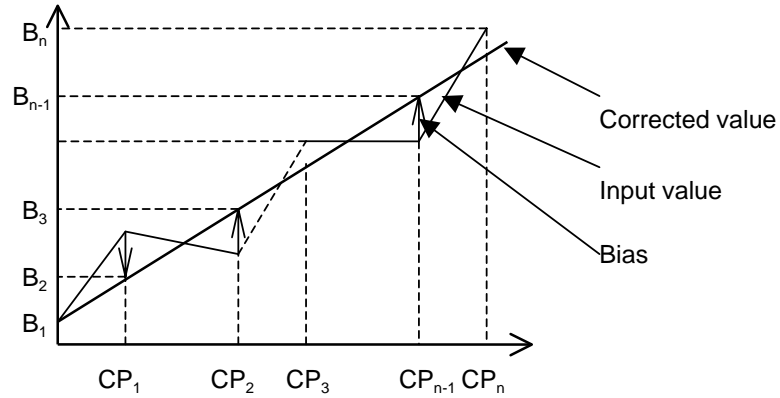

2) **Apprx. (Approximation):** Uses a random slope at each Line-Segment to calculate and display a PV signal.

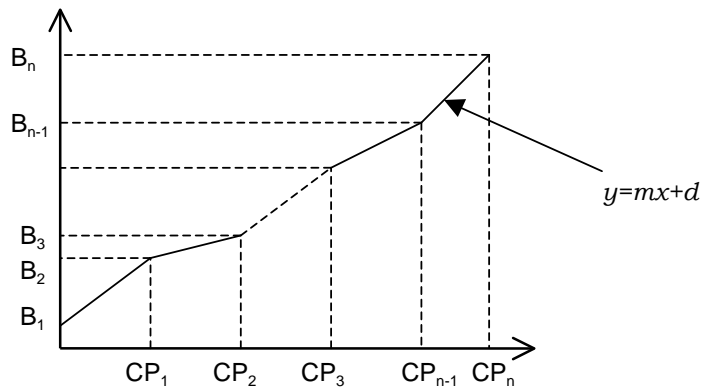

$y=mx+d$, (d : y-intercept, m : slope of the line passing the two points)

CP_n : peak point (Correction Point / line –segment break point)

B_n : Compensation value for each peak points (BIAS for Compensation)

3.10 EVENT SET

- IPC5000 has **12 events** in case of synchronous mode and each 6 events for channel 1 and 2 in case of asynchronous mode. And multiple events can be arranged to the same digital output.
- Event TYPE

| Signal No | Signal name | Description | Used range | Set Position |
|-----------|--|---|-------------------------|----------------|
| 00 | EVENT OFF | Event output OFF | Only Program control | User set area |
| 01 | EVENT ON | Event output ON | Only Program control | User set area |
| 02~17 | TIME EVENT (For detail, refer to User Manual) | ON Delay and Cutback | Only Program control | User set area |
| 21~40 | PV EVENT | OFF/ON according to a changing of PV, SP, DEV, and MV | Program and Fix control | User set area |
| 41~60 | MODE EVENT | STOP | Program and Fix control | Maker set area |
| | | RUN | | |
| | | READY | | |
| | | END | | |
| | | HOLD | | |
| | | ADV | | |
| | | WAIT | | |
| | | Auto Tune | | |
| | | Manual | | |
| | | FIX | | |
| | | DOWN | | |
| | | UP | | |
| 61~80 | ALARM Event | Alarm event output | Program and Fix control | Maker set area |

(NOTE 1)

Mode and Alarm Event can assign the digital output number directly in the event set screen. And Event OFF/ON, Time Event or PV Event can assign digital output number in the Fix Set screen or Segment set screen of program. The digital number that Mode or Alarm event already is assigned can be not assigned to Time Event and PV Event. Refer to the user manual for Fix and Segment set screen.

(NOTE 2)

User set area : User area who use some Equipment or System and it is a input part to set at Fix or program.

Maker set area : Maker area who install or make a trial run of some Equipment or System and it is a input part to set at Mode or Alarm event.



Example to arrange Events to Digital outputs

1. When Fix control and synchronous mode, if you need 3 Mode events (RUN, END, DOWN), 3 PV events (11,12, 21), and 1 Alarm event. You can arrange signals like below. And like figure 3.10.1, the event part has to be set in Fix Set screen.

| Digital input terminal | EVENT number | Description | Set Items |
|------------------------|--------------|------------------------------|--|
| 1 | 42 | RUN | Event number in Figure 3.12.1 : 42 Mode : RUN Digital output number : 01 |
| 2 | 44 | END | Event number in Figure 3.12.1 : 44 Mode : END Digital output number : 02 |
| 3 | 51 | DOWN | Event number in Figure 3.12.1 : 51 Mode : DOWN Digital output number : 03 |
| 4 | 11 | PV Event PV/ABS/LOW(CH 1) | Set the event number like Figure 3.10.1 in Fix Set screen.(Refer to User manual) |
| 5 | 12 | PV Event PV/ABS/LOW(CH 2) | |
| 6 | 21 | PV Event SP/ABS/LOW(CH 1) | |
| 7 | 70 | Alarm | Event number in Figure 3.12.1: 70 Digital output number : 07 |
| 8 | - | Not used | |
| 9 | - | Not used | |
| 10 | - | Not used | |
| 11 | - | Not used | |
| 12 | - | Not used | |

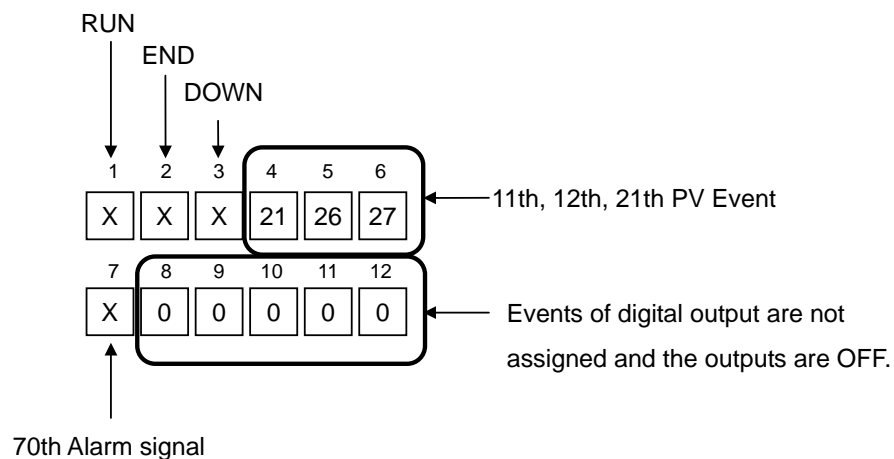


Fig. 3.10.1 The part to arrange events to digital outputs on FIX SET screen of User Manual

2. When Program control and Synchronous mode, if you need 3 mode events (RUN, END, DOWN), 3 PV events (21,26,27), 1 Alarm event (70), 2 Time Events (1,13), You can arrange the events like below, in case that set them to segment No. 0 of program No. 0. And like Figure 3.10.2, the event part has to be set in Segment Edit screen.

| Digital input terminal | Event number | Description | Set Items |
|------------------------|--------------|------------------------------|---|
| 1 | 42 | RUN | Event number in Figure 3.12.1 : 42 Mode : RUN Digital output number : 01 |
| 2 | 44 | END | Event number in Figure 3.12.1 : 44 Mode : END Digital output number : 02 |
| 3 | 51 | DOWN | Event number in Figure 3.12.1 : 51 Mode : DOWN Digital output number : 03 |
| 4 | 11 | PV Event PV/ABS/LOW(CH 1) | Set the event number in segment No. 0 of program No. 0 like Figure 3.10.2 in Segment Edit screen.(Refer to User manual) Event numbers are equal to 12 but the OP Point or Differential value can not same with each other. |
| 5 | 12 | PV Event PV/ABS/LOW(CH 2) | |
| 6 | 12 | PV Event SP/ABS/LOW(CH 1) | |
| 7 | 70 | Alarm Event | Event number in Figure 3.12.1: 70 Digital output number : 07 |
| 8 | 1 | ON Event | Event ON(Refer to User manual) |
| 9 | 2 | Time Event | Set the event number in segment No. 0 of program No. 0 like Figure 3.10.2 in Segment Edit screen.(Refer to User manual) |
| 10 | - | Not used | |
| 11 | - | Not used | |
| 12 | - | Not used | |

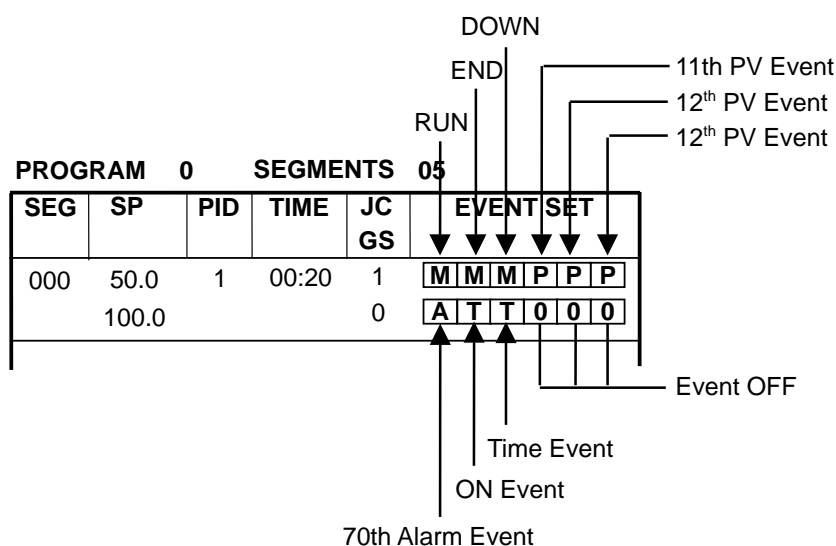


Fig. 3.10.2 The part to arrange PV and Time events to digital outputs on SEG EDIT screen of User Manual

3.11 MODE Event set screen

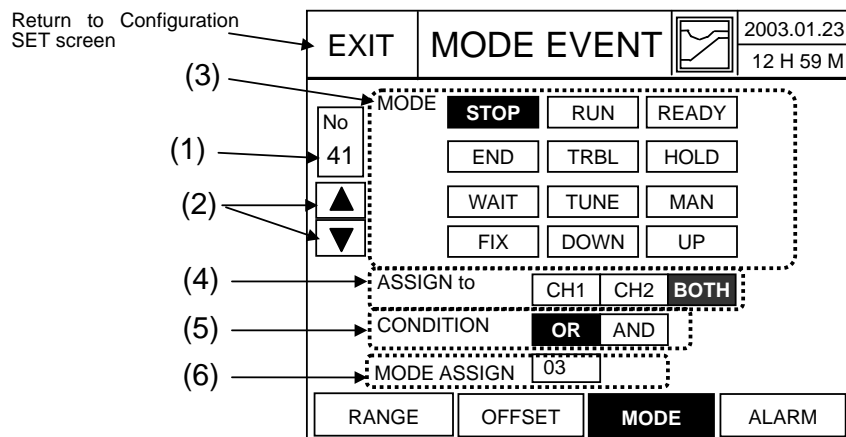


Fig. 3.11.1 MODE EVENT SET

(1) EVENT No. Display and Input

- EVENT No. for setup(21 ~ 40)
- The EVENT No. display to be set and buttons for input take place on the left. After this button is pressed, use the keypad on the right pressing the 'ENT' key after the input changes the value and it's saved, pressing 'ESC' key cancels the process.

(2) Changing EVENT No. for setup.

- ▲ (+) Increase : Whenever this button is pushed, the event No. increases by one.
- ▼ (-) Decrease : Whenever this button is pushed, the event No. decreases by one.

(3) EVENT Content Display

- Highlighted according to 'EVENT No' configuration in (1) (See below Table).

Table 3.11.1 Mode Event information

| ITEM | Description | Remarks |
|-------|--|---------------------------------|
| STOP | Program STOP(Quit) | READY, END, BREAK, TROUBLE = ON |
| RUN | RUN operating | HOLD, TUNE, WAIT = ON |
| READY | READY before operating the program | |
| END | Program or Fix timer END | |
| TRBL | Trouble status | |
| HOLD | HOLD in process | |
| WAIT | WAIT, wait function without going to next step | |
| TUNE | In Auto tuning | |

| ITEM | Description | Remarks |
|------|----------------------------------|---------|
| MAN | Change from AUTO to MANUAL mode | |
| FIX | In operation of FIX control mode | |
| DOWN | Down direction in Program | |
| UP | UP direction in Program | |

(4) **ASSIGN** channel display

- CH1 : Operates OFF/ON according to the mode of Channel(Loop) 1.
- CH2 : Operates OFF/ON according to the mode of Channel(Loop) 2.
- BOTH : Operates OFF/ON according to OR or AND status of both channel selected by the selector(5).

(5) **CONDITION**

- In item (4), **displayed when 'BOTH' buttons is selected**. Pressing the button will reverse its display.
- **OR** : Channel 1 and 2 operation is ON/OFF according to OR Condition.

(Example) If Mode of Mode event for a Digital output is "TUNE", the Digital output is operated like below.

| Channel 1 | Channel 2 | DO operation |
|-----------|-----------|--------------|
| RUN(0) | RUN(0) | OFF |
| TUNE(1) | HOLD(0) | ON |
| HOLD(0) | TUNE(1) | ON |
| TUNE(1) | TUNE(1) | ON |

- **AND** : Channel 1 and 2 operation is ON/OFF according to AND Condition.

(Example) If Mode of Mode event for a Digital output is "TUNE", the Digital output is operated like below.

| Channel 1 | Channel 2 | DO operation |
|-----------|-----------|--------------|
| RUN(0) | RUN(0) | OFF |
| TUNE(1) | HOLD(0) | OFF |
| HOLD(0) | TUNE(1) | OFF |
| TUNE(1) | TUNE(1) | ON |

(6) **EVENT Output Registration** : Registers the set mode event to actual digital output number.

- If the value is zero, the mode event is not assigned to a digital output. So To cancel the assigning, set the value to zero.
- Refer to the table 3.11.2 of next page for digital output number assigned by REGISTRATION number.

Table 3.11.2 DO information assigned by REGISTRATION number

| REGISTRATION number | Digital output number | Terminal number |
|--------------------------------|------------------------------|------------------------|
| 0 | No Registration | |
| 1 | Digital output 1 | 2 |
| 2 | Digital output 2 | 3 |
| 3 | Digital output 3 | 4 |
| 4 | Digital output 4 | 5 |
| 5 | Digital output 5 | 6 |
| 6 | Digital output 6 | 7 |
| 7 | Digital output 7 | 9 |
| 8 | Digital output 8 | 10 |
| 9 | Digital output 9 | 11 |
| 10 | Digital output 10 | 12 |
| 11 | Digital output 11 | 13 |
| 12 | Digital output 12 | 14 |

Note : If the digital output 1 or 2 is assigned for PWM control output, it is not registered.

3.12 ALARM EVENT SET screen

ALARM: meter instrument warning

The screenshot shows the 'ALARM SET' screen with the following fields and buttons:

- EXIT** button at the top left.
- ALARM SET** title at the top center.
- Date and time display at the top right: 2003.01.23 12 H 59 M.
- TYPE** section with three options: **INNER** (selected), **Diagn.**, and **FAIL**. Callout (3) points to this section.
- ACTION** section with two options: **RUN** (selected) and **ALL**. Callout (4) points to this section.
- ASSIGN to** section with two options: **CH1** (selected) and **CH2**. Callout (5) points to this section.
- ALMASSIGN** field with a value of 8. Callout (6) points to this field.
- EVENT TYPE** section with a value of 17 and up/down arrow buttons. Callout (7-1) points to the up arrow, and callout (7-2) points to the down arrow.
- PV - DEV - HIGH** section with a value of 30.0. Callout (7-3) points to this field.
- OP point** field with a value of 40.0. Callout (7-4) points to this field.
- DIFF** field with a value of 3. Callout (7-5) points to this field.
- Delay(s)** field with a value of 3.
- Unit : NONE** label.
- RANGE**, **OFFSET**, and **MODE** buttons at the bottom.
- ALARM** button at the bottom right.

Callout (1) points to the **No** field (61). Callout (2) points to the up/down arrow buttons. Callout (7) points to the **OP point** field.

Fig. 3.12.1 ALARM SET screen

(1) SIGNAL NO Input and Display

- Type in the SIGNAL No to edit or configure. Then press 'ENT' button to move to the corresponding signal No.
- Set Range: 61~80

(2) Changing EVENT No. for setup.

- ▲ (+) Increase : Whenever this button is pushed, the event No. increases by one.
- ▼ (-) Decrease : Whenever this button is pushed, the event No. decreases by one.

(3) ALARM TYPE: alarm type selection

- **INNER** : A Digital output operates according to inner data already set without assigning event numbe. Or it is not necessary to assign digital output and event data in Fix set or Program segment edition screen like PV or Time event. INNER type is same data with event set of Fix set screen and the set part is same with (7) of figure 3.12.1.
- **DIAGNOSIS**: Triggered when in 'PV Input Burn-out' state. Set to MV OUPUT = 0.0%. If the DIAGNOSIS is selected, (7) part of figure 3.12.1 disappears.
- **FAIL**: Triggered when SRAM, Flash Memory error, Program DATA error, initial operation due to Power Failure, Auto-tuning fail, etc. occurs. If the FAIL is selected, (7) part of figure 3.12.1 disappears.

(4) ALARM ACTION : Selects alarm condition.

- **RUN** : Alarm output enabled at 'RUN' mode.
- **ALL** : Alarm output enabled at all time.

(5) ALARM Assign to : Selects channel for operation.

(6) **ALM ASSIGN** : Registers the set alarm event to actual digital output number.

- If the value is zero, the mode event is not assigned to a digital output. So To cancel the assigning, set the value to zero.
- Digital output number assigned by REGISTRATION number is same with Mode Event.
Refer to Table 3.11.2

(7) **Data set part related to INNER alarm type.**

(7-1) **Event type number set**

- Sets event type number for OFF/ON operation of digital output. Event type number can be set by Keypad directly or Up and Down arrow button.
- Whenever Up and Down arrow button is pushed, (7-2) of figure 3.12.1 displays operation description of the event type. So event type for operation can be selected.
- Refer to Table 3.12.1 for Description by Event type number.

(7-2) **Event type number description**

- Explains the operation of selected event type number.
- Refer to Table 3.12.1 for more detail.

(7-3) **Operation Point or Max value**

- The operation point for OFF/ON is changed according to event type number.
- Refer to Table 3.12.1 and 2 for more detail.

(7-4) **Differential or Min value**

- The operation point for OFF/ON is changed according to event type number.
- Refer to Table 3.12.1 and 2 for more detail.

(7-5) **Delay time**

- Sets delay time for OFF/ON.
- Set range : 1 ~ 99 seconds













Table 3.12.1 Alarm Event Flowchart

| Target | Type | Channel | Description | OP point value | Differential value | Delay Time |
|-----------------------------------|-------|---------|-------------|----------------|--------------------|------------|
| PV Measured Value | 11/12 | CH1/CH2 | PV-ABS-LOW | -19999~20000 | 0~1000SPU | 0~99sec |
| | 13/14 | CH1/CH2 | PV-ABS-HIGH | -19999~20000 | 0~1000SPU | 0~99sec |
| | 15/16 | CH1/CH2 | PV-DEV-LOW | -19999~20000 | 0~1000SPU | 0~99sec |
| | 17/18 | CH1/CH2 | PV-DEV-HIGH | -19999~20000 | 0~1000SPU | 0~99sec |
| SP Setting Value | 21/22 | CH1/CH2 | SP-ABS-LOW | -19999~20000 | 0~1000SPU | 0~99sec |
| | 23/24 | CH1/CH2 | SP-ABS-HIGH | -19999~20000 | 0~1000SPU | 0~99sec |
| MV Output Value | 31/32 | CH1/CH2 | MV-ABS-LOW | -5.0 ~ 105.0 % | 0.0 ~ 100.0 % | 0~99sec |
| | 33/34 | CH1/CH2 | MV-ABS-HIGH | -5.0 ~ 105.0 % | 0.0 ~ 100.0 % | 0~99sec |
| Target | Type | Channel | Description | Max Value | Min Value | Delay Time |
| SP Setting Value | 25/26 | CH1/CH2 | SP-DEV-OFF | -19999~20000 | -19999~20000 | 0~99sec |
| | 27/28 | CH1/CH2 | SP-DEV-ON | -19999~20000 | -19999~20000 | 0~99sec |
| DV Segment Target Value | 31/32 | CH1/CH2 | DV-DEV-OFF | -19999~20000 | -19999~20000 | 0~99sec |
| | 33/34 | CH1/CH2 | DV-DEV-ON | -19999~20000 | -19999~20000 | 0~99sec |

(NOTE 1) When setting the Max/Min value, the Max value should be greater than the Min one.

(NOTE 2) See the table 3.12.2 in the next page for details on Alarm event On/Off operation algorithm.

Table 3.12.2 Alarm Event On/Off Operation Algorithm
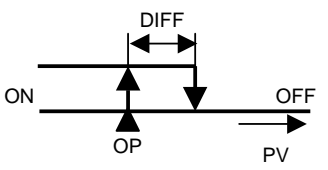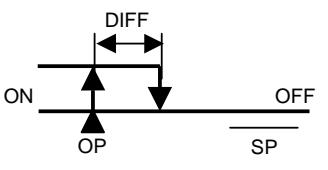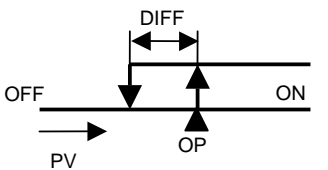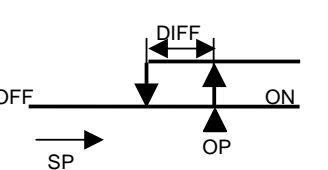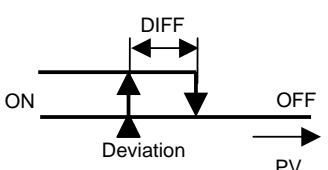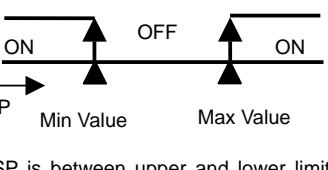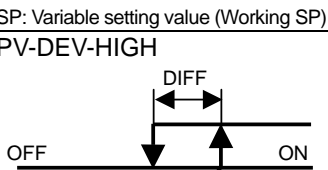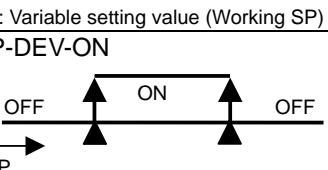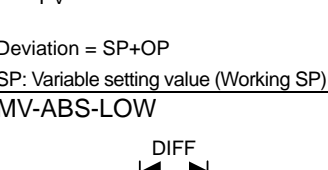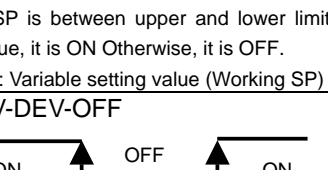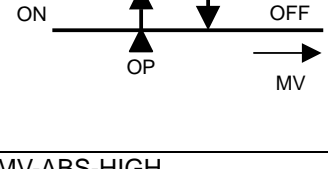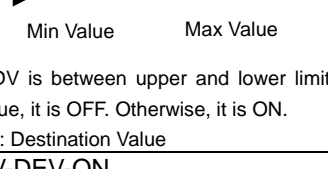
| No | Description | Data Setting Range | No | Description | Data Setting Range |
|----------|--|---|----------|---|---|
| 11 12 | PV-ABS-LOW  | DIFF (0~1000SPU) OP point (-19999~20000) | 21 22 | SP-ABS-LOW  | DIFF (0~1000SPU) OP point (-19999~20000) |
| 13 15 | PV-ABS-HIGH  | DIFF (0~1000SPU) OP point (-19999~20000) | 23 24 | SP-ABS-HIGH  | DIFF (0~1000SPU) OP point (-19999~20000) |
| 15 16 | PV-DEV-LOW  <p>Deviation = SP+OP SP: Variable setting value (Working SP)</p> | DIFF (0~1000SPU) OP point (-19999~20000) | 25 26 | SP-DEV-OFF  <p>If SP is between upper and lower limit value, it is OFF. Otherwise, it is ON. SP: Variable setting value (Working SP)</p> | Max. (-19999~20000) Min. (-19999~20000) |
| 17 18 | PV-DEV-HIGH  <p>Deviation = SP+OP SP: Variable setting value (Working SP)</p> | DIFF (0~1000SPU) OP point (-19999~20000) | 27 28 | SP-DEV-ON  <p>If SP is between upper and lower limit value, it is ON. Otherwise, it is OFF. SP: Variable setting value (Working SP)</p> | Max. (-19999~20000) Min. (-19999~20000) |
| 35 36 | MV-ABS-LOW  | DIFF (0.0~100.0%) OP point (-5.0~105.0%) | 31 32 | DV-DEV-OFF  <p>If DV is between upper and lower limit value, it is OFF. Otherwise, it is ON. DV: Destination Value</p> | Max. (-19999~20000) Min. (-19999~20000) |
| 37 38 | MV-ABS-HIGH  | DIFF (0.0~100.0%) OP point (-5.0~105.0%) | 33 34 | DV-DEV-ON  <p>If DV is between upper and lower limit value, it is ON. Otherwise, it is OFF. DV: Destination Value</p> | Max. (-19999~20000) Min. (-19999~20000) |

The type number of each operation is same for CH1 and CH2. (11/12 = CH1/CH2)

3.13 CONTROL SET screen

This screen is made up setting the preset type of manual output and the method to select the PID control parameter and ZONE.

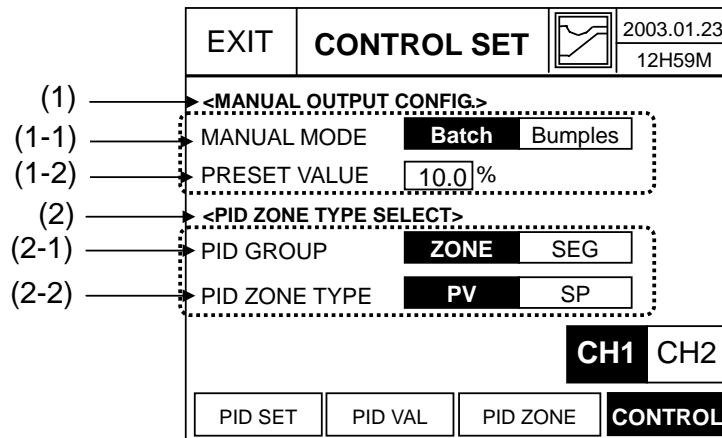


Fig. 3.13.1 CONTROL SET screen

(1) **MANUAL OUTPUT CONFIG:** Sets manual output configuration according to each channel.

(1-1) **MANUAL MODE:** Sets MV output standard during operation control switchover from AUTO mode → MANUAL mode.

- **Batch:** When this button is selected, during operation switchover, MV output is switched to the **Preset value** of (1-2) regardless of the previous output.
- **Bumples:** When the operation is selected, MV output is set depending on the PID output value.

(1-2) **PRESET VALUE:** When the manual mode is selected by “Batch”, sets the control output value for preset.

(2) **PID ZONE TYPE SELECT**

(2-1) **PID GROUP:** Determines PID group selection type to be applied in actual PID control and AT.

- **ZONE:** PID values are automatically determined according to the specified ZONE.
- **SEG (Segment):** PID selection is specified in Segment edition screen.


(2-2) **PID ZONE TYPE:** When PID GROUP(2-1) is selected as ZONE, Sets the standard to determine PID Zone automatically.

- **PV :** ZONE is selected automatically according to PV.
- **SP :** ZONE is selected automatically according to Working Set Point.
- Refer to figure 3.13.2 for detail.




Example for selecting PID constant group of ZONE and SEGMENT PID.

- Zone PID

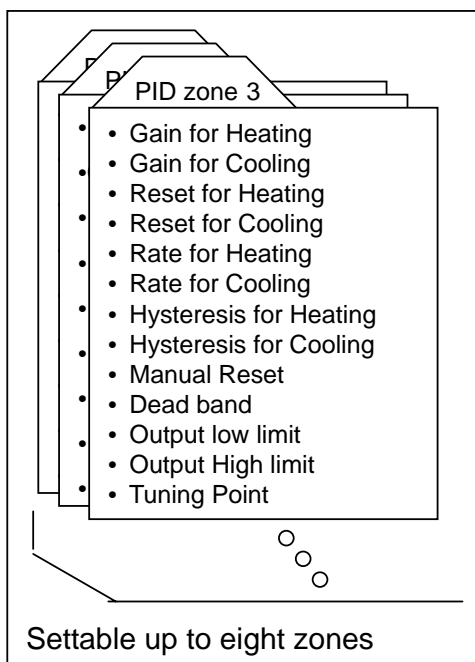

- Segment PID

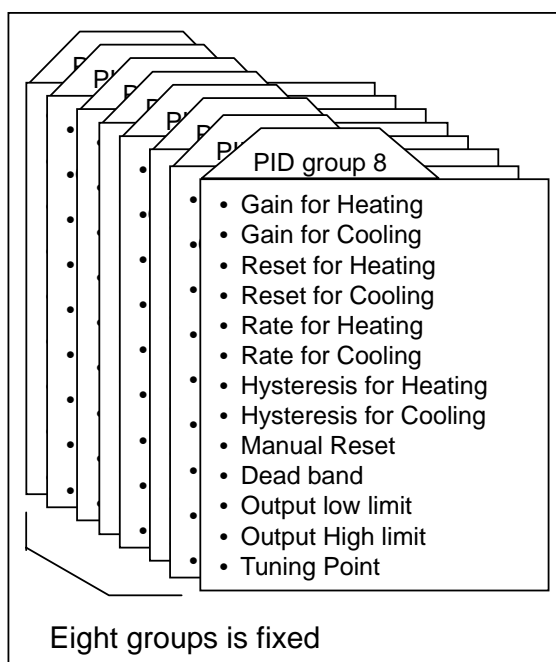

1. ZONE PID

PID ZONE can be divided up to eight according to setting T1 to T7 like figure 3.13.2. and PID ZONE number is selected by changing SP or PV automatically.

| | | | | | | | | | | | | |
|---|----------|---|---|-----------|---|---|---|---|---|---|---|---|
| EXIT | PID ZONE | | | 03-12 WED | | | | | | | | |
| | | | | 18.31.58 | | | | | | | | |
| <div>T1 T2 T3</div> <table border="1"><tr><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td></tr></table> <div>T4 T5 T6 T7</div> <div>T1= <input type="text" value="-80"/> T2= <input type="text" value="-50"/></div> <div>T3= <input type="text" value="0"/> T4= <input type="text" value="50"/></div> <div>T5= <input type="text" value="100"/> T6= <input type="text" value="250"/></div> <div>T7= <input type="text" value="400"/> Range:-100.0 to 500.0</div> <div>CH1 CH2</div> <div>PID SET PID VAL PID ZONE CONTROL</div> | | | | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | | | | | |

T1 = -80 T2 = -50 T3 = 0

T4 = 50 T5 = 100 T6 = 250

T7 = 400

Fig. 3.13.2 PID ZONE Set screen

(Example 1)

If the PID ZONE type is SP, Working SP is 40.0 and like figure 3.13.2, T values are set, because the SP is between T3(0) and T4(50) by the figure, Zone number for PID control is four. So PID constants in ZONE 4 are operated for PID control.

(Example 2)

If the PID ZONE type is PV, the PV is 150.0 and like figure 3.13.2, T values are set, because the PV is between T5(100) and T6(250) by the figure, Zone number for PID control is 6. So PID constants in ZONE 6 are operated for PID control.

2. Segment PID

Segment PID is used for only program control and sets PID group number applied to PID control in Segment edition screen of program. It is like figure 3.13.3.

| MENU | | SEG EDIT | | 01-23 FRI | |
|------|-------|----------|-------|------------|---------------------|
| | | | | 12. 59. 50 | |
| SEG | SP | PID | TIME | JC GS | EVENT SET |
| 00 | 100.0 | ① | 00:50 | 0 | 11MMAP 1 10PQAA |
| 01 | 100.0 | ③ | 01:00 | 0 | PPMMAQ 1 0011AA |
| 02 | 20.0 | ⑧ | 01:00 | 0 | TQMMMAQ 1 PPQQAQ |

PID group 1 of Segment 1

PID group 3 of Segment 2

PID group 8 of Segment 3

Fig. 3.13.3 Example for setting Segment PID group

3.14 PID ZONE SET screen

IPC5000 can have 8 different sets of PID constants based different setpoint or Process variable ranges.

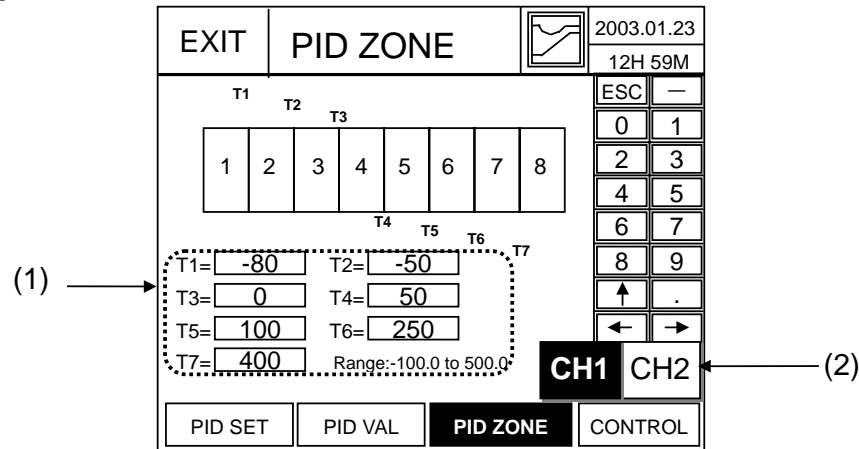


Fig. 3.14.1 PID ZONE SET screen

Change is **forbidden** under the 'RUN' operation.

(1) ZONE range configuration display & input

- ZONE configuration can be **divided from 1 to 8**
- Selection number is set up to the part typed in according to order.
- Magnitude of input value: $T1 < T2 < T3 < T4 < T5 < T6 < T7$
- Input range: LSPL to USPL ([RANGE SET\PV=])

(2) Channel Change Button


- This button changes current Channel selection to the next Channel.
- When pressed, the button is highlighted.
- This button does not appear in [SETUP/CONTROL SET/Control mode = Single mode].



Screens set up by zone

1) The maximum of 8 zones:


When 8 zones are required, you may split into 1-8 zones in accordance with T1, T2, T3, T4, T5, T6, and T7 set-up.

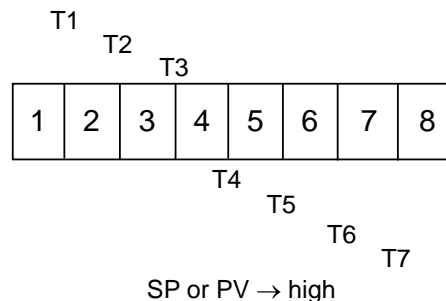

Set up values at T1, T2, T3, T4, T5, T6, and T7 and split into 8 zones.

2) **1 zone:**


Set up at T1 = PV high limit value, T2 = PV high limit value... T7 = PV high limit value (initial value)

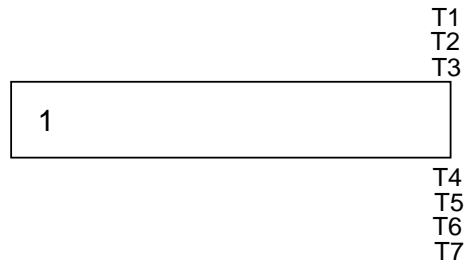

SP or PV → high

3) **2 zones:**


Set up at T2 ~ T7 = PV high limit value. T1 must be set up at a value that defines zones.

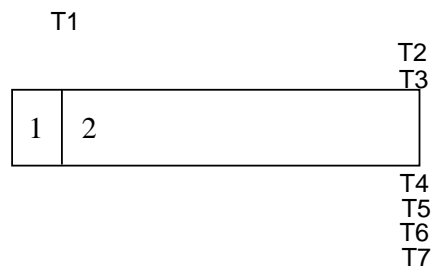

SP or PV → high

4) **3 zones:**


Set up at T3 ~ T7 = PV high limit value. T1 and T2 must be set up at values that define zones.

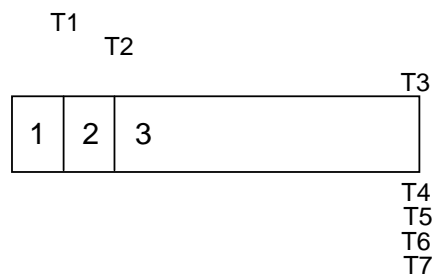

SP or PV → high

5) **4 zones:**


Set up at T4 ~ T7 = PV high limit value. T1, T2 and T3 must be set up at values that define the zones.

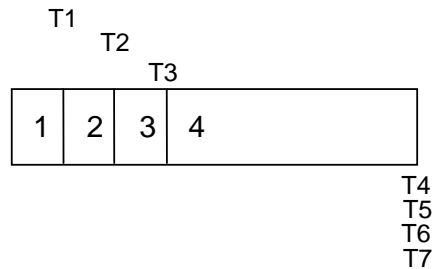

SP or PV→ high

6) **5 zones:**


Set up at T5 ~ T7 = PV high limit value. T1, T2, T3 and T4 must be set up at values that define the zones.

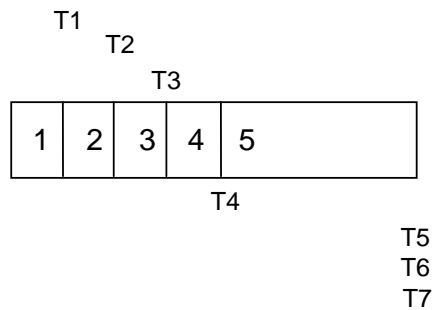

SP or PV→ high

7) **6 zones:**


Set up at T6 and T7 = PV high limit value. T1, T2, T3, T4 and T5 must be set up at values that define the zones.

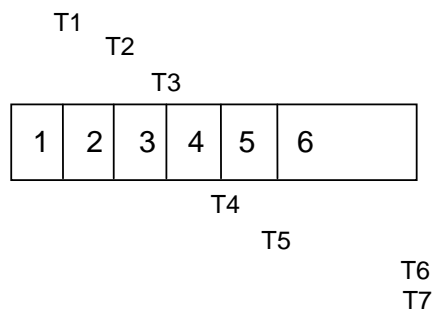

SP or PV→ high

8) **7 zones:**

Set up at T7 = PV high limit value. T1, T2, T3, T4, T5, and T6 must be set up at values that define the zones.

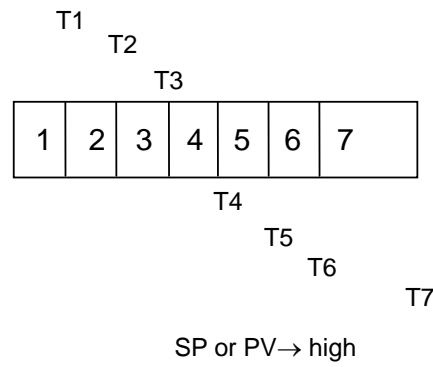

3.15 PID CONSTANT SET screen

Sets PID Parameters according to each Group.

Fig. 3.15.1 PID Const set

(1) PID Group Number Display

- Displays according to each Page and Channel. Range is from 1 to 8.

(2) SET: input for each data.

- Default value** (factory setup)

| Parameter | Initial value | Range | Remarks |
|-----------|---------------|-------------------------------|--|
| Ph | 1.0 % | 0.1~9999 % or 0.1 ~ 1000 % | Proportional band or Gain for Heating Value does change from PB or Gain. When the value is zero , ON/OFF Control or Duplex ON/OFF Control for Heating is operated. |
| lh | 1.0 min | 00.02~50.00 min | Integral(Reset) for Heating Value does not change from MIN to RPT |
| Dh | 0 min | 00.00~10.00 min | Derivative(Rate) for Heating |
| DIFFh | 50.0 % | 0.0~100.0 % of PV span | Heating Differential(Hysteresis) only for ON/OFF Control |
| Pc | 1.0 % | 0.1~9999% | Proportional band or Gain for Cooling When the value is zero , Duplex ON/OFF Control is operated. |
| lc | 1.0 min | 00.01~10.00min | Integral(Reset) for Cooling |
| Dc | 0 min | 00.02~50.00min | Derivative(Rate) for Cooling |
| DIFFc | 50.0 % | 0.0~100.0 % of PV span | Cooling Differential(Hysteresis) only for ON/OFF Control |

| Parameter | Initial value | Range | Remarks |
|--------------|---------------|---|---|
| MR | 0 % | -100 ~ 100 % | Manual Reset: Only applicable if you do not use RESET (Integral time). Allows correction of output to account for load changes to bring the PV up to setpoint. When the value is not zero, Manual Reset is operated. |
| DB | 1.0 % | Time duplex -5.0 ~ 25.0 % ON/OFF duplex 0 ~ 25.0 % | Dead Band |
| LOWER | 0.0 % | -5.0 ~ 105.0 % | MV limit minimum value |
| UPPER | 100.0 % | -5.0 ~ 105.0 % | MV limit maximum value |
| Tuning point | 0.0 EU | According to SP limit range | Tuning point for automatic tuning |

(2-1) **Heating** Action Setup

- Set up & displayed on screen when [SETUP/PID SET/PID ALG=PIDA, PIDB, DUP-A, or DUP-B].

(2-2) **Cooling** Action Setup

- Displayed with contents of (2-1) when Heat/Cool control is selected.
[SETUP/PID SET/PID ALG = DUPA or DUPB]

(3) **Tuning point:** Sets motion standard value during automatic Auto-tuning.

3.16 PID set screen

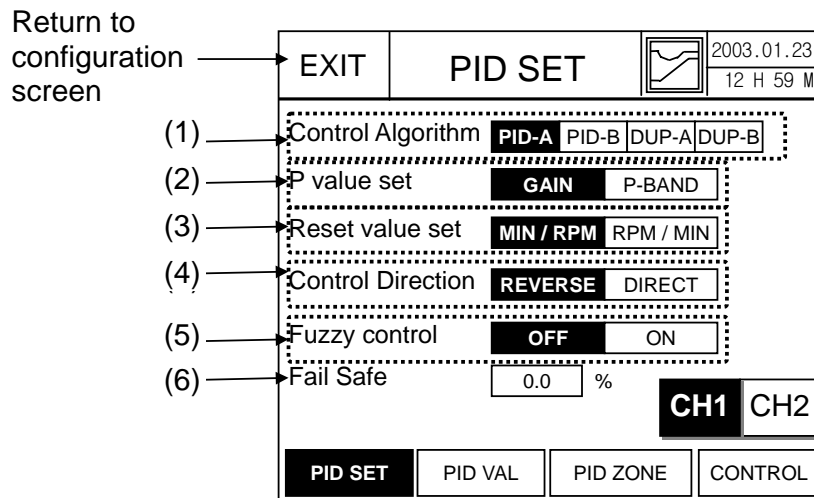


Fig. 3.16.1 PID SET screen

(1) **Control Algorithm** selection button : It is changeable only at STOP mode.

- Button to select **PID Control** Algorithm.
- **PID-A** : This is three-mode control algorithm(P(Proportional), I(Integral),D(Derivative)) and used for most control field.
- **PID-B** : Unlike the PID A equation, the controller gives only an integral response to a setpoint change, with no effect on the output due to the gain or rate action, and it gives full response to PV changes. Otherwise controller action is as described for the PID A equation.
- **DUP-A** : PID-A algorithm for Heat/Cool control.
- **DUP-B** : PID-B algorithm for Heat/Cool control.

(2) **P-value Set** selection button

- Selects P (Proportional Band) value type

$$GAIN = \left| \frac{100\%}{P.B} \right|$$

P-BAND is the range indicated by the percentage of process value.

GAIN is the ratio of process value change (%) to output change (%).


(3) **Reset value set** selection button

- Selects the type applied to Reset value.
- MIN / RPT: Minutes per Repeat.
- RPT / MIN: Repeat per Minutes.


RESET (Integral) adjusts controller output according to variation (SP-PV) magnitude and lasting time. Amount of adjustment depends on that value, or the gain. Reset adjustments are measured according to the number of proportional action repetition per minute, or the number of minutes during which the proportional action repetition was taking place.

(4) **Control Direction** selection button : It is changeable only at STOP mode.

- Button to select Direct/Reverse operation of PID control operation.
- Reverse : Heating

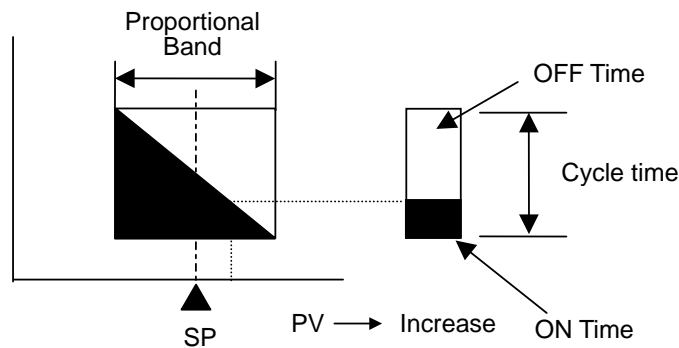

- Direct : Cooling

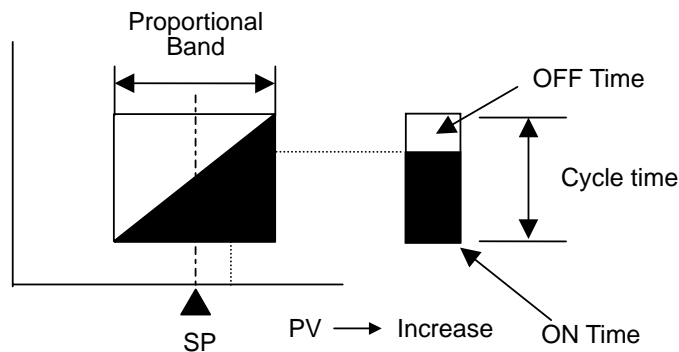

(5) **FUZZY** control selection button

- Selecting to enable or disable fuzzy control.

(6) **Fail-safe:**

- When analog input sensor type is Voltage/mA(0~10V, 1~5V, 4~20mA..), if input fail status(Burn out, input high, input low) occurs, the control output become fail-safe value instead of PID control output.
- Set range: -5.0~105.0%

3.17 SYSTEM SET screen

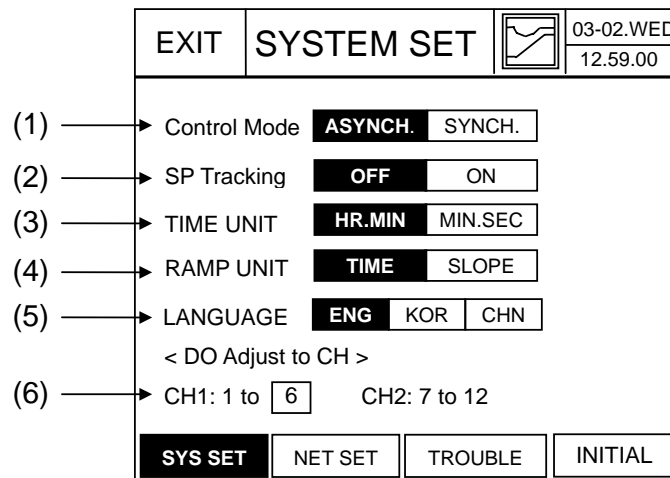


Fig. 3.17.1 SYSTEM SET screen

(NOTE)

To change the system data except **LANGUAGE**, set the controller operation mode to the **STOP** status first.

(1) Control Mode selection button

- Select whether control operation is synchronous or asynchronous. (Default = Asynchronous)
- **ASYNCH.** : Asynchronous mode that both channels operate independently.
That is, RUN and STOP can be operation for each channel.
- **SYNCH.** : Synchronous mode that both channels operate dependently.
That is, RUN and STOP runs with each channel.

(2) SP tracking

If the **SP tracking is ON**, the controller enters into the condition that program control changes to fix control when the last segment is completed. The next operation after completion of program operation is determined by the JC condition of the last segment and the SP tracking ON/OFF as shown in the Figure 3.17.2.

When the SP tracking function is enabled, the target setting value (SP) at the program end becomes the target setting value of the fix control. The PV event runs as the event set by the fix control and the time event does not work. SP tracking operation is enabled only when the SP tracking is on and the JC value at the last segment of the program is set to 2.

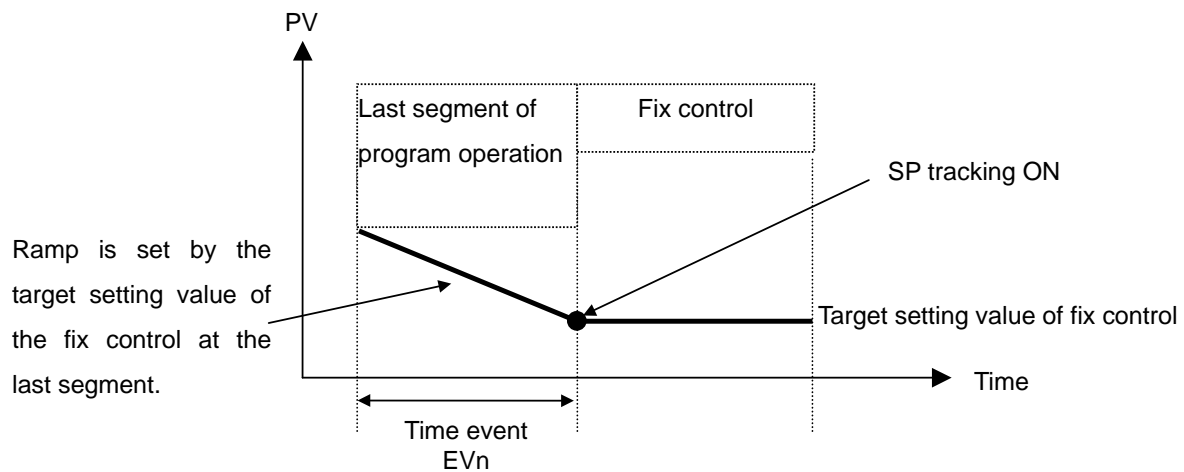


Fig. 3.17.2 Fix Control Operation when SP Tracking On and JC = 2

If **SP tracking is OFF**, the target setting value (SP) at the program end becomes the last target setting value. The PV event runs as the event of the fix control and the time event is disabled.

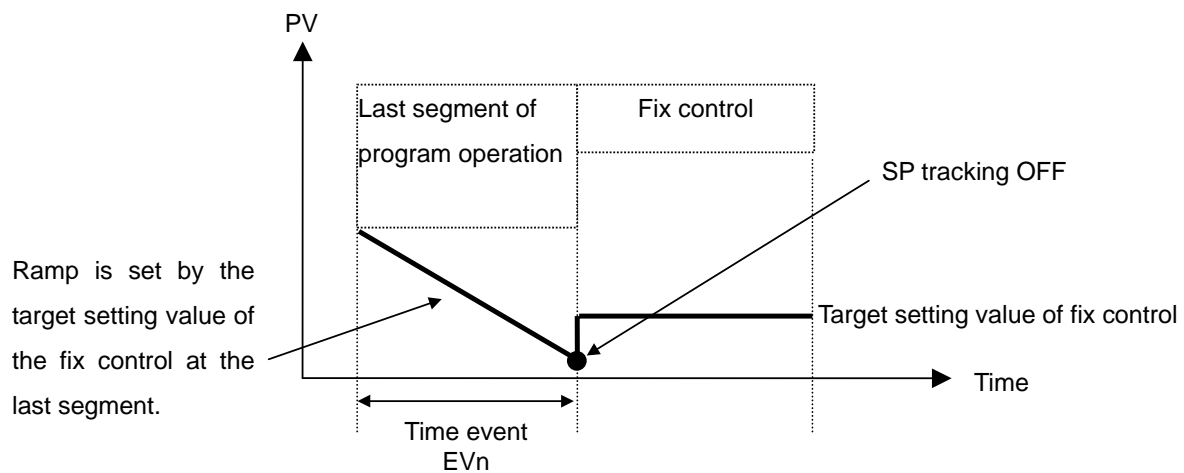


Fig. 3.17.3 Fix Control Operation when SP Tracking Off and JC = 2


(3) TIME UNIT setting button

- Sets the default time unit of IPC5000.
- HR.MIN: The minimum unit of the IPC5000 default time will be hour and minute.
- MIN.SEC: The minimum unit of the IPC5000 default time will be minute and second.

(4) **RAMP UNIT** type selection button

- Selects the ramp type for program or fix control.


TIME: Sets the ramp by the hour unit. The slope is set by the difference ratio of the previous target setting value and the current setting value. See the following figure.

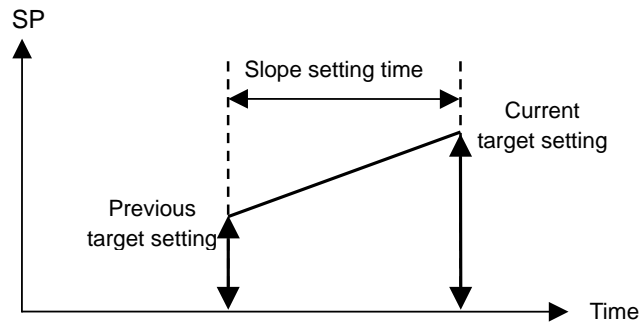

SLOPE: Sets the slope by the rate unit.

Input unit: SPU/MIN or SPU/SEC (SPU: Set Point Unit)

See the following figure.

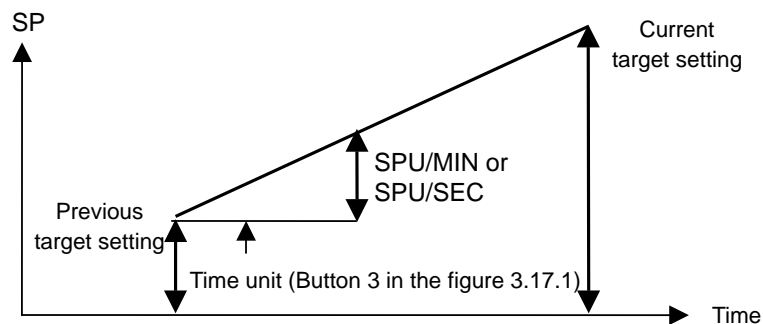

(5) **Language** selection button

You can set or modify the language shown in the default menu and user interface screen.

Default = ENG (English)



ENG: English, KOR: Korean, CHN: Chinese (non-simplified)

(6) **Digital output channel adjustment**

- For the asynchronous mode, 12 digital outputs are allocated by channel.
- For the synchronous mode, the setting section will be hidden.
- When allocating the digital outputs, the event setting section will appear as much as the number of digital output allocation in the segment editing window, whereas 12 event sections appear in the fix control setting screen. However, settings can be made according to channel allocation.

(Example 1) Input "8" if you want to use digital output 1 to 8 for channel 1 and other outputs for channel 2.

| | | | | | | |
|------|------------------------|-------|-----|-------|----------|-------------|
| CH 1 | PROGRAM 0 SEGMENTS 05 | | | | | |
| | SEG | SP | PID | TIME | JC GS | EVENT SET |
| | 000 | 50.0 | 1 | 00:20 | 1 | M M 0 P P P |
| | | | | | 0 | A 0 |
| CH 2 | PROGRAM 16 SEGMENTS 05 | | | | | |
| | SEG | SP | PID | TIME | JC GS | EVENT SET |
| | 000 | 120.0 | 1 | 00:20 | 1 | |
| | | | | | 0 | T 0 0 0 0 |

(Example 2) Input "3" if you want to use digital output 1 to 3 for channel 1 and other outputs for channel 2.

| | | | | | | |
|------|------------------------|-------|-----|-------|----------|-------------|
| CH 1 | PROGRAM 0 SEGMENTS 05 | | | | | |
| | SEG | SP | PID | TIME | JC GS | EVENT SET |
| | 000 | 50.0 | 1 | 00:20 | 1 | M M 0 |
| | | | | | 0 | |
| CH 2 | PROGRAM 16 SEGMENTS 05 | | | | | |
| | SEG | SP | PID | TIME | JC GS | EVENT SET |
| | 000 | 120.0 | 1 | 00:20 | 1 | P P P |
| | | | | | 0 | A 0 T 0 0 0 |

(Example 3) If you want to use all of 12 digital outputs for channel 2, input "0".

| | | | | | | |
|------|------------------------|-------|-----|-------|----------|-------------|
| CH 1 | PROGRAM 0 SEGMENTS 05 | | | | | |
| | SEG | SP | PID | TIME | JC GS | EVENT SET |
| | 000 | 50.0 | 1 | 00:20 | 1 | |
| | | | | | 0 | |
| CH 2 | PROGRAM 16 SEGMENTS 05 | | | | | |
| | SEG | SP | PID | TIME | JC GS | EVENT SET |
| | 000 | 120.0 | 1 | 00:20 | 1 | M M 0 P P P |
| | | | | | 0 | A 0 T 0 0 0 |

3.18 TROUBLE SET Screen

You can set the data related with the trouble messages and tune lock that are received from the digital inputs.

The messages that you set in (1) and (2) in the Figure 3.18.1 will be displayed when the ON signal is set for the trouble input, which enables you to identify the current trouble status. Press the “CLEAR” button to clear the message.

The screenshot shows the 'TROUBLE' setting screen. At the top, there is an 'EXIT' button, the title 'TROUBLE', a clock icon, and the date/time '03-02.WED 12.59.00'. Below this, there are two main sections for 'TROUBLE 1' and 'TROUBLE 2'. Each section has a 'Message No.' field (0 and 3 respectively) and a 'FAN EOCR FAULT' or 'WATER VALVE FAULT' label. To the right of each message number are two buttons labeled 'CH1' and 'CH2'. Below these, there is a 'Trouble delay' field set to '0 sec' and an 'AT option' section with 'UNLOCK' and 'LOCK' buttons. At the bottom, there are four buttons: 'SYS SET', 'NET SET', 'TROUBLE' (highlighted), and 'INITIAL'. Numbered callouts (1) through (5) point to the following elements: (1) points to the 'CH1' button for TROUBLE 1; (2) points to the 'Message No.' field for TROUBLE 1; (3) points to the 'CH1' button for TROUBLE 2; (4) points to the 'Trouble delay' field; (5) points to the 'UNLOCK' button.

Fig. 3.18.1 Trouble and Tune Lock Setting Screen

The figure shows two examples of the 'Trouble Message Window'. The first window displays 'FAN EOCR FAULT' with a 'CLEAR' button below it. The second window displays 'WATER VALVE FAULT' with a 'CLEAR' button below it. Both windows have a hatched border.

Fig. 3.18.2 Trouble Message Window

(1) Assign to channel button : Asynchronous

Select the channel number to assign when trouble occur.

(2) Message number set button

Input the number that is displayed in the trouble input message list. When you input the number displayed at the left side of the Figure 3.18.3, the message contents will be displayed at (2).

(3) Message selection button

When you press the button, the screen as shown in the Figure 3.18.3 will appear and you can allocate the message.

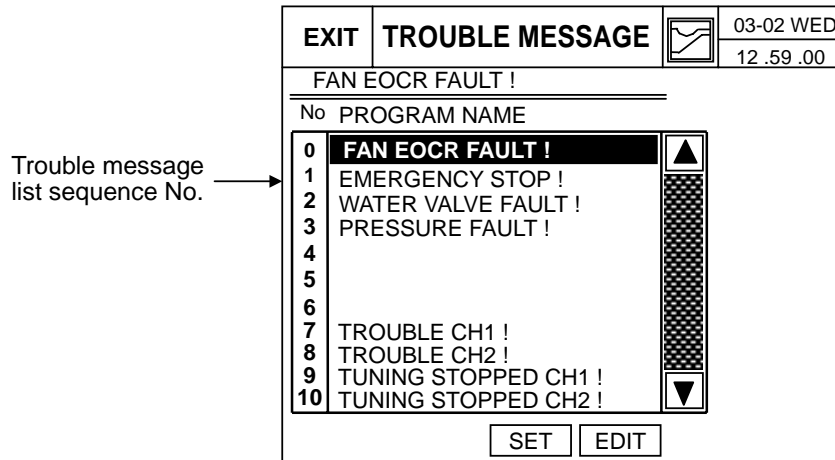


Fig. 3.18.3 Trouble Message List

(4) Button to input the delay time for the trouble message

If you set the delay time, the trouble output and message will be displayed after the set period of time when the trouble input is received. The delay time setting range is 0 ~ 99 seconds.

(5) AT Option

- The AT option is used to prevent auto tuning operation.
- If the AT option is set to “LOCK”, the channel 1 and 2 section will be hidden in the screen as shown in the Figure 3.18.4. Therefore, auto tuning cannot be performed.

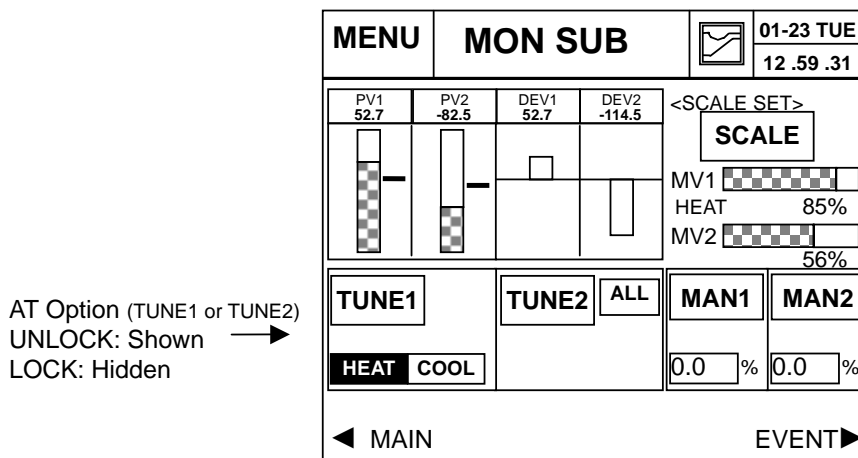


Fig. 3.18.4 MON SUB Screen

3.19 TROUBLE MESSAGE set

You can assign up to 32 unique messages for the TROUBLE. Or you can edit the messages by using IPC5000 User Tool software.

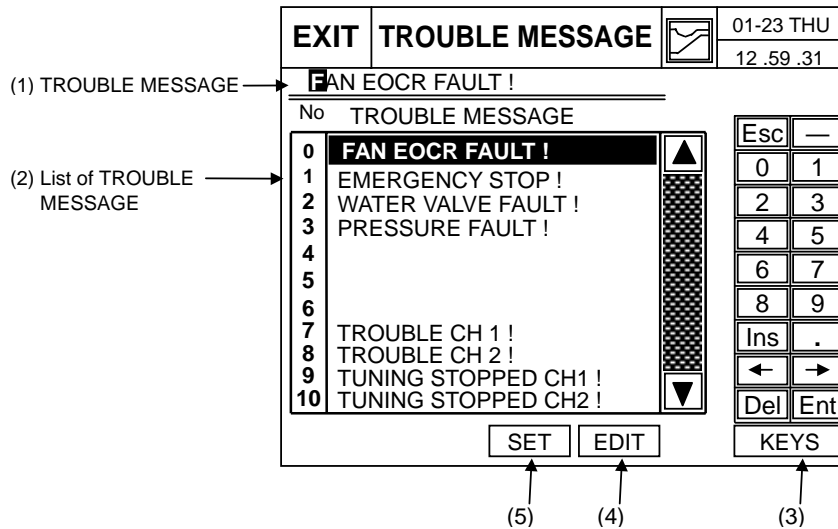


Fig. 3.19.1 Assigning the TROUBLE MESSAGE

- (1) Displays the message of the TROUBLE.
- (2) Displays the list of TROUBLE MESSAGE and number.
- (3) Switches the keypad input mode – number, English character and special character, as follows.

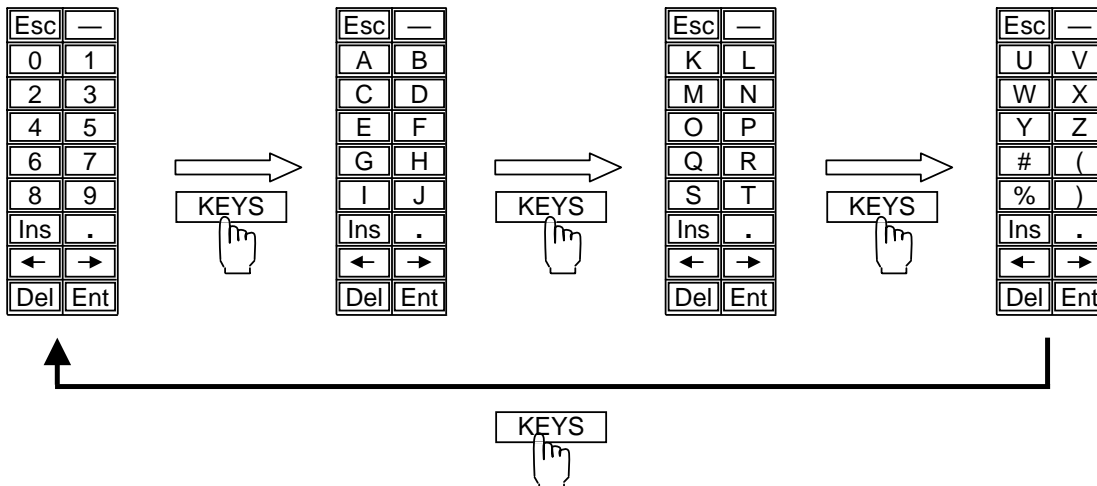


Fig. 3.19.2 Keypad Switching

3.20 NETWORK SET Screen

You can set the communication related parameters of IPC5000.

| EXIT | | NETWORK | | 03-01 MON 08.58.45 | |
|-------------------------------|--------------|------------|------|----------------------------------|-----|
| RS-232C comm. Data rate | < RS-232C > | BAUD RATE | 9600 | 19200 | bps |
| Slave station No.(0 to 99) | < MODBUS > | ADDRESS | 01 | FP TYPE | 0 |
| Modbus comm. Data rate | | BAUD RATE | 9600 | 19200 | bps |
| Edit IP address configuration | < ETHERNET > | IP ADDRESS | 192 | 168 | 0 |
| Edit gateway configuration | | GATEWAY | 192 | 168 | 0 |
| Edit subnet mask setting | | SUBMASK | 255 | 255 | 255 |
| | | FP TYPE | 0 | 0: FPB 1: FPLB 2: FPBB 3: FPL | |
| SYS SET | | NET SET | | TROUBLE INITIAL | |

Floating Point type

0 : FP B : Floating Point Big Endian Format

1 : FP LB : Floating Point Little Endian with byte-swapped

2 : FP BB : Floating Point Big Endian with byte-swapped

3 : FP L : Floating Point Little Endian Format

Fig. 3.20.1 Network Setting Screen

(NOTE)

Modbus and Ethernet communication features are enabled only for the models equipped with the communication option.

Refer to the communication manual for more details.

3.21 INITIALIZE screen

Initializes program data and display program version of IPC5000

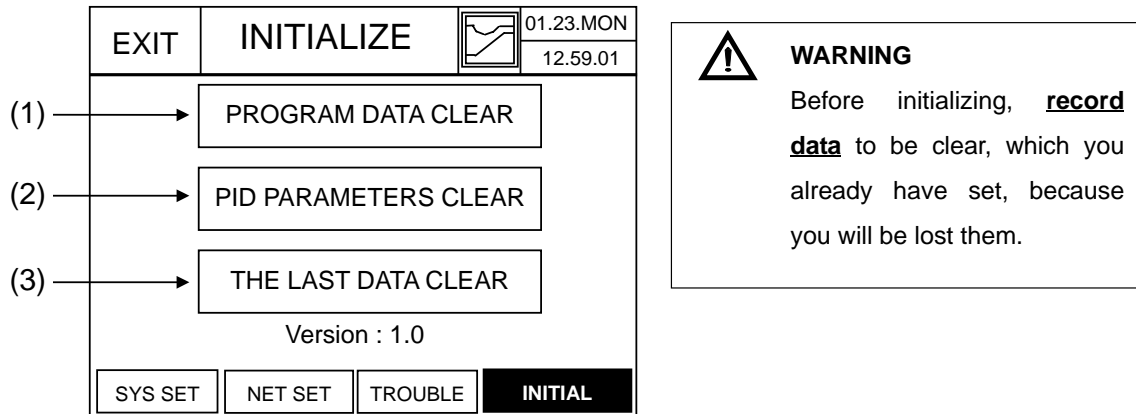


Fig. 3.21.1 INITIAL screen

If the a certain button is pressed, the message box is shown as followings,

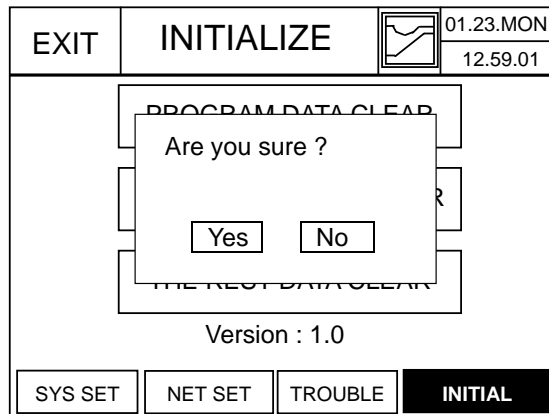


Fig. 3.21.2 Confirm for initializing

If the Yes button is pressed, initializes the data.

(1) PROGRAM DATA CLEAR

- Initializes all PROGRAM DATA to initial value.
- SSP1/2, TSP1/2, TIME, JC, SIG SET = 0, Start mode = SSP, PID group number.
- When you push this button, the message to ask sure that you want to erase these parameters will appear. If you push OK on the message, all program data will be initialized.

(2) PID PARAMETERS CLEAR

- Initializes all data related to PID parameter of Channel 1 and 2.

-
- Each PID parameter will be initialized like below Table 3.21.1
 - When you push this button, the message to ask sure that you want to erase these parameters will appear. If you push Yes on the message, all PID parameter data will be initialized.

Table 3.21.1 Initial PID parameter list

| Parameter | Initial value | Parameter | Initial value |
|--------------|---------------|-----------|---------------|
| Ph | 1.0 % | Pc | 1.0 % |
| Ih | 1.0 min | Ic | 1.0 min |
| Dh | 0 min | Dc | 0 min |
| DIFFh | 50.0 % | DIFFc | 50.0 % |
| MR | 0 % | | |
| DB | 1.0 % | | |
| LOWER | 0.0 % | | |
| UPPER | 100.0 % | | |
| Tuning point | 0.0 EU | | |

(3) THE **LAST DATA CLEAR**

- Initialize all the rest data except PID and program data to default value.
- For example, the screens to be initialized are Operation set, Link set, Wait set, Time signal, Extra set, PID set, PID zone set, Control set, Range set, Offset, Event set, Analog input/output Configuration, System set, DIO set, and PWM set.

4. Specification

- General Specifications

| Items | | Specification |
|--|--------------------------------|--|
| Rated power supply voltage | | 100 to 240V AC, 37VA, 50/60Hz |
| Rush current when power supply turns on | | Lower than 50 A |
| Insulation Resistance | | Higher than 50 MΩ under DC 500V megger during power terminal and FG terminal |
| Withstand voltage | | 1500V AC 50/60Hz for 1min across power terminal and PE terminal |
| Standard conditions | Ambient temperature | 23 °C ± 2 °C (73.4 °F ± 2 °F) |
| | Ambient humidity | 60 ± 5% RH |
| | Rated power supply voltage | 100 to 240V AC |
| | Power supply Frequency | 50 ± 1Hz or 60 ± 1HZ |
| | Vibration resistance | 0 m/s ² |
| Operating Conditions | Ambient temperature range | 0 to 50°C |
| | Ambient humidity range | 10 to 90%RH (non-condensing) |
| | Rated power supply voltage | 100 to 240V AC |
| | Allowable power supply voltage | 85 to 264V AC |
| | Power supply frequency | 50 ± 2Hz or 60 ± 2Hz |
| | Vibration resistance | 0 to 1.96m/s ² (10 to 60Hz in X, Y, Z directions for 2 hours each) |
| Transportation and storage conditions | Ambient temperature range | -20 °C to +70 °C(-4 °F to +158 °F) |
| | Ambient humidity range | 10 to 95% RH (non-condensing) |
| | Vibration resistance | 0 to 1.96m/s ² (10 to 60Hz in X, Y, Z directions for 2 hours each) |
| Exterior | | Case and front panel : plastic |
| Mounting | | Panel-mount |
| Exterior size (unit: $\frac{mm}{inch}$) | | $\frac{196}{7.717}(W) \times \frac{131}{5.157}(H) \times \frac{154}{6.063}(D)$ |
| Panel cutout (unit: $\frac{mm}{inch}$) | | $\frac{185.5 \pm 0.5}{7.303 \pm 0.02}(W) \times \frac{120.5 \pm 0.5}{4.744 \pm 0.02}(H)$ |

| Items | | Specification |
|-----------------------------|--|--|
| Display and setting section | Display | 5.7" LCD (STN Negative, BLUE), LED backlight |
| | Screen size (unit: $\frac{mm}{inch}$) | $\frac{115.17}{4.534}(W) \times \frac{86.37}{3.4}(H)$ |
| | The number of dot | 320(W) X 240 (H) dots |
| | Back light | LED, White (Luminous Intensity: 20 cd/m ²) |
| | Display size | 40 lines X 30 lines (case of 8X8 dot characters) |
| | Display color | Blue characters on a white ground |
| | Display language | Korean/English/Chinese (Conversion to Korean/English/Chinese selection screen at the Menu screen) |
| | Operation | Analog touch panel (Actuation force: 10g~80g) |

- Input/output specifications

| Items | | Specification |
|-----------------------|-------------------------|--|
| Analog input | Number of inputs | 2 (Universal input) |
| | Type | TC: K, J, R, S, B, E, T, N (JIS/IEC) RTD: Pt100 (JIS/IEC), JPt100 (JIS) Linear: VOLTAGE 0~10V, 0~5V, 1~5V CURRENT 0 ~ 20mA, 4 ~ 20mA For detail, refer to Table 2.6.1 |
| | Sampling cycle | 100 ms/channel |
| | Indication Accuracy | $\pm 0.1\%FS \pm 1$ digit (Accuracy is variable according to input type or range.) |
| | Cold junction accuracy | ± 1.0 °C (± 1.8 °F) (under standard conditions) |
| | Input bias | -99.9 ~ +99.9 variable |
| | Digital filter | 0 ~ 120 sec (0: filter off) |
| | Square-root Extraction | Low-cutoff: 0.1~5.0% of input (in case of voltage input from orifice or pressure sensor) |
| | Compensation | Linearity / Approximation (1)Segment breakpoint: 1 to 10 of total range (2)Compensation: -50.0~105.0% of CH1/2 PV input range (3)Bias Linearity : -50.0~105.0% of CH1/2 PV input range span Approximation: -50.0~105.0% of CH1/2 PV input range |
| External switch input | Input count | 12 points |
| | Connectable output type | No-Voltage contact (relay contact) and Open collector (sink current toward 0V) |
| | Allocation (Fixed) | RUN/STOP, ADV, HOLD, Channel selection, Trouble inputs, Program number (or detail, refer to Table 2.6.2) |
| | Sampling cycle | 100 ms |

| Items | | Specification | | |
|--------------|-----------------------|-------------------------|---|--------------------|
| Event output | Open collector output | External supply voltage | MAX 30Vdc | |
| | | Max. load current | MAX 100mA per channel | |
| | Time event | Output | Open collector x 12 (variable) | |
| | | Event mode | 3 types can be selected (depending on number 0, 1 and 2 input) 0: OFF, 1: ON, 2: ON/OFF time setting | |
| Event output | PV events | Output points | Open collector output ON/OFF x 12 (Changeable) (MAX DC30V MAX 100mA / 1ch internal resistance 47Ω) | |
| | | Event mode | According to number of 11 ~ 38 | |
| | | Operation channel | Loop1 /Loop2 | |
| | | Target value | Set Point (SP) / Present value (PV) / Target value (DV) / Manipulated value(MV) | |
| | | Operating point | Absolute value (ABS) / Deviation (DEV) | |
| | | Output operation | ZONE ON/OFF / Operation direction (LOW/HIGH) | |
| | | Operation Range | | Loop1 |
| | | | Absolute value | -19999.0 ~ 20000.0 |
| | | | Deviation value | -99.9 ~ +99.9 |
| | | | Operational point | ± 0.0 ~ ± 100.0 |
| | | On delay time | 0 ~ 99 seconds | |
| Event output | Mode event | Output type | STOP,RUN,READY,END,TRBL,HOLD,WAIT,TUNE,MAN,FIX,DOWN,UP | |
| | | Event mode | According to number of 41~60 | |
| | | Output points | Open collector output ON/OFF x 12 (Changeable) (MAX DC30V MAX 100mA / 1ch internal resistance 47Ω) | |
| | | Target | Loop 1 /Loop 2 /BOTH | |
| | | Condition | OR: When Loop 1 or Loop 2 is occurred , output AND: When Loop 1 and Loop 2 are occurred, output | |

| Items | | Specification | |
|---------------------------|---------------------|-----------------|---|
| Event output | Alarm event | Output type | INNER : Set Point (SP) / Present value (PV) / Target value (DV) / Manipulated value(MV) ABS/DEV, Operation direction(LOW/HIGH) DIAGNOSIS : PV input burn-out FAIL : Instrument fail (Type : Memory, Power) |
| | | Event mode | According to number of 61 ~ 80 |
| | | Operation | RUN : Operation in RUN mode ALL : Operation in all cases |
| | | Output points | Open collector output ON/OFF x 12 (Changeable) (MAX DC 30V MAX 100mA / 1ch internal resistance 47Ω) |
| Auxiliary output (Option) | Type | Aux. Output 1 | PV1, SP1, MV1, PV2, SP2, MV2, DEV1, 2 |
| | | Aux. Output 2 | PV1, SP1, MV1, PV2, SP2, MV2, DEV1, 2 |
| | Scaling | Variable | |
| | Output signals | 4 ~ 20mA DC | |
| | Output accuracy | ±/ 0.1% of span | |
| | Output update cycle | 100 ms | |

- Program specifications

| Items | | Specification |
|-----------------|-----------------------------------|---|
| Program section | No. of programs | 32 programs (0 ~ 31) |
| | No. of segments | 100 segments/1 program, or total 800 segments |
| | Segment setting system | Segment time: Set by set points (SP) and time (Max. 99hours59min or 99min59sec) Segment Ramp-unit: Soaking-segment ramp rate (hr.min/min.sec) Ascending/descending ramp (Slope per hour/min) * Time unit is switchable |
| | PID group setting | Using segment PID Using zone PID: According to PV According to SP Group No.: 1 to 8 |
| | WAIT function (Guarantee Soak) | Type (Front, rear, all) and WAIT zone and WAIT time |
| | Repeat | 1 pattern all repeat x 1 (Maximum repeat is 999 cycle) Part repeat x 5 (Maximum repeat is 999 cycle) |
| | PV Start | Starting Target Set Point (SSP1 or SSP2) Starting with PV data point: Program operation starts with the PV data at the time of starting and advances toward the target Set Point of segment-1 for both PV1 and PV2 programs |
| | Program link | Maximum 6 programs Link program registration: Maximum 10 links |
| | Program name | 32 programs (Each pattern can have its name), Max. 12 characters |
| | POWER FAILURE | Controls right away after recovery of power failure, if the power failure lasts less than 4 seconds. For power failure that lasts longer than 4 seconds, setup modes below will be followed. BREAK: Stops program HOT START: Controls at the state just before power failure COLD START: It starts again at the beginning of program (Note) It is HOT START for fix control |

- Control output specifications

| Items | | Specification | |
|------------------------|----------------------|---|---|
| Control Section | PID control | Algorithm | PID-A / PID-B / DUP-A / DUP-B |
| | | Proportional band (P) | Proportional Band: 0.1 ~ 9999% GAIN: 0.001 ~ 1000 |
| | | Integral time (I) | 0.00 ~ 10.00 RPT/MIN |
| | | Derivative time (D) | 0.02 ~ 50.00 RPT/MIN |
| | | Manipulated variable limit (MV) | Low-limit: -5.0 to High-limit % High-limit: Low-limit to +105.0% |
| | | Manual reset | -100 to +100 |
| | | No. of PID groups | Loop 1: 8 groups Loop 2: 8 groups |
| | | PID groups selection | Segment specified, automatic zone selectable during program run |
| | | Manipulated variable Change | 0.1 to 110.0% per 0.1 sec |
| | | Auto tuning | Accutune II: Automatic setting of PID value by limit cycle method. |
| | | Fuzzy Control function | Fuzzy Control function |
| | | On-off control differential | 0 ~ 1000 |
| | Control direction | Selection is settable (Reverse/Direct) HEAT/COOL is settable each channel | |
| | Operation mode | Auto/Manual operation is switchable *Manual output : i) Bumpless ii) Preset value : -5.0~105.0% | |
| Control output section | Output set | TYPE | Current, Voltage Pulse, Relay |
| | Current output | Output signals | 4~20mA DC |
| | | Output accuracy | +/-0.1% of span |
| | | Output update cycle | 100 msec |
| | Voltage output | Open time terminal voltage | Lower than 25V DC (20mA) |
| | | Time proportional cycle | 1 ~ 120 sec |
| | Relay contact Output | Output signal | NC, NO, and common terminals (SPDT) |
| | | Contact rating | 250VAC, 3A or 30VDC, 3A (Resistance load) |

- Control mode

| Items | | Specification |
|-------|------------------|---|
| Mode | Program run mode | READY: It ready until scheduled time (Control stop) RUN: Advancing run state HOLD: Hold run state WAIT: Wait run state END: End point run state (Control stop) BREAK: POWER FAILURE mode and Stop state(Control stop) TUNE: AUTO-TUNING state |
| | | QUICK: Start by RUN/STOP key or contact relay input TIMER: Start by scheduled time |
| | Fix control mode | READY: It ready until scheduled time(Control stop) RUN: Advancing run state HOLD: Hold run state TUNE: AUTO-TUNING state |
| | | QUICK: Start by RUN/STOP key or contact relay input TIMER: Start by scheduled time |

- Communication specifications

| Items | | Specification | | |
|---------------|-------------------|-----------------------------------|---|--|
| Communication | RS232 (Basic) | Network | Single-drop | |
| | | Speed | 9600 or 19200 | |
| | | Parity check | NONE | |
| | | Bit length | 8 | |
| | | Stop Bits | 1 | |
| | ModBus (Option) | Number of data bits per character | Bit transfer order | LSB first |
| | | | End of message | Idle line for three or more characters (>1.56 msec). |
| | Ethernet (Option) | Protocol | ModBus / TCP protocol | |
| | | Port | One 10BaseT(RJ-45 connector) | |
| | | Cabling type | UTP category 2 or better Note) UTP: Unshielded Twisted Pair cable | |

5. Model Number Interpretation

| | | | | |
|------------|--|---------|----------|-----------|
| Key Number | | Table I | Table II | Table III |
| IPC5000 | | | | |

KEY NUMBER

| Description | Selection | Availability |
|--------------|-----------------|--------------|
| Control Loop | 2 Loops Control | IPC5000D |

TABLE I - Input & Outputs

| | | | |
|--------|---|-----|---|
| Input | Standard Input (2 Analog Inputs + 12 Digital Inputs) | 0 _ | ● |
| | Standard Input + 1 Analog Input | 1 _ | |
| Output | Standard Output (2 Analog Outputs + 12 Digital Outputs) | _ 0 | ● |
| | Standard Output + 2 Analog Outputs | _ 1 | ● |

TABLE II - Options

| | | | |
|---------------|---|-----|---|
| Communication | RS-232C | 0 _ | ● |
| | RS-232C, RS-485 (Modbus RTU) | 1 _ | ● |
| | RS-232C, Ethernet (Modbus TCP) | 2 _ | ● |
| | RS-232C, RS-485 (Modbus RTU), Ethernet (Modbus TCP) | 3 _ | ● |
| Future Option | None | _ 0 | |
| | None | _ 0 | |
| | None | _ 0 | |

TABLE III - Language

| | | | |
|------------------|----------------|---|---|
| Display Language | English/Korean | 0 | ● |
|------------------|----------------|---|---|

HONEYWELL ASIA PACIFIC AFFILIATES

Australia

Honeywell Limited
5 Thomas Holt Drive
North Ryde NSW 2113
Phone: (61) 2-9370-4500
Fax: (61) 2-9370-4525
Toll Free: 1300-36-39-36
Toll Free Fax: 1300-36-04-70
e-mail: salomon.ayach@honeywell.com
Web: www.honeywell.com.au

China – PRC – Beijing

Honeywell China Inc.
15F Han Wei Plaza, East Tower
Choyang District
Beijing 100020, P.R.C.
Phone: (86) 10 6561-0208 Ext. 205
Fax: (86) 10 6561 0618
e-mail: jin.gui.wang@honeywell.com

China – PRC – Shanghai

Honeywell (Tianjin) Ltd.
23F Tower B City Center,
100 Zun Yi Road,
Shanghai 200051, P.R.C.
Phone: (86) 21 6237-0237 Ext. 305
Fax: (86) 21 6236 1237
e-mail: jing.sheng.qiao@honeywell.com

China – Hong Kong S.A.R

Honeywell Ltd.
25F Honeywell Tower Olympia Plaza
255 King's Road
North Point, HongKong
Phone: (852) 2331-9133
Fax: (852) 2331-9998
e-mail: wilson.chow@honeywell.com

China – PRC – Shenzhen

Honeywell China Inc.
Units 04-07, 32F Shenzhen Kerry Center
Renminnan Road, Luo Hu District
Shenzhen 518001, P.R.C.
Phone: (86) 755-518-1226
Fax: (86) 755-518-1221
e-mail: robin.tu@honeywell.com

Indonesia

Honeywell Indonesia Pte Ltd.
Wisma Budi, #405 4th Floor
H.R. Rasuna Said Kav C-6
Jakarta 12940, Indonesia
Phone: (6221) 521-3330
Fax: (6221) 521-3735
e-mail: arianto.wibowo@honeywell.com

India

TATA Honeywell Ltd.
55A 8&9
Hadapsar Industrial Estate
Pune 411013, India
Phone: (91) 20 6875-532
Fax: (91) 20 6875-535
e-mail: ashutoshd@tatahoneywell.co.in

Japan

Honeywell Inc. Sensing&Control
TF B/D 14-6 Shibaura 1-Chome
Minato Ku Tokyo 105-0023 Japan
Phone: (81) 3 5440-1425
Fax: (81) 3 5440-1368
e-mail: tetsuo.shinno@honeywell.com

South Korea

Honeywell Korea Co. Ltd.
18F KukJe Center B/D
191 HanGangRo-2Ga
YongSan-Gu, Seoul, 140-702, Korea
Phone: (82) 2 799-6176
Fax: (82) 2 792-9013
e-mail: byeongdeok.choi@honeywell.com
Web: www.honeywell.co.kr

Malaysia

Honeywell Engineering Sdn Bhd
2F Wisma CSA
No.4 Jalan Bersatu 13/4
46200 Petaling Jaya
Selangor Darul Ehsan
Phone: (603) 7950 4759
Fax: (603) 7958 8922
e-mail: ks.yong@honeywell.com

New Zealand

Honeywell Limited
264 Mt. Eden Road
Mt. Eden Auckland
New Zealand
Phone: (64) 9 623-5050
Fax: (64) 9 623-5060
Toll Free: 0800 202-088
e-mail:
ProductCustomerService@honeywell.com.au

Philippines

Honeywell Systems (Philippines) Inc.
E-1507A, 15F Tektite Tower 1
Exchange Road, Ortigas Center
Pasig City 1605, Philippines
Phone: (63) 2 636 1649
Fax: (63) 2 636 1650
e-mail: melchor.nicolas@honeywell.com

Sensing&Control

Asia Pacific Headquarters
Honeywell Building
17 Changi Business Park, Central 1
Singapore 486073
Phone: (65) 355-2828
Fax: (65) 445-3033
Web: www.honeywell.com/sensing
e-mail: info.sc@honeywell.com

Singapore

Honeywell South East Asia
Honeywell Private Limited
Honeywell B/D
17 Changi Business Park, Central 1
Singapore 486073
Phone: (65) 355-2828
Fax: (65) 445-3033
Web: www.honeywell.com/sensing
e-mail: info.sc@honeywell.com

Thailand

Honeywell Systems (Thailand) Ltd.
252/121
25F Muang Thai-Phatra Office Tower II
Ratchadapis Road, Huay Khwang
Bangkok 10320, Thailand
Phone: (662) 693-3099
Fax: (662) 693-3085
e-mail:
somboon.rungjaraspan@honeywell.com

Taiwan R.O.C.

Honeywell Taiwan Ltd.
10F Honeywell B/D
168-1 Lien Chen Road, Chung Ho City
Taipei Hsien, Taiwan R.O.C.
Phone: (886) 2 2245-1000
Fax: (886) 2 2245-3242
e-mail: steven.chi@honeywell.com

For Countries (SEAsia) Listed below,

See Honeywell SEAsia Regional Office
Bangladesh
Cambodia
Guam
Laos
Myanmar
Nepal
Pakistan
Sri Lanka
Vietnam
East Timor

Industrial Measurement & Control

Honeywell Pte LTD
Honeywell Building
17 Changi Business Park Cetral 1
Singapore
<http://www.honeywell.com>

Honeywell