

Honeywell

Video Surveillance Software

CADVR-CS

User Manual

VISTA
Honeywell

Contents

1	Overview and Environment.....	1
	Overview	1
	Environment	1
2	Installation and Upgrade	2
	Installation	2
	Un-installation	9
	Windows Menu	9
	Start Menu	10
	Software of different version	10
3	Interface	11
	Login Interface	11
	Initialization Interface	12
	Main Interface	13
	Interface Button	15
	Video Control Zone	16
	Screen Display Mode	17
	Function Button	18
	Task	18
	Alarm Record	19
	Playback	20
	E-map	27
	Configuration	33
	Right Tool Bar	38
	Device List	38
	PTZ Direction Control	41
	PTZ Advanced	42
	Tool	46
	Setting Manage	57
	Device Health Status	89
	Full Menu	91
	Modify Password	91
	Device	91

	Alarm	92
	Record Manage	92
	Scheme Task	93
	E-map	93
	Configuration	93
	Log Query	94
	Log out.....	94
	Exit.....	95
	Tray Menu	95
	Modify Password	96
	Alarm	96
	E-map View	96
	Color Default Setup	96
	Scheme Task	97
	Begin/Stop Record Plan	97
	Log Query	97
	Close Alarm Sound.....	97
	Log out.....	97
	Exit.....	97
4	Operation Instruction.....	98
	Monitor Operation	98
	Monitor Task and Monitor Project	101
	PTZ Control	101
	Playback.....	102
	Device Record Playback	102
	Local Record Playback.....	103
	Download.....	103
	Record Play Control	103
	Others	103
	Snapshot and Manual Record	104
	E-map.....	104
	Log out	104
5	Peripheral Device Operation.....	106
	Decode Card	106
	NVD.....	106

Menu	106
NVD Control Principle.....	107

Figure

Figure 2-1 Installation 1	2
Figure 2-2 Installation 2	3
Figure 2-3 Installation 3	3
Figure 2-4 Installation 4	4
Figure 2-5 Installation 5	4
Figure 2-6 Installation 6	5
Figure 2-7 Installation 7	5
Figure 2-8 Windows Menu	9
Figure 2-9 Un-installation	9
Figure 2-10 Un-installation from Start Menu	10
Figure 3-1 Login Interface.....	12
Figure 3-2 Initialization Interface.....	12
Figure 3-3 Main Interface.....	13
Figure 3-4 Tray Menu	14
Figure 3-5 Icon on PC.....	14
Figure 3-6 Tray Menu from the Icon	15
Figure 3-7 Video Control Zone.....	17
Figure 3-8 Screen Display Mode Option.....	17
Figure 3-9 Function Button	18
Figure 3-10 Task.....	19
Figure 3-11 Alarm Record	19
Figure 3-12 Playback Window	21
Figure 3-13 Device Record Playback	22
Figure 3-14 Playback Control Bar.....	23
Figure 3-15 Activation Record Playback.....	23
Figure 3-16 Local Record Playback.....	24
Figure 3-17 Download	25
Figure 3-18 Convert Dav to Avi.....	26
Figure 3-19 E-map.....	28
Figure 3-20 Node Information.....	29
Figure 3-21 E-map organization	29
Figure 3-22 Small E-map.....	30
Figure 3-23 E-map Configuration 1.....	31
Figure 3-24 E-map Configuration 2.....	32
Figure 3-25 Channel Attribute.....	32
Figure 3-26 E-map Video.....	33
Figure 3-27 Configuration	33
Figure 3-28 Password Modification.....	34
Figure 3-29 Option.....	37
Figure 3-30 Reboot CADVR-CS	38
Figure 3-31 Right Tool Bar.....	38
Figure 3-32 Device List	39
Figure 3-33 Device Attribute	40
Figure 3-34 Device Status	40
Figure 3-35 PTZ Direction.....	42
Figure 3-36 PTZ Advanced.....	43

Figure 3-37 Aux Interface	45
Figure 3-38 AUX Control	45
Figure 3-39 PTZ Menu Control	45
Figure 3-40 PTZ Menu.....	46
Figure 3-41 Tools.....	47
Figure 3-42 NVD Control	48
Figure 3-43 NVD Control Configuration	49
Figure 3-44 Decode Tour.....	50
Figure 3-45 TV Adjust.....	51
Figure 3-46 Health Report	52
Figure 3-47 Log Search	53
Figure 3-48 Alarm Activation Video	54
Figure 3-49 Alarm Video.....	55
Figure 3-50 Alarm Output	56
Figure 3-51 Color Configuration.....	56
Figure 3-52 Volume	57
Figure 3-53 Setting Manage	58
Figure 3-54 Task.....	59
Figure 3-55 Task Configuration	60
Figure 3-56 Project	61
Figure 3-57 Project Configuration	62
Figure 3-58 Record Plan Configuration	63
Figure 3-59 Schedule Template.....	64
Figure 3-60 Schedule Template Configuration	65
Figure 3-61 Alarm Manage	66
Figure 3-62 Alarm.....	68
Figure 3-63 Alarm Configuration.....	69
Figure 3-64 Alarm Info	71
Figure 3-65 Alarm Record Plan	72
Figure 3-66 E-map Configuration.....	73
Figure 3-67 Add E-map 6-1	74
Figure 3-68 Add E-map 6-2	74
Figure 3-69 Add E-map 6-3	75
Figure 3-70 Add E-map 6-4	76
Figure 3-71 Add E-map 6-5	77
Figure 3-72 Add E-map 6-6	78
Figure 3-73 Clear Map.....	78
Figure 3-74 Camera Info.....	80
Figure 3-75 Decode	82
Figure 3-76 Decode Config.....	82
Figure 3-77 User Management 2-1	83
Figure 3-78 User Management 2-2.....	84
Figure 3-79 Device Manage.....	84
Figure 3-80 Search Device	85
Figure 3-81 Add Device Manual	85
Figure 3-82 IP Address Config.....	86
Figure 3-83 DDNS Config.....	86
Figure 3-84 NVD Manage Interface	87
Figure 3-85 Extension Screen	88

Figure 3-86 Adjust the Display.....	89
Figure 3-87 User Config	89
Figure 3-88 Device Health Status Config.....	90
Figure 3-89 Device Health Status	90
Figure 3-90 HDD Error Status.....	91
Figure 3-91 Full Menu.....	91
Figure 3-92 Device Sub-menu	92
Figure 3-93 Alarm Sub-menu in Device	92
Figure 3-94 Record Manage Sub-menu	93
Figure 3-95 Scheme Task Sub-menu	93
Figure 3-96 E-map Sub-menu	93
Figure 3-97 Configuration Sub-menu.....	94
Figure 3-98 Log out	95
Figure 3-99 Exit	95
Figure 3-100 Tray Menu	96
Figure 3-101 Alarm Sub-menu in Full Menu	96
Figure 3-102 Scheme Task Sub-menu in Full Menu.....	97
Figure 4-1 Monitor Operation.....	99
Figure 4-2 Sub-menu in Monitor Window	101
Figure 4-3 PTZ Control	102
Figure 4-4 Log Out.....	105
Figure 4-5 Log In	105
Figure 5-1 NVD Sub-menu	107
Figure 5-2 NVD Control Principle.....	108
Figure 5-3 NVD Overload	108
Figure 5-4 Restore Decode Capacity.....	109
Figure 5-5 Tour In NVD Config	110
Figure 5-6 Video Mode	111
Figure 5-7 Decode tour	112
Figure 5-8 TV Adjustment.....	113

1 Overview and Environment

Overview

CADVR-CS is an abbreviation for Video Surveillance Software.

It is software to manage small quantity security surveillance devices. It releases with the device and does not support the products from other manufacturers.

It can view several camera channels from various devices, and it can view the recorded video files from various devices. CADVR-CS can support multiple scheduled arms to realize auto PC guard.

CADVR-CS supports e-map; you can clearly view all device locations.

It can create individual configuration files for each user, which allows you maintain your own habit and style.

Please note, there is only one running CADVR-CS in one PC.

The CADVR-CS can send out the device alarm information to the peripheral applications for extension use.

Environment

OS: Windows 2000 / Windows XP / Windows 2003/ Windows Vista/Windows 7.

CPU: 2.4GHz or higher.

Display card: Independent card and support DirectX 8.0c or higher.

Memory: 1GB or higher for XP OS.

Displayer: 1024*768 or higher.

2 Installation and Upgrade

Installation


Install the software in Windows OS:

Please check the installation CD and make sure it includes the following files:

setup.exe、Honeywell CADVR-CS.msi.


Double click the setup.exe to begin installation. See 错误! 未找到引用源。 .

Figure 2-1 Installation 1

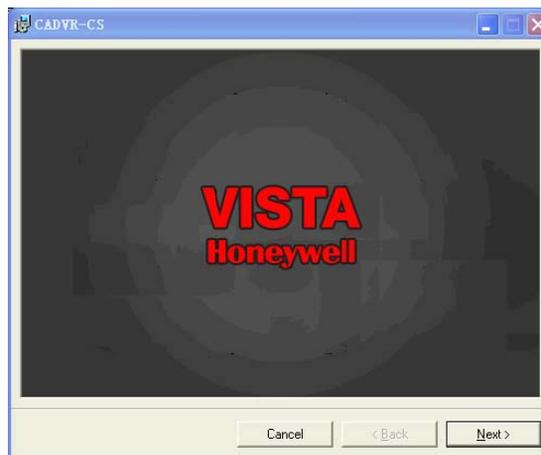


Click next button to go to installation interface. See 错误! 未找到引用源。 .

Figure 2-2 Installation 2

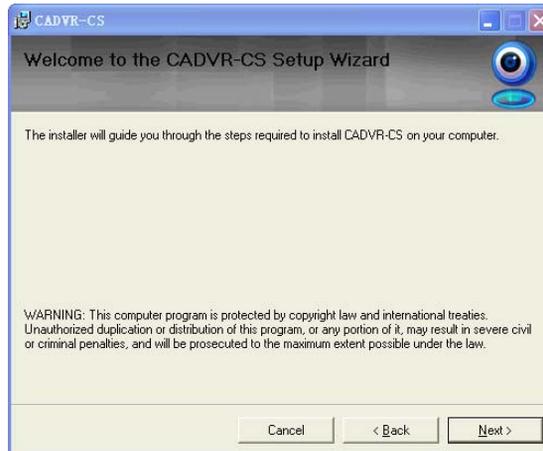


Click next button, you can see an interface is shown as in 错误！未找到引用源。 . Please input user name and organization name.

Figure 2-3 Installation 3

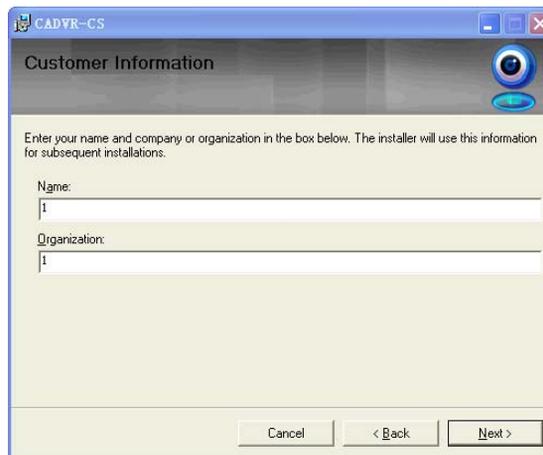


Click next button, you can see an interface is shown as below. Please select installation folder. Default folder is C:\Program Files\Honeywell CADVR-CS\. See 错误！未找到引用源。 .

Figure 2-4 Installation 4

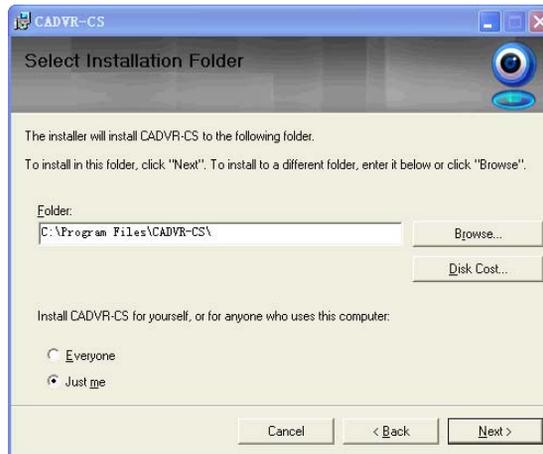


Click next button, you can see there is an interface asking you to confirm the installation. See 错误! 未找到引用源。 .

Figure 2-5 Installation 5

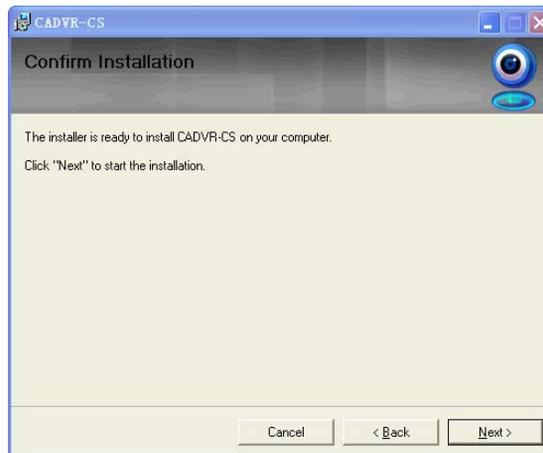

Click next button, system begins installation. The interface is shown as in 错误! 未找到引用源。 .


Figure 2-6 Installation 6

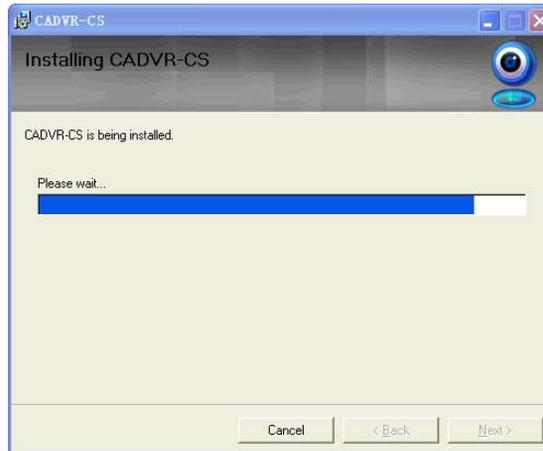

During the installation process, you can click cancel button to exit.

After installation, you can see an interface is shown as below. See 错误! 未找到引用源。 .

Figure 2-7 Installation 7

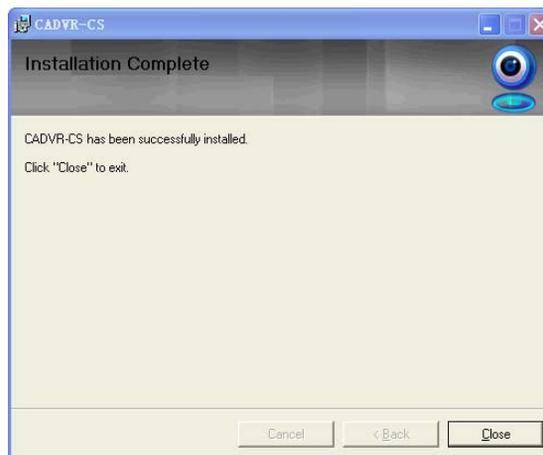

Click close button, you can complete the installation.

Install the software in MAC OS:

Double click the CADVR-CS_V4.04_2011-11-24.PKG to start installation, and click Continue to start.

Figure 2-8 MAC Installation 1



Click Install to continue.

Figure 2-9 MAC Installation 2



It will need you input the user name and password of the PC shown below.

Figure 2-10 MAC Installation 3




Progress of installation:

Figure 2-11 MAC Installation 4



Installation finished.

Figure 2-12 MAC Installation 5

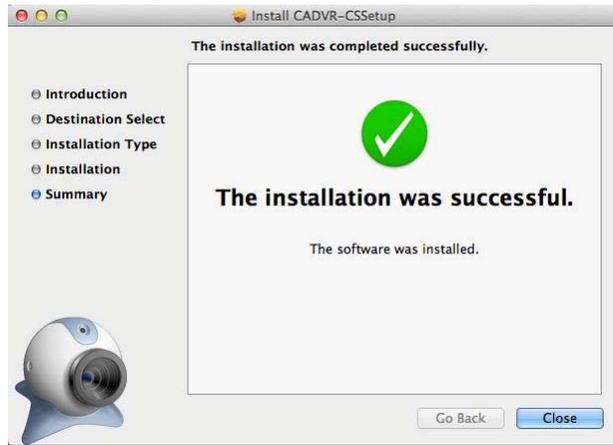

A button on the desktop after the installation finished.

Figure 2-13 MAC Installation 6




Un-installation

There are two ways for you to remove the CADVR-CS.

Windows Menu


From the control panel to the add/remove program, you can see an interface is shown as in Figure 2-14.

Figure 2-14 Windows Menu

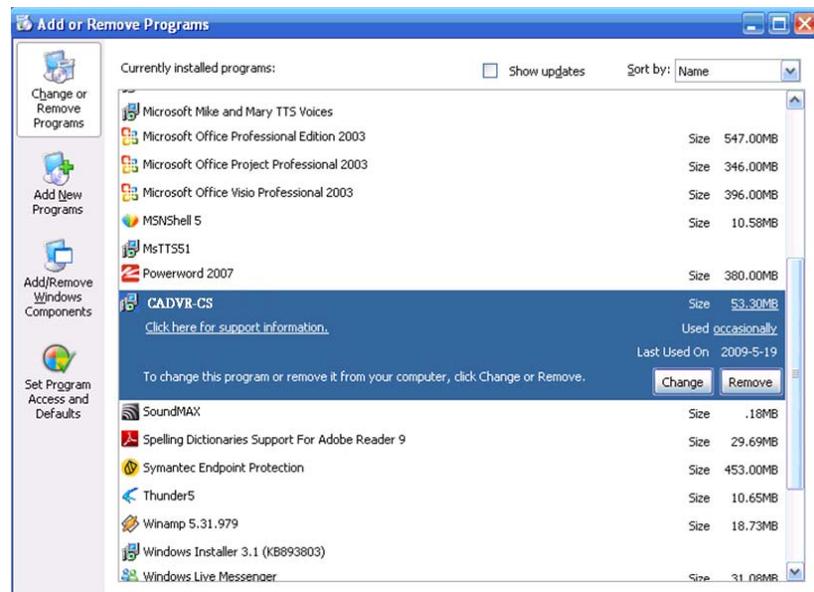

Click remove button, you can see a dialogue box is shown as in Figure 2-15.

Figure 2-15 Un-installation

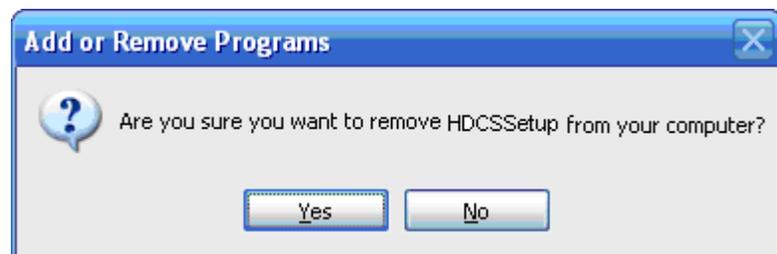

Click Yes button to remove CADVR-CS.

Start Menu

From Start menu-> All programs->CADVR-CS, select CADVR-CS uninstall item.

System pops up the following dialogue box. See Figure 2-16. Please click yes to remove CADVR-CS.

Figure 2-16 Un-installation from Start Menu



Software of different version


If your PC has installed different version, please uninstall the CADVR-CS first and then install the latest version. For detailed installation steps, please refer to "Installation".

3 Interface



Double click CADVR-CS icon  , you can go to the login interface.

Login Interface

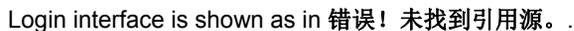Login interface is shown as in  .

User name: Input the user account

Password: Please input corresponding password to log in.

OK: Click this button, system can verify the account and then enter the software main interface.

Cancel: Click this button to exit login interface.



- If it is your first time to run the CADVR-CS program, default user name is admin and its password is admin too. Admin is a super administrator and can not be removed. It can add, modify or delete other user.
 - For security reason, please modify your password after first log in.
 - You can memory your password, so that when you can log in the next time, you do not need to input user name and password. Please note this function is for your convenient only. **Do not** enable this function in public PC.
-

Figure 3-1 Login Interface



Initialization Interface

Click OK button, system begins verifying user name and password and then go to the initialization interface. See 错误! 未找到引用源。 .

Please note it may take a little bit longer to initialize decode card, please be patient.

If it is your first time to use CADVR-CS, please go to “Option to implement setup”.


Figure 3-2 Initialization Interface



Main Interface

In the main interface, there are real-time monitor interface and other operation and function menu. See [错误！未找到引用源。](#)

Figure 3-3 Main Interface

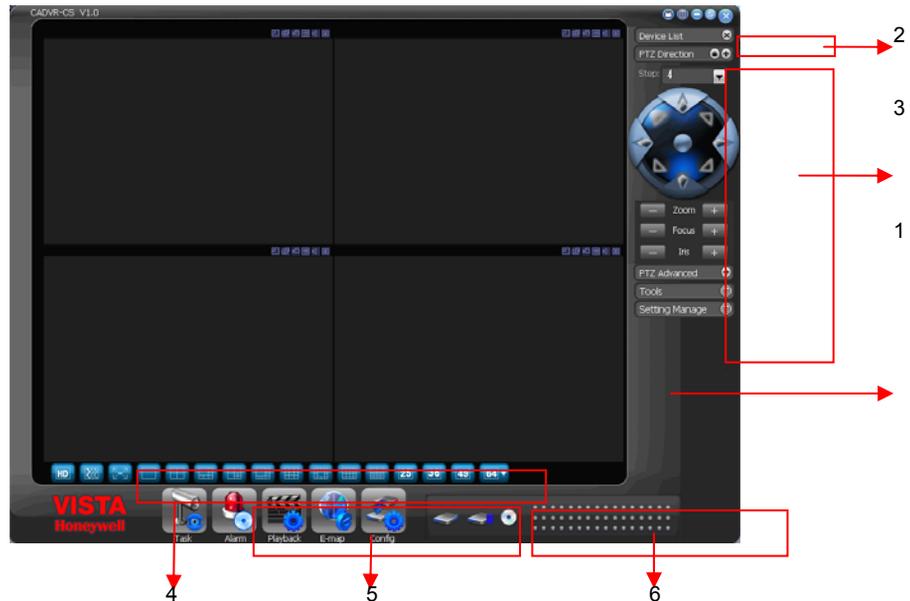


Section 1: Current display window. It is circled by a green boundary. For video control information, please refer to “Video control zone”.

Section 2: Right tool bar. Here you can view the five buttons: Device list, PTZ direction, PTZ advanced, Tool, Setting Manage.

Section 3: There are five buttons. Lock/Close/Minimize/Switch/Full menu. For close/Minimize/Switch button information, please refer to “Interface Button”. Click full menu button; you can view a menu tree shown as in [错误！未找到引用源。](#). For detail full menu information, please refer to “Tray Menu”.

Figure 3-4 Tray Menu

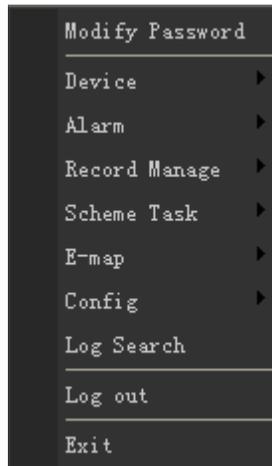

Section 4: Screen display mode. Please refer to “Screen Display Mode” for detailed information.

Section 5: Function buttons. Here you can view the following buttons: Task, Alarm, Playback, E-map, and Configuration.

Section 6: Device health status. Please refer to “Device Health Status” for detailed information.

When CADVR-CS is running, you can also see there is a little icon on your right tray menu. See [错误！未找到引用源。](#)

Figure 3-5 Icon on PC



Right click mouse, you can see an interface is shown as in [错误！未找到引用源。](#)

Please go to “Tray” for detailed tray menu information.

Figure 3-6 Tray Menu from the Icon



Interface Button

Please refer to the following sheet for interface button information.


SN	Icon	Function
1		Click it to display full menu.
2		Display sub-window.
3		Maximize/minimize, restore/switch button.
4		Lock/unlock sub-window.
5		Minimize
6		Close current sub-window.
7		Close current window.
8		Tray menu button.

<p>9</p>	<p>Lock </p>	<p>Click lock button, you can lock current application to avoid vicious operation. See 错误! 未找到引用源。 . You can see admin has locked current application.</p>  <p>Click the unlock button in 错误! 未找到引用源。 , system pops up the following dialogue box. See 错误! 未找到引用源。 below. You need to input the proper password to login again.</p> 
<p>10</p>		<p>These two button are usually in user management or configuration interface. Click Ok to save current modification and then exit. Click Cancel to exit without saving current setup.</p>

Video Control Zone

On the video upper right, there are six icons. See 错误! 未找到引用源。 .

Figure 3-7 Video Control Zone

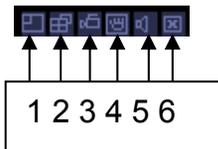


Please refer to the following sheet for detail information.

1	Digital zoom	Click this button and then left drag the mouse in the zone to zoom in. Right click mouse system restores original status.
2	Change show mode	Resize or switch to full screen mode. You can double click mouse to change the mode.
3	Local record	When you click local record button, the system begins recording. The recorded file is saved to system folder.
4	Capture picture	You can snapshot important video. All images are memorized in system folder.
5	Audio	Turn on or off audio.(It has no relationship with system audio setup)
6	Close video	Close video in current window.

Screen Display Mode

Screen display mode interface is shown as in 错误! 未找到引用源。 .

Figure 3-8 Screen Display Mode Option

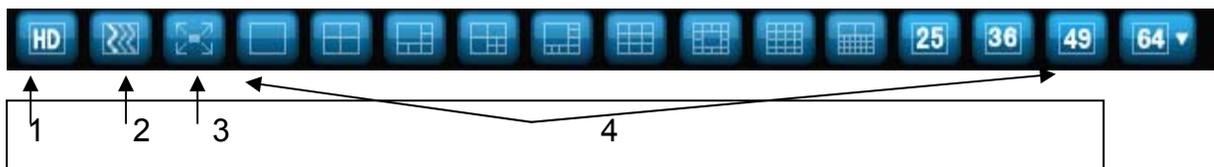

From the left to the right, there are video quality, real-time/fluent button, full-screen button and 1-64 screen modes.



In full-screen mode or the window is maximized, sometimes you may notice the height and width of small window can adjust according to the displayer.

Function Button

Function button is show as in 错误！未找到引用源。 .

It consists of the five buttons: Task/Alarm/Playback/E-map/Config.

Figure 3-9 Function Button



Task


Click Task button, the interface is shown as below See 错误！未找到引用源。 below.

Here you can enable/disable the task or project item.

Pause/restore button: Once you enabled one task/project, system display pause button.

“√” means current task is in progress.


Figure 3-10 Task

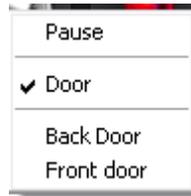

Alarm Record

Alarm record interface is shown as in 错误！未找到引用源。 below.

Figure 3-11 Alarm Record

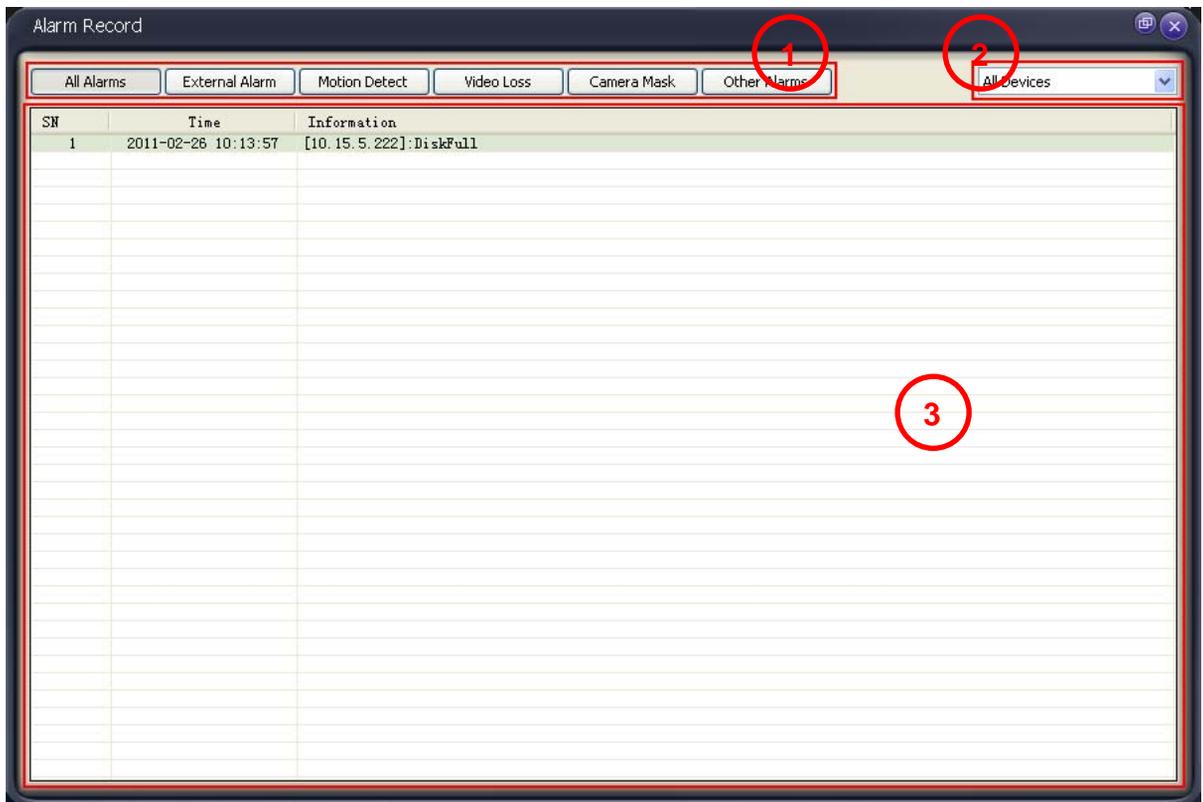


Please refer to the following sheet for detail information.

SN	Name	Function
1	Alarm Type	The alarm consists of six types: All alarms/External

		alarm/Motion detection/Video loss/Camera masking/other alarms.
2	All Devices	You can select a device from the dropdown list.
3	Alarm record	You can see alarm time and alarm detailed information.

Please go to “Option” to set “alarm record max amount”. Once the record is full, system automatically overwrites the previous one.

In “Option”, you can also set alarm information management operation.

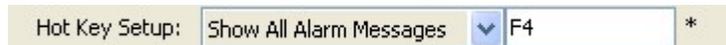

Please go to “Alarm manage” to set alarm configuration information.

Playback


Here you can view the remote device you can control, and corresponding linkage (activation) record, local record playback and download.

Please note the play control button at the bottom of the interface is for current video window only.

Device Record

Device record interface is shown as Figure below.

Figure 3-12 Playback Window

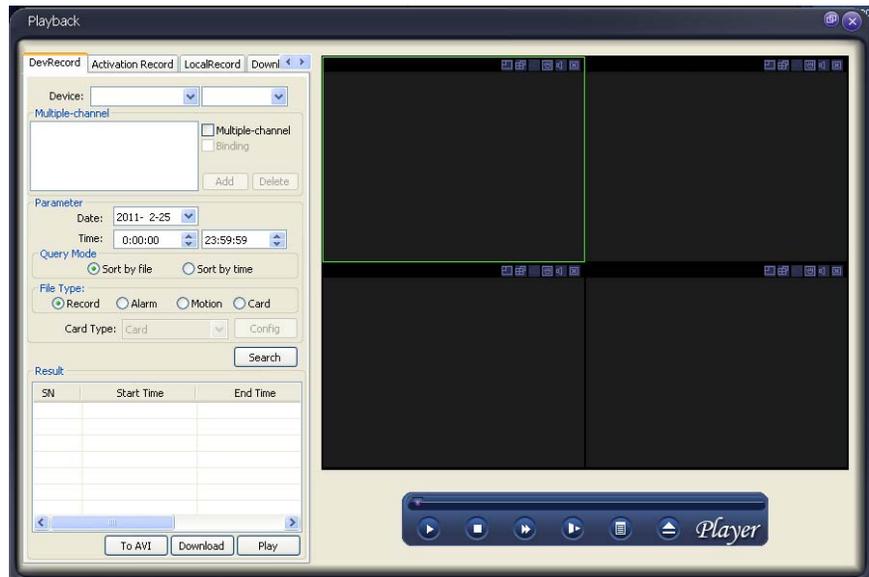


In this interface, you can search and download the file(s) from the managed devices. You can specify the time to search the files and then double click the file to playback (Please makes sure you network bandwidth is OK and you have proper right to playback.) See [错误！未找到引用源。](#)

The system will search the file(s) by date and list all the file information on the time axis. There are time axis and day axis, you can drag to operate. Red stands for the alarm record. Green stands for the general record. Yellow stands for the motion detect record.

You can click the download button to add the checked file(s) to the download task list. You can go to the download interface to view download process or cancel current download operation. Double click the serial number column, you can select /cancel all files.

Figure 3-13 Device Record Playback

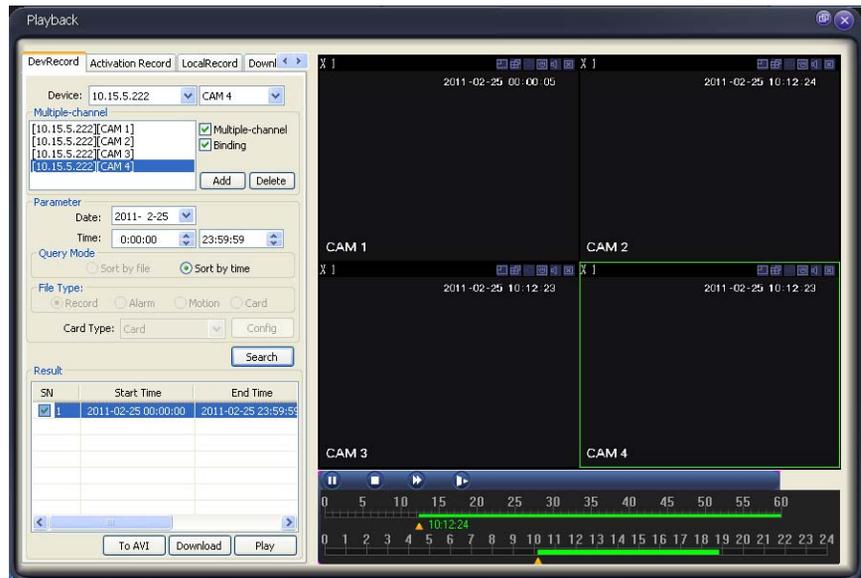


You can refer to the following interface for detailed playback information.
See 错误! 未找到引用源。 .

SN	Name	Function
1	Pause /play	Play or pause the record play in the specified window.
2	Stop	Stop the record play in the specified window.
3	Fast play	Play the record in the specified window in fast speed.
4	Slow play	Play the record in the specified window in slow speed.
5	Time axis (1-60M)	Here you can view the detailed play time information (0:00-60:00. Unit is minute.) . It is the indication information of the yellow icon in the day axis (Button 6)
6	Day axis (0-24H)	It is to display the searched results by time. All the files listed below are in one day (00:00-24:00. Unit is hour.) Red is the alarm record file. Green is the general record file. Yellow is the motion detect record file.

7	Current play time	The current play time of the file.
---	-------------------	------------------------------------

Figure 3-14 Playback Control Bar

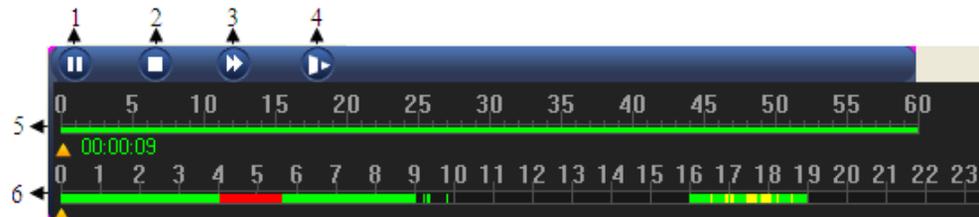


Activation Record

Activation record interface is shown as in 错误! 未找到引用源。5.

In this interface, you can search and playback the alarm activation record at the local-end. Double click the file you can playback the video in current window. Click delete button, you can remove the select file(s). Double click the serial number column, you can select /cancel all files.


Figure 3-15 Activation Record Playback

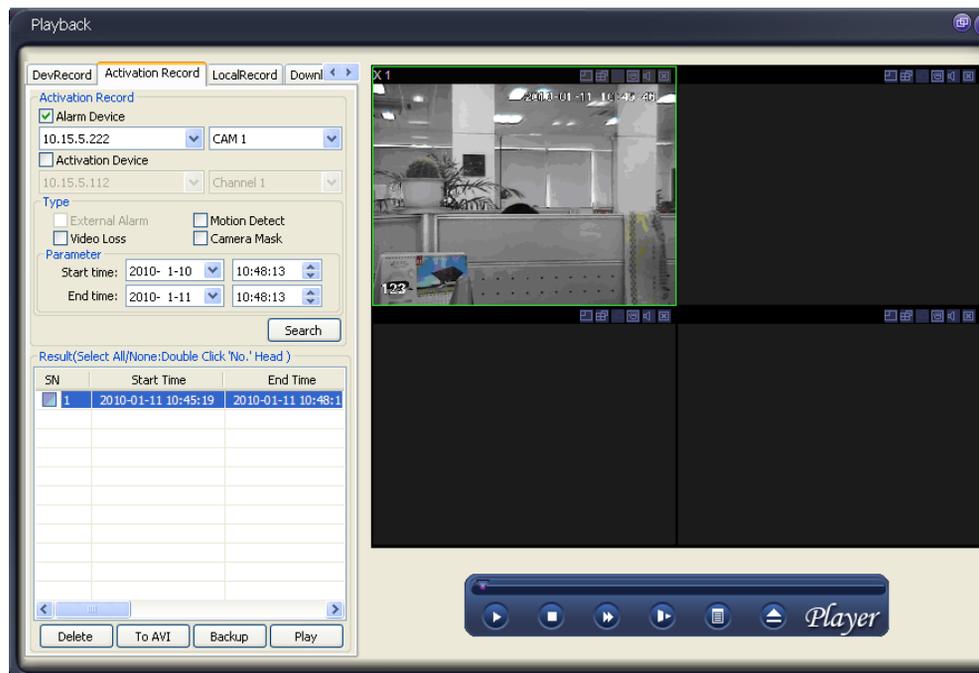

Local Record

Local record interface is shown as in 错误! 未找到引用源。6.

Figure 3-17 Download

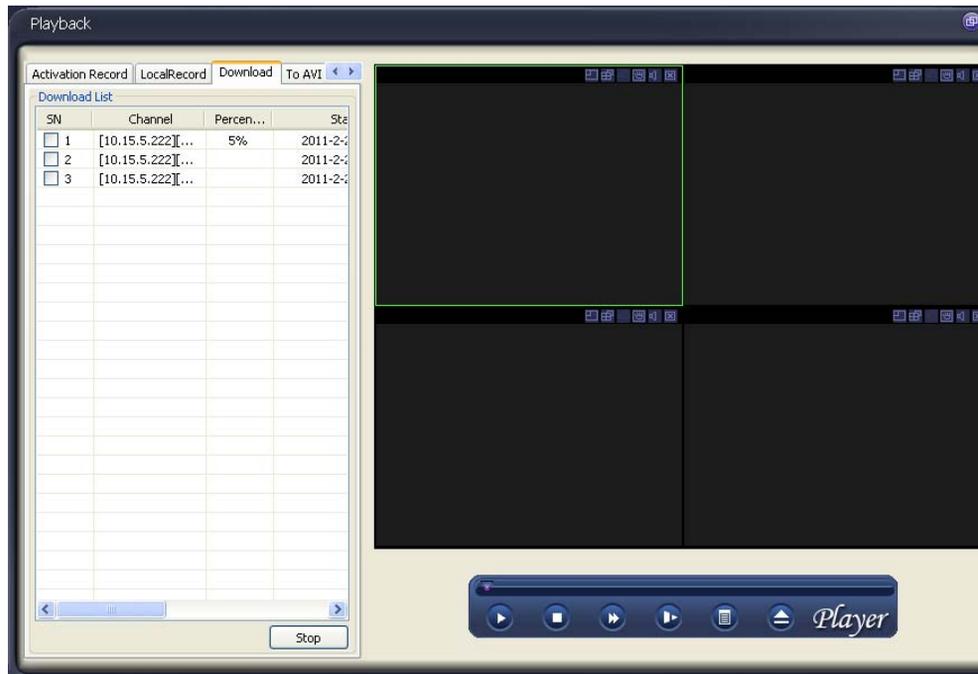


Dav to Avi

Dav to AVI interface is shown as in 错误! 未找到引用源。18.

In this interface, you can convert the Dav file to AVI file so that these recorded files can play in general player.

Figure 3-18 Convert Dav to Avi

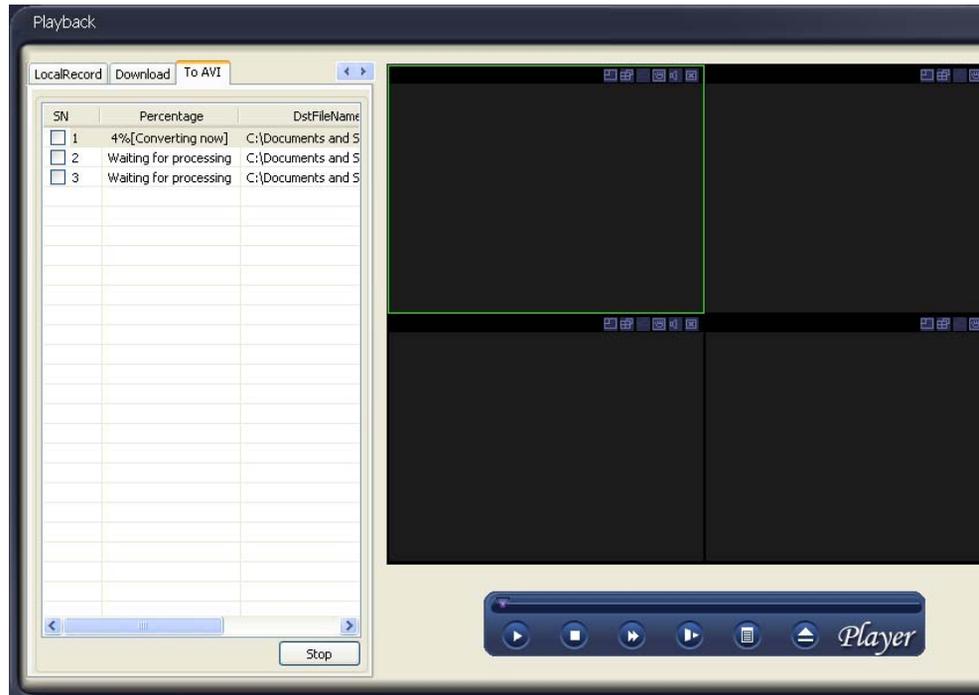

Please refer to the following sheet for detailed information.

Parameter	Function
Type	Search general record, alarm record, motion detection record and card record.
Alarm	Search alarm record.
Motion Detection	Search motion detection record.
Card	Search card record.
Start time	Set the file start time.
End time	Set the file end time.
Channel	Select the channel from the dropdown list.

Parameter	Function
Search	Click this button you can view the recorded file matched your requirements.
Playback	Select the file first and then click playback button to view the video. Double click serial number (SN) column you can select all files.
Download type	<ul style="list-style-type: none"> • Download by file: Select the file(s) and then click download button. • Download by time: Download the recorded file(s) within your specified period.
Download	<ul style="list-style-type: none"> • Select the file you need (multiple choices) and then click download button, you can see system pops up a dialogue box, please specify file name and path to download the file(s) to your local pc. • Input the downloaded file name, specify the path and then click OK button. You can see system begins download and the download becomes stop button. There is a progress bar for your reference.
Linkage record	You can search the alarm activated record in the local end. Double click the file name you can open the video in current window.
Local record	Select local record to play. Double click serial number (SN) column you can select all files.



Important

Please note record save path and download save path are not the same. Please refer to “Option”.


E-map

Click E-map button, the interface is shown as in [错误! 未找到引用源。](#) 19.

Figure 3-19 E-map

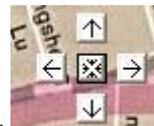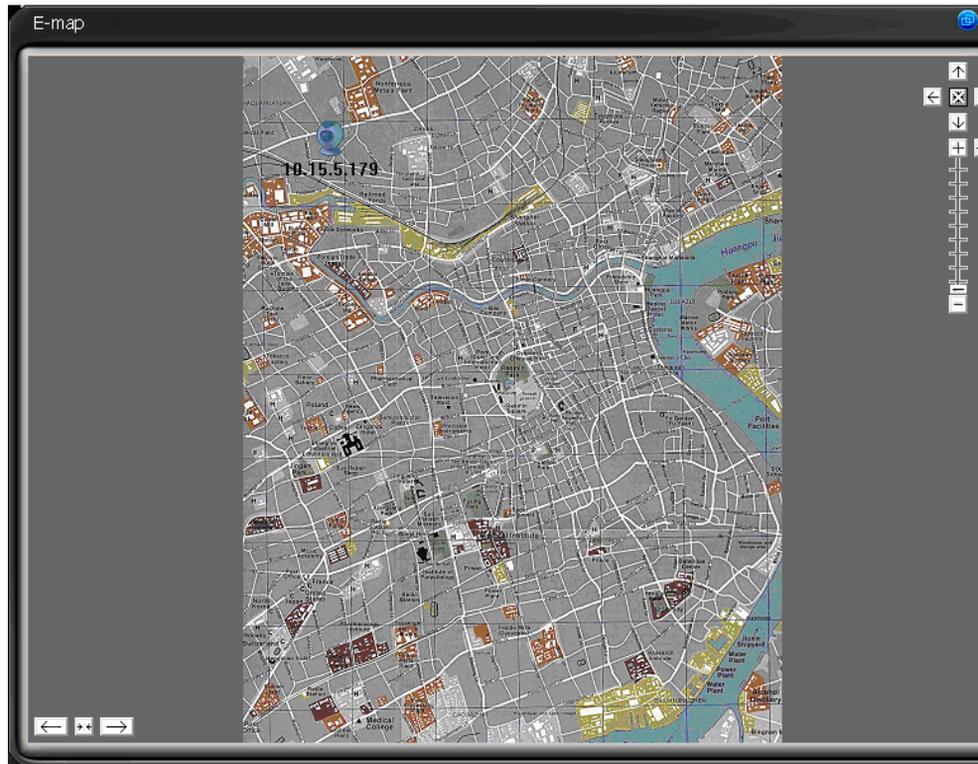


On the top right, there are five direction keys. You can click it to move e-map position. The centre button is to go to the e-map centre. It is valid when e-map is zooming in.

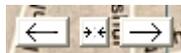

The left button is to view previous browser image and the next browser image. The middle button is to go back to the main e-map and clear browser history.

Double click sub e-map to go to the next e-map. Double click camera to open the monitor video.


Figure 3-20 Node Information

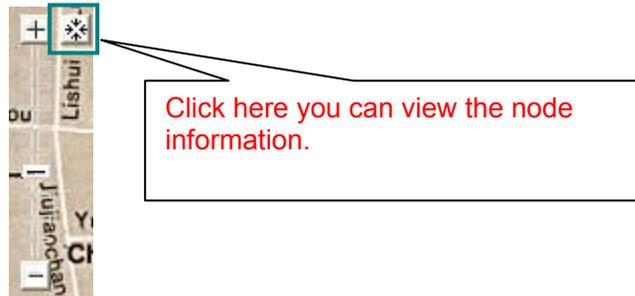

In 错误! 未找到引用源。0, you can see you can use the buttons to zoom in or zoom out the e-map. Roll the mouse you can also zoom the e-map.

In 错误! 未找到引用源。0, click the button on the top right, system pops up the node information. Here you can view the e-map organization and its node information. See 错误! 未找到引用源。1.


Figure 3-21 E-map organization

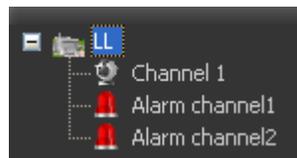

On the bottom right, there is a small e-map button (See 错误! 未找到引用源。2). You can click it to display or hide the small e-map. System hides the button when it is to display the small e-map. You can left click the e-map to display the button again.

System displays a red circle in the small e-map to represent the node. The green column in the small e-map is to represent the current displayed zone.

Figure 3-22 Small E-map

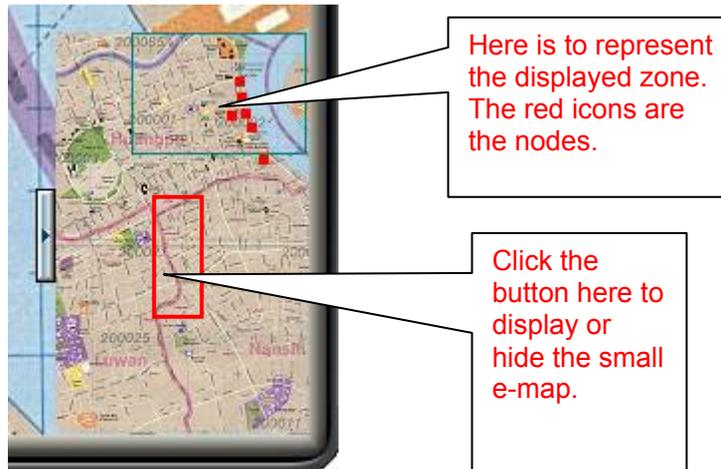


If you have armed the camera or alarm channel, when alarm occurs, the corresponding camera or alarm device will flash.

For detailed E-map setup and implement, please refer to “E-map”.

Right click mouse in the idle zone (There is no nod icon.); you can see the E-map configuration button. See 错误! 未找到引用源。3.

Click the E-map configuration button; you can go to “E-map config”.

Figure 3-23 E-map Configuration 1

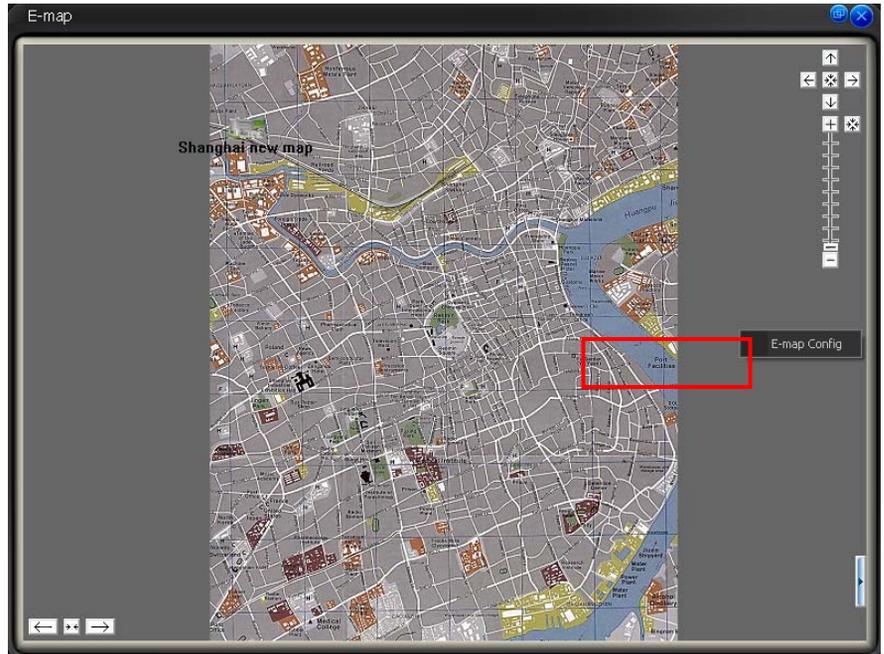

Right click the video channel in 错误! 未找到引用源。19; you can view the following interface. See 错误! 未找到引用源。4.


It includes three options: E-map configuration /channel attribute/play in the pop-up window.

Figure 3-24 E-map Configuration 2



Click channel attribute, you can see the device name and channel title. See 错误！未找到引用源。5.

Figure 3-25 Channel Attribute

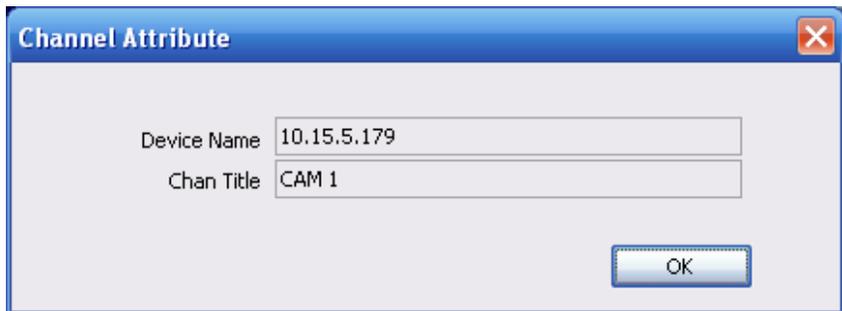

Click the play in pop-up window; you can see the system pops up the following window to display the video. See 错误！未找到引用源。6.

Figure 3-26 E-map Video



Configuration

Click Config button, you can see an interface is shown as below. See 错误! 未找到引用源。7.

Figure 3-27 Configuration



Password Modification

Click password modification button, system pops up the following interface. See 错误! 未找到引用源。28.

Figure 3-28 Password Modification

Please input the old password and then input new password twice to change the password.

Option

Click option button, the interface is shown as in [错误! 未找到引用源。29.](#)

System basic setup

Language: CADVR-CS support various languages. Please select from the dropdown list.

Verify password: Once you check the box here, you do not need to input the password when you want to log out. System just allows you to log out directly.

Login all devices: User automatically logged in all devices after CADVR-CS booted up.

Load decode card when system boots up: Load the decode card automatically after you logged in.

Auto start record plan: System automatically enables all record plans once you logged in.

Auto pop up alarm information dialogue box: CADVR-CS pop up the alarm recode when alarm occurred.

Auto login the CADVR-CS: When CADVR-CS booted up, system uses the previous account to login the CADVR-CS.

Auto runs CADVR-CS when system boots up: After you PC completely booted up, system automatically runs CADVR-CS.

Hotkey Setup: Here you can set hot key for the operation button. Please note system default debug hot key is F12. Do not set the debug key when you set the hotkey button.

Displayed items in the right bar: System show which operation button by default.

Preview picture: Open image mode when preview. If you check the box, then the picture will be displayed in the system default program. If you do not check the box then it will displayed in the CADVR-CS.

Display alarm item in the interface: Here you can specify you most concern alarm items. Please refer to “device health statuses” for detailed information.

Automatically register service listening port: You can input listening port value here.

Get all devices health report enable: You can check the box to get all devices health report.

- Record basic setup

Snapshot picture path: You can specify image save default path.

Device free minimum space (MB): Once system reaches the threshold, system will overwrite the old files automatically.

Picture file name rule: You can specify image name rule in the dialogue box.

Record Time (M): Please select from the dropdown list.

Recorded file path: You can specify the file save path.

Recorded file name rule: You can specify file name rule in the dialogue box.

Downloaded file path: You can specify the download file

- Auto start monitor setup

Auto start project: The project to be run.

Project name: please input the project you wan to run automatically.

Auto start task: The task to be run.

Task name: Please input the task you wan to run automatically.

Last run: The previous task and project will become active after you successfully logged in the CADVR-CS.

Save last monitor status: System will restore the previous monitor status when it boots up the next time.

- Synchronization time setup

Auto synchronizes the PC time to the device: System automatically synchronizes the time of the front-end device.

Sync time: You can set the time for the synchronization function operation. (Please make sure you have enabled synchronization function.)

Auto restart device: Once the local PC time is earlier than the front-end device time, after the synchronization, front-end device needs to reboot to get the new time activated.

- Alarm record basic setup

Alarm record max amount: The max record amount in the alarm record window. System automatically overwrites the earliest record once the record is full.

Refresh interval: Here you can specify device health status update interval. Please refer to “device health status”.


Use pop-up window for alarm activation video: Once you check the box, system will pop up a new window to display the alarm activation video (not in the main interface). Please refer to “alarm activation video” for detail information.

Alarm video window amount: You can specify the window amount for the pop-pup alarm activation video window. Please refer to “alarm activation video” for detailed information.

Add disarming alarm message to the alarm record: Enable this function, system can add the disarming alarm message to the alarm record interface. Otherwise, system only displays the armed alarm message.

Alarm information output port: After you checked the box here, all the alarm information from the devices will be communicated with the peripheral applications via the port you set here.

Figure 3-29 Option

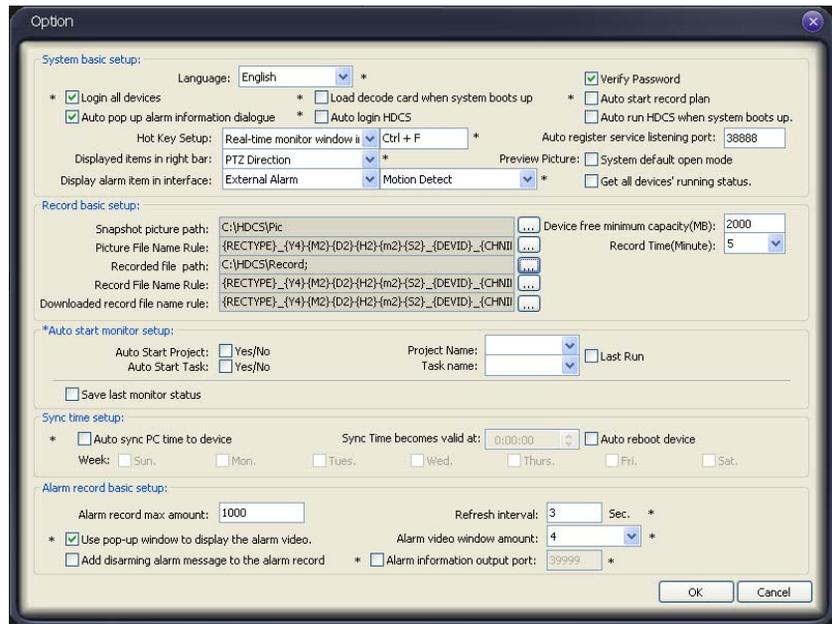


You need to reboot the system to activate the items with *!

Note You need to reboot the system to activate the items with *!

Click OK button, you can see a dialogue box shown as in 错误! 未找到引用源。 0.

Click Ok to reboot the CADVR-CS.

Figure 3-30 Reboot CADVR-CS

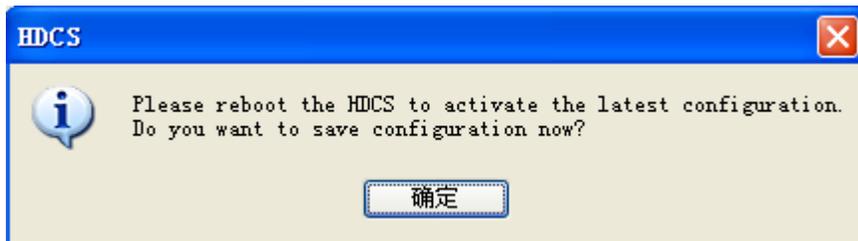

Right Tool Bar

System right tool bar is shown as in 错误！未找到引用源。1.


Figure 3-31 Right Tool Bar



Device List

Here you can view all the devices information you can configure. All logged in device channel have open. See 错误！未找到引用源。2.


Figure 3-32 Device List

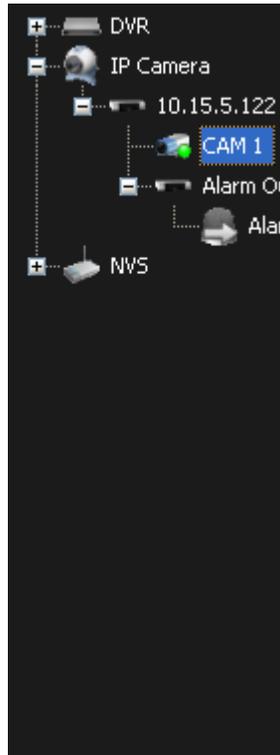

Select one device and then right click mouse, you can see device operation menu. It consists of four items: Log out/attribute/Audio talk mode/Advance. Please note the audio talk format and advanced is valid for logged in device only.


- Log out: log out current device.
- Attribute: Here you can view some basic device information such as title, IP and etc. See 错误！未找到引用源。3.

Figure 3-33 Device Attribute

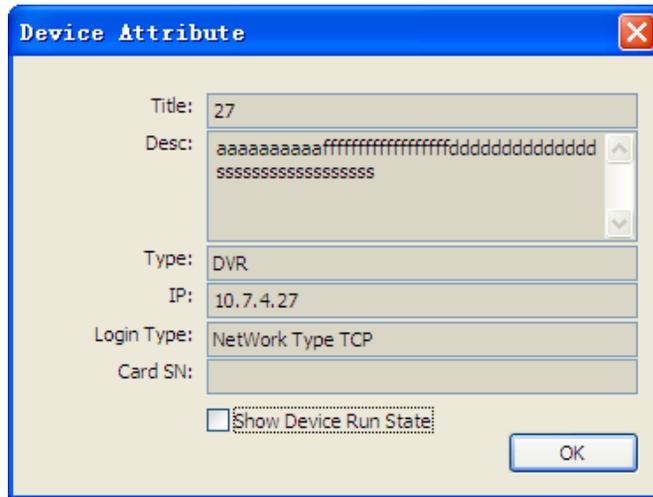

In 错误! 未找到引用源。3, check the “Show device running status” item, the interface is shown as below. See 错误! 未找到引用源。4.

Figure 3-34 Device Status

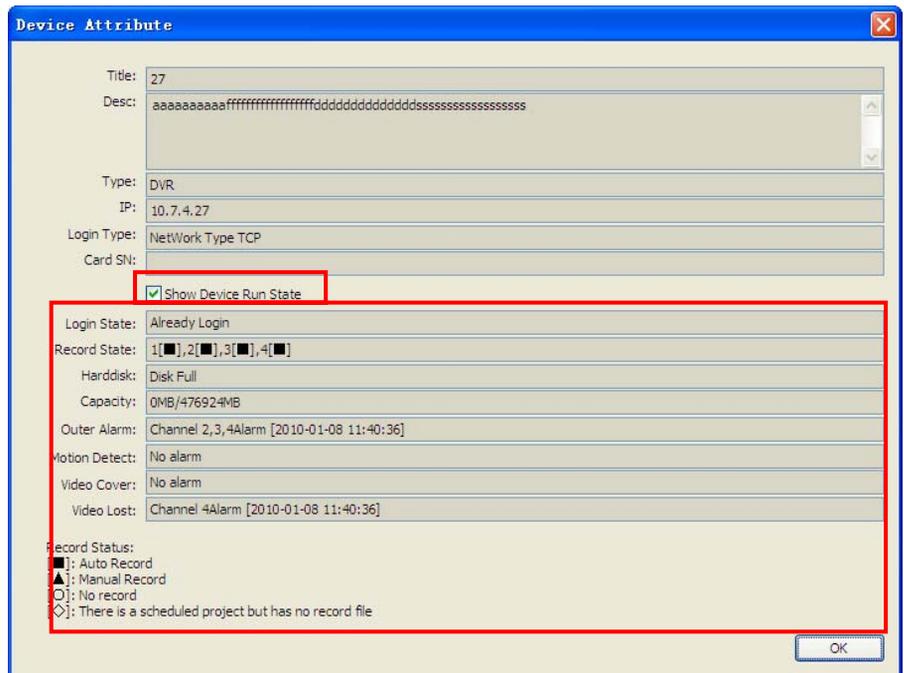

Important

Once you have checked the Get All Devices Health Report Enable in Option interface, you can not enable Show Device Run State function here.

- Audio talk format: System pops up the audio encode mode it supported. You can select the audio encode mode. The circle means there is audio talk in process. You can also right click mouse in one window to select the audio talk mode system supported.
- Advanced: It consists of synchronization PC/reboot/Device configuration.

Synchronization device time: it is to synchronize device time with the PC.

Reboot: It is to reboot current device.

Device configuration: Please refer to corresponding device user's manual for configuration information. Please note DVR does not support configuration function.

Please note one device supports only one audio talk operation. Once you have enabled audio talk function in decode device, you can not enable audio talk in device operation.

Audio talk mode G711U is for special device only.

PTZ Direction Control

If you want to use PTZ function, please make sure:

- Current device has PTZ function.
- You have proper right to control the PTZ.

If you still can not use PTZ function, please check device PTZ protocol is right or not.

Click the lock icon , the PTZ interface becomes independent and can overlay the specified screen as you desire.

The PTZ direction interface is shown as in [错误! 未找到引用源。5](#).

The step value ranges from 1 to 8. There are eight direction keys.

In the middle of the eight direction arrows, Click this button, system goes back to the single screen mode. Drag the mouse in the screen to adjust section size. When the mouse move from the up to the down, you can see the screen zoom in. When the mouse from the down to the up, you can

see the screen zoom out. Please note you need to use mouse to operate this function.

Here is a sheet for you reference.

Name	Function key	function	Function key	function
Zoom	—	Near	+	Far
Focus	—	Near	+	Far
Iris	—	close	+	Open

Figure 3-35 PTZ Direction




PTZ Advanced

Click PTZ advanced, the interface is shown as in 错误! 未找到引用源。6.

Figure 3-36 PTZ Advanced

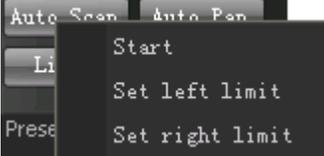


Parameter	Function
Scan	<p>Click auto scan button, the interface is shown as below.</p>  <p>You can set scan left limit and right limit and then start a scan. Move the camera to you desired location and then click left limit button. Then move the camera again and then click right limit button to set a right limit.</p>
Preset	<p>Use direction keys to move the camera to your desired location and then input preset value. Click add button, you have set one preset.</p>

Parameter	Function
Tour	<p>Click setup button, the interface is shown as in below.</p>  <p>Input auto tour value and preset value. Click add button, you have added one preset in the tour. Repeat the above procedures you can add more presets in one tour. Or you can click delete button to remove one preset from the tour.</p>
Pattern	<p>Click pattern button, the interface is shown as in below.</p>  <p>You can input pattern value and then click start record button to begin PTZ movement. Please implement camera operation. Then you can click stop record button. Now you have set one pattern.</p>
Aux	For some special functions, you need to use Aux button.
Flip	For camera supports flip function, system can turn video upside down and then collect.
Light	For most fixed cameras, it has its own light.
Wiper	For most fixed cameras, it has its own wiper.

Click AUX button, you can see the following interface. See 错误! 未找到引用源。7.

Figure 3-37 Aux Interface

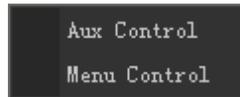


In 错误! 未找到引用源。7, click Aux control, you can see an interface is shown as in 错误! 未找到引用源。38.

Here you can send out the aux command to the remote PTZ.


Please click the cancel button to exit the dialogue box.

Figure 3-38 AUX Control

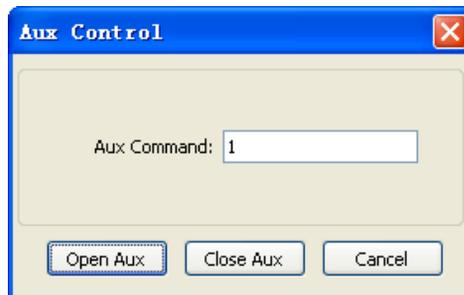

In 错误! 未找到引用源。8, click menu control, you can see an interface is shown as in 错误! 未找到引用源。39.

Figure 3-39 PTZ Menu Control

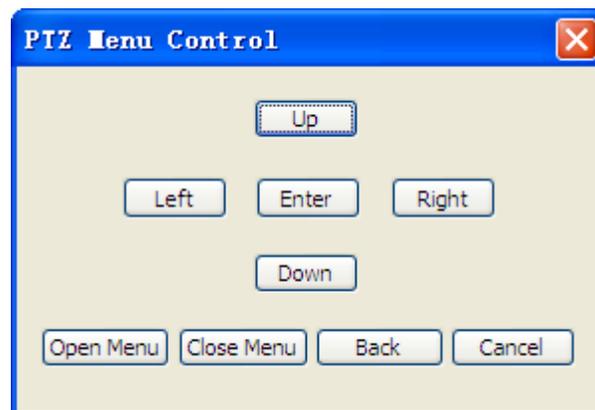

PTZ menu is from the internal PTZ device for you to control the PTZ. Click the open menu button, you can see the PTZ menu overlays the video window. See 错误! 未找到引用源。0.

Please make sure the real-time source device has the PTZ, and the PTZ has internal menu, otherwise you can not see the following interface.

Figure 3-40 PTZ Menu




The up/down/left/right is to for you to select the option item. Click enter button to confirm your current selection, execute corresponding function or go to the next menu.

Click back button to go back to the previous menu.

Click cancel button to close PTZ menu.

Tool

Click tool button, you can see the following interface. See 错误! 未找到引用源。1.

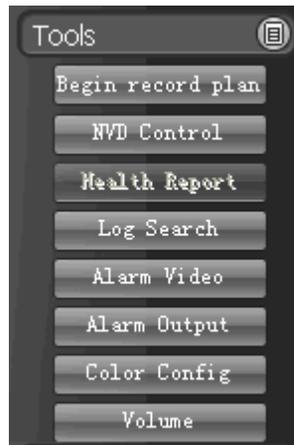Figure 3-41 Tools

Begin/Stop record plan

After you set the record plan, you can click this button to enable it. Once there is running record plan, the item becomes “stop record plan” button.

NVD Control

NVD is a hardware device. You can use NVD to output the video to the video wall or other devices. The interface is shown as in [错误! 未找到引用源。2](#).

This interface allows you to manage multiple NVDs. You can connect the NVD to the video source device you want and then control the NVD tour. You can also adjust the TV monitor the NVD connected to. Click the four buttons at the top of the interface, you can switch the operation type.

- Operation: Go to NVD operation interface to set the video source the decoded channel connected to.
- Tour: Go to tour control interface to set TV output channel tour.
- Decode tour: Go to decode tour interface to control the tour between the decoding channels.
- TV adjust: Go to TV adjust interface to set the TV output video.


It consists of four sections.

- Section1: It is decoder control zone. The four big pane is the four video output channels. The four small windows in each pane is the four decoded channel of the video output channel(it is the four video window in

the monitor it connected to). You can double click the small window to switch to 1/4 window display mode.

- Section2: It is the device list. Here you can view the NVD name the CADVR-CS currently controls.
- Section3: Here you can view two buttons login (logout)/NVD manage.
 - Log in/Log out: You can click it to log in or log out the device.
 - NVD manage: Please refer to “NVD Manafement” for NVD manage information.
- Section4: Video device list. Open the video and then drag the corresponding channel to the decoder output channel, the decoder can output the video from current channel to the specified device. Here you can also select stream type from the dropdown list. The options include: main stream/extra stream.

Figure 3-42 NVD Control

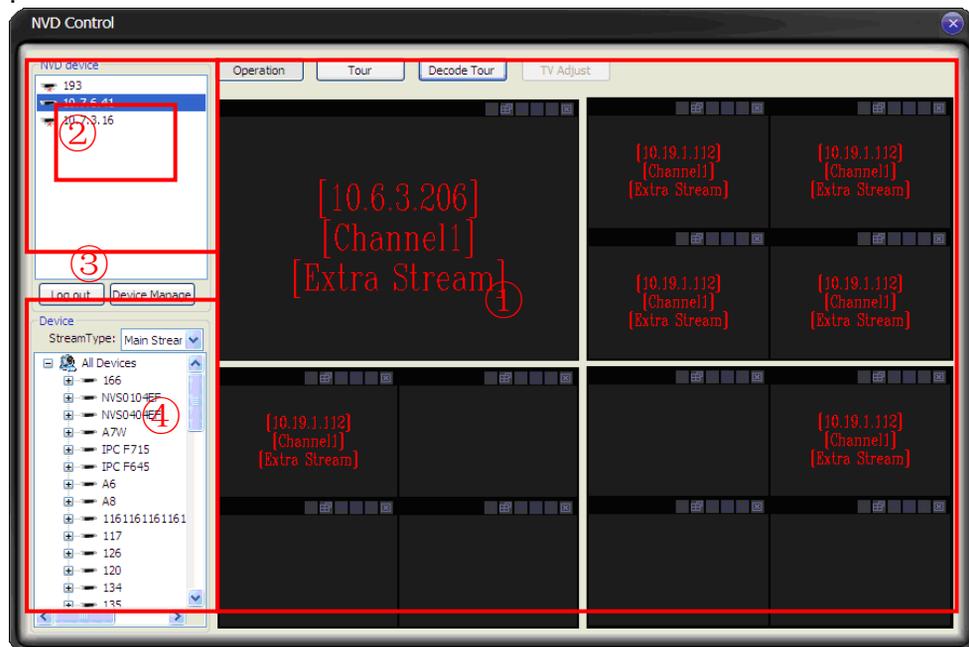


Tour

Click the tour button, the interface is shown as below. See 错误! 未找到引用源。3.

- Search: Search the selected TV output tour setup of current NVD device.
- Add: Add current tour information to the TV output channel of current device.
- Delete: Click it to remove the selected tour setup information.
- Delete all: Click it to remove all tour setups of current TV output channel.
- Tour: Click it to begin the tour setup.
- Interval: The operation interval between the tour setups.

Figure 3-43 NVD Control Configuration

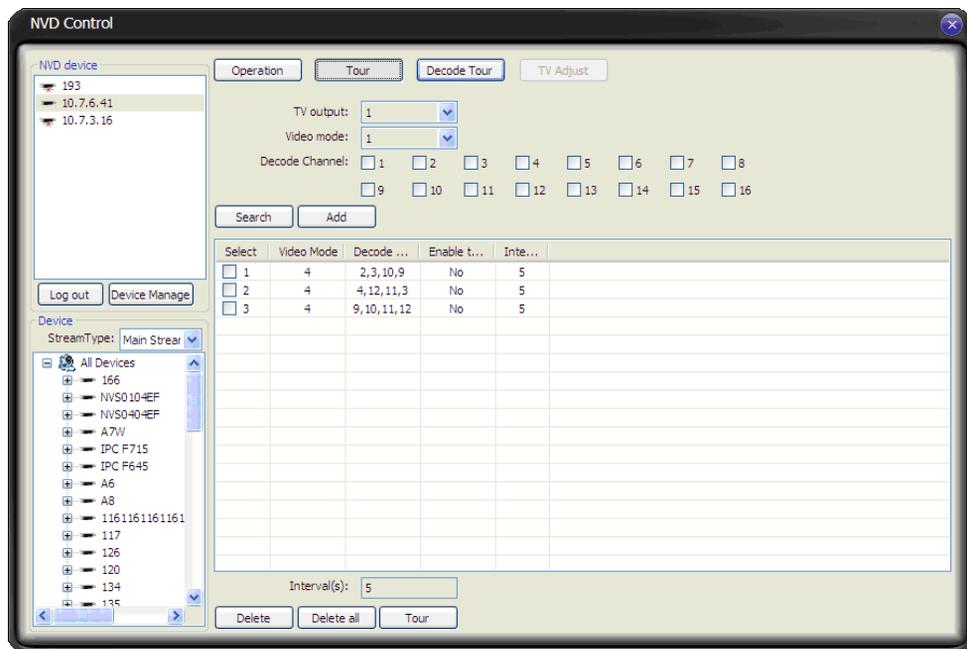

Decode Tour

Click decode tour button, the interface is shown as in **错误! 未找到引用源。** 4.

NVD device: Here you can view the NVD device you selected from the NVD device tree.

Decode channel: Here you can select the decode tour channel of the NVD device.

Stay time (s): Here you can select the interval between the decode tour. It is the video stay time in each channel.

Video channel: You can drag the video channel on the left corner to the column here and then release to set the video channel information.

Add: Click it a odd current video channel tour information to the list.

Update: Update the list to the latest information.

Cancel: Restore the video channel information. Do not save current modification.

Delete: Click it to delete the selected item in the list.

Delete all: Click it to delete all the items in the list.

Save: Save the latest setup information in the remote NVD device.


Pause: Pause the decode tour operation of the remote NVD device.

Resume: Restore the decode tour operation of the remote NVD device.

Stop: Stop the decode tour operation of the remote NVD device.

Start: Begin the decode tour operation of the remote NVD device.

Figure 3-44 Decode Tour

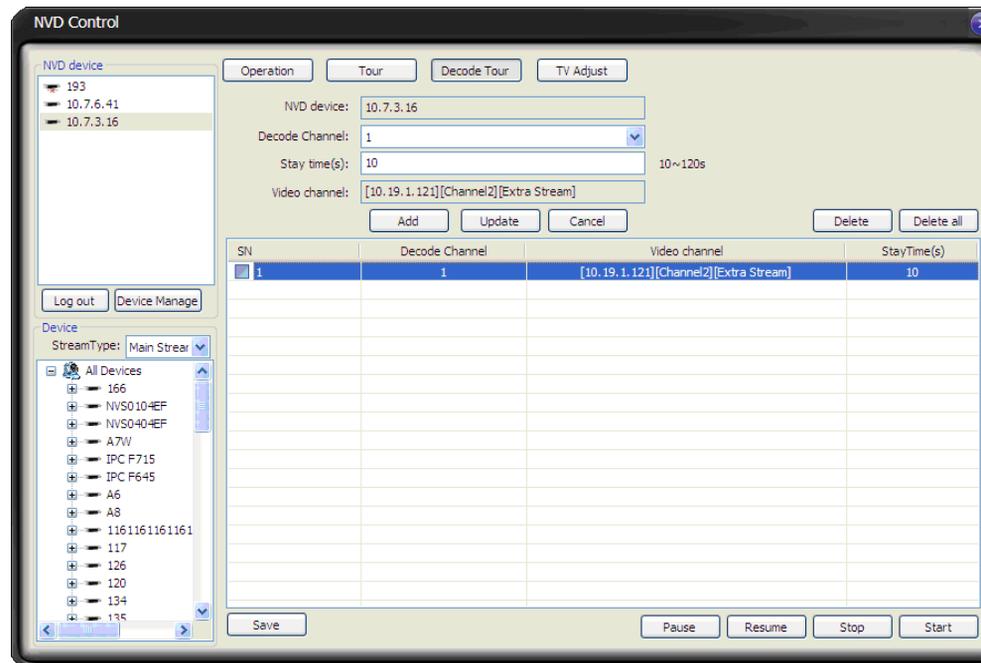

TV adjust


Click TV adjust button, the interface is shown as below. See 错误! 未找到引用源。.

Please select a logged in NVD from the list on the left pane and then select a output channel from the TV output list on the right pane. When you are viewing the video of the output device the NVD connected to, you can use the control at the right bottom of the pane to adjust the video output window margin.

Important

Before operation, please make sure current NVD has logged in and the device supports TV adjust function. Otherwise you can not see the following interface.

Figure 3-45 TV Adjust

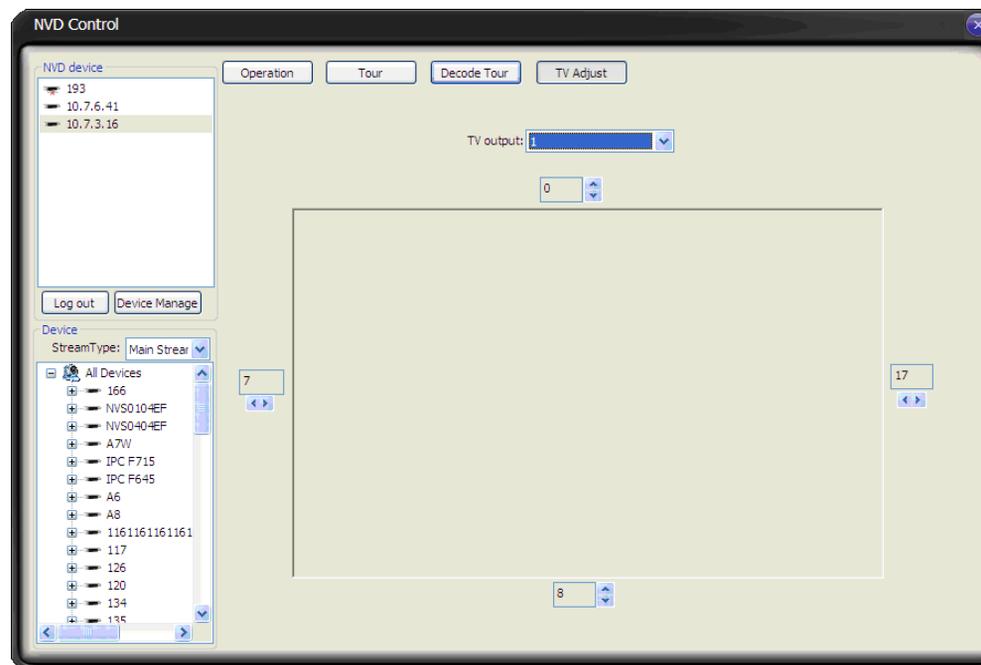

Health Report


Please note, you need to go to "Option" to check the "Get all devices health report enable". Otherwise you can not see the following interface.

Health report interface is shown as below. See 错误! 未找到引用源。6.

There are four sections.

- Section1: Detail running information of all devices.
- Section2: Once you enable auto refresh function, system can auto update list regularly.
- Section3
- Refresh: Click refresh button to view latest running status.
- Export: click it to export current running status to the specified file.
- Section4: Record status icon samples.

Figure 3-46 Health Report

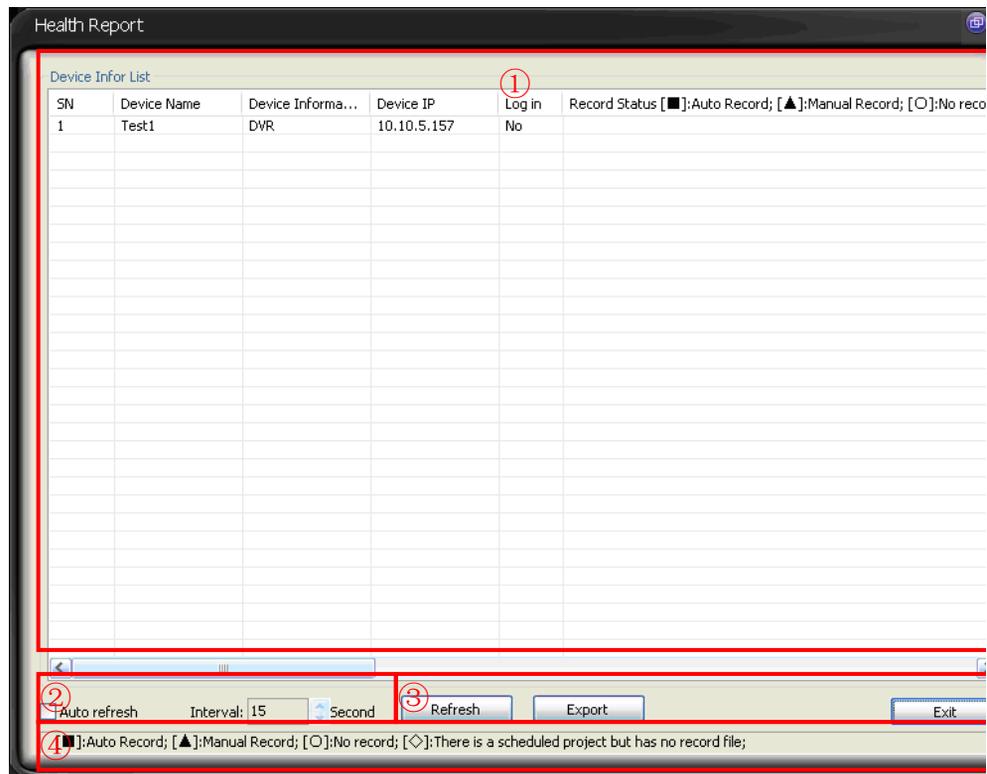

Log Search

System displays the log information according to the filter (such as user, time, type and etc.) you set. See 错误! 未找到引用源。7. There are max 1000 logs in one page.

User: Select the user name here. Please note admin can select log of all users while the ordinary user can only search its own log.

Date: Here you can specify the log date.

Log type tree: Here you can select the log type you want to view.


Export: Click you can specify the path to save the log files to your local PC.

Previous page: Click it to view the previous 1000 logs.

Next page: Click it to view the next 1000 logs.

Cancel: Click it to exit log search interface.


Figure 3-47 Log Search

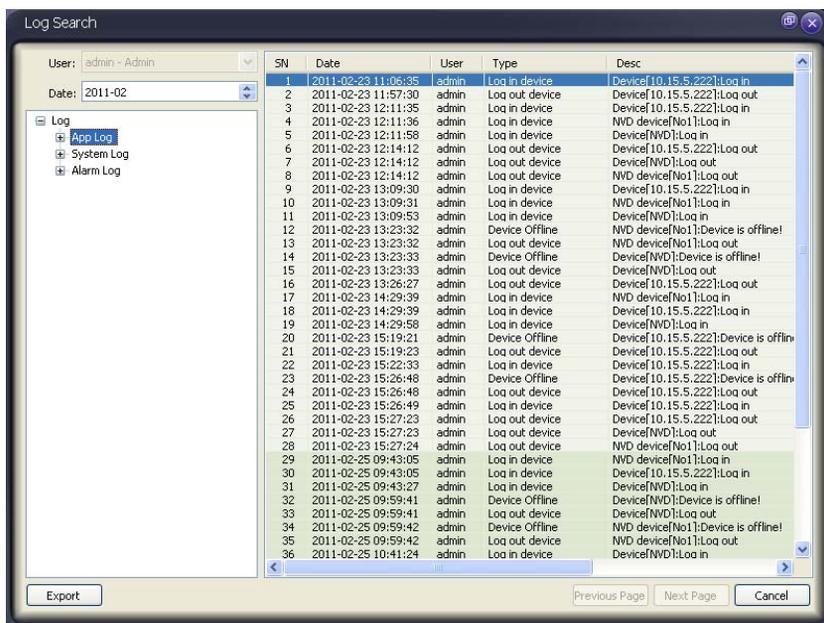


Alarm Activation Video

Please note the following interface is a pop-up window to display the alarm activation video. See 错误! 未找到引用源。48.

Figure 3-48 Alarm Activation Video

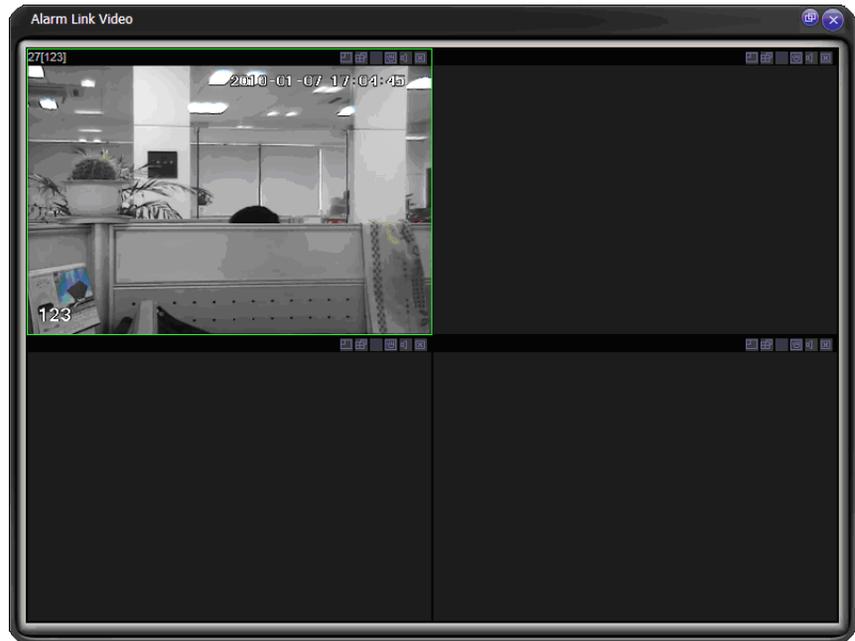


Please go to "Option" to enable this function and set the corresponding window amount. See

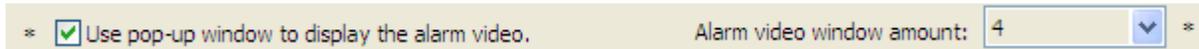

The alarm activation video will be displayed in the pop-up small window one by one. If there is no idle window, the new alarm activated video will replace the previous one.

You can see the following interface if there is displayed activated video. See 错误！未找到引用源。49.

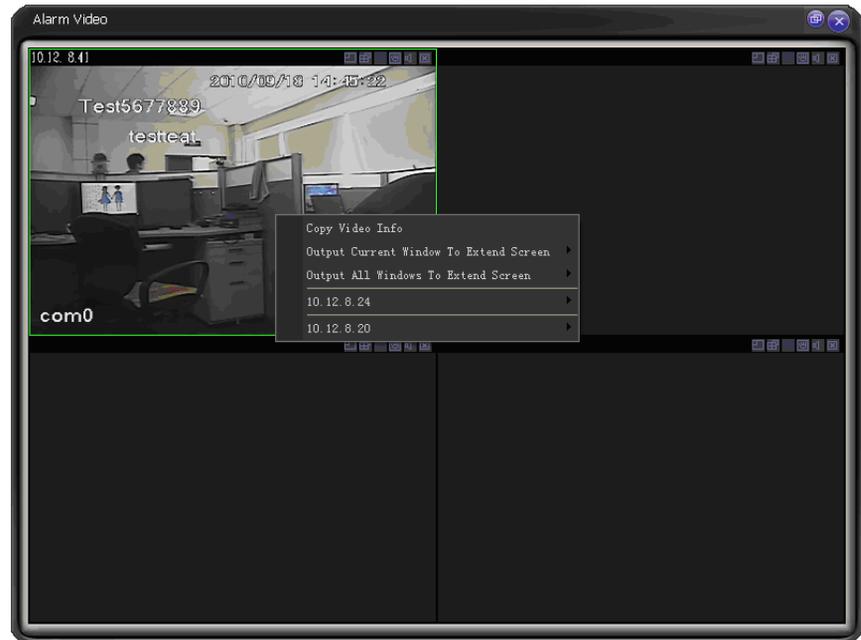Figure 3-49 Alarm Video

Copy video information: Click copy video information button first, then go to the main window and NVD control interface and right click mouse. Now you can see there is an option allows you to paste video information button. Select the paste video information; you can see the alarm activation video in the corresponding window.

Output current window to the extension screen: There are several extension screen names. You can click the corresponding name to output the current window to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)

Output all windows to the extension screen: There are several extension screen names. You can click to output all windows to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)

10.12.8.24 and 10.12.8.20 (The IP address here is for example only. Please make sure you have connected to the decoder or the SNVD, otherwise you can not see the corresponding item.): These are the decoder and SNVD name that has logged in. You can select the connected screen name of the corresponding device from the dropdown list to output the alarm activation video to the specified screen.




“Copy video information” means copy the link between DVR and PC, and not contains the configuration of the channel. That is to say, if you copy the video in Channel 1 with High Quality to Channel 2, Channel 2 is still Low Quality. Because the it is Low Quality in default.

Alarm Output Control

Click the alarm output control button, the interface is shown as in 错误! 未找到引用源。0.

Here you can enable or disable the alarm output ports of all logged in devices.

Figure 3-50 Alarm Output

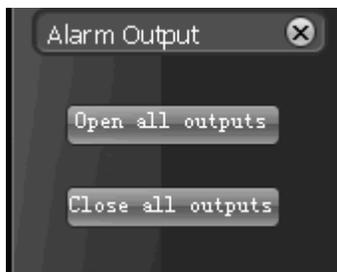

Color Configuration

Color setup interface is shown as in 错误! 未找到引用源。1.

Here you can adjust the brightness, contrast, saturation, hue of the specified window in the main interface.

You can click default button to restore default color setup.

Figure 3-51 Color Configuration



Volume


The volume interface is shown as in 错误! 未找到引用源。2.

There are three function buttons:

Sound box volume control, microphone volume control and close alarm audio.

Close alarm sound function is to disable sound when there is device alarm.

Figure 3-52 Volume

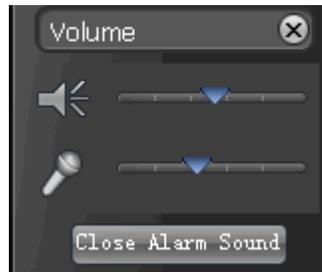

Setting Manage

Setting manage menu is shown as below. See 错误! 未找到引用源。3.

Figure 3-53 Setting Manage

Scheme and Task (Task and Project)

Monitor task is a series operation to open the video. If current camera supports PTZ, then system can go to specified preset.

Monitor project: It consists of several tasks.

Please note you need to create task first and then create a project.

In the task list column, you can view all configured task names.

In monitor item column, you can view the detailed information of selected task.

Please note, when system is in modification mode, you can not modify the task name.

Task

Task interface is shown as in [错误! 未找到引用源。4](#).


- Task list: Here you can view task name. Select one name, you can view corresponding information on the right side.
- New: Click it you can see an interface is shown as in [错误! 未找到引用源。5](#). Here you can create a new task.

Preset: When you open the monitor, system can go to the specified preset. The default preset value is N/A

Bit stream type: if device supports extra stream, you can set the bit stream when open the video.

Monitor item: Here you can view task detail information. System begins task from number 1 to number 2 and then go on. You can use Up/Down button to adjust the monitor task sequence.

Figure 3-55 Task Configuration

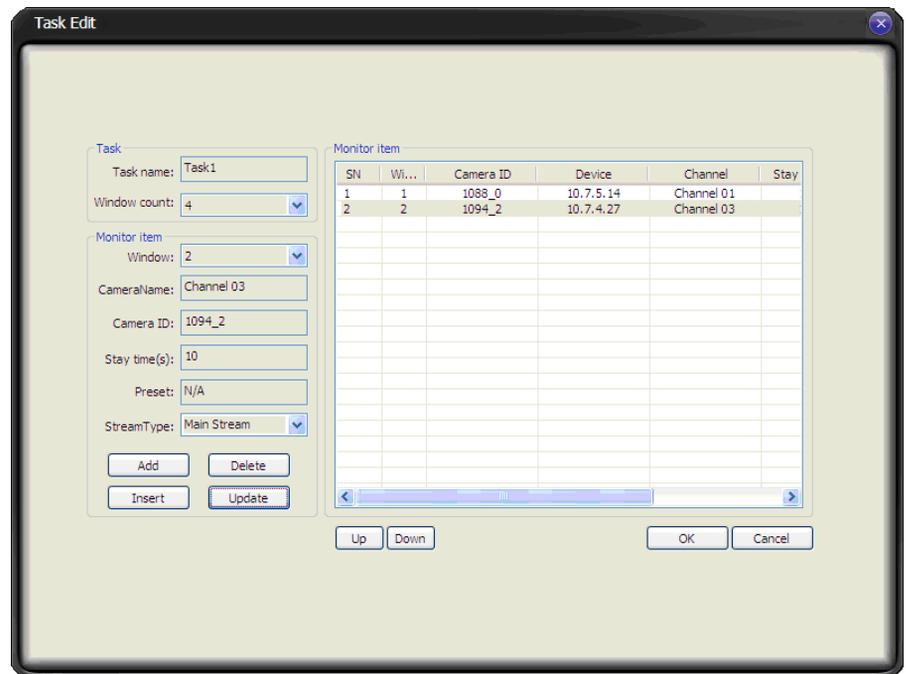

Project

Monitor project interface is shown as in 错误！未找到引用源。6.

Project list: Here you can view all set project names.

Project item: Here you can view selected task detailed information.

New: Click it you can see an interface is shown as in 错误！未找到引用源。7. Here you can create a new project.


Modify: Modification interface is shown as in 错误！未找到引用源。7. Please note you can not edit project name.

Delete: You can click it to remove one project.

Import: Import the saved project XML file to current list.

Export: Export current project list to specified xml file.

Figure 3-56 Project

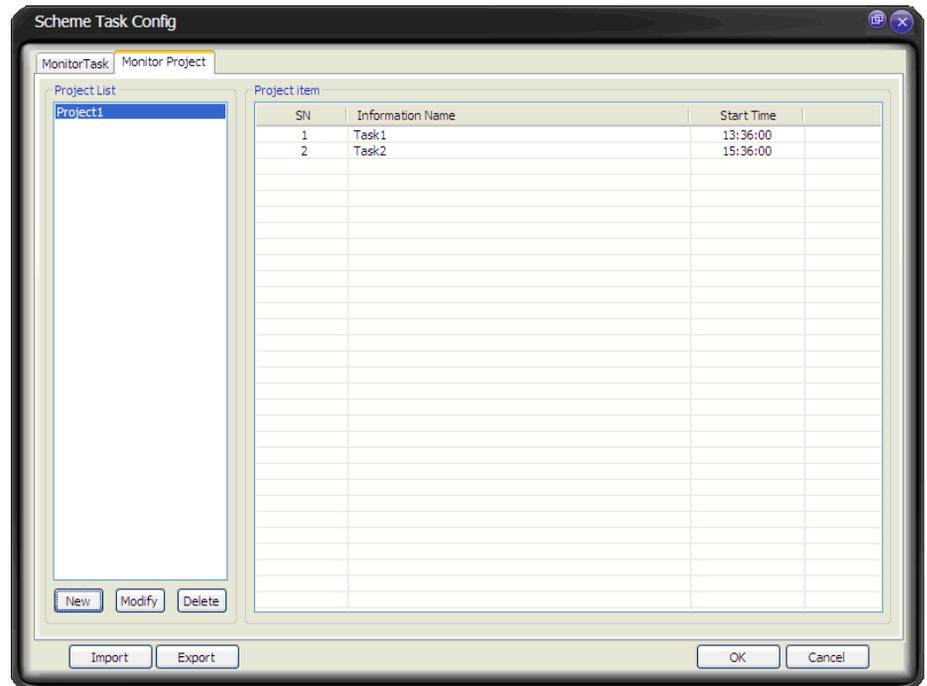

Click modify button, the interface is shown as in [错误! 未找到引用源。7](#).

Please note, in modification mode, you can not modify project name.

Monitor project mode: It includes two modes: schedule mode and tour mode.

- Schedule mode: In this mode, the monitor task will begin activated in the time you specified.
- Tour mode: In this mode, you can specify the monitor task interval time. The system will begin the task one by one according to the period you specified and in accordance with the sequence you arranged. System will repeat the procedure again and again once it completed the last task.

Task name: Please select the task to be run.


Start time: Please select the task start time (For schedule mode only).

Interval: please select the task running time (For tour schedule mode only).

Up and down button is to adjust the monitor task sequence.

Please click **save** button to exit.

Figure 3-57 Project Configuration

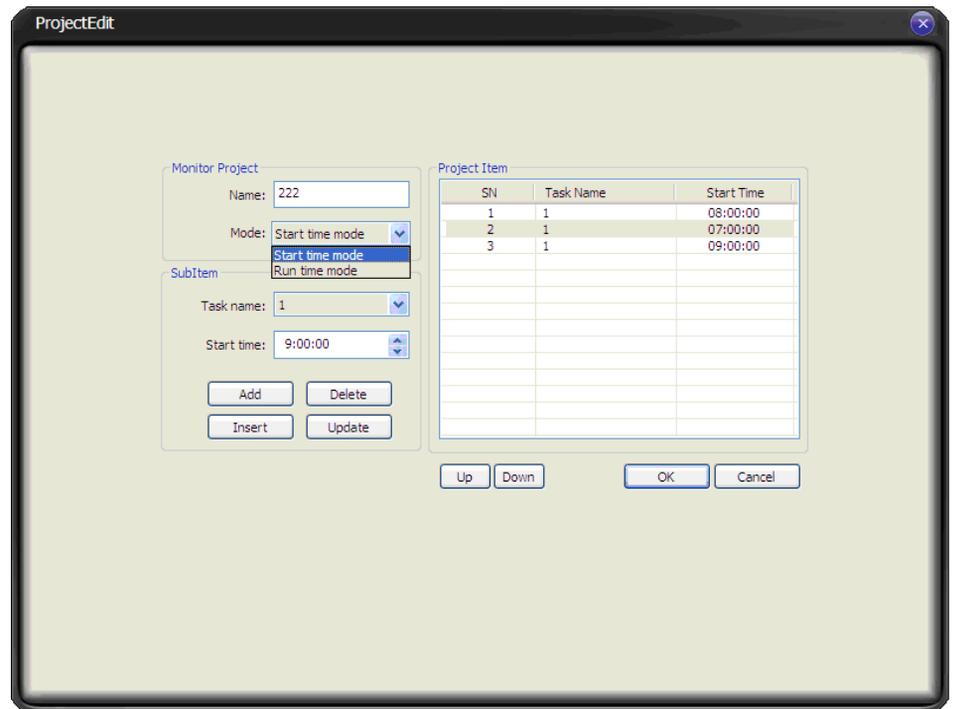

Record Plan Configuration

The record manage interface is shown as below. See 错误! 未找到引用源。 58.

- Pack duration (m): System can generate a recorded file when record plan is running. You can input pack duration here.
- Record plan list: The record schedule in the record plan.


In the below, you can view the valid record period of current camera.

Double click time bar or the list column, you can modify schedule period for current camera.

Please note, if you want to modify the plan, you can not modify the device information and channel information.

At the bottom of the interface, the green period means there is record plan in the specified time. Double click it to see the record plan edit interface.

Figure 3-58 Record Plan Configuration

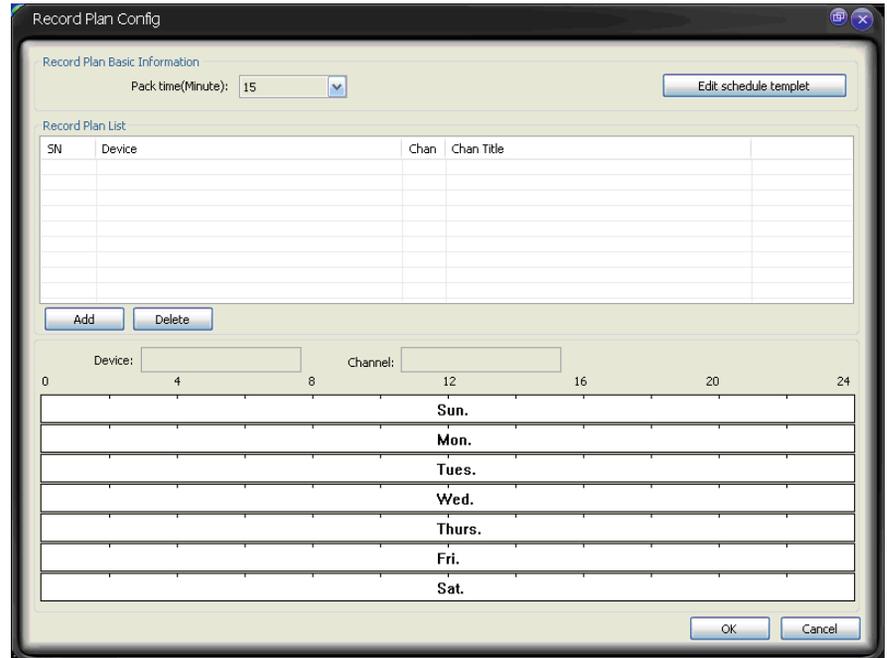


Edit Schedule Template

In 错误! 未找到引用源。58, click edit schedule template, you can see an interface is shown as below. See 错误! 未找到引用源。59.

You can select schedule template here. Please note you can not modify or remove empty template/all day template.

You can view detail template information on the left side.

Figure 3-59 Schedule Template

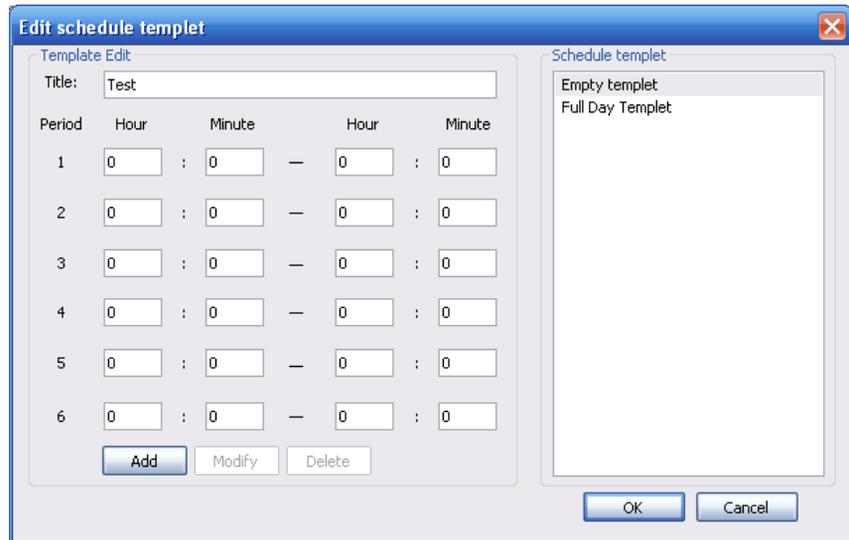

In 错误! 未找到引用源。 , click add button, the interface is shown as in 错误! 未找到引用源。 0.

- Device: You can select from the dropdown list.
- Channel: You can select from the dropdown list.
- “<-one week” is to apply the selected schedule setup to the whole week.
- “<-” is to apply the selected schedule to the corresponding date(Sun to Sat.)

You can select one templet on the right and then click edit schedule templet button to modify it.


Figure 3-60 Schedule Template Configuration



Alarm Manage

Here you can set corresponding alarm setup. You can go to "Option" to set the max alarm record amount. See 错误! 未找到引用源。1.

Figure 3-61 Alarm Manage

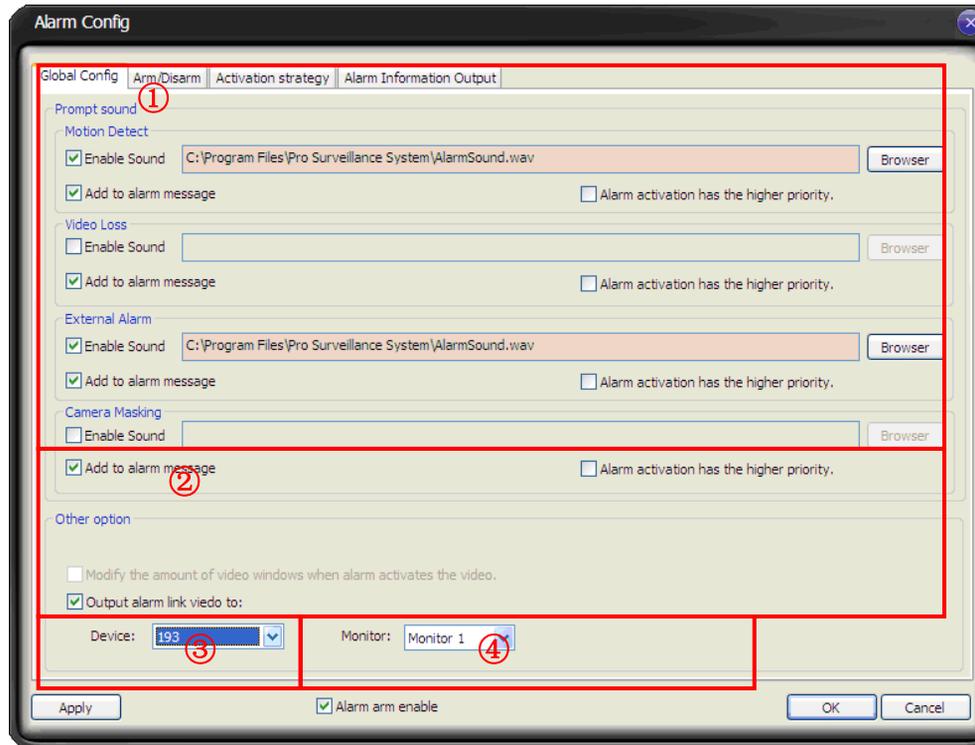

Global Configuration

Global Configuration interface is shown as in [错误！未找到引用源。](#) 1.

Section 1

- Enable sound: Please draw a circle to enable sound function and then click browser button to select corresponding sound file.
- Add to alarm manage: Display in alarm information window: You can enable this function to add alarm message to alarm record window.
- Alarm activation has the higher priority: Please note once there is new alarm, alarm activation video will be switched to display the new one no matter the previous alarm display interval is over or not. You can check the box to enable current function.

Section 2 Other option

- Modify the amount of the video window when alarm activates the video: When the alarm activation window index is more than the monitor window amount, system cam automatically change the window amount to display

the activation video. Please note this function is invalid if you have checked the box Use pop-up window to display the alarm video. in “Option”.

- Output alarm activation video to: This function allows you to output the alarm activation video to the specified output device (besides display in the CADVR-CS interface). Please check the box to enable this function first. Then you can select a device(NVD/SNVD) and monitor from the dropdown list respectively. Please make sure you have enabled

Use pop-up window to display the alarm video. in “Option”. otherwise this function is disabled.

Section 3

- Apply: Click it to apply current setup.
- Section 4
- Alarm arm enable: You can enable this function to use alarm setup. Otherwise the alarm setup is null.

Arm/Disarm

Arm/disarm interface is shown as in 错误！未找到引用源。 .

Section 1: You can see arm has four types: Motion detection/video loss/Camera masking/External alarm.


Section 2: Here you can set the alarm arm to the corresponding channel. You need to check the box to enable the function, otherwise you can not see the corresponding operation in Global configuration

You can select corresponding setup to the specified channel.

Section 3: Apply: Click it to apply current setup.

Section 4: Alarm arm enable: You can enable this function to use alarm setup. Otherwise the alarm setup is null.

Figure 3-62 Alarm

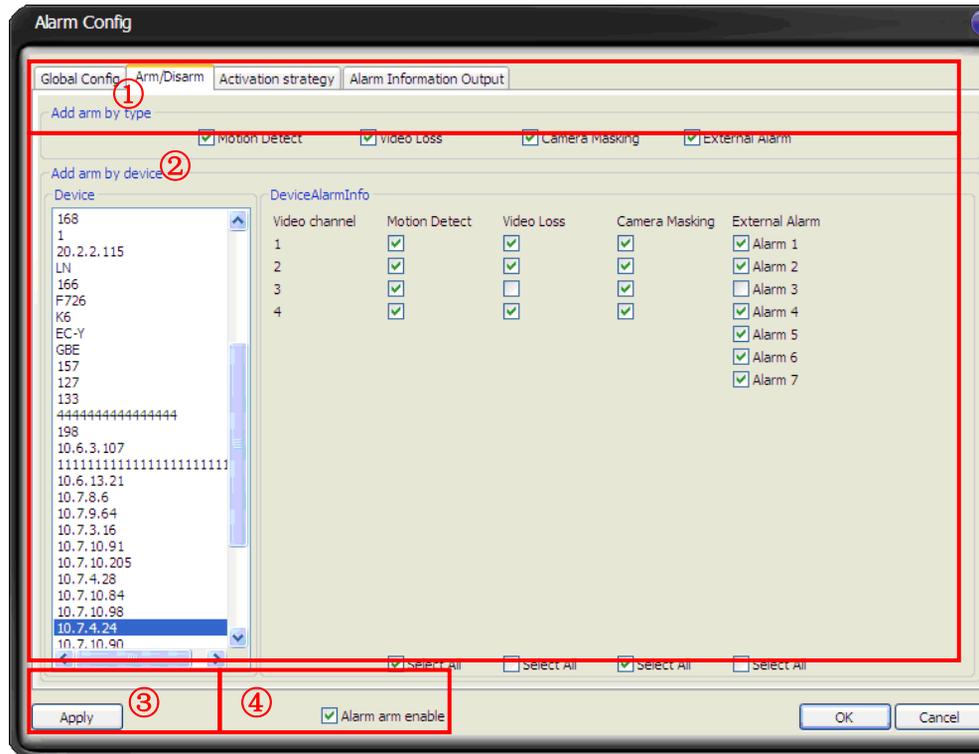

Activation Strategy

Activation interface is shown as below. See 错误！未找到引用源。3.

Section 1

- Alarm device: In the alarm device list, you can view the alarm sourcing device. You can set several activation operations for one alarm sourcing device.

Section 2

- Type: You can select the activated alarm type from the dropdown list.
- Resume previous video after alarm ended: The activation alarm can open the video in the specified window. The video stays for the specified time and then restore previous video.

- Display alarm prompt in the video window: The icon  pops in current alarm window when alarm occurs. (On the top left).


Section 3

- Channel: You can select the activated channel when alarm occurs.
- Window: You can select the monitor window serial number. The activated channel video will be displayed in the specified window.
- Stay time(s): The activated video duration.
- Preset: If current channel connected to the PTZ, and you have set the preset, then system can go to the specified preset once alarm occurs.

Section 4

- Here you can view current existed actions. It is the alarm activation list of the channel of the device you selected.

Figure 3-63 Alarm Configuration

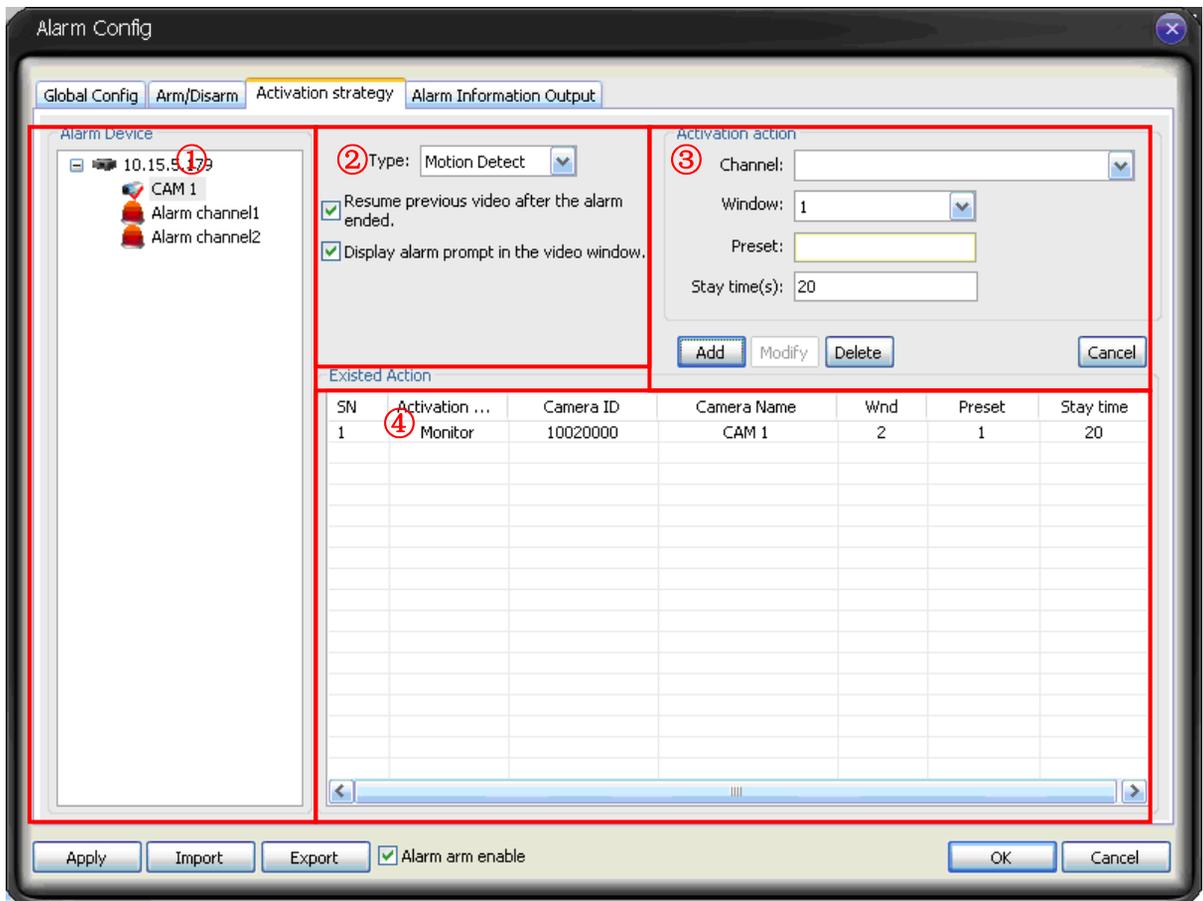

Alarm Information Output

The alarm information output interface is shown as below. See 错误! 未找到引用源。 4.

Alarm information tree: Here you can view the alarm sources of all devices.

Additional information: Here you can set the additional information when output the alarm information. It is very useful for the peripheral devices to recognize and process the alarm.

Add: After you selected the alarm source(s) on the left panel, you can click the add butt to add the alarm source(s). Please note when you add multiple alarm sources at the same time, the additional information is the same.

Existed action: You can view alarm source setup here.


Delete: After you selected an item (or items) in the existed action panel, you can remove the setup from the list.

Alarm information output rule: Here you can set the string format of the alarm information.

Enable other alarm type information output: Once you checked the box here, all the other alarm (such as HDD alarm) will be output to the peripheral applications.

Additional information for other alarm type information: Here you can set the additional information for the other alarm type.

Figure 3-64 Alarm Info

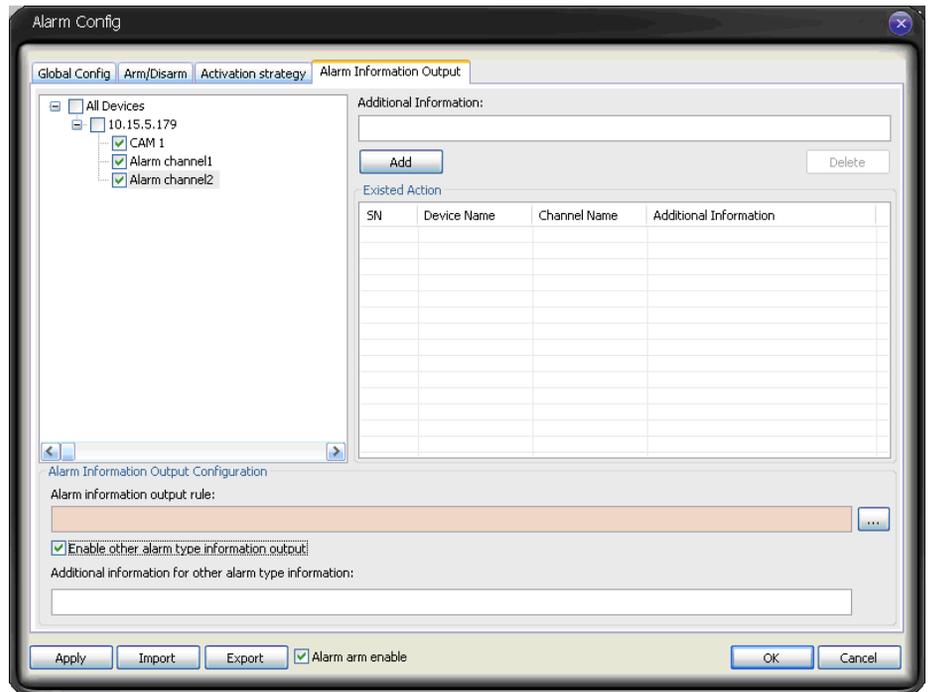


Alarm Record Plan

Alarm record plan interface is shown as in 错误！未找到引用源。5.

Here you can set various alarm activation record for he same arm period. You can use the schedule templet to set continently. You can view there is a circle for the selected channel.

Please go to playback interface to search the alarm record .

Figure 3-65 Alarm Record Plan

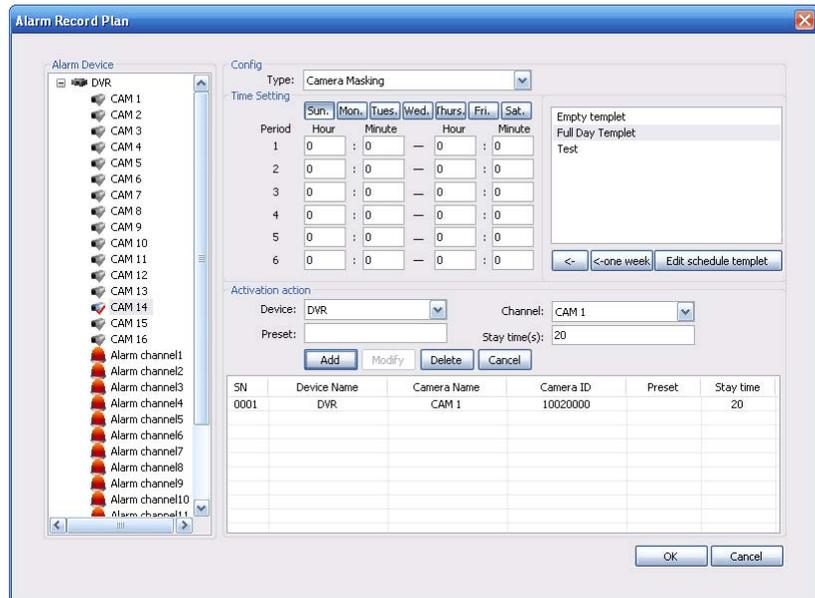

E-map

System provides three modes to display E-map node: Thumbnail /Device tree/E-map.

If it is you first to use e-map, you need to create one first. Please refer to “Option” for e-map loading path.


The e-map interface is shown as below. See 错误! 未找到引用源。6.

Figure 3-66 E-map Configuration




In 错误! 未找到引用源。6, click picture edit button, you can see the following interface. See 错误! 未找到引用源。7.

Figure 3-67 Add E-map 6-1

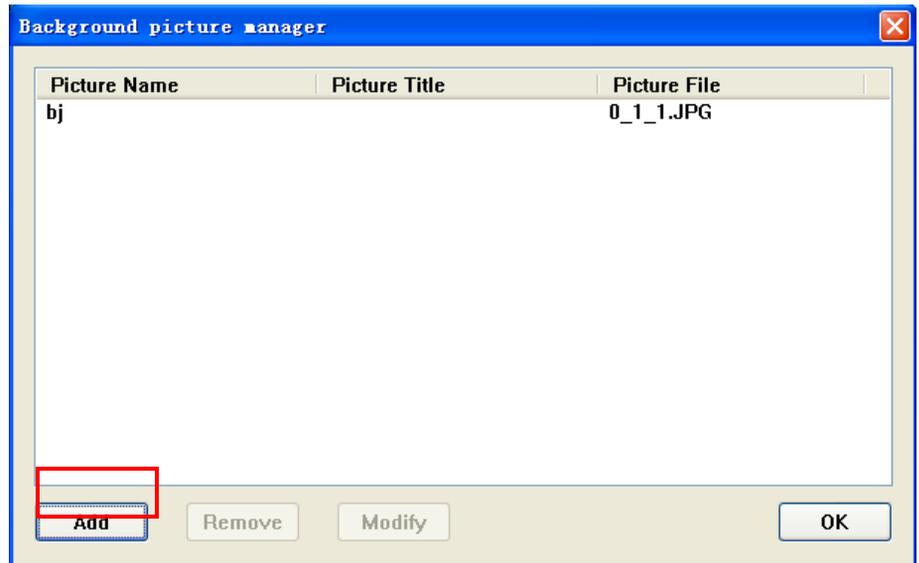

Click add button, you can see an interface is shown as in 错误! 未找到引用源。68. Here you can input picture name (such as Shanghai Map), picture description and then select picture path. Please click OK button to save current setup.


Figure 3-68 Add E-map 6-2

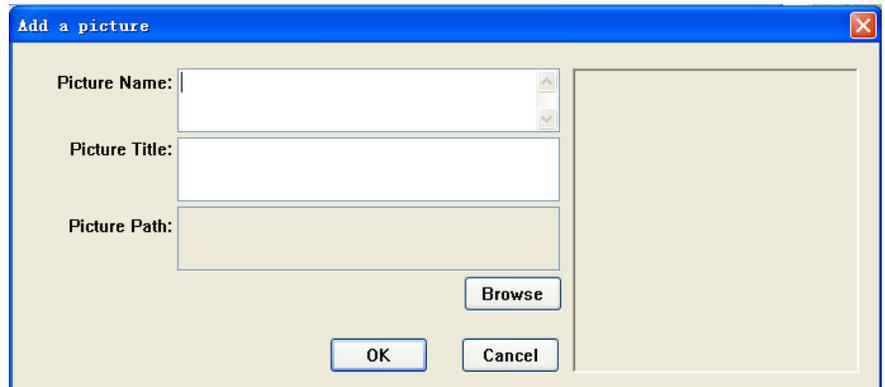

After you completed the above steps, the interface is shown as below. See 错误! 未找到引用源。69.

Please click OK to exit.

Figure 3-69 Add E-map 6-3

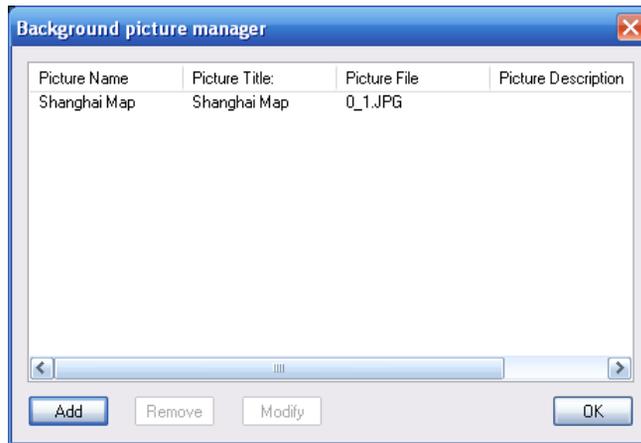


Now please click picture button, then you can see you have added an e-map. See 错误! 未找到引用源。0.

Figure 3-70 Add E-map 6-4



In 错误! 未找到引用源。0, left click e-map name and then drag it to the display section. Now you can see an interface is shown as in 错误! 未找到引用源。1.


Figure 3-71 Add E-map 6-5

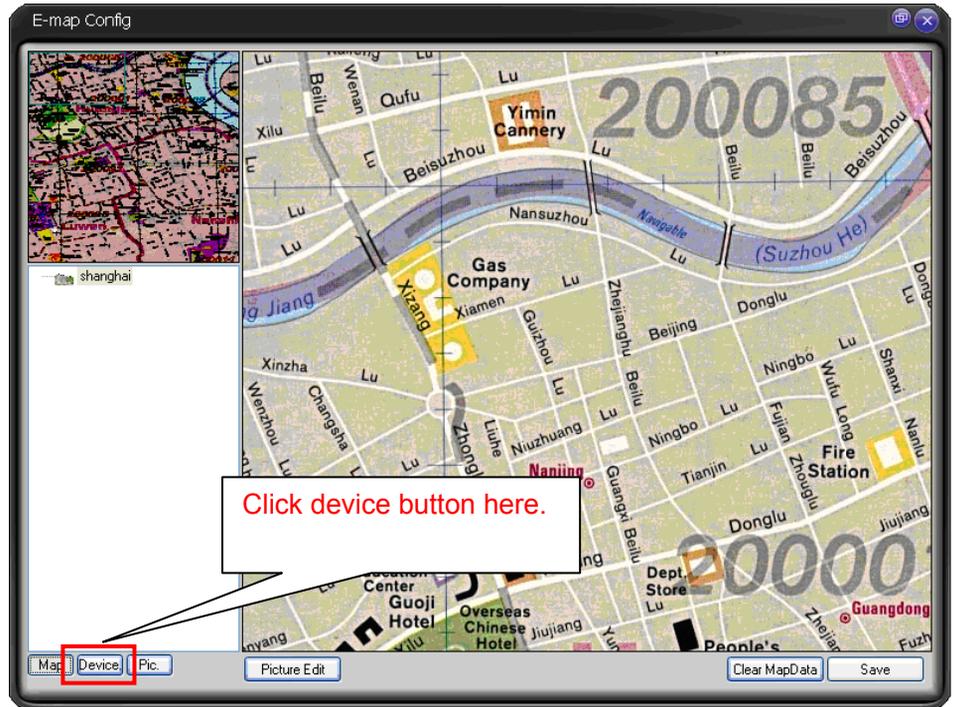

In 错误! 未找到引用源。 1 click device button, and then drag the channel number to the e-map and then release. You can see the following interface. See 错误! 未找到引用源。 2.

You can see you have added a camera in the e-map (CAM4)


Figure 3-72 Add E-map 6-6

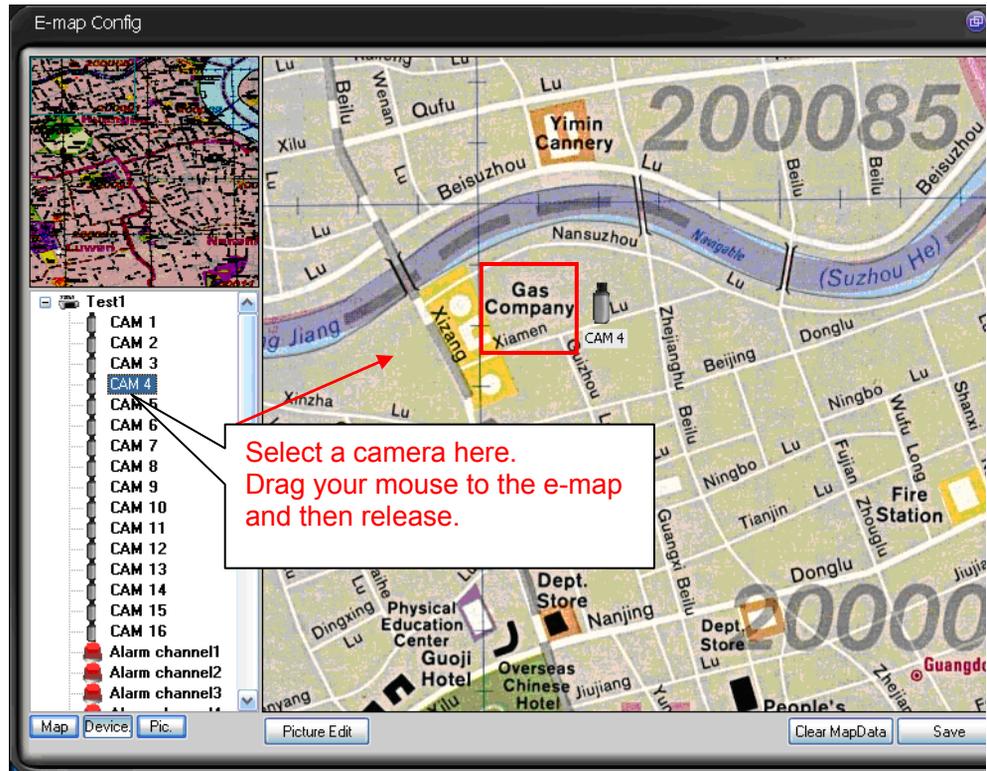

Click clear map button, system pops up a dialogue interface. See 错误! 未找到引用源。3.

Click Yes button to remove current e-map.

Figure 3-73 Clear Map

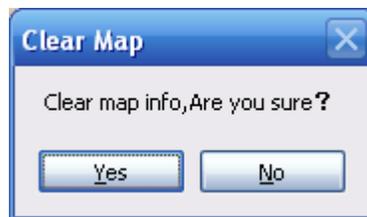

Tip:

Move the green rectangle icon in the preview section; you can view different e-map content in display section.

You can repeat the above procedures to add a sub-map.

If you want to implement multiple sub-e-maps setup, you can follow the procedures below:

- Open one map such as map1.
- Click picture button and drag map 2 to anywhere in map1.
- Click map button and click map 2 to open current map
- Double click device name on your right side to add one device to map 2.
- You can view newly added e-map and device list in the map list section.
- Click save button, now you have added one sub-map and its device.

Please note, you can not use remove or modify the E-map that you set to use right now.

Camera Property

Right click the camera in the e-map, you can view there are three options: Edit property/property/remove.

Click property button, you can see an interface is shown as in 错误! 未找到引用源。 .

- ID: Camera ID.
- Device: The device IP.
- Title: Camera description information
- Type: Camera type.
- Channel: The channel serial number in the device.
- Direction: This item is for general camera. It can be modified. IPC, speed dome and alarm device do not have this item.

Figure 3-74 Camera Info

Camera Information

ID: 10010001

Device: 10.15.5.100

Title: CAM 2

Type: General Camera

Channel: 2

Direction: Up

Pos:

X: 130

Y: 204

OK

Right Mouse Menu

In the e-map or at the e-map no, right click mouse you can see there are some items:

- Edit property: System pops up the property dialogue box. It applies to general camera and the e-map node only.
- Property: system pops up property interface. It is for reference only, you can not modify.
- Remove: Click it to remove the node from current E-map setup.
- Go to sub-e-map: If current e-map is the parent e-map. Select this item you can go to the sub-e-map. Current display window shows the sub-e-map content.
- Go parent: If system is showing sub-e-map content, you can select it to go to parent e-map. Click it, the parent-e-map is displayed in current window

Decode Card Configuration

The decode card is one of our series products. The decode card can greatly reduce CPU resources.

Before setup, please make sure you have installed encode card, and you have enabled the “loading decode card when CADVR-CS booted up” in the configuration interface. Please refer to “Option” for detail information..


The decode card manage interface is shown as in [错误! 未找到引用源。6](#).

You can see there are five sections.

Please refer to the following sheet for detail information.

SN	Item	Function
1	Window SN	The video displayed window serial number.
	Area mode	Display window split mode (The drop down list may vary according to the different decode card series.) See 错误! 未找到引用源。5 .
2	Display channel	It is a decode card TV output serial number.
	Binding	Binding decode card TV output serial number and the video displayed window.
	TV/VGA	There are two options. You can output to the TV device or VGA device.
3	Output video offset	When decode card is output, sometimes the image may be offset. Please adjust the left and right limit to locate it in the middle. The pan value ranges from 0 to 800 and the tilt value ranges from 0 to 600.
4	Decode card binding information list	This interface is for reference only.
5	Brightness	You can adjust decode card brightness value.


Figure 3-75 Decode

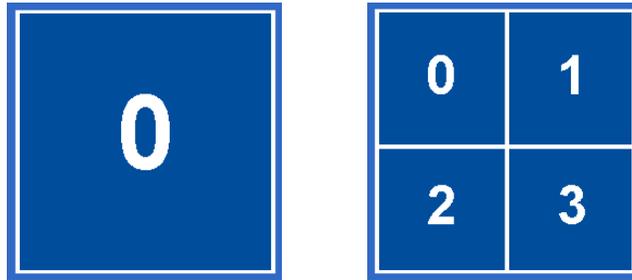

Important

The limit setup and the brightness setup become active immediately!
You need to reboot to view the binding setup.

Figure 3-76 Decode Config

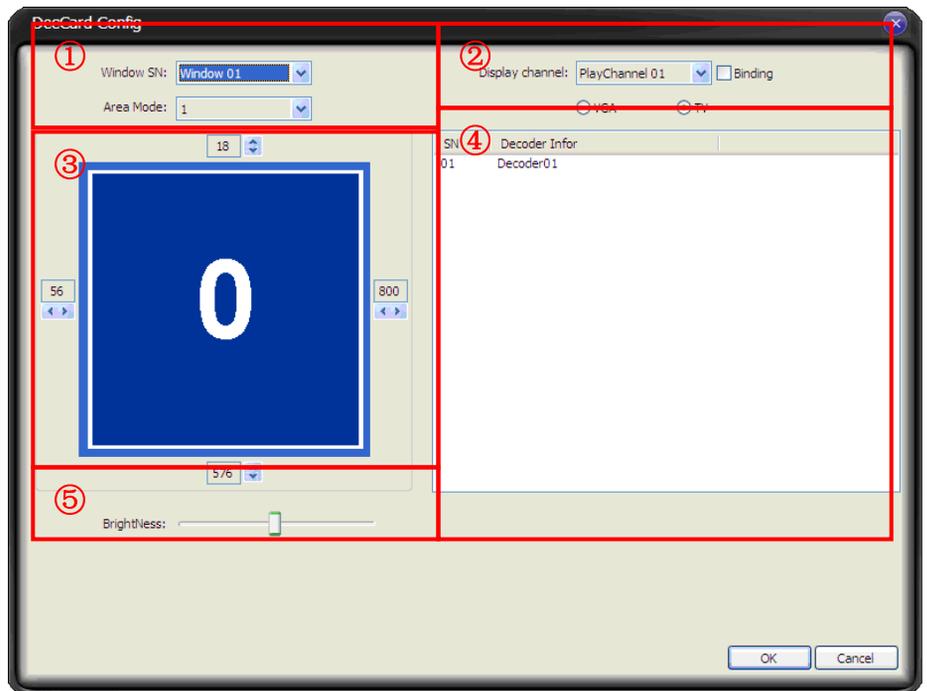

User Management


Important

Only the admin can go to the following interface.

User manage interface is shown as below. See 错误! 未找到引用源。7.


- User information list: Here you can view all user information.
- ID: The account name you log in the CADVR-CS.
- Password: The password you input to log in.
- Confirm password: Please input password again to verify.
- Name: User name information or other.
- Sex: female or male.
- Information User note information.
- System path: Here you can specify use configuration save path.
- Right: You can draw a circle to enable corresponding information.

Figure 3-77 User Management 2-1

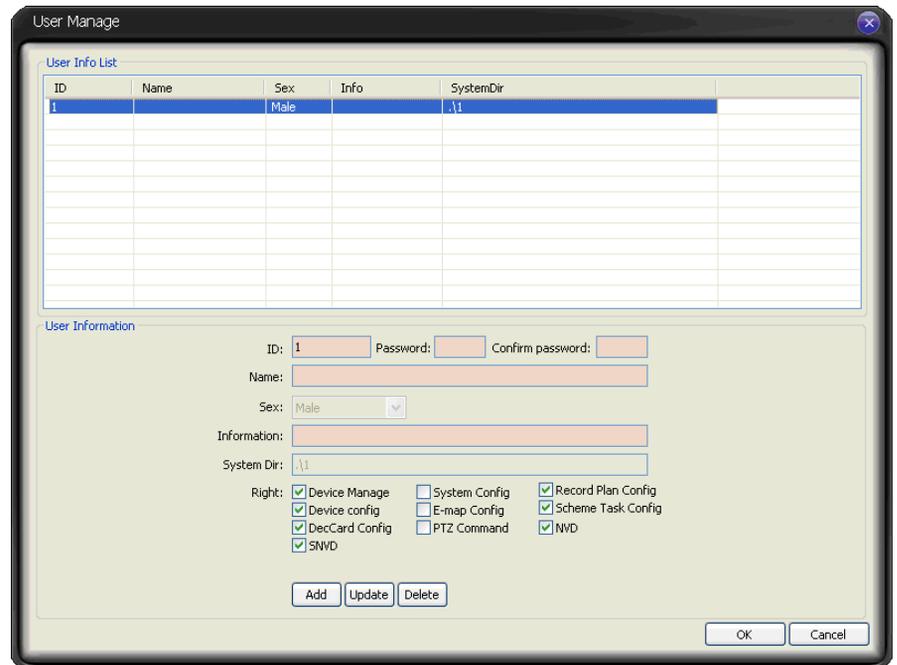

Click OK button, system pops up the following dialogue box, please click yes button to save current information. See 错误! 未找到引用源。78.

Figure 3-80 Search Device

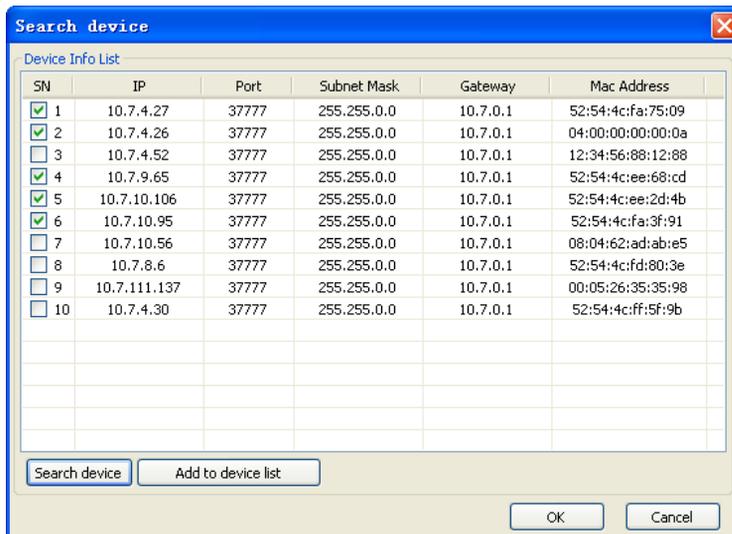


Device information: When you select one device in the list, you can view and modify the detailed device information. See 错误! 未找到引用源。1.

Please note, the user name, password in the following figure (错误! 未找到引用源。1) are for you to log in the device. It has no relationship with the CADVR-CS. If you have enabled the automatically login function, you need to input the channel amount here.

Card SN: It is for mobile DVR only. You need to input the card number if you have enabled the automatically login function.

Figure 3-81 Add Device Manual

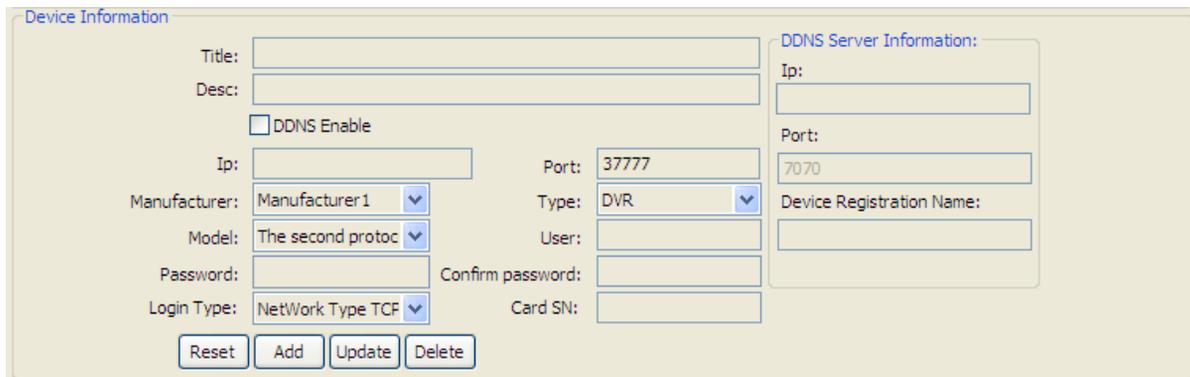

About DDNS and IP address

If you enabled DDNS function, the IP address information is invalid. That is to say, 错误! 未找到引用源。2 and 错误! 未找到引用源。3 can not be active at the same time.


Please note, in 错误! 未找到引用源。2, you can input IP address such as 10.7.5.11 or you can input domain name such as www.yahoo.com.

Figure 3-82 IP Address Config



Ip:

Figure 3-83 DDNS Config

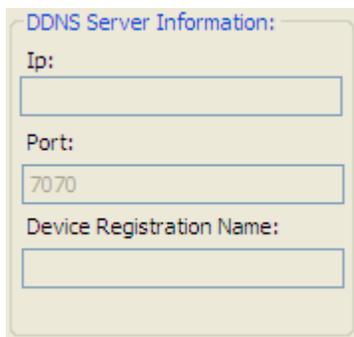

DDNS Server Information:

Ip:

Port:


Device Registration Name:

NVD Manage

NVD manage interface is shown as in 错误! 未找到引用源。4.

Please refer to “User Management” for operation information.

Figure 3-84 NVD Manage Interface

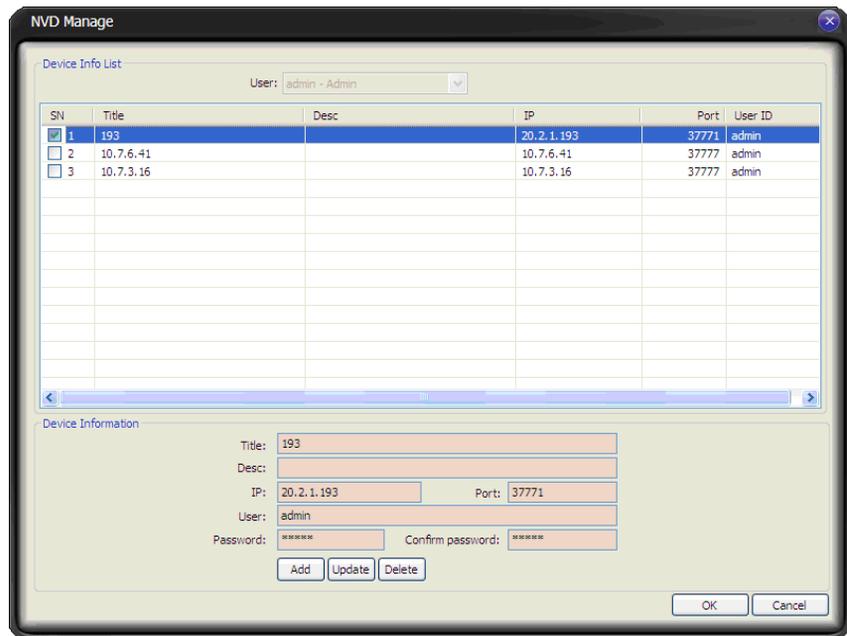

SNVD Manage

This function is reserved.


Important

User name and password here is for you to login the device. It has no relationship with our software operation!

Extension Screen

This interface allows you to recognize and combine the screen connected to current PC. See 错误！未找到引用源。 5.


Figure 3-85 Extension Screen

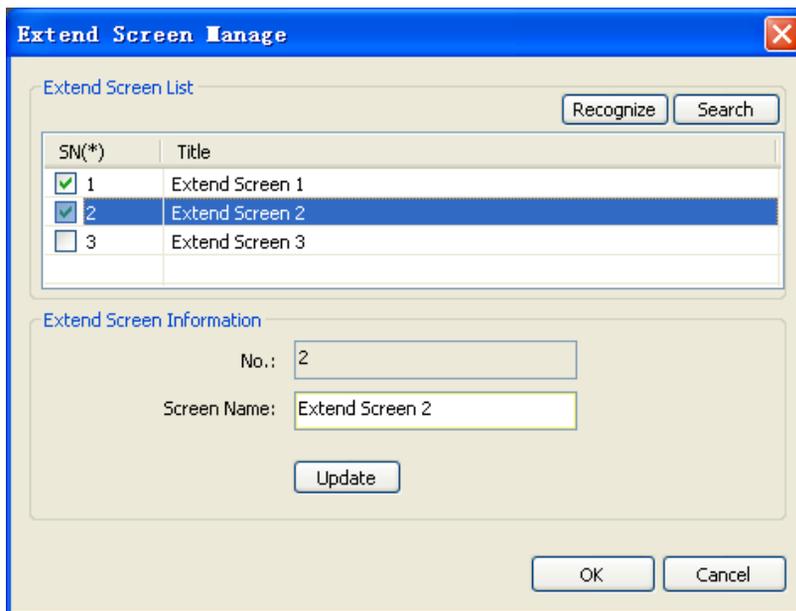

Important

Do not close the main screen after you completed the setup here. Otherwise the OS may change the desktop overlay automatically. Usually the screens shall be in successive sequence (recommended). See 错误! 未找到引用源。6.


Figure 3-86 Adjust the Display

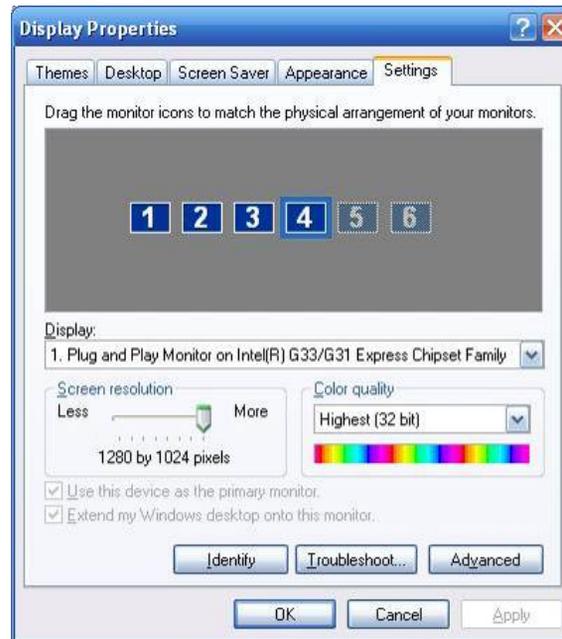

User Configuration

This function allows you to import or export user all configuration files. See 错误！未找到引用源。87.

Figure 3-87 User Config

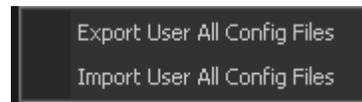

Device Health Status

Here you can update device status regularly, view disk health status; decode alarm, record and the alarm information you most concern.

Please go to "Option" to set the alarm information you most concern. See 错误！未找到引用源。87.

Figure 3-88 Device Health Status Config




Device health status interface is shown as in

. Please refer to the following sheet for detail information.

SN	Note
1	It is device name and its channel number. In Figure 3-89, you can view the device name is GBE and it has 16 channels.
2	HDD status. In Figure 3-89, HDD is running properly.
3	HDD is full or not. In Figure 3-89, HDD is running properly.
4	Decode alarm.
5	Device record status. Green light means current channel is recording. Please go to “Option” to set refresh interval.
6	It is the first alarm item you set in Figure 3-88. So, in Figure 3-89, you can see the external alarm information. Red light means there is an alarm. Please go to “Option” to set refresh interval.
7	It is the first alarm item you set in Figure 3-90. So, in Figure 3-89, you can see the external alarm information. Blue light means there is an alarm. Please go to “Option” to set refresh interval.
8	Device IP.

Figure 3-89 Device Health Status

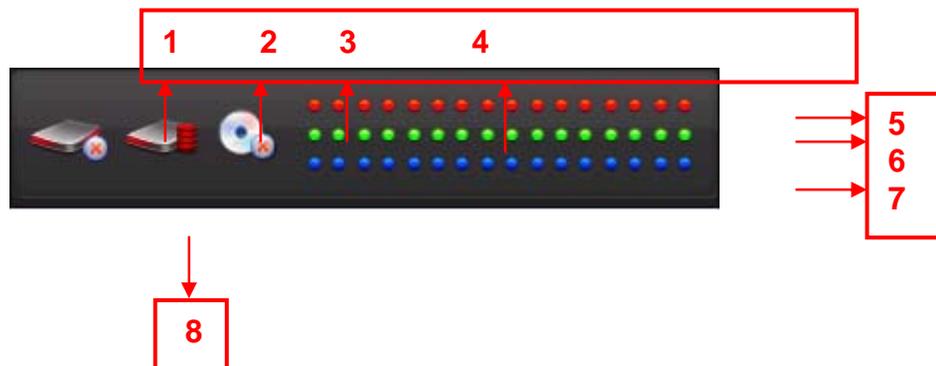

In 错误! 未找到引用源。90, double click mouse, you can go to alarm record interface. Please refer to "Alarm" for alarm record interface information.

Once there are HDD alarm and encode/decode alarm, the interface is shown as below. You can see there is HDD error, HDD is full and the encode/decode alarm.


Figure 3-90 HDD Error Status



Full Menu

The full menu interface is shown as below. See 错误! 未找到引用源。1.

Figure 3-91 Full Menu

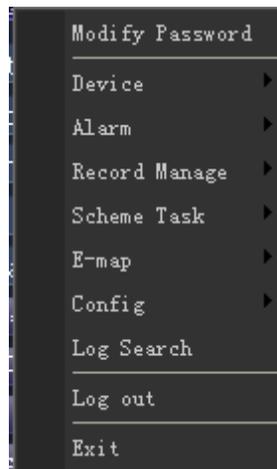

Modify Password

Please refer to "Password Modification".

Device

It has the following sub-menu. See 错误! 未找到引用源。2.

- Device management: Please refer to "Device Manage".
- Health report: Please refer to "Health Report".

- NVD manage: Please refer to “NVD Management”.
- NVD control: Please refer to “NVD Control”.
- SNVD manage: Please refer to “SNVD Management”.

Figure 3-92 Device Sub-menu



Alarm

It has the following sub-menu. See [错误! 未找到引用源。](#) 3.

- Alarm link (activation) video: Please refer to “Alarm Link Video”.
- Alarm record plan: Please refer to “Alarm Record Plan”.
- Alarm management: Please refer to “Alarm manage”.
- Alarm arm enable: It means current alarm setup is valid or not.
- Motion detection, video loss, camera masking, and external alarm: You can draw a circle to enable it. Please refer to “Alarm manage”.

Figure 3-93 Alarm Sub-menu in Device




Record Manage

It has the following sub-menu. See [错误! 未找到引用源。](#) 4.

- Record plan configuration: Please refer to “Record Plan Configuration”.

- Start /Stop: You can enable/disable record plan.
- Playback Please refer to “Playback”.

Figure 3-94 Record Manage Sub-menu

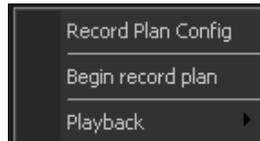


Scheme Task

It has the following sub-menu. See 错误! 未找到引用源。5.

- Scheme task configuration: Please refer to “Scheme and Task”.
- Pause/Restore: You can click it to pause or restart task/project.
- Task1/Proejct1: You can draw a circle to enable current task/project.

Figure 3-95 Scheme Task Sub-menu

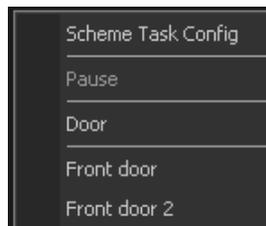


E-map

It has the following sub-menu. See Figure 3-96.

- E-map configuration: Please refer to “E-map”.
- E-map view: Please refer to “E-map” .

Figure 3-96 E-map Sub-menu

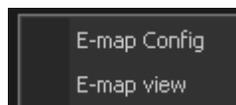

Configuration

It has the following sub-menu. See Figure 3-97.

- Option: Please refer to “Option”.

- Scheme task configuration: Please refer to “Scheme and Task”.
- Alarm management: Please refer to “Alarm Manage”
- Record plan configuration: Please refer to “Record Plan Configuration”.
- E-map configuration: Please refer to “E-map”.
- User manage: Please refer to “User Management”.
- Device management: Please refer to “Device Manage”.
- NVD management: Please refer to “NVD Manage”.
- SNVD management: Please refer to “SNVD Manage”.
- Extension screen manage. Please refer to “Extension Screen”.
- User configuration: Please refer to “User Configuration”.

Figure 3-97 Configuration Sub-menu




Log Query

Please refer to “Log Search” for detail information.

Log out

Click log out button, system pops up the following dialogue box. See **错误! 未找到引用源。** 98. Please input the proper password to exit CADVR-CS application. You can see the system goes back to login interface. You need to input user name and password to login again. Please refer to “Login Interface”.

Figure 3-98 Log out

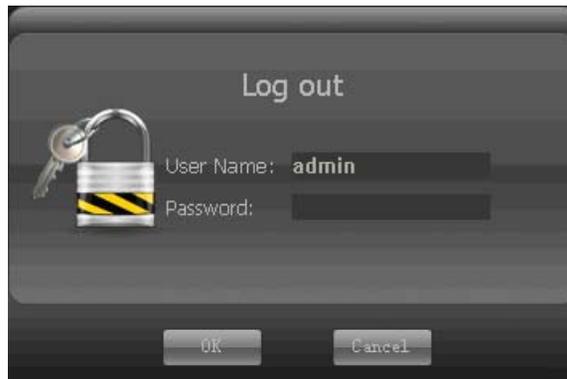

Exit

Click exit button, system pops up the following dialogue box. See Figure 3-99.

Please input proper password and then click OK button to exit CADVR-CS.


Figure 3-99 Exit



Tray Menu

Click tray menu, it is shown as in Figure 3-100.

Figure 3-100 Tray Menu

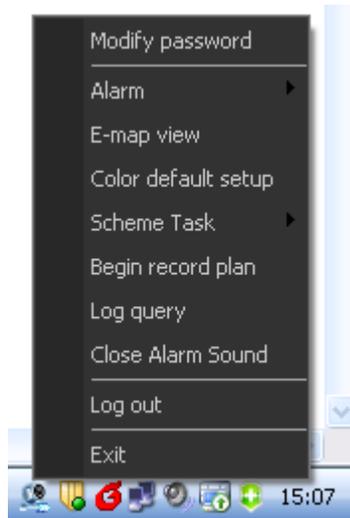


Modify Password

Please refer to “Password Modification”.

Alarm

It has the following sub-menu. See Figure 3-101. Please refer to “Alarm”.

Figure 3-101 Alarm Sub-menu in Full Menu

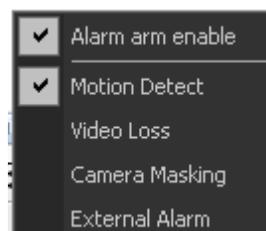

E-map View

Please refer to “E-map”.


Color Default Setup

Please refer to “Color Configuration”.

Scheme Task

It has the following sub-menu. See Figure 3-102. Please refer to “Scheme Task”.

Figure 3-102 Scheme Task Sub-menu in Full Menu

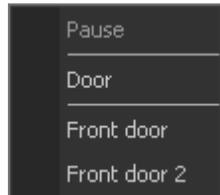

Begin/Stop Record Plan

You can click it to enable/disable current record plan.

Log Query

Please refer to “Log Search” for detail information.

Close Alarm Sound

Please refer to “Alarm Link Video”.

Log out

Please refer to “Log out”.

Exit

Please refer to “Exit”.

4 Operation Instruction

Monitor Operation


Please follow the steps listed below to realize monitor operation.

1. Please add the monitor device to the device list. Please refer to “Device Manage”.
2. In the device list, right click mouse to log in the device. For your convenient, you can go to the “Option” to enable auto log in all devices when CADVR-CS boots up function.
3. Select channel number and then drag it to the corresponding window (or you just double click channel number), you can view real-monitor video. Please note current window has a green boundary.

Please note the camera name is the same with the device channel name setup. You can right click device name and then select advanced->device configuration item to modify channel name. You need to login again to activate current setup.

4. You can refer to “Screen Display Mode” to adjust screen display mode. Drag the screen window and then release, you can adjust displayed position. Please note, you can not adjust decode card sequence.
5. You can refer to “Video Control Zone” for video tool information.

Figure 4-1 Monitor Operation

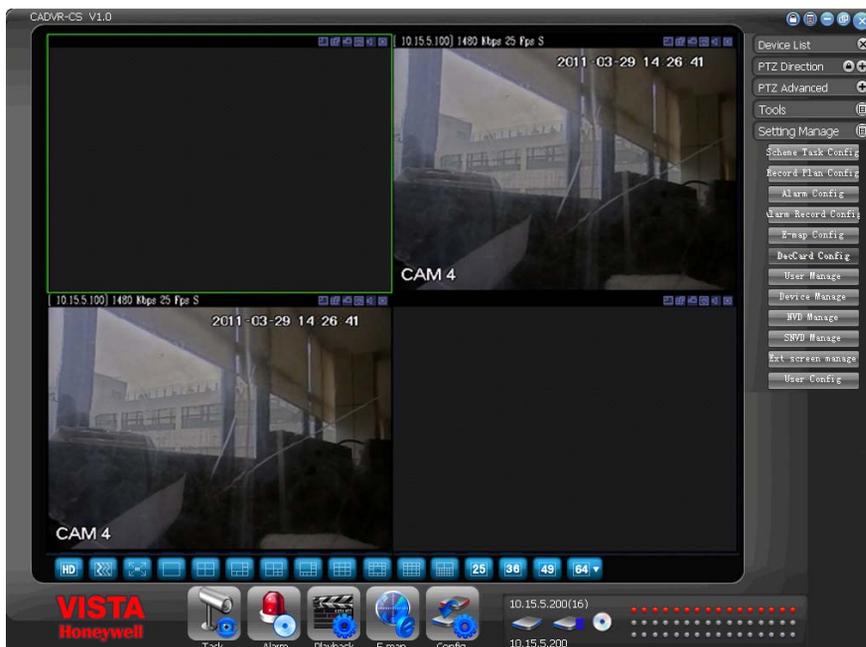

Please go to “Option” for full screen hot key setup.

Hot Key Setup: Real-time monitor window in full sc [v] Ctrl + F *

In the screen, right click mouse, you can see the following interface. See 错误! 未找到引用源。 .

There are six items:

- Talk audio format: 1~n: audio name. You can view the bidirectional talk format the device supported. You can select one to begin audio talk. Please note one device supports one bidirectional talk only. Left click the audio talk item or right click the window, you can see the audio encode mode the device supported. Please check the item to enable audio talk function, click it again you can disable current operation. Or you can click another item to begin a new operation.
- Add current window to the task: You can view task name from the dropdown list. Click it you can add current window to the Monitor task. If current window is in the task, the operation failed.
- Add all windows to the task: You can view the task name from the dropdown list. Click it you can add all windows to the Monitor task. If current window has been in the task, then the operation failed.

- Output current window to the extension screen: There are several extension screen names. You can click the corresponding name to output the current window to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)
- Output all windows to the extension screen: There are several extension screen names. You can click to output all windows to the specified extension screen. (**Important:** Please make sure you have added the extension screen, otherwise you can not see this item.)
- Copy video information: You can click it to copy current video information. After you click the button, you can see "paste video information" button.
- Paste video information: Click it you can paste selected video to current window.
- SNVD output: :(**Important:** Please make sure you have logged in the SNVD, otherwise you can not see this item.)You can view the logged in SNVD name: You can go to SNVD management to add the device, and then you can go to the Device list to login the device. SNVD monitor name: Click it, you can open the same video in the SNVD specified monitor.
- Video attribute: Click the video attribute button, you can see device name/channel title/stream type/video quality/real-time(fluent) level.

For detailed video control zone information, please refer to "Video Control Mode".

Figure 4-2 Sub-menu in Monitor Window



Monitor Task and Monitor Project

- Please refer to “Scheme and Task” to establish task and project.
- Please refer to “Task” to enable monitor task and monitor project.

PTZ Control

Before operation, please make sure current channel supports PTZ control.

Select step and then use the 8 direction buttons, you can realize PTZ control.

You can click the 3D intelligent positioning button to realize 3D intelligent positioning function. Please note, during the whole process, other buttons are all invalid.

Click the lock icon , the PTZ interface becomes independent and can overlay the specified screen as you desire.

You can go to “Option” for hotkey setup.

Hot Key Setup: **Unlock PTZ 8-direction dialogue box** F3 *

For detail operation information, please refer to “PTZ Direction Control” and “PTZ Advanced”.

Figure 4-3 PTZ Control



Playback

Device Record Playback

1. Please log in the device you want to search.
2. Click playback button
3. Select the device name and then select selected channel.
4. Select record type: Record/Alarm/Motion detection/card number.
5. Set search period or cad number.
6. Click search button.
7. You can draw a circle to select the corresponding result and then click download button to download to the local end.
8. Select one video window and then double click search result, you can playback the record.

Local Record Playback

1. Click playback button.
2. Select local record
3. Select the device name (if you want to search all devices, you can select unknown.). Then you can select channel number.
4. Select the record type: Record/Alarm/Card number and others.
5. Set search period or cad number.
6. Click search button.
7. In the searched results, click remove button you can delete local record. Select one video window and then double click search result, you can playback the record.

Download

Select the file(s) you want to download and then click download button.

During the download process, you can click cancel button to terminate current operation.

The download files information is automatically added to the local record. You can search from the local record.

Please note, the download process will pause if current channel is playback device record/ The download resume after playback completes.

Record Play Control

System maximally supports 4-ch playback. Please refer to “Playback” for information.

Double click video window you can adjust display mode.

You can enable snapshot function during playback.

Others

Please refer to “Playback” for information.

Record playback can download the specified record to the local end.

The download files information is automatically added to the local record. You can search from the local record.

Snapshot and Manual Record

In real-time monitor or playback mode, you can enable snapshot or manual record function.

Please click snapshot to save current image to specified path.

You can click manual record button to enable record function. Click it again, you can stop manual record.

The snapshot file or manual recorded file is automatically added to the local record. You can search to playback.

E-map

Please go to “E-map” to establish E-map.

Please go to “E-map” to view the detail e-map information.

E-map window can be displayed independently.

Double click the camera name in the E-map; you can enable real-time monitor function in the video window.

When alarm occurs, corresponding node becomes flashing.

Log out

Please refer to “Log Search” or “Log out” for log out information.

Click log out button, the interface is shown as below. See 错误! 未找到引用源。 . You need to input the proper password and then click OK button to logout the CADVR-CS.

Figure 4-4 Log Out



Now you can see system goes back to log in interface. See [错误! 未找到引用源。](#) Current operation and configuration all stopped. You need to input user name and password to log in. The record plan, task and project, shortcut key, and right information are all for logged in user.

Figure 4-5 Log In



5 Peripheral Device Operation

Decode Card

The decode card is one of our series product. The decode card can greatly reduce CPU resources.

Before setup, please makes sure you have installed encode card, and you have enabled the “loading decode card when CADVR-CS booted up” in the Option interface.

The decode card can outputs video to the TV or VGA device. You can just select the video channel and then drag it to the decode card binding monitor channel.

For decode card configuration operation, please refer to “Decode Card Configuration”.

NVD

Menu

NVD is a network video decoder. It is one of our series products. It can connect to the video sourcing device. It has TV output and TV video split.

You can go to the NVD manage interface from the right tool button. See 错误! 未找到引用源。 .

Figure 5-1 NVD Sub-menu

NVD is a network device, you need to add NVD device first and then use it.

Please refer to “NVD Manage” for NVD device manage

Please refer to “NVD Control” for NVD control operation.

NVD Control Principle

Please read the following principles so that you can understand how the CADVR-CS control the NVD.

- CADVR-CS logged in NVD and then control NVD.
- CADVR-CS transfer the device information and channel information to the NVD and then NVD can log in the other devices to enable video.
- CADVR-CS control NVD to enable video and split video
- NVD can output the video data after split. (The data here can be the input video of the other device.)
- NVD has four video outputs and each vide output can integrate video from four channels to a four-channel video window.
- Please note you need to log in the NVD if you want to use it.


Operation

NVD operation consists of four sections: operation, tour, decode tour and TV adjustment. All the operations become active when NVD is running normally.

On the top left, you can view the added NVD device. On the top button, you can view other video sourcing devices.


Remotely control the NVD to open the video and then switch the split mode. The operation is the same as the general video zone. But the video window only displays current connected device IP and channel serial number, the NVD video is not in the window. See 错误！未找到引用源。 .

Figure 5-2 NVD Control Principle

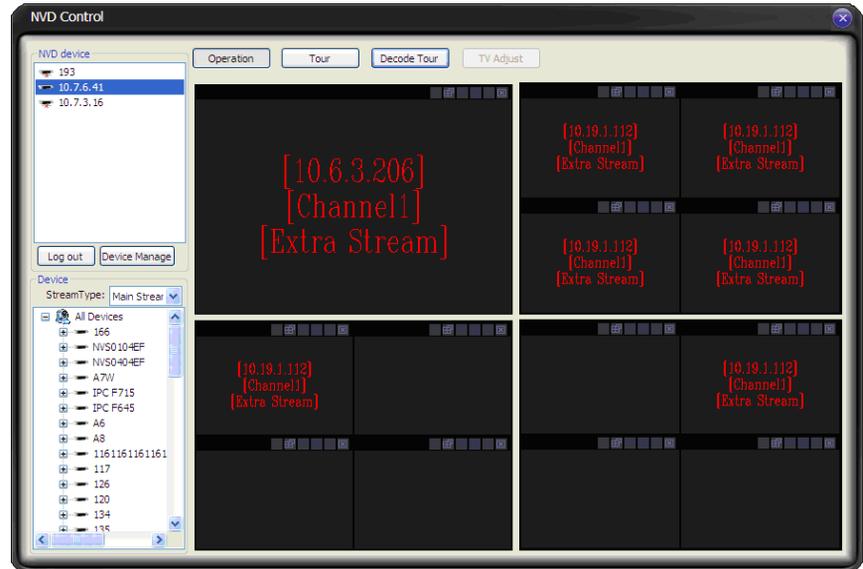

If you see the following dialogue box, you can see the NVD has reached the max decode capacity. See 错误！未找到引用源。 .


Figure 5-3 NVD Overload

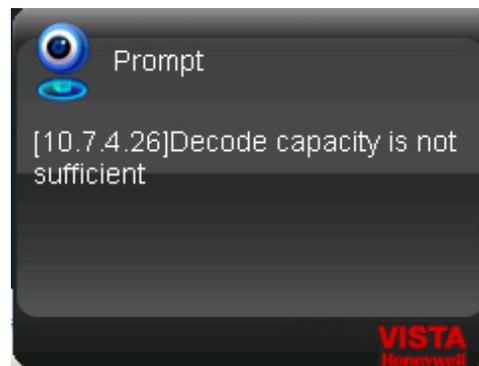

Please close the video channel, until you see the following dialogue box. See 错误！未找到引用源。 .

Now the NVD has restored capacity and can run properly.

Figure 5-4 Restore Decode Capacity

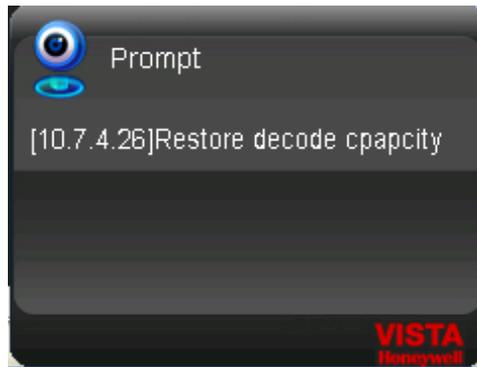

Do not connect the PAL format device and NTSC device to the same NVD!

Audio talk

Tour

Tour interface is shown as in below. See 错误! 未找到引用源。 .

Search: Search the selected TV output tour setup of current NVD device.

Add: Add current tour information to the TV output channel of current device.


Delete: Click it to remove the selected tour setup information.

Delete all: Click it to remove all tour setups of current TV output channel.

Tour: Click it to begin the tour setup.

Interval: The operation interval between the tour setups.

Figure 5-5 Tour In NVD Config

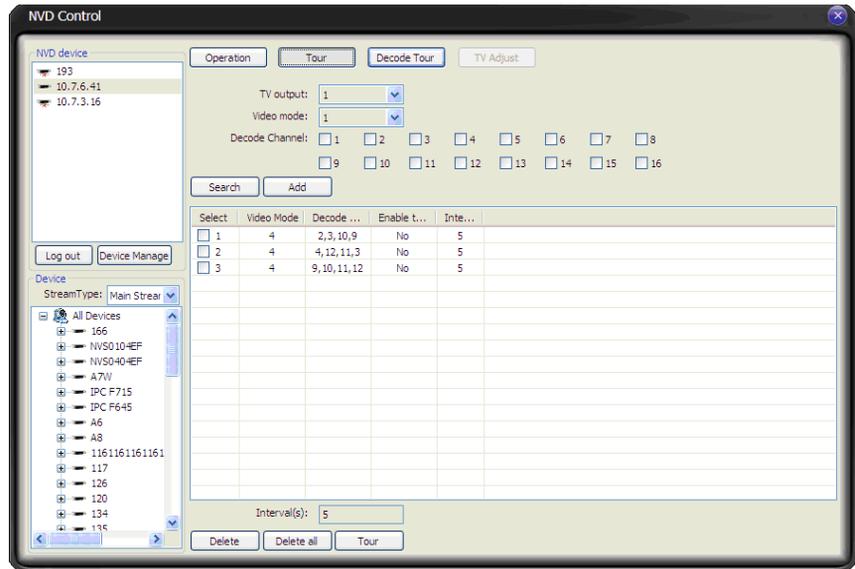

Tour: Remotely control NVD to distribute the video sourcing to realize remote tour function (TV output).

Video mode: Now system supports 1/4 window split. Double click one video window, you can switch video display mode, it can display in the NVD output device immediately. See 错误! 未找到引用源。 .

Figure 5-6 Video Mode

Decode tour

The decode tour interface is shown as in [错误! 未找到引用源。](#)

NVD device: Here you can view the NVD device you selected from the NVD device tree.

Decode channel: Here you can select the decode tour channel of the NVD device.

Stay time (s): Here you can select the interval between the decode tour. It is the video stay time in each channel.

Video channel: You can drag the video channel on the left corner to the column here and then release to set the video channel information.

Add: Click it a odd current video channel tour information to the list.

Update: Update the list to the latest information.

Cancel: Restore the video channel information. Do not save current modification.

Delete: Click it to delete the selected item in the list.

Delete all: Click it to delete all the items in the list.

Save: Save the latest setup information in the remote NVD device.

Pause: Pause the decode tour operation of the remote NVD device.


Resume: Restore the decode tour operation of the remote NVD device.

Stop: Stop the decode tour operation of the remote NVD device.

Start: Begin the decode tour operation of the remote NVD device.

Please note, the add/delete operation only becomes valid when the NVD connection is OK.

Figure 5-7 Decode tour

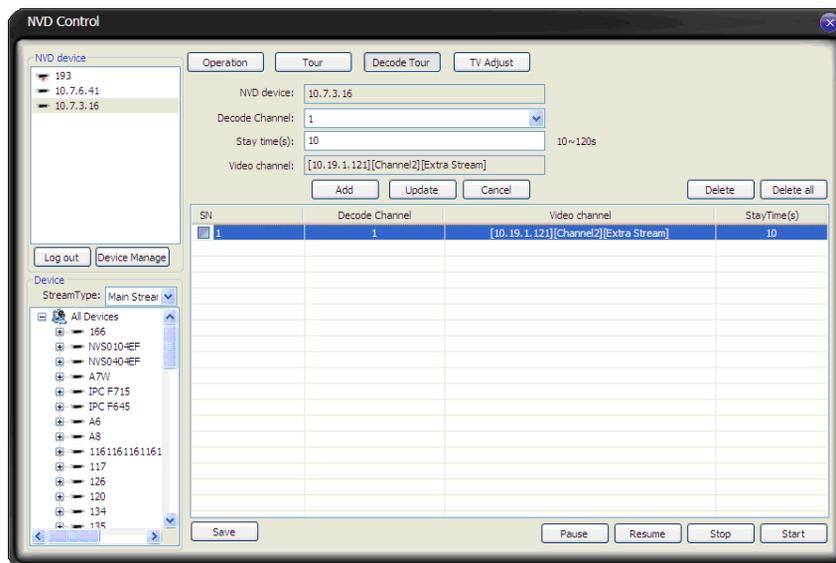


TV adjustment

The TV adjust interface is shown as below. See [错误！未找到引用源。](#)

- TV adjustment: It is the TV output port serial number of the NVD (the actual amount is defined by the NVD model.)
- Up adjustment: It is to adjust the TV up boundary position. The value ranges from 0 to 100.
- Right adjustment: It is to adjust the TV right boundary position. The value ranges from 0 to 100.
- Left adjustment: It is to adjust the TV left boundary position. The value ranges from 0 to 100.
- Bottom adjustment: It is to adjust the TV bottom boundary position. The value ranges from 0 to 100.

Figure 5-8 TV Adjustment

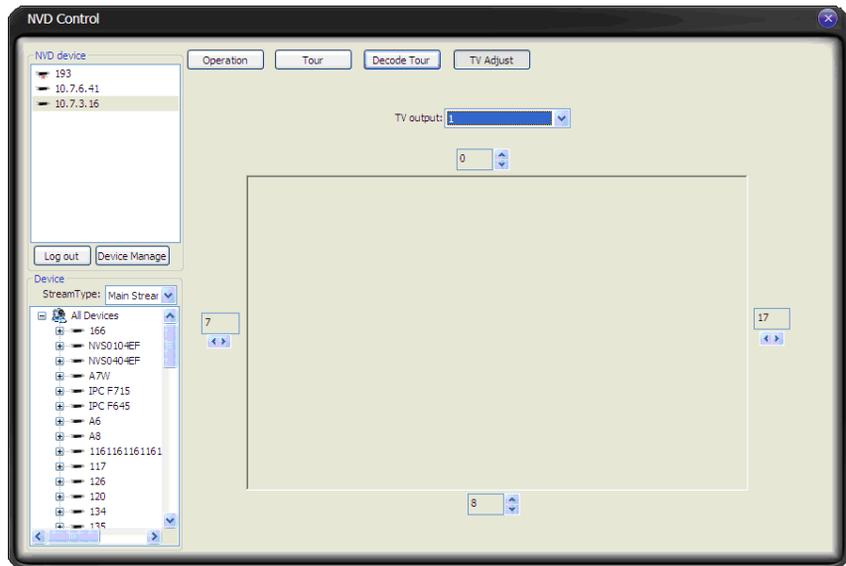

- This user's manual is for reference only. Slight difference may be found in the user interface.
- All the designs and software here are subject to change without prior written notice.
- If there is any uncertainty or controversy, please refer to the final explanation of ours.
- Please visit our website for more information.

VISTA
Honeywell

© 2011 Honeywell International Inc.